



Seeder Box Kit

Soil Cultivator Attachment for Compact Utility Loader

Model No. 23120

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers


Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

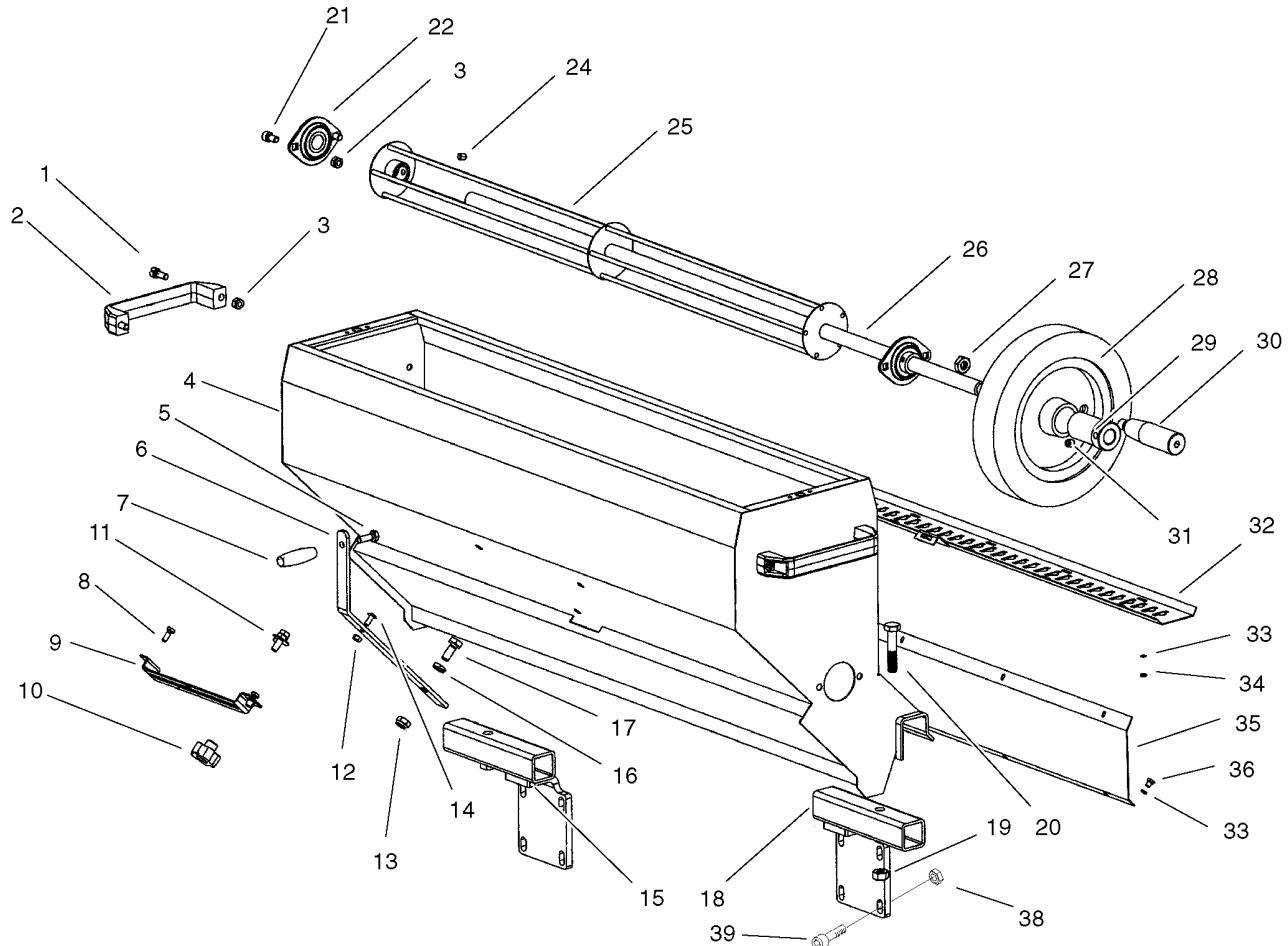

Seeder Box Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	104-5953	4	Screw	26	104-5972	1	Axis-Mixer
2	104-5954	2	Handle	27	104-5973	1	Nut
3	104-5955	8	Nut	28	104-5974	1	Wheel-Drive
4	104-5956	1	Hopper	29	104-5975	1	Hub-Wheel
5	57-6380	1	Screw-HH	30	104-5976	1	Crank
6	104-5957	1	Bar-Closing	31	104-5977	1	Screw-Set
7	104-5958	1	Handle-Closing	32	104-5978	1	Plate-Rack, Rate
8	104-5959	2	Screw	33	104-5979	22	Washer
9	104-5960	1	Guide-Rate, Seed	34	104-5980	12	Nut
10	104-5961	1	Handle-Rate, Seed	35	104-5981	1	Plate-Cover
11	104-5962	1	Stop-Rate, Seed	36	104-5982	10	Screw
12	104-5963	1	Nut	37	33025-00	8	Nut-Lock
13	33025-00	1	Nut-Lock	38	104-5983	8	Screw
14	104-5964	1	Screw				
15	104-5965	1	RH Mounting ASM				
16	104-5966	1	Nut				
17	48-7780	1	Screw				
18	104-5967	1	LH Mounting ASM				
19	33026-00	2	Nut-Lock				
20	33116-060	2	Screw-HH				
21	104-5968	4	Screw				
22	104-5969	2	Bearing ASM				
23	104-5970	2	Screw-Set				
24	104-5971	1	Mixer ASM				