 


TORO®

MODEL NO. 38035-9000001 & UP

PARTS CATALOG

3521 SNOWTHROWER

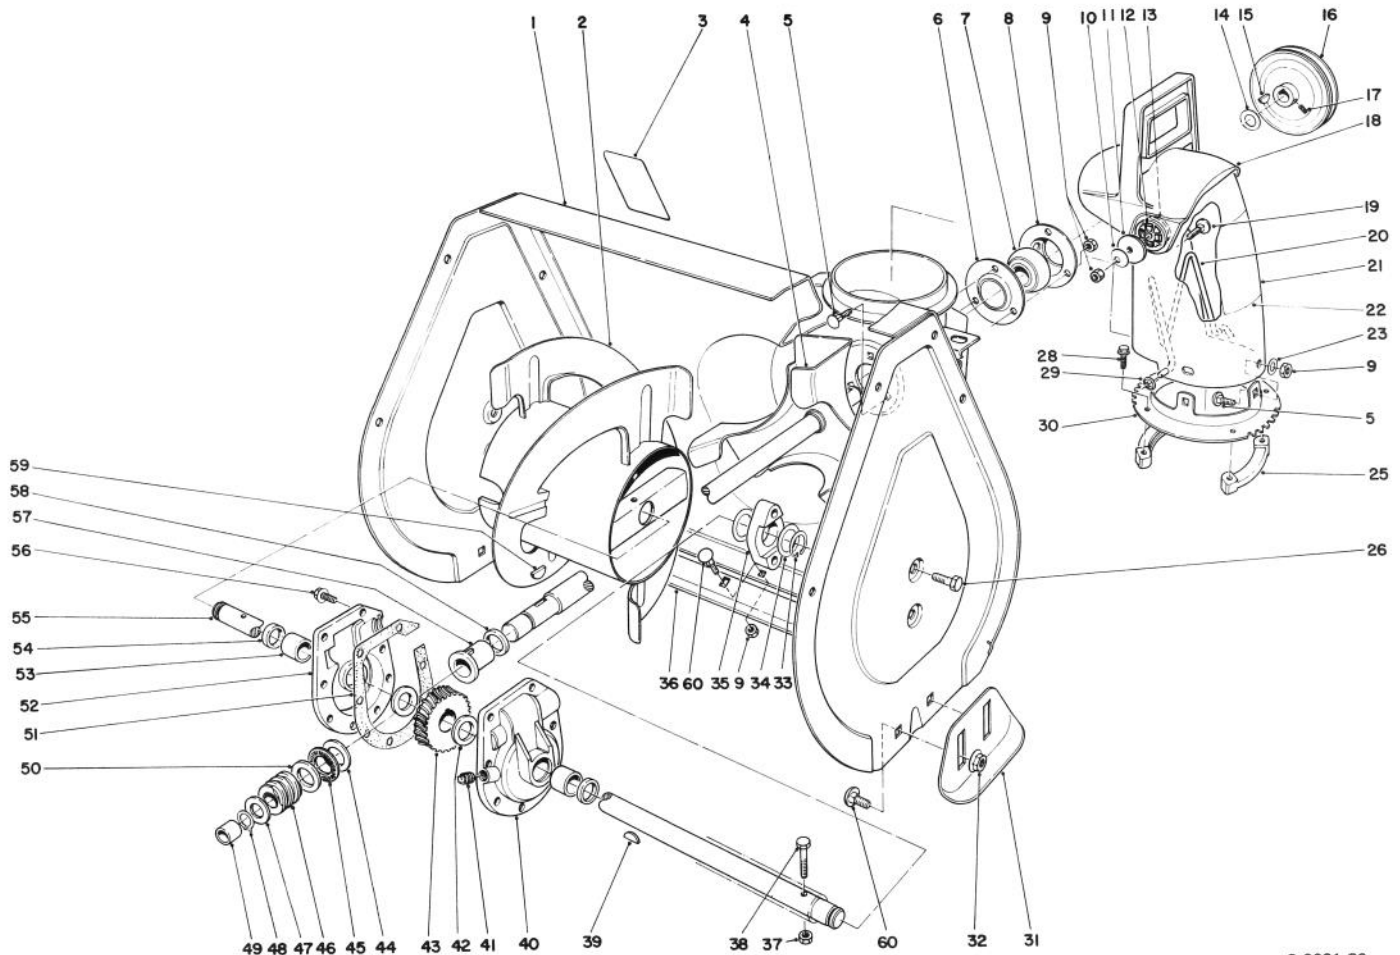


C-0031-89

AUGER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	11-5269	Housing — Auger (Incl. Ref. #3 & 27)	1
2	39-1180	Auger R.H.	1
*	39-1190	Auger L.H.	1
3	53-7670	Decal — Auger Warning	1
4	37-6990	Shaft & Impeller	1
5	3230-18	Carriage Bolt	6
6		Flange — Bearing (Front)	1
7	63-3450	Bearing — Ball	1
8		Flange — Bearing (Rear)	1
9	3296-29	Locknut	13
10	3290-340	Washer — Belleville	2
11	3256-68	Washer — Flat	2
12	55-8950	Plate — Friction	2
13	20-4320	Washer — Rubber	2
14	3-0737	Washer — Flat	1
15	3257-5	Key	1

Ref. No.	Part No.	Description	No. Used
16	37-6890	Pulley	1
17	3242-4	Screw — Set	2
18	56-2680	Deflector	1
19	3230-22	Bolt — Carriage	2
20	56-2670	Wire — Chute	1
21	12-8289	Chute — Discharge (Incl. Ref. #22)	1
22	63-3740	Decal — Discharge	1
23	3256-23	Washer	3
25	37-6490	Retainer — Chute Ring	3
26	32144-70	Screw — Self Tapping Hex Hd.	4
28	27-0220	Self Tapping Screw	6
29	3290-326	Push Nut	1
30	37-8941	Chute Ring	1
31	40-8160	Skid	2
32	32128-20	Flange Nut	4
33	32151-36	Snap Ring	2

 * Not Illustrated

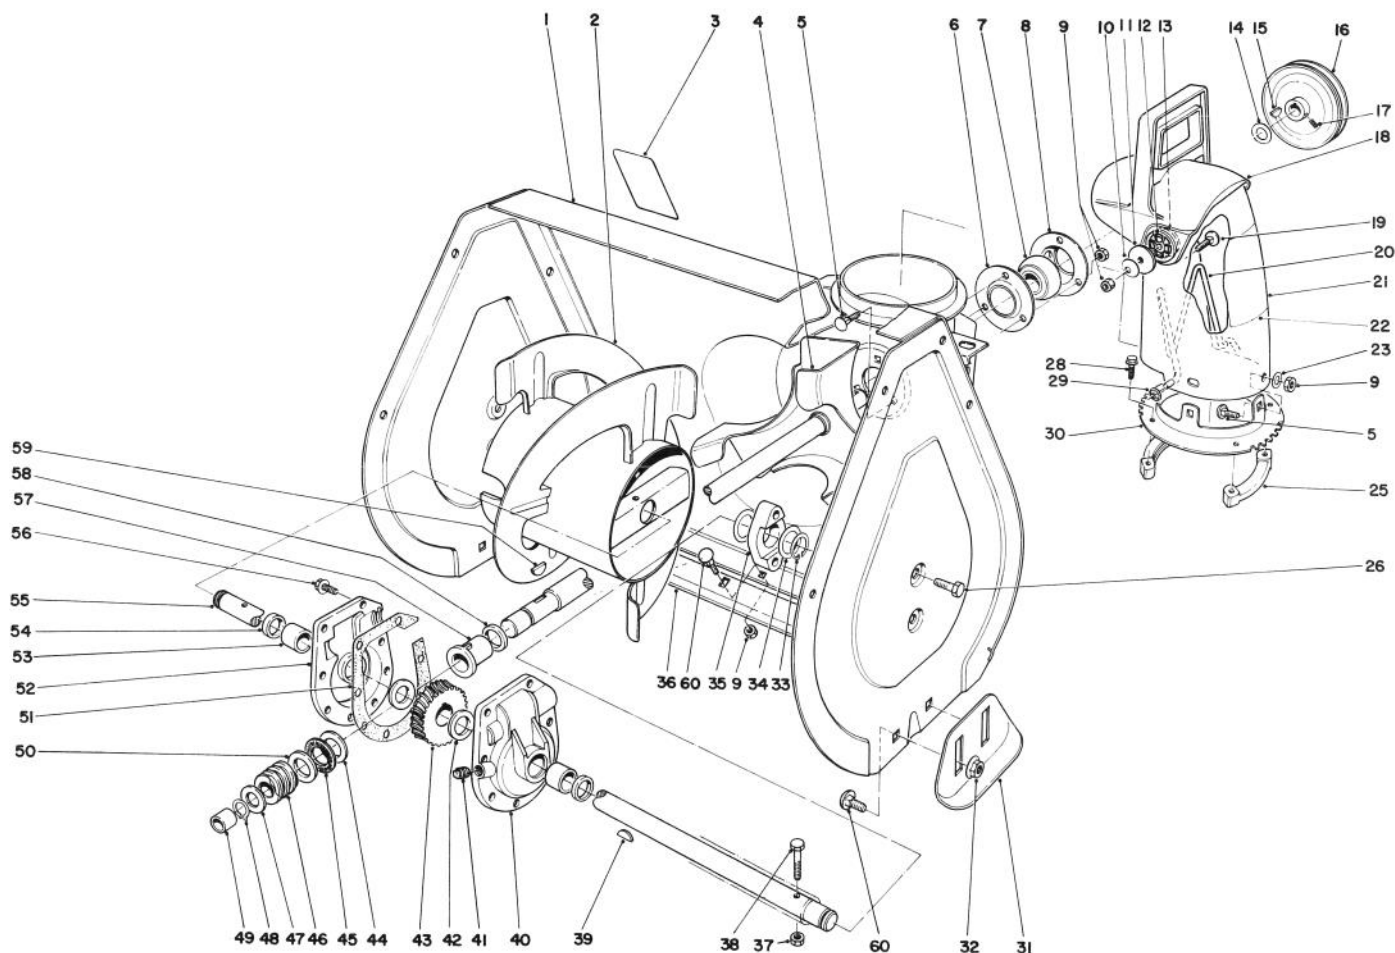


C-0031-89

AUGER ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
34	5-1550	Thrust Washer	4
35	37-6550	Bearing — Auger	2
36	39-1550	Scraper Blade	1
37	3296-42	Nut — Lock	2
38	321-10	Screw — Hex Hd.	2
39	3257-33	Key — Woodruff	1
40	37-8860	Gear Case L.H. (Incl. Ref. #53 & 54)	1
41	281-1	Pipe Plug	1
42	252-71	Thrust Bearing	2
43	23-9050	Gear	1
44	257-3	Thrust Washer	1
45	252-76	Bearing — Needle Thrust	1
46	5-7170	Worm	1
47	3-8664	Washer	1
48	32120-72	Ring — Retaining	1

Ref. No.	Part No.	Description	No. Used
49	256-32	Bushing	1
50	252-80	Washer — Thrust	1
51	51-0460	Gasket	1
52	37-8850	Gear Case R.H. (Incl. Ref. #53 & 54)	1
53	256-237	Bushing	2
54	7-0045	Oil Seal	2
55	37-6800	Shaft — Auger	1
56	32144-41	Self Tapping Screw	8
57	37-6560	Bushing — Input	1
58	237-87	Seal	1
59	3257-23	Key — Woodruff	1
60	3230-1	Carriage Bolt	9
*	37-6960	Gear Case Assy. Complete	1
*	12-8789	Bearing Assy. (Incl. Ref. #6-8)	1

 * Not Illustrated

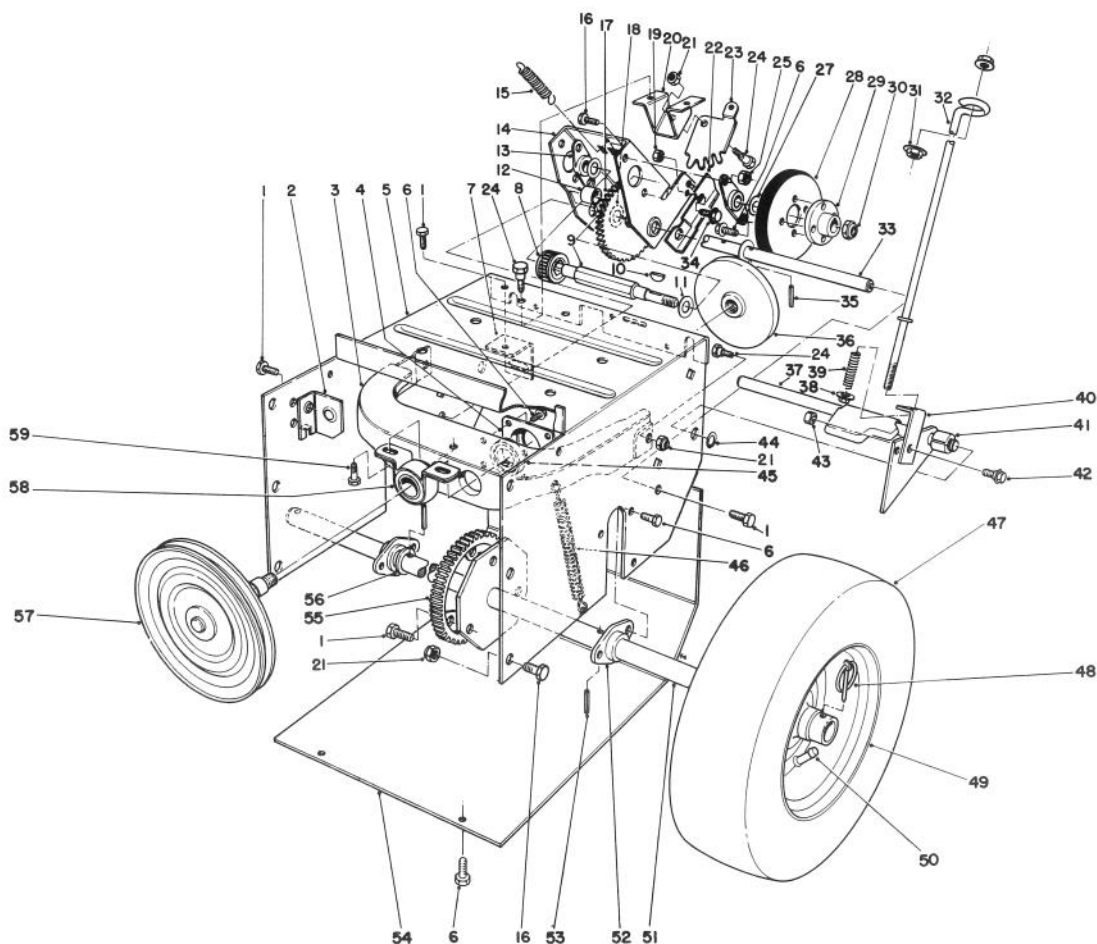


C-0032-89

TRACTION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32144-70	Hex Hd. Self Tap. Screw	9	32	39-3060	Rod — Lower Traction	1
2	37-9060	Mount — Clutch Rod Front	1	33	37-6760	Shaft — Pivot	1
3	37-6740	Frame — Friction Plate	1	34	321-4	Screw — Hex Hd.	1
4	37-6730	Cup — Bearing	1	35	32121-45	Roll Pin	2
5	37-8900	Frame — Traction	1	36	38-0800	Plate — Friction	1
6	32144-4	Hex Hd. Self Tap. Screw	16	37	43-7310	Traction Engagement Assy.	1
7	37-9070	Mount — Clutch Rod Rear	1	38	32128-32	Flange Locknut	1
8	37-6500	Gear — Sliding	1	39	38-4520	Spring — Compression	1
9	37-6780	Shaft — Hex	1	40	38-4490	Bracket — Traction	1
10	3257-24	Key	1	41	40-9680	Spacer	1
11	5-7570	Washer — Thrust	2	42	40-8350	Screw — Shoulder	1
12	256-86	Bushing	1	43	3296-42	Locknut	1
13	20-1620	Bearing — Friction Wheel	2	44	32151-61	Ring — Retaining	1
14	39-1230	Bracket — Sliding	1	45	38-7820	Bearing	1
15	37-8880	Spring — Traction Engage	1	46	37-8870	Spring — Friction Plate Frame	1
16	322-2	Hex Hd. Capscrew	10	47	231-125	Tire	2
17	37-9160	Intermediate Gear & Bushing (Incl. Ref. #12)	1	48	3290-243	Pin — Klik	2
18	10-9280	Washer — Thrust	2	49	241-126	Rim	2
19	3296-16	Locknut	1	50	232-49	Tube	2
20	37-8790	Mount — Quadrant Gear	1	51	37-6970	Shaft — Axle	1
21	3296-29	Locknut	9	52	37-6850	Bearing — Axle	2
22	39-1250	Cam — Receiver	1	53	32121-31	Roll Pin	2
23	37-8800	Quadrant — Gear	1	54	37-6830	Cover — Bottom	1
24	37-8770	Shoulder Bolt	3	55	37-6520	Gear — Axle	1
25	3296-29	Locknut	4	56	3-8664	Washer — Thrust	2
27	36-4790	Washer — Thrust	2	57	40-8190	Pulley & Shaft	1
28	37-6570	Wheel — Friction	1	58	38-4470	Bushing Assembly	1
29	39-1520	Hub — Friction Wheel Mount	1	59	32144-11	Hex Hd. Self Tap. Screw	2
30	3296-48	Locknut	1	*	62-7630	Tire Chain Kit (Optional)	1
31	32128-33	Flange Locknut	2	*	12-6899	Loose Parts	1

 * Not Illustrated

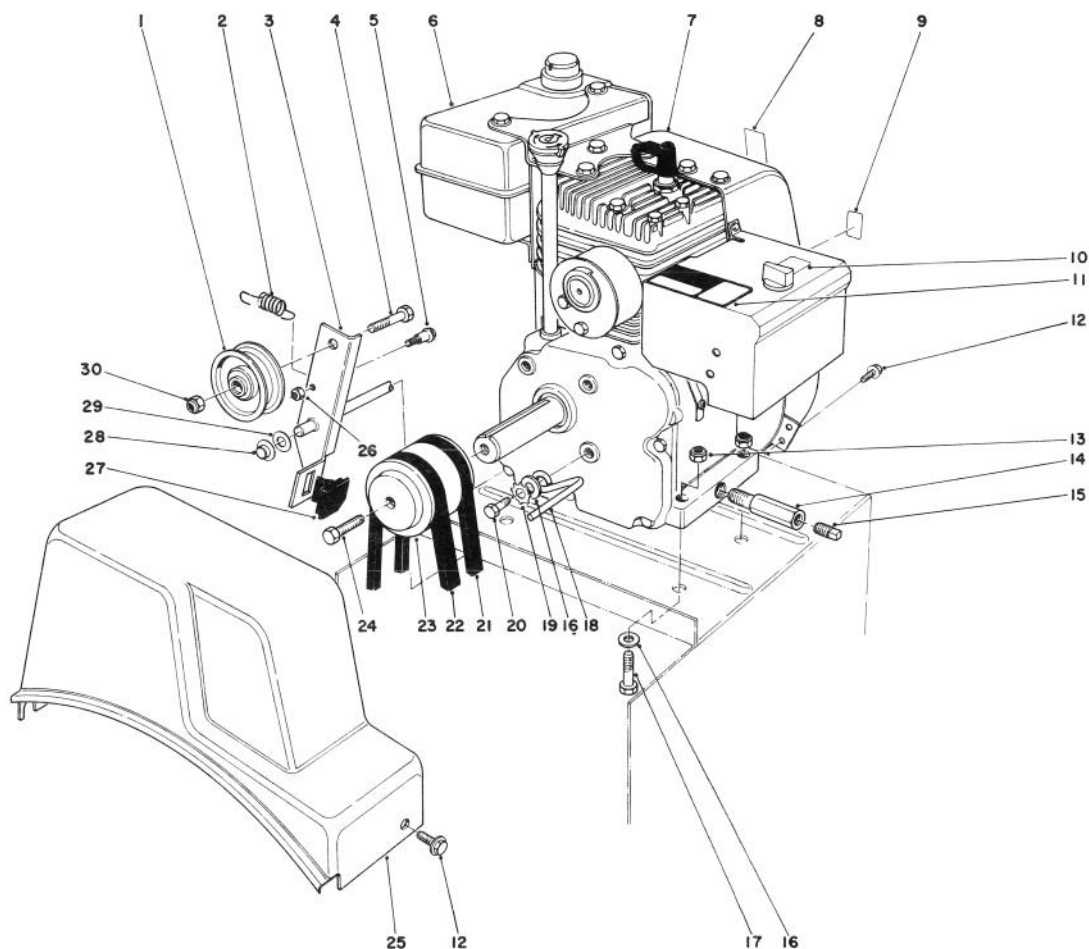


C-0033-89

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3-4244	Idler Pulley	1
2	53-7570	Spring — Auger Disengage	1
3	8-8649	Auger Clutch Rod Assembly (Incl. Ref. #27)	1
4	323-29	Capscrew	1
5	42-3560	Bolt — Shoulder	1
6	52-2680	Gas Tank w/Cap	1
7		Engine	1
8	62-5760	Decal — Primer	1
9	63-2450	Decal — Throttle	1
10	39-3840	Decal — Choke	1
11	62-7290	Decal — Hot Surface Warning	1
12	32144-4	Self Tapping Screw	3
13	3296-29	Locknut	4
14	49-3040	Drain Tube	1
15	281-7	Pipe Plug	1

Ref. No.	Part No.	Description	No. Used
16	3256-23	Washer	5
17	322-7	Capscrew	4
18	37-8990	Belt Retainer	1
19	3255-8	Lockwasher	1
20	3210-3	Capscrew	1
21	37-9090	V-Belt — Traction	1
22	37-9080	V-Belt — Auger	1
23	43-7370	Engine Pulley	1
24	43-7290	Screw — Special	1
25	37-6900	Belt Cover	1
26	3296-56	Locknut	1
27	66-8060	Molded Brake	1
28	3290-320	Nut — Push On	1
29	3256-24	Flat Washer	1
30	3296-59	Locknut	1

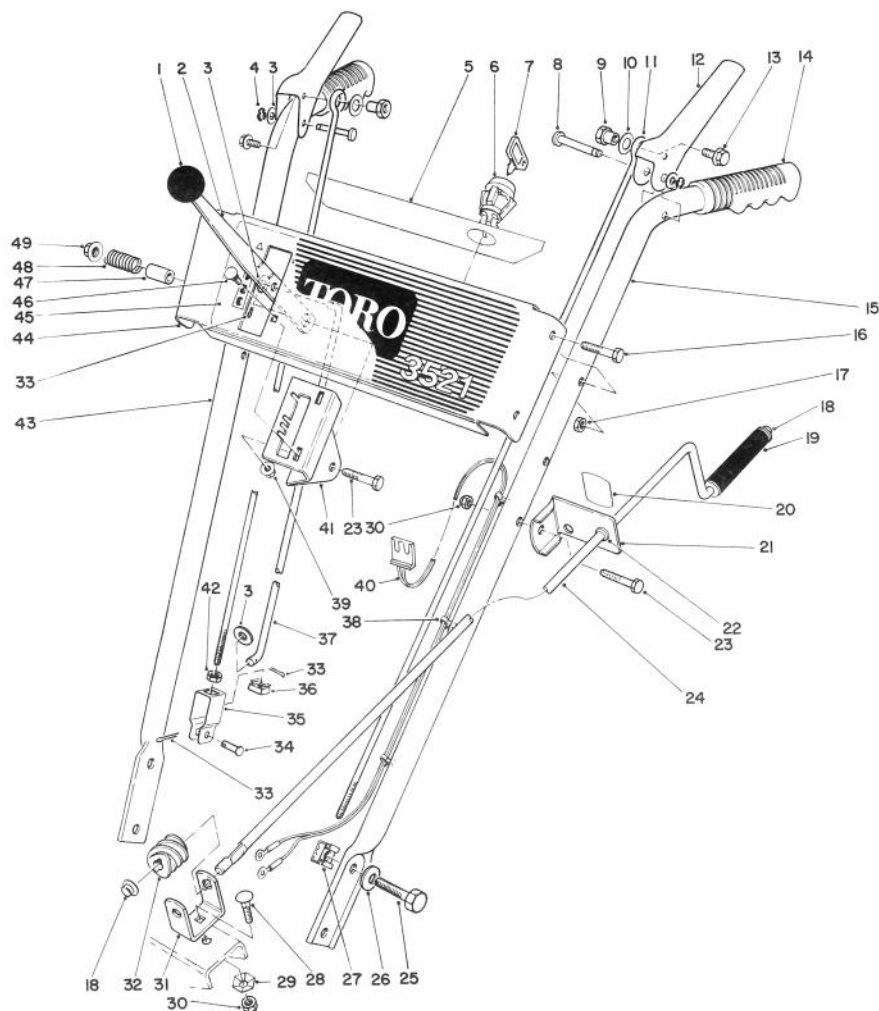 


C-0034-89

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233-21	Knob	1
2	37-8820	Selector — Speed	1
3	3256-23	Washer	4
4	32151-73	Ring — Clip	2
5	63-3530	Decal — Escutcheon Back	1
6	40-5940	Switch — On-Off	1
7	62-7770	Key — Ignition	1
8	52-5600	Pin — Control Lever	2
9	47-4990	Post — Linkage Mounting	2
10	3256-24	Washer	2
11	52-5590	Link — Upper	2
12	63-3640	Handle — Control	2
13	3234-13	Screw — Hex Flange Hd.	2
14	37-9110	Grip — Handle	2
15	52-5570	Handle — Left	1
16	321-9	Screw — Hex Hd.	4
17	3246-42	Nut — Lock	4
18	3290-320	Nut — Push	2
19	66-6540	Grip — Rod	1
20	63-3510	Decal — Chute Direction	1
21	12-7739	Bracket — Chute Control (Incl. Ref. #20 & 22)	1
22	256-249	Nyliner	1
23	322-7	Screw — Hex Hd.	2
24	40-8270	Rod — Chute Control	1
25	322-2	Screw — Cap Hex Hd.	4

Ref. No.	Part No.	Description	No. Used
26	3290-456	Washer — Belleville	4
27	3290-196	Nut — Retainer	4
28	3230-2	Bolt — Carriage	1
29	3290-238	Washer — Pyramidal	1
30	3296-29	Nut — Lock	2
31	40-8280	Bracket — Chute Worm	1
32	40-8250	Gear — Worm	1
33	3272-4	Pin — Cotter	3
34	283-3	Pin — Clevis	1
35	39-3080	Clevis	1
36	32115-5	Nut — Retainer	1
37	39-7570	Rod — Speed Selector	1
38	17-9120	Mount — Wire	3
39	32128-32	Nut — Flange Lock	2
40	43-7390	Wire Harness Assembly (Incl. Ref. #38)	1
41	39-1280	Mount — Speed Selector	1
42	3218-1	Nut — Jam	1
43	52-5560	Handle — Right	1
44	43-7360	Panel — Escutcheon	1
45	66-6550	Decal — 3521	1
46	3229-22	Bolt — Carriage	2
47	40-8130	Spacer — Speed Selector	1
48	37-9150	Spring	1
49	32128-13	Nut — Flange Lock	1
*	3290-378	Cable Tie	2

 * Not Illustrated

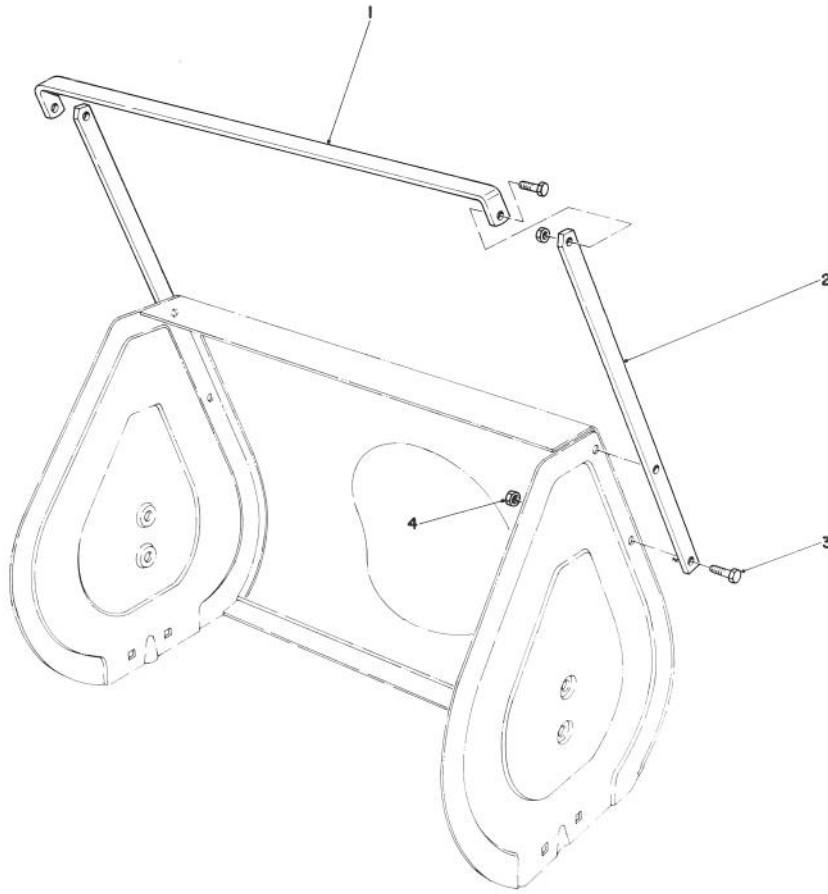


C-0035-89

DRIFT BREAKER KIT NO. 37-7020 (Optional)

Ref. No.	Part No.	Description	No. Used
1	38-0760	Drift Breaker — Top	1
2	38-0750	Drift Breaker — Side	2

Ref. No.	Part No.	Description	No. Used
3	322-4	Capscrew	6
4	3296-29	Locknut	6

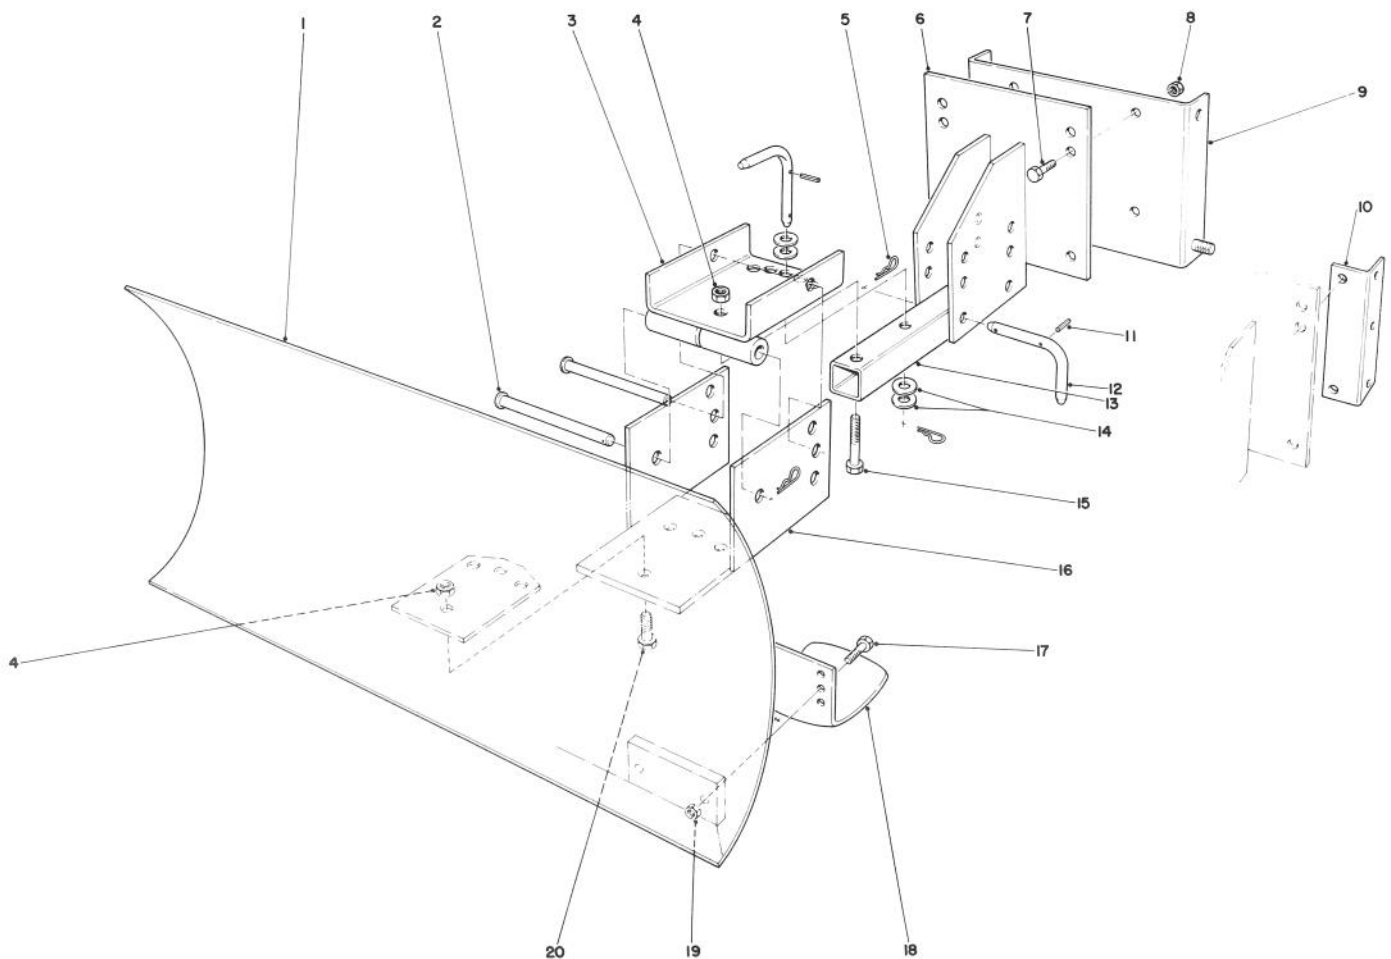 

C-0036-89


GRADER BLADE ASSEMBLY MODEL 59099 (Optional)

Ref. No.	Part No.	Description	No. Used
1	7-4374	Blade	1
2	283-38	Clevis Pin	2
3	20-5090	Swivel Bracket	1
4	32152-3	Locknut	5
5	3290-322	Hairpin Cotter	5
6	20-5170	Mounting Plate	1
7	323-6	Capscrew	4
8	32152-2	Locknut	4
9	22-4920	Mounting Plate Bracket (Used with 826 and 1132 only)	1
10	39-7850	Mounting Rail (Used with 3521 & 521 Units only)	2
11	32121-45	Roll Pin	3
12	20-5210	Pivot Pin (Incl. Ref. #11)	3
13	20-5140	Tongue Blade	1

Ref. No.	Part No.	Description	No. Used
14	3256-5	Flat Washer	4
15	325-11	Capscrew	1
16	20-5130	Blade Adjustment	1
17	322-6	Capscrew	4
18	7-1023	Skid	2
19	32152-1	Locknut	4
20	325-5	Capscrew	4
*		Air Cleaner Kit	1
*†	650152	Screw	2
*†	31752	Decal	1
*†	31692	Body	1
*†	30727	Element	1
*†	28820	Screw w/Lockwasher	2
*†	31691	Bracket	1
*†	27277	Gasket	1

* Not Illustrated

 † Obtain from your local Tecumseh Dealer.


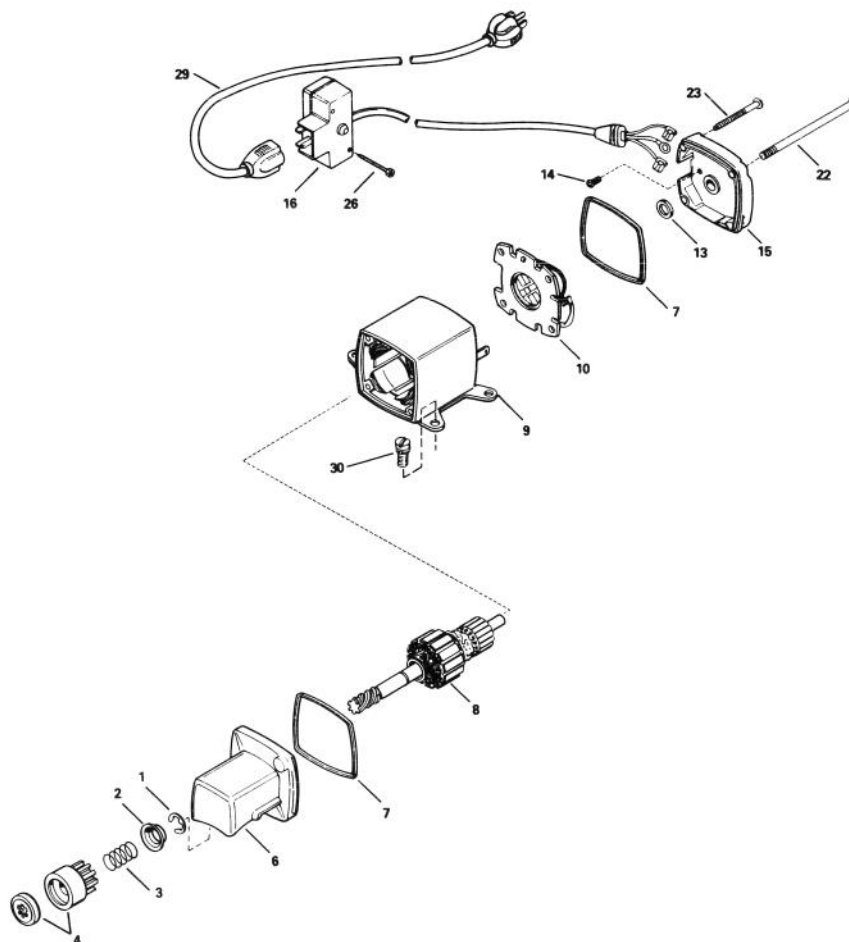


STARTER MOTOR KIT NO. 23-3790

Ref. No.	Part No.	Description	No. Used
1	31749	Ring — Retainer	1
2	33522	Retainer — Spring	1
3	33769	Spring — Anti-Drift	1
4	33524	Nut & Gear	1
6	35461	Cap Assy. — Drive End (Incl. Ref. #7)	1
7	35450	“O” Ring	2
8	35460	Armature	1
9	35459	Housing Assembly	1
10	35452	Card Assembly — Brush	1

Ref. No.	Part No.	Description	No. Used
13	590500	Washer — Thrust	1
14	33441	Screw — Ground	1
15	35453	Cap Assy. — Commutator End (Incl. Ref. #7)	1
16	35454	Box Assembly — Switch	1
22	35462	Bolt — Case	2
23	35456	Screw — Grounding	1
26	650819	Screw — Hex Hd. Self-Tap	2
29	32450A	Cord — Extension (10' 6")	1
30	650759	Screw — Hex Hd. Self-Tap	3

  Note: Order individual parts from your local Tecumseh dealer.

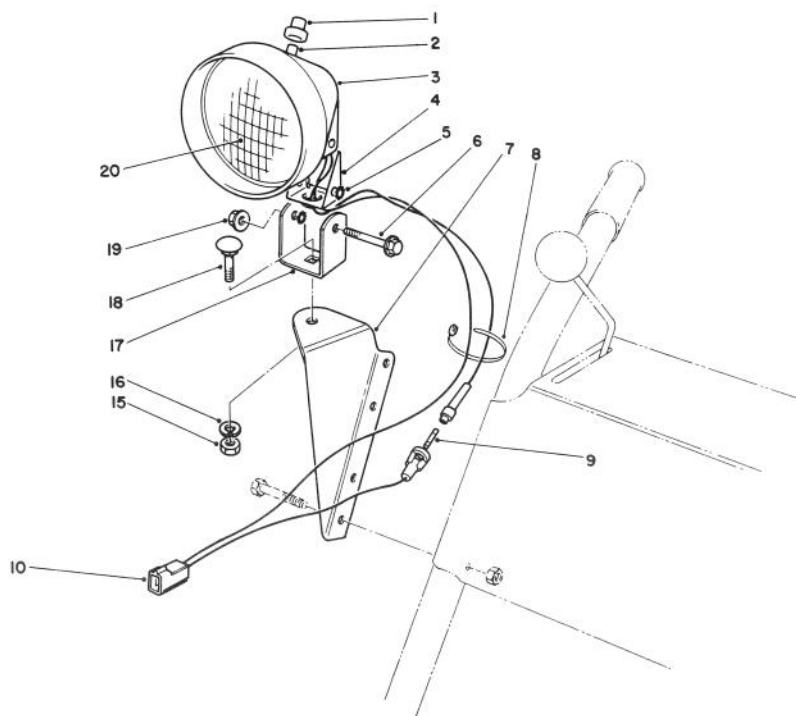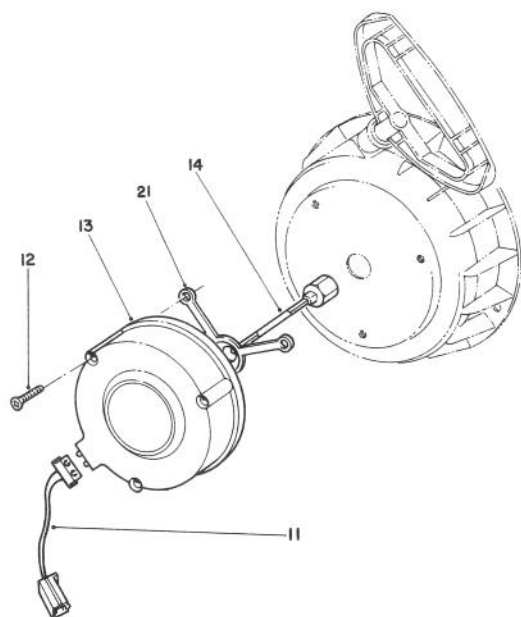

C-0037-89

LIGHT KIT NO. 54-9822 (Optional)


Ref. No.	Part No.	Description	No. Used
1	218-473	Boot — Switch	1
2	218-553	Switch Assembly	1
3	218-552	Bucket — Headlamp	1
4	218-554	Bracket	1
5	3255-8	Washer — Lock	2
6	322-13	Screw — Hex Flange Hd.	1
7	54-9830	Mount — Lamp	1
8	3290-378	Tie Wrap	2
9†		Fuse — 7-1/2 Amp.	1
10	218-555	Wire Assembly	1
11	2210-272	Connector — Light	1
12	2210-300	Screw — Self Tapping	3

Ref. No.	Part No.	Description	No. Used
13	2210-274	Alternator	1
14	2210-268	Shaft — Alternator 3"	1
15	3217-7	Nut — Hex	1
16	3253-21	Washer — Lock	1
17	218-556	Bracket — U	1
18	3231-2	Bolt — Carriage	1
19	32128-35	Nut — Flange Lock	1
20	218-16	Lens — Sealed Beam	1
21	2210-299	Spacer	1
*	54-9871	Headlamp Assembly Complete (Incl. Ref. #1-6, 9-10 & 15-21)	1

* Not Illustrated

† Obtain Locally

 ENGINE TECUMSEH MODEL H35-45598T

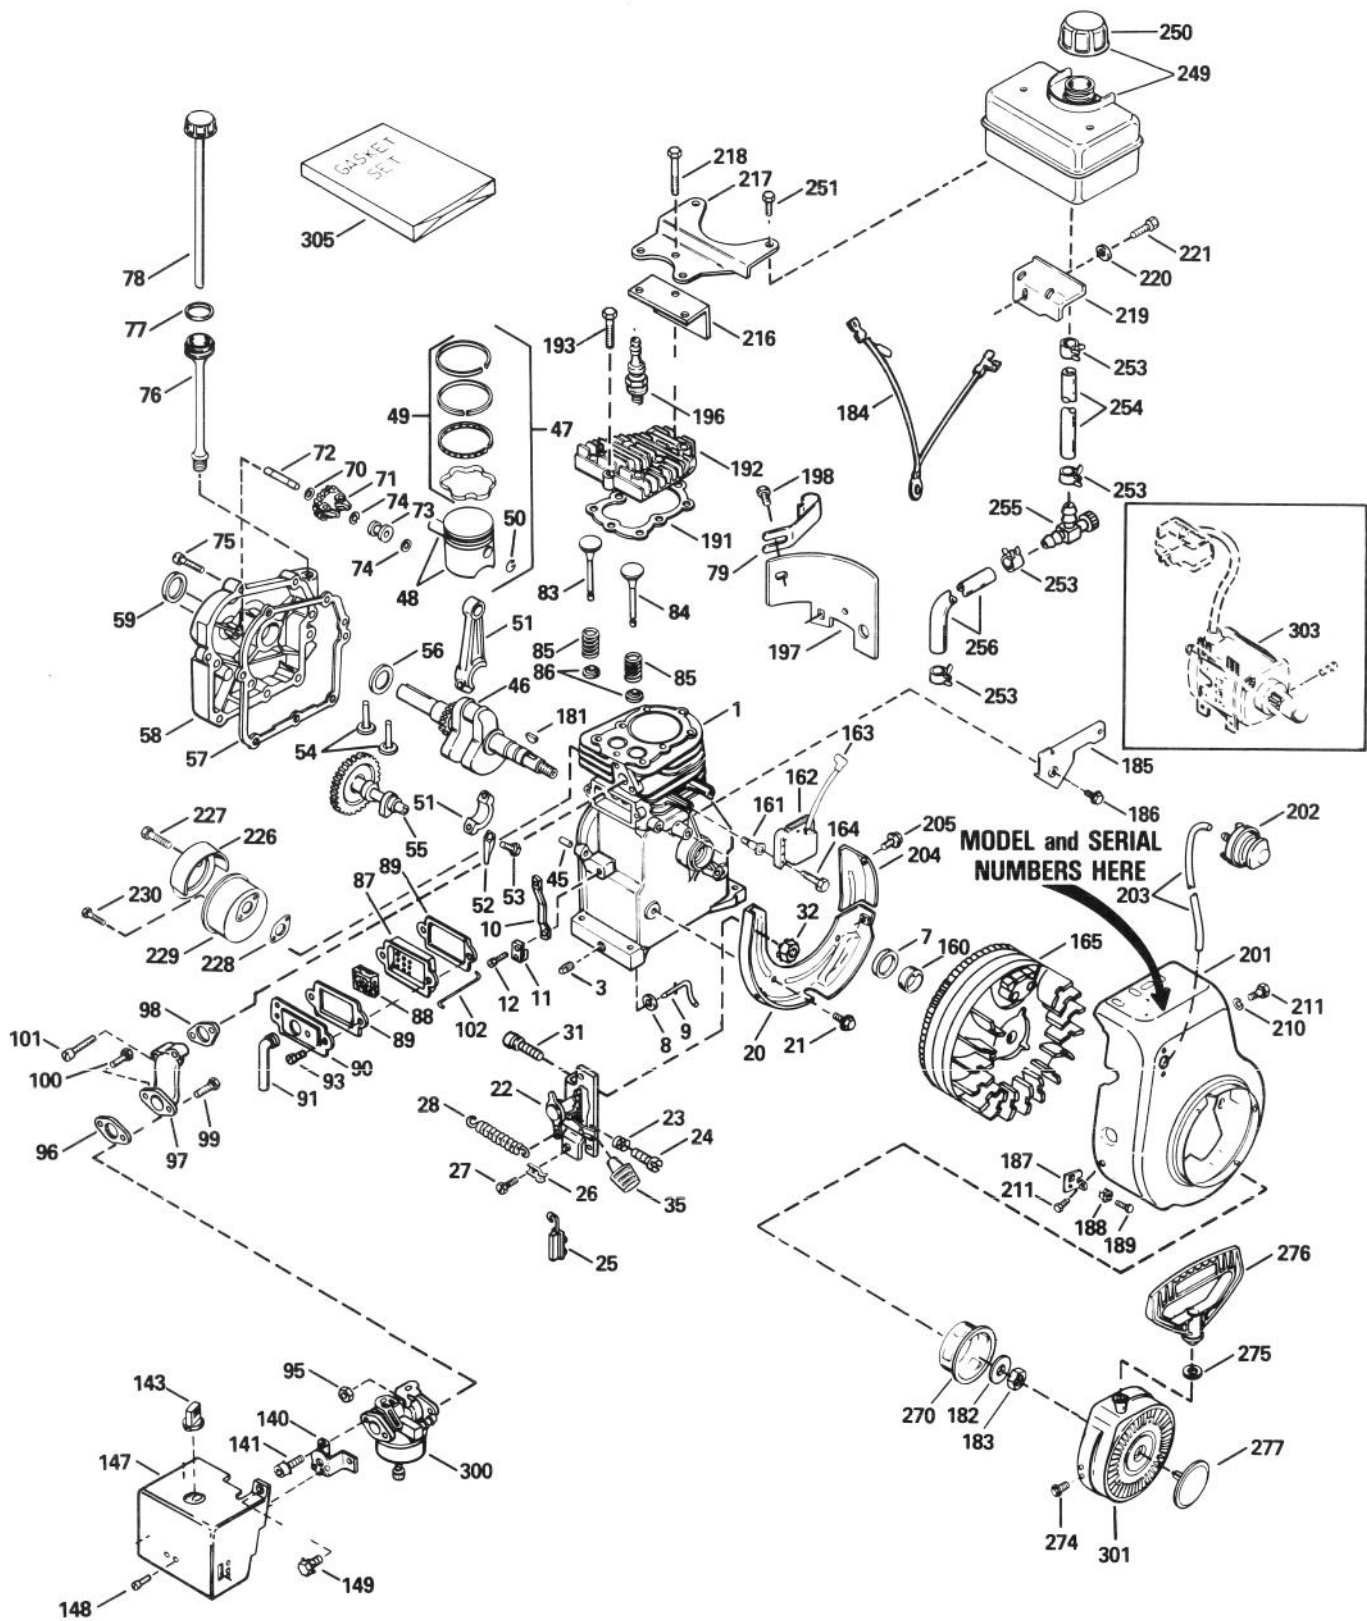

ENGINE TECUMSEH MODEL H35-45598T


Ref. No.	Part No.	Description	No. Used
1	34708A	Cylinder Assembly (Incl. Ref. #3, 7 & 45)	1
3	27642	Plug — Pipe	2
7	32600	Seal — Oil	1
8	28277	Washer — Flat	1
9	31334	Rod — Governor	1
10	31510	Lever — Governor	1
11	31335	Clamp — Governor Lever	1
12	650548	Screw — Hex Washer Hd.	1
20	†33342	Baffle — Blower Housing	1
21	650561	Screw — Hex Washer Hd.	2
22	†33858A	Control Assembly — Bracket (Incl. Ref. #23-27, 31 & 32)	1
23	31342	Spring — Compression	1
24	650549	Screw — Fil. Hd.	1
25	610973	Terminal Assembly	1
26	27793	Clip — Conduit	1
27	28942	Screw — Hex Washer Hd.	1
28	31426	Spring — Extension	1
31	†650139	Screw — Fil. Hd.	2
32	†30322	Nut — Lock	2
35	35440	Knob — Speed Control	1
45	26727	Pin — Dowel	2
46	34734A	Crankshaft Assembly	1
47	34514	Piston — Pin & Ring Assy. (Std.) (Incl. Ref. #48, 49 & 50)	1
47	34515	Piston — Pin & Ring Assembly (.010 oversize) (Incl. Ref. #48, 49 & 50)	1
47	34516	Piston — Pin & Ring Assembly (.020 oversize) (Incl. Ref. #48, 49 & 50)	1
48	32538B	Piston & Pin Assy. (Std.) (Incl. Ref. #50)	1
48	32548B	Piston & Pin Assembly (.010 oversize) (Incl. Ref. #50)	1
48	32549B	Piston & Pin Assembly (.020 oversize) (Incl. Ref. #50)	1
49	28986	Ring Set — Piston (Std.)	1
49	28987	Ring Set — Piston (.010 oversize)	1
49	28988	Ring Set — Piston (.020 oversize)	1
50	20381	Ring — Piston Pin Retaining	2
51	32875	Rod Assy. — Connecting (Incl. Ref. #52 & 53)	1
52	32654	Dipper — Oil	1
53	32610A	Screw — Connecting Rod	2
54	27241	Lifter — Valve	2
55	33149A	Camshaft (Compression Release)	1
56	32323	Washer — Thrust	1
57	*27677	Gasket — Cylinder Cover	1
58	34674A	Cover — Cylinder (Incl. Ref. #59 & 72)	1

Ref. No.	Part No.	Description	No. Used
59	27897	Seal — Oil	1
70	30590A	Washer — Flat	1
71	30591	Gear — Governor	1
72	30574	Shaft — Mechanical Governor	1
73	30588A	Spool — Governor	1
74	29193	Ring — Retaining	2
75	650488	Screw — Hex Hd.	7
76	35554	Tube Assy. — Oil Fill	1
77	35499	“O” Ring	1
78	35556	Dipstick	1
79	35539	Clip — Oil Fill	1
83	29313C	Valve — Exhaust (Std.) (Incl. Ref. #86)	1
83	29315C	Valve — Exhaust (1/32” oversize) (Incl. Ref. #86)	1
84	29314B	Valve — Intake (Std.) (Incl. Ref. #86)	1
84	29315C	Valve — Intake (1/32” oversize) (Incl. Ref. #86)	1
85	31672	Spring — Valve	2
86	31673	Cap — Valve Spring	2
87	27666	Body — Valve Cover	1
88	31410	Element — Valve Body	1
89	*27234	Gasket — Valve Cover	1
90	34146	Cover — Breather	1
91	35350	Tube — Breather	1
93	650128	Screw — Fil. Hd.	2
95	29752	Nut & Lockwasher Assy.	2
96	*26756	Gasket — Carburetor	1
97	28416A	Pipe — Intake (Incl. Ref. #100)	1
98	*26754	Gasket — Intake	1
99	6201	Screw — Hex Hd.	1
100	650840	Screw — Hex Hd.	1
101	650664	Screw — Fil. Hd.	2
102	31858	Link — Governor to Throttle	1
140	32398	Bracket — Choke	1
141	28820	Screw — Fil. Hd.	2
143	35439	Knob — Choke Control	1
147	35122	Cover — Carburetor	1
148	650257	Screw — Pan Hd.	2
149	650765	Screw — Hex Washer Hd. Self-Drilling and Extruding	1
160	34080	Spacer — Flywheel Key	1
161	650872	Stud — Solid State Mounting	2
162	34443A	Solid State Assembly	1
163	610118	Cover — Spark Plug	1
164	650814	Screw — Hex Hd.	2
165	611081	Flywheel (w/Ring Gear)	1
181	610961	Key — Flywheel	1
182	650815	Washer — Belleville	1
183	650863	Nut — Flywheel	1
184	35557	Wire — Ground	1
185	34212	Bracket — Hold Down	1
186	30200	Screw — Hex Washer Hd. Self-Tap.	1

* Indicates Parts Included in Gasket Set, Ref. #305.

† In original production the speed control assembly is riveted to the blower housing baffle. Replacement speed control assembly includes screws and nuts for mounting. Replacement baffle has threaded holes.

 ENGINE TECUMSEH MODEL H35-45598T (Continued)

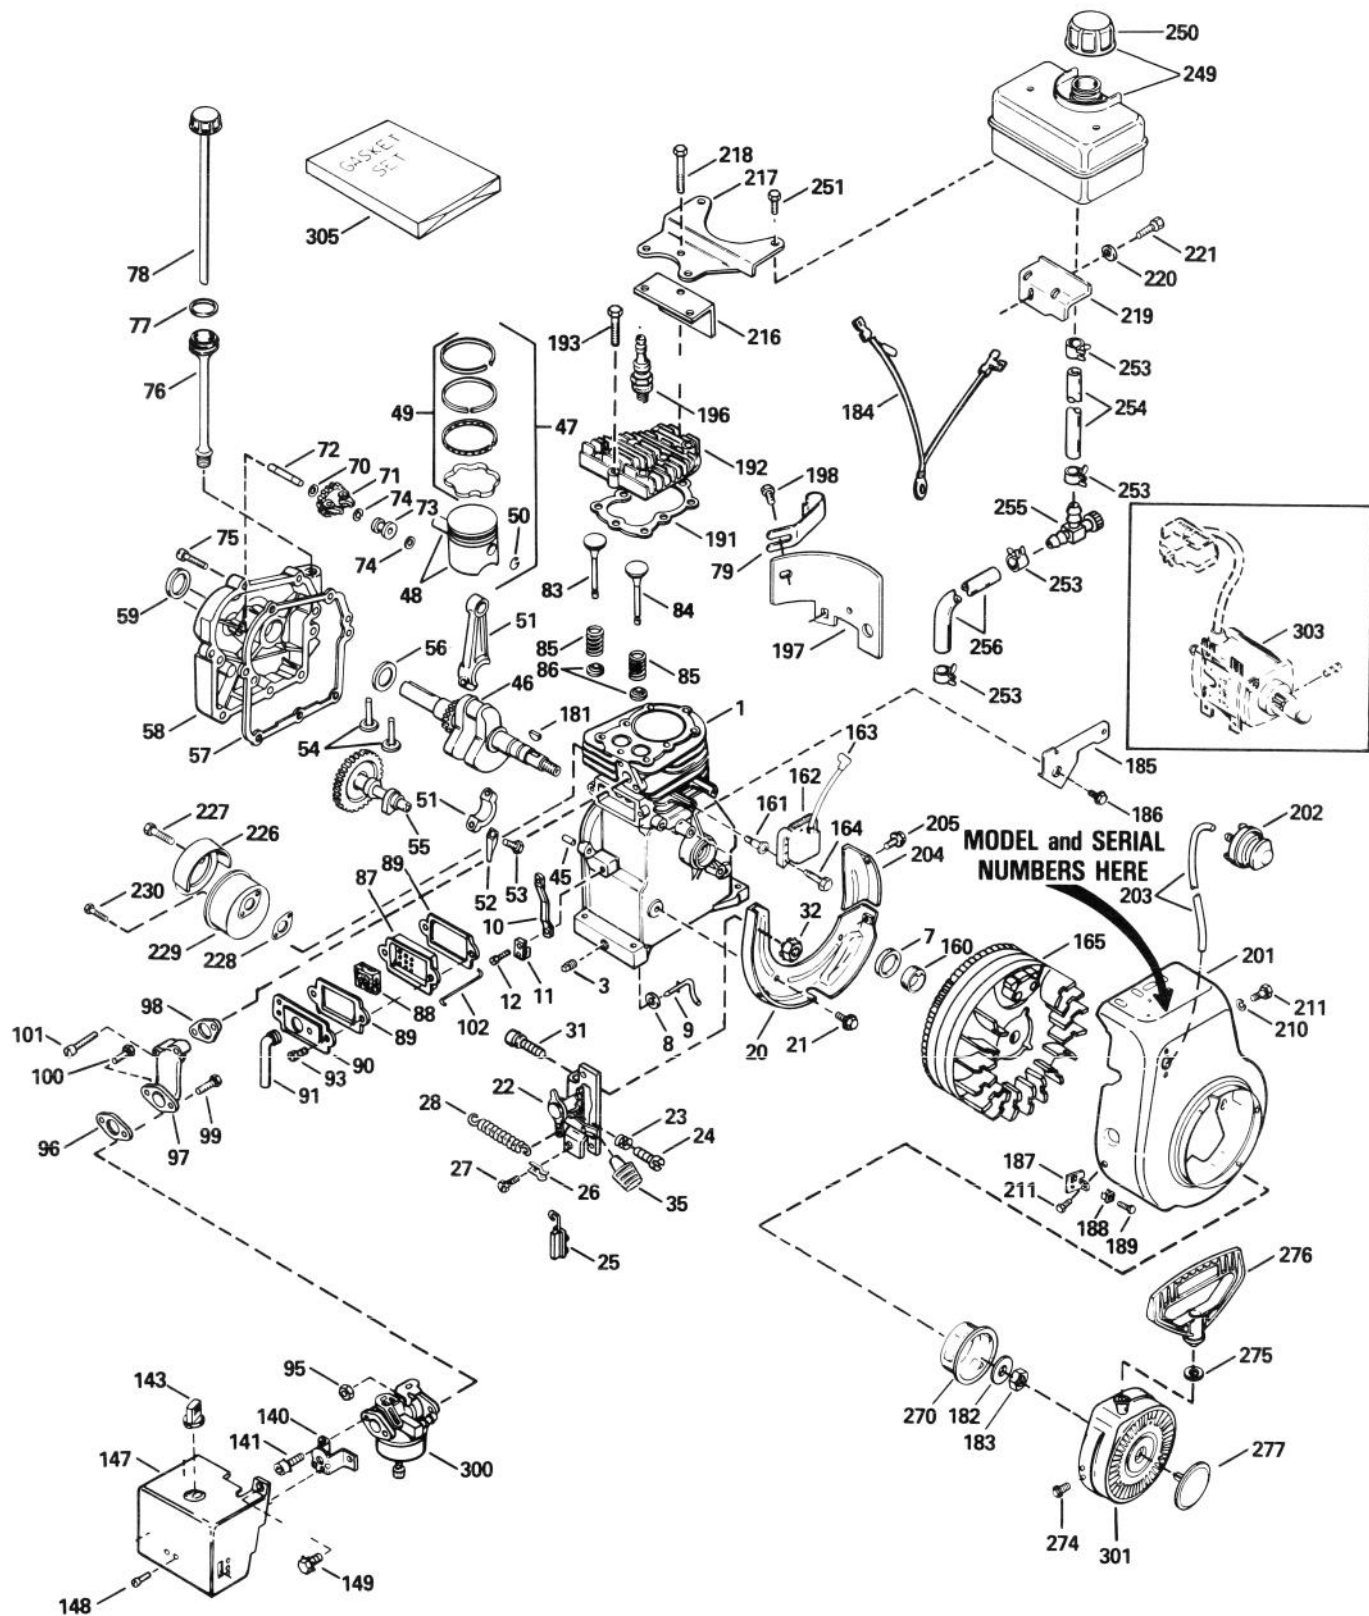


ENGINE TECUMSEH MODEL H35-45598T (Continued)

Ref. No.	Part No.	Description	No. Used
187	34126	Bracket — Grommet Mounting	1
188	28545	Grommet — Plastic	1
189	650760	Screw — Pan Hd.	1
191	*29953C	Gasket — Cylinder Head	1
192	30579A	Head — Cylinder	1
193	6021A	Screw — Hex Flange Hd.	3
196	35395	Plug — Spark (Champion RJ-19LM or equivalent)	1
197	29745	Extension — Blower Housing	1
198	650128	Screw — Fil. Hd.	1
201	35656	Housing — Blower	1
202	570682	Primer Assembly	1
203	32180C	Line — Primer	1
204	33341	Extension — Baffle	1
205	650701	Screw — Hex Washer Hd. Shakeproof Self-Drilling	1
210	650168	Washer — Flat	1
211	29212	Screw — Hex Hd.	2
216	33344	Baffle — Heat	1
217	28371B	Plate — Fuel Tank	1
218	650694A	Screw — Hex Flange Hd.	5
219	34182	Bracket — Fuel Tank Mounting	1
220	650675	Washer — Flat	1
221	650805	Screw — Hex Hd. w/Belleville Washer	1
226	30997	Cover — Muffler	1

Ref. No.	Part No.	Description	No. Used
227	650665	Screw — Hex Washer Hd. Self-Tap	1
228	*30081	Gasket — Exhaust	1
229	30996	Muffler	1
230	650493	Screw — Hex Hd.	2
249	35584	Tank Assembly — Fuel (Incl. Ref. #250 & 253)	1
250	35355	Cap — Fuel Tank	1
251	650665	Screw — Hex Washer Hd. Self-Tap	2
253	26460	Clamp — Fuel Line	4
254	29774	Line — Fuel	1
255	32961	Valve — Shut-Off	1
256	30705	Line — Fuel	1
270	34694	Cup — Starter	1
274	650884	Screw — Hex Washer Hd.	1
275	650168	Washer — Flat	1
276	590574	Handle — Starter	1
277	35392	Plug — Starter	1
300	632378	Carburetor (Incl. Ref. #96)	1
301	590646	Starter — Rewind	1
303		Electric Starter Kit 33290C (Optional) Sold as Accessory	1
305	33233	Gasket Set (Incl. Items Marked *)	1

* Indicates Parts Included in Gasket Set, Ref. #305.

 
† In original production the speed control assembly is riveted to the blower housing baffle. Replacement speed control assembly includes screws and nuts for mounting. Replacement baffle has threaded holes.

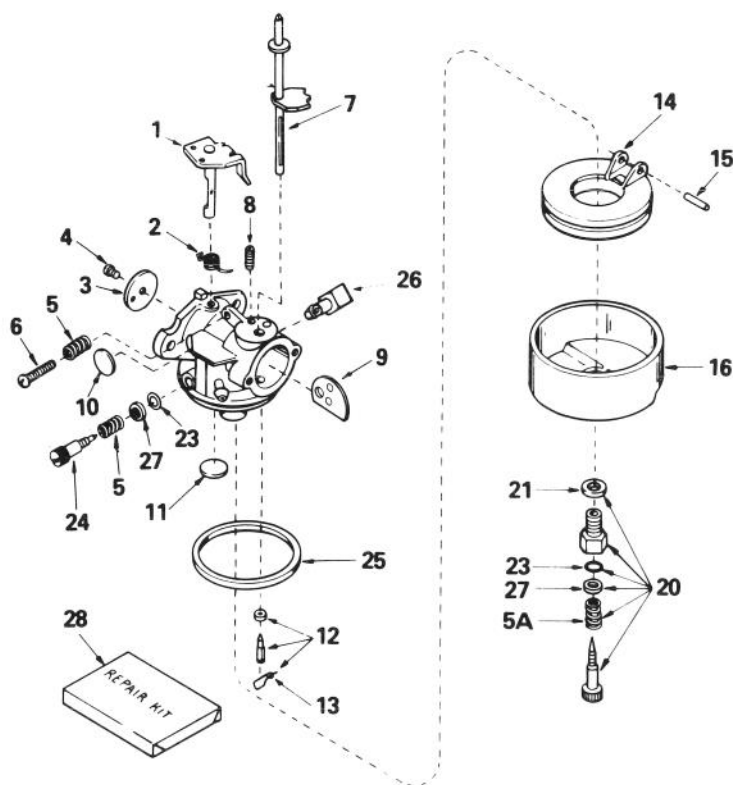

CARBURETOR NO. 632378

Ref. No.	Part No.	Description	No. Used
	632378	Carburetor	1
1	631615	Shaft & Lever Assy. — Throttle	1
2	631767	Spring — Throttle Return	1
3	631036	Shutter — Throttle	1
4	650506	Screw — Throttle Shutter	2
5	630766	Spring — Regulating Screw	2
5A	630738	Spring — Main Adjustment Screw	1
6	650417	Screw — Idle Regulating	1
7	632373	Shaft — Choke	1
8	630735	Spring — Choke Positioning	1
9	632372	Shutter — Choke	1
10*	630748	Plug — Welch	1
11*	631027	Plug — Welch	1
12*	631021	Inlet Needle — Seat & Clip Assy. (Incl. Ref. #13)	1

Ref. No.	Part No.	Description	No. Used
13	631022	Clip — Inlet Needle	1
14	632019	Float — Carburetor	1
15*	631024	Shaft — Float	1
16	631867	Bowl — Float	1
20*	31839	Adjustment Screw Assy. — Main (Incl. Ref. #5A, 21, 23 & 27)	1
21	27110	Gasket — Bowl-to-Body	1
23*	630740	"O" Ring — Adjustment Screw	2
24*	631078	Screw — Idle Adjustment	1
25*	631028	Gasket — Bowl-to-Body	1
26	631775	Fitting — Fuel Inlet	1
27	630739	Washer — Flat	2
28	31840	Repair Kit (Incl. Items Marked *)	1

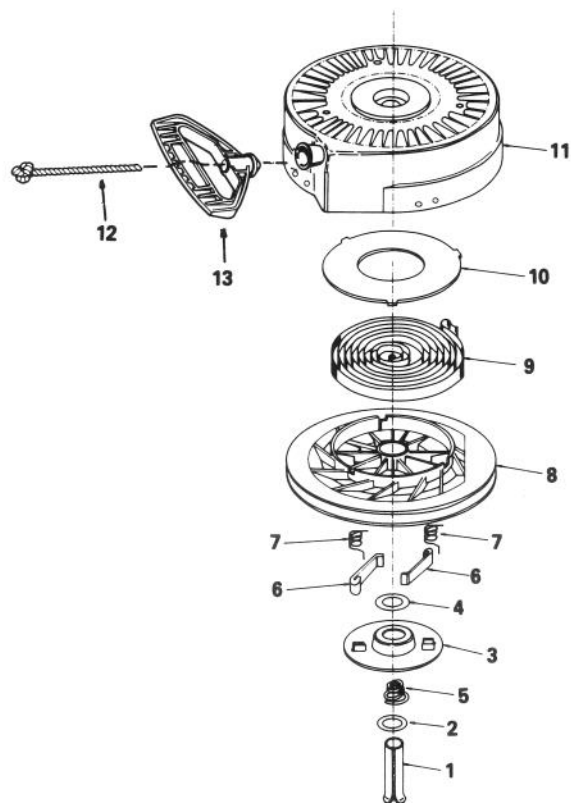 

REWIND STARTER NO. 590646

Ref. No.	Part No.	Description	No. Used
	590646	Starter — Rewind	1
1	590599A	Pin — Spring (Incl. Ref. #4)	1
2	590600	Washer	1
3	590615	Retainer	1
4	590601	Washer	1
5	590598	Spring — Brake	1
6	590616	Dog — Starter	1
7	590617	Spring — Dog	1

Ref. No.	Part No.	Description	No. Used
8	590645	Pulley	1
9	590619	Spring — Rewind	1
10	590620	Cover — Spring	1
11	590647	Housing Assy. — Starter	1
12	590451A	Rope — Starter	1
13	590574	Starter Handle — Mitten Grip (Not included with Starter)	1

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Snowthrower has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal which is located on back of the engine mounting plate. In any correspondence concerning the Snowthrower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial numbers of the Snowthrower.
2. Part number, description, and quantity of part(s) desired.

Note: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

The Toro Promise

A TWO YEAR LIMITED WARRANTY On All Gasoline Powered Consumer Products

The Toro Company promises to repair your TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Residential Product 2 Years
Residential Products Used Commercially 45 Days

The costs of parts and labor are included, but the customer pays the transportation costs. Just return any residential product to an Authorized TORO Service Dealer or TORO Distributor.

Should you feel your TORO Product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact any Authorized TORO Service Dealer, TORO Master Service Dealer, or TORO Distributor (the Yellow Pages of your telephone directory is a good reference source).
2. He will either instruct you to return the product to him or recommend another Authorized TORO Service outlet which might be more convenient.
3. Bring the product along with your original sales slip, or other evidence of purchase date, to the service dealer.
4. The servicing dealer will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the dealer's analysis of the defect or the service performed, you may contact us.

Write:

TORO Consumer Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Service Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND

FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized TORO Service Dealer using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Service Account are not reimbursable under The Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason

you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.