 


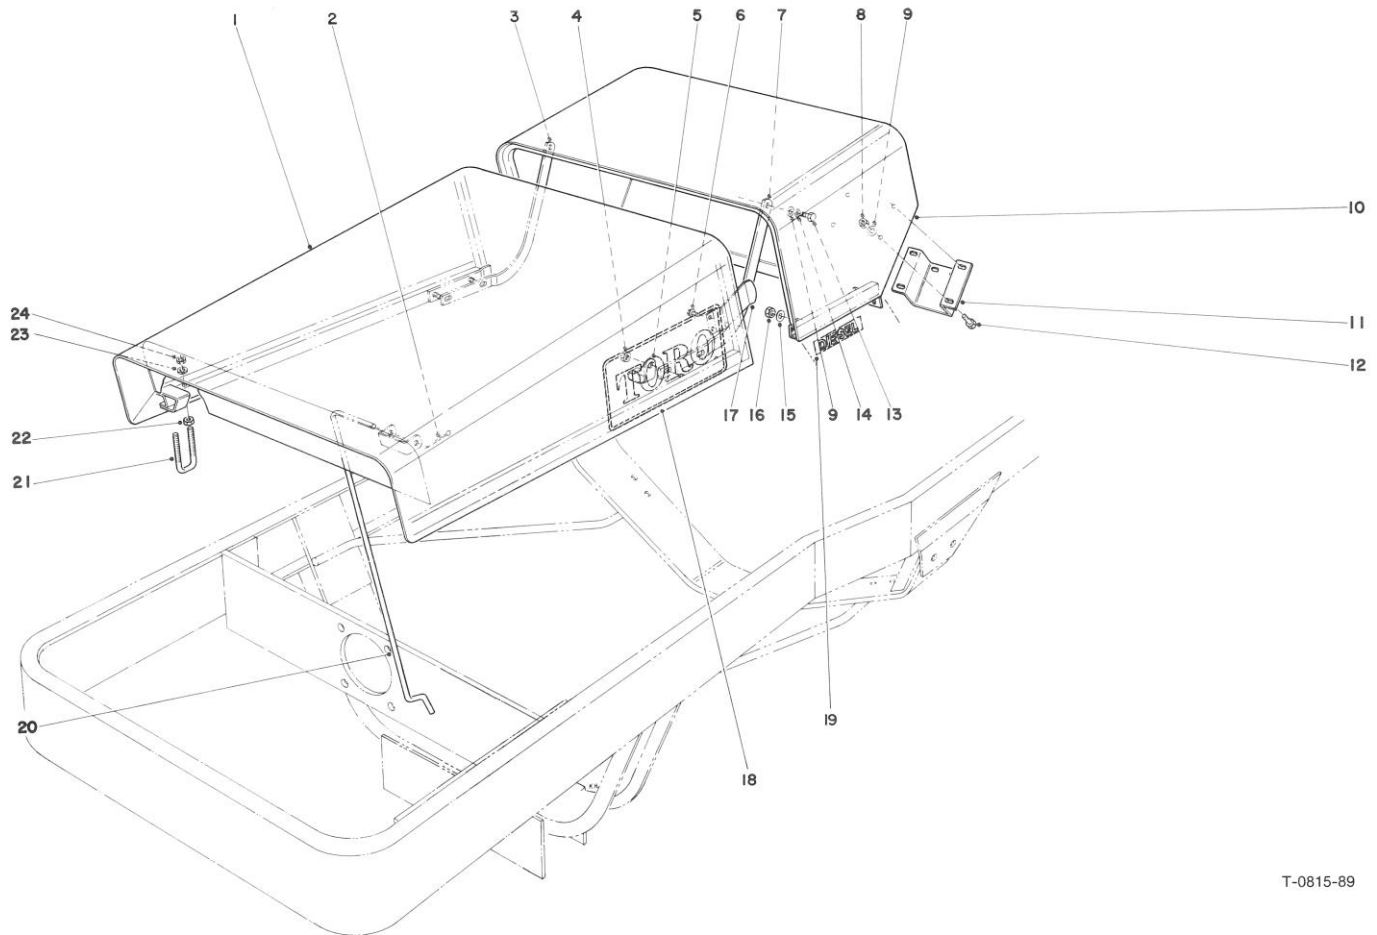

MODEL NO. 33677 — 90001 & UP


**PARTS
CATALOG****PARKMASTER 7 (Diesel)**

T-0815-89

HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	18-0630	Hood	1
2	3272-9	Cotter Pin	1
3	18-0760	Pivot Arm R.H.	1
4	32128-29	Locknut	4
5	18-1270	Hood Clip	1
6	32140-32	Screw	4
7	18-0750	Pivot Arm L.H.	1
8	32153-3	Locknut	4
9	3256-23	Flat Washer	6
10	18-0560	Cowl	1
11	18-0770	Steering Column Support	1
12	322-2	Capscrew	4

Ref. No.	Part No.	Description	No. Used
13	322-1	Capscrew	2
14	3253-4	Lockwasher	2
15	3256-24	Flat Washer	4
16	32153-2	Locknut	4
17	18-3230	Hood Support Spring	2
18	66-6140	Decal — Toro	2
19	19-6060	Decal — Diesel	2
20	19-2970	Hood Prop	1
21	18-1290	U-Bolt	2
22	3218-1	Jam Nut	4
23	3253-3	Lockwasher	4
24	3217-5	Nut	4

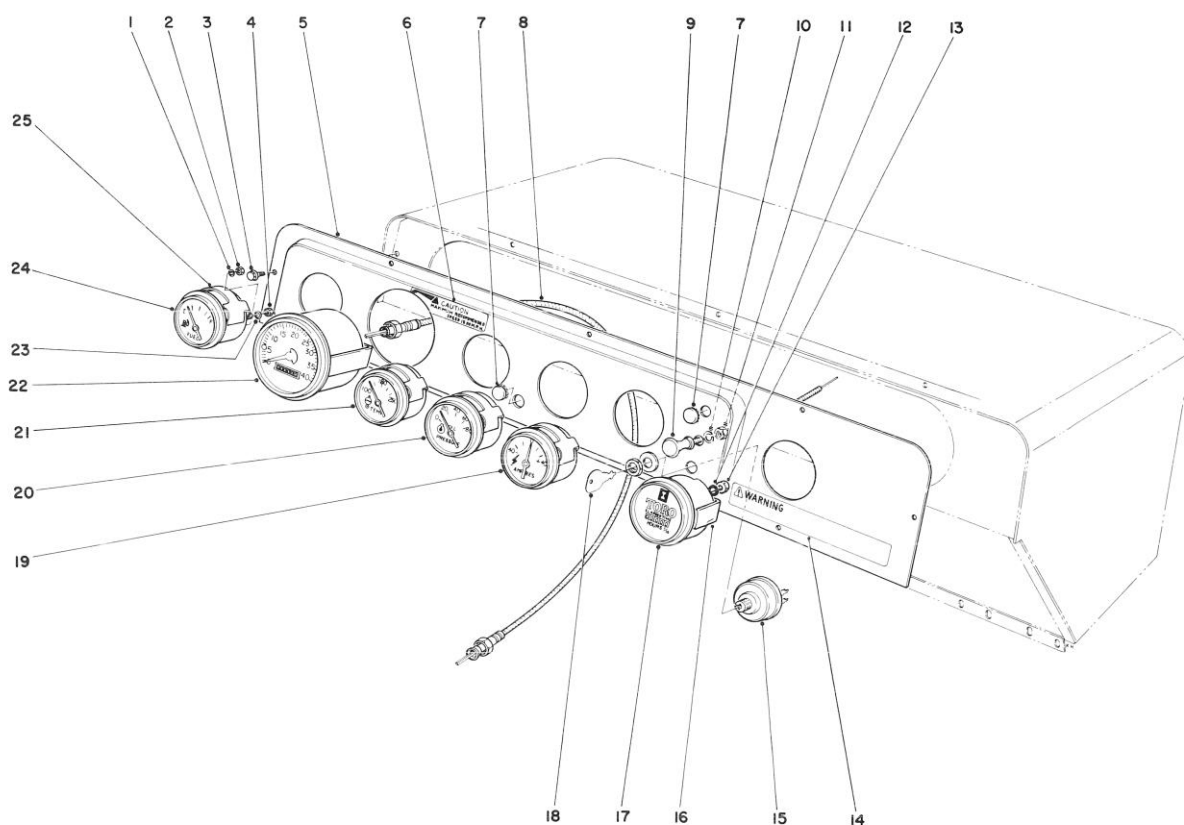 

T-0626-89


DASH ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	3254-9	Lockwasher	8
2	3217-29	Nut	8
3	32104-76	Screw Self Tapping	8
4	3219-14	Nut	8
5	18-1390	Instrument Panel	1
6	28-1030	Decal — Caution	1
7	2410-13	Plug Button	2
8	18-2670	Flexible Shaft	1
9	19-2930	Fuel Shut-Off Cable	1
10	3253-21	Lockwasher	1
11	3220-3	Jam Nut	1
12	3254-1	Washer — Lock	1
13	3217-26	Nut	1
14	39-3680	Warning Decal	1

Ref. No.	Part No.	Description	No. Used
15	12-8140	Ignition Switch (Incl. Ref. #18)	1
16	218-515	Clamp — Hour Meter	1
17	63-5320	Hour Meter (Incl. Ref. #16)	1
18	62-7770	Key	2
19	38-1660	Ammeter (Incl. Ref. #25)	1
20	38-1630	Oil Pressure Gauge (Incl. Ref. #25)	1
21	38-1640	Water Temperature Gauge (Incl. Ref. #25)	1
22	18-2230	Speedometer	1
23	3253-17	Lockwasher	8
24	38-1650	Fuel Gauge (Incl. Ref. #25)	1
25		Mounting Bracket	4
*	38-1940	Wiring Harness	1

*Not Illustrated

  ELECTRICAL SCHEMATIC (12 Volt, Negative Ground)

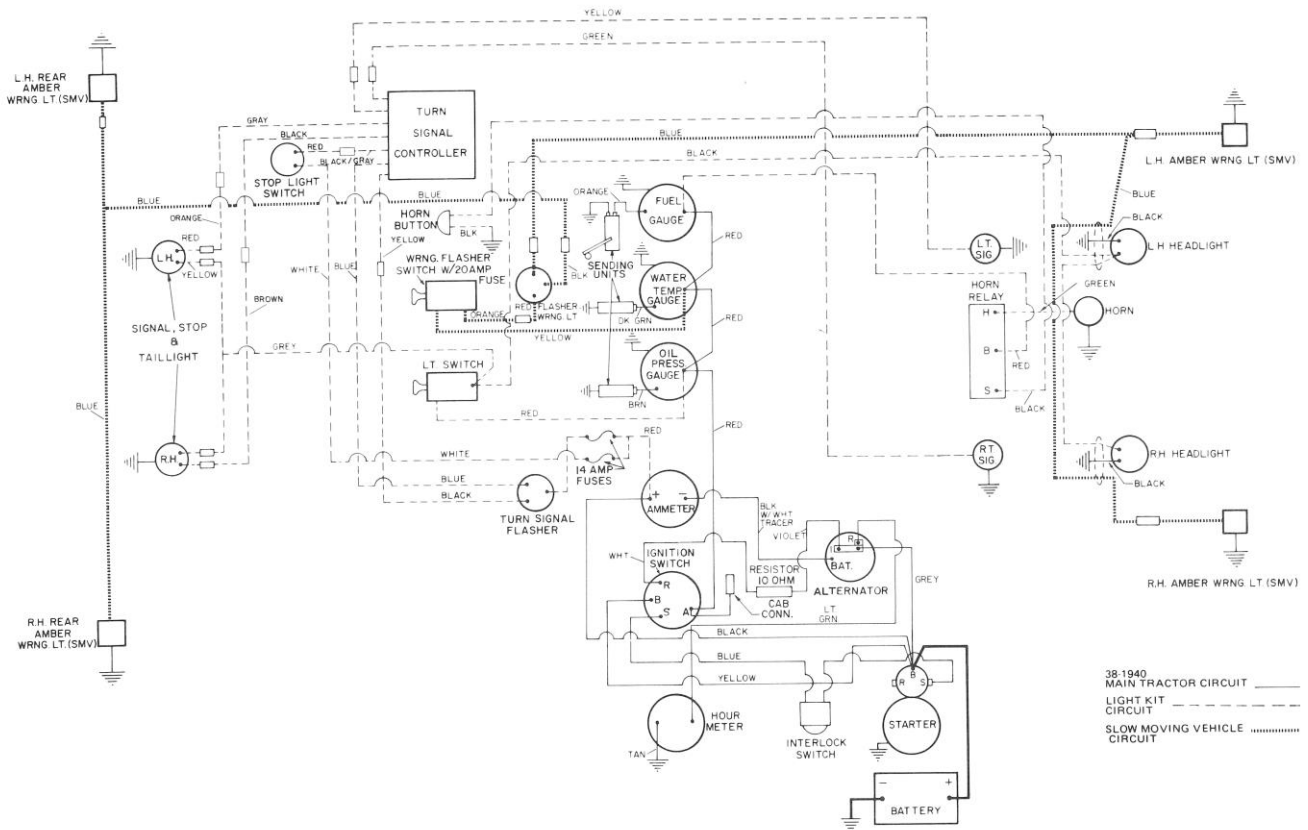

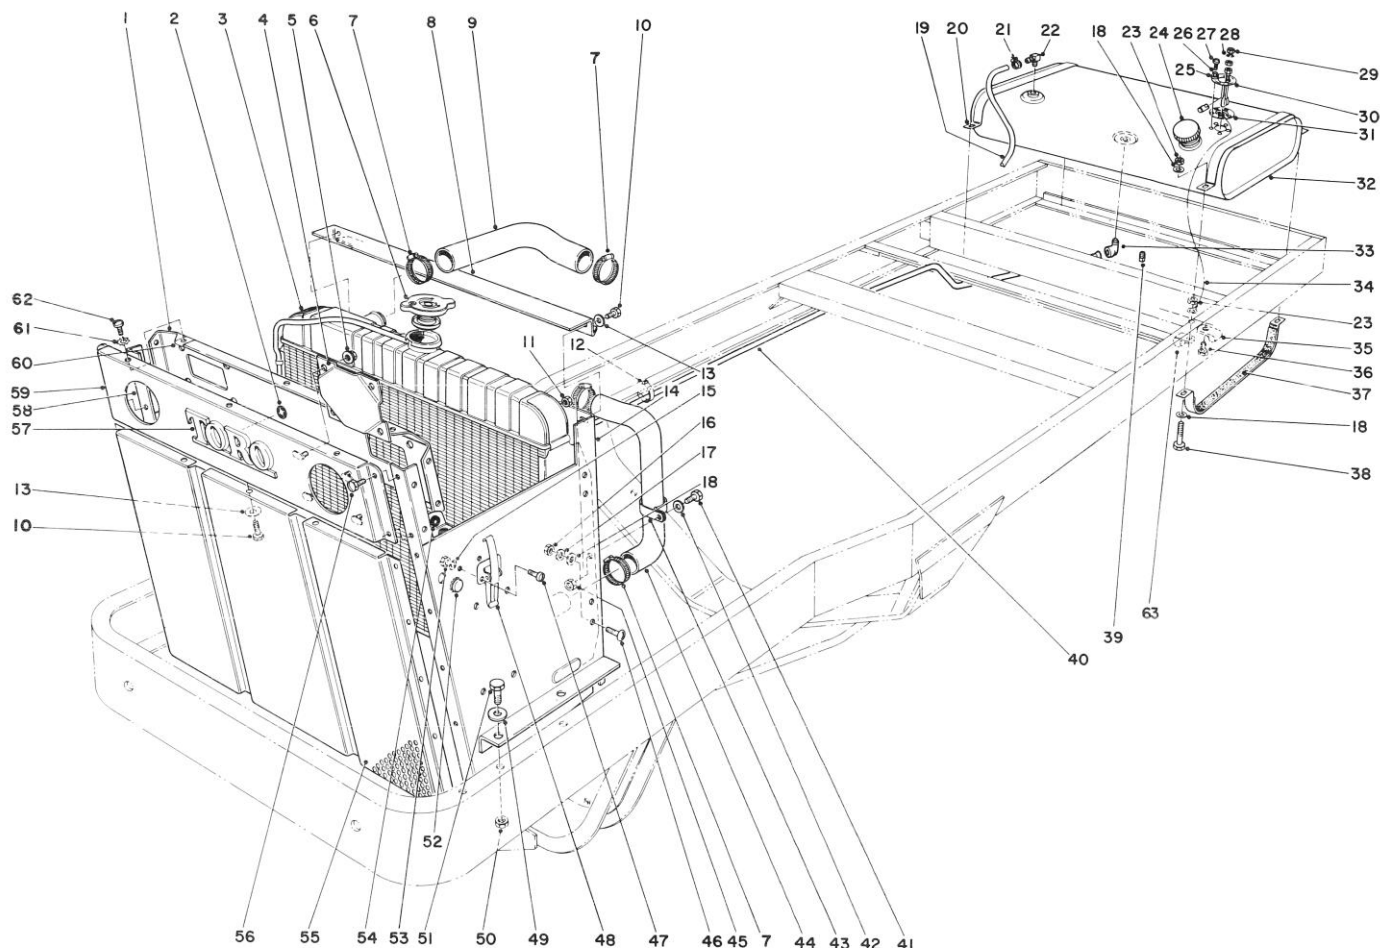


T-0801-89

RADIATOR AND FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	18-1020	Cover — Head Lights	1
2	3290-363	Clip	5
3	62-6880	Radiator	1
4	18-4350	Cover — Headlight Hole	2
5	32128-17	Nut — Flange	8
6	18-2660	Radiator Cap	1
7	2412-3	Hose Clamp	4
8	19-3040	Brace — Front Side Plate	1
9	19-3550	Radiator Hose — Upper	1
10	321-2	Capscrew	7
11	32153-4	Nut — Lock	4
12	3290-336	Locking Strap	2
13	3256-22	Washer — Plain	7
14	19-3010	Front Side Panel L.H.	1
15	3253-17	Lockwasher	4
16	3217-6	Nut	8
17	3253-4	Lockwasher	8
18	3256-23	Washer Plain	16
19	19-3260	Hose Bleed Off	1
20	36-8280	Strap — Fuel Tank	4
21	2412-36	Clamp — Worm Drive	1
22	304-75	Fitting	1
23	32153-3	Nut — Lock	8

Ref. No.	Part No.	Description	No. Used
24	222-8	Gas Cap	1
25	237-49	Washer Nylon	5
26	3254-1	Washer — Lock	5
27	3252-16	Screw — Machine Fillister Hd.	5
28	3255-17	Washer — Lock External Tooth	1
29	3219-14	Nut	1
30	18-2370	Sender — Fuel Level	1
31	18-2380	Gasket — Fuel Sending Unit	1
32	36-8290	Fuel Tank (Incl. Ref. #24)	1
33	27-0130	90° Elbow	1
34	3-3868	Wire Ground	1
35	18-2970	Clip Fuel Line	1
36	32104-32	Screw — Self Tapping	1
37	3-3824	Felt Strip — Fuel Tank	4
38	3290-319	Screw — Machine Hex Hd.	4
39	281-5	Square Hd. Pipe Plug	1
40	44-2630	Fuel Line	1
41	323-4	Capscrew	1
42	3256-24	Washer — Plain	1
43	2412-44	Hose Clamp	1
44	19-3560	Radiator Hose Lower	1
45	32153-2	Nut Lock	2

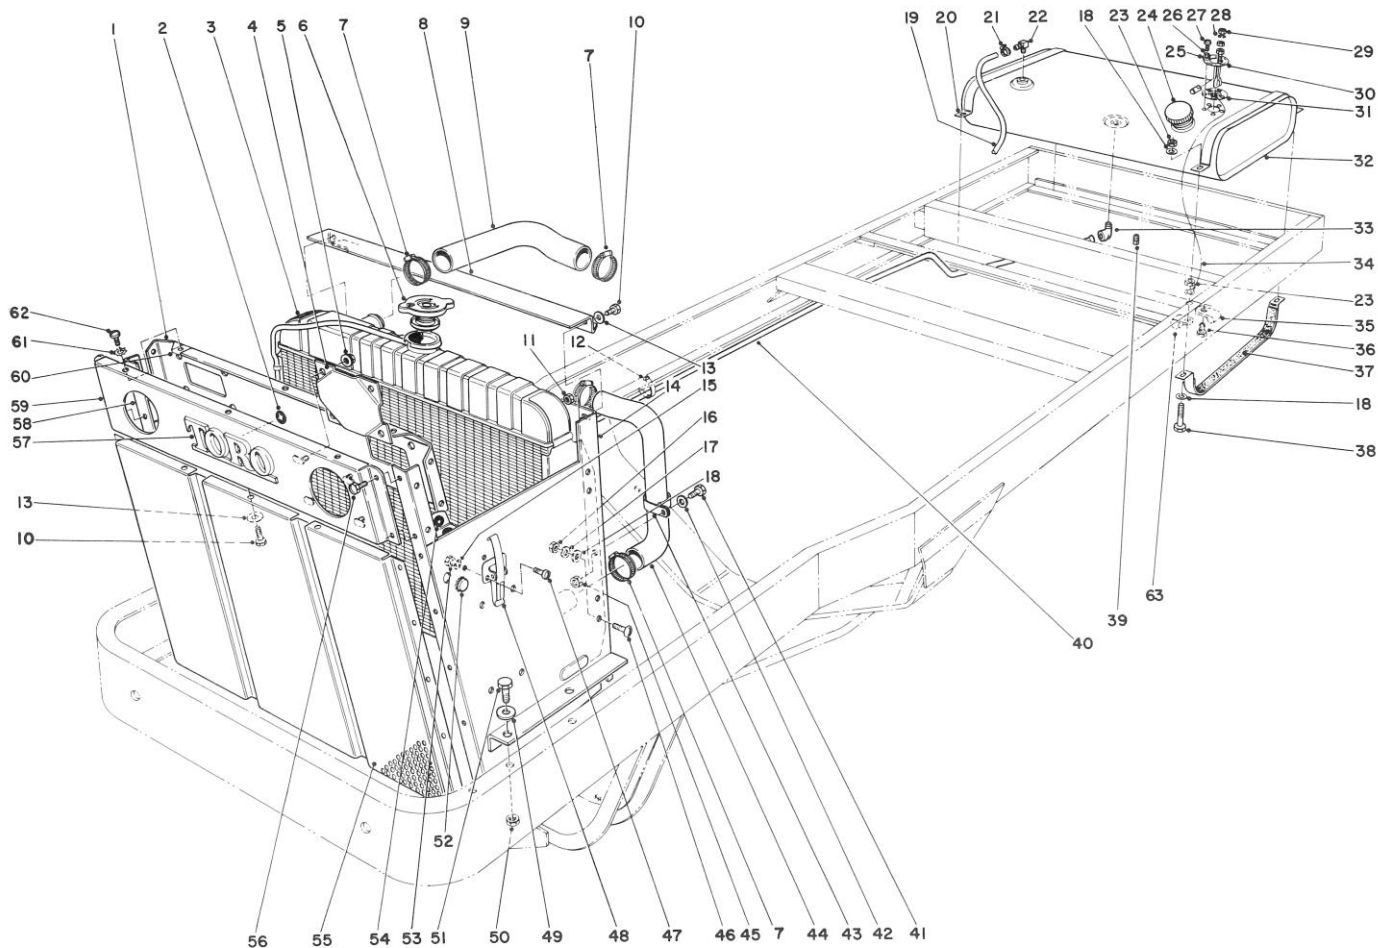 


T-0801-89

RADIATOR AND FUEL TANK ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
46	32122-14	Machine Screw	8
47	3252-2	Screw — Fillister Hd.	4
48	249-10	Hood Clamp	2
49	3256-26	Washer — Plain	4
50	32153-5	Nut — Lock	4
51	325-20	Screw — Cap Hex Hd.	4
52	2410-13	Plug — Button	2
53	3217-26	Nut	4
54	237-37	Rubber Bumper	4

Ref. No.	Part No.	Description	No. Used
55	18-0960	Grille	1
56	32140-42	Screw — Self Tapping Hex. Hd.	14
57	25-9650	Toro Emblem	1
58	19-2980	Front Side Panel R.H.	1
59	37-2230	Headlight Panel	1
60	3290-192	Clip	7
61	5255-7	Washer — Lock (ETLW)	7
62	3290-145	Screw — Pan Hd.	7
63	2412-10	Clamp	1

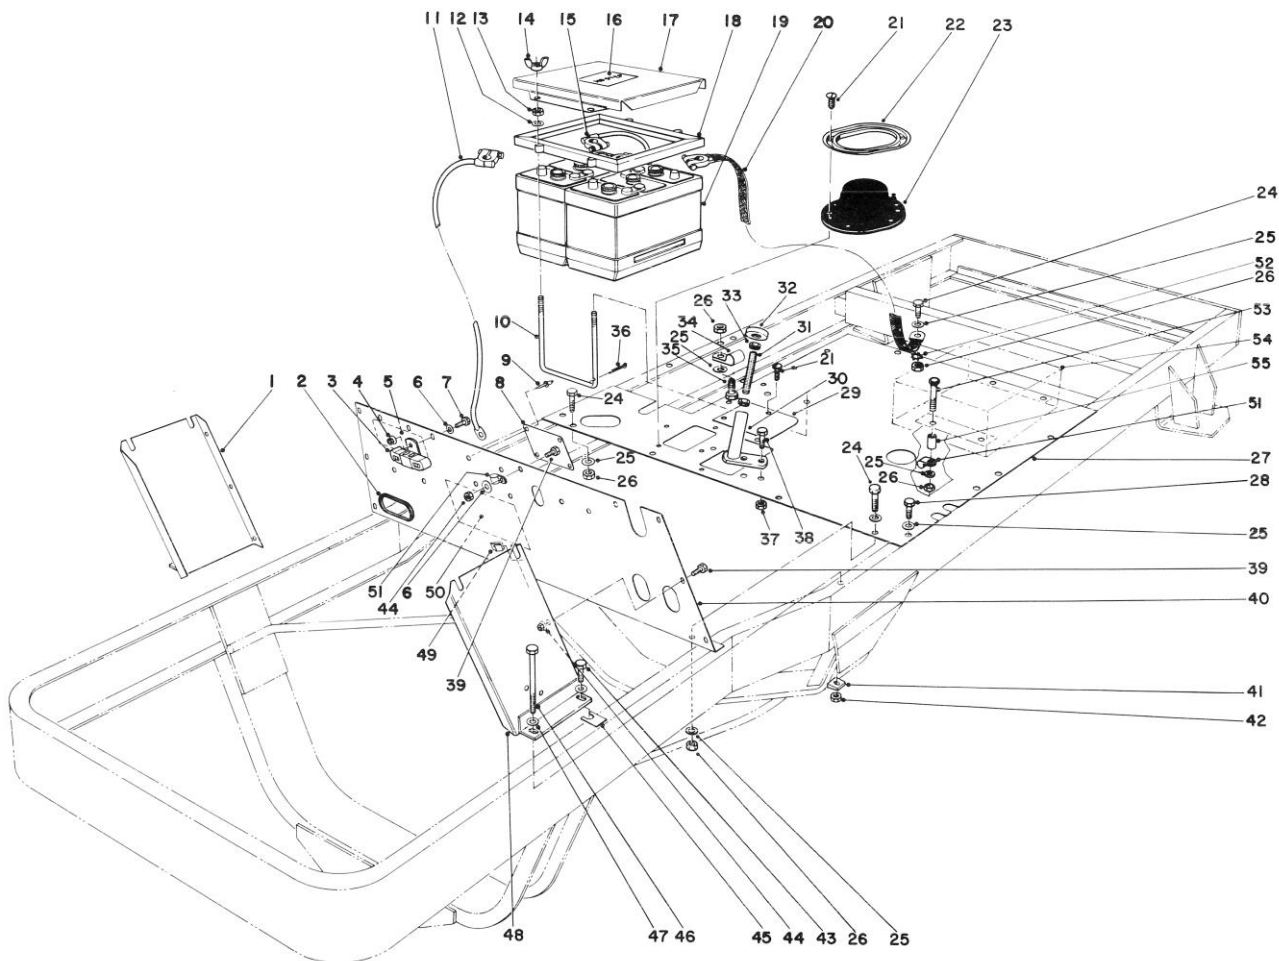 

T-0802-89

TOE BOARD AND BATTERY ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	18-0800	Rear Side Plate R.H.	1
2	18-2310	Grommet	1
3	18-2680	Resistor — 10 Ohm	1
4	32153-4	Locknut	1
5	43-8460	Plate — Name	1
6	3256-22	Washer — Plain	2
7	321-4	Capscrew	1
8	18-3200	Instruction Plate	1
9	3290-56	Pop Rivet	6
10	19-3180	U Bolt Battery Hold Down	2
11	19-3220	Cable — Battery to Starter	1
12	3256-23	Washer — Plain	4
13	3217-6	Nut — Hex	4
14	32103-2	Nut — Wing	4
15	19-3210	Cable — Jumper	1
16	61-5950	Decal (No Step)	1
17	19-3520	Battery Cover	1
18	19-3140	Battery Hold Down	1
19†		Battery — 6 Volt	2
20	19-3200	Cable — Ground	1
21	32104-76	Screw — Self Tapping Hex. Hd.	9
22†	378351	Retainer — Boot	2
23†	378340	Boot Transmission	2
24	323-5	Screw — Cap Hex. Hd.	5
25	3256-24	Washer — Plain	14
26	32153-2	Nut — Lock	7
27	44-1220	Floor Plate	1
28	11-0590	Screw — Self Tapping	6

Ref. No.	Part No.	Description	No. Used
29	44-2080	Plate — Closure	1
30	10-3150	Foot Rest	1
31	5-2973	Rod	1
32	5-2967	Button	1
33	3219-2	Nut — Hex, Jam	2
34	18-2970	Clip — Fuel Line	1
35	323-6	Screw — Cap Hex. Hd.	1
36	3272-6	Pin — Cotter	2
37	32153-3	Nut — Lock	2
38	322-3	Screw — Cap, Hex. Hd.	2
39	3290-321	Capscrew	9
40	18-0850	Toe Board	1
41	3290-216	Washer — Bevel	3
42	32153-5	Nut — Lock	4
43	325-9	Capscrew	3
44	32128-17	Locknut — Flanged	9
45	20-5040	Shim	A/R
46	325-23	Screw — Cap Hex. Hd.	1
47	3256-26	Washer — Plain	4
48	18-0790	Rear Side Plate L.H.	1
49	218-214	Tinnerman Clip	1
50	38-1690	Starting Instructions	1
51	2412-10	Clamp	2
52	3255-9	Lockwasher Ext. Tooth	1
53	323-14	Capscrew	1
54*		Seat Base	1
55	37-3720	Spacer	1

†Obtain from your local GM, Chevrolet Dealer.

‡Obtain Locally.

 *Reference only see page 36.

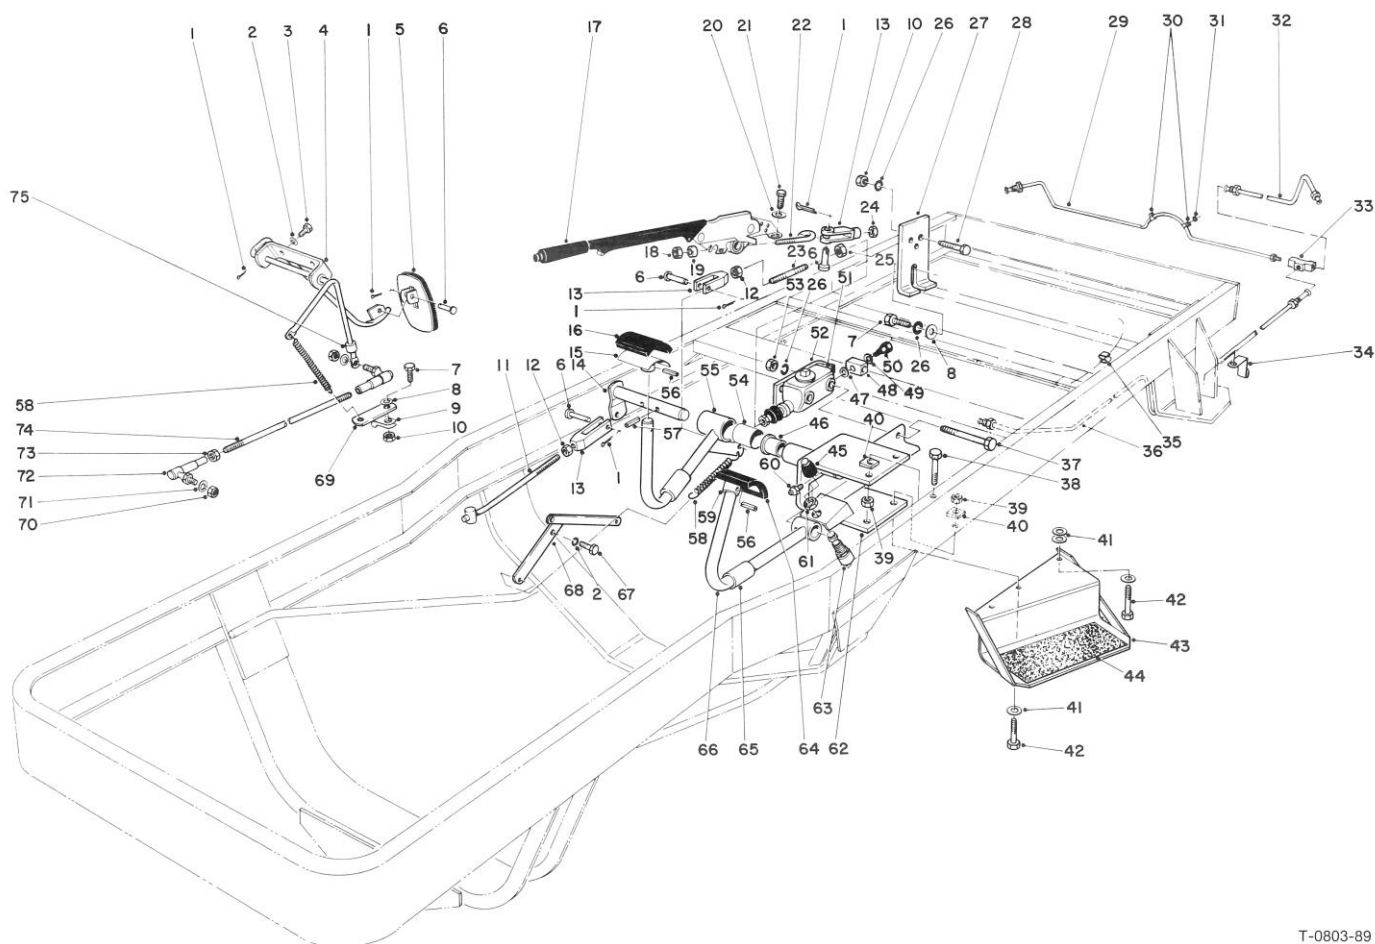


T-0803-89

BRAKE, CLUTCH, THROTTLE CONTROLS

Ref. No.	Part No.	Description	No. Used
1	3272-6	Cotter Pin	6
2	3253-4	Lockwasher	4
3	32104-32	Capscrew	2
4	19-2950	Arm — Foot Throttle	1
5	10-2670	Accelerator Pedal	1
6	283-2	Pin	4
7	323-5	Capscrew	2
8	3256-24	Washer — Plain	2
9	2412-10	Clamp	1
10	32153-2	Nut — Lock	2
11	19-3090	Clutch Link	1
12	3220-3	Nut — Hex, Jam	2
13	282-1	Clevis	3
14	18-1160	Pedal Shaft	1
15	10-0670	Brake Pedal	1
16	7-3900	Brake Pad	1
17	37-2740	Brake Lever Assembly	1
18	3296-29	Nut — Lock	1
19	29-4750	Spacer	1
20	3256-23	Washer Plain	2
21	322-5	Capscrew	2
22	44-2050	Rod Parking Brake	1
23	37-2060	Shaft — Brake Cylinder	1

Ref. No.	Part No.	Description	No. Used
24	3219-3	Nut — Hex Full	1
25	3218-3	Jam Nut	1
26	3253-21	Washer — Lock	4
27	44-2040	Bracket — Cable Support	1
28	323-7	Capscrew	1
29	37-3340	Brake Tube Assembly L.H.	1
30	3-3075	Clip	2
31	3254-6	Washer	2
32	37-3330	Brake Tube Assembly R.H.	1
33	304-2	Fitting — Tee	1
34	46-6460	Support — Brake Line	2
35	212-93	Clip Wire	3
36	42-3700	Brake Tube Assembly	1
37	323-20	Capscrew — Hex, Hd.	2
38	325-6	Capscrew	2
39	32153-5	Nut — Lock	5
40	3290-216	Washer — Bevel	5
41	3256-26	Washer — Plain	5
42	325-7	Screw — Cap, Hex, Hd.	3
43	33-2190	Foot Step	1
44	33-2230	Pad Step	1
45	39-0770	Rubber Boot	1
46	256-10	Bushing	2

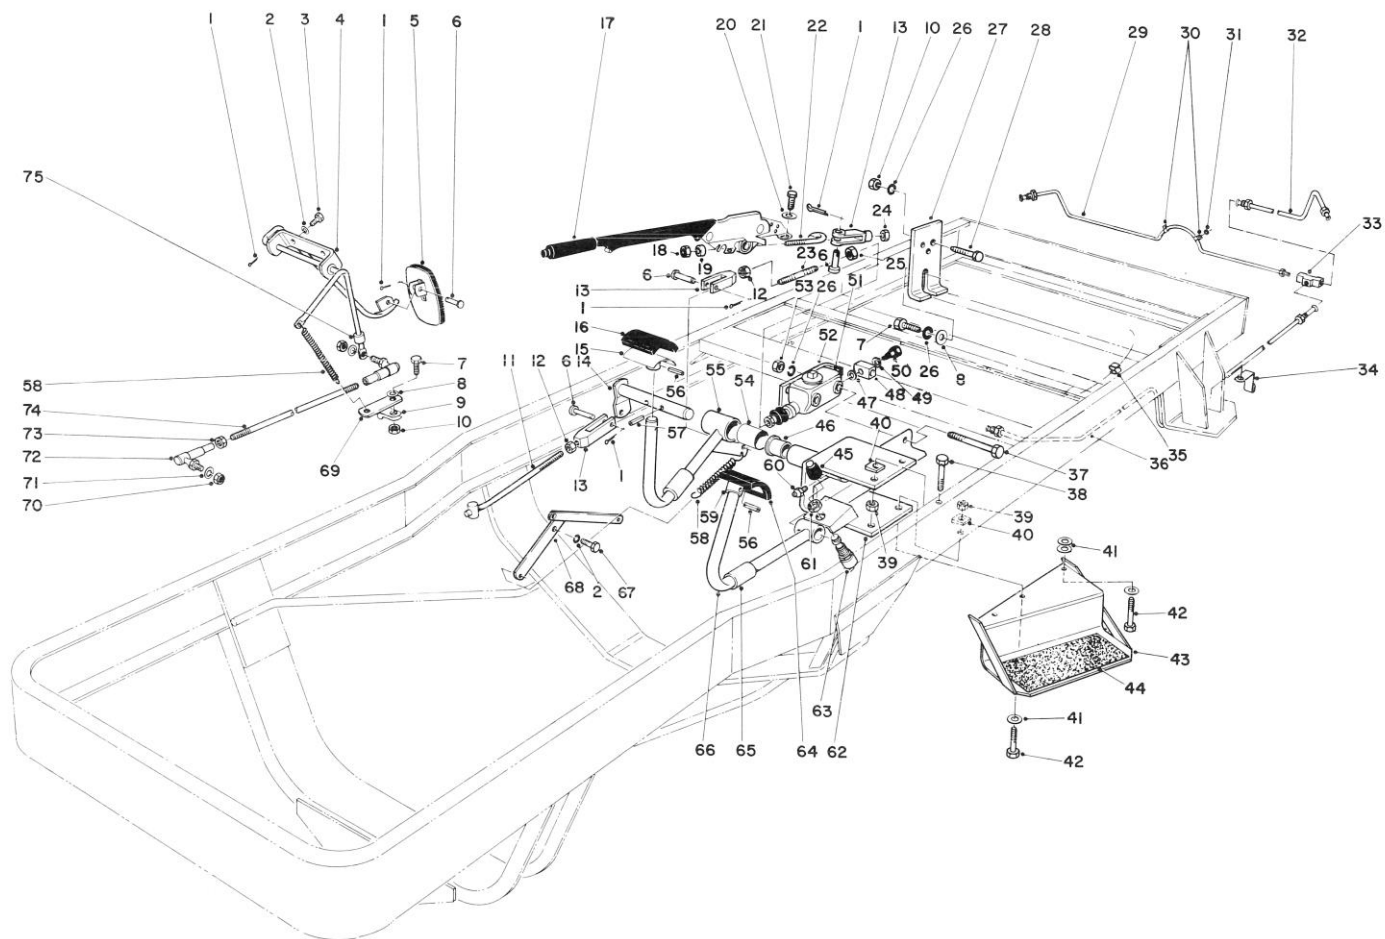 


T-0803-89

BRAKE, CLUTCH, THROTTLE CONTROLS (Continued)

Ref. No.	Part No.	Description	No. Used
47	353-689	Sealing Washer	1
48	42-3710	Fitting	1
49	42-3730	Inlet Connecting Gasket	1
50	42-3720	Connection Bolt	1
51	37-4180	Master Cylinder (Incl. Ref. #47-50)	1
52	42-3690	Shield — Brake Fitting	1
53	3217-7	Nut — Hex, Full	2
54	256-143	Bearing	1
55	3-8760	Brake Pedal (Incl. Ref. #54)	1
56	32121-34	Pin Roll	2
57	32121-15	Pin Roll	1
58	5-1706	Spring	2
59	10-0680	Clutch Pedal	1
60	302-5	Grease Fitting	1
61	218-461	Nut	2

Ref. No.	Part No.	Description	No. Used
62	37-3120	Pedal Shaft Bracket (Incl. Ref. #46)	1
63	23-8010	Switch — Interlock (Incl. Ref. #45 & 61)	1
64	7-3901	Clutch Pad	1
65	3-3107	Bumper Clutch Pedal	2
66	3-3750	Clutch Pedal	1
67	322-3	Screw — Cap Hex, Hd.	2
68	19-3710	Bracket — Return Spring	1
69	38-2090	Strap — Throttle Spring	1
70	3219-1	Nut — Hex	2
71	3253-3	Washer — Lock	2
72	18-1720	Ball Joint	2
73	3220-1	Nut — Jam	2
74	19-3380	Rod — Foot Throttle to Pivot Arm	1
75	18-2860	Rubber Bumper Foot Throttle	1

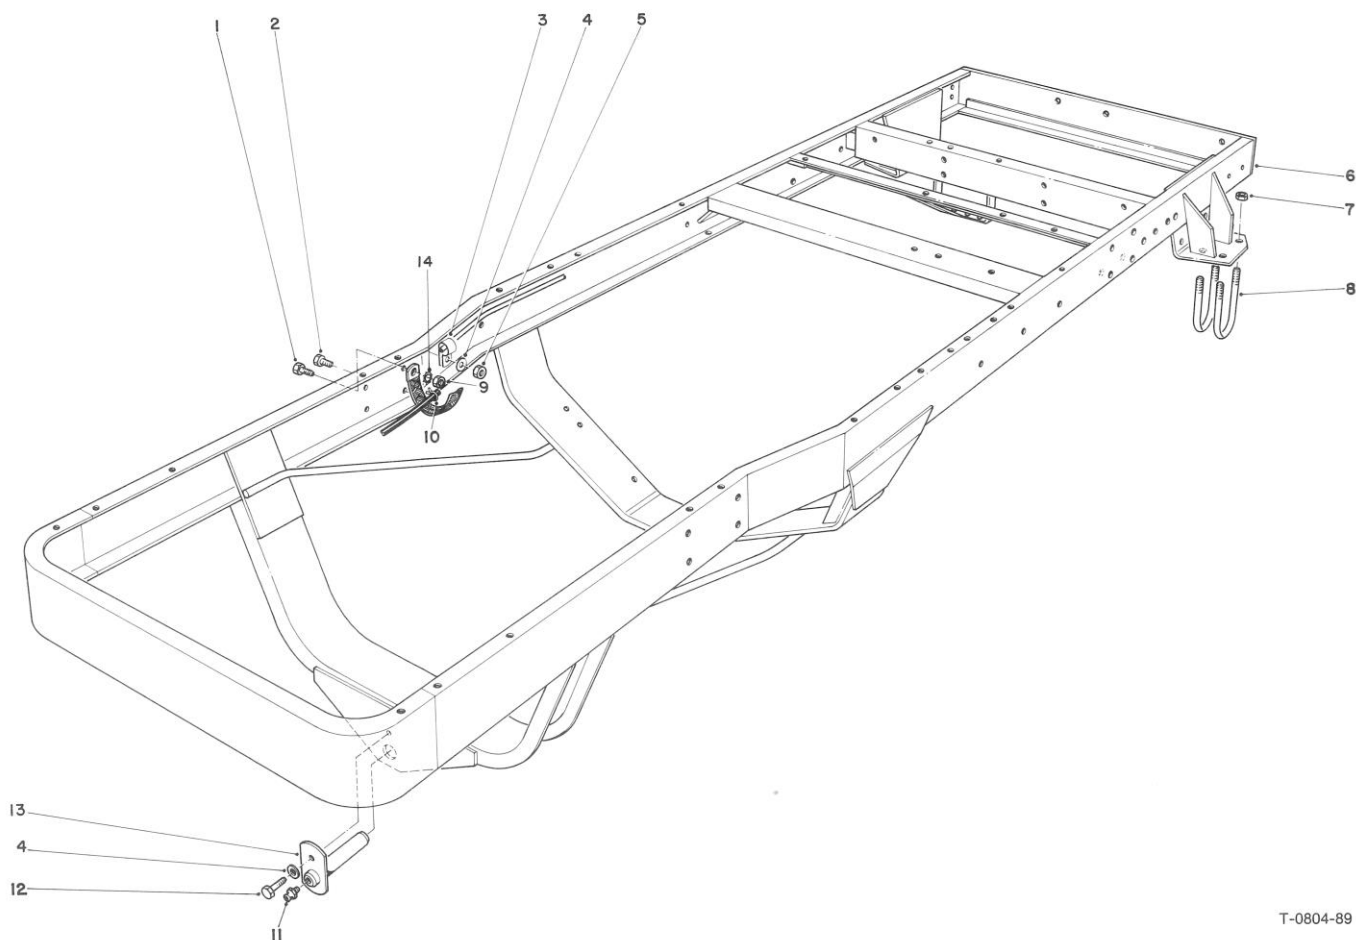 


T-0804-89

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	325-4	Capscrew	1
2	323-7	Capscrew	1
3	18-2970	Clamp	1
4	3256-24	Washer	2
5	32153-2	Locknut	1
6	44-1230	Frame	1
7	3296-51	Locknut	8

Ref. No.	Part No.	Description	No. Used
8	46-6450	U-Bolt	4
9	32153-5	Locknut	1
10	2412-6	Hose Clamp	1
11	302-2	Grease Fitting	1
12	32104-6	Screw	1
13	3-3760	Pivot Pin	1
14	3255-2	Lockwasher Ext. Tooth	1

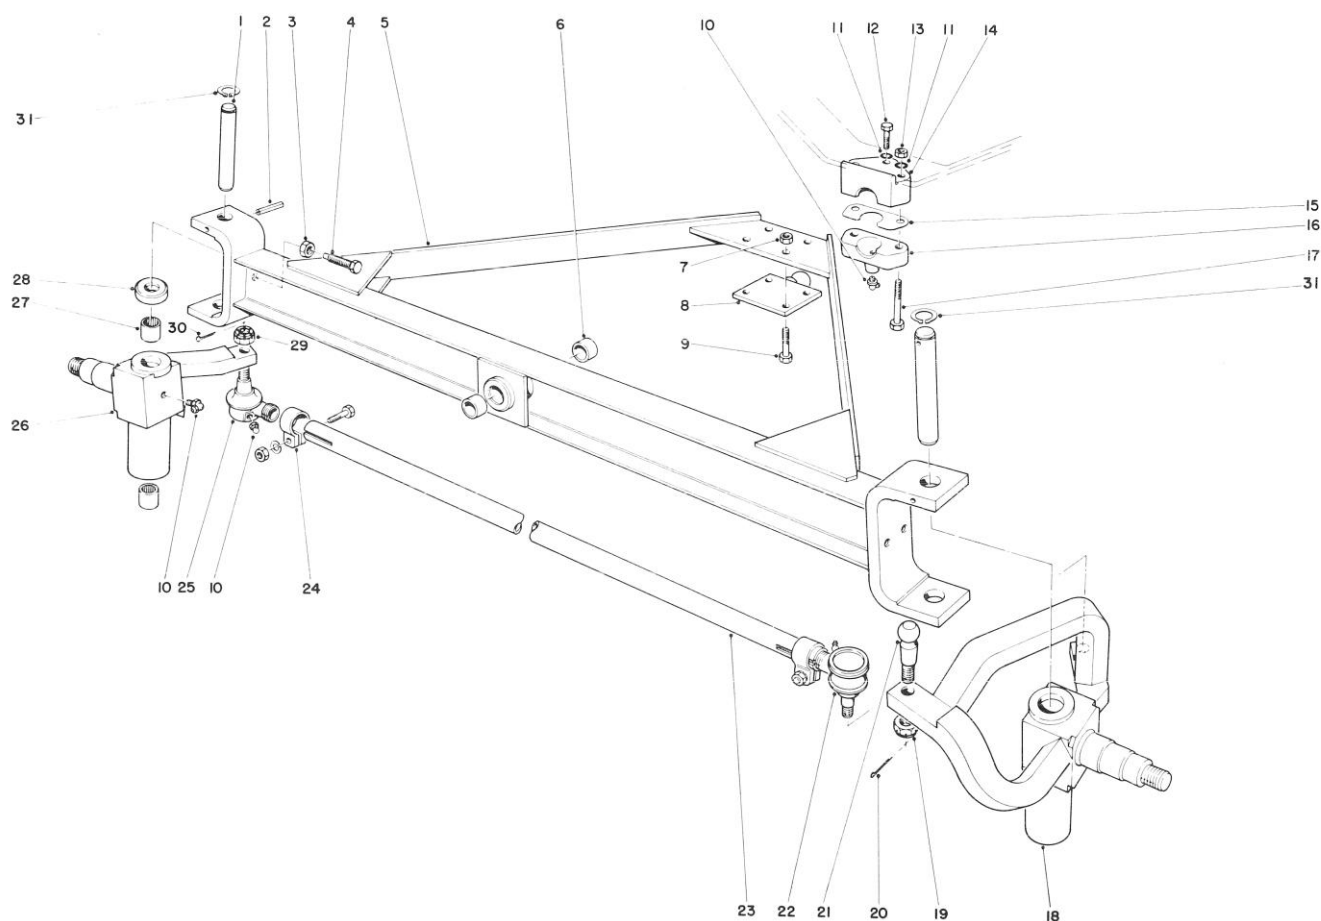 


T-0749-89

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	24-6900	Spindle Pin	2
2	32121-34	Roll Pin	4
3	3218-5	Jam Nut	3
4	32102-14	Set Screw	3
5	26-2320	Front Axle (Incl. Ref. #6)	1
6	256-126	Bushing	2
7	32153-5	Locknut	4
8	12-0360	Pivot Block	1
9	325-7	Capscrew	4
10	302-33	Grease Fitting	5
11	3253-8	Lockwasher	3
12	327-4	Capscrew	1
13	3219-6	Nut	2
14	3-2968	Lower Ball Socket	1
15	3-3825	Shim	A/R
16	3-2967	Upper Ball Socket	1

Ref. No.	Part No.	Description	No. Used
17	3214-13	Capscrew	2
18	23-5300	Spindle L.H.	1
19	32136-3	Slotted Nut	1
20	3272-7	Cotter Pin	1
21	5-2966	Ball Stud	1
22	2116-3	Ball Joint L.H.	1
23	3-3710	Tie Rod Ass'y. (Incl. Ref. #10, 22, 24, 25 & 29)	1
24	2412-7	End Clamp	2
25	2116-4	Ball Joint R.H.	1
26	20-9900	Spindle R.H.	1
27	252-52	Needle Bearing	4
28	251-32	Thrust Bearing	2
29	32136-2	Slotted Nut	2
30	3272-17	Cotter Pin	2
31	32151-36	Retaining Ring	2

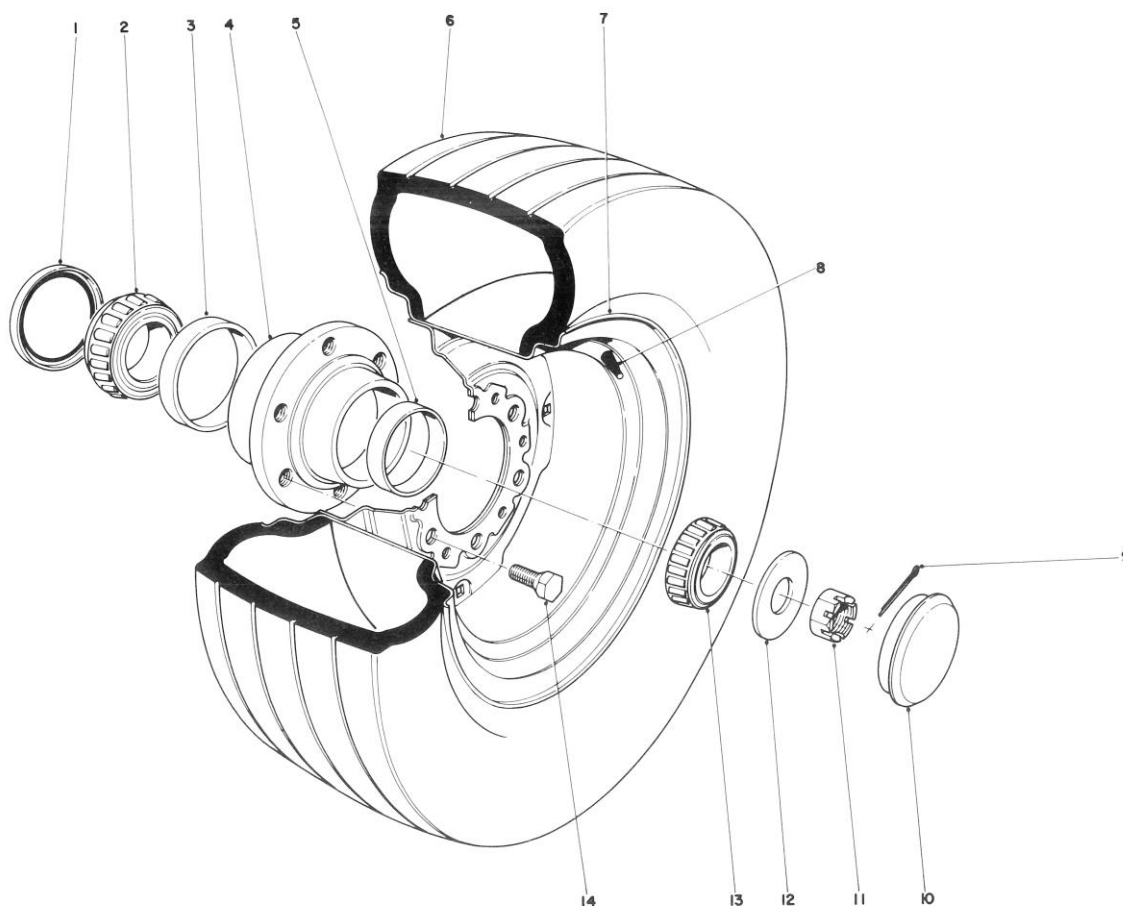 


T-0750-89

FRONT WHEEL AND TIRE 9.5 L-14

Ref. No.	Part No.	Description	No. Used
1	253-100	Grease Seal	2
2	254-75	Inner Bearing Cone	2
3	254-76	Inner Bearing Cup	2
4	217-26	Wheel Hub (Incl. Ref.#3 & 5)	2
5	254-20	Outer Bearing Cup	2
6	56-7950	Tire Tubeless 9.5L-14	2
7	10-0720	Wheel (14")	2

Ref. No.	Part No.	Description	No. Used
8	232-27	Valve Stem	2
9	3272-23	Cotter Pin	2
10	217-33	Hub Cap	2
11	32136-1	Slotted Hex Nut	2
12	3256-9	Washer	2
13	254-42	Outer Bearing Cone	2
14	217-34	Wheel Bolt	12

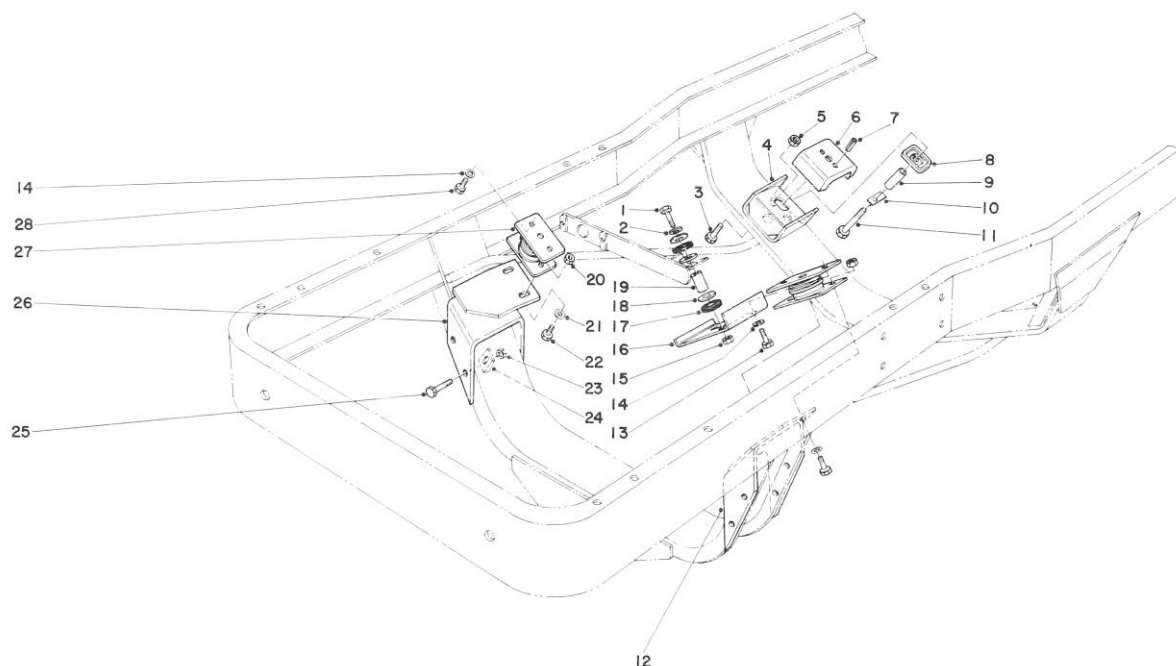 

T-0805-89


ENGINE MOUNTING COMPONENTS

Ref. No.	Part No.	Description	No. Used
1	324-23	Capscrew	1
2	3256-25	Flat Washer	1
3	3213-3	Capscrew	4
4	19-3490	Engine Mount Rear	2
5	32128-15	Flange Nut	4
#6	3705444	Upper Mount	2
7	32121-46	Roll Pin	2
#8	14009321	Lower Mount	2
#9	14009322	Spacer	2
10	46-7480	Lock	2
11	325-14	Capscrew	2
12	19-3340	Front Engine Mount L.H.	1
13	3211-4	Capscrew	2
14	3253-21	Lockwasher	4
15	3296-48	Locknut	1

Ref. No.	Part No.	Description	No. Used
16	19-3540	Plate - Torque Arm	1
17	3-3461	Washer Rubber	2
18	3256-27	Flat Washer	3
19	19-3970	Spacer	1
20	32153-2	Locknut	4
21	3256-24	Flat Washer	4
22	323-6	Capscrew	4
23	32153-5	Locknut	8
24	3290-216	Bevel Washer	8
25	325-6	Capscrew	8
26	19-3300	Front Engine Mount R.H.	1
†27	0550053	Front Engine Mount	2
28	3211-2	Capscrew	2

†Obtain from your local Perkins Dealer

#Obtain from your local GM, Chevrolet Dealer.

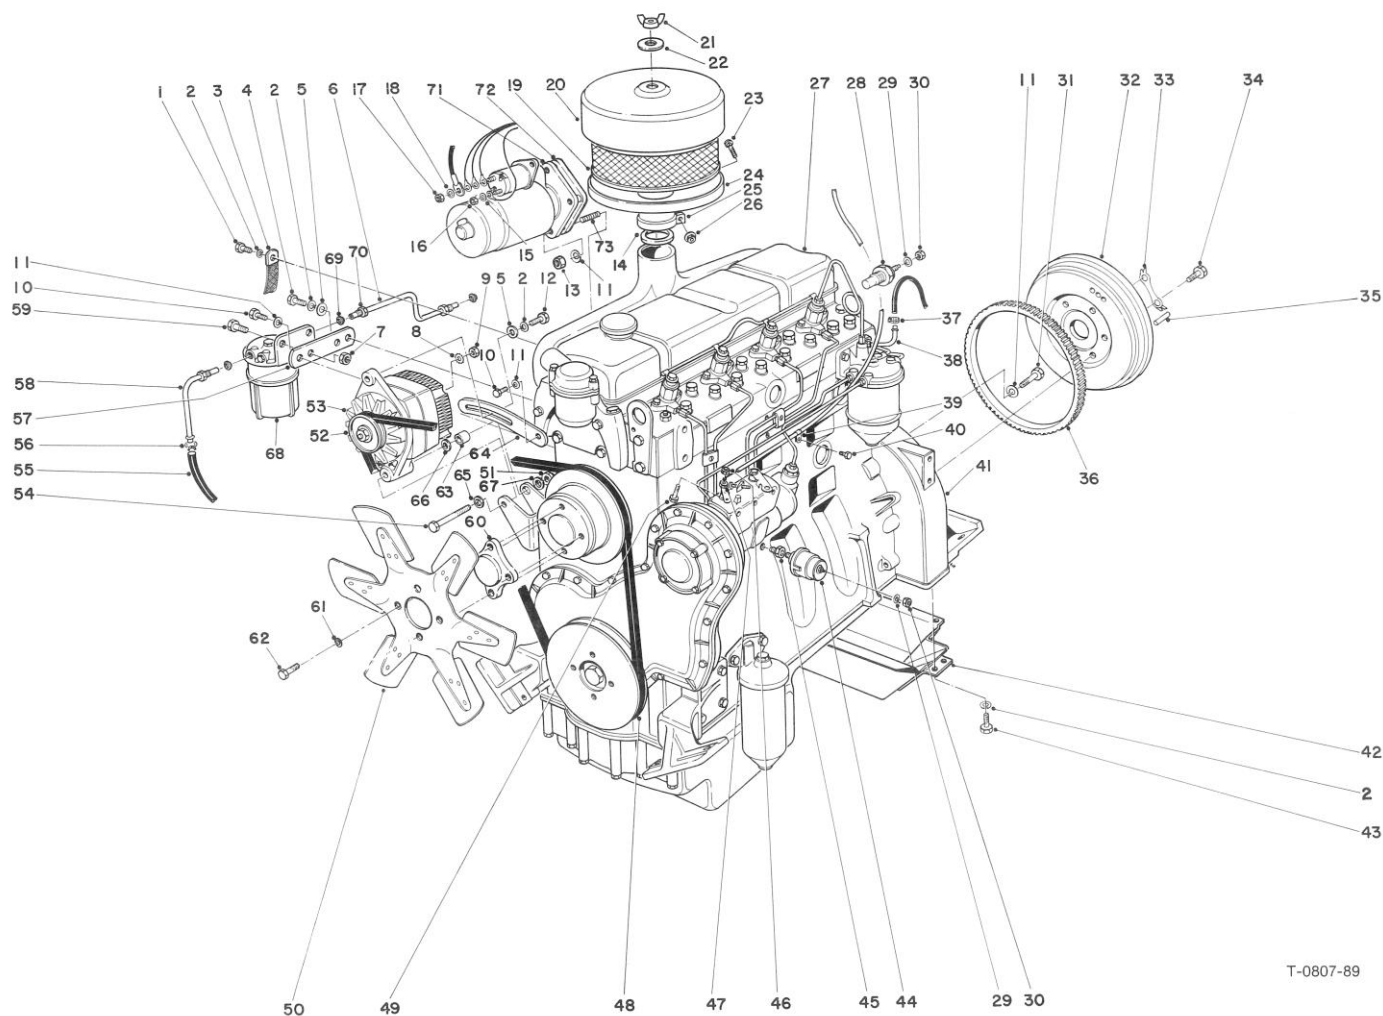 


T-0807-89

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3210-2	Capscrew	1
2	3253-4	Lockwasher	7
3	18-2770	Cable Ground	1
4	3210-3	Capscrew	1
5	3256-23	Flat Washer	2
6	19-3750	Fuel Line	1
7	32153-2	Locknut	2
8	3254-8	Lockwasher	1
9	39-7530	Nut	1
10	3211-2	Capscrew	2
11	3253-21	Lockwasher	11
12	21-0350	Capscrew	1
13	3219-3	Nut	3
14	47-2430	Gasket	1
15	3255-5	Washer	1
16	43-5970	Nut	1
17	21-0360	Hex Nut	1
18	3255-9	Lockwasher	1
19	47-5930	Filter Element	1
20	47-2450	Air Cleaner Cover	1
21	47-2470	Wing Nut	1
22	47-2460	Washer	1
23	3231-25	Carriage Bolt	1

Ref. No.	Part No.	Description	No. Used
24	47-2440	Base Assembly	1
25	47-2400	Clamp Assembly (Incl. Ref. #23 & 26)	1
26	32128-21	Locknut	1
27†		Perkins Engine (Model 4-236)	1
28	38-1680	Sending Unit — Water Temp.	1
29	3255-17	Lockwasher	2
30	3219-14	Nut	2
31	3211-24	Capscrew	6
32†	31222555	Flywheel	1
33†	33117121	Tab Washer — Flywheel	3
34	3213-1	Capscrew	6
35†	0350025	Dowel Pin	2
36†	0410276	Ring Gear	1
37	2412-36	Clamp	1
38	19-3390	Adapter Fuel Bleed Off	1
39	2412-31	Clamp	1
40	32140-32	Screw	1
41	36-5040	Clutch Housing	1
42	39-7480	Cover Flywheel	1
43	322-4	Capscrew	4
44	18-1760	Sending Unit — Oil Pressure	1
45	353-41	Adapter	1

 †Obtain from your local Perkins Dealer.

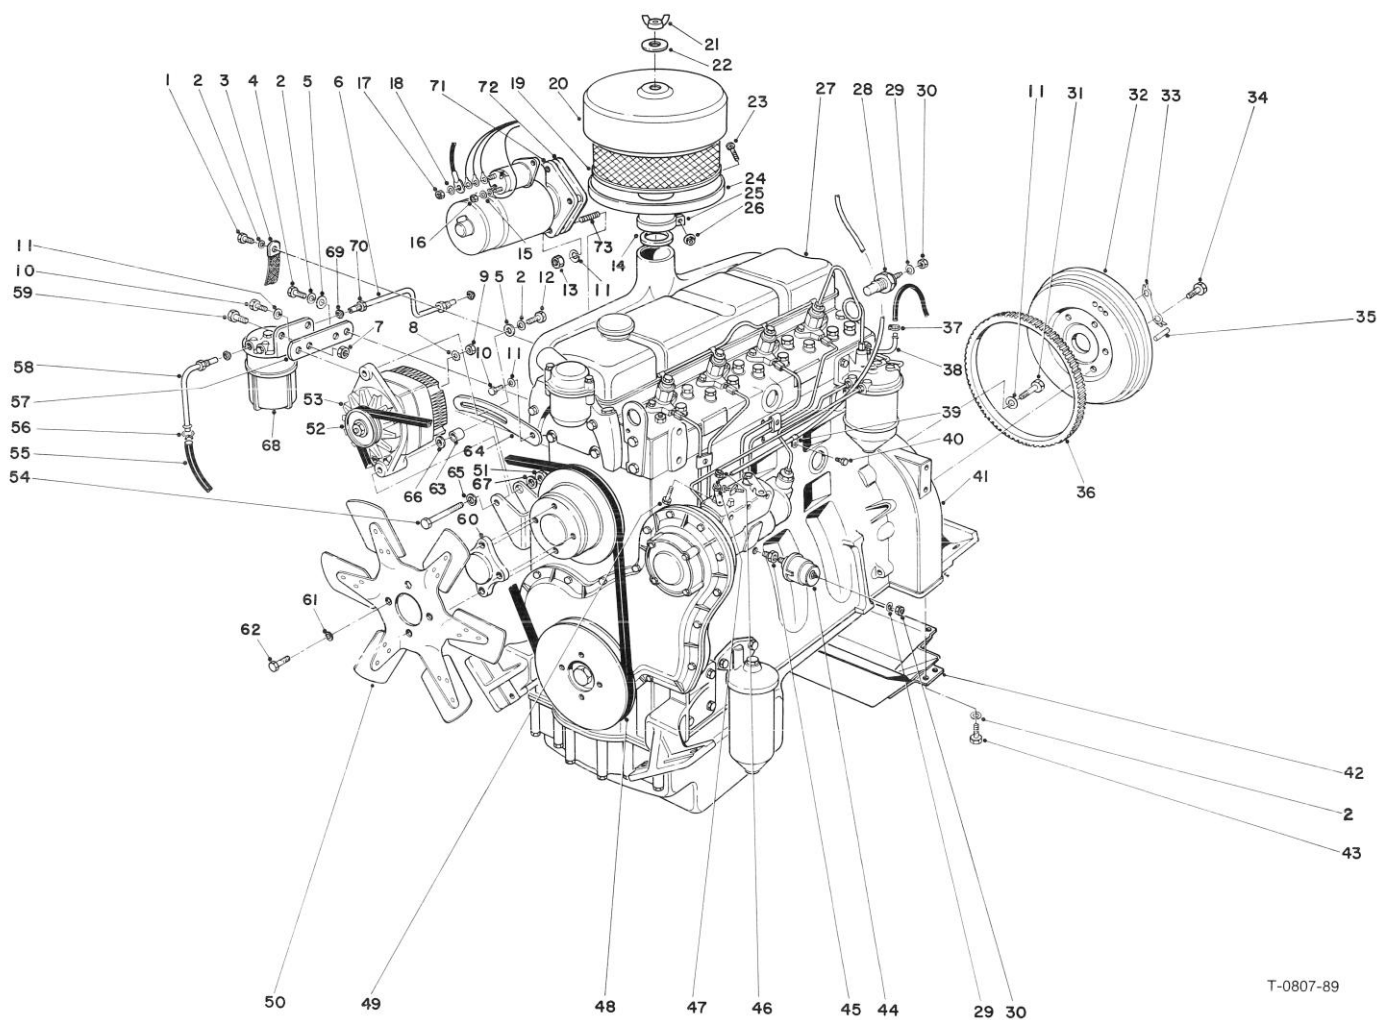


T-0807-89

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
46	3296-12	Locknut	1
47	3217-26	Nut	1
48	19-3480	V-Belt	1
49	3290-134	Machine Screw	1
50	60-9740	Fan	1
51	46-7170	Locknut	1
52	19-3470	Pulley	1
53	18-1600	Fan	1
54	46-7140	Capscrew	1
55	19-3250	Hose — Line to Filter	1
56	2412-6	Hose Clamp	1
57	19-3680	Mount — Water Trap	1
58	19-3740	Tube — Hose to Water Trap	1
59	323-6	Capscrew	2
60	62-6860	Fan Spacer Kit (Incl. Ref. #61 & 62)	1

Ref. No.	Part No.	Description	No. Used
61	3253-24	Lockwasher	4
62	3210-19	Screw	4
63	61-8480	Sleeve	1
64	46-4820	Link, Alternator Adjust.	1
65	46-7100	Sleeve Flange	1
66	46-7110	Washer	1
67	46-7130	Washer	1
68	19-7490	Water Trap	1
69	19-7510	Sleeve Compression	3
70	19-7500	Nut — Union	3
71	49-8050	Starter	1
72	36-9580	Adaptor, Starter	1
73	36-9590	Stud	3
74	60-9660	Alternator	1

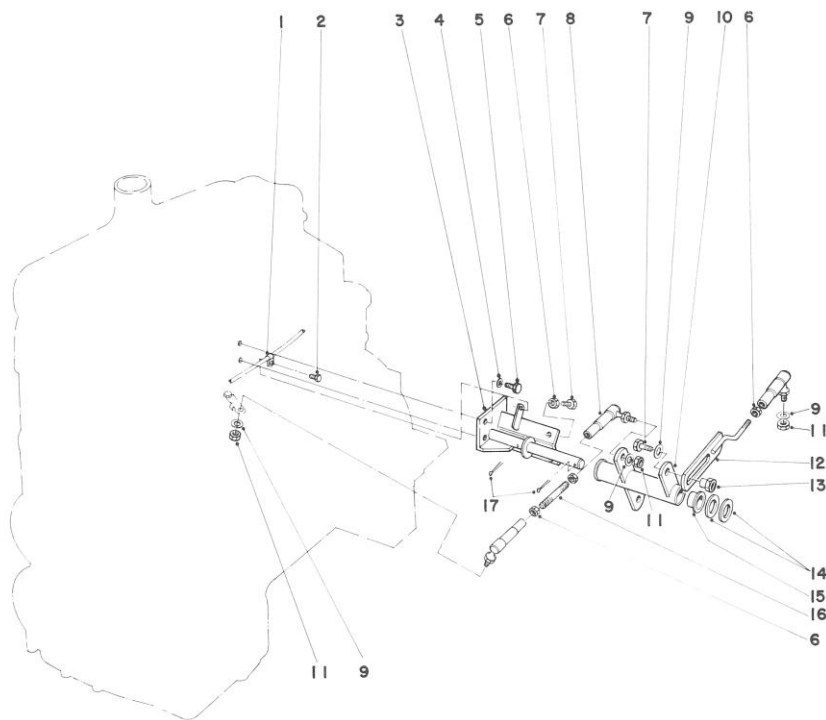 


T-0808-89

PIVOT SHAFT AND ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	2412-31	Support Clamp	1
2	32140-32	Self Tapping Screw	1
3	38-1950	Pivot Shaft	1
4	3253-4	Lockwasher	2
5	3210-3	Capscrew	2
6	3220-1	Jam Nut	5
7	329-4	Capscrew	3
8	18-1720	Ball Joint	3
9	3253-3	Lockwasher	4

Ref. No.	Part No.	Description	No. Used
10	38-1970	Pivot Arm (Incl. Ref. #15)	1
11	3219-1	Nut	3
12	19-3400	Slide - Hand Throttle	1
13	19-3430	Special Nut	1
14	3256-28	Washer	4
15	256-244	Bushing	2
16	19-3850	Rod - Pivot Arm To Inj. Pump	1
17	3272-12	Cotter Pin	2

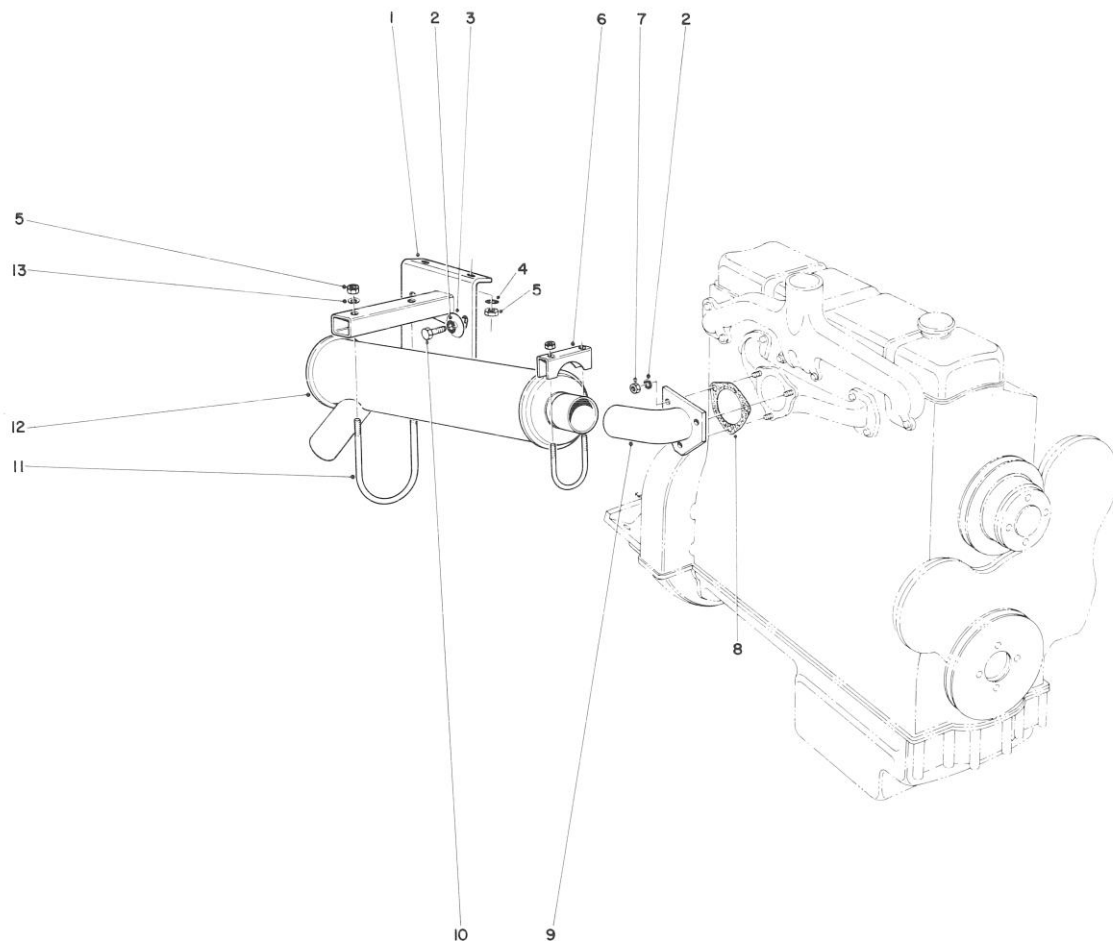 

T-0809-89


ENGINE EXHAUST ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	44-2070	Brake Mounting Plate Assembly	1
2	3253-21	Lockwasher	5
3	3256-24	Washer	1
4	3253-4	Lockwasher	2
5	32153-3	Locknut	4
6	20-4840	Clamp — Muffler	1
7	3219-3	Nut	3

Ref. No.	Part No.	Description	No. Used
8†	36822111	Exhaust Gasket	1
9	19-8510	Exhaust Elbow	1
10	323-5	Capscrew	2
11	19-7440	U-Bolt	1
12	65-4790	Muffler	1
*	37-4250	Spark Arresting Muffler (Optional)	1
13	3256-23	Washer — Plain	2

* Not Illustrated

 † Obtain from your local Perkins Dealer.

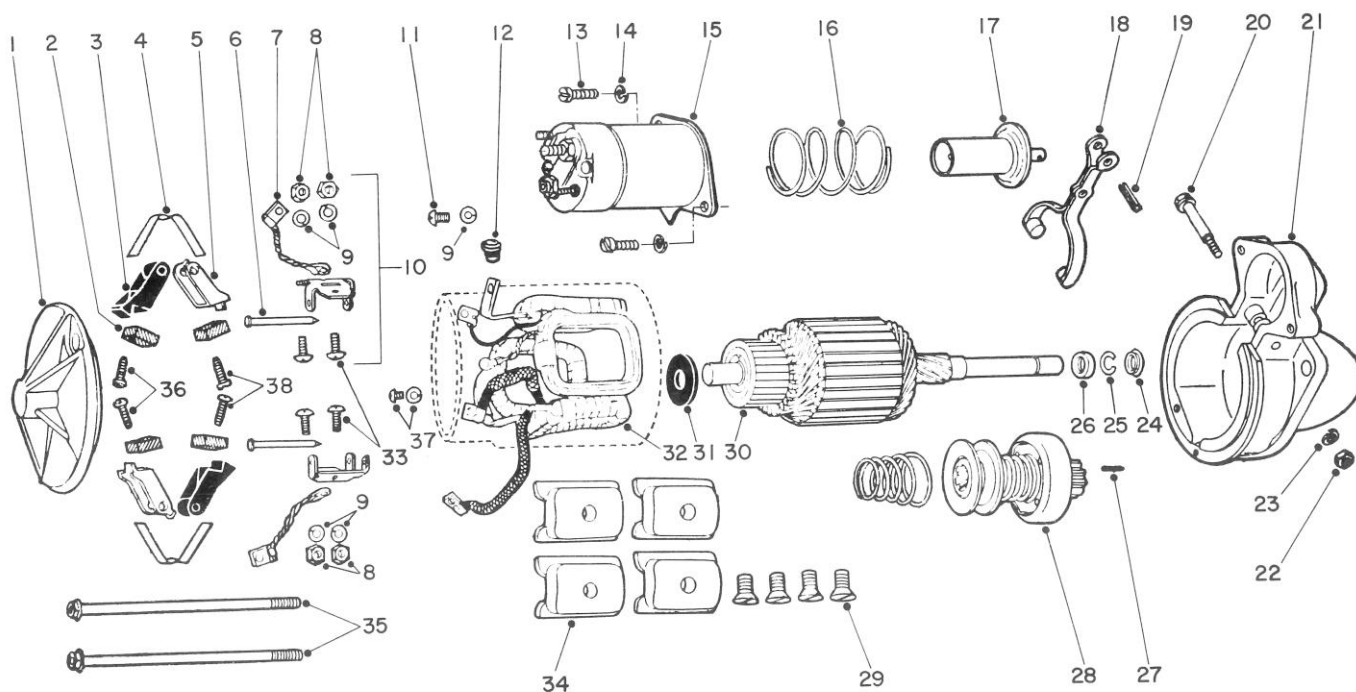

T-0810-89


STARTER MOTOR ASSEMBLY NO. 49-8050

Ref. No.	Part No.	Description	No. Used
1	1986464	Frame (Incl. Ref. #41)	1
2	1852880	Brush	4
3	800091	Holder (Insulated)	2
4	1986019	Spring — Brush	2
5	1876359	Holder (Ground)	2
6	1966923	Pin — Brush Holder	2
7	1876361	Lead (Ground)	2
8	120361	Nut — Support Attaching Screw	4
9	453435	Lockwasher — Support Attaching Screw	4
10	1876458	Support Package Brush Holder	2
11	9427815	Screw — Field Coil to Connector Attachment	1
12	1955946	Grommet — In Field Frame	1
13	132255	Screw — Switch Mounting	2
14	9421423	Lockwasher — Switch Mounting Screw	2
15	1114524	Switch, Solenoid	1
16	1978281	Spring, Plunger Return	1
17	1978297	Plunger	1
18	1951567	Lever, Shift	1
19	1987049	Pin — Plunger Attaching to Shift Lever	1
20	1932197	Stud — Shift Lever	1
21	1986854	Housing — Drive (Incl. Ref. #48)	1
22	1926640	Nut — Shift Lever Stud	1
23	9421424	Lockwasher — Shift Lever Stud	1
24	1964410	Collar, Thrust D.E.	1
25	1928022	Ring — Pinion Stop Retainer D.E.	1
26	1928021	Collar — Pinion Stop D.E.	1
27	1976940	Pin — Dowel — D.E.	1

Ref. No.	Part No.	Description	No. Used
28	1877355	Motor Drive Assembly	1
29	1968396	Screw — Pole Shoe	8
30	1950417	Armature	1
31	1914842	Washer — Brake C.E.	1
32	1986819	Coil Assembly — Field (4 Coils)	1
33	9439734	Screw — Support Attaching	4
34	1887021	Pole Shoe	4
35	1893453	Bolt — Thru	2
36	274875	Screw — Brush Attaching Ground	2
37	9439738	Screw — Connector Attaching to Switch	1
38	1987070	Screw & Lockwasher — Brush Attaching Insulator	2
39*	1972786	Screw & Lockwasher Center Bearing Attachment	4
40*	1876358	Connector — Field	1
41*	1891927	Bushing — C.E.	1
42*	1891928	Wick — C.E.	1
43*	1876361	Lead — Brush Ground	2
44*	1986468	Center Bearing Plate	1
45*	1894023	Bushing — Center Bearing	1
46*	1986470	Washer — Between Center Bearings & Motor Drive	1
47*	1986467	Retainer D.E. Oil Wick	1
48*	1862383	Bushing D.E.	1
49*	1986466	Wick — Oil D.E.	1
50*	1952427	Gasket — Between Solenoid & Lever Housing	1
51*	1978337	Contact — Solenoid Switch	1
*†	49-8050	Starter Motor Complete (Delco-Remy No. 1998336)	1

*Not Illustrated

 †Obtain from your local Toro Distributor. Obtain all other parts from your local Delco-Remy dealer.

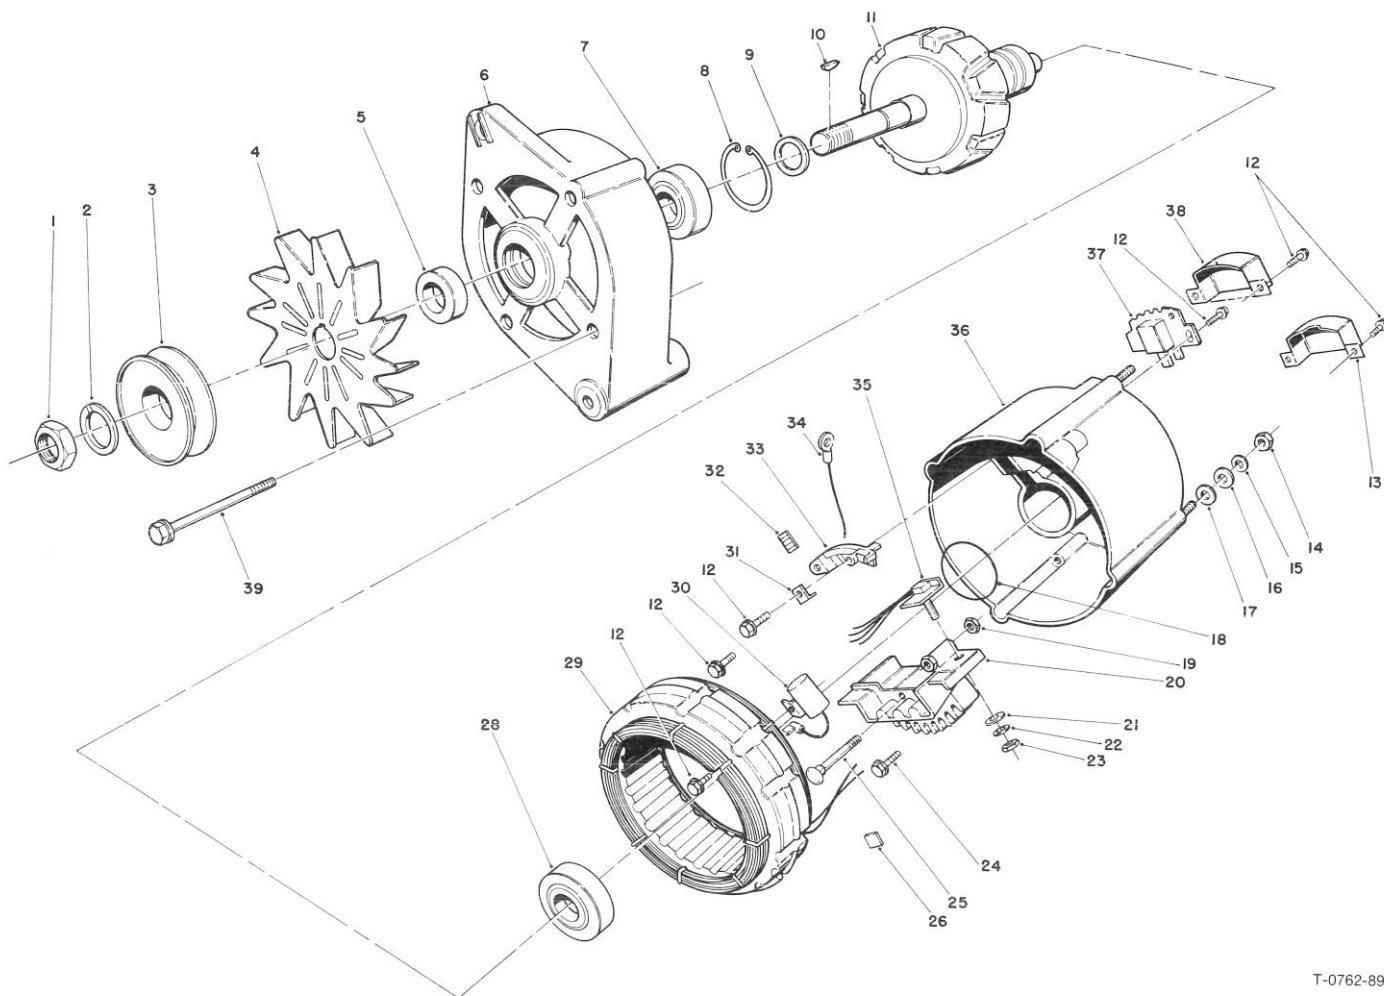


T-0762-89

62 AMP. ALTERNATOR ASSEMBLY NO. 60-9660

Ref. No.	Part No.	Description	No. Used
1	20-136	Nut, Hex 5/8-18	1
2	20-137	Lockwasher 5/8	1
3		Pulley	1
4		Fan	1
5	20-237	Spacer, Fan	1
6	14-218	Housing, Front	1
7	11-21	Bearing, Front	1
8	11-3	Bearing Retainer	1
9	20-244	Spacer, Rotor	1
10		Key, Woodruff	1
11	12-36	Rotor Assembly	1
12	20-102	Screw, Self Tapping	10
13		Cover Assembly	1
14	20-268	Nut, M 6 x 10	1
15	20-261	Washer	1
16	15-54	Washer	1
17	15-67	Washer Insulator	2
18	11-25	Bearing Retainer	1
19	15-52	Insulator, Bridge Mounting	1

Ref. No.	Part No.	Description	No. Used
20	1-200	Rectifier/Diode Bridge	1
21	15-4	Washer	1
22	20-111	Lockwasher	1
23	20-34	Nut 10-24	1
24	20-245	Screw, Self Tapping	2
25	20-318	Bolt, Carriage M 6 x 10	1
26		Insulator	1
28	11-23	Bearing Rear	1
29	13-43	Stator Assembly	1
30	2-44	Capacitor	1
31	20-247	Clamp	1
32	15-65	Terminal, AC	1
33	15-44	Terminal	1
34	16-109	Cable	1
35	1-129	Diode	1
36	14-219	Housing, Rear	1
37	3-35	Brush Assembly	1
38	5-742	Voltage Regulator	1
39	20-248	Bolt 10-32 x 3	

 Note: Order parts from Motorola Center, 1299 East Algonquin Road, Schaumburg, Illinois 60196.
Model No. of Alternator 9DB2LG2B58.

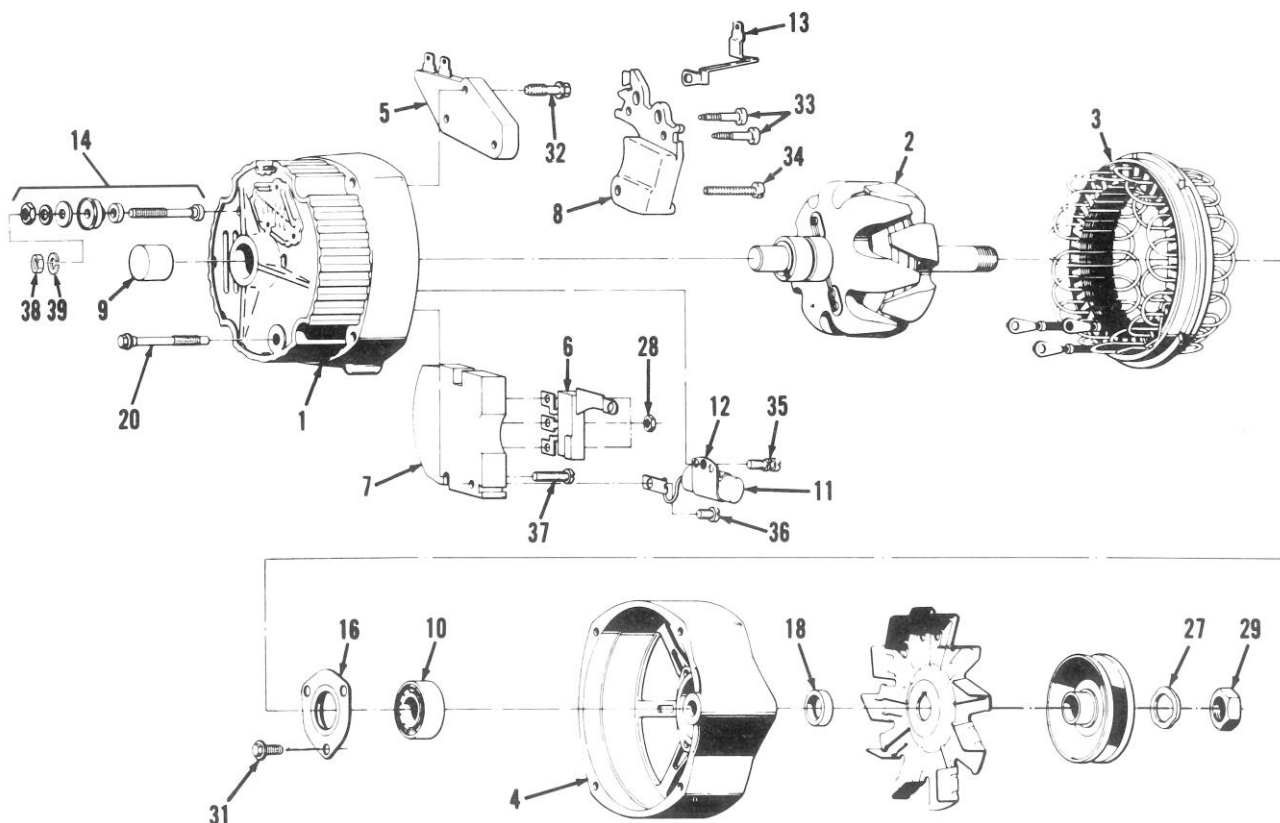

T-0763-89


42 AMP. ALTERNATOR ASSEMBLY NO. 39-7370

Ref. No.	Part No.	Description	No. Used
1	1975718	S.R.E. Frame (Incl. Ref. #9-14)	1
2	1876163	Rotor Assembly	1
3	1894594	Stator Assembly	1
4	1976808	Frame D.E.	1
5	1116392	Regulator	1
6	1971528	Diode Trio	1
7	1891055	Rectifier Bridge	1
8	1894559	Brush Holder & Brush Ass'y.	1
9	1974862	Roller Bearing — S.R.E.	1
10	1974861	Ball Bearing D.E.	1
11	1971411	Capacitor	1
12	1869573	Bracket — Capacitor	1
13	1894568	Terminal — Relay	1
14	1975471	Terminal Package	1
16	1971933	Plate — Ball Bearing Retainer — D.E.	1
18	1976138	Collar — Shaft Outside — D.E.	1
20	1956975	Bolt Thru	4

Ref. No.	Part No.	Description	No. Used
27	1941978	Lockwasher Shaft Nut D.E.	1
28	120622	Nut-Rectifier Bridge	3
29	1915172	Nut-Shaft D.E.	1
31	1965104	Screw-Bearing Retainer	3
32	1894586	Screw & Washer — Brush Holder Attaching (Ground)	1
33	1876681	Screw Assy. — Brush Holder Attaching (Insulated)	2
34	1974020	Screw — Brush Holder Attaching Pivot	1
35	1851612	Screw Capacitor Bracket	1
36	1851612	Screw — Capacitor Lead Attaching	1
37	1876668	Screw & Washer — Rectifier Bridge Attaching	1
#38	39-7530	Nut	1
#39	3254-8	Lockwasher	1
#	39-7370	42 AMP. Alternator Complete	1

*Obtain from local Toro Distributor.

 Obtain all other parts from your local GM, Chevrolet Dealer, or Delco-Remy Dealer.

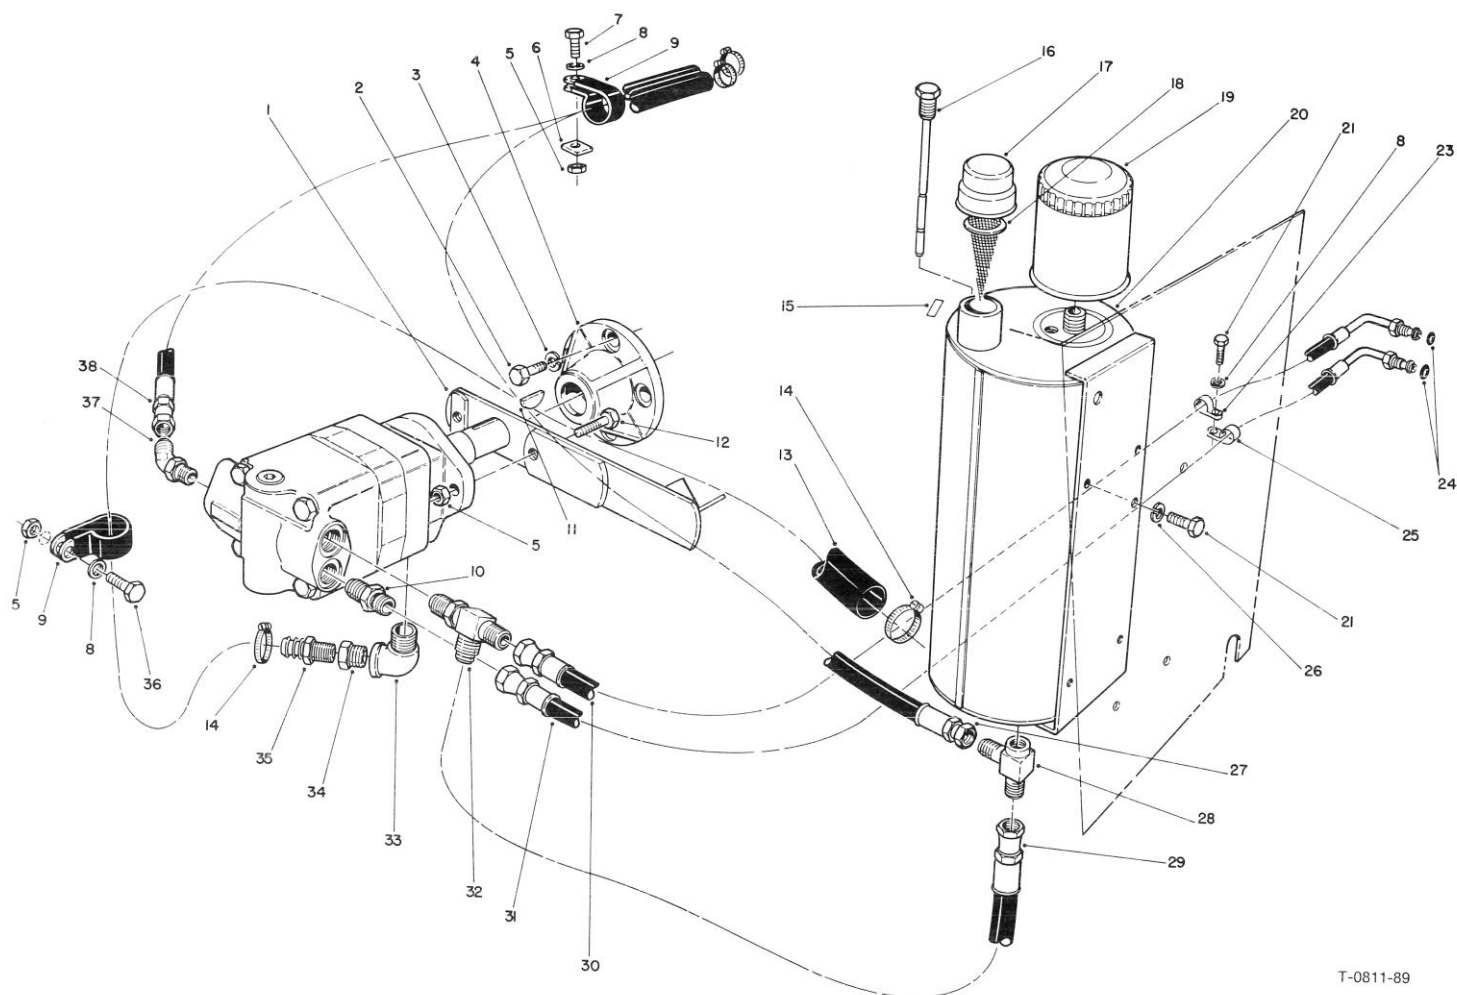


T-0811-89

HYDRAULIC PUMP AND RESERVOIR

Ref. No.	Part No.	Description	No. Used
1	23-2500	Torque Arm	1
2	3212-6	Capscrew	4
3	3253-6	Lockwasher	4
4	19-3910	Hub — Hydraulic Pump	1
5	32153-2	Locknut	3
6	3290-216	Washer — Bevel	1
7	323-4	Capscrew	1
8	3256-24	Flat Washer	3
9	304-61	Clamp	2
10	323-465	Adapter	1
11	3257-36	Key	1
12	323-8	Capscrew	2
13	19-3050	Suction Hose	1
14	2412-3	Hose Clamp	2
15	3-1553	Decal	1
16	18-2980	Dipstick	1
17	353-119	Filler Cap	1
18	2-2197	Filler Screen	1
19	18-4360	Oil Filter (AC No. PF-28)	1
20	18-2250	Hydraulic Reservoir	1
21	32104-6	Screw Self-Tapping	5

Ref. No.	Part No.	Description	No. Used
23	2412-6	Clamp	1
24	39-7310	O-Ring	2
25	2412-41	Clamp	1
26	3253-21	Lockwasher	4
27	19-4010	Hose — Return, Valve to Reservoir	1
28	353-468	Fitting — Tee	1
29	19-4000	Hose — Pump to Reservoir	1
30	65-4800	Hose — Return, Power Steering	1
31	65-4810	Hose — Pressure, Power Steering	1
32	353-466	Fitting — Tee	1
33	2811-5	90° Street Elbow	1
34	2812-9	Reducing Bushing	1
35	3-7195	Coupling	1
36	323-7	Capscrew	1
37	353-437	45° Adapter	1
38	19-3990	Hose — Pressure, Pump to Valve	1

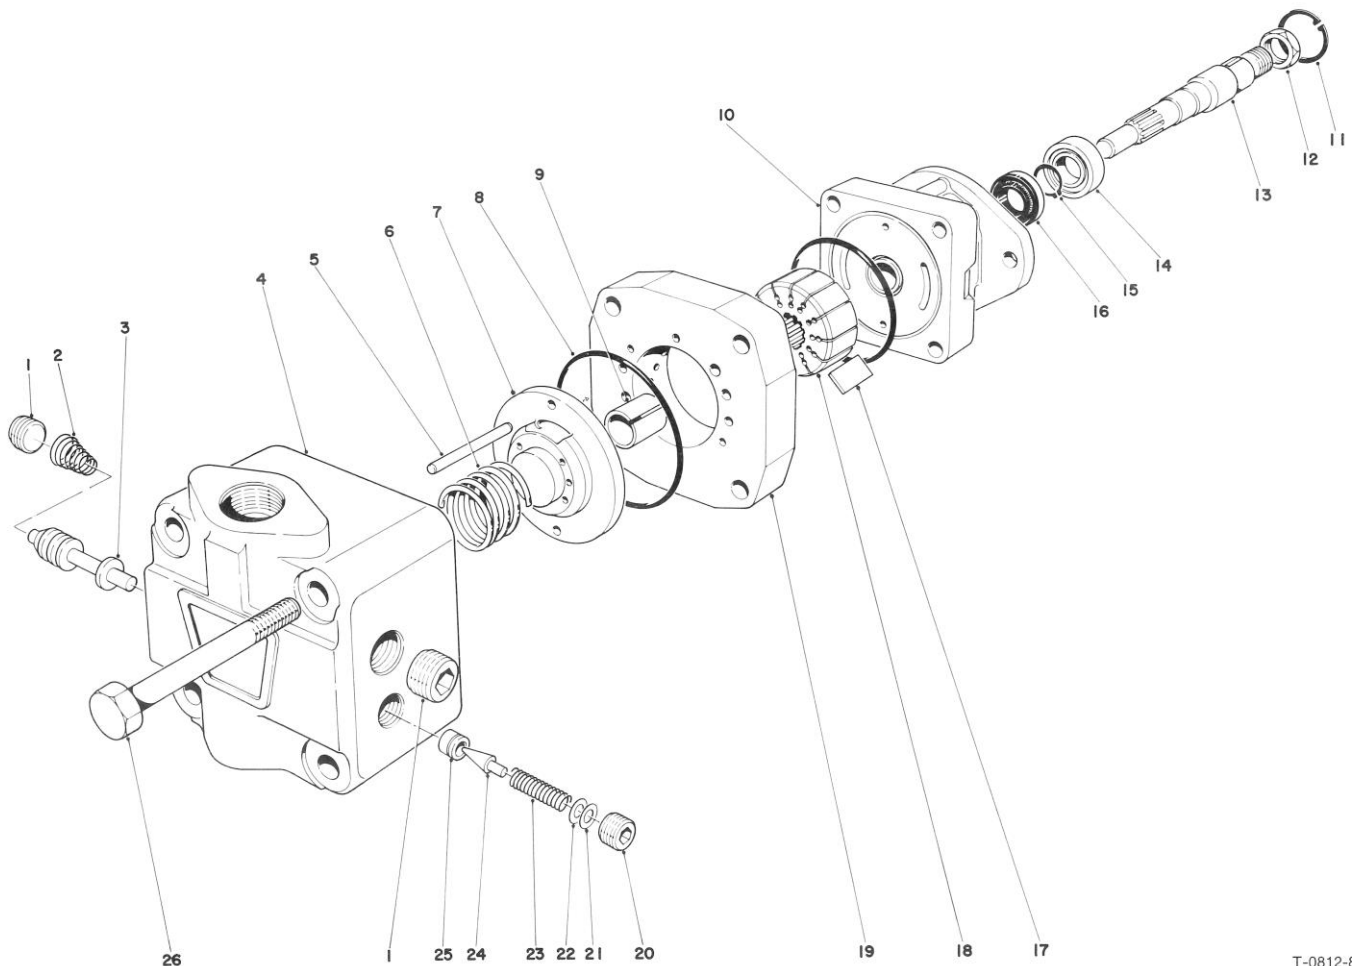 


T-0812-89

HYDRAULIC PUMP ASSEMBLY NO. 38-9630

Ref. No.	Part No.	Description	No. Used
1	38-9640	Plug	2
2	38-9650	Spring	1
3	38-9660	Piston	1
4	38-9670	Cover	1
5	19-4510	Pin	2
6	19-4460	Spring	1
7	19-4470	Pressure Plate (Incl. Ref. #14)	1
8	19-4480	"O" Ring	2
9		Bushing	1
10	19-4520	Body	1
11	32120-11	Snap Ring	1
12	19-4580	Nut	1
13	19-4560	Shaft	1
14	19-4550	Bearing	1
15	19-4540	Snap Ring	1

Ref. No.	Part No.	Description	No. Used
16	19-4530	Seal	1
17		Vane Kit (12 Vanes)	1
18		Rotor	1
19		Ring	1
20	19-4450	Plug	1
21	19-4420	Shim	A/R
22	19-4410	Shim	A/R
23	19-4400	Spring 1250 P.S.I.	1
24	38-9680	Poppet	1
25	19-4440	Seat	1
26	19-4380	Screw	4
*	38-9630	Hydraulic Pump Complete	1
*	19-4610	Cartridge Kit (Incl. Ref. #8 & 17-19)	1
*	19-4620	Seal Kit (Incl. Ref. #8 & 16)	1

 *Not Illustrated

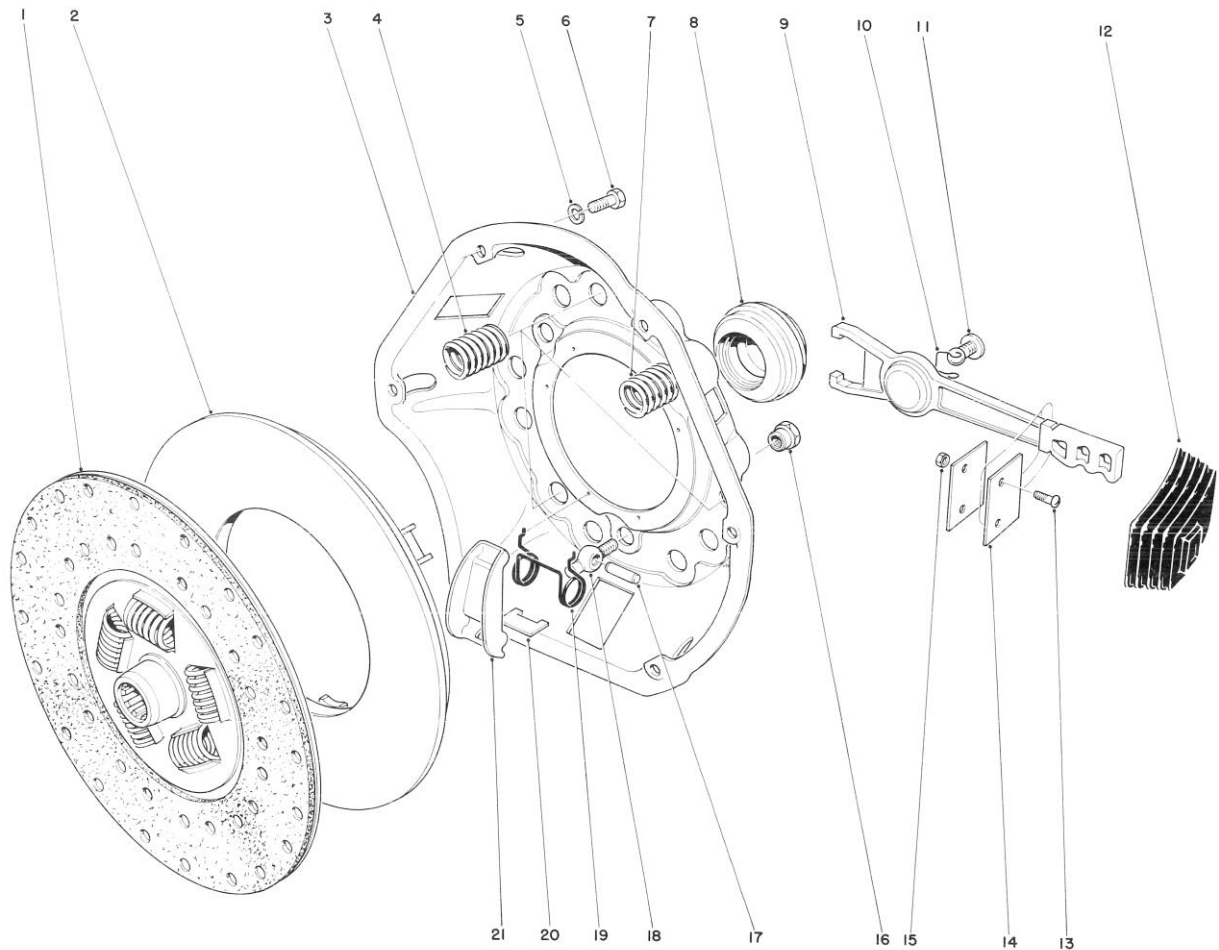

T-0816-89


CLUTCH ASSEMBLY NO. 20-0450

Ref. No.	Part No.	Description	No. Used
1	56-9610	Clutch Plate	1
2	19-3580	Pressure Plate	1
3	19-4650	Cover	1
4	19-4710	Spring (Orange)	6
5	3253-21	Lockwasher	6
6	5-1533	Capscrew	6
7	19-4720	Spring (Yellow)	3
8	39-3810	Clutch Release Bearing	1
9**	3765372	Fork Assy. (Incl. Ref. #10)	1
10**	838987	Ball Retainer Spring	1
11**	3725240	Stud - Clutch Fork Ball	1

Ref. No.	Part No.	Description	No. Used
12**	3765360	Boot	1
13	3251-4	Machine Screw	2
14	19-3600	Cover - Flywheel Housing	2
15	3296-12	Locknut	2
16	19-4660	Nut	3
17	19-4680	Pin	3
18	19-4670	Stud	3
19	19-4640	Release Finger Spring	3
20	19-4690	Lift Strut	3
21	19-4630	Release Finger	3
*	20-0450	Clutch Assembly Complete (Incl. Ref. #1-4, 7 & 16-21)	1

*Not Illustrated

 **Obtain from your local GM Chevrolet Dealer.

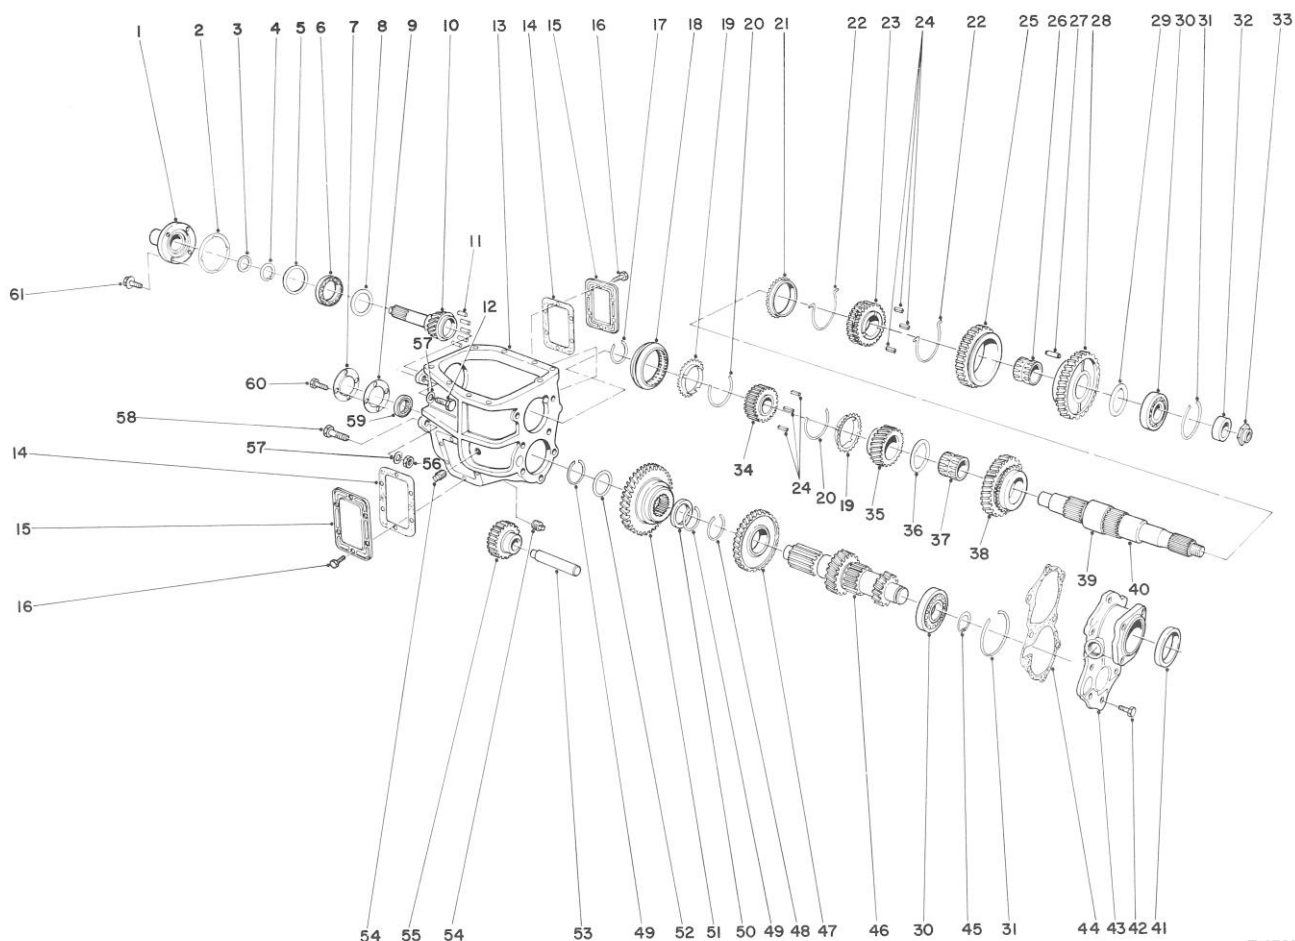


T-0769-89

TRANSMISSION ASSEMBLY NO. 44-1160

Ref. No.	Part No.	Description	No. Used
1	3901178	Retainer Assembly	1
2	3930800	Gasket	1
3	3987937	Seal	1
4	3901152	Ring — Retaining	1
5	3866655	Ring	1
6	907993	Bearing	1
7	3866347	Cap	1
8	3901177	Slinger	1
9	3866348	Gasket	1
10	15588219	Gear — Clutch	1
11	9422666	Bearing — Roller	17
12†	325-6	Capscrew	2
13	465453	Case and Plug Assembly	1
14	6273214	Gasket — Power Take Off	2
15	6273213	Cover — Power Take Off	2
16	15595893	Bolt — Power Take Off Cover	12
17	3901166	Ring	2
18	3901165	Clutch	1
19	3993036	Cone — Gear	2
20	3866359	Spring	2
21	3950367	Cone	1
22	3866646	Spring	2
23	3946776	Hub	1

Ref. No.	Part No.	Description	No. Used
24	3866358	Key	6
25	3901170	Gear — Reverse	1
26	465455	Bushing	1
27	456587	Pin	2
28	476766	Gear	1
29	465450	Thrust Washer	1
30	907474	Bearing	2
31	3830051	Ring	2
32	3866742	Gear	1
33	3830575	Nut Assembly	1
34	3901164	Hub	1
35	3901161	Gear 3rd Speed	1
36	3932267	Washer	1
37	3932274	Bushing	1
38	3901158	Gear 2nd Speed	1
39	3932253	Bushing	1
40	3932265	Shaft	1
41	15595878	Seal	1
42	3911926	Bolt	8
43	15592354	Retainer Assembly	1
44	3930800	Gasket	1
45	3830051	Ring	2
46	14053671	Gear — Counter	1

 †Obtain from your local Toro Dealer. Obtain all other parts from your local GM, Chevrolet Dealer.

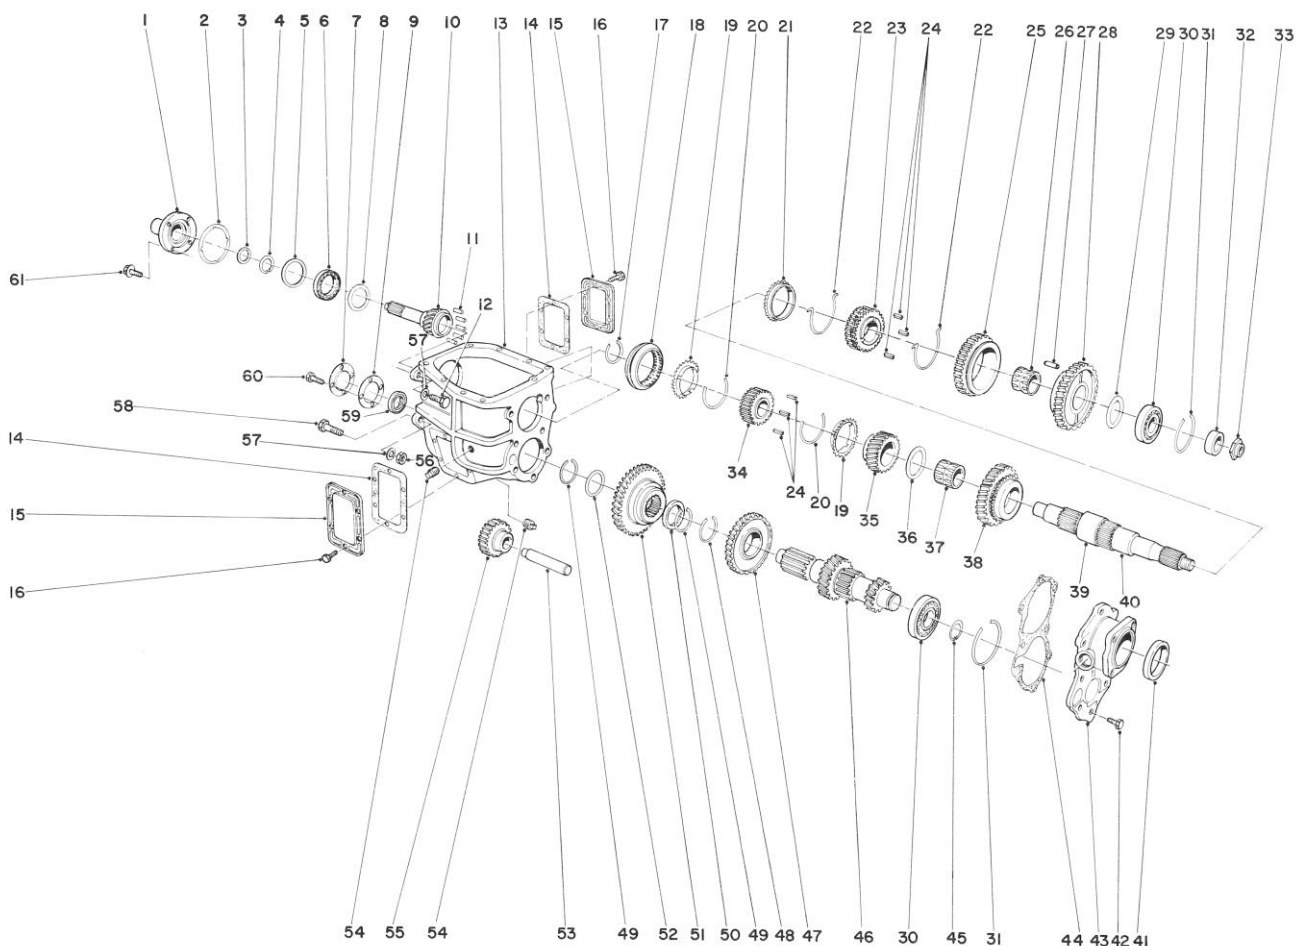

T-0769-89


TRANSMISSION ASSEMBLY NO. 44-1160 (Continued)

Ref. No.	Part No.	Description	No. Used
47	3968038	Gear 3rd	1
48	3866346	Ring	1
49	3920703	Ring	2
50	14020811	Spacer	1
51	3955570	Gear	1
52	3901153	Thrust Washer	1
53	3901144	Shaft — Reverse Idler	1
54	444746	Plug	2
*	444744	Plug (Optional For Item #54)	2

Ref. No.	Part No.	Description	No. Used
55	3901141	Gear Assembly — Reverse Idler	1
56†	3217-9	Nut	2
57†	3253-7	Lockwasher	4
58†	325-8	Screw — Cap, Hex. Hd.	2
59	7451785	Bearing	1
60	435141	Screw	4
61	3920784	Screw & Washer	4

*Not Illustrated

 24 †Obtain from your local Toro Dealer. Obtain all other parts from your local GM, Chevrolet Dealer.

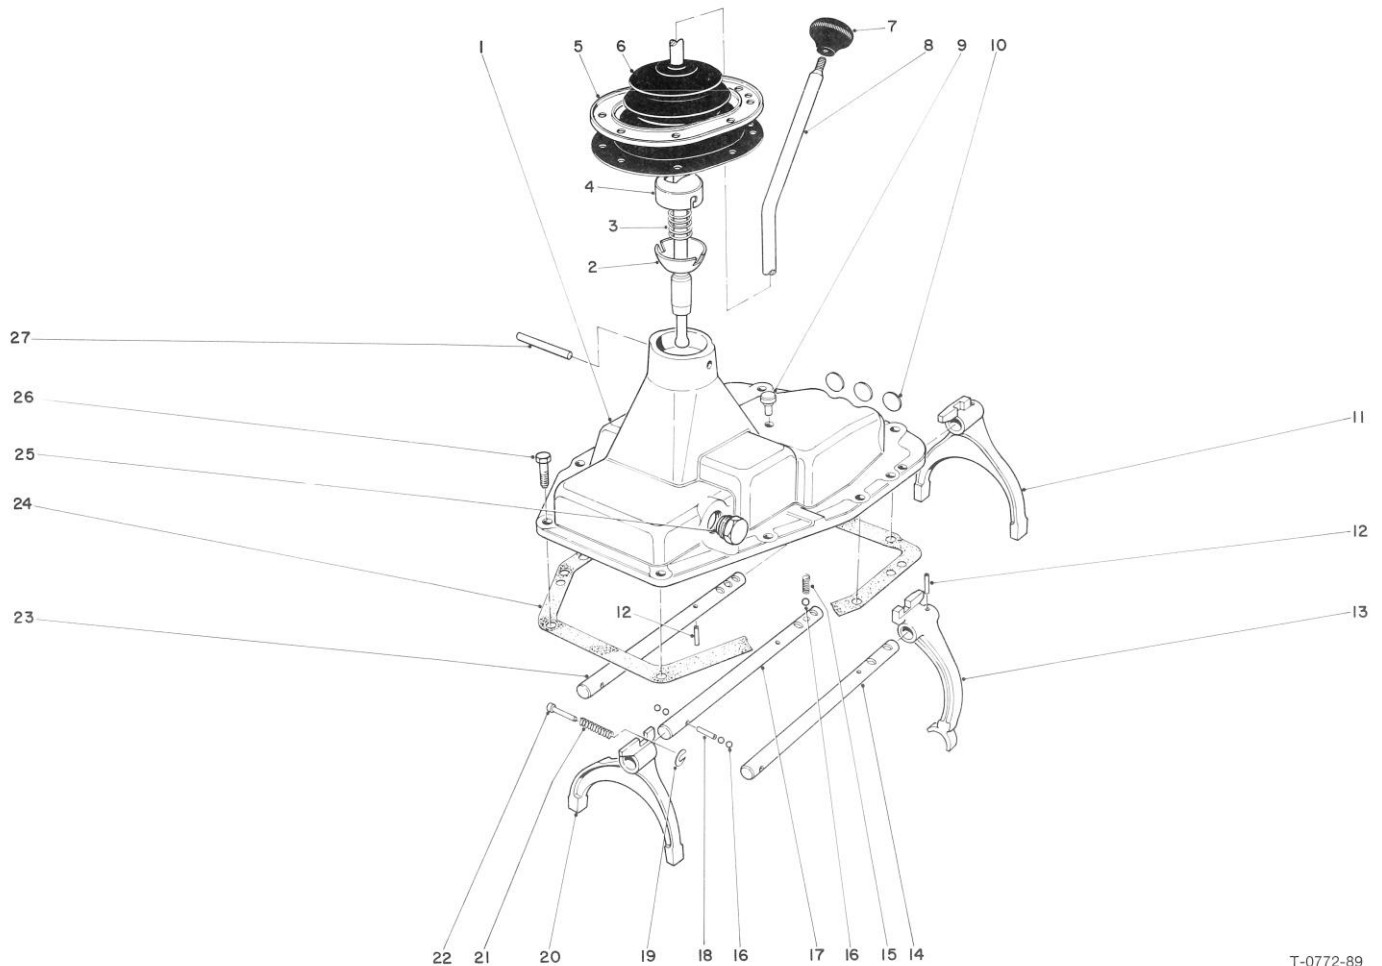


T-0772-89

TRANSMISSION COVER

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3952668	Cover	1	15	551946	Spring	3
2†	36-9340	Cup Transmission Control	1	16	453593	Ball	7
3†	36-9330	Spring Transmission Control	1	17	15592256	Shaft 3rd & 4th	1
4†	36-9350	Cap Transmission Control	1	18	3901139	Pin	1
5	378351	Retainer — Transmission	1	19	3727182	Retainer — Rev. Shaft	1
6	378340	Boot Transmission	1	20	3901138	Fork 3rd & 4th	1
7†	233-10	Knob Gear Shift Lever	1	21	3978731	Spring	1
8†	36-9710	Lever Transmission Control	1	22	3864968	Plunger	1
9	8640496	Ventilator Assembly	1	23	15592255	Shaft 1st & 2nd	1
10	103894	Plug	3	24	15594369	Gasket Transmission Cover	1
11	3901137	Fork 1st & 2nd	1	25†	36-9430	Plug — Transmission	1
12	273503	Pin	3	26	3911926	Screw	8
13	3978730	Fork Rev.	1	27	456587	Pin	2
14	15592254	Shaft Rev.	1				

 †Order from Toro. Obtain all other parts from your local GM, Chevrolet Dealer.

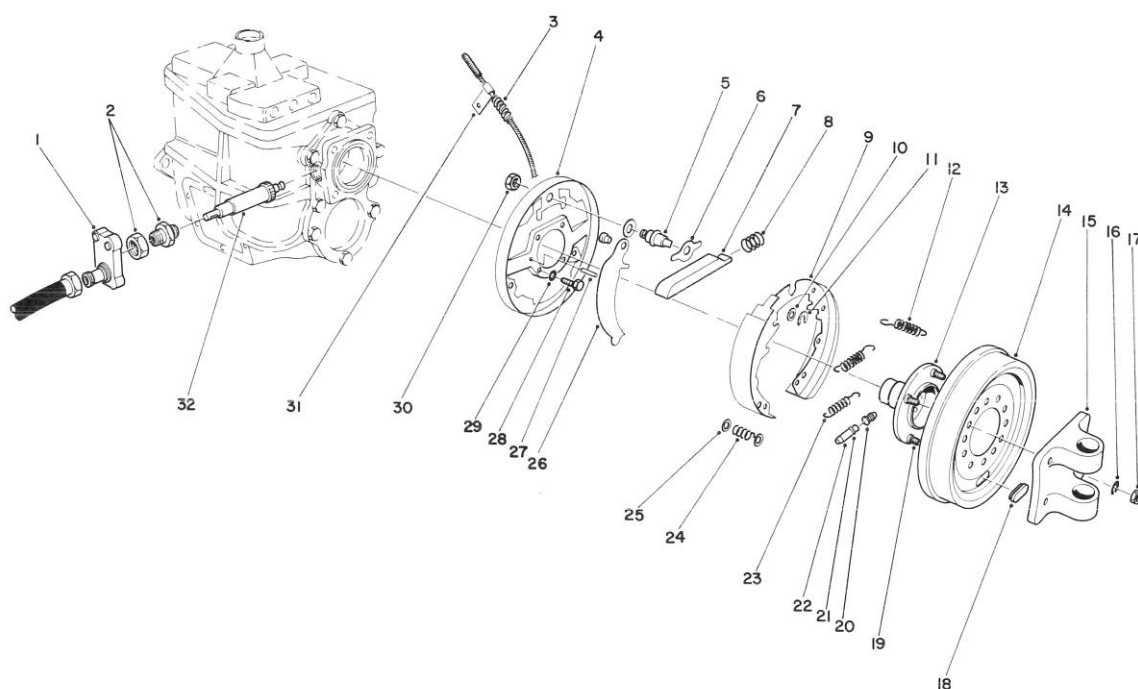


T-0773-89

PARKING BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
†1	36-9290	Adapter — Gear Reducer Assembly	1
†2	40-9330	Sleeve Assembly	1
3	14067109	Cable Assembly — Transmission Parking Brake	1
4	364690	Backing Plate	1
5	14009982	Pin — Anchor	1
6	18002428	Plate Transmission	1
7	364694	Strut	1
8	1312281	Spring Strut	1
9	15638245	Shoe & Lining	2
10	5454797	Washer — Shoe Lever	1
11	9413523	Clip Lever	1
12	3694822	Spring Shoe Pull Back	2
13	3866674	Flange Assembly	1
14	368009	Drum Assembly	1
†15	44-1150	Flange Yoke	1
†16	3253-21	Lockwasher	4
†17	32152-8	Nut — Lock	4
18	475516	Cover — Brake Shoe Adjustment Hole	1

Ref. No.	Part No.	Description	No. Used
19	3866676	Bolt	4
20	357888	Socket — Shoe Adjustment	1
21	357897	Nut — Shoe Adjustment Pivot	1
22	364692	Screw & Nut Assembly — Shoe Adjustment (Incl. Ref. #20-21)	1
23	3707417	Spring — Shoe Adjustment Screw	1
24	18002399	Spring, Shoe Hold Pin Primary	2
25	5461146	Washer, Shoe Hold Pin Primary	2
26	3866669	Lever	1
27	443770	Pin	1
28	336973	Bolt	4
29	120382	Lockwasher	4
30	3760300	Nut — Transmission	1
31	3866754	Clamp	1
32	3866917	Speedometer Driven Gear	1

 †Obtain from your local Toro Dealer. Obtain all other parts from your local GM, Chevrolet Dealer.

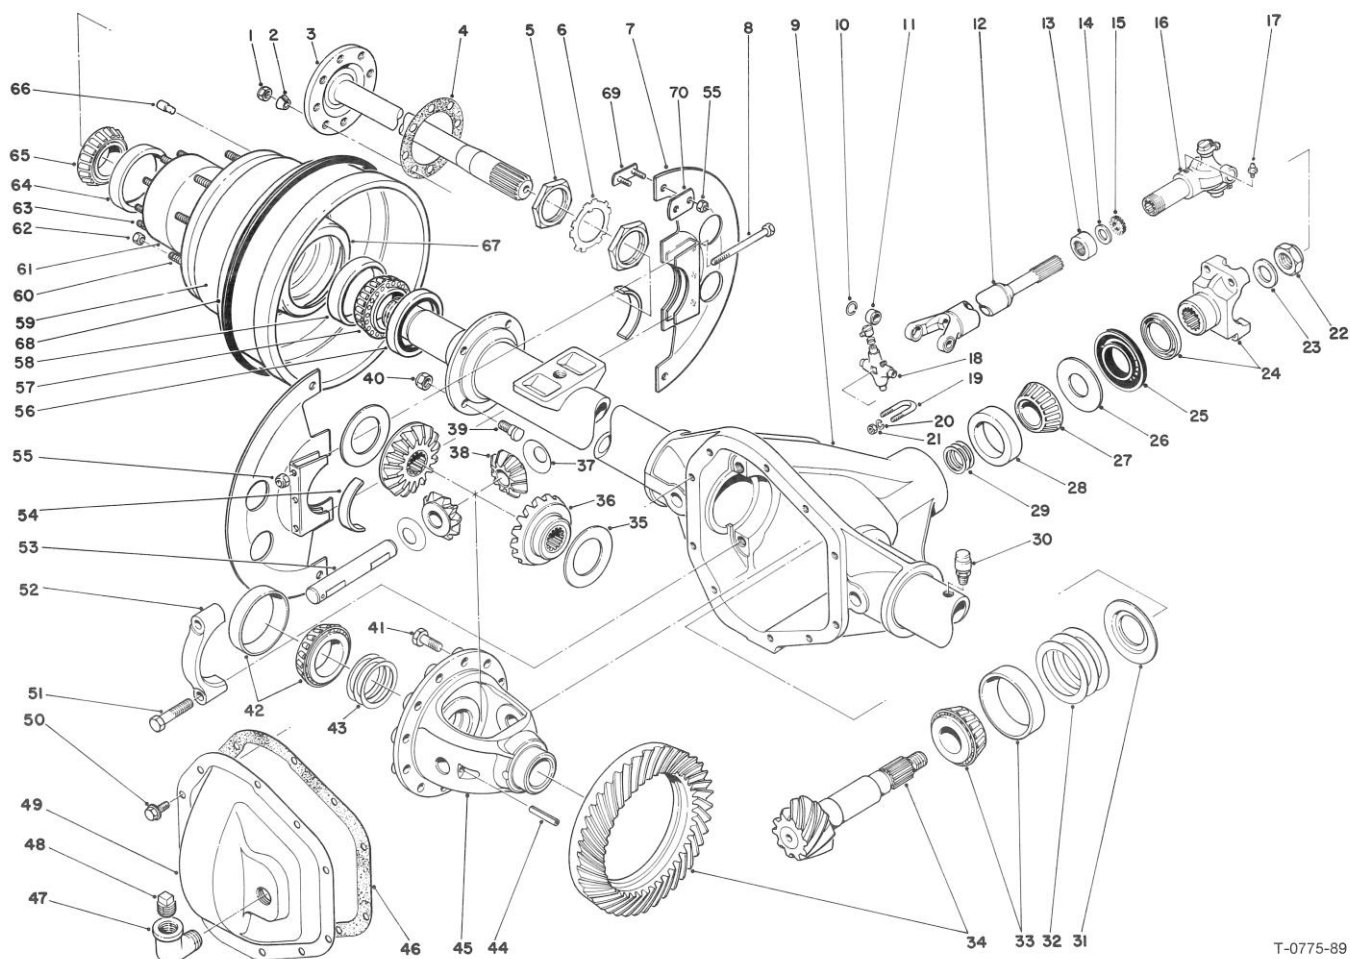


T-0775-89

REAR AXLE (36-9830) AND DRIVE LINE (44-1430)

Ref. No.	Part No.	Description	No. Used
1	3296-7	Locknut	16
2	19-6810	Stud Adapter	16
3	37-8640	Shaft Axle	2
4	24-8660	Gasket Drive Flange	2
5	19-6820	Nut Spindle	4
6	19-6840	Lock — Spindle Nut	2
7	57-6060	Grass Shield	4
8	321-36	Capscrew	4
9		Case Differential Assembly	1
10	18-4650	Retaining Ring	6
11		Bearing Assembly	8
12	44-1440	Shaft Assembly	1
13	18-4730	Retainer Cap	1
14	18-4710	Washer	1
15	18-4700	Felt Dust Seal	1
16	18-4680	Slip Yoke	1
17	18-4690	Grease Fitting	1
18	18-8700	Cross Journal	1
		(Incl. Ref. #10 & 11)	2
19	214-229	U-Bolt	2
20	3253-21	Lockwasher	4
21	32152-8	Nut	4
22	18-9360	Nut Pinion	1

Ref. No.	Part No.	Description	No. Used
23	18-9370	Washer Pinion Nut	1
24	19-6700	End Yoke Assembly	1
25	18-9390	Seal Pinion	1
26		Slinger — Pinion Bearing	1
27	18-9410	Bearing Cone	1
28	18-9420	Bearing Cup	1
29	37-8560	Pinion Bearing Shim Kit	1
30	37-7570	Vent	1
31		Baffle — Pinion Bearing	1
32	37-8550	Drive Pinion Adj. Shim Kit	1
33	37-8540	Inner Pinion Bearing Kit	1
34	37-8530	Gear, Pinion & Nut Assembly Hypoid Drive	1
35		Thrust Washer Gear	2
36		Gear Differential	2
37		Thrust Washer Pinion	2
38		Pinion Gear	2
39	19-6830	Brake Flange Bolt	8
40	3296-19	Locknut	8
41	18-9340	Bolt — Drive Gear	12
42	37-8610	Differential Bearing Kit	2
43	37-8590	Differential Bearing Shim Kit	2
44	19-6630	Lock — Differential	1

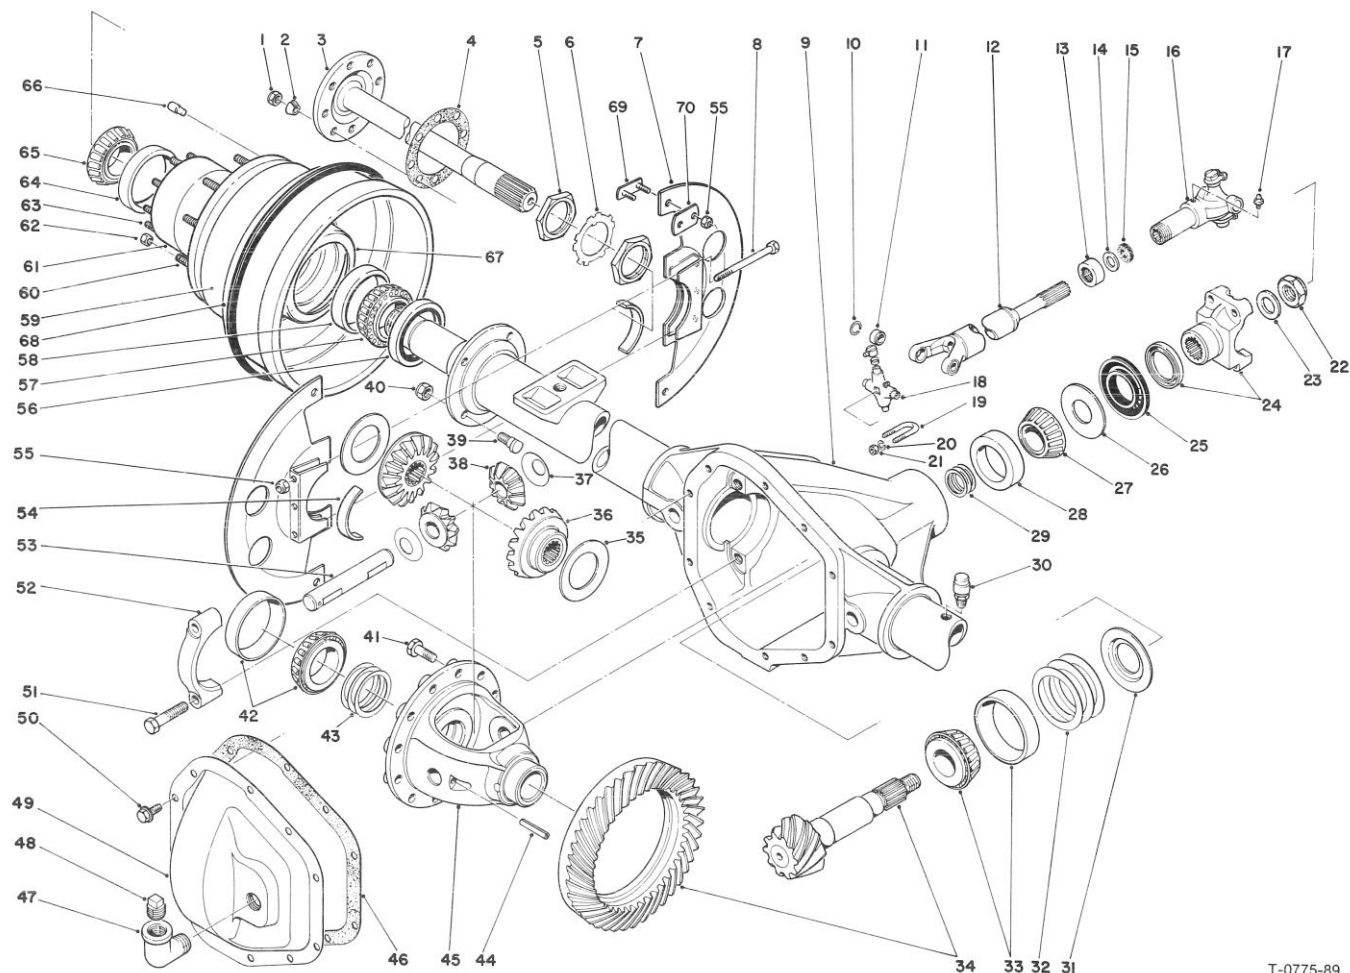 


T-0775-89

REAR AXLE (36-9830) AND DRIVE LINE (44-1430) (Continued)

Ref. No.	Part No.	Description	No. Used
45		Case Differential	1
46	37-8580	Gasket Carrier Cover	1
47	2811-9	Street Elbow	1
48	281-3	Pipe Plug	1
49		Gear Carrier Cover	1
50	18-9200	Bolt Carrier Cover	10
51	325-9	Differential Bearing Cup Bolt	4
52		Cup Differential Bearing	2
53		Shaft Differential	1
54	38-2100	Shim	A/R
55	32153-4	Locknut	12
56	253-128	Oil Seal	2
57	254-98	Bearing Cone	2
58	254-100	Bearing Cup	2
59	37-8490	Wheel Drum (Incl. Ref. #58, 63, 65 & 66)	2
60	242-67	Wheel Bolt	16
61	37-8500	Wheel Hub	2
62	242-69	Wheel Nut	16
63	242-68	Flange Stud	16
64	254-99	Bearing Cup	2
65	254-101	Bearing Cone	2

Ref. No.	Part No.	Description	No. Used
66	44-1490	Pin — Locating	2
67	54-7670	Slinger	2
68	57-6110	Seal-V-Ring	2
69	57-6100	Clamp U	4
70	57-6070	Strap-U-Clamp	4
*	37-8520	Gear & Pinion Drive Assy. Kit (Incl. Ref. #22-23, 25-29, 31-34, 41, 43 & 46)	1
*	37-8600	Differential Case Assy. Kit (Incl. Ref. #35-38, 41-42, 44-46 & 53)	1
*	37-8620	Differential Parts Kit (Incl. Ref. #35-38, 41, 44, 46 & 53)	1
*	37-8630	Carrier Cover Assembly (Incl. Ref. #48 & 49)	1
*	36-9830	Rear Axle (Incl. Ref. #9, 22-38 & 41-53)	1
*	44-1430	Drive Line (Incl. Ref. #10-21)	1
*	505-92	Glue	1
*	505-91	Undercoat	1

 *Not Illustrated

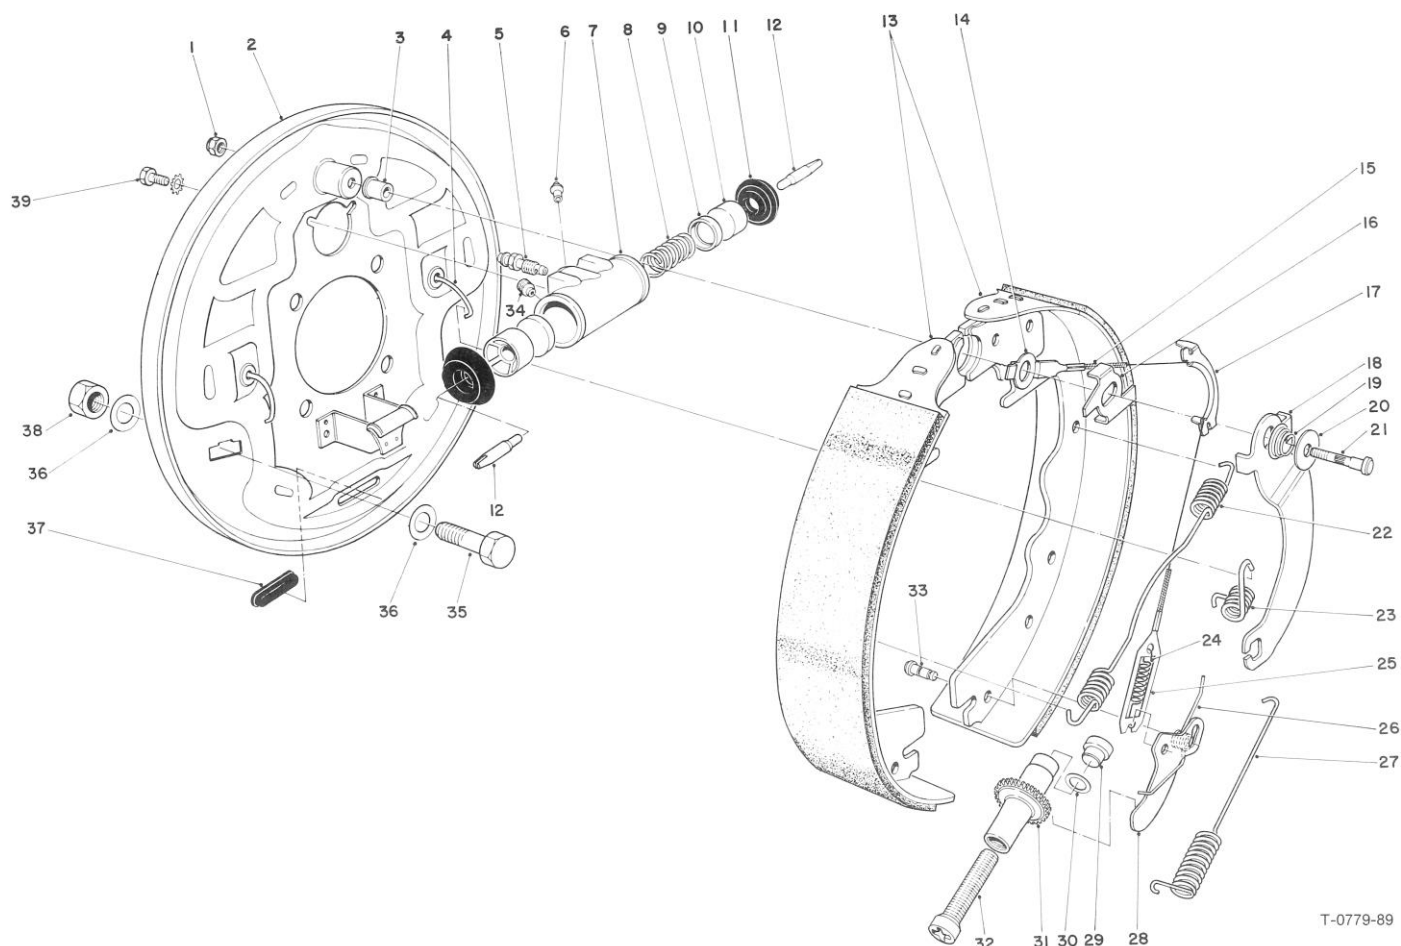


T-0779-89

REAR BRAKE ASSEMBLY (37-1010 R.H. & 37-1020 L.H.)

Ref. No.	Part No.	Description	No. Used
1	37-3770	Locknut	2
2	37-3840	Back Plate & Guide L.H.	1
*	37-3850	Back Plate & Guide R.H.	1
3	37-3710	Bushing Anchor Post	2
4	37-3970	Pin Shoe Hold Down Spring	4
5	19-6460	Bleeder Screw	2
6	19-6450	Tube Seat Inlet	2
7	37-4040	Wheel Cylinder L.H. (Incl. Ref. #5, 6, 8-11 & 34)	1
*	37-4050	Wheel Cylinder R.H. (Incl. Ref. #5, 6, 8-11 & 34)	1
8		Spring	2
9		Cup	4
10		Piston	4
11		Boot	4
12	37-4010	Connecting Link Wheel Cylinder	4
13	40-9250	Shoe & Lining Set Front & Rear	1
14		Fitting Anchor End	2
15		Cable	2
16	37-3690	Cam Plate — Preg. Br. Lever L.H.	1
*	37-3700	Cam Plate — Preg. Br. Lever R.H.	1

Ref. No.	Part No.	Description	No. Used
17	37-3780	Cable Guide	2
18	37-3630	Lever Parking Brake L.H.	1
*	37-3640	Lever Parking Brake R.H.	1
19	37-3620	Spring Anti Rattle Cam & Lever	2
20	37-3600	Washer, Parking Lever Retainer	2
21	37-3610	Anchor Bolt	2
22	37-3990	Spring — Shoe to Shoe	2
23	37-3790	Spring Shoe Hold Down	4
24		Spring Over Travel	2
25		Fitting Lever End	2
26	37-3800	Spring Auto Adjusting L.H.	1
*	37-3810	Spring Auto Adjusting R.H.	1
27	37-4000	Spring Shoe to Shoe	2
28	37-3830	Lever Auto Adjuster	2
29	37-3940	Socket Pivot	2
30	37-3950	Washer Adjusting Nut	2
31	37-3900	Adjusting Nut L.H.	1
*	37-3910	Adjusting Nut R.H.	1
32	37-3920	Pivot Screw L.H.	1
*	37-3930	Pivot Screw R.H.	1
33	37-3820	Pin Auto Adjuster Lever	2

 *Not Illustrated

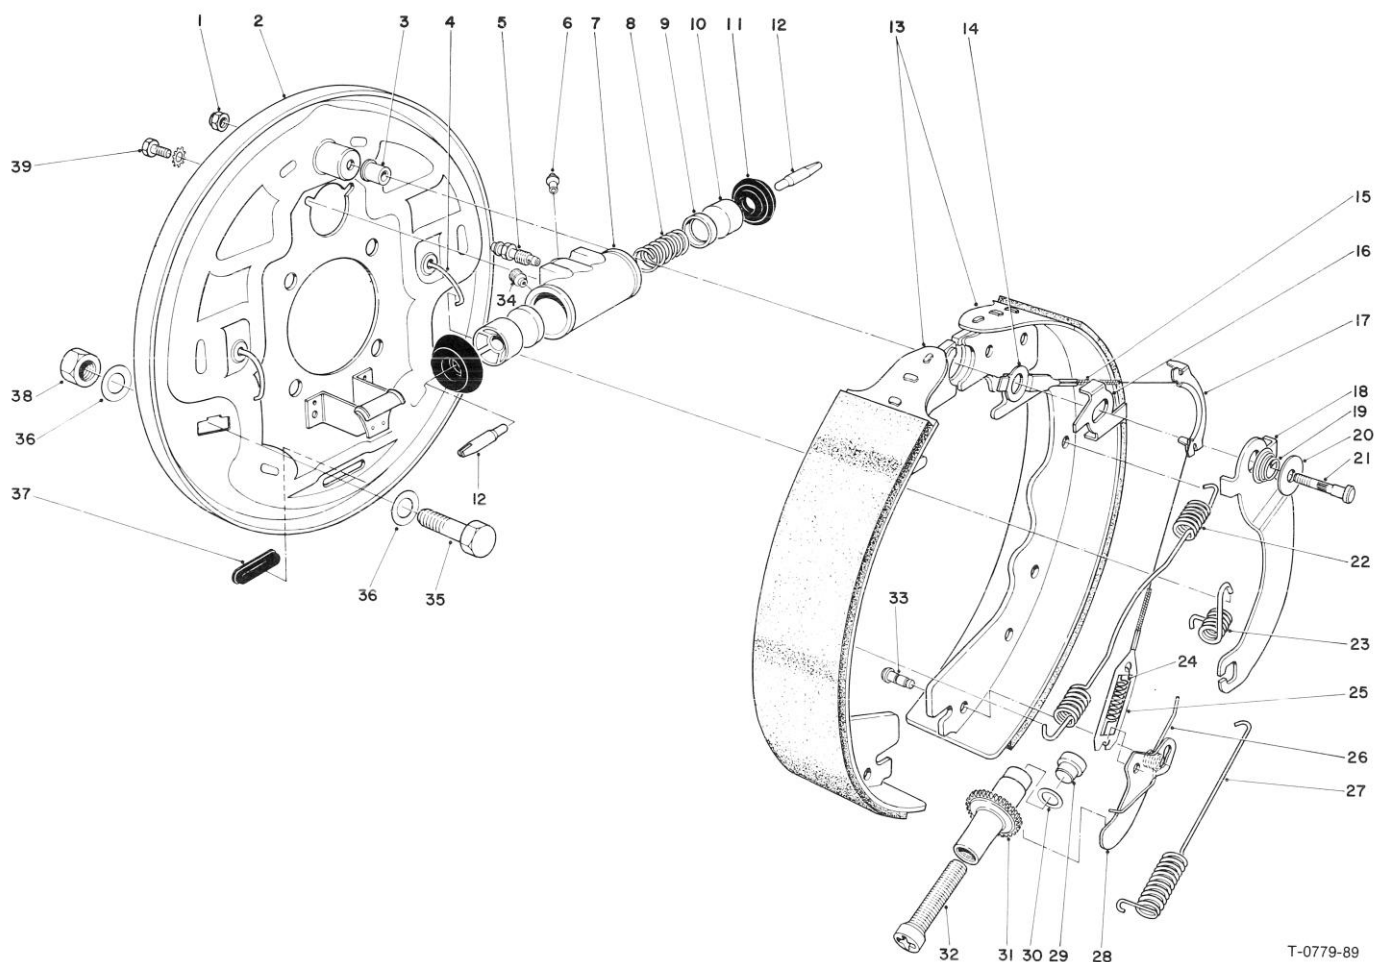


T-0779-89

REAR BRAKE ASSEMBLY (37-1010 R.H. & 37-1020 L.H.) (Continued)

Ref. No.	Part No.	Description	No. Used
34		Body Screw	2
35	325-3	Capscrew	2
36	3256-26	Washer	4
37	37-3960	Cover Adjusting Hole	2
38	32153-5	Locknut	2
39	37-3980	Screw & Lockwasher	1
*	37-3580	Lever Cable Cam Bolt Assy. L.H. (Incl. Ref. #3, 14-16, 18-21 & 24-25)	1

Ref. No.	Part No.	Description	No. Used
*	37-3590	Lever Cable Cam Bolt Assy. R.H. (Incl. Ref. #3, 14-16, 18-21 & 24-25)	1
*	37-3720	Cable & Fitting Assembly (Incl. Ref. #14-15 & 24-25)	2
*	37-1010	Brake Assembly R.H. (Complete)	1
*	37-1020	Brake Assembly L.H. (Complete)	1

 * Not Illustrated

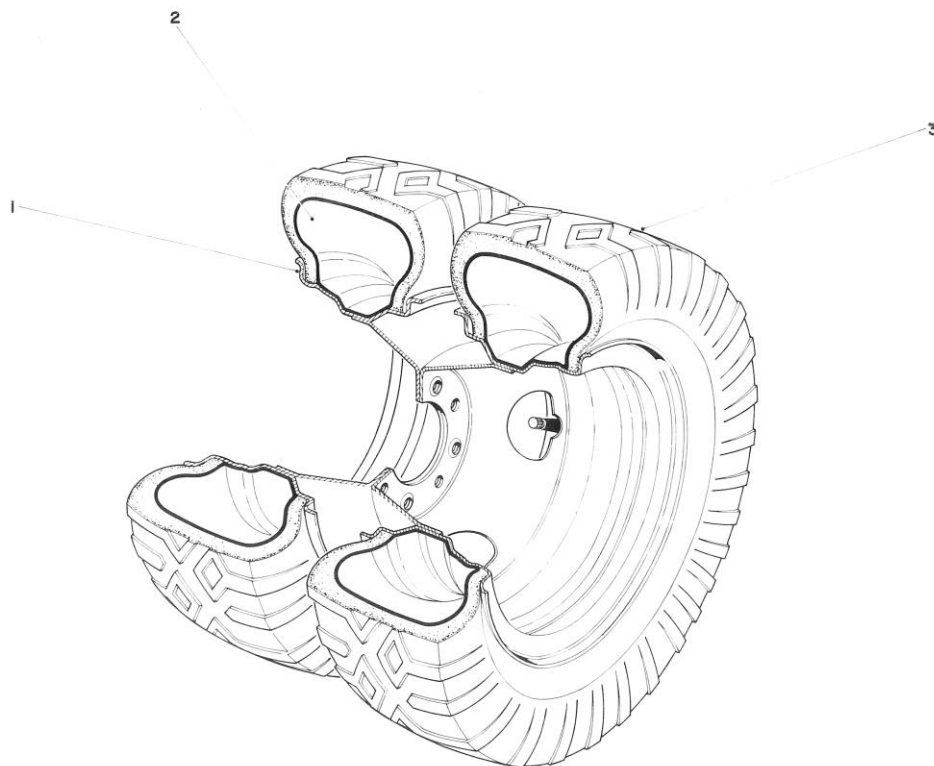


T-0780-89

REAR TIRES & WHEELS 7.50 X 16 FIELD INSTALLED KIT NO. 70230

Ref. No.	Part No.	Description	No. Used
1	37-4320	Wheel Assembly	4
2	28-9650	Inner Tube	4

Ref. No.	Part No.	Description	No. Used
3	231-5	Tire	4

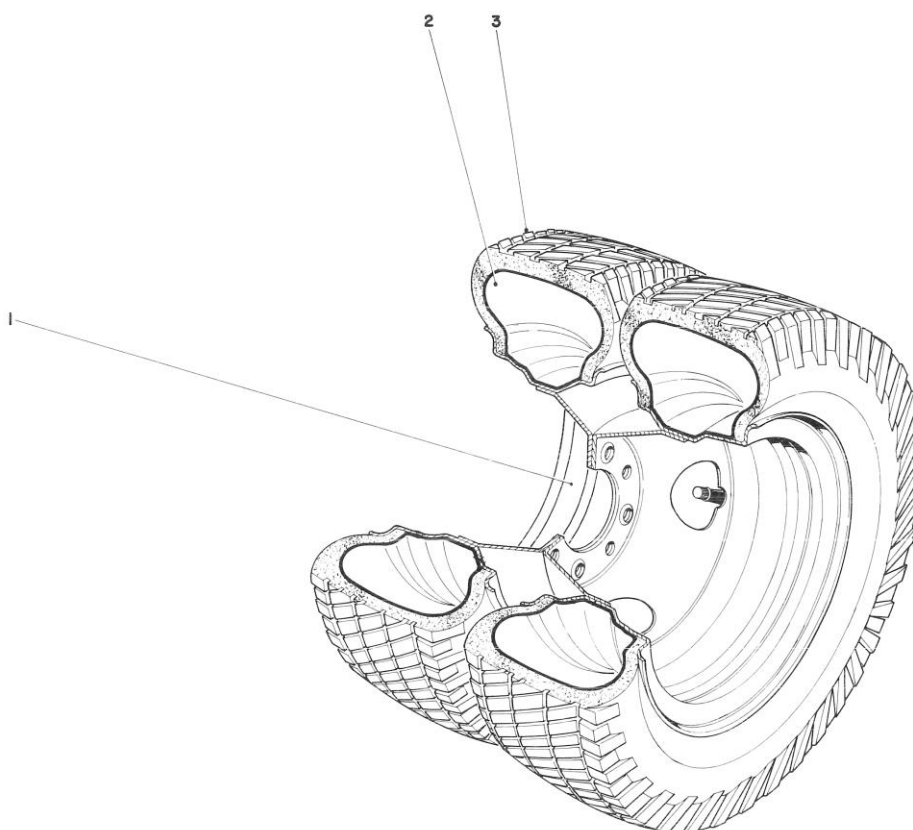 

T-0781-89


REAR TIRES & WHEELS 8.00 X 16 FIELD INSTALLED KIT NO. 70200

Ref. No.	Part No.	Description	No. Used
1	37-4320	Wheel Assembly	4
2	28-9650	Inner Tube	4

Ref. No.	Part No.	Description	No. Used
3	28-9640	Tire Traction	4
*†	231-58	Rear Tire 9.50 x 16	4

*Not Illustrated

 32 †Optional

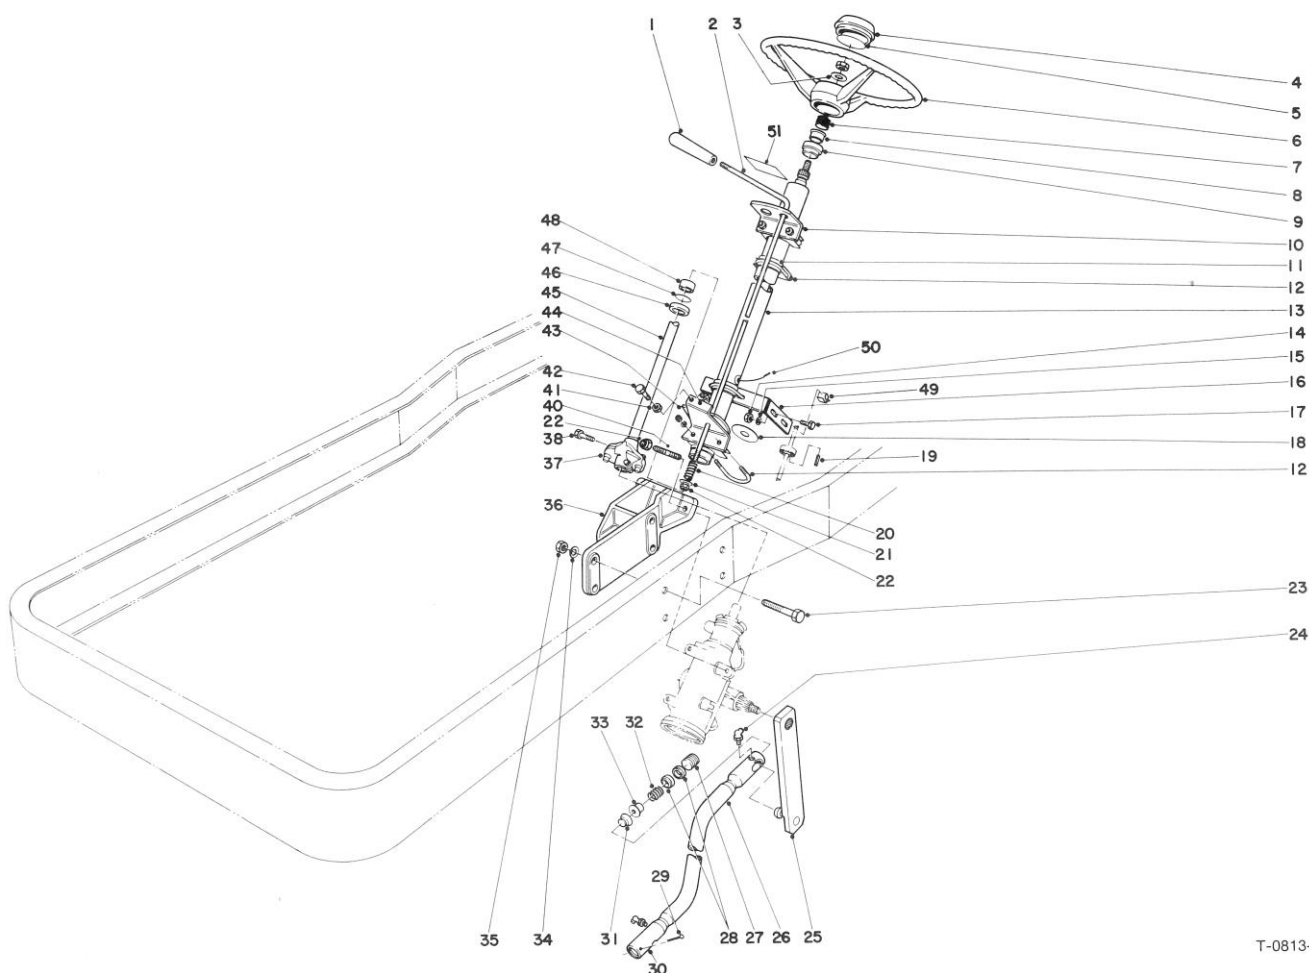


T-0813-89

STEERING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	18-2640	Handle	1
2	18-2710	Lever — Handle Throttle	1
3	18-3130	Washer	1
4	18-2140	Steering Wheel Cap	1
5	18-3170	Decal	1
6	18-2110	Steering Wheel	1
7	18-3120	Spring	1
8	18-3110	Spring Seat	1
9	18-3030	Bearing Assembly	1
10	18-2480	Support — Throttle Lever	1
11	18-1310	Saddle	8
12	18-2130	Clamp	4
13	18-3050	Steering Jacket Assembly	1
14	32153-3	Locknut	2
15	3256-23	Flat Washer	2
16	18-0830	Steering Column Support	1
17	322-2	Capscrew	2
18	3-2858	Friction Disc	1
19	32121-2	Roll Pin	2
20	3-8596	Spring Compression	1
21	3256-25	Flat Washer	1
22	3296-7	Locknut	4
23	327-10	Capscrew	4
24	302-33	Grease Fitting	2
25	18-2070	Pitman Arm	1
26	18-0330	Drag Link Tube	1

Ref. No.	Part No.	Description	No. Used
27	2116-5	End Plug	2
28	2116-6	Spherical Seat	4
29	3272-15	Cotter Pin	2
30	18-0320	Drag Link (Incl. Ref. #24, 26-28 & 31-33)	1
31	2116-8	Inner Plug	2
32	2116-7	Spring	2
33	2116-11	Spring Seat	2
34	3253-8	Lockwasher	4
35	3217-11	Nut	4
36	57-5790	Engine & Power Steering Mount	1
37	18-3010	Flange Assembly	1
38	18-3100	Bolt	1
40	57-5760	Stud — Steering Gear	3
41	3218-2	Jam Nut	1
42	322-5	Capscrew	1
43	38-1760	Friction Plate	1
44	38-1740	Bracket Friction Plate	1
45	18-3090	Steering Shaft Assembly	1
46	18-3070	Bearing Seal Retainer	1
47	18-3080	Seal	1
48	18-3060	Bushing	1
49	218-214	Tinnerman Clip	1
50	18-3040	Horn Cable Assembly	1
51	26-5260	Decal — Throttle Control	1

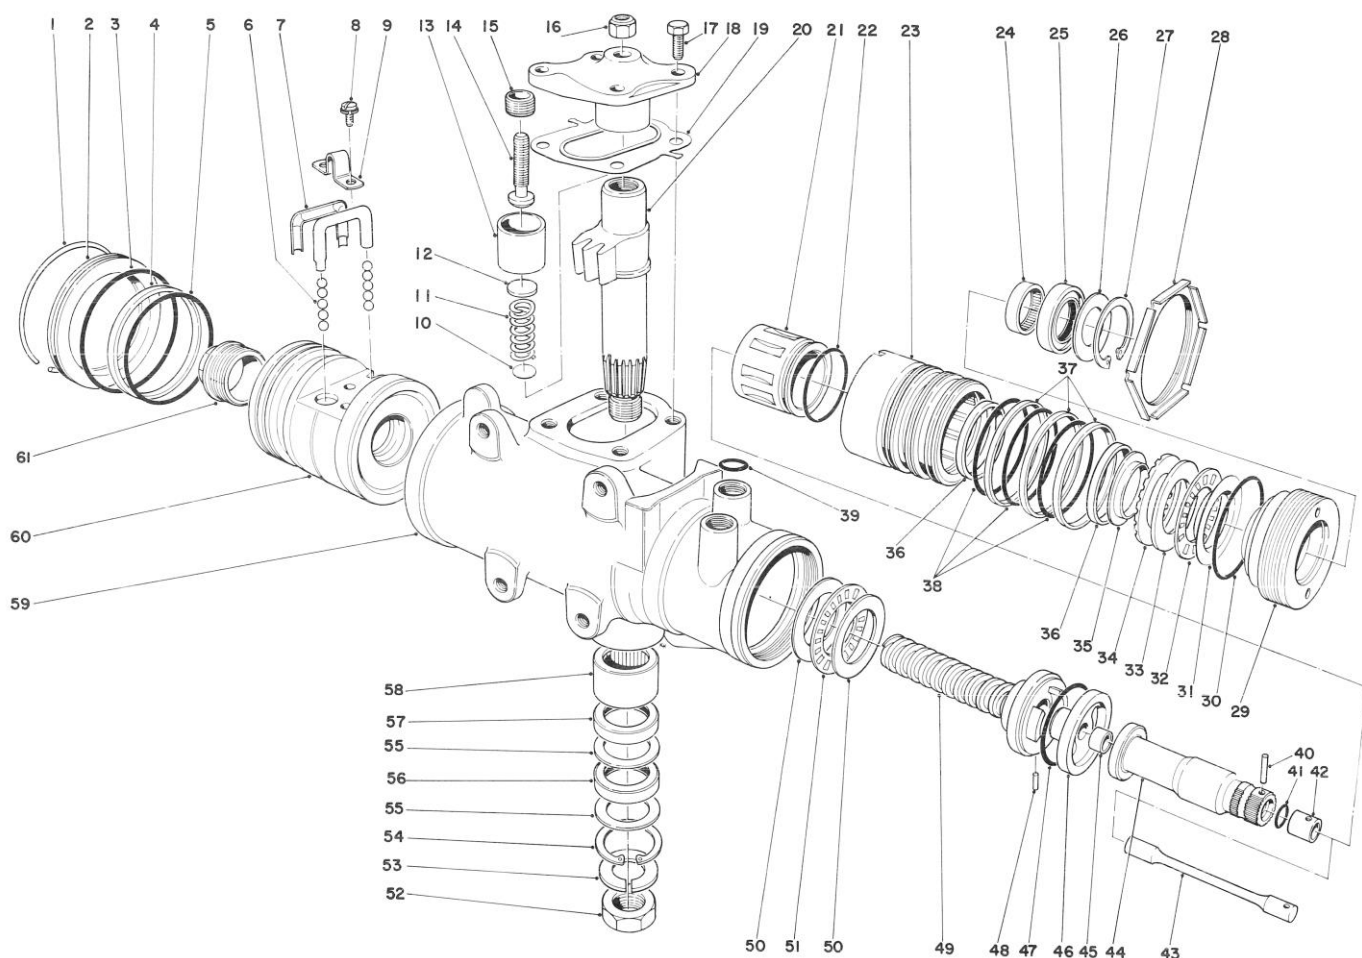 


T-0783-89

STEERING GEAR 39-7330

Ref. No.	Part No.	Description	No. Used
1	18-4330	Ring, Retaining	1
2		Plug, Housing End	1
3		Seal, Housing End Plug	1
4		Ring, Rack Piston	1
5		Seal, O-Ring, Rack Piston	1
6	*	Ball, Chrome Alloy (.2812 Dia.)	11
*		Ball, (.2806 Dia.)	11
7	18-4280	Guide Ball Return	2
8	18-4260	Screw & Lockwasher Assembly	2
9	18-4270	Clamp, Ball Return Guide	1
10		Washer, Lash Adjuster Wear	1
11		Spring, Adjuster	1
12		Washer, Lash Adjuster	1
13		Bushing, Side Cover	1
14		Adjuster, Lash	1
15		Retainer, Lash Adjuster	1
16	28-8220	Nut, Lash Adjuster	1
17	28-8210	Bolt, Flange Hex Hd.	4
18		Cover, Housing Side (Incl. Ref. #13)	1
19		Seal - Assembly Gasket	1
20		Gear Pitman Shaft	1
21		Spool Valve	1
22	39-7430	Seal, O-Ring, Spool Valve	1
23		Valve Body	1
24		Bearing Assembly, Needle	1

Ref. No.	Part No.	Description	No. Used
25		Seal, Stub Shaft	1
26		Seal, Stub Shaft Dust	1
27		Ring Retaining	1
28	18-4320	Nut, Adjuster Plug Lock	1
29		Plug Adjuster	1
30		Seal, O-Ring	1
31		Race, Upper Thrust Bearing	1
32		Bearing Assembly Roller Thrust	1
33		Race, Thrust Bearing	1
34		Spacer, Thrust Bearing	1
35		Retainer, Bearing	1
36		Sleeve, Valve Body	2
37		Ring, Valve Body	3
38		Seal O-Ring	3
39	39-7310	O-Ring Seal	3
40		Pin, Torsion Bar	1
41		Seal O-Ring	1
42		Sleeve, Torsion Bar	1
43		Torsion Bar	1
44		Shaft, Stub	1
45		Bushing Torsion Bar	1
46		Cap Valve Body	1
47		Seal O-Ring	1
48		Pin Dowel	1
49		Worm, Steering	1
50		Race Thrust Bearing	2

 *Not Illustrated

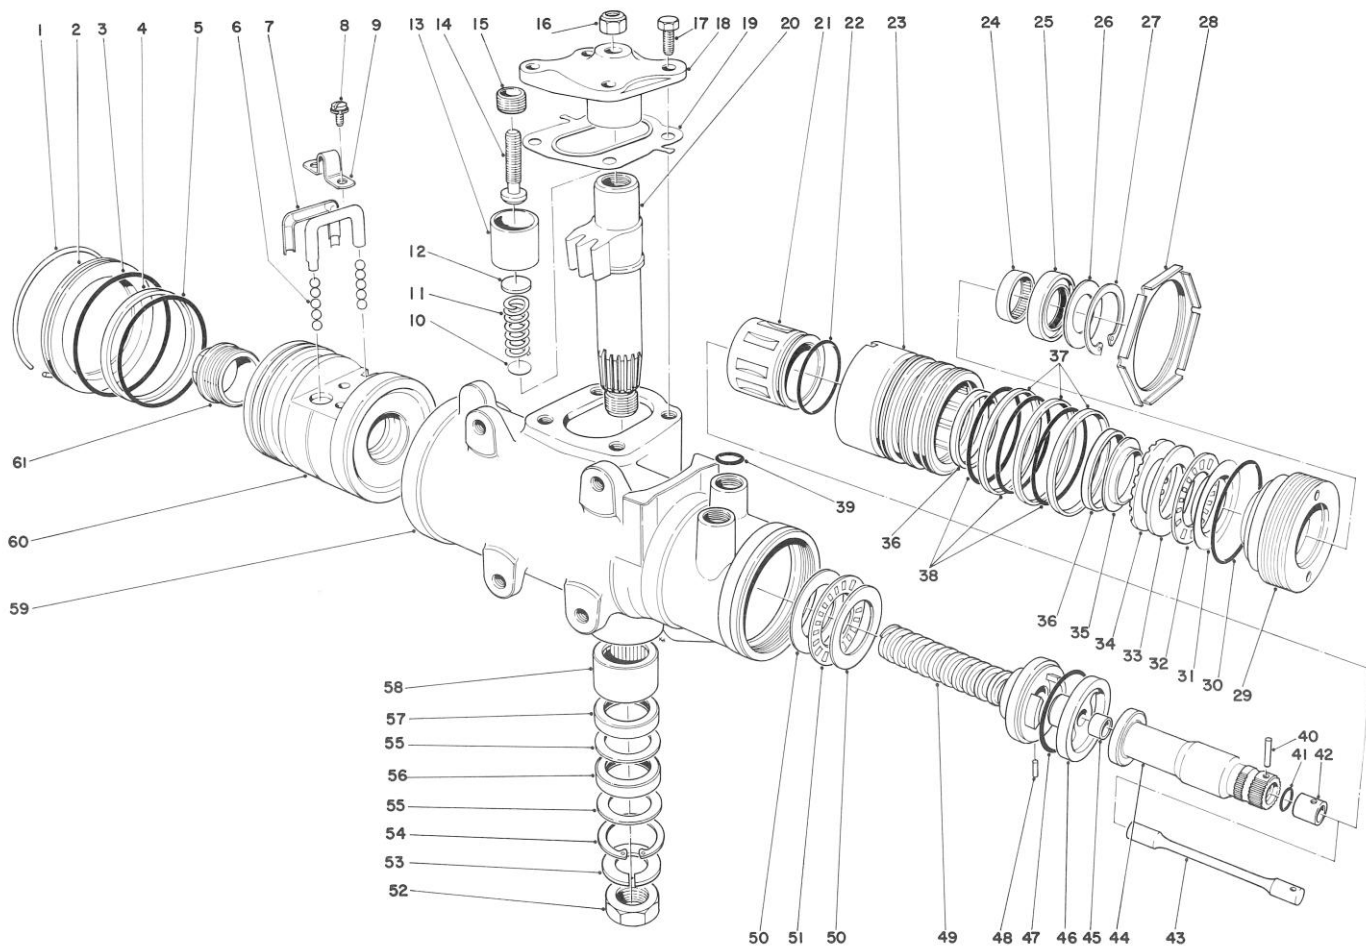


T-0783-89

STEERING GEAR 39-7330 (Continued)

Ref. No.	Part No.	Description	No. Used
51		Bearing Assembly, Roller Thrust	1
52	39-7440	Nut, Pitman, Arm	1
53	39-7420	Lockwasher	1
54		Ring, Retaining	1
55		Washer, Seal Back Up	2
56		Seal, Pitman Shaft	1
57		Seal, Pitman Shaft	1
58	18-4200	Bearing, Pitman Shaft	1
59		Housing, Steering Gear	1
60		Nut, Rack Piston	1
61	18-4340	Plug, Rack Piston End	1
*	28-8230	Bearing Service Kit - Upper Thrust (Incl. Items 31-35)	1
*	18-5150	Seal Service Kit - Adjustment Plug (Incl. Items 25-27 & 30)	1
*	18-5160	Seal Service Kit - Pitman Shaft (Incl. Items 17, 54-57)	1
*	18-5170	Seal Service Kit - Valve Ring (Incl. Items 22, 37-38 & 47)	1
*	18-5180	Bearing Service Kit - Lower Thrust (Incl. Items 50-51)	1
*	18-5190	Ball Service Kit, Recirculating (Incl. Item #6)	1

Ref. No.	Part No.	Description	No. Used
*	43-7660	Cover Service Assembly, Housing Side (Incl. Ref. #16-19)	1
*	28-8270	Seal Service Kit, End Plug (Incl. 1 & 3)	1
*	39-7410	Steering Gear Housing Assembly (Incl. Items 54-59)	1
*	18-4230	Plug Service Assembly Adjuster (Incl. Items 24-27 and 29-35)	1
*	28-8290	Seal Service Kit (Rack-Piston) (Incl. Items 4 & 5)	1
*	28-8250	Pitman Shaft, Gear Service Assembly (Incl. 12, 14-15 & 20)	1
*	39-7330	Steering Gear Complete	1
*	18-4310	Valve Assy. Hyd. Gear (Incl. Ref. #21-23, 36-38 & 40-48)	1
*	18-4250	Rack/Piston/Nut Assy. Worm & Pin (Incl. Ref. #4-9, 48, 49 & 60)	1

 *Not Illustrated

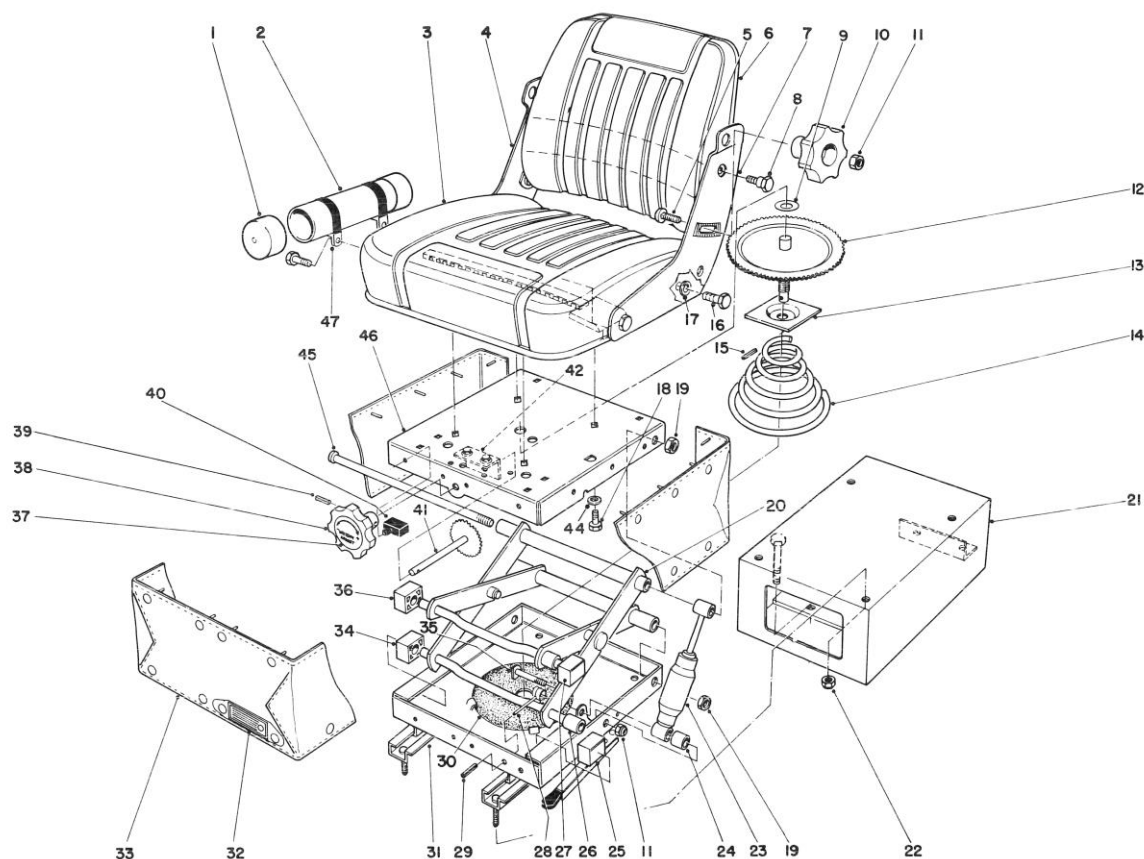


T-0627-89

SEAT ASSEMBLY (60-9070) AND SUSPENSION ASSEMBLY (46-3430)

Ref. No.	Part No.	Description	No. Used
1	65-5890	Cap	2
2	65-5870	Tube	1
3	37-0600	Seat Cushion Assembly	1
4	60-9080	Bracket, R.H. Side	1
5	46-3410	Bolt — Carriage	2
6	44-8440	Backrest Cushion	1
7	60-9090	Bracket, L.H. Side	1
8	60-9180	Bolt, Shoulder	2
9	37-0740	Thrust Washer	1
10	44-8450	Knob — Tilt Adjustment	2
11	32153-2	Nut — Lock	6
12	37-0840	Gear Assembly	1
13	37-0830	Washer Assembly	1
14	37-0820	Spring	1
15	32121-45	Pin — Roll	1
16		Bolt 1/2-13 UNC x 1.50	4
17	60-9170	Spacer	4
18	323-4	Capscrew	4
19	3296-45	Nut Lock	2
20	46-3420	Suspension Arm Assembly	1
21	36-9630	Seat Base	1
22	32153-3	Nut — Lock	4
23	37-0660	Shock Absorber	1

Ref. No.	Part No.	Description	No. Used
24	37-0670	Bearing	2
25	37-0650	Slides Block — Lower L.H.	1
26	37-0880	Bearing	4
27	37-0640	Slides Block — Upper L.H.	1
28	37-0780	Ride Indicator	1
29	32121-24	Roll — Pin	1
30	37-0810	Pad	1
31	46-3400	Suspension Base Assembly	1
32	37-0770	Decal — Ride Instructions	1
33	37-0760	Boot Assembly	1
34	37-0630	Slides Block — Lower R.H.	1
35	37-0680	Bolt — Shoulder	1
36	37-0620	Slides Block — Upper R.H.	1
37	37-0750	Decal, Weight	1
38	37-0730	Knob — Weight Adjustment	1
39		Pin — Spiral	1
40	37-0700	Bumper	2
41	37-0850	Gear & Shaft Assembly	1
42	37-0860	Bracket, Seat	1
44	3256-24	Washer	4
45	44-8470	Shaft Bearing	2
46	37-0690	Upper Housing Assembly	1
47	2412-102	R-Clamp	2


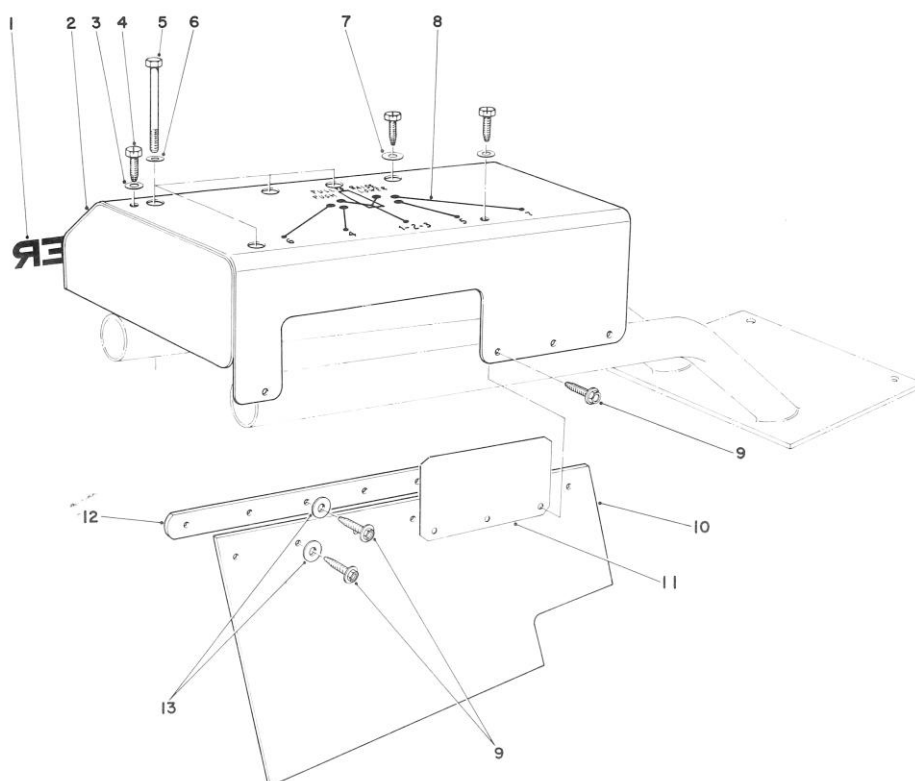 


T-0785-89

VALVE COVER AND SHIELD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	19-2270	Decal	1
2	28-8960	Valve Cover	1
3	3256-24	Washer	2
4	32104-6	Screw Self Tapping	3
5	322-38	Capscrew	3
6	3256-23	Washer	3
7	3256-4	Washer	1

Ref. No.	Part No.	Description	No. Used
8	5-8080	Decal	1
9	12-3270	Screw Special	7
10	28-8980	Flap Valve	1
11	28-9000	Closure Cover	1
12	28-8990	Strap Support	1
13	3256-22	Washer	2

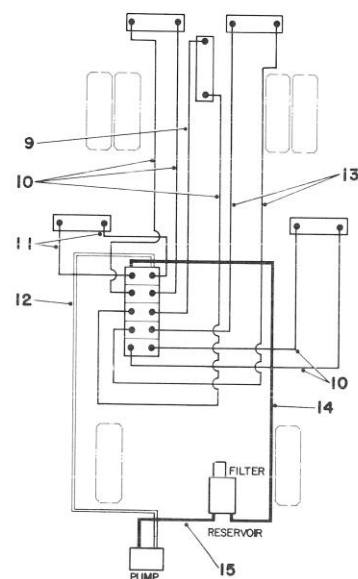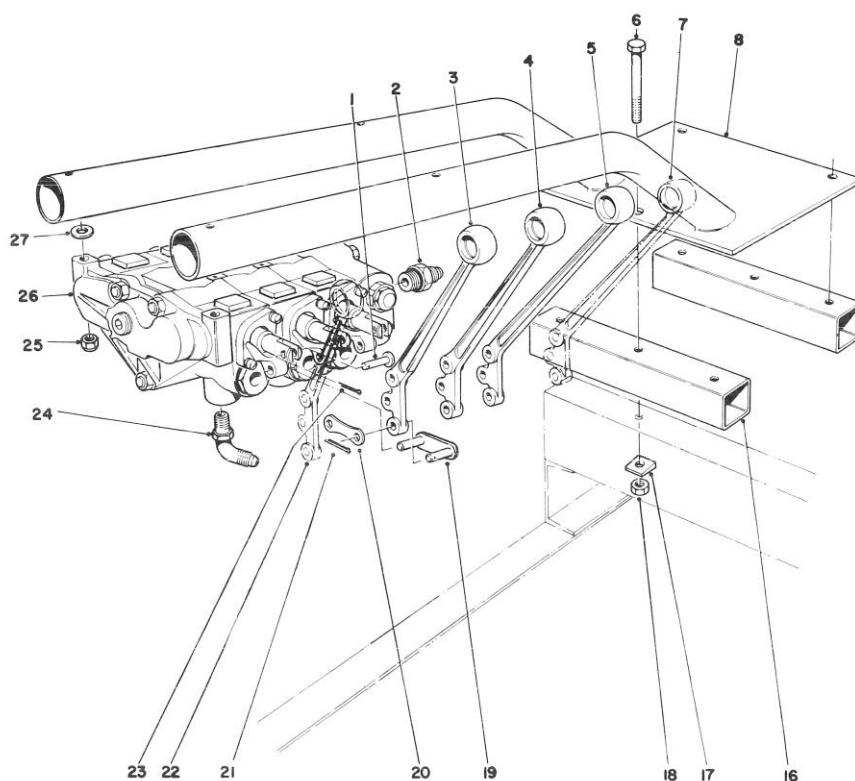  


T-0786-89

VALVE BANK & HOSES

Ref. No.	Part No.	Description	No. Used
1	353-322	Pin	5
2	353-433	Straight Swivel — Female	2
3	5-7840	Modified Lever	1
4	353-323	Lever	1
5	5-7830	Modified Lever	1
6	325-13	Capscrew	3
7	5-7860	Modified Lever	1
8	28-9030	Valve Stand	1
9	26-8520	Hydraulic Hose	1
10	5-0200	Hydraulic Hose (77")	5
11	5-0220	Hydraulic Hose (46")	2
12	23-8140	High Pressure Hose (94")	1
13	5-0230	Hydraulic Hose (102")	2
14	28-9010	Hose Return (62")	1
15	19-3050	Suction Hose	1

Ref. No.	Part No.	Description	No. Used
16	3-0166	Spacer Tube	2
17	3290-216	Bevel Washer	3
18	32153-5	Locknut	3
19		Handle — Link	5
20		Plate — Link	5
21		Cotter Pin	10
22	5-7850	Modified Lever	1
23	353-321	Cotter Pin	5
24	353-212	Male Elbow	10
25	3296-29	Locknut	3
26	44-7701	Hydraulic Control Valve Complete	1
27	3256-23	Washer	3
*	63-8760	Kit, Link Pin Includes Items 19, 20, 21	1

 *Not Illustrated

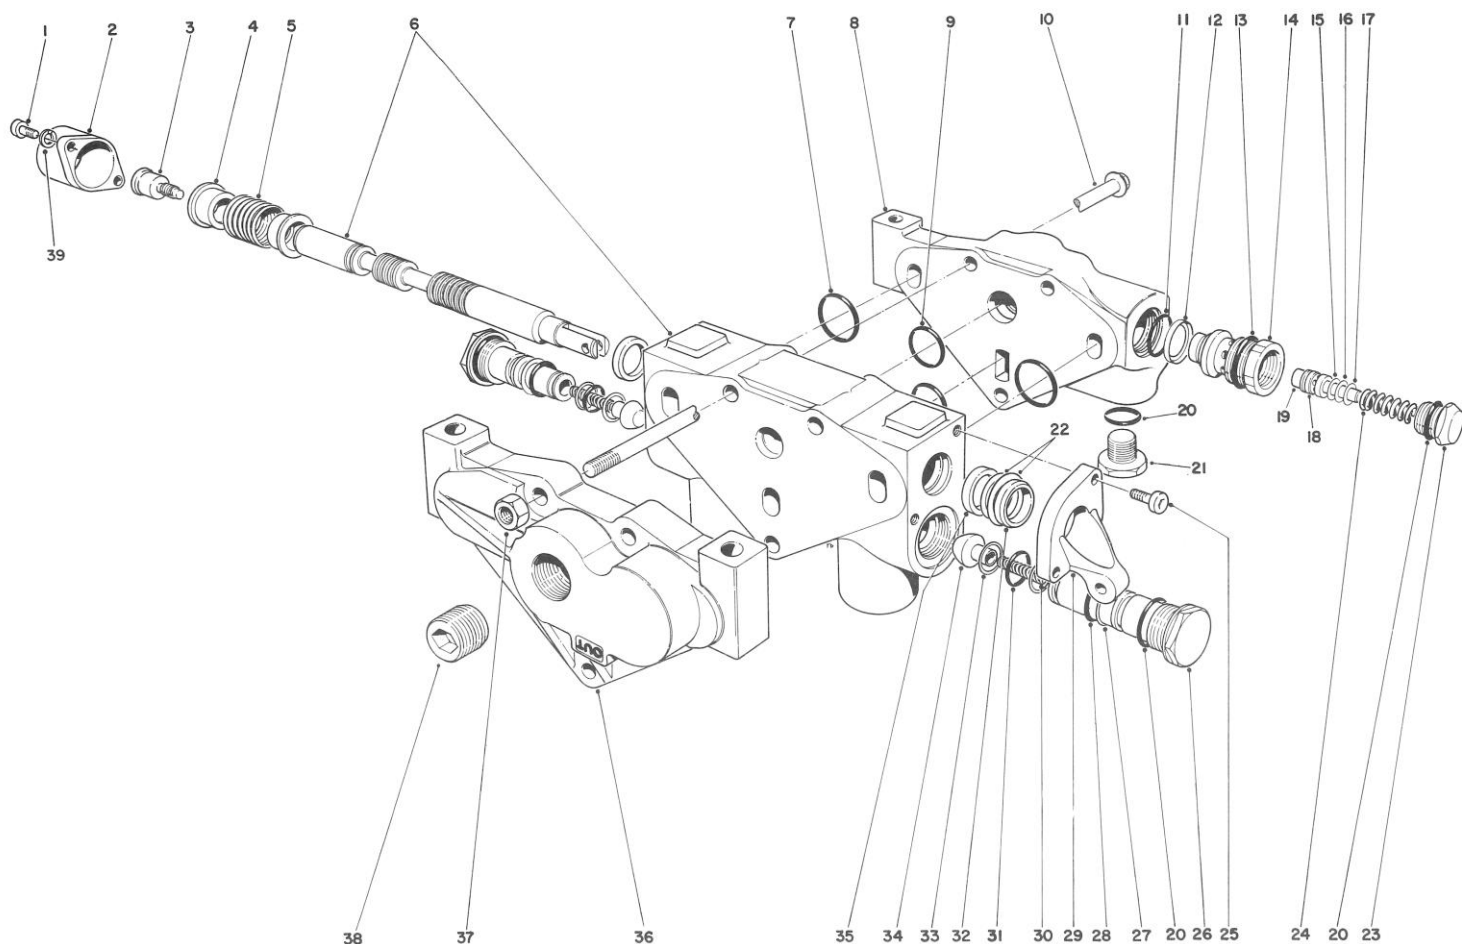


T-0787-89

HYDRAULIC VALVE ASSEMBLY NO. 44-7701

Ref. No.	Part No.	Description	No. Used
1	353-976	Screw — Hex Socket Hd.	10
2	68-4240	Bonnet	5
3	52-5860	Spool Collar	5
4	353-417	Stop Collar	10
5	44-7650	Spring	5
6		Housing & Spool Assy.	5
7		Section Seal, Return	12
8	44-7621	End Cover	1
9		Sect. Seal, Pressure	12
10	44-7612	Bolt Hex Washer Hd.	3
11	353-758	O-Ring	1
12	353-759	Seal, Back Up	1
13	353-331	O-Ring Seal	1
14	353-760	Rel. Body	1
15	353-328	Shim (.040)	1
16	353-329	Shim (.020)	1
17	353-330	Shim (.010)	1
18	353-392	Seal Relief Poppet	1
19	353-531	Poppet Relief Assembly	1
20	237-80	O-Ring Seal	12
21	353-721	Plug	2
22	353-515	Seal Kit (Incl. Ref. #33)	10
23	353-334	Cap, Relief Valve	1

Ref. No.	Part No.	Description	No. Used
24	46-2370	Spring	1
25	52-5900	Screw — Hex Socket Hd.	10
26	44-7660	Lift Check Plug	10
27	353-306	Back-Up Washer Cover	10
28	353-305	O-Ring Check	10
29	353-324	Handle Bracket	5
30	353-304	Lift Check Spring	10
31	353-302	O-Ring, Check Plug Seal (Inner)	10
32	353-318	Secondary Spool Wiper Seal	5
33	353-303	Back-Up Washer (Inner)	20
34	353-301	Lift Check Poppet	10
35	353-570	Spool Seal	10
36	353-554	End Cover	1
37	3219-3	Locknut	3
38	353-325	Plug	1
39	3253-3	Lockwasher	10
*	44-7680	Valve Section Complete (Incl. Ref. #1-6 & 26-35)	5
*	353-481	Plug Load Check (Incl. Ref. #26-28, 31 & 33)	10
*	353-743	Seal Kit (Incl. Ref. #28, 31 & 33)	1
*	353-835	Seals — Section Set (Incl. Ref. #7 & 9)	1

 *Not Illustrated

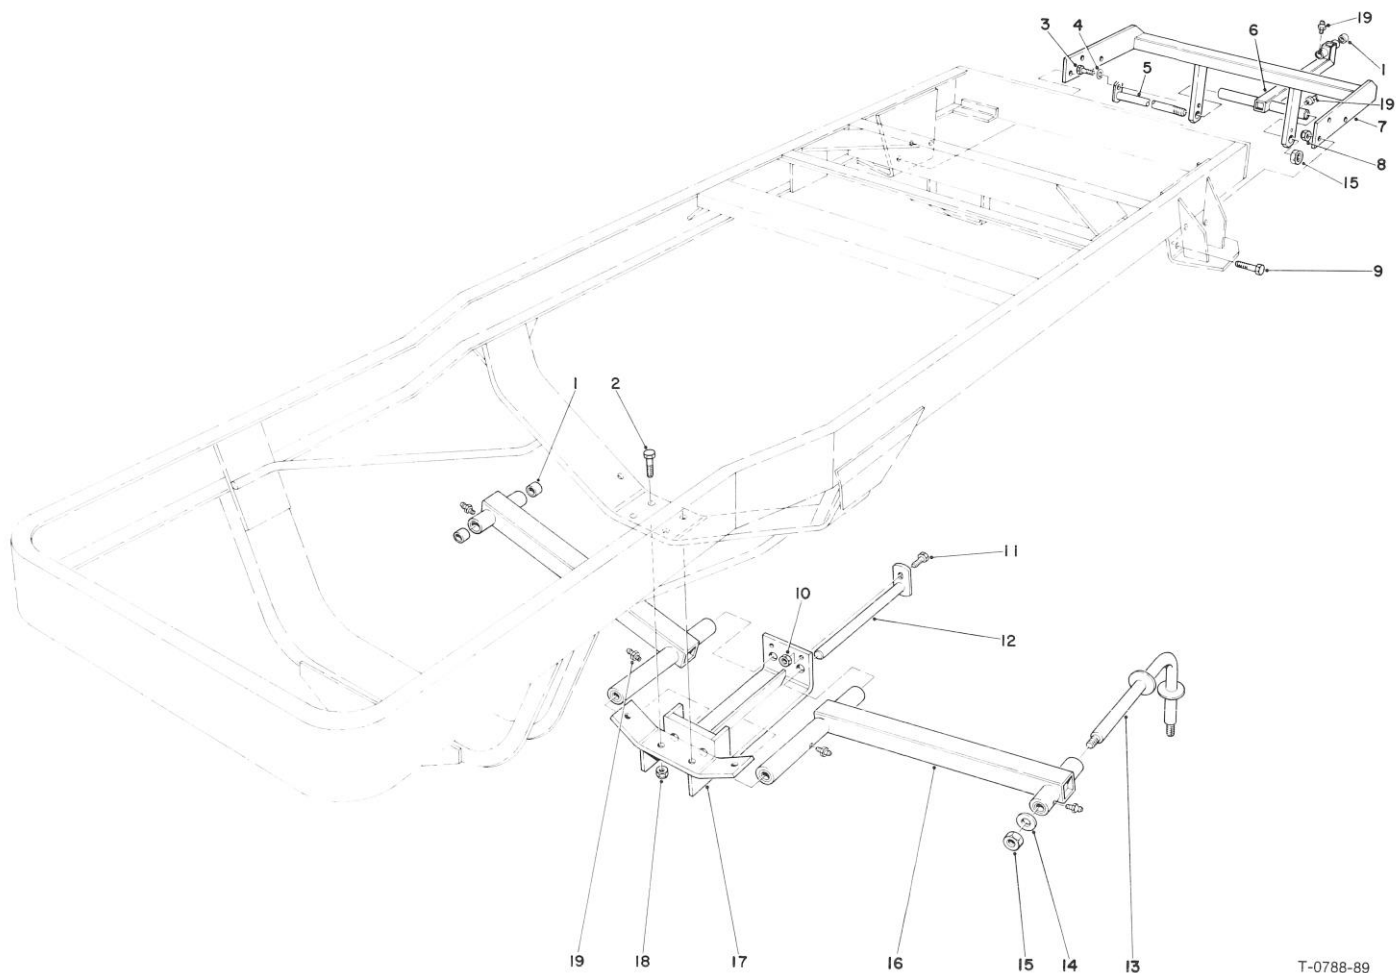


T-0788-89

DRAWBAR ASSEMBLY NO. 1, 2 AND 3 POSITION

Ref. No.	Part No.	Description	No. Used
1	3-0348	Bushing	18
2	327-22	Capscrew	4
3	322-3	Capscrew	1
4	3253-4	Lockwasher	1
5	37-2760	Pin — Bail Lift	1
6	26-8390	Lift Arm	1
7	26-8270	Pivot Support	1
8	3296-51	Locknut	6
9	328-24	Capscrew	6
10	32153-3	Locknut	2

Ref. No.	Part No.	Description	No. Used
11	322-6	Capscrew	2
12	26-8250	Lift Arm Pin	2
13	26-8310	Lift Bail Pin	3
14	3-8448	Washer	3
15	32153-10	Locknut	4
16	26-8340	Lift Arm	2
17	26-8160	Lift Arm Support	1
18	3296-24	Locknut	4
19	302-5	Grease Fitting	6

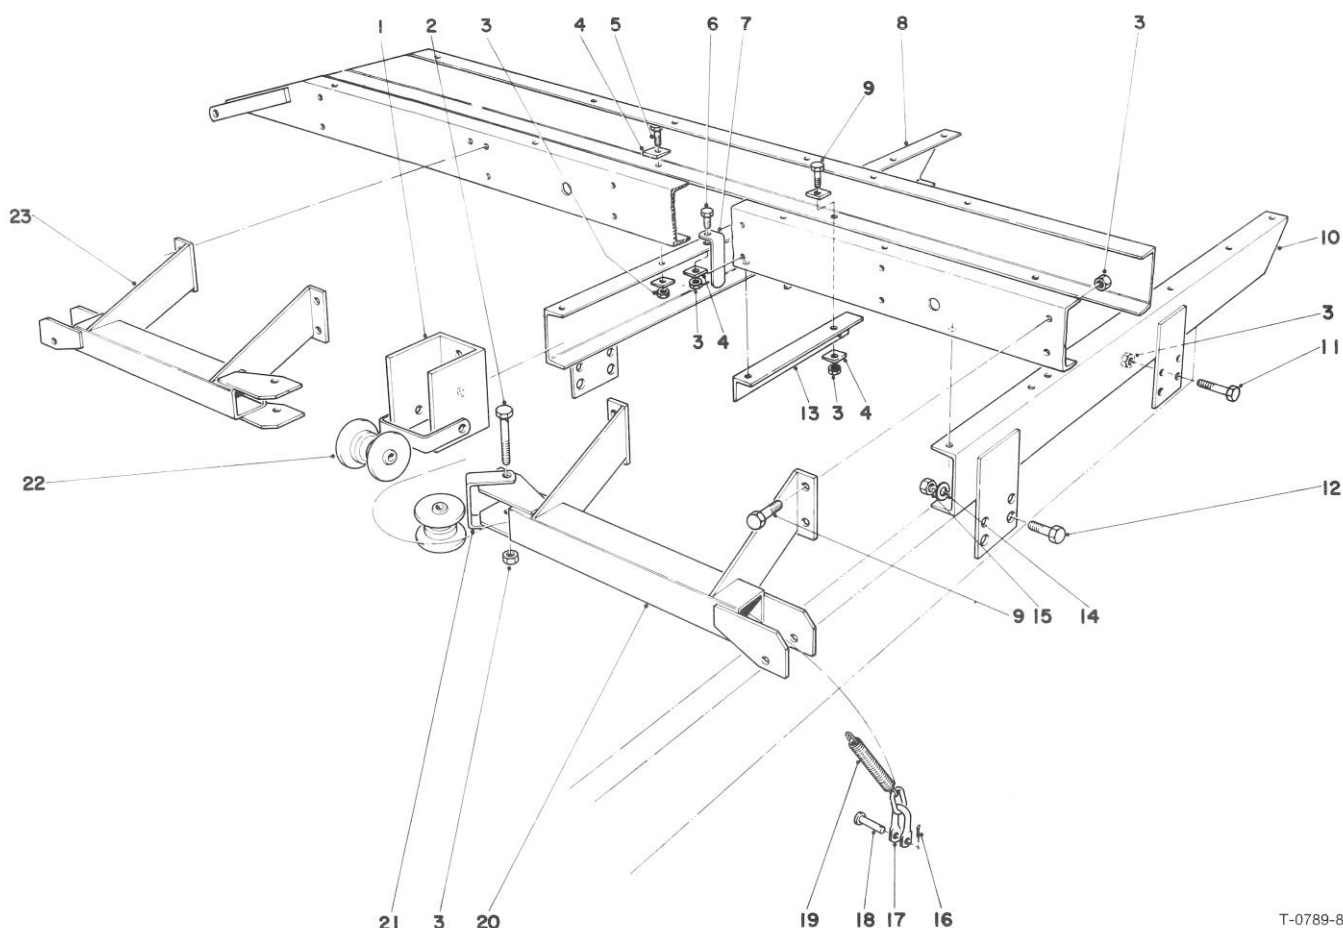 


T-0789-89

MAIN FRAME ASSEMBLY — Front

Ref. No.	Part No.	Description	No. Used
1	3-0112	Sheave Bracket	1
2	325-18	Capscrew	5
3	32153-5	Locknut	25
4	3290-216	Washer	10
5	325-8	Capscrew	4
6	325-5	Capscrew	2
7	3-0236	Hose Clip	2
8	3-4608	Side Channel Right	1
9	325-6	Capscrew	10
10	3-4606	Side Channel Left	1
11	325-7	Capscrew	2
12	327-4	Capscrew	6

Ref. No.	Part No.	Description	No. Used
13	26-8580	Chain Support	1
14	3253-8	Lockwasher	6
15	3217-11	Nut	6
16	3272-10	Cotter Pin	2
17	5-2942	Shackle	2
18	283-10	Pin	2
19	5-1706	Spring	2
20	3-6690	Side Mower Tube L.H.	1
21	3-0136	Chain Keeper	5
22	3-2196	Sheave	5
23	3-6680	Side Mower Tube R.H.	1

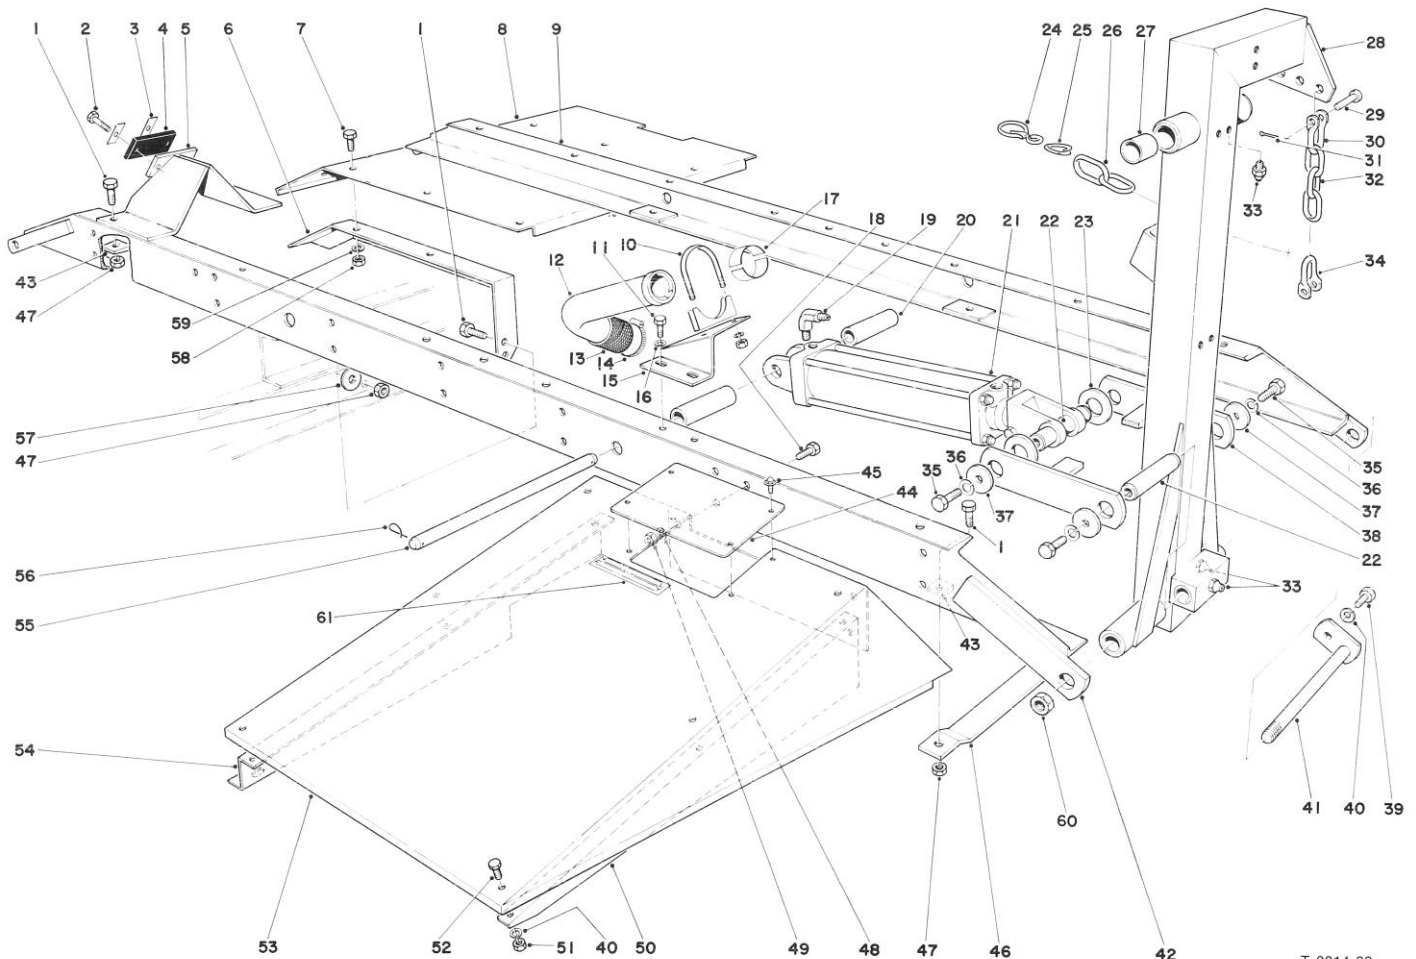 


T-0814-89

MAIN FRAME ASSEMBLY — Front Center

Ref. No.	Part No.	Description	No. Used
1	325-6	Capscrew	10
2	3290-319	Machine Screw	4
3	11-5270	Washer Bumper	4
4	11-4590	Bumper Pad	2
5	11-5630	Stop Arm	2
6	3-6520	Bracket	4
7	325-3	Capscrew	16
8	3-4596	Mudguard R.H.	1
*	3-4597	Mudguard L.H.	1
9	37-2840	Front Cross Channel Rear	1
10	18-8590	Clamp	1
11	34104-6	Self-Tapping Screw	2
12	18-2410	Fill Tube	1
13	18-2790	Extension Hose	1
14	2412-42	Hose Clamp	2
15	18-2420	Fill Tube Bracket	1
16	3256-24	Washer	2
17	18-8600	Saddle	2
18	323-6	Capscrew	6
19	5-6560	Elbow (78)	4
20	20-4390	Tube Spacer	4
21	22-7530	Cylinder 12"	2
22	3-0128	Shaft	4

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
23	3256-62	Washer	4
24	286-3	Snap Hook	4
25	287-2	Cold Shut	4
26	3-1365	Safety Chain (15 Links)	2
27	3-0348	Bushing	16
28	37-2800	Lift Arm L.H. No. 6 (Incl. Ref. #27)	1
*	37-2810	Lift Arm R.H. No. 7 (Incl. Ref. #27)	1
29	283-10	Pin	4
30	5-2942	Shackle	2
31	3272-10	Cotter Pin	4
32	3-4636	Lift Chain (7 Links)	2
33	302-5	Grease Fitting	6
34	8-0280	Shackle	2
35	3211-4	Screw	8
36	3253-5	Lockwasher	8
37	5-1720	Washer	8
38	23-2610	Link	2
39	322-3	Capscrew	2
40	3253-4	Lockwasher	14
41	37-2760	Bail Lift Pin	2
42	37-2860	Front Cross Channel Front	1

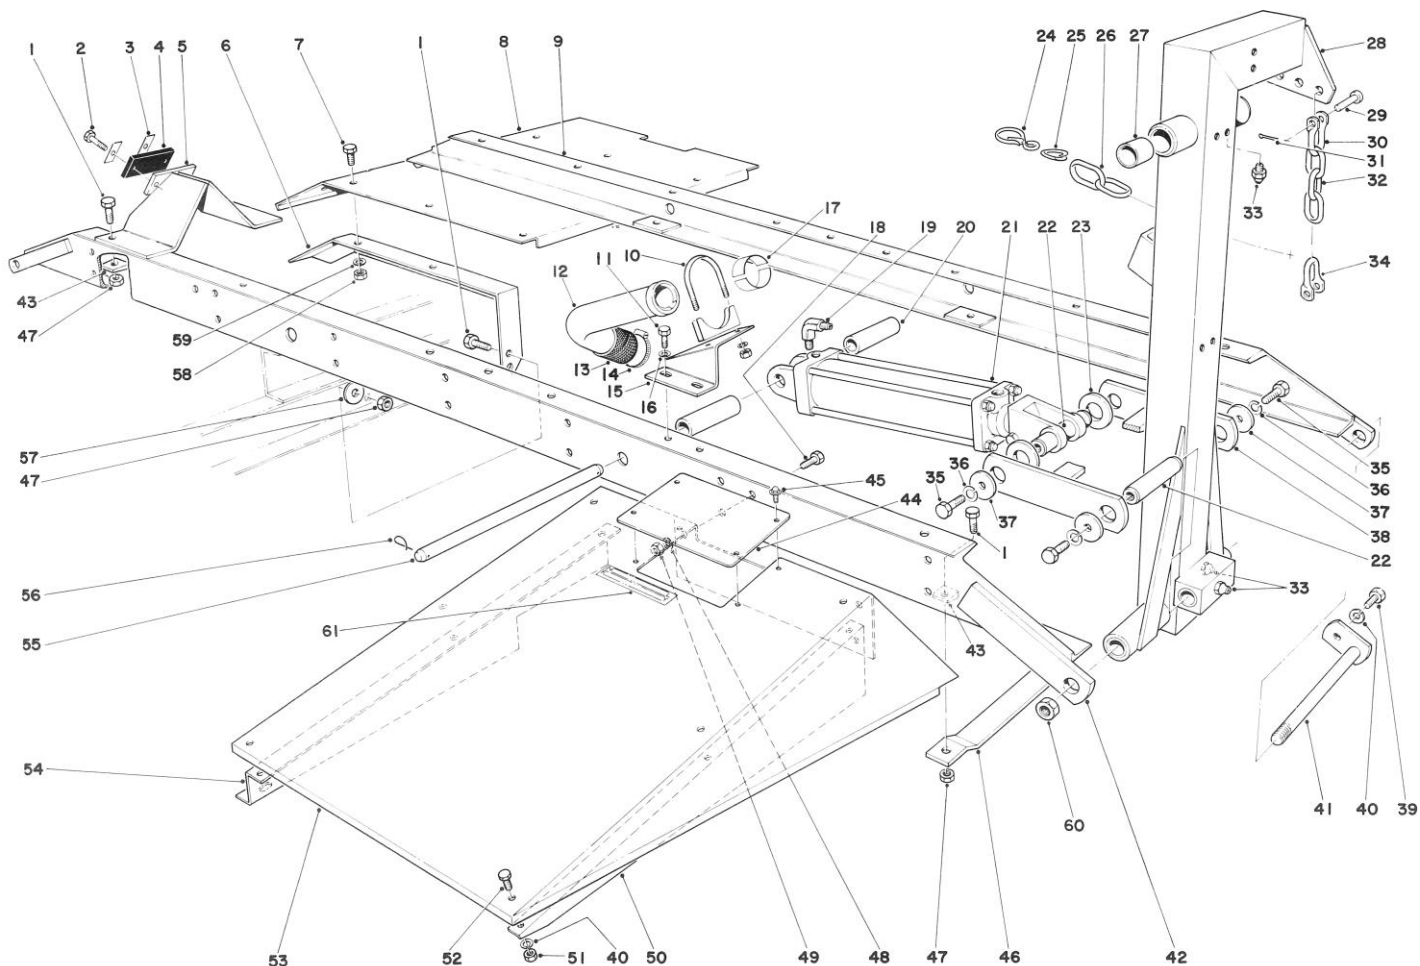 


T-0814-89

MAIN FRAME ASSEMBLY — Front Center (Continued)

Ref. No.	Part No.	Description	No. Used
43	3290-216	Bevel Washer	8
44	21-5610	Cover	2
45	32104-76	Self-Tapping Screw	8
46	37-2910	Cylinder Rest	2
47	32153-5	Locknut	10
48	3253-21	Lockwasher	6
49	3217-7	Nut	6
50	5-2262	Fender Brace	2
51	3217-6	Nut	12
52	322-2	Capscrew	12
53	21-5480	Fender L.H.	1
*	21-5490	Fender R.H.	1

Ref. No.	Part No.	Description	No. Used
54	5-2263	Fender Mount L.H.	1
*	5-2264	Fender Mount R.H.	1
55	3-0144	Shaft	2
56	5-3126	Spring Pin	4
57	3-1615	Spacer	2
58	3217-9	Nut	16
59	3253-7	Lockwasher	16
60	32153-10	Locknut	2
61	19-3700	Decal-Diesel Fuel	1

 *Not Illustrated

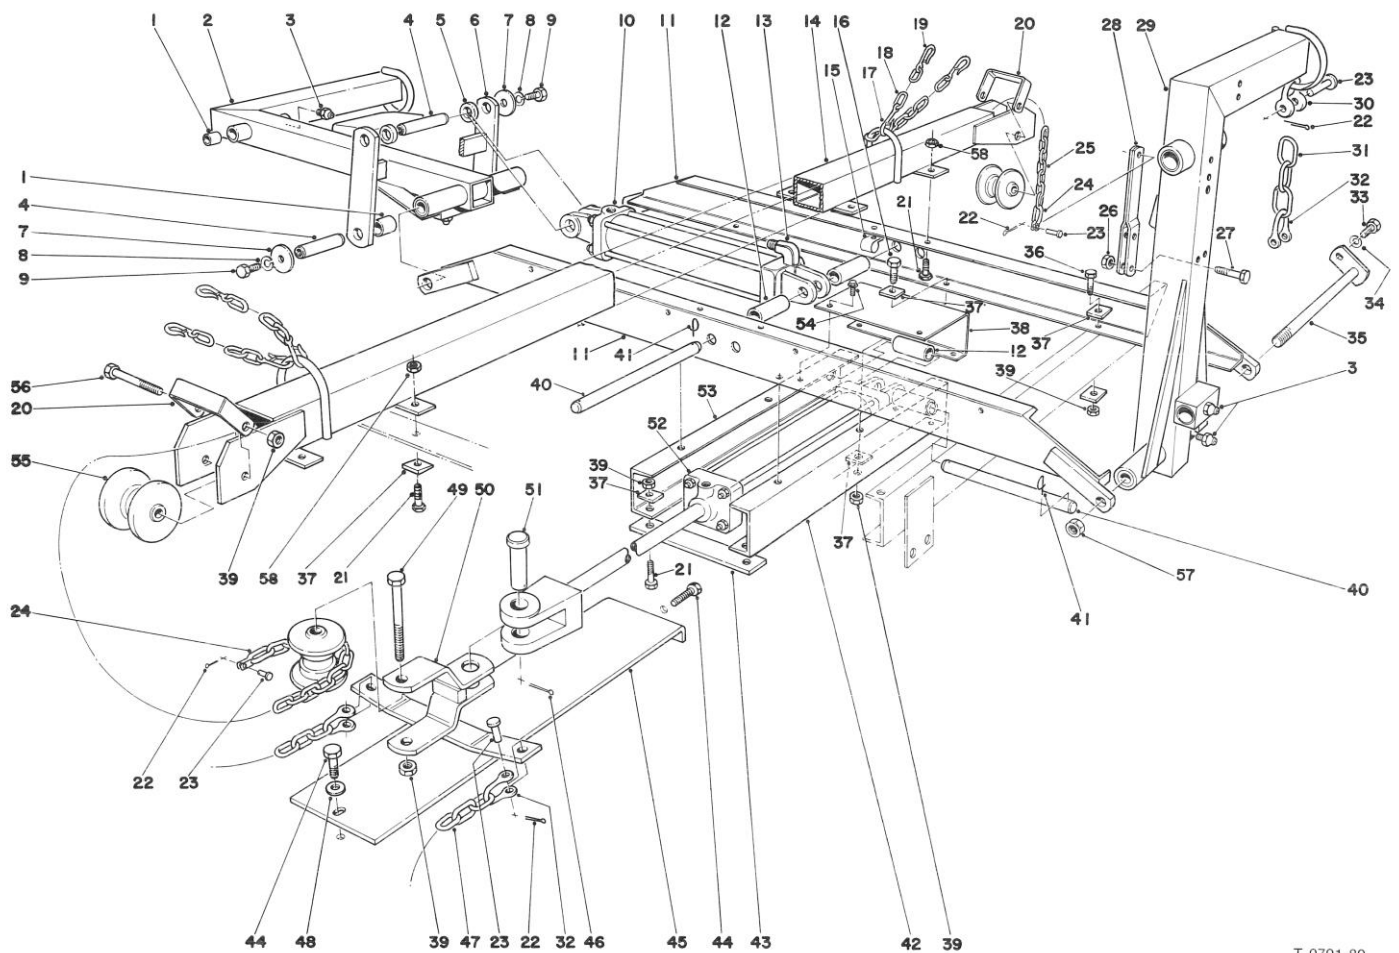


T-0791-89

MAIN FRAME ASSEMBLY — Rear

Ref. No.	Part No.	Description	No. Used
1	3-0348	Bushing	16
2	37-2890	Arm Short (Incl. Ref. #1)	1
3	302-5	Grease Fitting	6
4	3-0128	Shaft	4
5	3256-30	Washer	4
6	23-2610	Link	2
7	5-1720	Washer	8
8	3253-5	Lockwasher	8
9	3211-4	Capscrew	8
10	22-7520	Hydraulic Cylinder 10"	2
11	8-1280	Rear Cross Channel	2
12	20-4390	Tube Spacer	6
13	5-6560	Elbow	6
14	26-8460	Channel Brace	1
15	304-61	Hose Clamp	1
16	325-7	Capscrew	4
17	286-3	Safety Hook	4
18	287-2	Repair Link — Chain	4
19	3-1365	Chain	2
20	3-0136	Chain Keeper	2
21	325-6	Capscrew	10
22	3272-10	Cotter Pin	8
23	283-10	Pin	8

Ref. No.	Part No.	Description	No. Used
24	5-2942	Shackle	2
25	26-8540	Lift Chain	1
26	32153-2	Locknut	1
27	323-8	Capscrew	1
28	26-8370	Lift	1
29	37-2880	Arm Short (Incl. Ref. #1)	1
30	8-0280	Chain Shackle	2
31	3-4636	Chain Lift Bail	2
32	8-0280	Shackle	4
33	322-3	Capscrew	2
34	3253-4	Lockwasher	2
35	37-2760	Pin Bail Lift	2
36	325-8	Capscrew	4
37	3290-216	Washer	18
38	42-3550	Cover Cylinder Mount	1
39	32153-5	Locknut	10
40	3-0144	Shaft	3
41	5-3126	Pin Spring	6
42	26-8490	Channel L.H.	1
43	26-9690	Cylinder Rest	1
44	32104-6	Screw Self Tapping	2
45	18-2620	Plate	1
46	3272-13	Cotter Pin	1

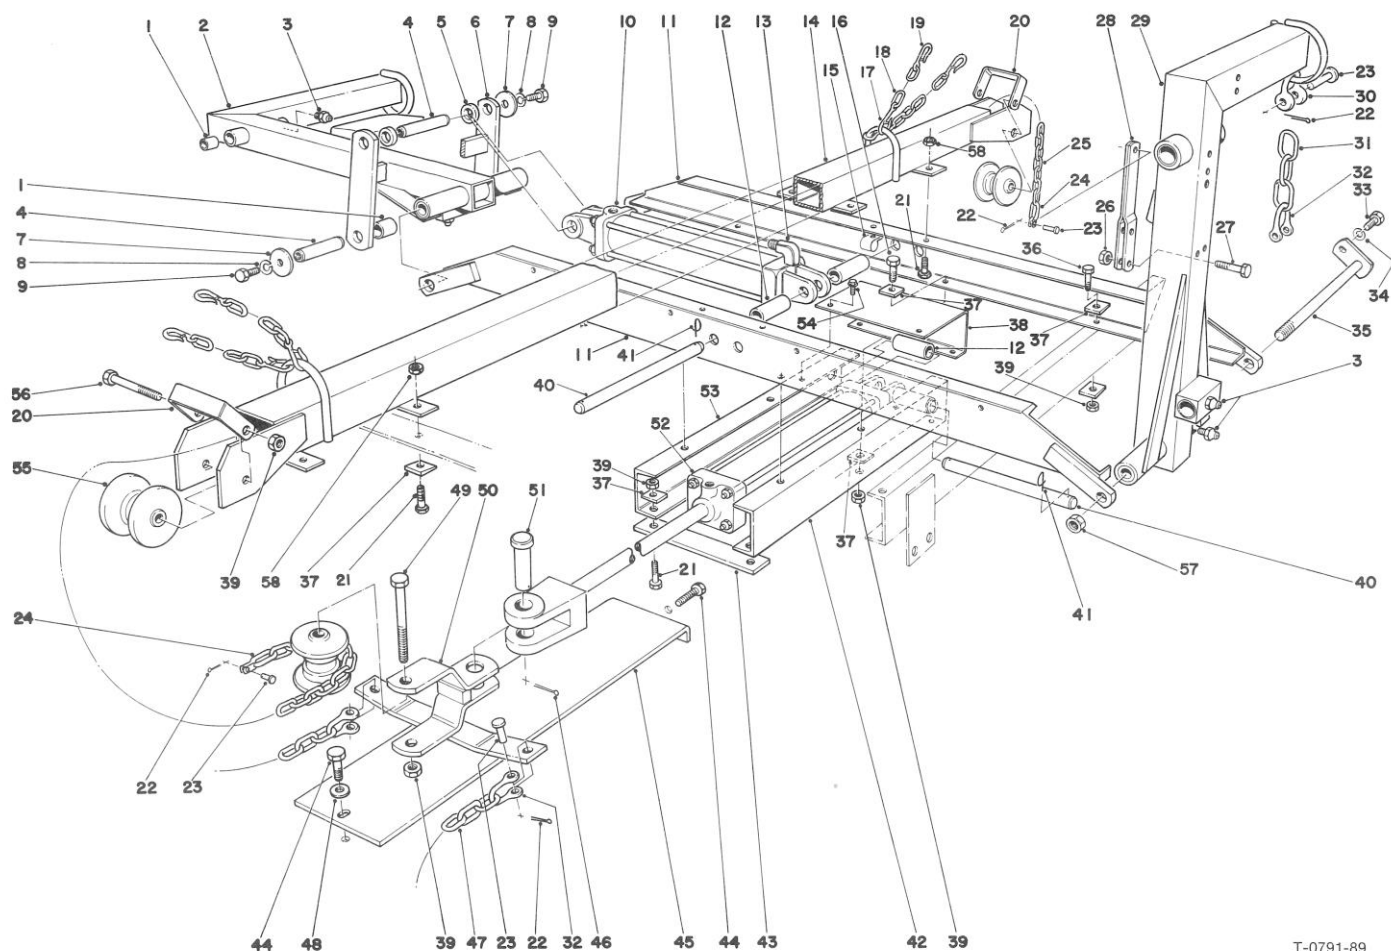 


T-0791-89

MAIN FRAME ASSEMBLY — Rear (Continued)

Ref. No.	Part No.	Description	No. Used
47	26-8530	Lift Chain	2
48	3256-24	Flat Washer	1
49	325-14	Capscrew	1
50	26-8210	Pulley Support	1
51	26-8590	Pin Cylinder	1
52	22-7530	Cylinder 12"	1

Ref. No.	Part No.	Description	No. Used
53	37-2790	Channel R.H.	1
54	32104-17	Hex Hd. Self-Tapping Screw	4
55	3-2196	Sheave	3
56	325-18	Capscrew	2
57	32153-10	Locknut	2
58	32128-28	Nut — Flange	8

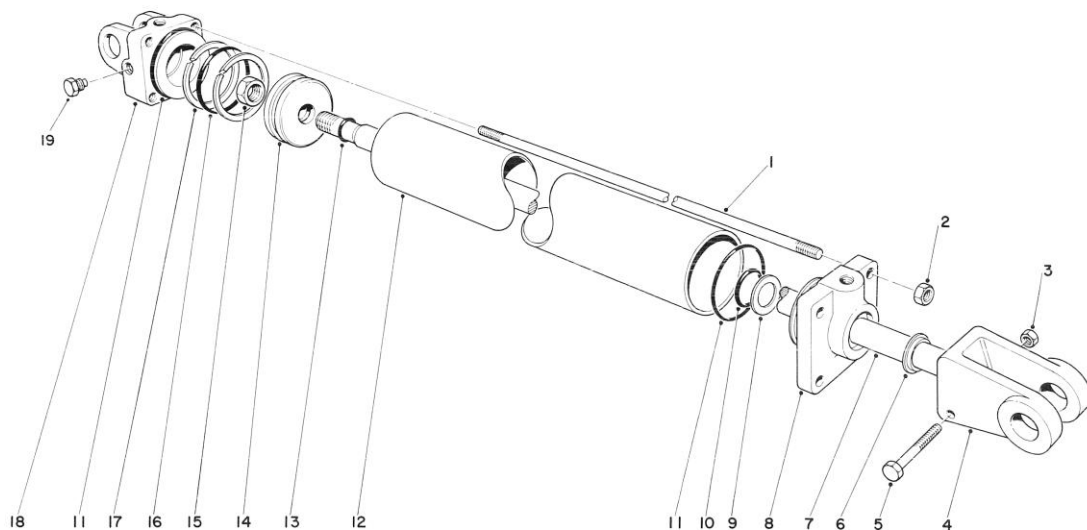 


T-0729-89

10" (22-7520) AND 12" (22-7530) CYLINDERS

Ref. No.	Part No.	Description	No. Used
1	22-8670	Tie Rod 10"	4
*	22-8710	Tie Rod 12"	4
2	3217-9	Nut	4
3	32153-3	Locknut	1
4	22-8680	Clevis Assembly	1
5	322-11	Capscrew	1
6	22-8660	Wiper Ring Seal	1
7	22-8610	Piston Rod 10"	1
*	22-8690	Piston Rod 12"	1
8	22-8630	Head	1
9	22-8650	Back-Up Washer	1
10	22-8640	"O" Ring Seal	1

Ref. No.	Part No.	Description	No. Used
11	22-8550	"O" Ring Seal	2
12	22-8620	Barrel 10"	1
*	22-8700	Barrel 12"	1
13	22-8600	"O" Ring Seal	1
14	22-8590	Piston	1
15	22-8560	Locknut	1
16	22-8570	"O" Ring Seal	1
17	22-8580	Back Up Washer	2
18	22-8540	Butt-End Cap	1
19	281-2	Plug — Pipe	1
*	22-8720	Seal Kit (Incl. Ref. #6, 9-11, 13 & 16-17)	1

 *Not Illustrated

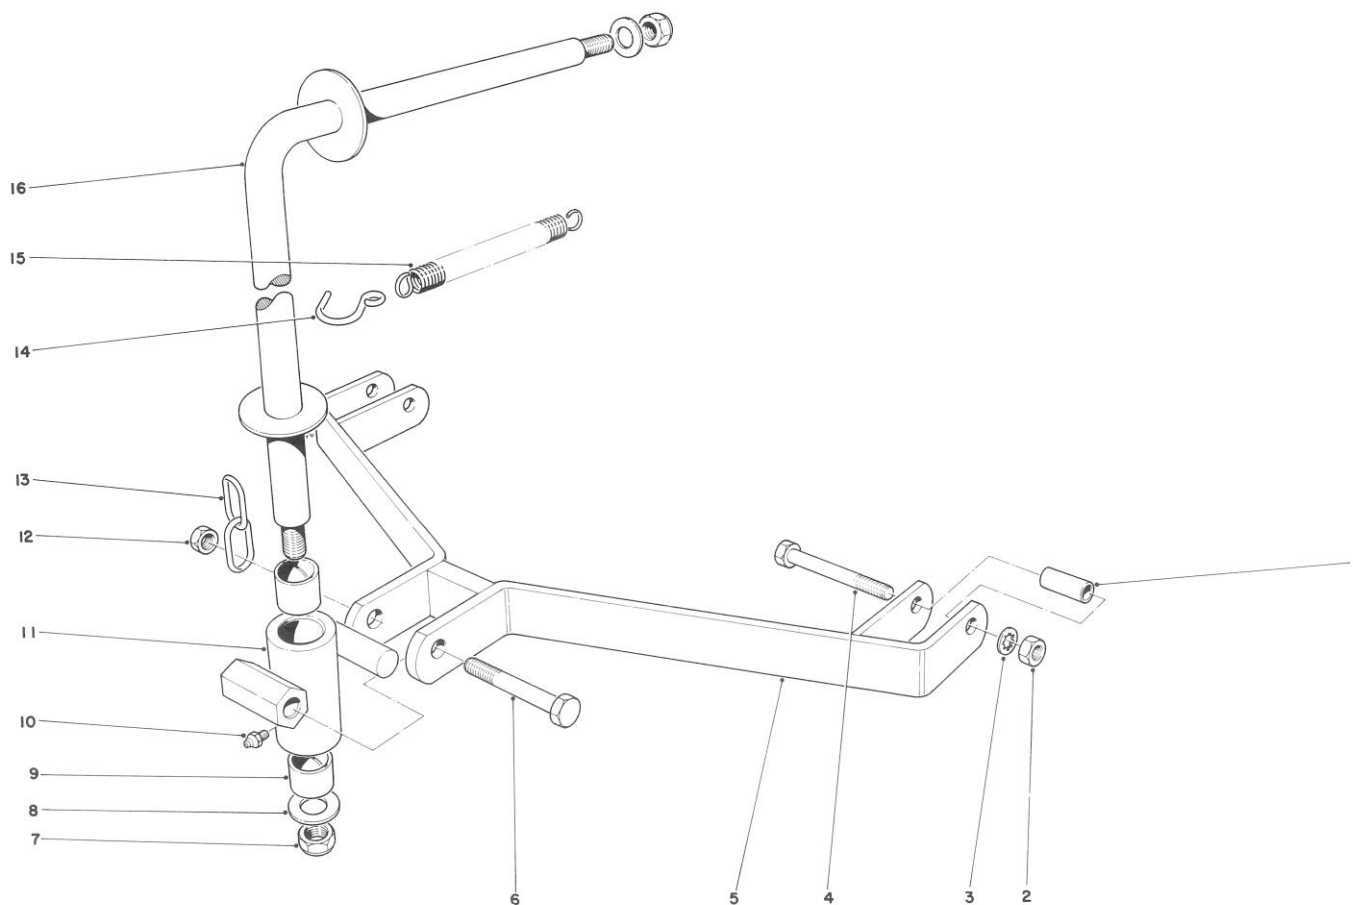


T-0793-89

DRAWBAR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	5-1091	Spacer	14
2	3217-9	Nut	14
3	3254-4	Lockwasher	14
4	325-14	Capscrew	14
5	3-9280	Drawbar	7
6	325-17	Capscrew	7
7	32153-10	Locknut	14
8	3-8448	Washer	14
9	3-0348	Bushing	14

Ref. No.	Part No.	Description	No. Used
10	302-5	Grease Fitting	7
11	1-6559	Housing (Incl. Ref. #9 & 10)	7
12	32153-5	Locknut	7
13	3-0293	Chain	4
14	3-2198	S-Hook	5
15	5-1706	Spring	7
16	28-8720	Bail, Lift	4
*	26-8310	Bail, Lift 1, 2 & 3 Position	3

 *Not Illustrated

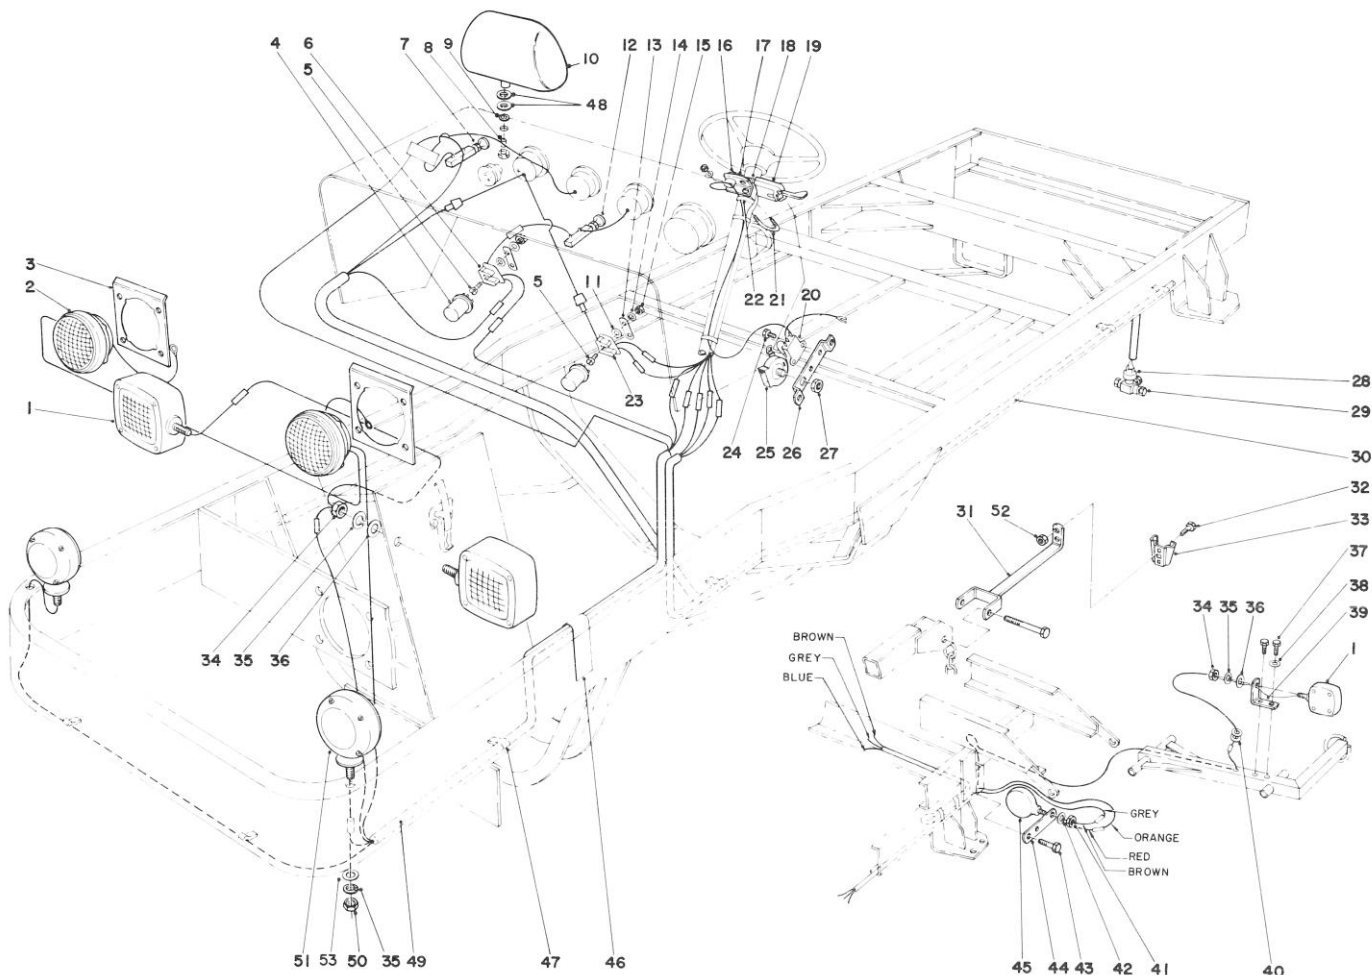


LIGHT & ROAD KIT NO. 38-6310 (Optional)

T-0794-89

Ref. No.	Part No.	Description	No. Used
1	38-6190	Signal Lamp (SMV) (Incl. Ref. #34-36)	4
2	7-1646	Headlight	2
3	18-1010	Headlight Holder	2
4	218-456	Flasher	2
5	3252-2	Screw	2
6	38-2110	Connector Assembly	1
7	218-213	Light Switch	1
8	323-2	Capscrew	1
9	3253-29	Washer — Lock	1
10	60-9430	Mirror	1
11	19-2430	Plastic Washer	2
12	38-2130	Switch Flasher	1
13	18-4370	Flasher Connector Bracket	2
14	3253-12	Lockwasher	2
15	3217-26	Nut	2
16	18-2830	Horn Button	1
17	18-2480	Throttle Lever Support	1
18	2412-3	Hose Clamp	1
19	60-9390	Signal Controller	1
20	218-212	Horn Relay	1
21	18-2130	Clamp	1
22	18-1310	Saddle	2
23	11-6440	Flasher Connector	1
24	32104-77	Self-Tapping Screw	2
25	19-6050	Horn	1
26	18-2820	Horn Mount	1
27	32112-2	Nut	1
28	218-242	Stoplight Switch	1

Ref. No.	Part No.	Description	No. Used
29	218-243	Brake Line Tee	1
30	38-2150	Wire Harness	1
31	38-6170	Support—Slow Moving Vehicle	1
32	322-3	Capscrew	2
33	38-6200	Socket—Slow Moving Vehicle Emblem	1
34	3219-5	Nut	4
35	3253-7	Lockwasher	6
36	3256-6	Washer	4
37	32144-11	Screw Self Tapping	4
38	3256-3	Washer	2
39	18-8860	Bracket Rear	2
40	237-73	Grommet	2
41	3217-11	Nut	2
42	3253-8	Lockwasher	2
43	327-4	Capscrew	2
44	3-3402	Bracket	4
45	60-9380	Tail, Stop & Turn Light	2
46	18-8570	Wire Harness Clip	1
47	212-93	Wire Clip	13
48	3256-35	Washer	2
49	38-2140	Wire Harness	1
50	3219-5	Nut	2
51	11-6250	Front Signal Light (Incl. Ref. #35, 50 & 53)	2
52	32146-5	Nut — Lock	2
53	3256-5	Washer	2
*	62-4510	Anchor, Wire Harness	6

 *Not Illustrated

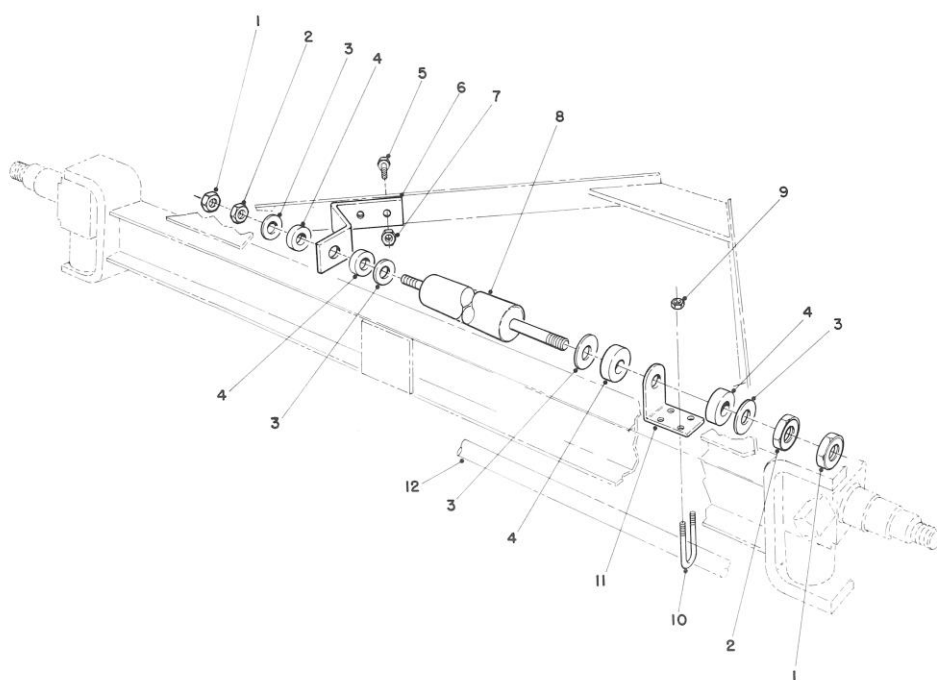


T-0795-89

LIGHT & ROAD KIT NO. 38-6310 (Optional) (Continued)

Ref. No.	Part No.	Description	No. Used
1	3290-385	Locknut	2
2	3219-3	Nut	2
3	60-9460	Washer	4
4	60-9450	Bushing, Rubber	4
5	323-7	Capscrew	2
6	60-9340	Bracket, Stabilizer Mounting	1
7	32128-21	Locknut	2

Ref. No.	Part No.	Description	No. Used
8	60-9360	Stabilizer, Steering	1
9	32128-13	Locknut	4
10	60-9350	U-Bolt, Stabilizer	2
11	60-9370	Bracket	1
12		Tie Rod	1
*	60-9440	Mounting Kit, Stabilizer Hardware	1

 *Not Illustrated

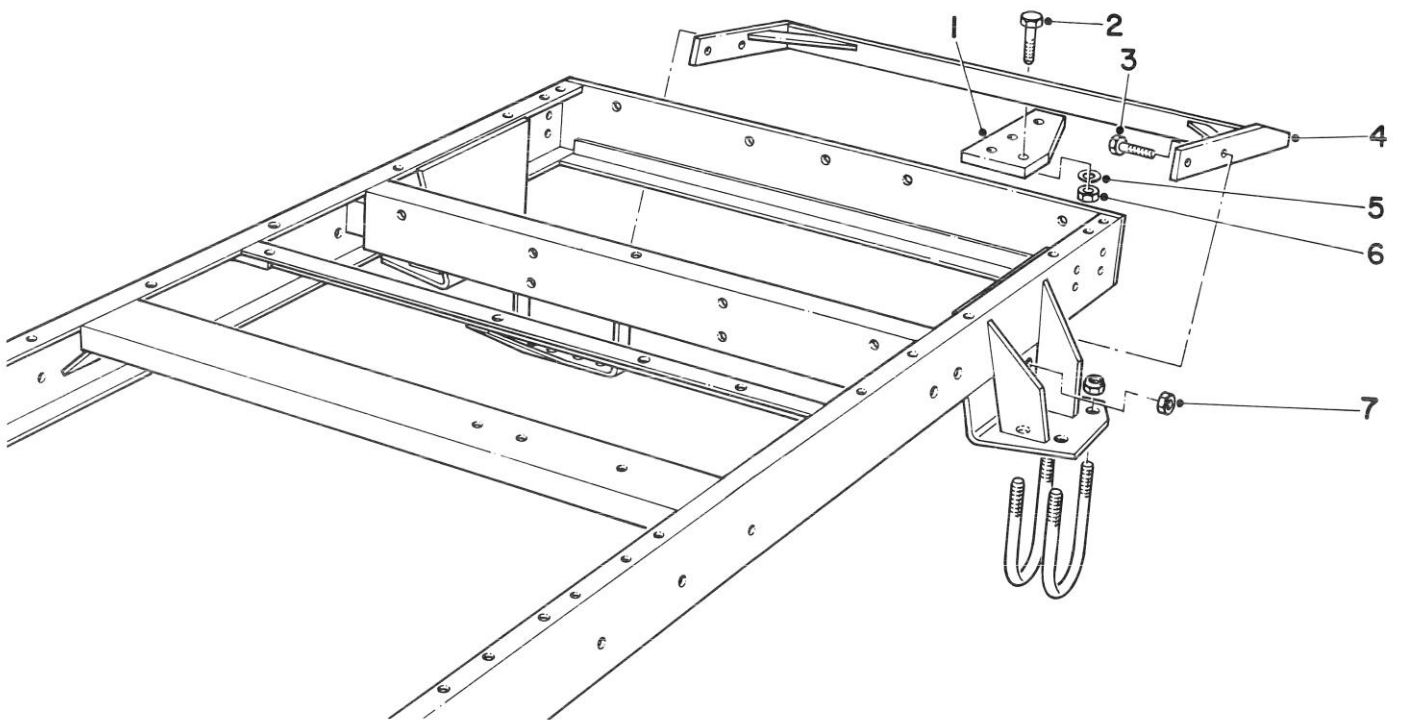


T-0798-89

DRAWBAR KIT (Optional)

Ref. No.	Part No.	Description	No. Used
1	3-3218	Hitch	1
2	328-2	Capscrew	2
3	328-24	Capscrew	4
4	26-9250	Drawbar	1

Ref. No.	Part No.	Description	No. Used
5	3253-9	Lockwasher	2
6	3217-12	Nut	2
7	3296-51	Nut	4

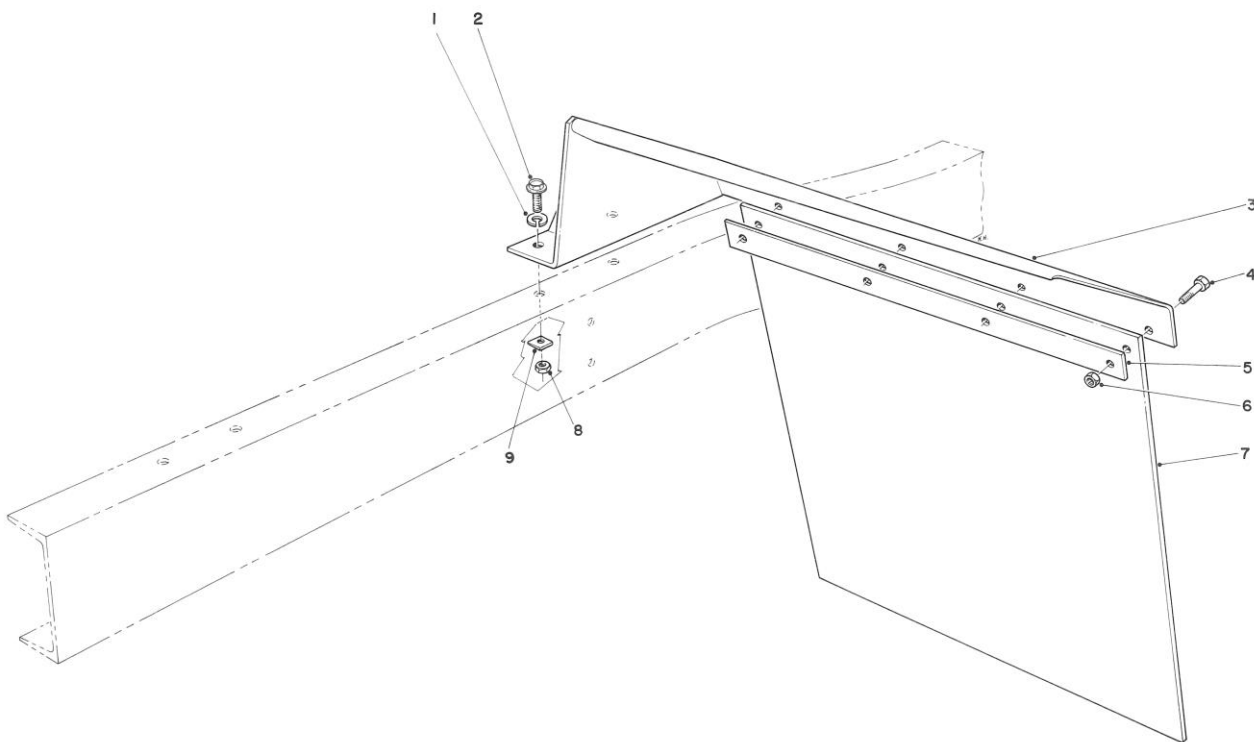 

T-0799-89

FRONT FENDER KIT NO. 70196 (Optional)


Ref. No.	Part No.	Description	No. Used
1†	3253-7	Washer — Lock	2
2	325-5	Screw Cap Hex. Hd.	4
3	10-2780	Fender L.H.	1
*	10-2770	Fender R.H.	1
4	323-6	Capscrew	8
5	10-2820	Backing Flap	2

Ref. No.	Part No.	Description	No. Used
6	32153-2	Nut	8
7	10-2810	Flap	2
8+	32153-5	Nut — Lock	2
9+	3290-216	Washer — Bevel	2

*Not Illustrated

+Right Hand Fender only.

 †Left Hand Fender only.

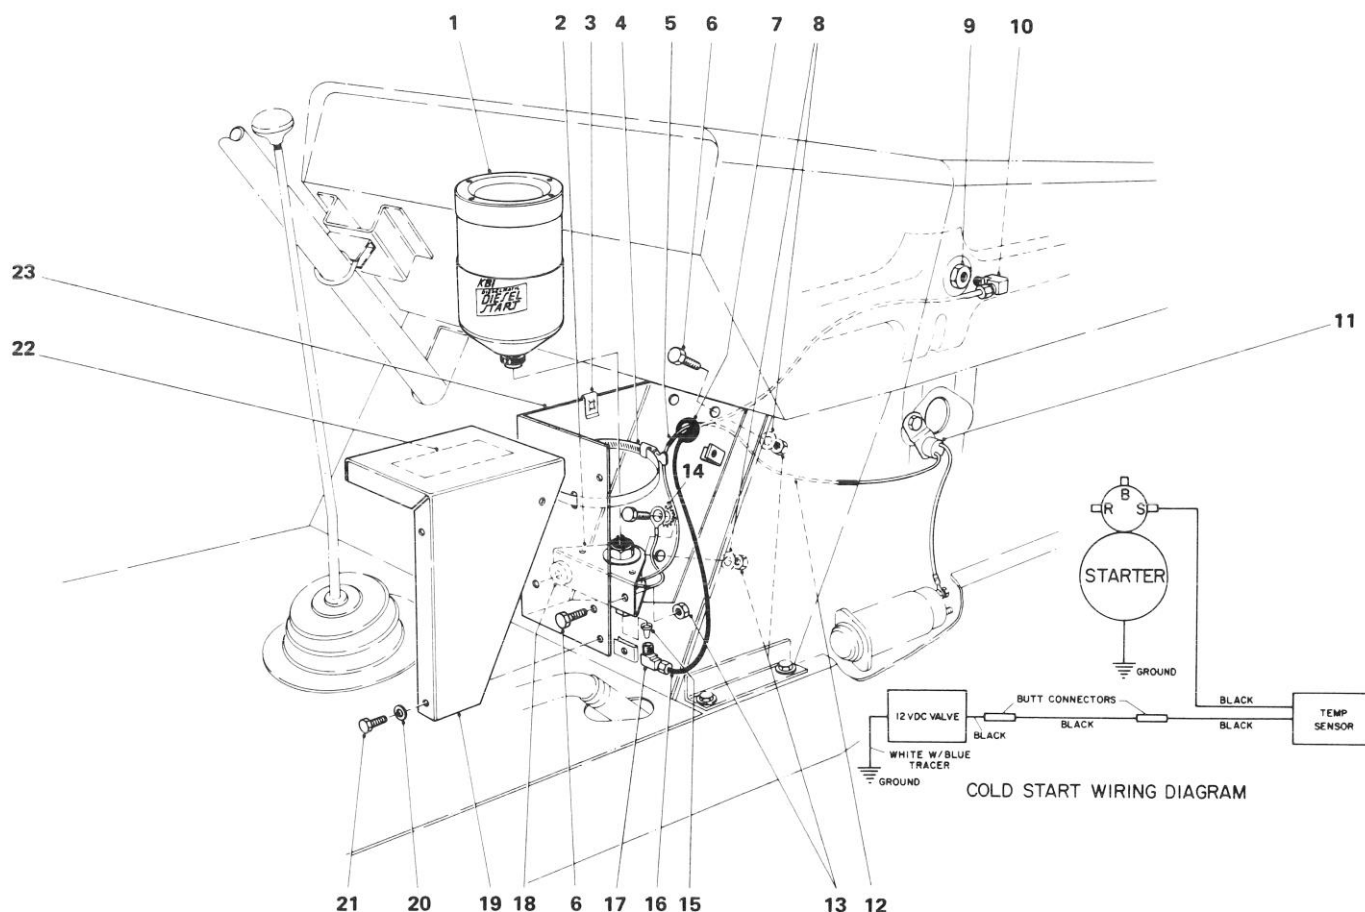


T-0817-89

COLD START KIT MODEL NO. 44-0400 (Optional) (WITHOUT CAB)

Ref. No.	Part No.	Description	No. Used
1	11-1749	Starting Fluid Canister	1
2	43-2610	Valve Assembly — 12 Volt D.C. (Incl. Ref. #15 & 17)	1
3	3290-192	Tinnerman Nut	3
4	43-2630	Clamp — Fuel Canister	1
5	218-250	Butt Connector	2
6	321-5	Hex Hd. Capscrew	6
7	237-62	Grommet	1
8	3256-1	Plain Washer	4
9	44-0170	Plug	1
10	43-7700	Nozzle — Atomizer Manifold	1
11	43-2620	Switch — Engine Temp.	1
12	43-2670	Wire — Jumper, Valve to Temp. Sensor	1

Ref. No.	Part No.	Description	No. Used
13	3296-42	Locknut	6
14	3255-7	Lockwasher, Ext. Tooth	1
15	43-7740	Filter	1
16	43-2640	Tubing — Starting Fuel	1
17	43-7610	Fitting Assembly (Incl. Ref. #15)	1
18	7-4318	Spacer	2
19	43-6920	Cover	1
20	3253-3	Lockwasher	4
21	321-2	Hex Hd. Capscrew	4
22	43-7780	Decal — Cold Start Kit	1
23	43-6930	Mounting Plate	1
*	43-2680	Cold Start Kit (Incl. Ref. #1, 2, 4, 10, 11, 16 & 22)	1
*	44-0400	Cold Start Kit — Complete	1

 *Not Illustrated

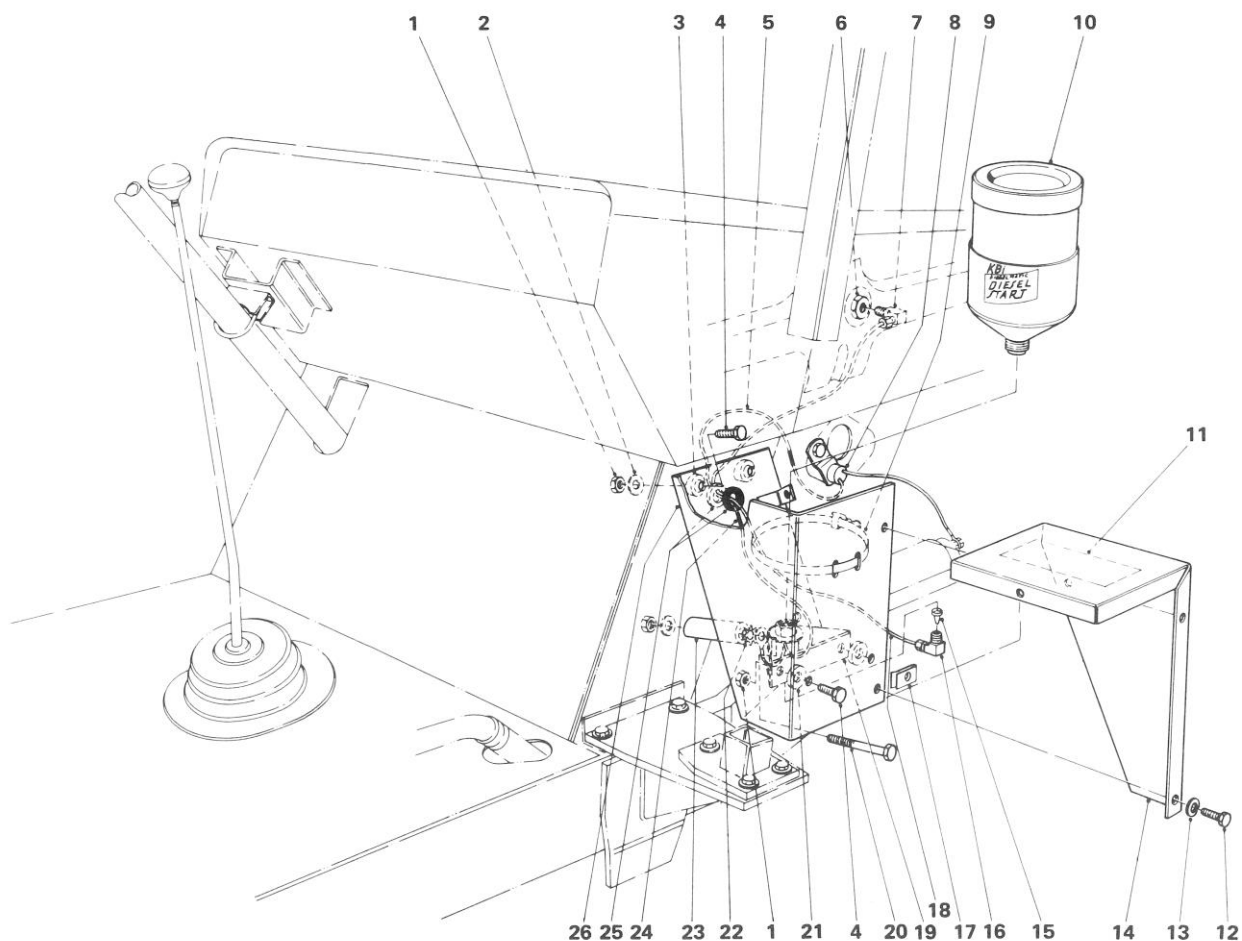


COLD START KIT MODEL NO. 44-0400 (Continued) (WITH CAB INSTALLED)

T-0818-89

Ref. No.	Part No.	Description	No. Used
1	3296-42	Locknut	5
2	3256-1	Plain Washer	3
3	44-0190	Spacer — Top	2
4	321-5	Hex Hd. Capscrew	4
5	43-2670	Wire — Jumper, Valve to Temp. Sensor	1
6	44-0170	Plug	1
7	43-7700	Nozzle — Atomizer Manifold	1
8	43-2620	Switch — Engine Temp.	1
9	43-2630	Clamp — Fuel Canister	1
10	11-1749	Starting Fluid Canister	1
11	43-7780	Decal — Cold Start Kit	1
12	321-2	Hex Hd. Capscrew	4
13	3253-3	Lockwasher	4
14	43-6920	Cover	1

Ref. No.	Part No.	Description	No. Used
15	43-7740	Filter	1
16	43-7610	Fitting Assembly (Incl. Ref. #15)	1
17	3290-192	Tinnerman Nut	3
18	43-2640	Tubing — Starting Fuel	1
19	43-2610	Valve Assembly — 12 Volt D.C. (Incl. Ref. #15 & 16)	1
20	321-19	Hex Hd. Capscrew	1
21	7-4318	Spacer	2
22	3255-7	Lockwasher, Ext. Tooth	1
23	44-0180	Spacer — Bottom	1
24	218-250	Butt Connector	2
25	237-62	Grommet	2
26	43-6930	Mounting Plate	1
*	43-2680	Cold Start Kit (Incl. Ref. #7-11, 18 & 19)	1
*	44-0400	Cold Start Kit — Complete	1

 *Not Illustrated

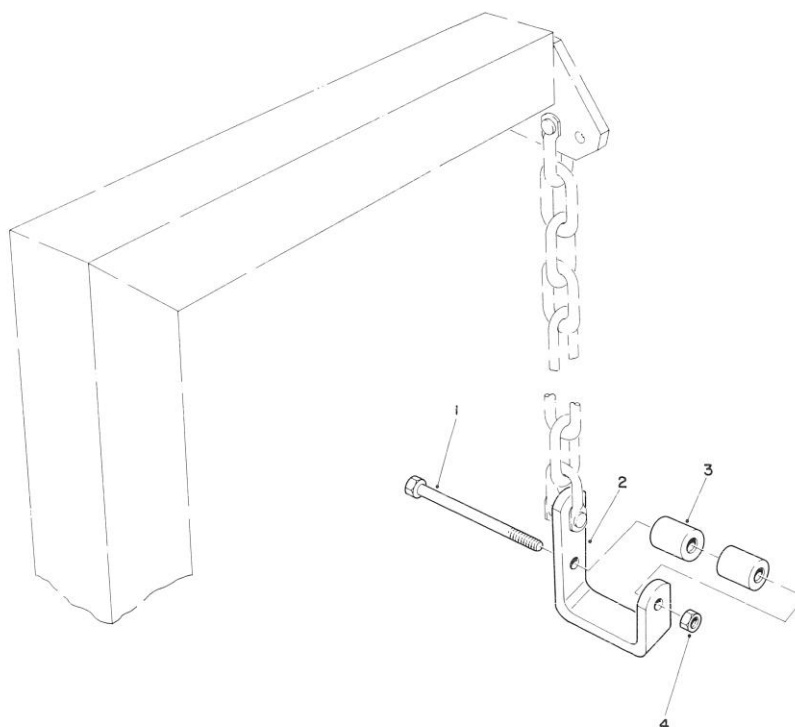

T-0800-89

18" WHEEL, REELMASTER & SPARTAN MOWER CONVERSION KIT NO. 51-3080 (Optional) (FOR CUTTING UNITS #6 & #7 ONLY)

Ref. No.	Part No.	Description	No. Used
1	323-16	Screw — Cap Hex. Hd.	2
2	51-3180	Bracket — Lift	2

Ref. No.	Part No.	Description	No. Used
3	51-3170	Spacer	4
4	3296-44	Nut — Lock	2

MAINTENANCE RECORD

[illegible]

IDENTIFICATION AND ORDERING

Model and Serial Numbers

The Tractor has two identification numbers: a model number and a serial number. The two numbers are stamped on a plate which is located on right side of toe board. In any correspondence concerning the Tractor, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Distributor, supply the following information:

1. Model and serial numbers of the Tractor.
2. Part number, description, and quantity of part(s) desired.

Note: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor for information and part numbers.

INDEX

Description	Page	Description	Page
Hood Assembly	1	Rear Tires and Wheels 7.50 x 16 Field Installed Kit	
Dash Assembly	2	No. 70230	31
Electrical Schematic (12 Volt Negative Ground)	3	Rear Tires and Wheels 8.00 x 16 Field Installed Kit	
Radiator and Fuel Tank Assembly	4-5	70200	32
Toe Board and Battery Assembly	6	Steering Assembly	33
Brake, Clutch, Throttle Controls	7-8	Steering Gear 39-7330	34-35
Frame Assembly	9	Seat Assembly (60-9070) and Suspension	
Front Axle Assembly	10	Assembly (46-3430)	36
Front Wheel and Tire 9.5 L-14	11	Valve Cover and Shield Assembly	37
Engine Mounting Components	12	Valve Bank and Hoses	38
Engine Assembly	13-14	Hydraulic Valve Assembly No. 44-7701	39
Pivot Shaft and Arm Assembly	15	Drawbar Assembly No. 1, 2 and 3 Position	40
Engine Exhaust Assembly	16	Main Frame Assembly — Front	41
Starter Motor Assembly No. 49-8050	17	Main Frame Assembly — Front Center	42-43
62 Amp. Alternator Assembly No. 60-9660	18	Main Frame Assembly — Rear	44-45
42 Amp. Alternator Assembly No. 39-7370	19	10" (22-7520) and 12" (22-7530) Cylinders	46
Hydraulic Pump and Reservoir	20	Drawbar Assembly	47
Hydraulic Pump Assembly No. 38-9630	21	Light & Road Kit No. 38-6310 (Optional).....	48-49
Clutch Assembly No. 20-0450	22	Drawbar Kit (Optional)	50
Transmission Assembly No. 44-1160	23-24	Front Fender Kit No. 70196 (Optional).....	51
Transmission Cover	25	Cold Start Kit Model No. 44-0400	52-53
Parking Brake Assembly	26	18" Wheel, Reelmaster & Spartan Mower Conversion	
Rear Axle (36-9830) and Drive Line (44-1430)	27-28	Kit No. 51-3080 (Optional).....	54
Rear Brake Assembly			
(37-1010 R.H. & 37-1020 L.H.)	29-30		