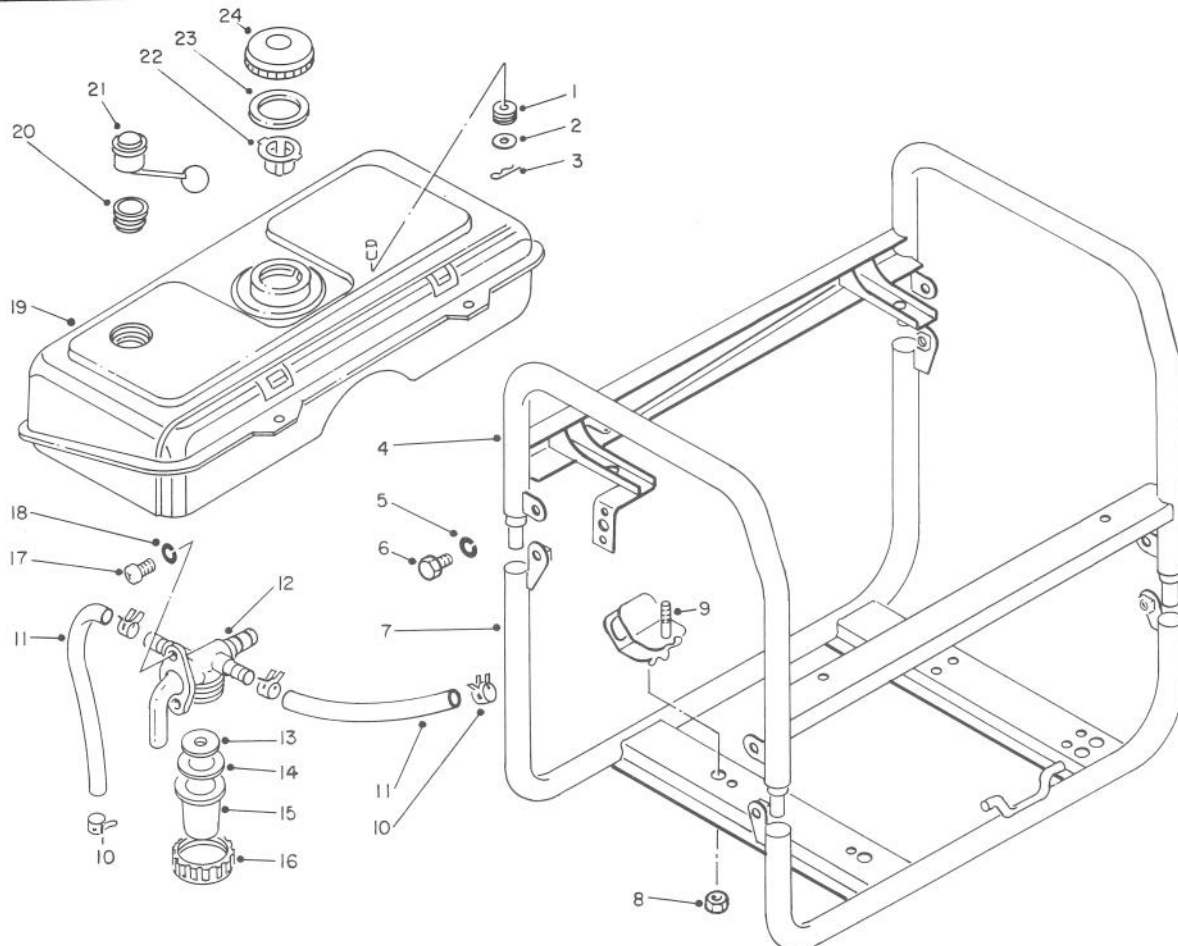


TORO[®]

MODEL NO. 62012-8000001 & up


**PARTS
CATALOG****T 1200 GENERATOR****FUEL TANK & FRAME ASSEMBLY**

C-0083-88

Ref. No.	Part No.	Description	No. Used
1	50-0890	Cushion	4
2	50-0760	Washer	4
3	50-0970	Clip	4
4	55-0270	Frame — Upper	1
5	81-1120	Washer — Lock	12
6	50-0050	Bolt	4
7	55-0280	Frame — Lower	1
8	81-1110	Nut	8
9	55-0290	Mounting — Engine	4
10	50-0990	Clip	4
11	50-0930	Hose — Fuel	2
12	50-3750	Filter	1
13	50-3770	Gasket	1
14	50-3780	Cup	1

Ref. No.	Part No.	Description	No. Used
15	50-3760	Cap	1
16	50-3740	Cock Assembly — Fuel (Incl. Ref. #12-15)	1
17	50-0240	Screw	2
18	81-1420	Washer — Lock	2
19	55-0250	Tank — Fuel	1
20	50-3850	Gasket	1
21	50-3830	Gauge Assembly — Fuel (Incl. Ref. #20)	1
22	55-0260	Filter	1
23	53-1420	Gasket	1
24	50-3700	Cap (Incl. Ref. #23)	1
*	50-1230	Tool	1

*Not Illustrated

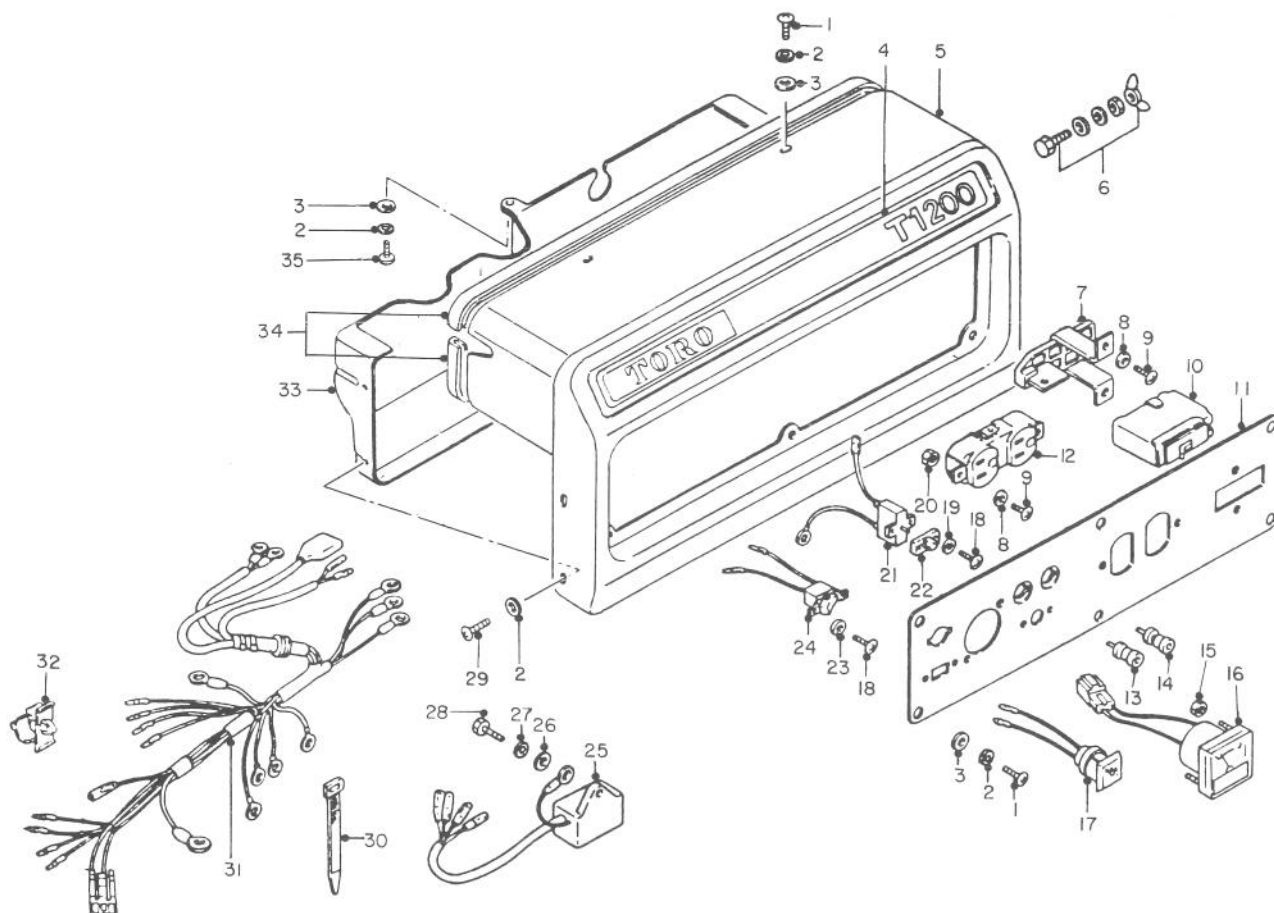


CONTROL PANEL ASSEMBLY

C-0084-88

Ref. No.	Part No.	Description	No. Used
1	50-0280	Screw	11
2	81-1380	Washer — Lock	16
3	50-0610	Washer	12
4	55-1150	Emblem — Toro	1
5	55-0450	Panel — Control	1
6	50-4530	Terminal — Ground	1
7	50-4380	Holder — Breaker	1
8	55-0540	Washer	4
9	53-1080	Screw	4
10	55-1160	Circuit Breaker	1
11	55-0480	Plate — Panel	1
12	50-4490	Receptacle	1
13	55-0560	Terminal — Minus	1
14	55-0550	Terminal — Plus	1
15	50-0490	Nut	2
16	50-3470	Meter — Voltage (150V)	1
17	55-0500	Lamp — Oil Level Alarm	1
18	50-6760	Screw	4

Ref. No.	Part No.	Description	No. Used
19	55-1170	Washer — Lock	2
20	50-0500	Nut	2
21	55-2690	Circuit Breaker — D.C.	1
22	50-8720	Cap	1
23	50-6750	Washer	2
24	50-4350	Switch — Engine	1
25	50-3550	Oil Alarm Unit	1
26	50-0620	Washer	1
27	81-1450	Washer — Lock	1
28	50-0020	Bolt	1
29	55-0470	Screw	4
30	50-1100	Clamp	3
31	55-0570	Harness — Control	1
32	55-0580	Clamp	1
33	55-0460	Panel — Rear	1
34	50-4300	Seal — Panel	2
35	50-0290	Screw	1

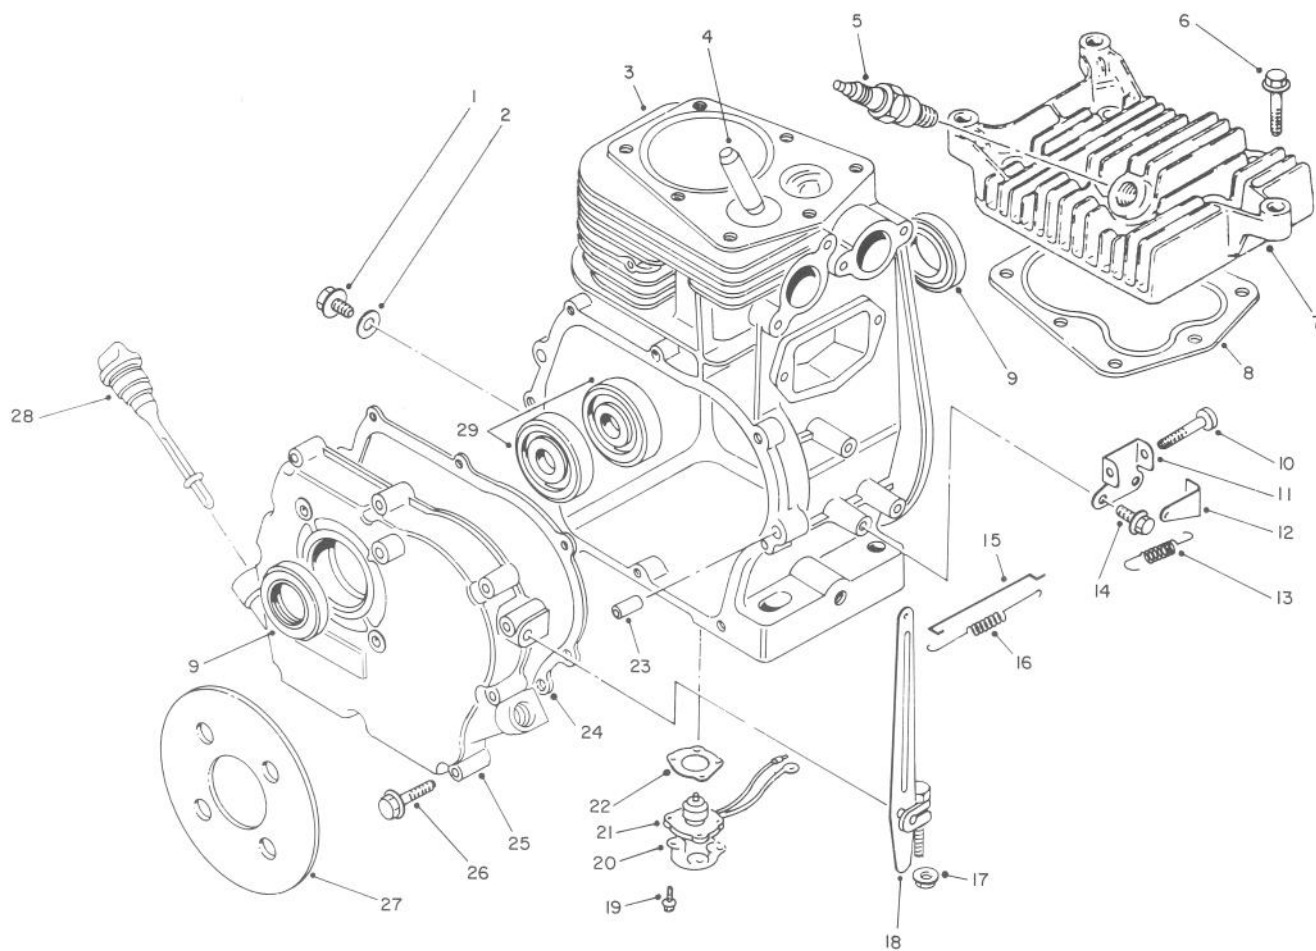


ENGINE ASSEMBLY

C-0085-88

Ref. No.	Part No.	Description	No. Used
1	53-0970	Plug — Drain	1
2	50-0800	Gasket	1
3	53-0950	Cylinder	1
4	50-1350	Guide — Valve	2
5	50-1160	Spark Plug (NKG, BP-5HS)	1
6	50-0190	Bolt	7
7	50-1260	Cylinder Head	1
8	50-1290	Gasket	1
9	50-0870	Oil Seal	2
10	50-0680	Screw	1
11	50-3260	Bracket — Governor Spring	1
12	50-3230	Hook — Spring	1
13	50-1150	Spring	1
14	53-1340	Bolt	2
15	50-3300	Rod — Carburetor	1

Ref. No.	Part No.	Description	No. Used
16	50-1130	Spring	1
17	50-7180	Nut	1
18	53-1060	Lever — Control	1
19	50-6190	Bolt	4
20	50-3540	Plate — Lead Cord	1
21	55-0030	Sensor — Oil Level	1
22	50-3520	Gasket	1
23	81-0520	Pin	2
24	50-1430	Gasket — Crankcase	1
25	53-0990	Cover — Crankcase Side	1
26	81-0550	Bolt	8
27	50-3970	Seat — Joint	1
28	50-1450	Gauge — Oil Level	1
29	50-0830	Bearing	2
*	50-1510	Gasket Set	1

*Not Illustrated

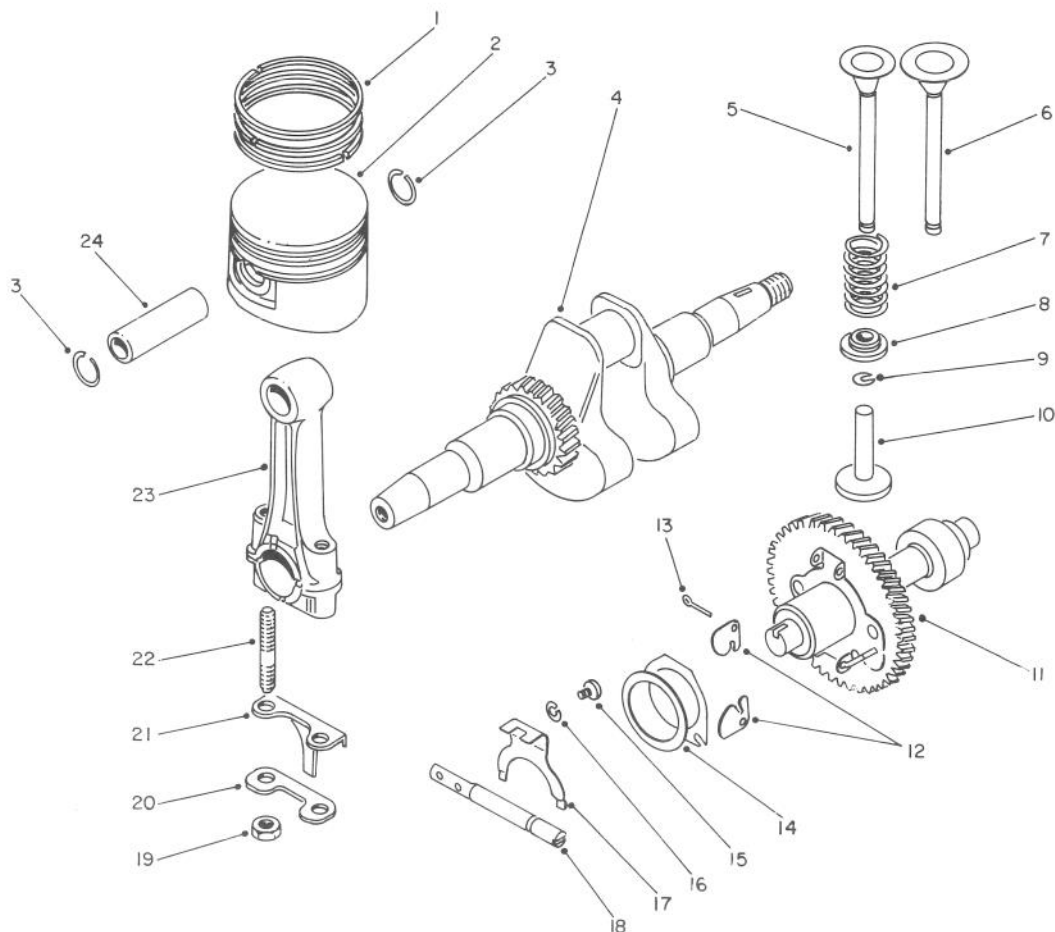


CRANKSHAFT & CAMSHAFT ASSEMBLY

C-0086-88

Ref. No.	Part No.	Description	No. Used
1	50-1740	Ring Set — Piston Std.	1
*	50-1750	Ring Set — Piston (O.S. 0.25)	1
*	50-1760	Ring Set — Piston (O.S. 0.5)	1
2	50-1650	Piston Std.	1
*	50-1660	Piston (O.S. 0.25)	1
*	50-1670	Piston (O.S. 0.5)	1
3	50-0960	Circlip	2
4	55-1040	Crankshaft	1
5	50-2110	Valve — Exhaust	1
6	50-2080	Valve — Intake	1
7	50-2120	Spring — Valve	2
8	50-2140	Retainer — Spring	2
9	50-2160	Cotter — Valve	2
10	50-2030	Tappet (L:36.46)	2
*	50-2040	Tappet (L:36.39)	2
*	50-2050	Tappet (L:36.53)	2
11	50-1950	Cam Shaft	1

Ref. No.	Part No.	Description	No. Used
12	50-3070	Arm	14
13	50-0430	Cotter Pin	2
14	50-3110	Spacer — Governor	1
15	50-0220	Screw	2
16	50-0590	Washer	2
17	50-3150	Plate — Sifter	1
18	50-3130	Shaft — Throttle Return	1
19	50-0510	Nut	2
20	50-1890	Plate — Lock	1
21	50-1870	Plate — Lock	1
22	50-0670	Stud Bolt	2
23	50-1840	Rod — Connecting (Std.) (Incl. Ref. #19-22)	1
*	53-1100	Rod — Connecting (Optional) (Incl. Ref. #19-22)	1
24	50-1800	Pin — Piston	1

*Not Illustrated

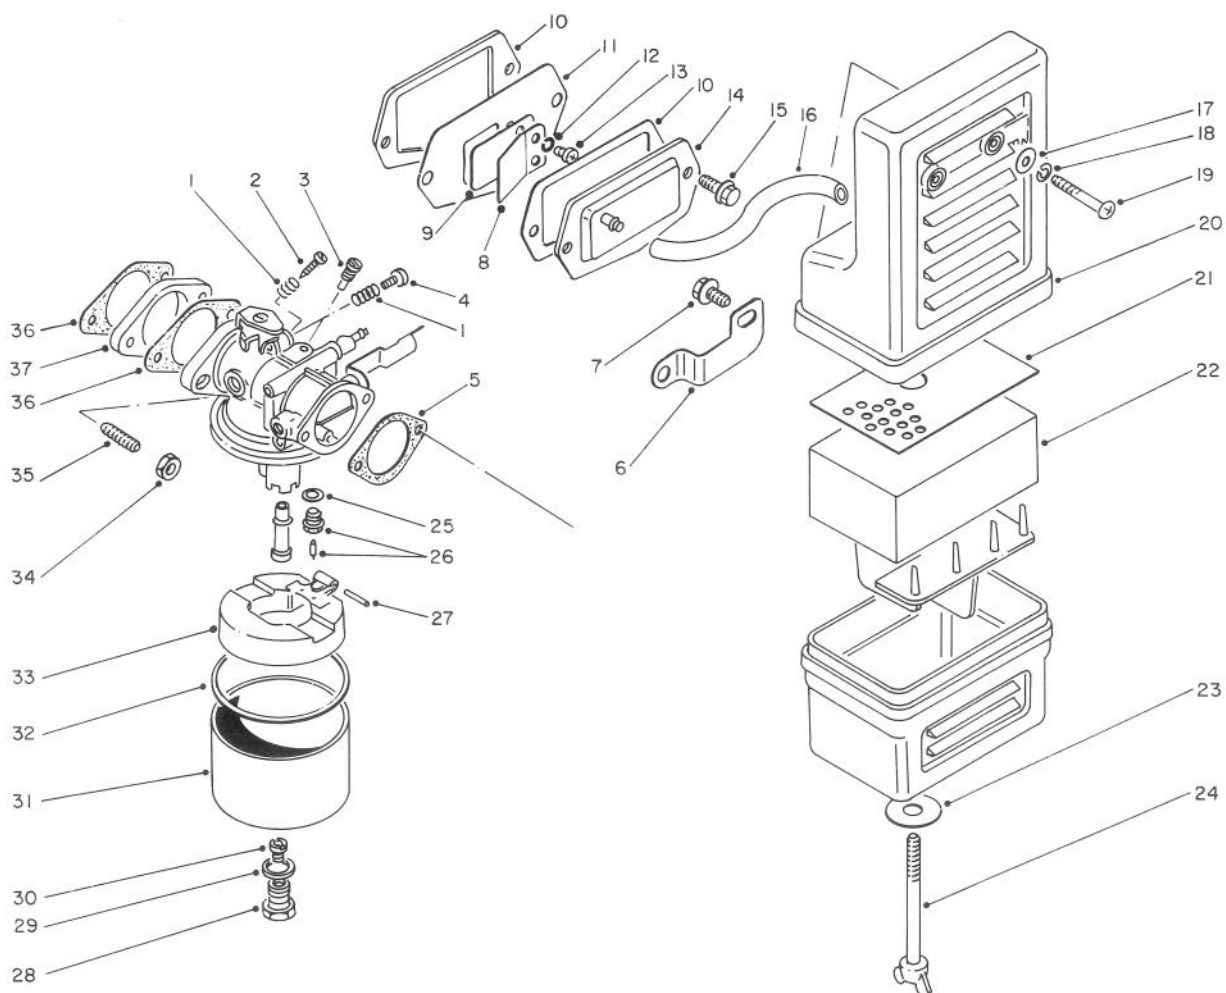


AIR CLEANER — CARBURETOR ASSEMBLY

C-0087-88

Ref. No.	Part No.	Description	No. Used
1	81-2580	Spring	2
2	50-2360	Adjuster	1
3	50-1220	Jet — Pilot (42.5)	1
4	50-0250	Screw — Throttle Stop	1
5	50-2530	Gasket — Air Cleaner	1
6	50-2520	Bracket — Air Cleaner	1
7	53-1340	Bolt	2
8	53-1150	Stopper	1
9	53-1140	Reed Valve	1
10	50-1540	Gasket	2
11	50-1560	Reed Valve Assembly (Incl. Ref.#8, 9, 12, & 13)	1
12	50-0560	Lockwasher	2
13	50-0210	Screw	2
14	50-1520	Cap — Breather	1
15	55-0100	Bolt	2
16	50-0940	Pipe — Breather	1
17	50-0610	Washer	2
18	81-1380	Lockwasher	2
19	50-0330	Screw	2

Ref. No.	Part No.	Description	No. Used
20	50-2410	Air Cleaner Assembly (Incl. Ref. #21-24)	1
21	50-2490	Holder	1
22	50-2470	Filter	1
23	50-2570	Washer	1
24	50-2550	Bolt — Wing	1
25	50-2400	Gasket	1
26	50-2390	Valve — Needle	1
27	50-2310	Pin	1
28	50-2370	Bolt	1
29	55-2860	Gasket	1
30	55-1050	Jet — Main (75)	1
31	55-3470	Carburetor Assembly (Incl. Ref. #25-30 & 32-33)	1
32	50-2290	Gasket	1
33	55-0130	Float	1
34	50-7180	Nut	2
35	50-0080	Bolt — Stud	2
36	53-1240	Gasket	2
37	53-1250	Insulator	1

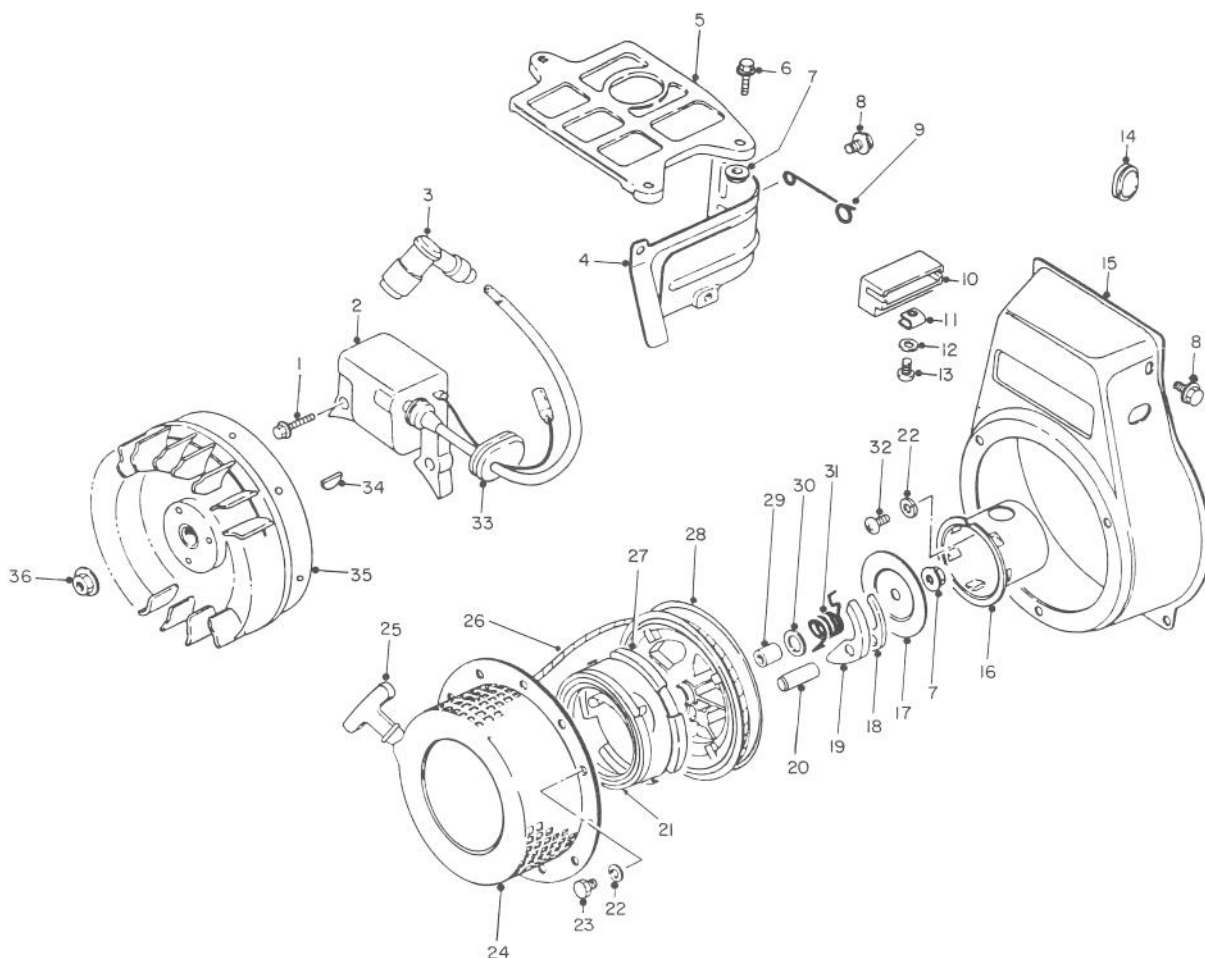


RECOIL STARTER — MAGNETO

C-0088-88

Ref. No.	Part No.	Description	No. Used
1	50-6230	Bolt	2
2	53-1360	Coil — Primary	1
3	50-3450	Cap — Spark Plug	1
4	50-2780	Cowling — Ventilation Side	1
5	50-2810	Cowling — Ventilation Upper	1
6	81-0530	Bolt	3
7	50-7180	Nut	4
8	53-1340	Bolt	7
9	50-1030	Clamp	1
10	55-0230	Holder — Lead Connector	1
11	55-0240	Nut	1
12	50-0600	Washer	1
13	81-1410	Screw	1
14	53-0870	Plug — High Tension Cord Hole	1
15	53-1480	Cover — Cooling Fan	1
16	55-1070	Pulley — Starter	1
17	50-2920	Plate	1
18	50-2880	Ratchet	1

Ref. No.	Part No.	Description	No. Used
19	55-0170	Ratchet	1
20	55-0180	Pin	1
21	50-2900	Spring	1
22	81-1450	Washer — Lock	6
23	50-0650	Bolt	3
24	55-0160	Starter Assembly — Recoil (Incl. Ref. #7,17-23 & 25-31)	1
25		Grip	1
26	50-2990	Grip Assembly (Incl. Ref. #25)	1
27	55-0190	Case — Spring	1
28	50-2860	Reel	1
29	50-2970	Cover	1
30	50-2980	Slide Plate	1
31	50-2940	Spring	1
32	50-0380	Screw	3
33	53-1370	Grommet	1
34	50-0640	Key	1
35	53-1350	Flywheel	1
36	50-7880	Nut	1

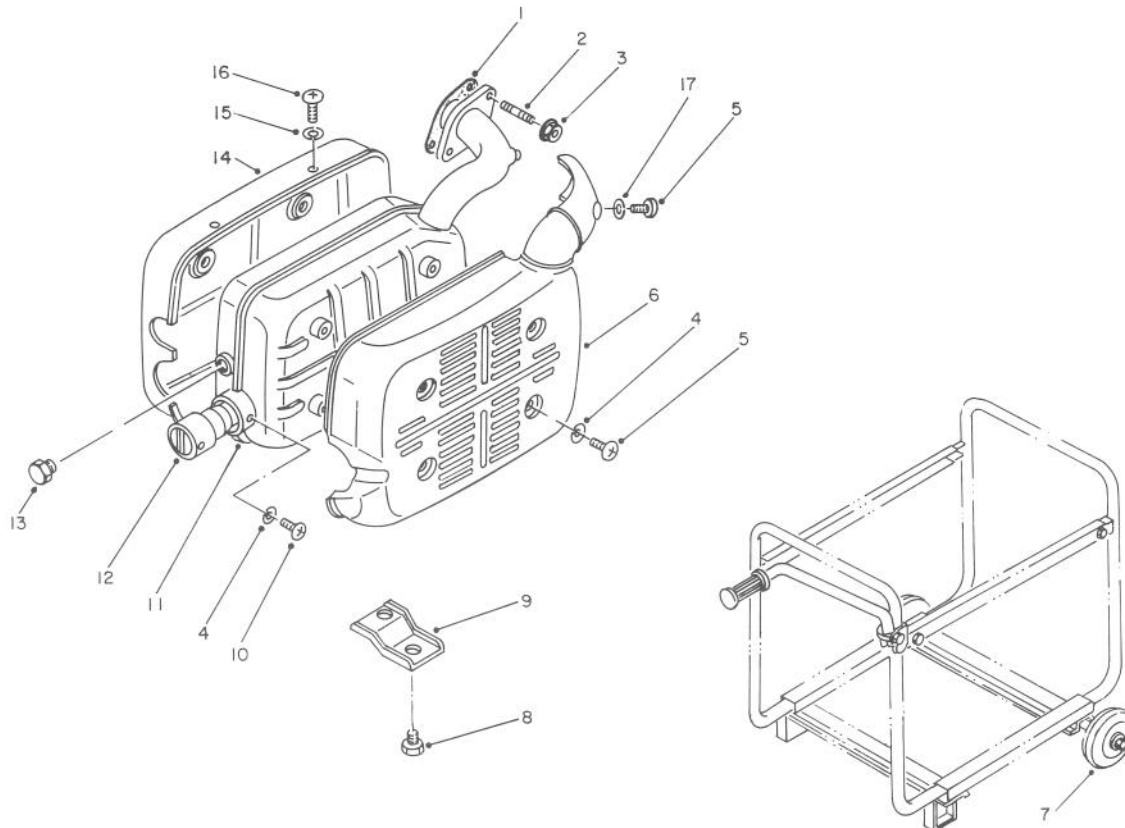


MUFFLER — EXHAUST ASSEMBLY

C-0089-88

Ref. No.	Part No.	Description	No. Used
1	50-2590	Gasket — Exhaust	1
2	50-0100	Stud Bolt	2
3	50-0530	Nut	2
4	81-1450	Washer — Lock	1
5	81-1140	Screw	9
6	50-2660	Cover — Front	1
7	50-3660	Wheel Assembly (Optional)	1
8	50-7260	Bolt	1

Ref. No.	Part No.	Description	No. Used
9	55-1060	Bracket — Muffler	1
10	50-0350	Screw	1
11	50-2630	Muffler	1
12	50-2700	Tube — Clean Out	1
13	50-2640	Plug — Drain	2
14	50-2690	Cover — Rear	1
15	81-1420	Washer — Lock	3
16	50-0230	Screw	3
17	81-1450	Lockwasher	9

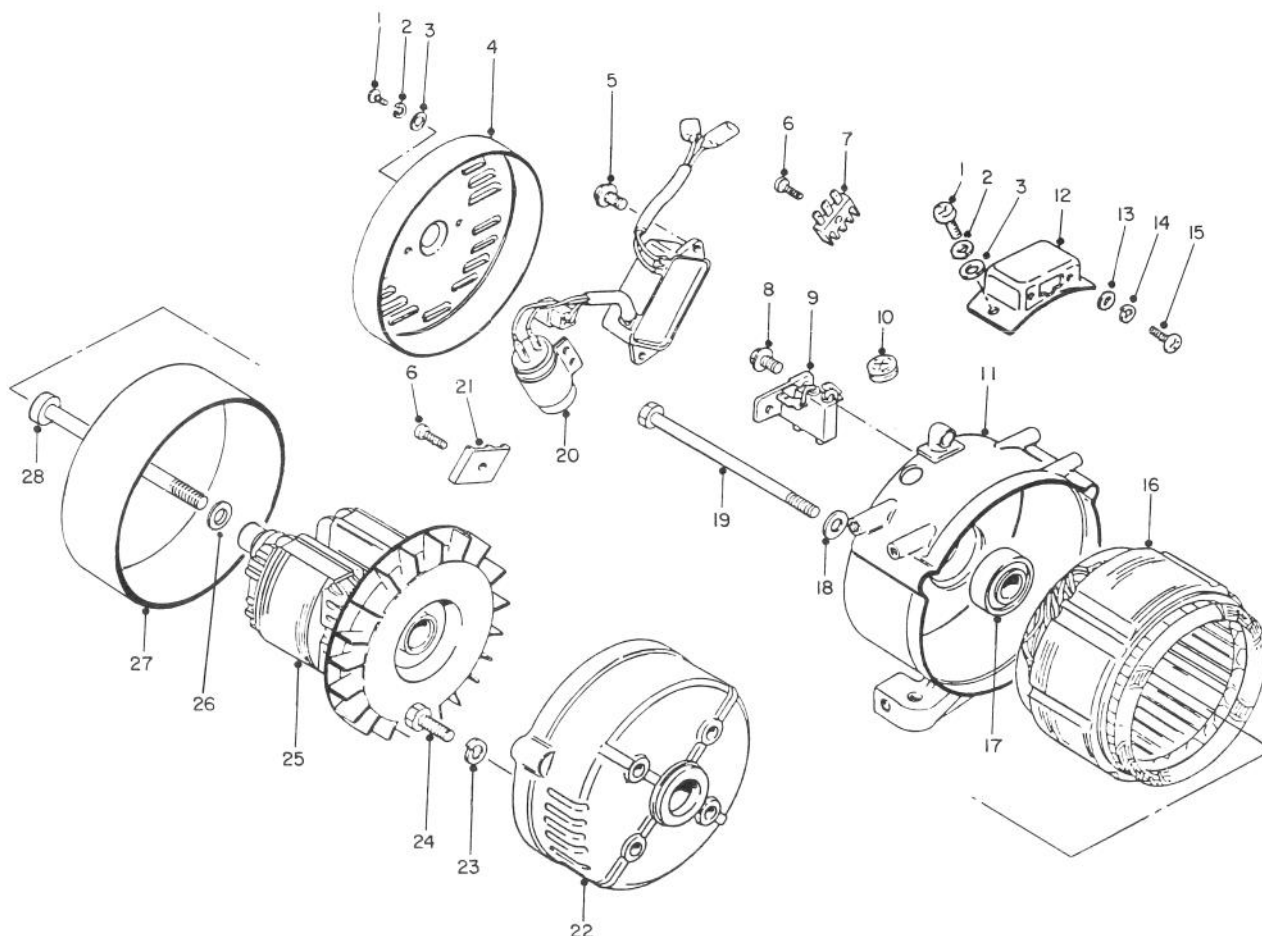

GENERATOR ASSEMBLY

C-0090-88

Ref. No.	Part No.	Description	No. Used
1	50-0280	Screw	4
2	81-1380	Washer — Lock	4
3	50-0610	Washer	4
4	55-0380	Cover — Rear	1
5	55-0370	Bolt	2
6	50-0300	Screw	2
7	50-8980	Diode	1
8	55-0350	Bolt	1
9	55-0340	Holder — Brush	1
10	55-0420	Grommet	1
11	55-0310	Bracket — Rear	1
12	55-0410	Cover — Coupler	1
13	50-0590	Washer	2
14	50-0560	Washer — Lock	2
15	50-0220	Screw	2

Ref. No.	Part No.	Description	No. Used
16	55-1130	Stator (120V)	1
17	55-1100	Bearing	1
18	50-0620	Washer	3
19	55-1120	Bolt	3
20	55-0360	Regulator — Voltage	1
21	55-0390	Terminal	1
22	55-0440	Bracket — Front	1
23	50-5730	Washer — Lock	4
24	50-0070	Bolt	4
25	55-1090	Rotor	1
26	50-9010	Washer	1
27	55-1140	Cover	1
28	55-1110	Bolt	1
*	55-1080	Generator Assembly (Incl. Ref. #1-28)	1

*Not Illustrated