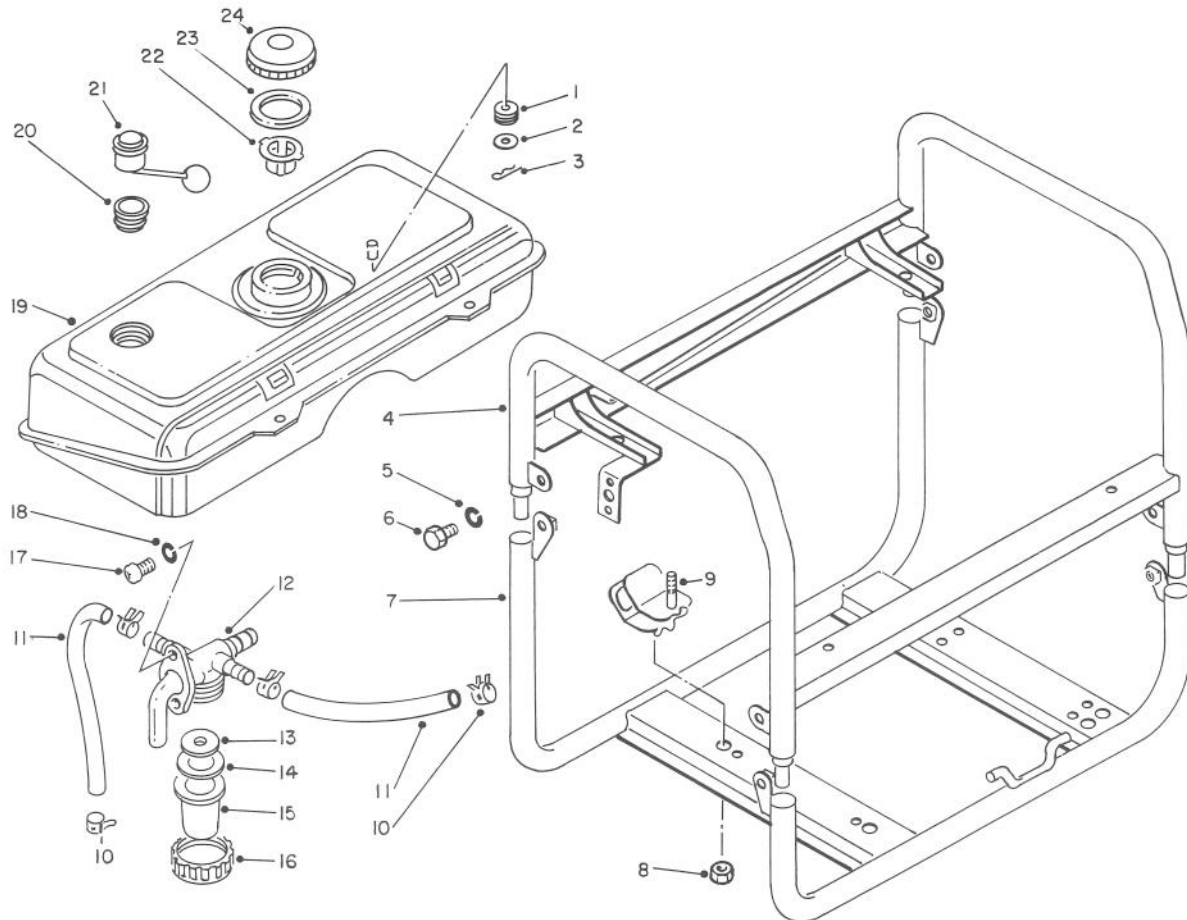


TORO[®]

MODEL NO. 62018-8000001 & up


**PARTS
CATALOG****T 1800 GENERATOR****FUEL TANK & FRAME ASSEMBLY**

C-0091-88

Ref. No.	Part No.	Description	No. Used
1	50-0890	Cushion	4
2	50-0760	Washer	4
3	50-0970	Clip	4
4	55-0270	Frame — Upper	1
5	81-1120	Washer — Lock	4
6	50-0050	Bolt	4
7	55-0280	Frame — Lower	1
8	50-0530	Nut	8
9	55-0290	Mount — Engine	4
10	50-0990	Clip	4
11	50-0930	Hose — Fuel	2
12	50-3740	Cock Assembly — Fuel (Incl. Ref. #13-16)	1
13	50-3750	Filter	1

Ref. No.	Part No.	Description	No. Used
14	50-3770	Gasket	1
15	50-3780	Cup	1
16	50-3760	Cap	1
17	50-0240	Screw	2
18	81-1420	Washer — Lock	2
19	55-0250	Tank — Fuel	1
20	50-3850	Gasket	1
21	50-3830	Gauge Assembly — Fuel (Incl. Ref. #20)	1
22	55-0260	Filter	1
23	53-1420	Gasket	1
24	50-3700	Cap (Incl. Ref. #23)	1
*	50-1230	Tool Assembly	1

*Not Illustrated

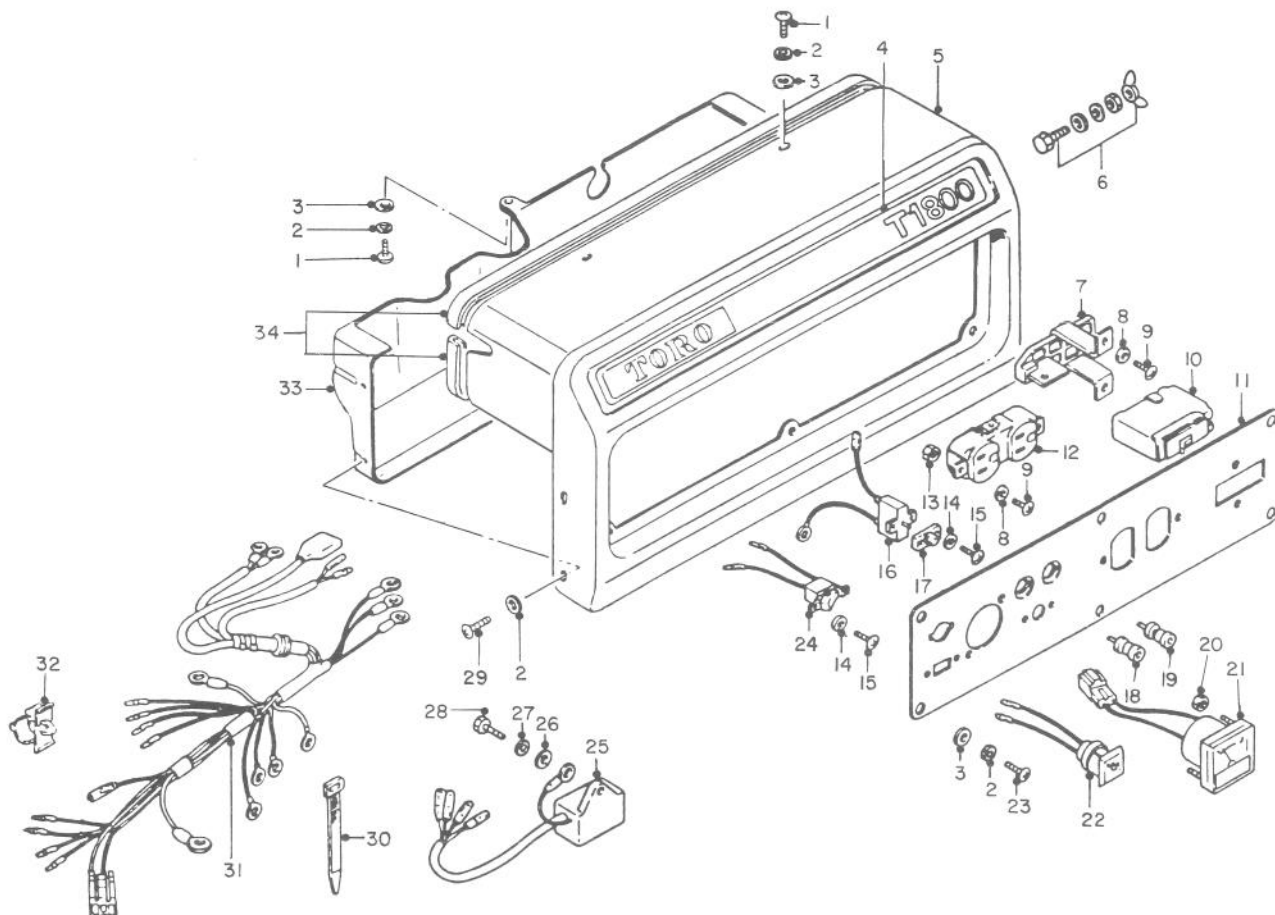


CONTROL PANEL ASSEMBLY

C-0092-88

Ref. No.	Part No.	Description	No. Used
1	50-0280	Screw	6
2	81-1380	Washer — Lock	16
3	50-0610	Washer	12
4	55-0490	Emblem — Toro T1800	1
5	55-0450	Panel — Control	1
6	50-4530	Terminal — Ground	1
7	50-4380	Holder — Breaker	1
8	55-0540	Washer	4
9	53-1080	Screw	4
10	55-0520	Circuit Breaker	1
11	55-0480	Plate — Panel	1
12	50-4490	Receptacle	1
13	50-0500	Nut	2
14	50-6750	Washer	4
15	50-6760	Screw	4
16	55-2690	Circuit Breaker D.C.	1
17	50-8720	Cap	1

Ref. No.	Part No.	Description	No. Used
18	55-0560	Terminal — Minus	1
19	55-0550	Terminal — Plus	1
20	50-0490	Nut	2
21	50-3470	Meter — Voltage (150V)	1
22	55-0500	Lamp — Oil Level Alarm	1
23	50-0270	Screw	6
24	50-4350	Switch — Engine	1
25	50-3550	Unit — Oil Level Alarm	1
26	50-0620	Washer	1
27	81-1450	Washer — Lock	1
28	50-0020	Bolt	1
29	55-0470	Screw	4
30	50-1100	Clamp	3
31	55-0570	Harness — Control	1
32	55-0580	Clamp	1
33	50-0460	Panel — Rear	1
34	50-5590	Seal — Panel	2

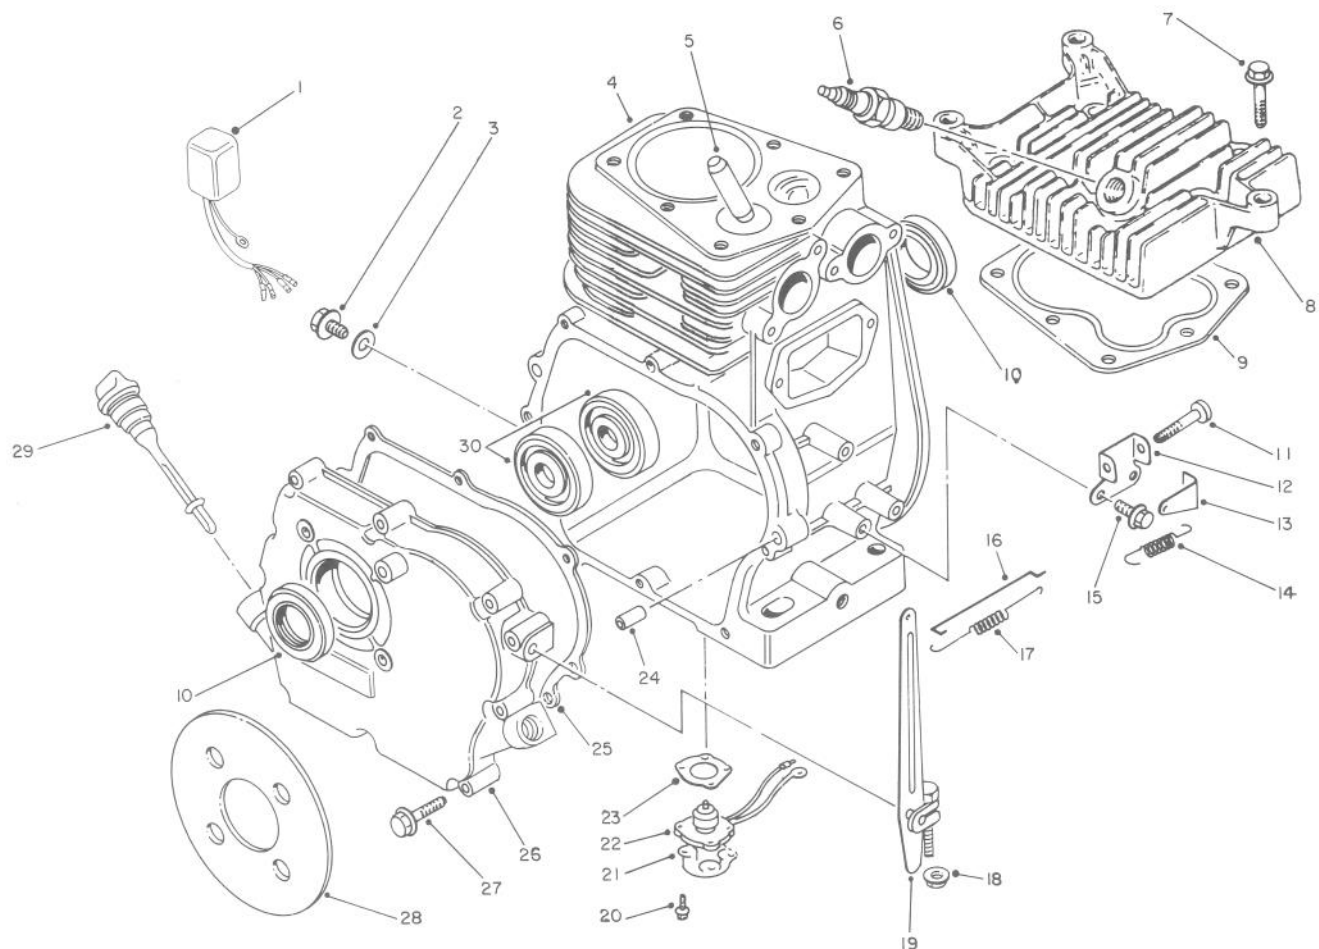


ENGINE ASSEMBLY

C-0093-88

Ref. No.	Part No.	Description	No. Used
1	50-3550	Unit — Oil Level Alarm	1
2	53-0970	Plug — Drain	1
3	50-0800	Gasket	1
4	55-1200	Cylinder	1
5	50-6110	Guide — Valve	2
6	50-1160	Spark Plug (NKG, BP-5HS)	1
7	50-0190	Bolt	7
8	50-1250	Cylinder Head	1
9	50-1280	Gasket	1
10	50-0870	Oil Seal	2
11	50-0680	Screw	1
12	50-3260	Bracket — Governor Spring	1
13	50-3210	Hook — Spring	1
14	50-1150	Spring	1
15	53-1340	Bolt	2
16	50-3280	Rod — Carburetor	1

Ref. No.	Part No.	Description	No. Used
17	50-1130	Spring	1
18	50-7180	Nut	1
19	55-0050	Lever — Control	1
20	50-6190	Bolt	4
21	50-3540	Plate — Lead Wire	1
22	55-0030	Sensor — Oil Level	1
23	50-3520	Gasket	1
24	81-0520	Pin	2
25	55-0020	Gasket — Crankcase	1
26	55-0040	Cover — Crankcase Side	1
27	81-0550	Bolt	8
28	50-3970	Seat — Joint	1
29	53-0120	Gauge — Oil Level	1
30	50-0830	Bearing	2
*	55-0060	Gasket Set (Optional)	1

*Not Illustrated

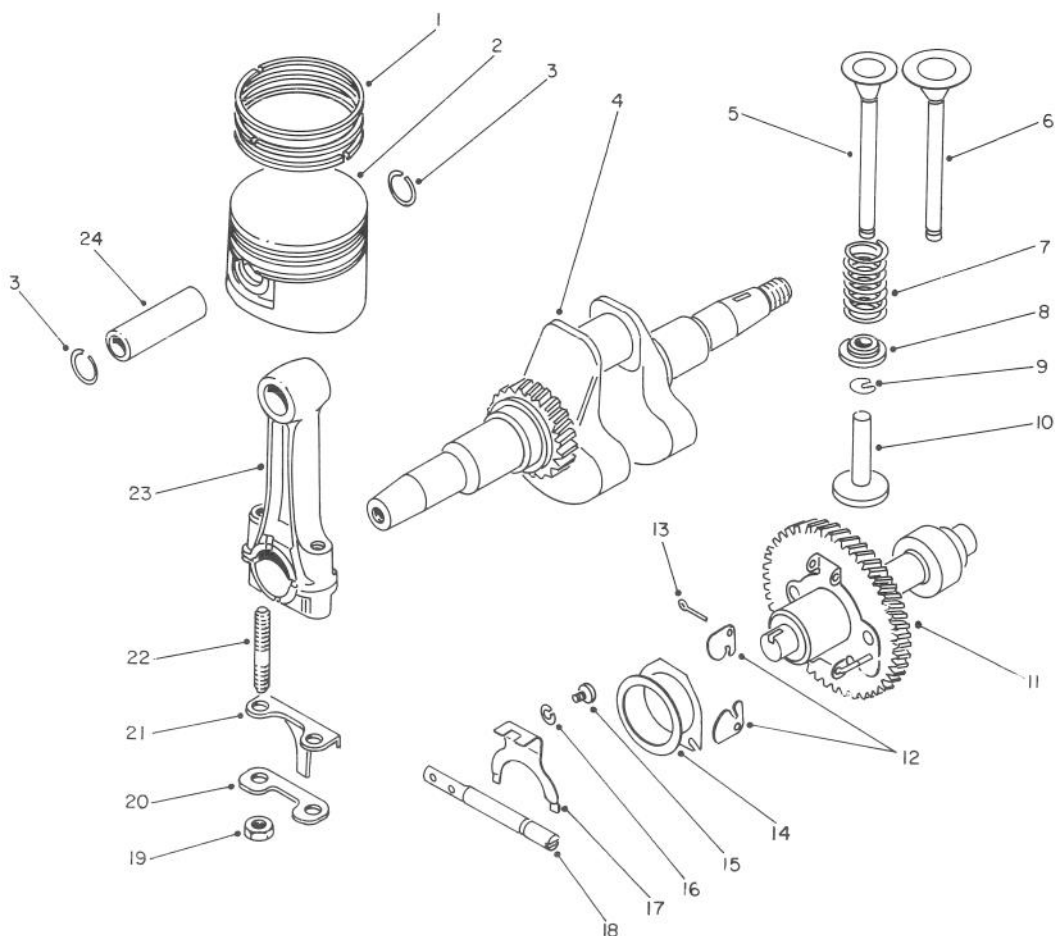


CRANKSHAFT & CAM SHAFT ASSEMBLY

C-0094-88

Ref. No.	Part No.	Description	No. Used
1	50-1710	Ring Set — Piston Std.	1
*	50-1720	Ring Set — Piston (O.S:0.25)	1
*	50-1730	Ring Set — Piston (O.S:0.5)	1
2	50-1620	Piston Std.	1
*	50-1630	Piston (O.S:0.25)	1
*	50-1640	Piston (O.S:0.5)	1
3	50-0960	Circlip	2
4	55-0090	Crankshaft	1
5	50-2090	Valve — Exhaust	1
6	50-2060	Valve — Intake	1
7	50-2120	Spring — Valve	2
8	50-2140	Retainer — Spring	2
9	50-2160	Cotter — Valve	2
10	50-1970	Tappet (L:40.26)	2
*	50-1980	Tappet (L:40.19)	2
*	50-1990	Tappet (L:40.33)	2
11	50-1940	Cam Shaft	1

Ref. No.	Part No.	Description	No. Used
12	50-3070	Arm	14
13	50-0430	Cotter Pin	2
14	50-3110	Spacer — Governor	1
15	50-0220	Screw	2
16	50-0590	Washer	2
17	50-3150	Plate — Shifter	1
18	50-3130	Shaft — Throttle Return	1
19	50-0510	Nut	2
20	50-1890	Plate — Lock	1
21	55-0080	Plate — Splash	1
22	50-0670	Stud Bolt	2
23	50-1820	Rod — Connecting (Incl.) Ref. #19-22)	1
*	50-1820	Rod — Connecting (US:0.5) (Incl. Ref. #19-22)	1
24	50-1800	Pin — Piston	1

*Not Illustrated

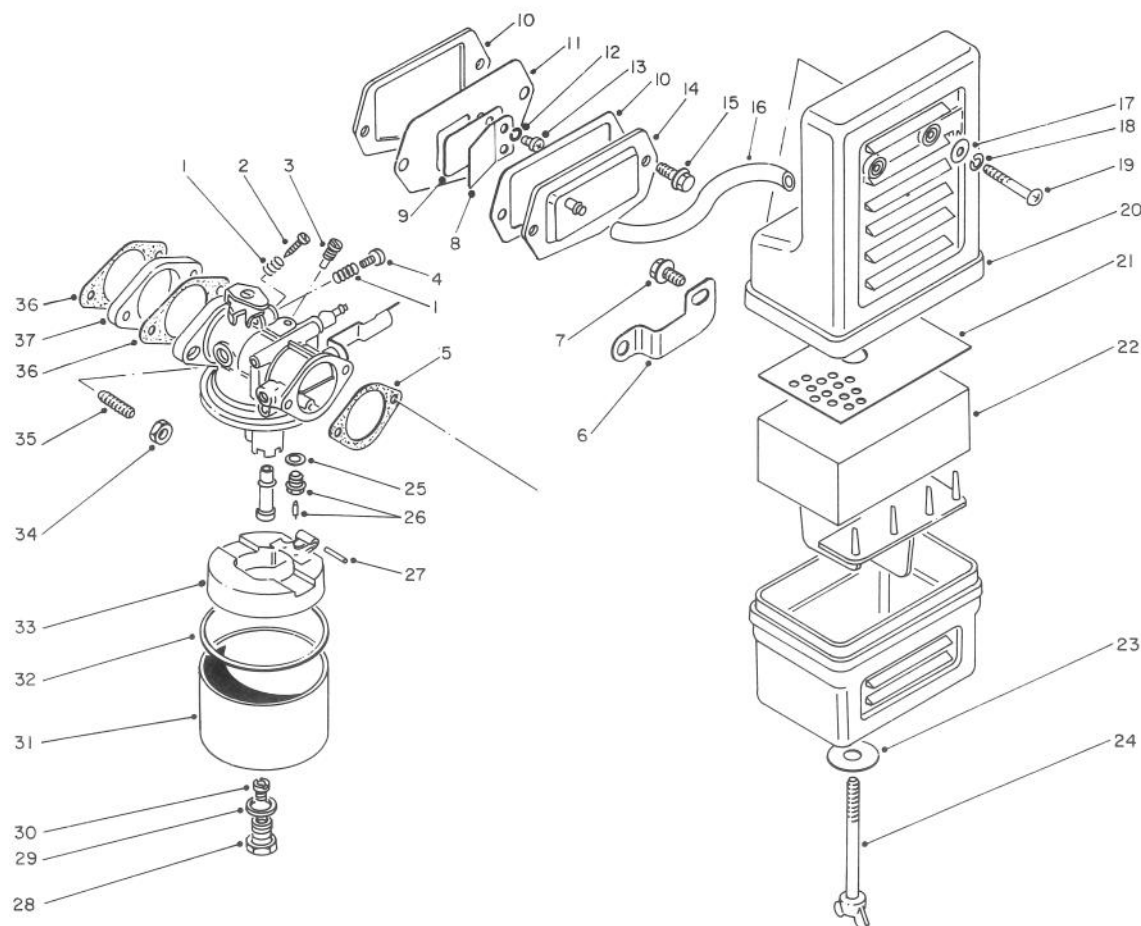


AIR CLEANER & CARBURETOR ASSEMBLY

C-0095-88

Ref. No.	Part No.	Description	No. Used
1	81-2580	Spring	2
2	50-2360	Adjuster	1
3	50-1220	Jet — Pilot (42.5)	1
4	50-0250	Screw — Throttle Stop	1
5	50-2530	Gasket — Air Cleaner	1
6	50-2510	Bracket — Air Cleaner	1
7	53-1340	Bolt	2
8	53-1150	Stopper	1
9	53-1140	Reed Valve	1
10	50-1540	Gasket	2
11	50-1560	Reed Valve Assembly (Incl. Ref. #8-10)	1
12	50-0560	Washer — Lock	2
13	50-0120	Screw	2
14	50-1520	Cap — Breather	1
15	55-0100	Bolt	2
16	55-0110	Pipe — Air Breather	1
17	50-0610	Washer	2
18	81-1380	Washer - Lock	2
19	50-0330	Screw	2

Ref. No.	Part No.	Description	No. Used
20	50-2410	Cleaner — Air	1
21	50-2490	Holder	1
22	50-2470	Filter	1
23	50-2570	Washer	1
24	50-2550	Bolt — Wing	1
25	50-2400	Gasket	1
26	50-2390	Valve — Needle	1
27	50-2310	Pin	1
28	50-2370	Bolt	1
29	55-2860	Gasket	1
30	55-0140	Jet — Main	1
31	55-0120	Carburetor Assembly (Incl. Ref. #25-30 & 32 & 33)	1
32	50-2290	Gasket	1
33	55-0130	Float	1
34	50-7180	Nut	2
35	50-0080	Stud Bolt	2
36	50-2180	Gasket — Carburetor	2
37	50-2200	Insulator	1

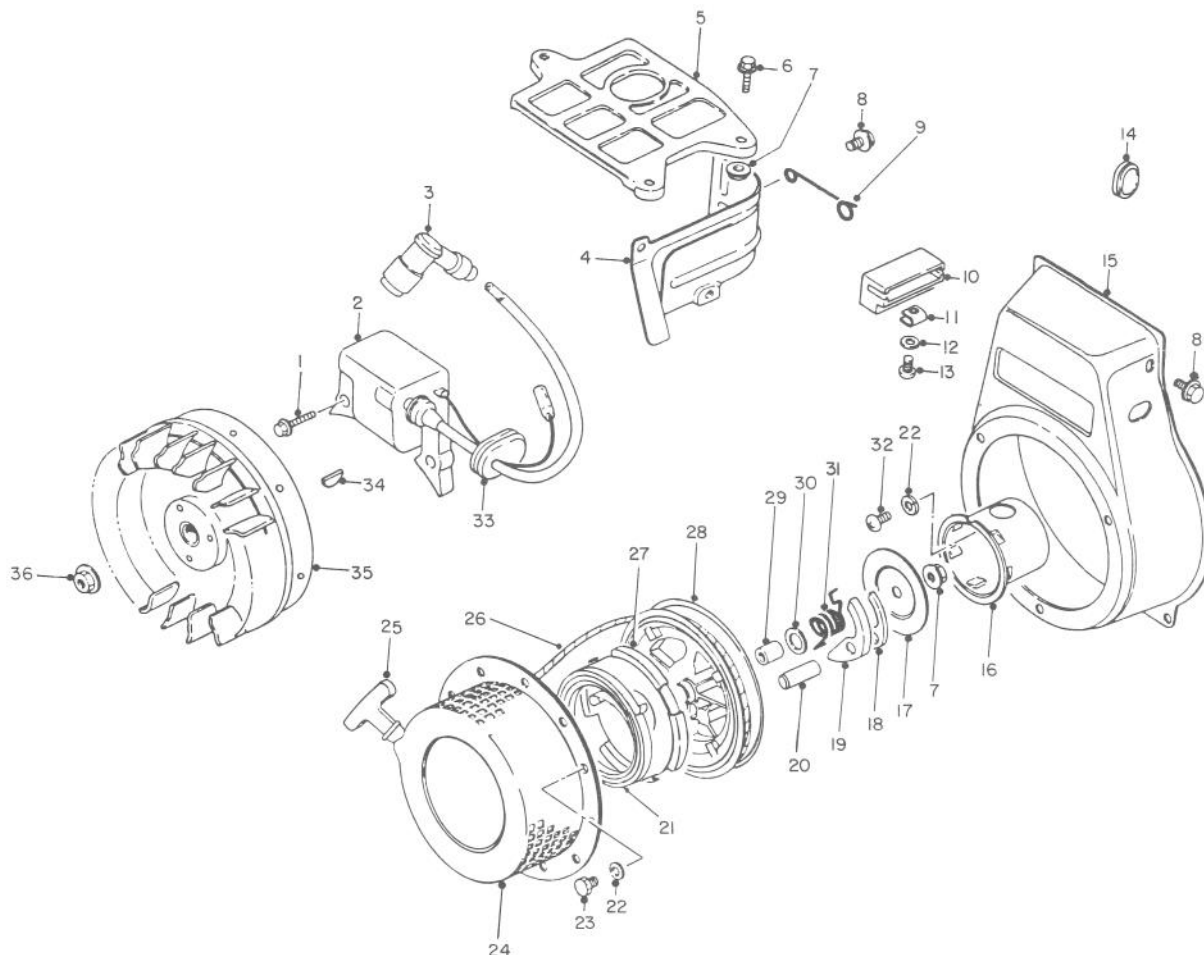


REWIND STARTER & MAGNETO ASSEMBLY

C-0096-88

Ref. No.	Part No.	Description	No. Used
1	50-6230	Bolt	2
2	53-1360	Coil — Primary	1
3	50-3450	Cap — Spark Plug	1
4	50-2770	Cowling — Side	1
5	50-2800	Cowling — Upper	1
6	81-0530	Bolt	3
7	50-7180	Nut	4
8	53-1340	Bolt	6
9	50-1030	Clamp	1
10	55-0230	Holder — Lead Connector	1
11	55-0240	Nut	1
12	50-0600	Washer	1
13	81-1410	Screw	1
14	55-0220	Plug — High Tension Cord Hole	1
15	55-0210	Cover — Cooling Fan	1
16	55-0200	Pulley — Starter	1
17	50-2920	Plate	1
18	50-2880	Ratchet	1
19	55-0170	Ratchet	1

Ref. No.	Part No.	Description	No. Used
20	55-0180	Pin	1
21	50-2900	Spring	1
22	81-1450	Washer — Lock	6
23	50-0650	Bolt	3
24	55-0160	Starter Assembly — Recoil (Incl. Ref. #7, 17-23 & 25-31)	1
25	50-2990	Grip Assembly (Incl. Ref. #26)	1
26		Rope	1
27	55-0190	Case — Spring	1
28	50-2860	Reel	1
29	50-2970	Cover	1
30	50-2980	Slide Plate	1
31	50-2940	Spring	1
32	50-0380	Screw	3
33	53-1370	Grommet	1
34	50-0640	Key	1
35	53-1350	Flywheel	1
36	50-7880	Nut	1

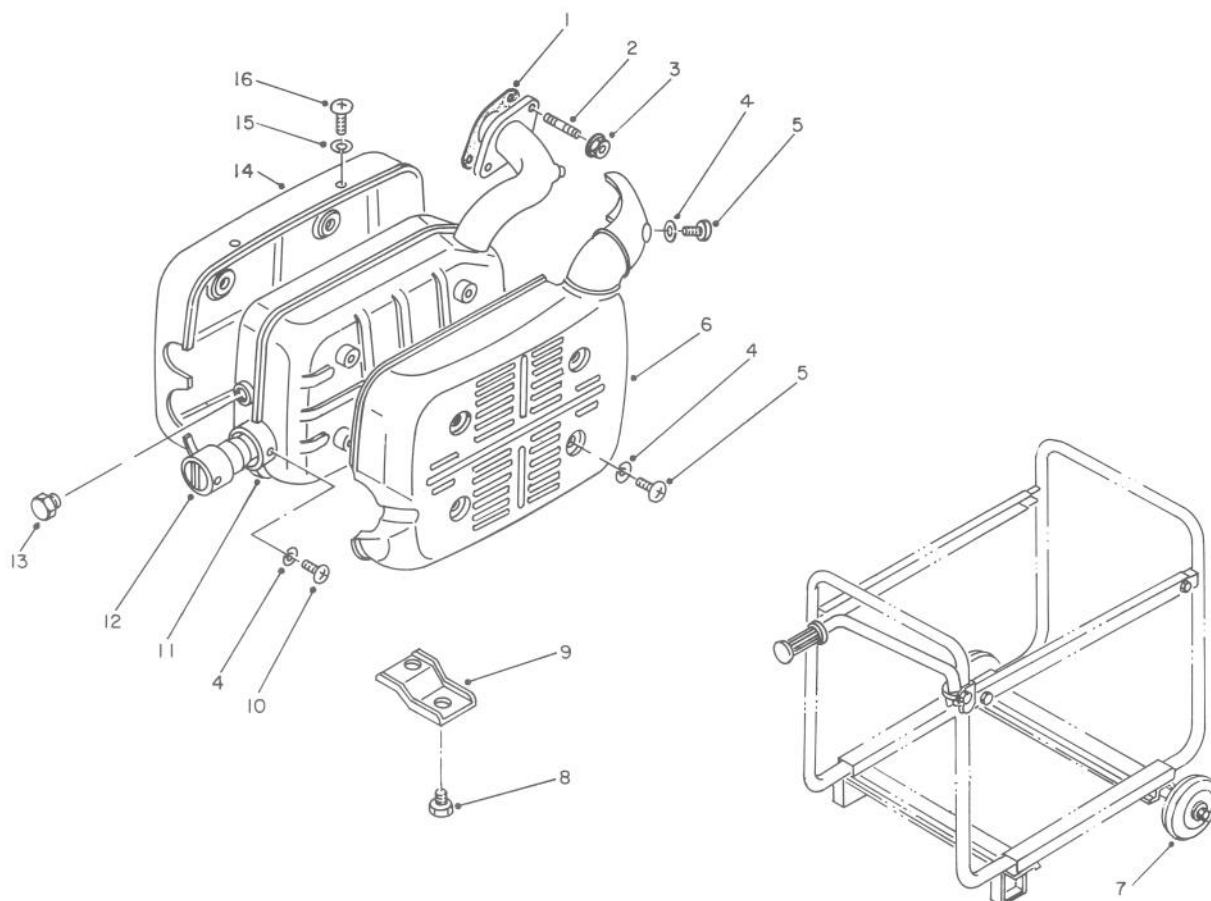


MUFFLER ASSEMBLY

C-0097-88

Ref. No.	Part No.	Description	No. Used
1	50-2590	Gasket — Exhaust	1
2	50-0100	Stud Bolt	2
3	50-0530	Nut	2
4	81-1450	Washer — Lock	10
5	81-1140	Screw	9
6	50-2660	Cover — Front	1
7	50-3660	Wheel Assembly (Optional)	2
8	50-7260	Bolt	1

Ref. No.	Part No.	Description	No. Used
9	55-0150	Bracket	1
10	50-0350	Screw	1
11	50-2630	Muffler	1
12	50-2700	Tube — Clean Out	1
13	50-2640	Plug — Drain	2
14	50-2690	Cover — Rear	1
15	81-1420	Washer — Lock	3
16	50-0230	Screw	3

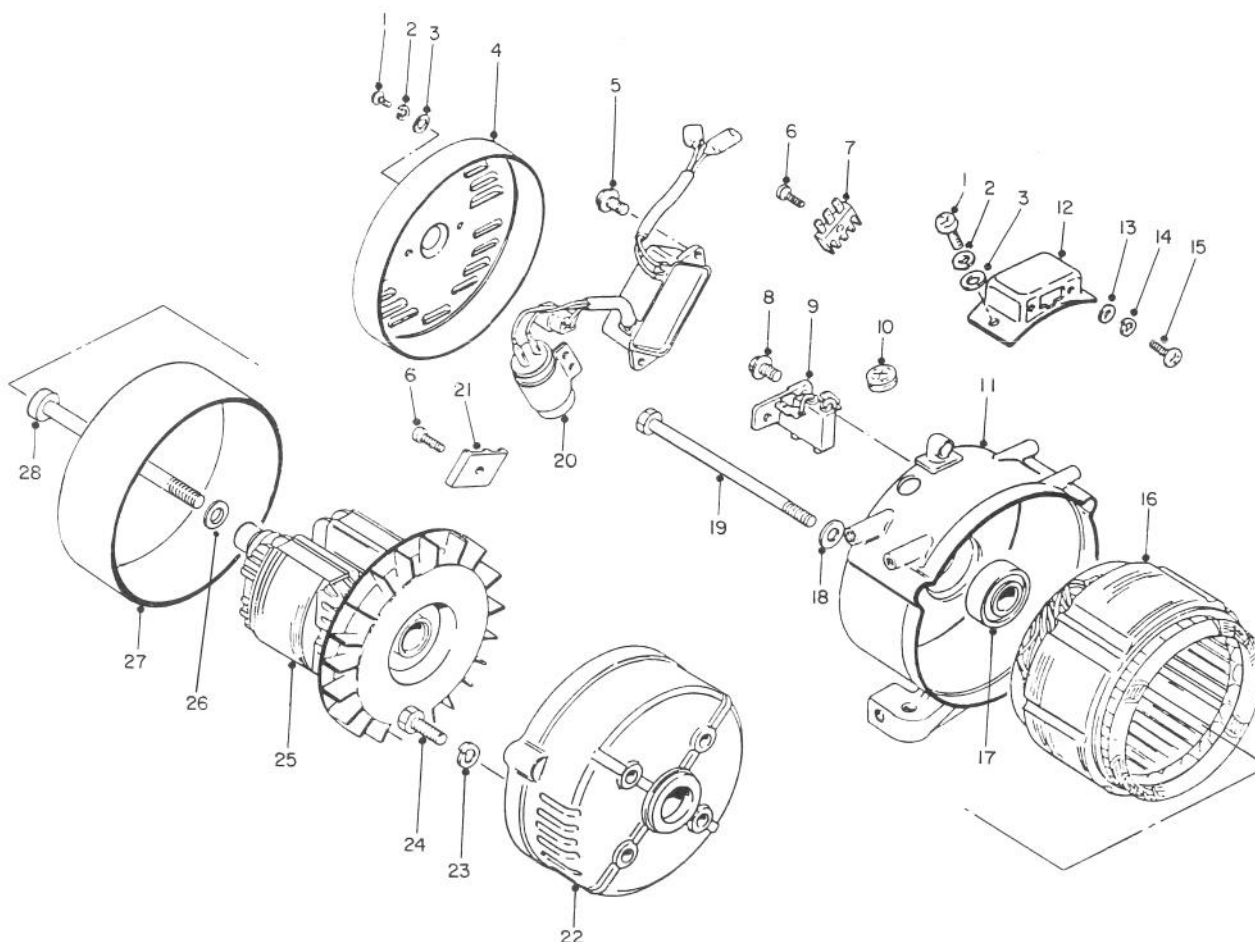

GENERATOR ASSEMBLY

C-0098-88

Ref. No.	Part No.	Description	No. Used
1	50-0280	Screw	4
2	81-1380	Washer — Lock	4
3	50-0610	Washer	4
4	55-0380	Cover — Rear	1
5	55-0370	Bolt	2
6	50-0300	Screw	2
7	50-8980	Diode	1
8	55-0350	Bolt	1
9	55-0340	Holder — Brush	1
10	55-0420	Grommet	1
11	55-0310	Bracket — Rear	1
12	55-0410	Cover — Coupler	1
13	50-0590	Washer	2
14	50-0560	Washer — Lock	2
15	50-0220	Screw	2

Ref. No.	Part No.	Description	No. Used
16	55-0430	Stator (120V)	1
17	50-9070	Bearing	1
18	81-1450	Washer	3
19	55-0400	Bolt	3
20	55-0360	Regulator — Voltage	1
21	55-0390	Terminal	1
22	55-0440	Bracket — Front	1
23	50-5730	Washer — Lock	4
24	50-0070	Bolt	4
25	55-0320	Rotor	1
26	50-9010	Washer	1
27	55-0300	Generator Assembly (Incl. Ref. #1-26 & 28)	1
28	55-3480	Bolt	1
*	57-5880	Voltage Regulator (For Models 013576 & Up)	1

*Not Illustrated
AL-881949-R

Litho U.S.A.