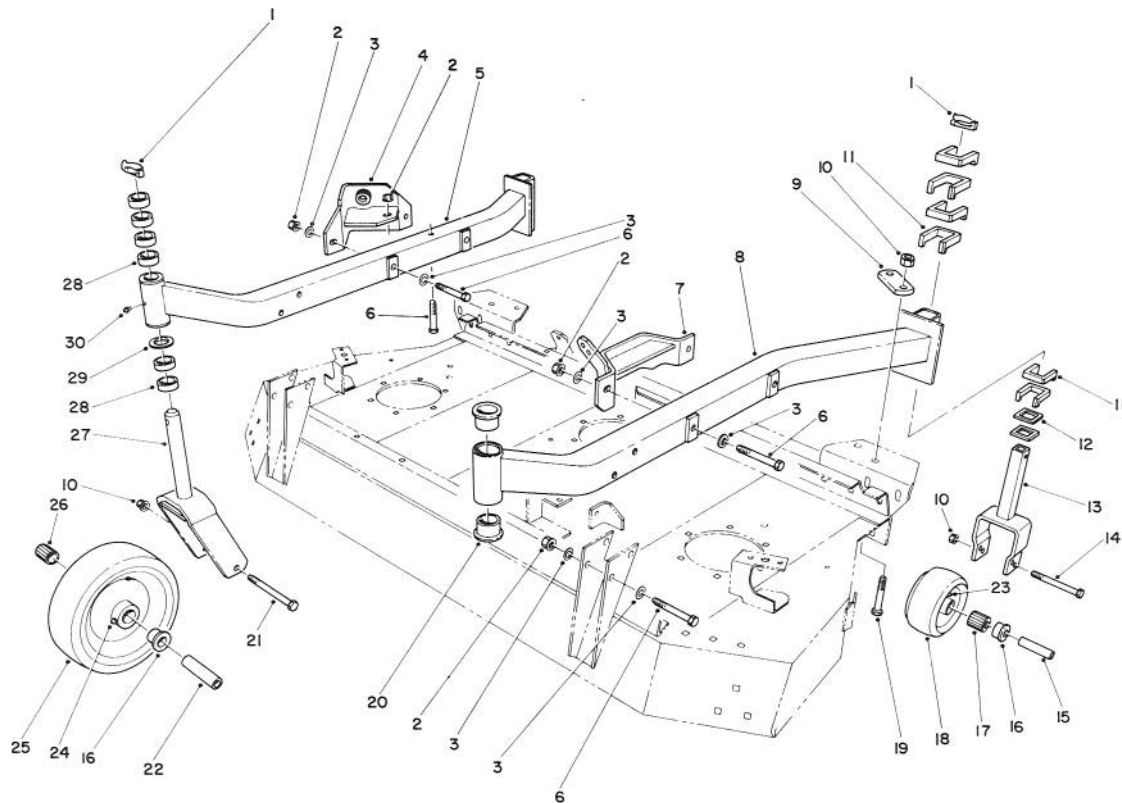


TORO®

MODEL NO. 30715-90001 & UP


**PARTS
CATALOG****TRIFLEX 88 CUTTING UNIT**
(For Use With Groundsmaster® 300 Series)

T-0390-89

CARRIER FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3290-384	Pin — Lynch	4
2	32128-42	Nut — Flange Lock	9
3	66-6480	Washer — Flat	16
4	63-0860	Ball Joint Mount R.H.	1
5	63-0900	Castor Arm R.H. (Incl. Ref. #20)	1
6	324-19	Screw — Cap Hex. Hd.	9
7	63-0880	Ball Joint Mount L.H.	1
8	63-0930	Castor Arm L.H. (Incl. Ref. #20)	1
9	39-3330	Bar — Caster Arm Clamp	2
10	32128-23	Nut — Flange Lock	8
11	63-0060	Spacer	16
12	63-0960	Spacer — Castor Rear	4
13	63-1910	Castor — Fork Rear	2
14	325-18	Screw — Cap Hex. Hd.	2
15	63-1770	Bushing — Spanner	2
16	62-5580	Bushing	8

Ref. No.	Part No.	Description	No. Used
17	63-8580	Bearing — Roller	2
18	68-6860	Castor Wheel — Rear (Incl. Ref. #16, 17 & 23)	2
19	325-13	Screw — Cap Hex. Hd.	4
20	28-9290	Bushing	4
21	325-22	Screw — Cap Hex. Hd.	2
22	62-4340	Spacer — Castor Wheel	2
23	302-11	Fitting — Grease 45°	2
24	302-40	Fitting — Grease 90°	2
25	62-4330	Castor Wheel — Front (Incl. Ref. #17, 24 & 26)	2
26	62-5570	Bearing — Roller	2
27	63-0730	Castor Fork — Front	2
28	63-0070	Spacer	12
29	3-6781	Washer — Thrust	2
30	302-5	Fitting — Grease	2

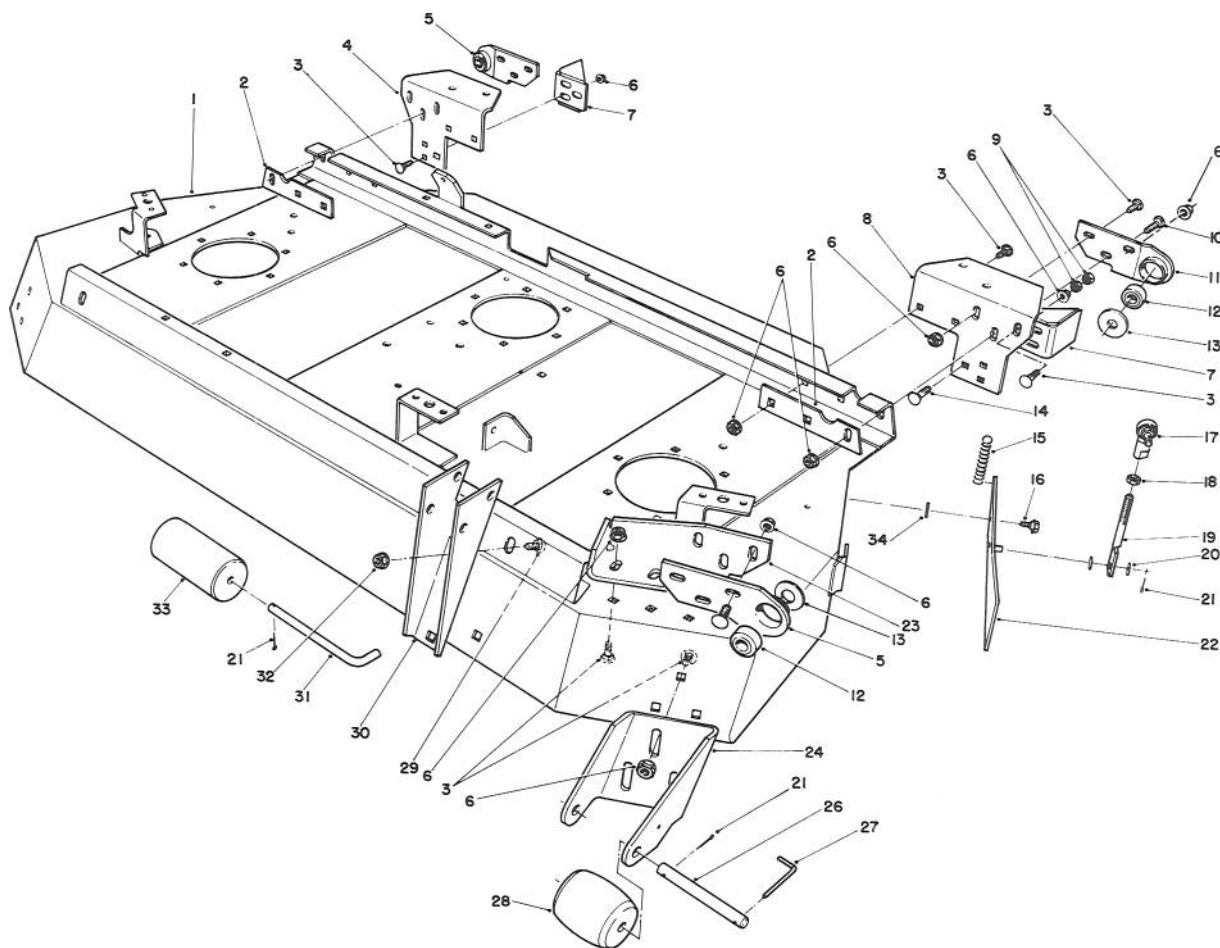


T-0391-89

CENTER DECK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	63-0200	Deck — Center	1
2	63-1960	Plate — Rear Channel	2
3	3231-36	Bolt — Carriage	38
4	66-1270	Bracket — Castor R.H.	1
5	66-6460	Hinge Bracket Assembly (Incl. Ref. #12)	2
6	32128-43	Nut — Lock	38
7	66-1110	Bracket — Rear Stop	2
8	66-1280	Bracket — Castor L.H.	1
9	32128-21	Nut — Lock	4
10	3231-26	Bolt — Carriage	2
11	66-6450	Hinge Bracket Assembly (Incl. Ref. #12)	2
12	63-0670	Bushing — Hinge	4
13	27-8810	Washer — Thrust	4
14	3231-7	Bolt — Carriage	2
15	63-1610	Spring — Extension	2
16	37-8771	Bolt — Shoulder	2
17	54-8030	Joint — Ball	2

Ref. No.	Part No.	Description	No. Used
18	3220-3	Nut — Jam	2
19	66-1190	Rod — Lift	2
20	37-8080	Washer — Flat	4
21	3272-11	Pin — Cotter	5
22	66-1120	Door — Safety L.H.	1
*	66-1200	Door — Safety R.H.	1
23	63-0800	Bracket — Hinge L.H.	1
*	63-0790	Bracket — Hinge R.H.	1
24	63-1560	Bracket — Front Roller L.H.	1
*	63-1550	Bracket — Front Roller R.H.	1
26	57-0680	Shaft — Front Roller	2
27	57-0690	Pin	2
28	29-4820	Roller — Front	2
29	3233-9	Bolt — Carriage	4
30	63-0360	Support — Front	2
31	63-0850	Shaft — Roller	1
32	32128-23	Nut — Flange Lock	4
33	36-1740	Roller — Anti-Scalp	1
34	39-5190	Washer — Flat	2

* Not Illustrated

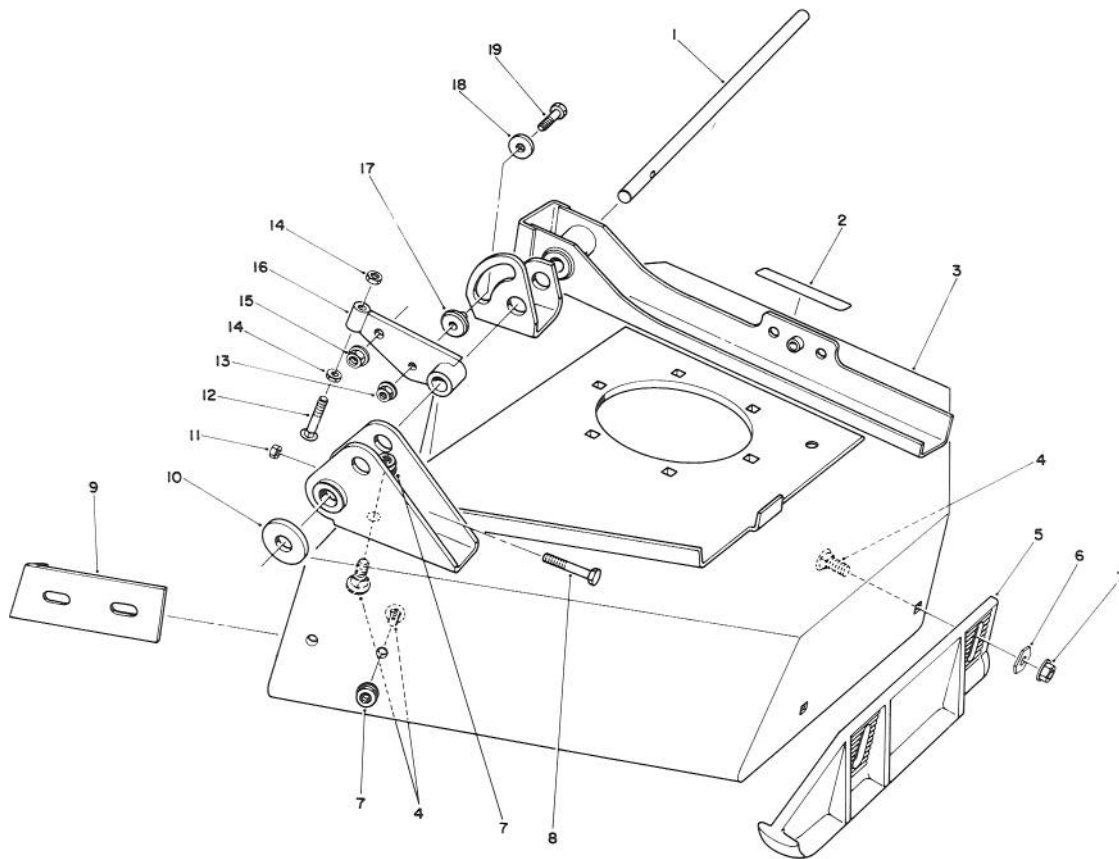


T-0392-89

WING DECK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67-5780	Shaft — Hinge	2
2	66-6380	Decal — Deflector	2
3	63-0550	Wing Deck — L.H.	1
*	63-0400	Wing Deck — R.H.	1
4	3231-36	Bolt — Carriage	10
5	63-1800	Skid — L.H.	1
*	63-1790	Skid — R.H.	1
6	3290-224	Washer — Dome Hex.	4
7	32128-43	Nut — Lock	10
8	321-41	Screw — Cap Hex. Hd.	2
9	63-1200	Bracket — Stop L.H.	1
*	63-1190	Bracket — Stop R.H.	1

Ref. No.	Part No.	Description	No. Used
10	27-8810	Washer — Thrust	2
11	32152-4	Nut — Lock	2
12	3230-25	Bolt — Carriage	2
13	32128-25	Nut — Hex.	2
14	3218-2	Nut — Jam	4
15	32128-12	Nut — Flange Lock	2
16	66-1170	Arm — Door L.H.	1
*	66-1180	Arm — Door R.H.	1
17	63-1020	Spacer — Door Lift	2
18	66-6410	Washer — Lift Spacer	2
19	322-7	Screw — Cap Hex. Hd.	2

* Not Illustrated

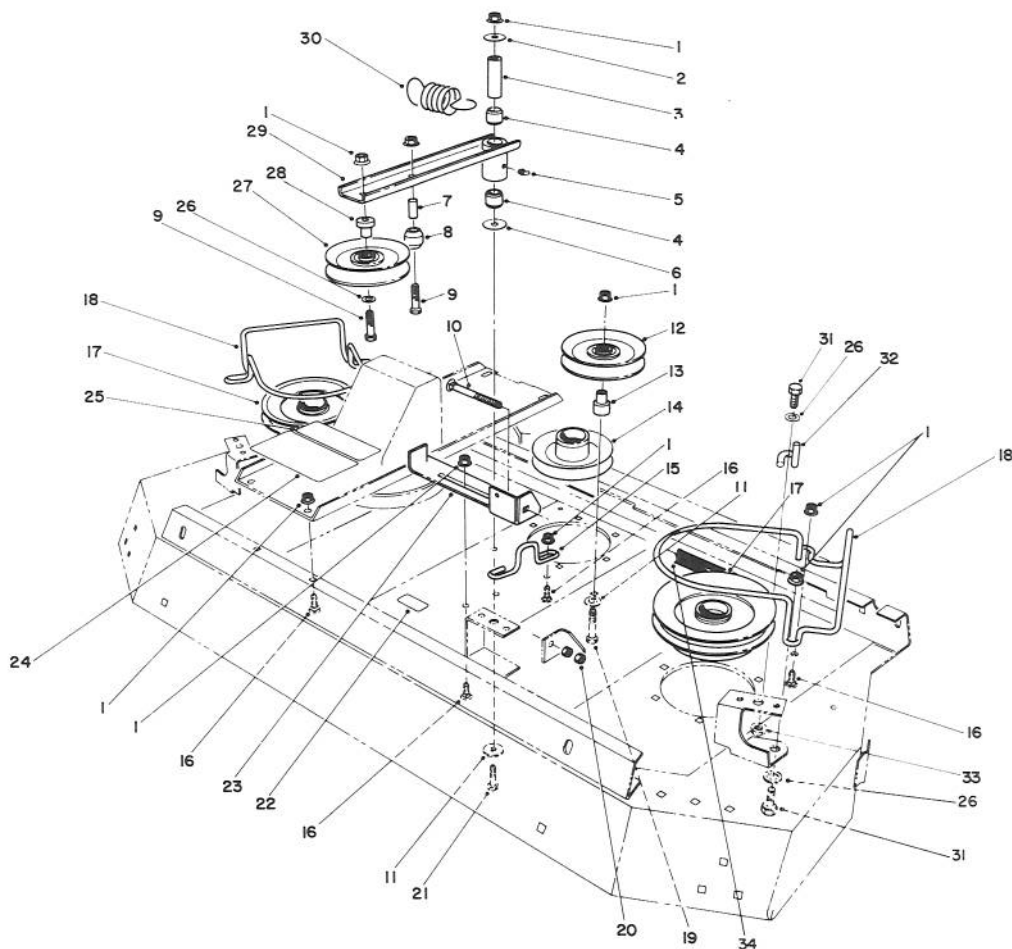


T-0393-89

CENTER DECK SPINDLE DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32128-43	Nut — Lock	18
2	36-8020	Washer — Flat	1
3	63-1660	Sleeve — Idler Pivot	1
4	63-0920	Bushing — Tension	2
5	302-11	Fitting — Grease 45°	1
6	63-1340	Washer	A/R
7	63-1480	Spacer	1
8	23-2270	Rubber Bushing	1
9	323-10	Capscrew — Hex. Hd.	2
10	3231-34	Bolt — Carriage	1
11	53-6380	Washer — Flat	2
12	63-1540	Pulley — Stationary	1
13	63-1530	Spacer — Fixed Idler	1
14	63-0090	Pulley & Hub Assembly	1
15	66-1290	Guide — Belt	1
16	3231-36	Bolt — Carriage	10
17	63-0110	Pulley & Hub Assembly	2

Ref. No.	Part No.	Description	No. Used
18	63-1430	Guide — Belt	2
19	323-11	Screw — Cap Hex. Hd.	1
20	3217-7	Nut — Hex.	2
21	323-20	Capscrew — Hex. Hd.	1
22	55-4300	Decal — Warning	1
23	63-1470	Bracket — Spring	1
24	63-1740	Decal — Rear Weights	1
25	66-1330	Decal — Blade Bolt	1
26	3256-3	Washer — Flat	5
27	63-1540	Pulley — Idler	1
28	63-1520	Spacer — Idler	1
29	63-1450	Idler Arm Assy. (Incl. Ref. #4)	1
30	63-1580	Spring — Extension	1
31	323-7	Hex Hd. Capscrew	4
32	67-5760	Rod — Belt	2
33	32128-21	Flange Locknut	2
34	63-1510	V-Belt — Main Drive	1

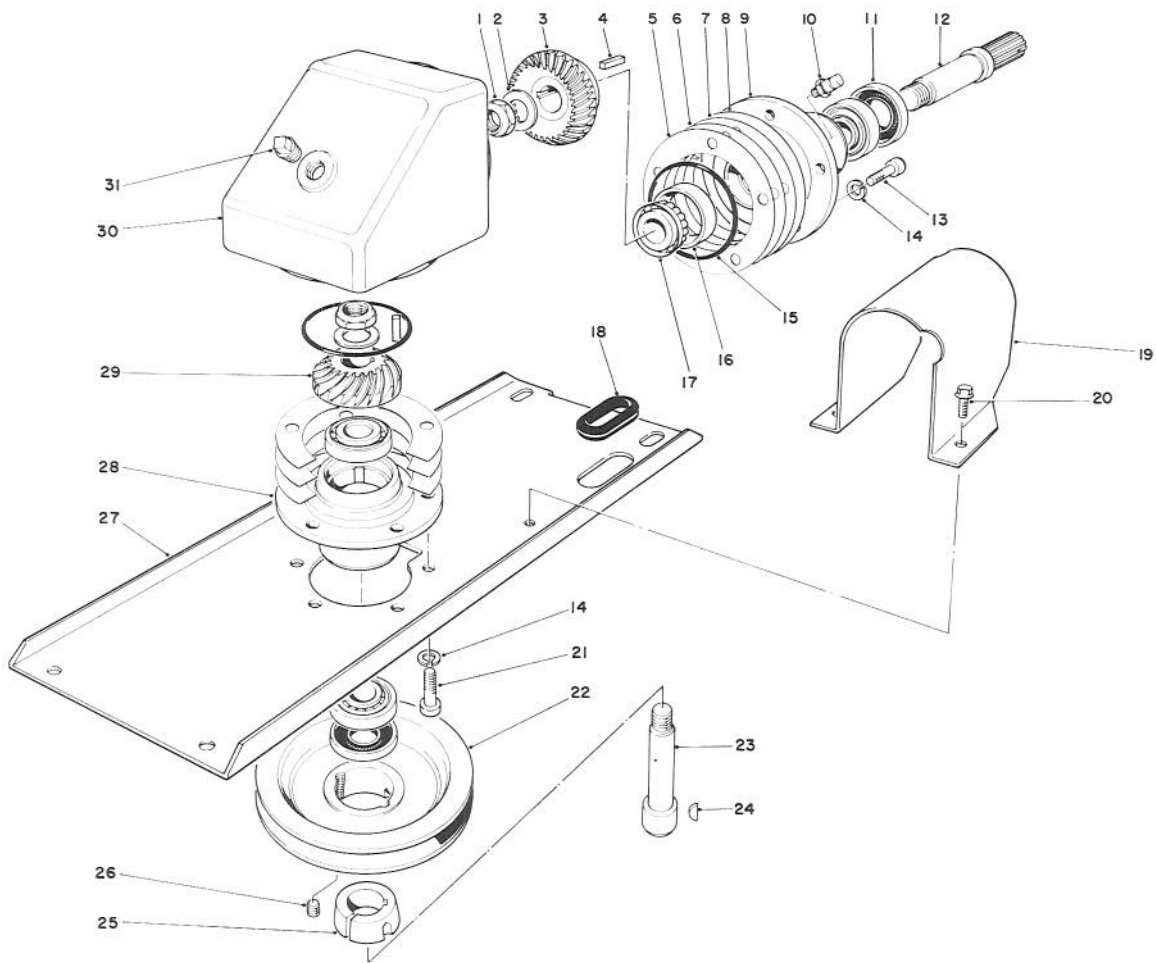


T-0394-89

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-15	Nut — Lock	2
2	3-6514	Washer — Thrust	2
3	26-1340	Gear — Input	1
4	18-6430	Key — Square	2
5	26-1350	Shim — Red (.002")	A/R
6	26-1360	Shim — Blue (.005")	A/R
7	26-1370	Shim — Pink (.015")	A/R
8	33-2040	Shim — Yellow (.020")	A/R
9	26-1290	Housing — Input Bearing	1
10	302-14	Plug — Vent	1
11	253-137	Seal — Oil	2
12	26-1310	Shaft — Input	1
13	3274-7	Screw — Cap Socket Hd.	5
14	3253-21	Washer — Lock	10
15	237-97	Seal — O-Ring	2
16	254-90	Cup — Bearing	4
17	254-91	Cone — Bearing	4
18	237-152	Grommet	1

Ref. No.	Part No.	Description	No. Used
19	63-1970	Cover — Universal Joint	1
20	32104-82	Screw — Self Tapping	2
21	3274-1	Screw — Cap Socket Hd.	5
22	63-0660	Pulley — Deck	1
23	26-1320	Shaft — Output	1
24	3257-5	Key — Woodruff	1
25	23-1640	Bushing — Taper Lock (Incl. Ref. #26)	1
26	3247-4	Screw — Set	2
27	63-0950	Plate — Gear Case Mounting	1
28	26-1380	Housing — Output Bearing	1
29	26-1330	Gear — Output	1
30	26-1270	Case — Gear	1
31	281-11	Plug/Magnet — Sq. Hd. Pipe	1
*	63-1730	Gear Case Assembly (Incl. Ref. #1-17, 21, 23, 24 & 28-31)	1

* Not Illustrated

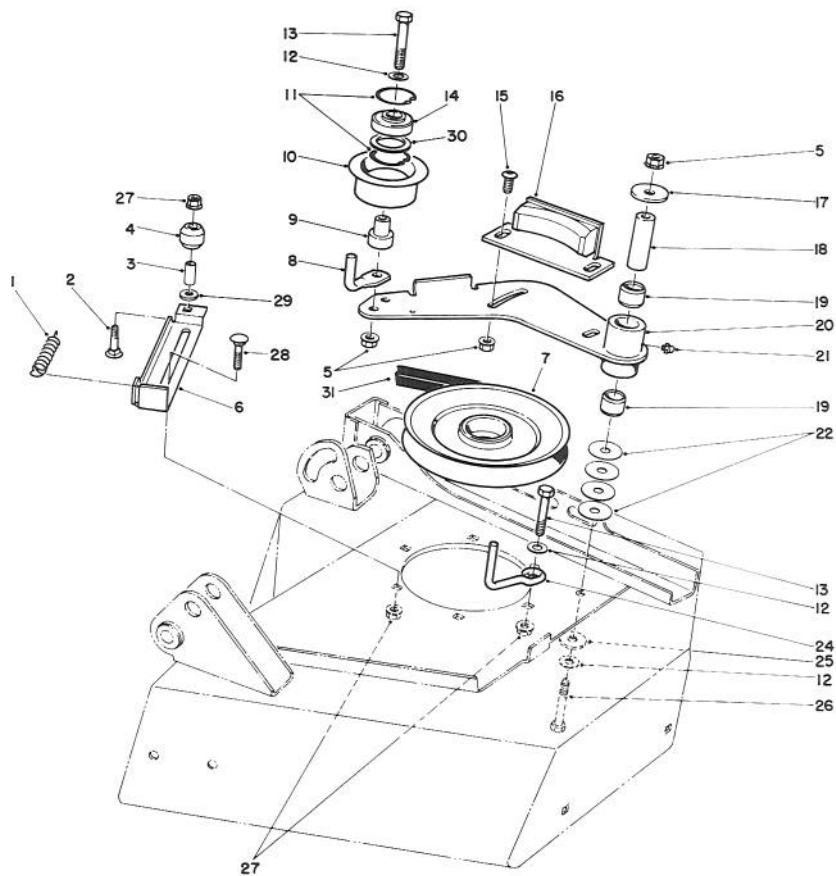


T-0395-89

WING DECK SPINDLE DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	63-1590	Spring — Extension	2
2	3231-7	Bolt — Carriage	2
3	63-1480	Spacer	2
4	23-2270	Rubber Bushing	2
5	32128-43	Nut — Lock	8
6	63-1640	Bracket — Spring	2
7	63-0100	Pulley & Hub Assembly	2
8	63-1690	Guide — Belt	2
9	63-1520	Spacer — Idler	2
10	63-1670	Pulley — Idler	2
11	32120-42	Ring — Retaining	4
12	3256-3	Washer — Flat	6
13	323-10	Screw — Cap Hex. Hd.	4
14	66-1240	Bearing — Idler	2
15	3274-80	Screw — Button Socket Hd.	4
16	63-1030	Brake Bracket Assembly	2

Ref. No.	Part No.	Description	No. Used
17	36-8020	Washer — Flat	2
18	63-1660	Sleeve — Idler Pivot	2
19	63-0920	Bushing — Tension	4
20	63-1410	Idler Arm Assembly (Incl. Ref. #19)	2
21	302-5	Fitting — Grease Str. (L.H.)	2
22	63-1340	Washer	A/R
24	63-1400	Rod — Belt	2
25	53-6380	Washer — Flat	2
26	323-15	Capscrew — Hex. Hd.	2
27	32128-21	Nut — Flange Lock	8
28	3231-36	Bolt — Carriage	4
29	36-1430	Spacer	2
30	67-5650	Spacer — Bearing (Not Found on All Models)	2
31	63-1440	V-Belt — Wing Drive	2

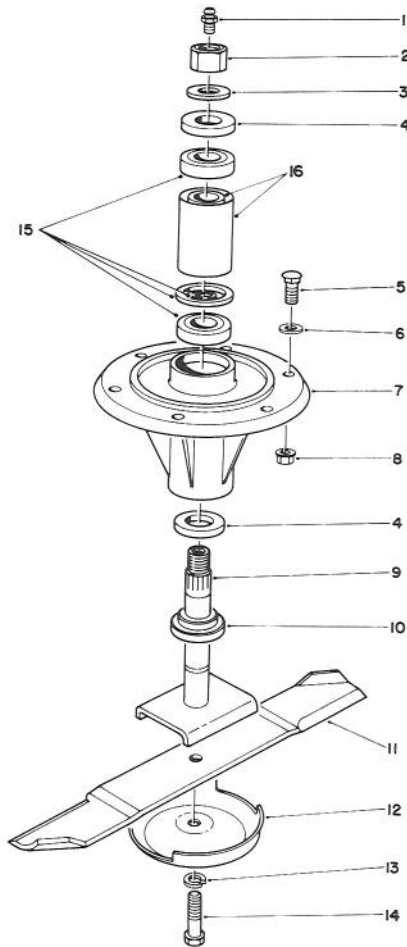


T-0396-89

SPINDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	302-2	Fitting — Grease	5
2	32146-20	Nut — Jam	5
3	7-4150	Washer	5
4	253-139	Seal — Wave	10
5	3231-36	Bolt — Carriage	24
6	3256-24	Washer	A/R
7	63-0050	Housing — Spindle	5
8	32128-21	Nut — Flange Lock	24

Ref. No.	Part No.	Description	No. Used
9	51-3551	Shaft — Spindle	5
10	27-0950	Spacer — Spindle	5
11	63-0080	Bladé — 19"	5
12	27-1000	Cup — Anti Scalp	5
13	3253-27	Washer — Lock	5
14	44-2200	Screw — Cap Hex. Hd.	5
15	27-0960	Bearing Assembly	5
16	67-5750	Spacer — Matched Set	5

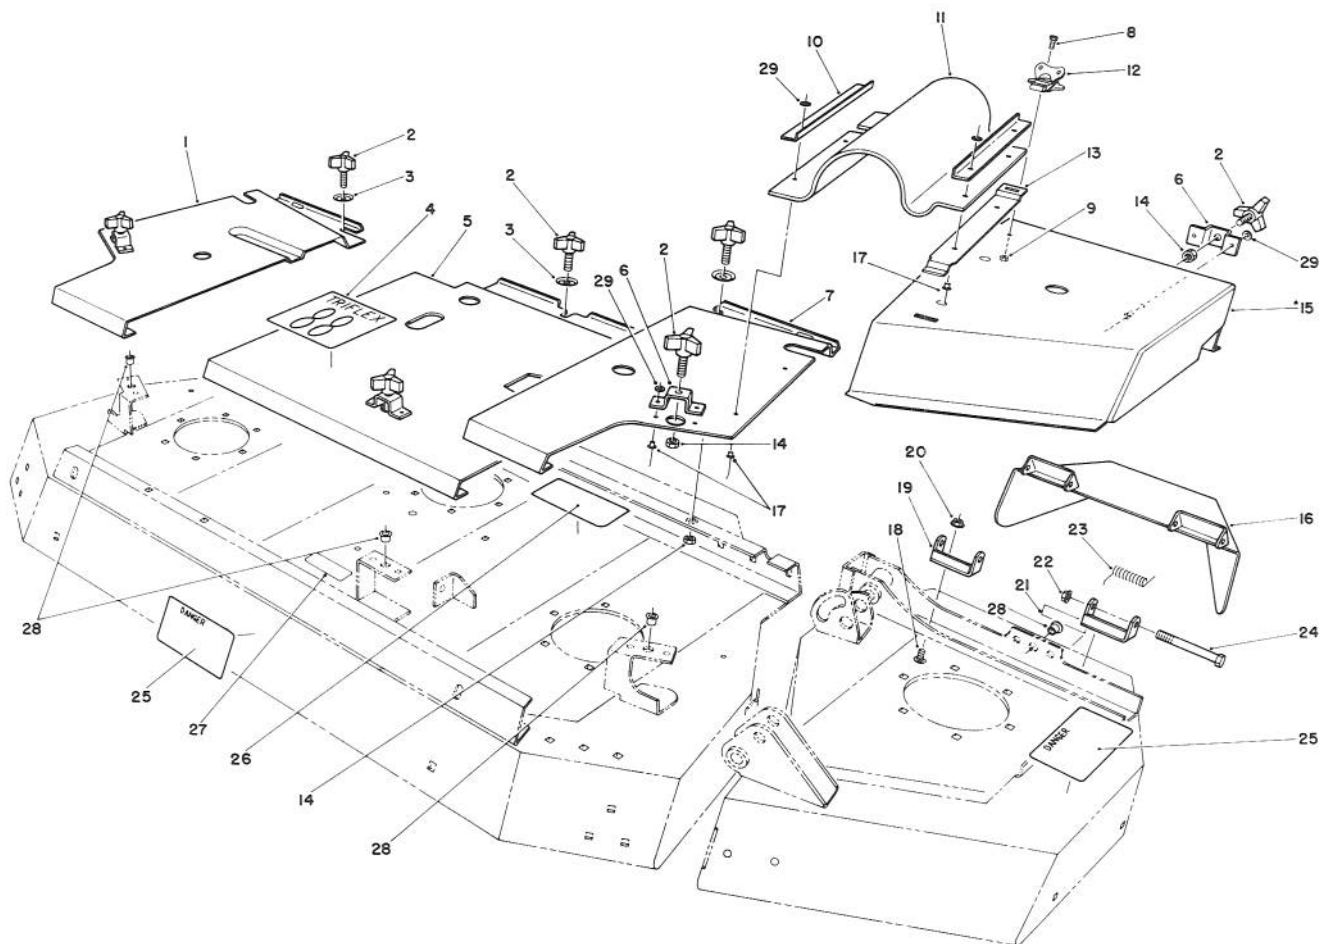

T-0397-89


COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	63-1140	Cover — Center R.H.	1
2	27-4570	Knob	8
3	66-6310	Washer — Cup	3
4	63-1490	Decal — 88" Triflex	1
5	63-1130	Cover — Center Middle	1
6	66-1260	Bracket — Knob	5
7	63-1150	Cover — Center L.H.	1
8	3290-330	Screw — Hex. Hd.	4
9	3296-9	Nut — Lock	4
10	66-6340	Stiffener — Rubber	4
11	63-1760	Cover — Flex	2
12	66-1390	Latch — Spring	2
13	66-1360	Latch — Cover	2
14	3296-59	Nut — Lock	8
15	63-1120	Cover — Wing L.H.	1
*	63-1110	Cover — Wing R.H.	1

Ref. No.	Part No.	Description	No. Used
16	63-1710	Discharge Chute — L.H.	1
*	63-1700	Discharge Chute — R.H.	1
17	3269-5	Rivet — Pop	18
18	3230-1	Bolt — Carriage	8
19	29-5590	Bracket — Deflector Pivot	4
20	32128-25	Nut — Lock	8
21	66-6380	Decal — Chute Removed	1
22	32128-21	Nut — Flange Lock	4
23	40-6230	Spring — Torsion	4
24	323-15	Screw — Cap Hex. Hd.	4
25	66-1340	Decal — Discharge	3
26	63-1600	Decal — Belt Routing	1
27	55-4300	Decal — Spring Loaded Device	1
†28	3290-469	Nut — Grip	8
29	3256-13	Washer	18

* Not Illustrated

† Special Tool Required to Install.

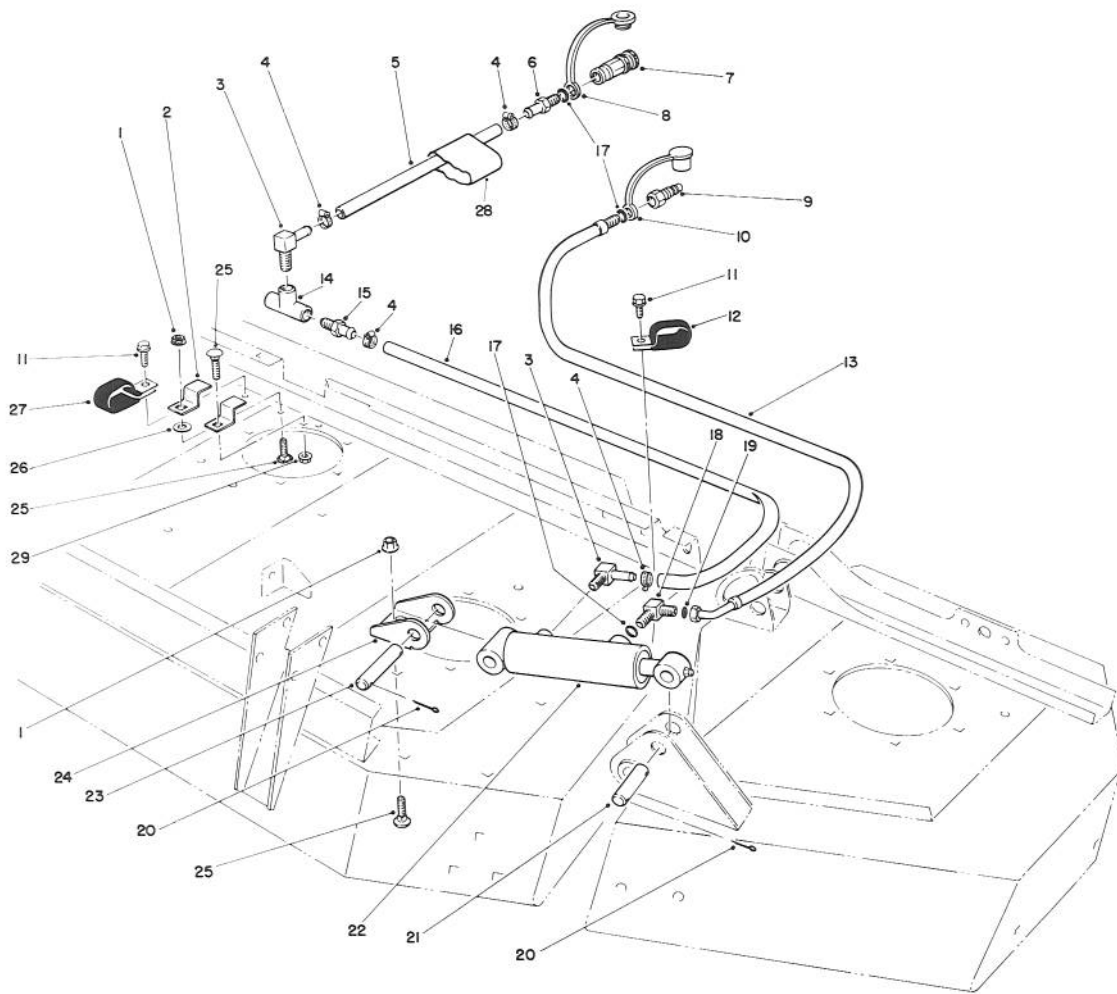


T-0398-89

HYDRAULIC LIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32128-43	Nut — Lock	6
2	66-1380	Clamp — Hose	2
3	66-6400	Fitting — Elbow 90°	3
4	2412-108	Clamp — Hose	6
5	63-1352	Hose — Hydraulic	1
6	353-983	Fitting — Straight (Incl. Ref. #17)	1
7	63-1220	Coupler — Quick Disconnect	1
8	353-984	Plug — Dust	1
9	63-1240	Nipple — Quick Disconnect	2
10	353-985	Cap — Dust	2
11	32104-82	Screw — Self Tapping	5
12	2412-105	Clamp — Double Tube	4
13	63-1300	Hydraulic Hose Assy. L.H. (Incl. Ref. #17)	1
*	63-1290	Hydraulic Hose Assy. R.H. (Incl. Ref. #17)	1
14	304-77	Fitting — Tee	1

Ref. No.	Part No.	Description	No. Used
15	304-73	Fitting — Straight	2
16	63-1354	Hose — Hydraulic L.H.	1
*	63-1353	Hose — Hydraulic R.H.	1
17	237-42	Seal — O-Ring	5
18	340-82	Fitting — Elbow 90° (Incl. Ref. #17 & 19)	2
19	237-21	Seal — O-Ring	2
20	3272-11	Pin — Cotter	8
21	63-1060	Pin — Clevis	2
22	63-0040	Cylinder — Hydraulic	2
23	63-1070	Pin — Clevis	2
24	63-1050	Bracket — Lift Cylinder	2
25	3231-36	Bolt — Carriage	6
26	5-0838	Washer — Flat	1
27	2412-104	Clamp — R	1
28	66-6420	Sleeve — Protective	1
29	32128-21	Nut — Flange Lock	1

* Not Illustrated

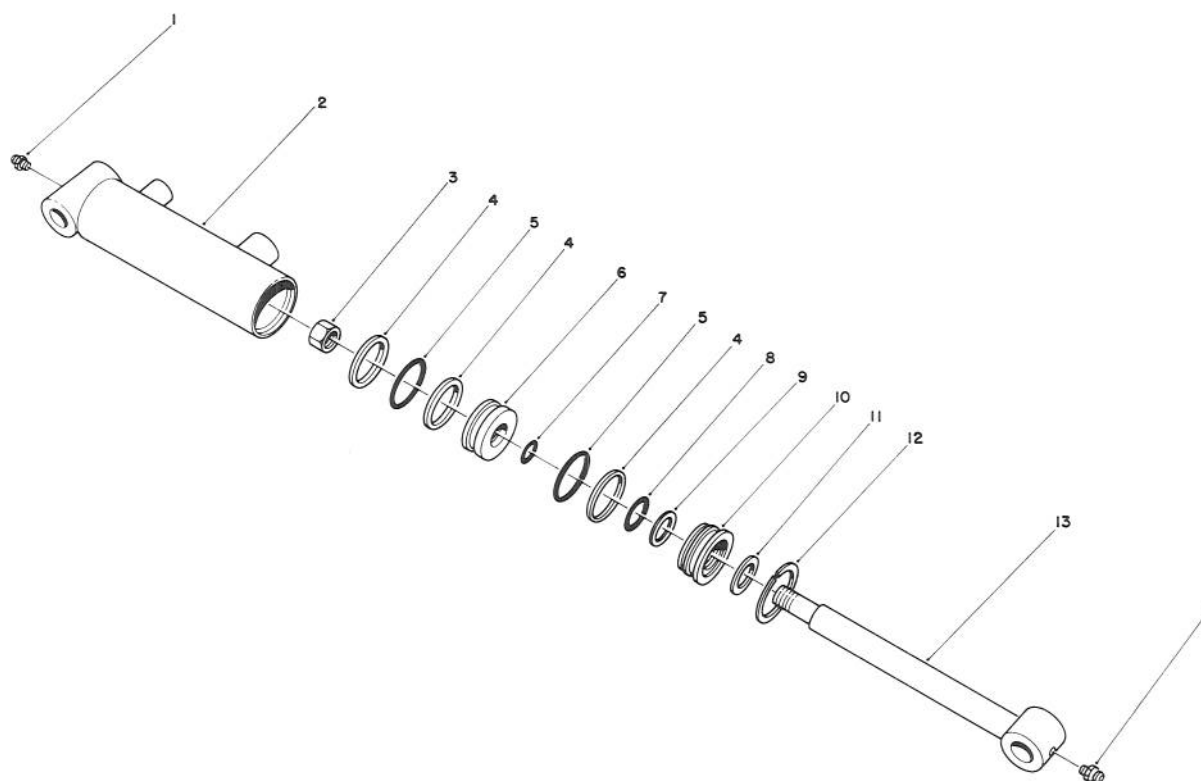


T-0399-89

HYDRAULIC CYLINDER NO. 63-0040

Ref. No.	Part No.	Description	No. Used
1	302-22	Fitting — Grease	2
2		Body — Cylinder	1
3	43-5130	Nut — Lock	1
4		Washer — Backup	3
5		Seal — O-Ring	2
6	43-5150	Gland — Piston	1
7		Seal — O-Ring	1
8		Seal — O-Ring	1

Ref. No.	Part No.	Description	No. Used
9		Washer — Backup	1
10	43-5140	Gland — Rod	1
11		Seal — Rod	1
12	43-5220	Ring — Retaining	1
13	67-5540	Rod — Piston	1
*	43-5250	Repair Kit (Incl. Ref. #4, 5, 7-9 & 11)	1

* Not Illustrated

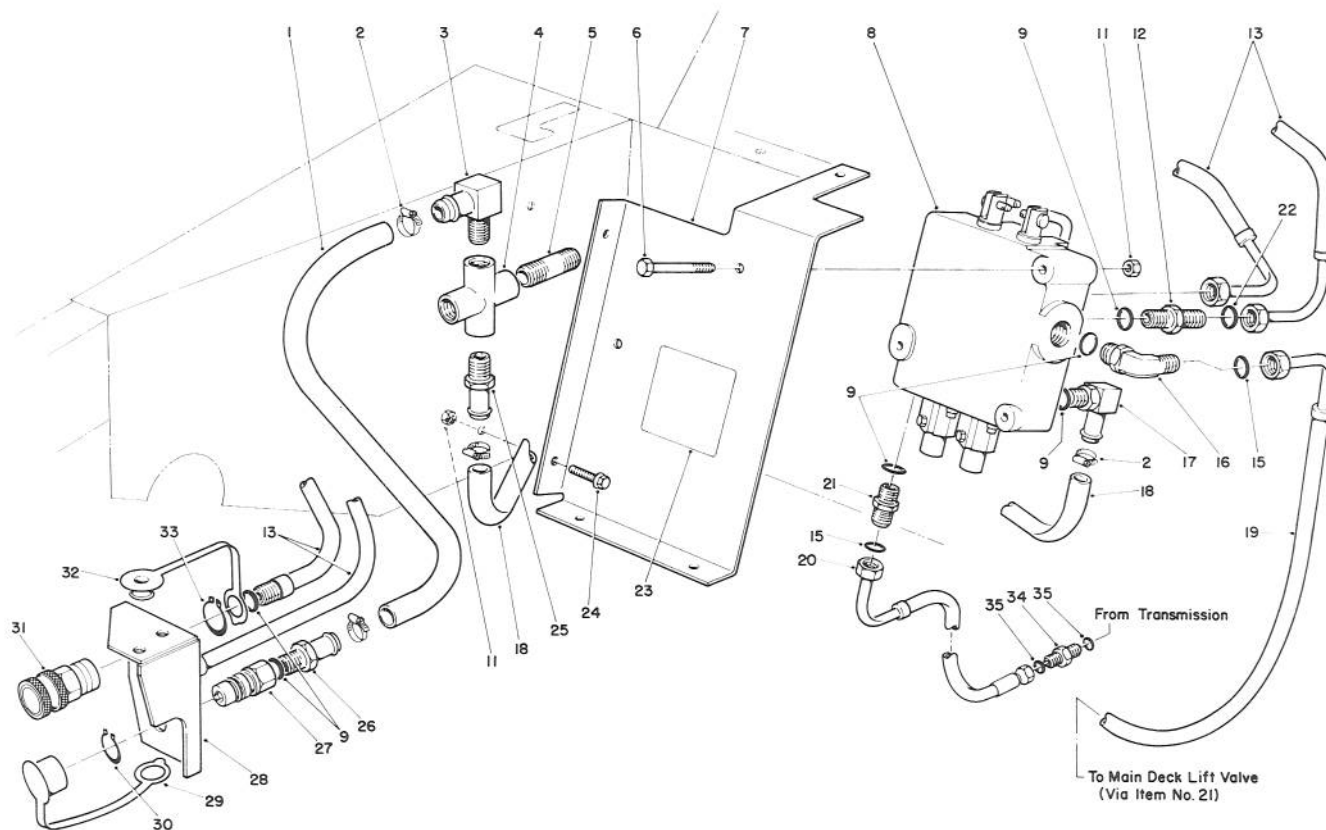


T-0400-89

TRACTION UNIT HYDRAULIC ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	63-1351	Hose — Hydraulic	1
2	2412-36	Clamp — Hose	4
3	66-6400	Fitting — Elbow 90° (Only one fitting needed for non-power steering units)	2
4	353-974	Fitting — Cross	1
5	289-4	Coupling	1
6	321-11	Screw — Cap Hex. Hd.	2
7	63-1210	Plate — Valve Mounting	1
8	63-0020	Valve Assembly	1
9	237-42	Seal — O-Ring	8
11	32152-4	Nut — Lock	7
12	340-1	Fitting — Straight (Incl. Ref. #9 & 22)	2
13	63-1270	Hydraulic Hose Assembly (Incl. Ref. #9)	2
15	237-22	Seal — O-Ring	4
16	340-77	Fitting — Elbow 90° (Incl. Ref. #15 & 9)	1
17	353-982	Fitting — Elbow 90° (Incl. Ref. #9)	1
18	63-1350	Hose — Hydraulic	1
19	67-5530	Hydraulic Hose Assembly	1

Ref. No.	Part No.	Description	No. Used
20	63-1080	Hydraulic Hose Assembly	1
21	340-2	Fitting — Straight (Incl. Ref. #15 & 9)	2
22	237-21	Seal — O-Ring	2
23	63-1500	Decal — Wing	1
24	321-4	Screw — Cap Hex. Hd.	5
25	304-73	Fitting — Straight (For non-power steering units only) (Ref. Item #3 for power steering units)	1
26	353-983	Fitting — Straight (Incl. Ref. #9)	1
27	63-1240	Nipple — Quick Disconnect	1
28	63-1260	Bracket — Hose Mounting	1
29	353-985	Cap — Dust	1
30	32151-79	Ring — Retaining	1
31	63-1220	Coupler — Quick Disconnect	2
32	353-984	Plug — Dust	2
33	32151-83	Ring — Retaining	2
34	340-114	Fitting — Union (Incl. Ref. #35) (For power steering units only)	1
35	237-30	Seal — O-Ring	2

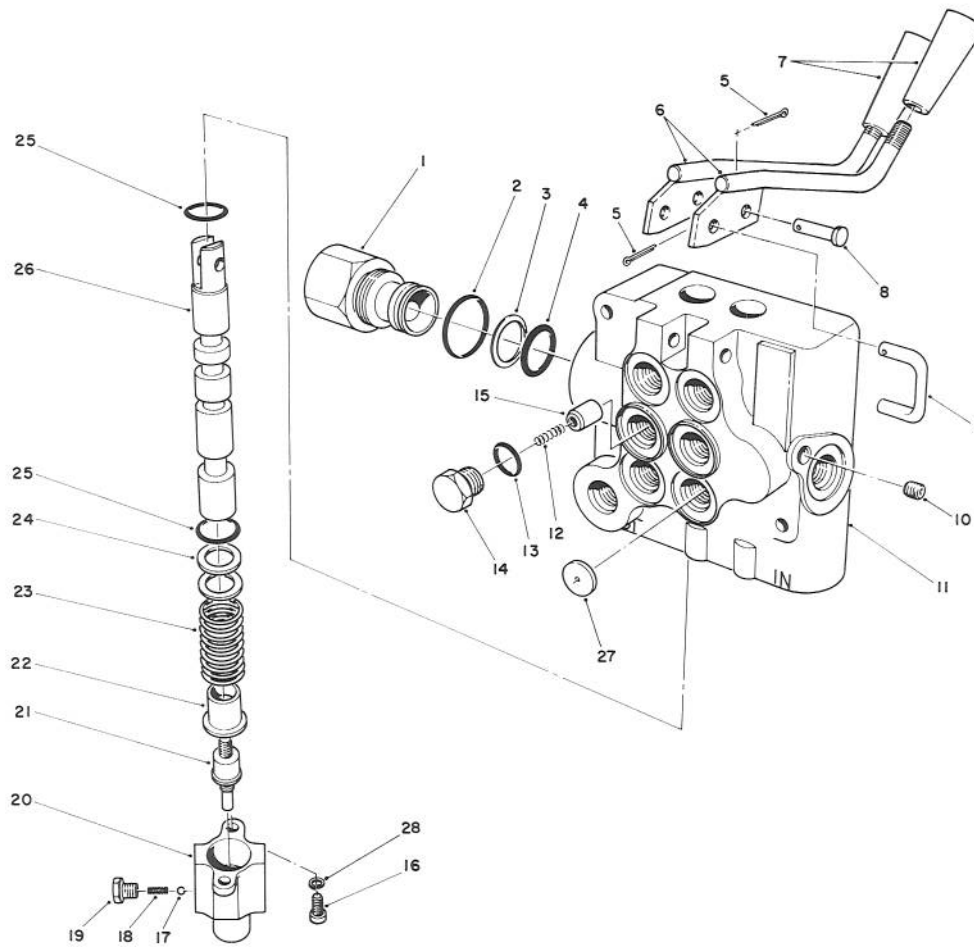


T-0401-89

HYDRAULIC VALVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67-5670	Power Beyond Assembly (Incl. Ref. #2-4)	1
2		Seal — O-Ring	2
3		Washer — Backup	1
4		Seal — O-Ring	1
5	3272-6	Pin — Cotter	4
6	67-5710	Handle	2
7	233-39	Knob — Handle	2
8	67-5600	Pin — Clevis	2
9	67-5610	Hook — C	2
10	285-17	Plug — Pipe	1
11	63-0020	Valve Assembly (Incl. Ref. #1-4 & 8-28)	1
12		Spring — Load Check	2
13		Seal — O-Ring	5
14	67-5660	Plug (Incl. Ref. #13)	5
15		Poppet — Load Check	2
16	3250-31	Screw	4
17		Ball — Detent	4

Ref. No.	Part No.	Description	No. Used
18		Spring — Detent	4
19		Plug — Detent	4
20	67-5620	End Cap — Detent	2
21	67-5630	Spool — Detent	2
22		Spacer	2
23		Spring — Return	2
24		Washer	4
25		Seal — O-Ring	4
26		Spool	2
27	67-5640	Orifice Plate	2
28	3253-17	Lockwasher	4
*	67-5580	Kit — Seal (Incl. Ref. #2, 3, 4, 13 & 25)	1
*	67-5560	Kit — Load Check (Incl. Ref. #12-15)	2
*	67-5570	Kit — Detent (Incl. Ref. #17-19)	4
*	67-5590	Kit — Return Spring (Incl. Ref. #22-24)	2

* Not Illustrated

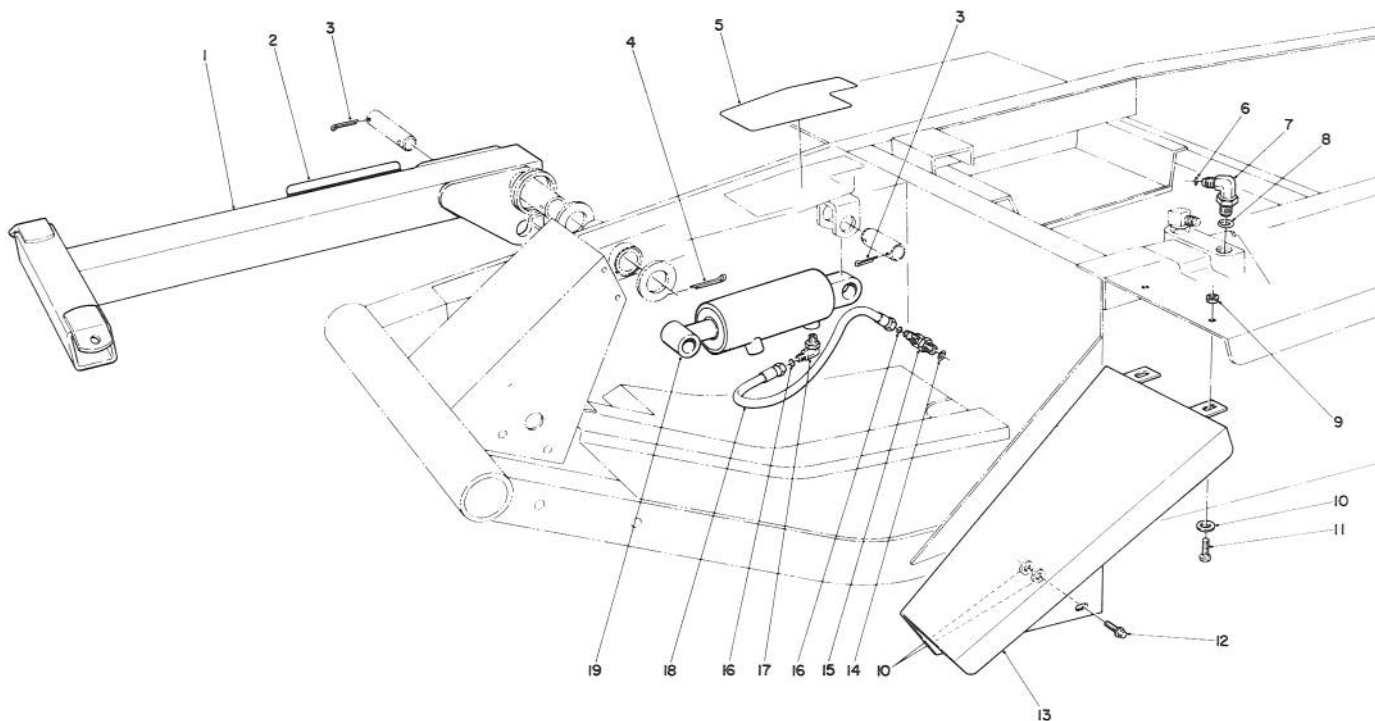


T-0405-89

RETROFIT KIT NO. 66-1230 (For Non-Power Steering 300 Series Groundsmasters)

Ref. No.	Part No.	Description	No. Used
1	66-6370	Arm — Lift	1
2	61-3610	Decal	1
3	3272-24	Pin — Cotter	2
4	3272-33	Pin — Cotter	1
5	66-6390	Decal	1
6	237-30	Seal — O-Ring	1
7	340-99	Fitting — 90° Elbow (Incl. Ref. #6 & 8)	1
8	237-42	Seal — O-Ring	1
9	32128-25	Nut — Lock	2
10	3256-23	Washer	4
11	322-5	Screw — Cap Hex. Hd.	2
12	32144-14	Screw — Thread Forming	2
13	67-5520	Fender	1

Ref. No.	Part No.	Description	No. Used
14	237-78	Seal — O-Ring	1
15	340-97	Fitting — 90° Elbow (Incl. Ref. #14 & 16)	1
16	237-22	Seal — O-Ring	2
17	340-112	Fitting — 90° Elbow (Incl. Ref. #16)	1
18	66-5280	Hose — Hydraulic	1
19	66-1250	Cylinder — Hydraulic	1
*	304-73	Fitting — Straight Hose Barb (Return from 2 Lever Wing Lift Valve) (Ref. Model No. 30715 Parts Catalog)	1

* Not Illustrated

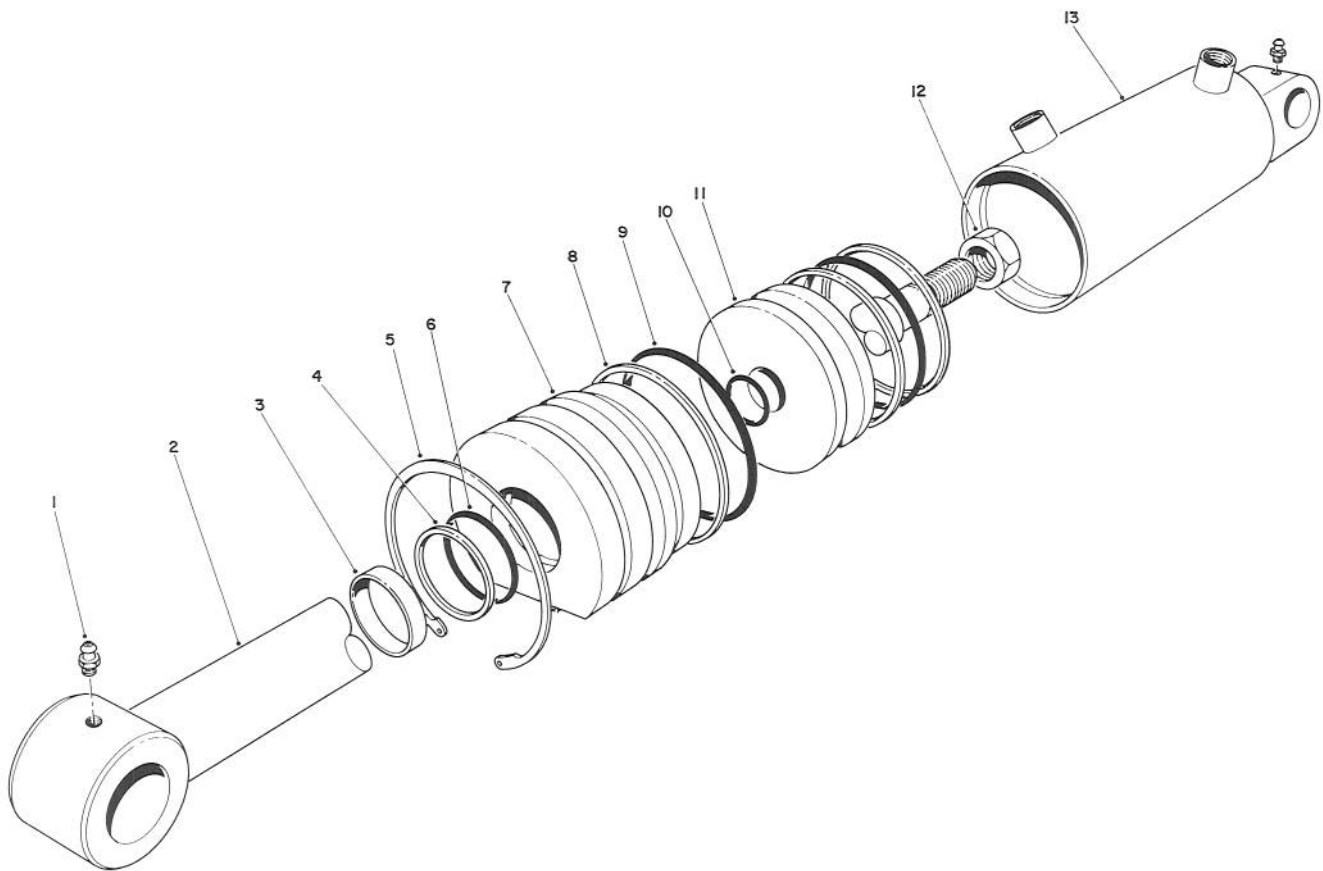


T-0406-89

HYDRAULIC LIFT CYLINDER NO. 66-1250

Ref. No.	Part No.	Description	No. Used
1	302-22	Grease Fitting	2
2	67-5480	Shaft	1
3		Seal — Dust	1
4		Ring — Backup	1
5	67-5470	Ring — Retaining	1
6		O-Ring	1
7	67-5460	Head	1
8		Ring — Backup	3

Ref. No.	Part No.	Description	No. Used
9		O-Ring	2
10		O-Ring	1
11	67-5450	Piston	1
12	60-9760	Hex Nut	1
13	67-5490	Barrel	1
*	67-5500	Repair Kit (Incl. Ref. #3, 4, 6 & 8-10)	1

* Not Illustrated

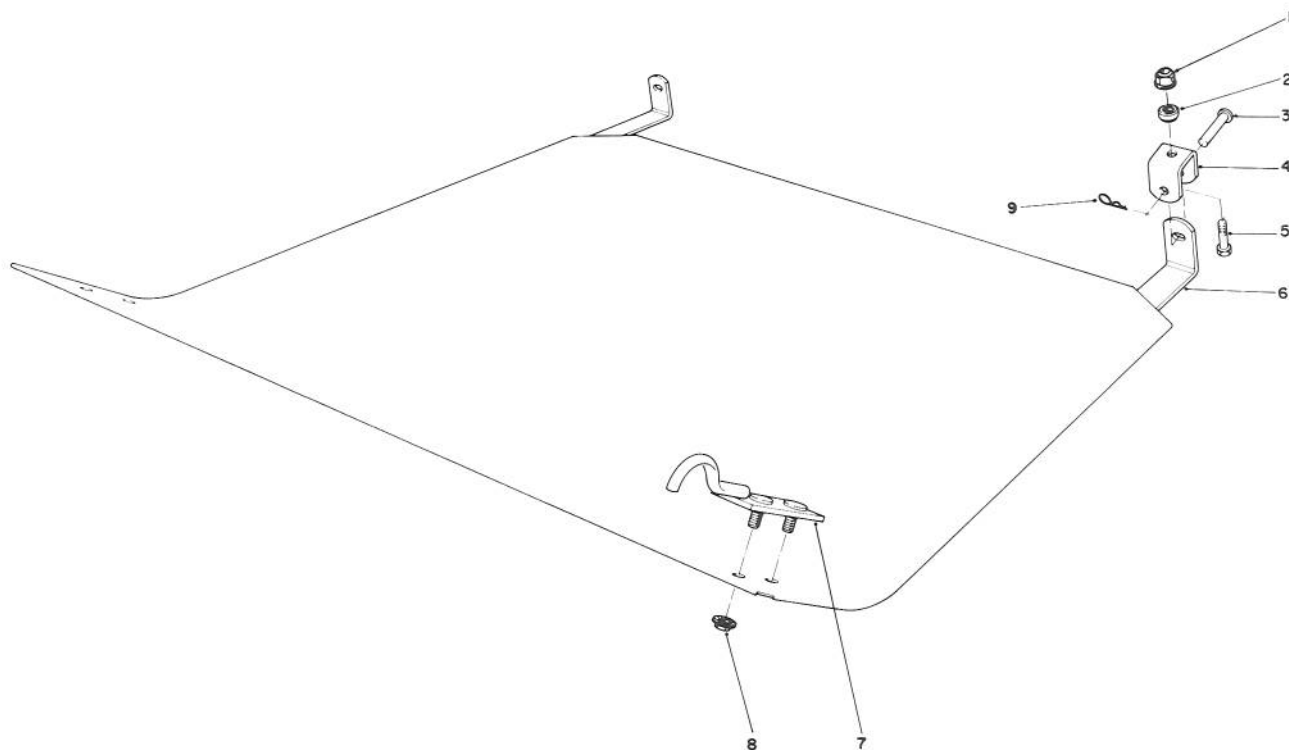


T-0402-89

TRACTOR "BELLY SHIELD" ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32128-21	Nut — Lock (For Diesel Traction Units Only)	2
2	46-1600	Spacer (For Diesel Traction Units Only)	2
3	283-23	Pin — Clevis	2
4	39-1470	Hanger — Belly Shield	2

Ref. No.	Part No.	Description	No. Used
5	323-7	Screw — Cap Hex. Hd.	2
6	39-1410	Shield — Belly	1
7	39-1440	Hook — Belly Shield	2
8	32128-25	Nut — Flange Lock	4
9	3290-322	Hair Pin Cotter	2

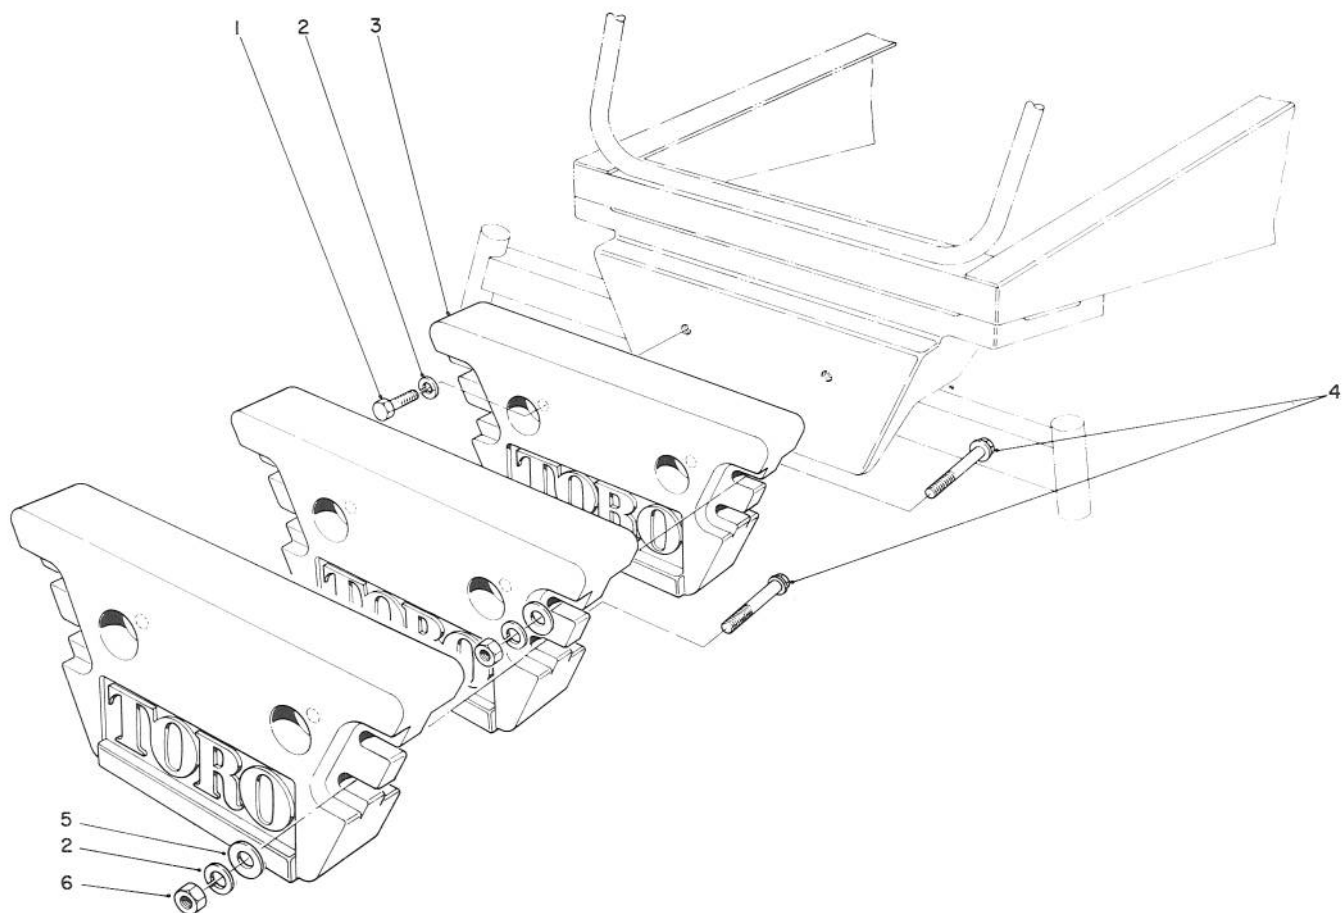


T-0403-89

REAR WEIGHTS

Ref. No.	Part No.	Description	No. Used
1	325-6	Screw — Cap Hex. Hd.	2
2	3253-7	Washer — Lock	6
3	24-5790	Weight — Rear	3

Ref. No.	Part No.	Description	No. Used
4	325-14	Screw — Cap Hex. Hd.	4
5	3256-26	Washer — Flat	10
6	3217-9	Nut — Lock	4

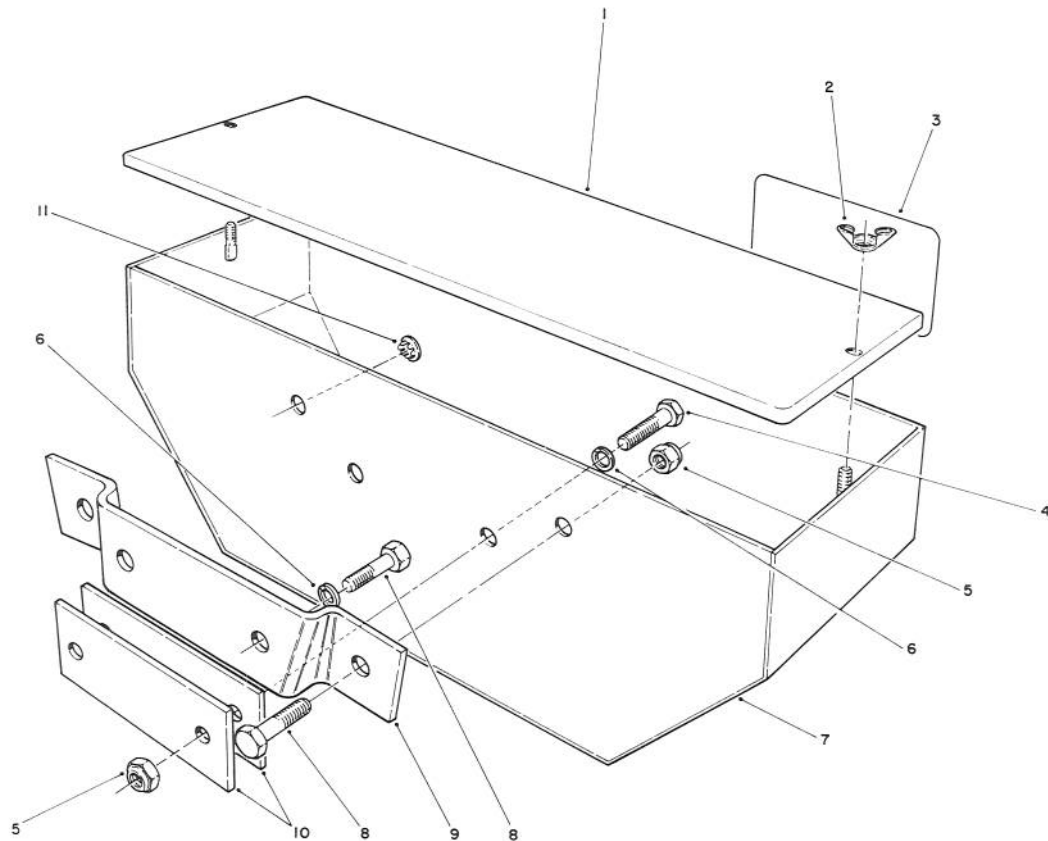

T-0404-89

WEIGHT BOX KIT NO. 62-6590

Ref. No.	Part No.	Description	No. Used
1	61-4130	Cover — Weight Box	1
2	32103-2	Nut — Wing	2
3	43-5110	Decal	1
4	325-7	Screw — Cap Hex. Hd.	2
5	3296-25	Nut — Lock	2
6	3253-7	Washer — Lock	2

Ref. No.	Part No.	Description	No. Used
7	41-4090	Box — Weight	1
8	325-5	Screw — Cap Hex. Hd.	4
9	61-4140	Bracket	1
10	62-6710	Plate	2
11	2410-67	Plug	2

INDEX

Carrier Frame Assembly	1	Hydraulic Cylinder Assembly No. 63-0040	10
Center Deck Assembly	2	Traction Unit Hydraulic Assembly	11
Wing Deck Assembly	3	Hydraulic Valve Assembly	12
Center Deck Spindle Drive Assembly	4	Retro Fit Kit 66-1230	13
Gear Case Assembly	5	Hydraulic Lift Cylinder No. 66-1250	14
Wing Deck Spindle Drive Assembly	6	Tractor "Belly Shield" Assembly	15
Spindle Assembly	7	Rear Weights	16
Cover Assembly	8	Weight Box Kit No. 62-6590	17
Hydraulic Lift Assembly	9		

The Toro Promise

A ONE YEAR LIMITED WARRANTY

The Toro Company promises to repair your TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Commercial Products..... 1 Year

The costs of parts and labor are included, but the customer pays the transportation costs on walk rotary mowers with cutting unit widths of less than 25".

If you feel your TORO product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact your Authorized TORO Distributor or Commercial Dealer (the Yellow Pages of your telephone directory is a good reference source).
2. The TORO Distributor or Commercial Dealer will advise on the arrangements that can be made to inspect and repair your product.
3. The TORO Distributor or Commercial Dealer will inspect the product and advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without an extra charge to you.

If for any reason you are dissatisfied with the distributor's analysis of the defect or the service performed, you may contact us.

Write:

TORO Commercial Products Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Distributor or Commercial Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This Warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper condition is the responsibility of the owner.

All warranty repairs reimbursable under the Toro Promise must be performed by an Authorized TORO Commercial Dealer or Distributor using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Distributor or Commercial Dealer are not reimbursable under the Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]