



Blower Kit

60in Side Discharge Mowers

for Groundsmaster® 3320 and 3280-D

Model No. 30357 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers


Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.


For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

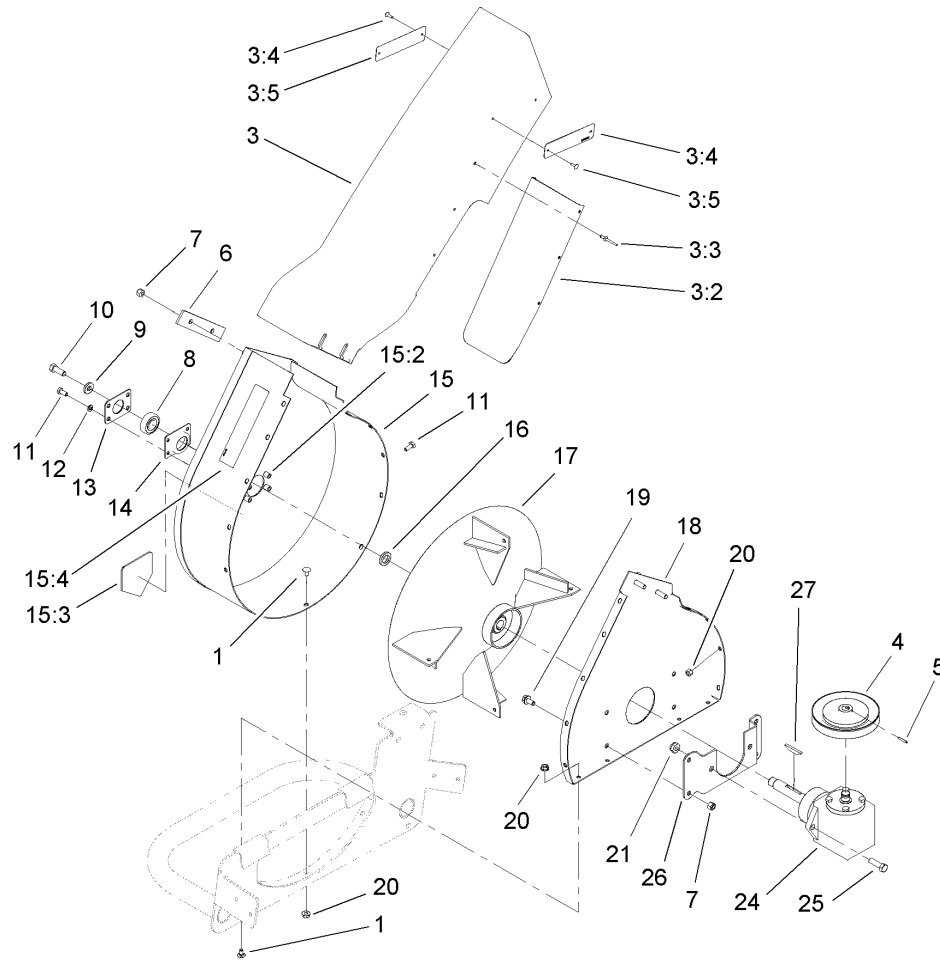

Blower Assembly

Ref	Part No.	Qty.	Description
1	3229-10	7	Screw-CARR
3	110-5666	1	Chute ASM
3:2	110-5665-03	1	Deflector-Chute
3:3	3290-409	6	Rivet
3:4	107-2926	2	Decal-Plate, Warning
3:5	3290-271	4	Rivet-Pop
4	56-4810-03	1	Pulley ASM
5	32121-8	1	Pin-Roll, Slotted
6	110-5684-03	2	Bracket-Chute
7	3296-29	8	Nut-Lock, NI
8	38-7820	1	Bearing-Ball
9	43-0940	1	Spacer-Hub, Blower
10	3235-22	1	Screw-HH, Lock
11	321-3	13	Screw-HH
12	3253-3	4	Washer-Lock
13	63-9700-03	1	Plate-Cover
14	37-6730	1	Cup-Bearing
15	110-3096	1	Blower Housing ASM
15:2	32117-2	4	Insert-Threaded
15:3	106-6753	1	Decal-Danger, Ce
15:4	93-7301	1	Decal-Warning
16	63-9710	1	Spacer-Bearing
17	56-4780-03	1	Impeller ASM
18	110-3094-03	1	Mounting Plate ASM

Ref	Part No.	Qty.	Description
19	3234-14	4	Screw-HHF
20	3296-42	16	Nut-Lock, NI
21	3296-44	2	Nut-Lock, NI
24	110-3065-03	1	Gear Box ASM
25	323-7	2	Screw-HH
26	110-3099-03	1	Mount-Blower
27	3257-40	1	Key-Hi Pro

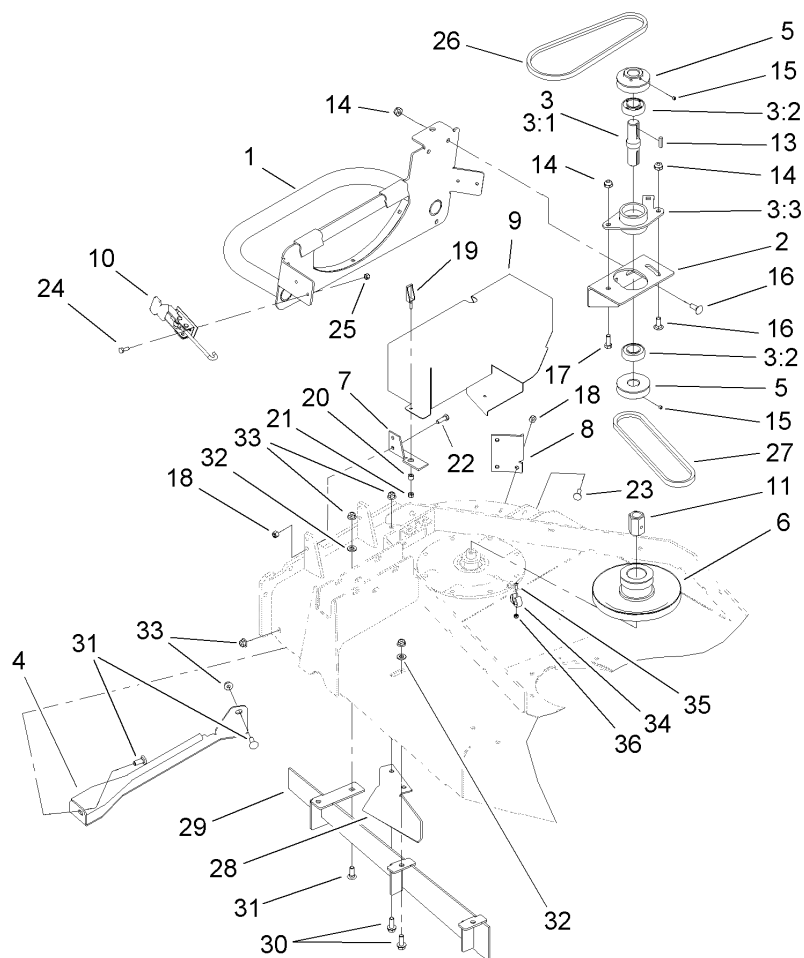

Belt and Pulley Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	110-3081-03	1	Mount-Blower	22	322-5	2	Screw-HH
2	110-5657-03	1	Bracket-Adjustment	23	3230-2	3	Bolt-CARR
3		1	Jackshaft ASM (Not Serviced Separately)	24	321-4	4	Screw-HH
3:1	110-3088	1	Shaft-Jack	25	3296-42	4	Nut-Lock, NI
3:2	103-2477	2	Bearing-Ball	26	707081	1	V-Belt
3:3	110-3087-03	1	Housing ASM	27	107636	1	V-Belt
4	110-9652-03	1	Blower Shelf ASM	28	110-9651-01	1	Baffle-Rear
5	110-3086	2	Pulley-Jackshaft	29	110-5671-01	1	Front Baffle ASM
6	110-3089	1	Drive Pulley ASM	30	3234-42	5	Screw-HHF
7	110-5664-03	1	Bracket-Mounting	31	3231-22	3	Screw-CARR
8	110-5653-01	1	Bracket-Tie Down	32	2844	3	Washer
9	110-5663-03	1	Belt Cover ASM	33	104-8301	8	Nut-Flange, NI
10	110-5654	2	Latch-Draw, Adjustable	34	110-5677	2	Clip-Spring
11	110-3083	1	Nut-Pulley	35	3250-26	2	Screw-PPH
13	5-7280	2	Key	36	3296-1	2	Nut-Lock
14	3296-44	4	Nut-Lock, NI				
15	3245-1	4	Screw-Set, HSH				
16	3231-2	3	Screw-CARR				
17	323-6	1	Screw-HH				
18	3296-29	5	Nut-Lock, NI				
19	106-6777	3	Handle-Latch, Swell				
20	106-6778	3	Bushing-Latch, Swell				
21	1-804254	3	Nut				

