



Greensmaster® 3150

Model No. 04357 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Brake Pedal Assembly 4	Hydraulic Traction Assembly 36
Traction Pedal Assembly 5	Hydraulic Reel Drive Assembly 37
Front Wheel and Brake Assembly 6	Hydraulic Motor Assembly No. 100-6426 39
Brake Assembly No. 104-7705 7	Hydraulic Lift Assembly 40
Hydraulic Drive Motor Assembly No. 110-4015 8	Hydraulic Steering Assembly 41
Steering Arm Assembly 9	Wire Harness Routing Assembly 42
Steering Control Valve Assembly No. 105-0424 10	Cylinder Assembly Briggs and Stratton 356447-0200-E1 43
Right Hand Pull Frame Assembly 11	Crankcase Assembly Briggs and Stratton 356447-0200-E1 44
Hydraulic Cylinder Assembly No. 106-9066 13	Crankshaft Assembly Briggs and Stratton 356447-0200-E1 45
Left Hand Pull Frame Assembly 14	Cylinder Head Assembly Briggs and Stratton 356447-0200-E1 46
Center Pull Frame Assembly 16	Oil Filter, Tube and Pump Assembly Briggs and Stratton 356447-0200-E1 47
Hydraulic Cylinder Assembly No. 106-9064 18	Carburetor Assembly Briggs and Stratton 356447-0200-E1 48
Seat Assembly 19	Governor Assembly Briggs and Stratton 356447-0200-E1 49
Neutral System Assembly 20	Blower Housing Assembly Briggs and Stratton 356447-0200-E1 50
Engine Installation Assembly 21	Air Cleaner Assembly Briggs and Stratton 356447-0200-E1 51
Hydrostat and Gear Pump Drive Assembly 22	Blower Housing Assembly Briggs and Stratton 356447-0200-E1 52
Hydrostat Assembly No. 105-0494 23	Starter Assembly Briggs and Stratton 356447- 0200-E1 53
Gear Pump Assembly No. 104-7737 24	358 Engine Gasket Set Briggs and Stratton 356447-0200-E1 54
Frame and Battery Assembly 25	1095 Valve Gasket Set and 121 Carburetor Overhaul Kit Briggs and Stratton 356447-0200- E1 55
Rear Wheel Assembly 26	Attachments and Accessories List 56
Hydraulic Cylinder Assembly No. 105-0411 27		
Control Panel Assembly 28		
Hydraulic Reservoir and Leak Detector Assembly 29		
Fuel Tank Assembly 30		
Speed Selector Lever Assembly 31		
Joystick and Console Assembly 32		
Joystick Bracket Assembly No. 106-4167 33		
Hydraulic Manifold Assembly 34		
Manifold Assembly No. 110-3956 35		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	INC.	incorporated
ASM.	assembly	LH.	left hand
BBC.	blade brake clutch	NI.	nylon insert
CARR.	carriage	NPTF.	national pipe thread fine
DEG.	degrees	PFH.	phillips flat head
EXT.	external	PPH.	phillips pan head
FH.	flat head	PPHTF.	phillips pan head thread forming
GA.	gauge	PRH.	phillips round head
HF.	hex flange	PTH.	phillips truss head
HH.	hex head	PTO.	power-take-off
HHF.	hex head flange	RH.	right hand
HHFTF.	hex head flange thread forming	ROPS.	roll-over-protection-system
HJ.	hex jam	SFH.	slotted fillister head
HLH.	hex lag head	SHH.	slotted hex head
HOC.	height-of-cut	SHWH.	slotted hex washer head
HSBH.	hex socket button head	SPH.	slotted pan head
HSFH.	hex socket flat head	SQH.	square head
HSH.	hex socket head	SRH.	slotted round head
HWH.	hex washer head	STD.	standard
HWHTF.	hex washer head thread forming	TAP.	self tapping
HYD.	hydraulic	TTH.	torx truss head

Footnotes


- | | | | |
|---|---|---|--|
| ❶ | Not illustrated | ❷ | Not serviced separately |
| ❸ | Obtain from your local Briggs & Stratton dealer | ❹ | Included in Carburetor Overhaul Kit (Ref. No. 121) |
| ❺ | Included in Engine Gasket Set (Ref. No. 358) | ❻ | Included in Valve Gasket Set (Ref. No. 1095) |

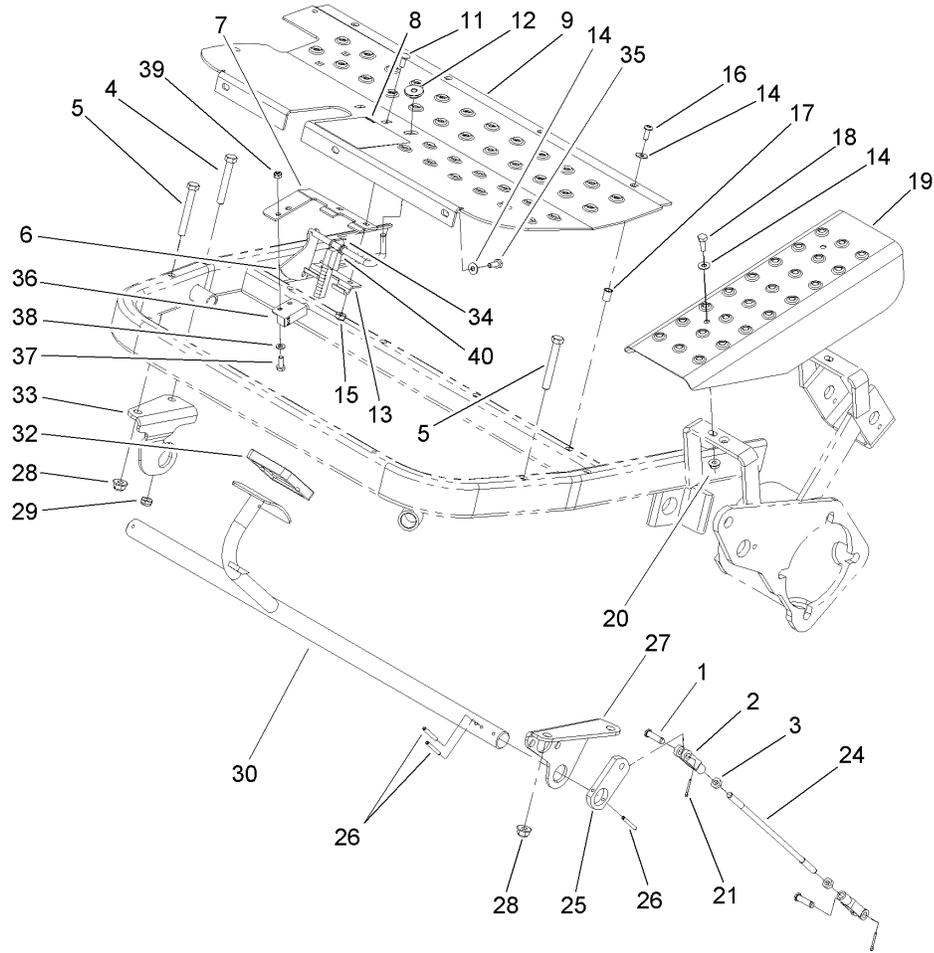

Brake Pedal Assembly


Ref	Part No.	Qty.	Description
1	283-61	4	Pin-Yoke
2	282-2	4	Yoke
3	3220-2	4	Nut-Jam
4	323-12	1	Screw-HH
5	323-13	3	Screw-HH
6	100-9819	1	Latch ASM
7	100-9821	1	Plate-Switch, Reed
8	93-8062	1	Decal-Brake, Parking
9	105-0463-01	1	Plate-Footrest
11	3229-11	2	Screw-CARR
12	32141-111	1	Nut-Adjusting
13	95-1629	1	Hinge-Lower
14	3256-1	9	Washer-Flat
15	3296-16	2	Nut-Lock, NI
16	3274-31	4	Screw-HSBH
17	32148-6	7	Insert-Nut
18	321-4	2	Screw-HH
19	83-0200-01	1	Plate-Cover, LH
20	32128-33	2	Nut-HF
21	3272-6	4	Pin-Cotter
24	27-2270	2	Rod-Adjustment, Brake
25	10-8100-01	2	Strap-Shaft, Brake
26	32121-35	4	Pin-Roll
27	88-9640-01	1	Bracket-Lift Pivot, LH

Ref	Part No.	Qty.	Description
28	104-8301	3	Nut-Flange, NI
29	3296-59	1	Nut-Lock, NI
30	83-0160	1	Shaft-Brake
32	93-7629	1	Pad-Foot, Brake
33	105-0440-01	1	Bracket-Brake, RH
34	10-8140	1	Spring-Latch, Brake
35	321-3	3	Screw-HH
36	104-2057	1	Sensor
37	48-7620	2	Screw-HH
38	33093-00	2	Washer-Flat
39	49-7810	2	Nut-Lock
40	75-5470	2	Spacer-Bearing

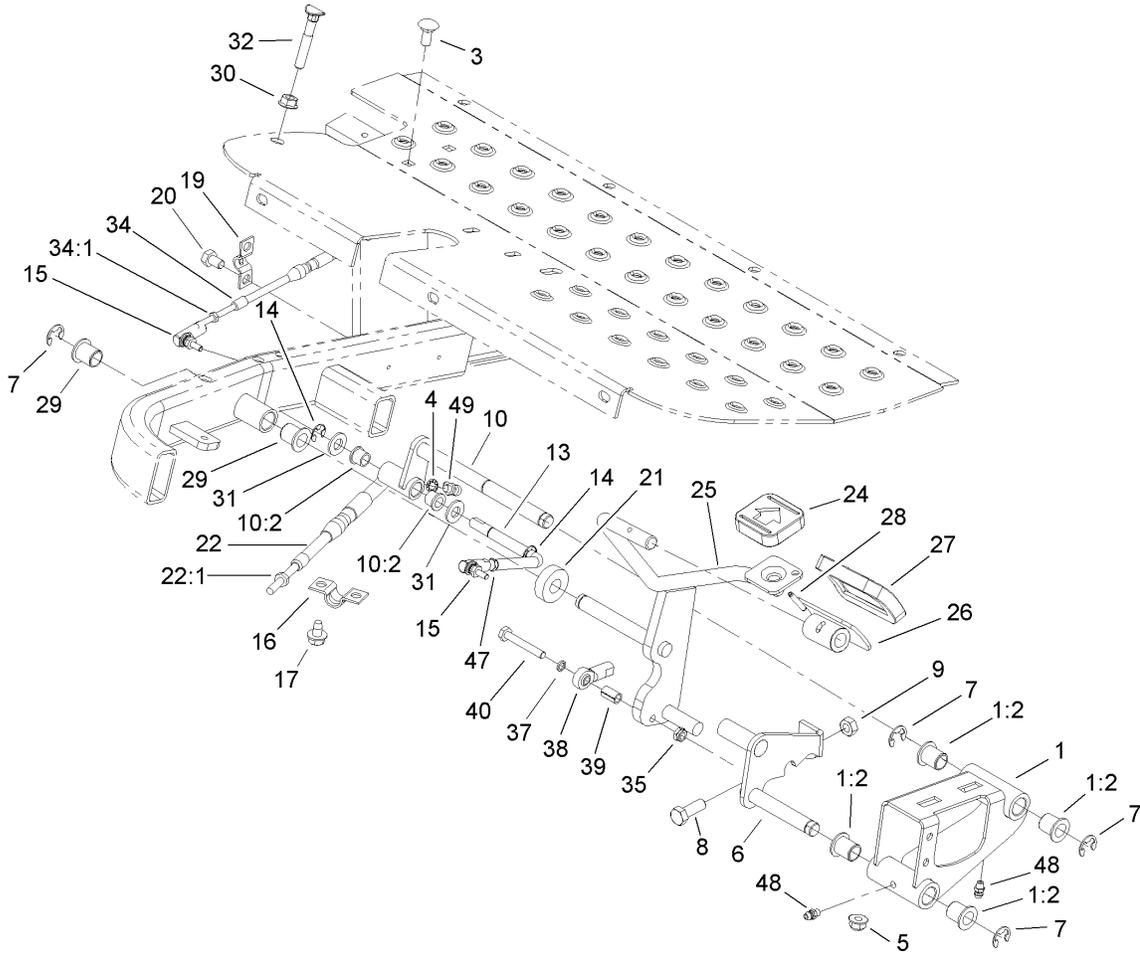

Traction Pedal Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-4620	1	Pivot Mount ASM	27	74-9100	1	Pad-Pedal, Forward
1:2	256-155	4	Bushing-Flange	28	32121-45	1	Pin-Spring
3	3230-1	2	Bolt-CARR	29	256-155	2	Bushing-Flange
4	3254-8	1	Washer-Lock	30	32128-20	1	Nut-HF
5	104-8300	2	Nut-Flange, NI	31	3256-24	2	Washer-Flat
6	105-5425	1	Lock-ASM	32	17-9426	1	Screw-Handle
7	32120-47	4	Ring-Retaining, External	34	105-5444	1	Cable-Lock, Neutral
8	323-6	1	Screw-HH	34:1	3219-14	2	Nut-Hex
9	3217-7	1	Nut-Hex	35	3296-56	1	Nut-Lock, NI
10	106-4621	1	Support ASM	37	105-8318	1	Washer-Flat
10:2	256-116	2	Bushing-Flange	38	2411-41	1	Joint-Ball
13	105-5430	1	Rod-Connecting	39	80-0650	1	Spacer-Tubular
14	32120-18	2	E-Ring	40	321-10	1	Screw-HH
15	2411-38	2	Joint-Ball	47	3219-14	1	Nut-Hex
16	93-2092	1	Clamp-Cable	48	302-5	2	Fitting-Grease
17	9266934	2	Screw	49	302-60	1	Fitting-Grease, 90 DEG
19	93-2279	1	Clamp-Cable				
20	322-1	2	Screw-HH				
21	105-5429	1	Spacer-Pedal, Traction				
22	105-5445	1	Cable-Traction				
22:1	3220-1	2	Nut-Jam				
24	74-9110	1	Pad-Pedal, Reverse				
25	105-5421-01	1	Traction Pedal ASM				
26	49-6440-03	1	Pedal-Forward				

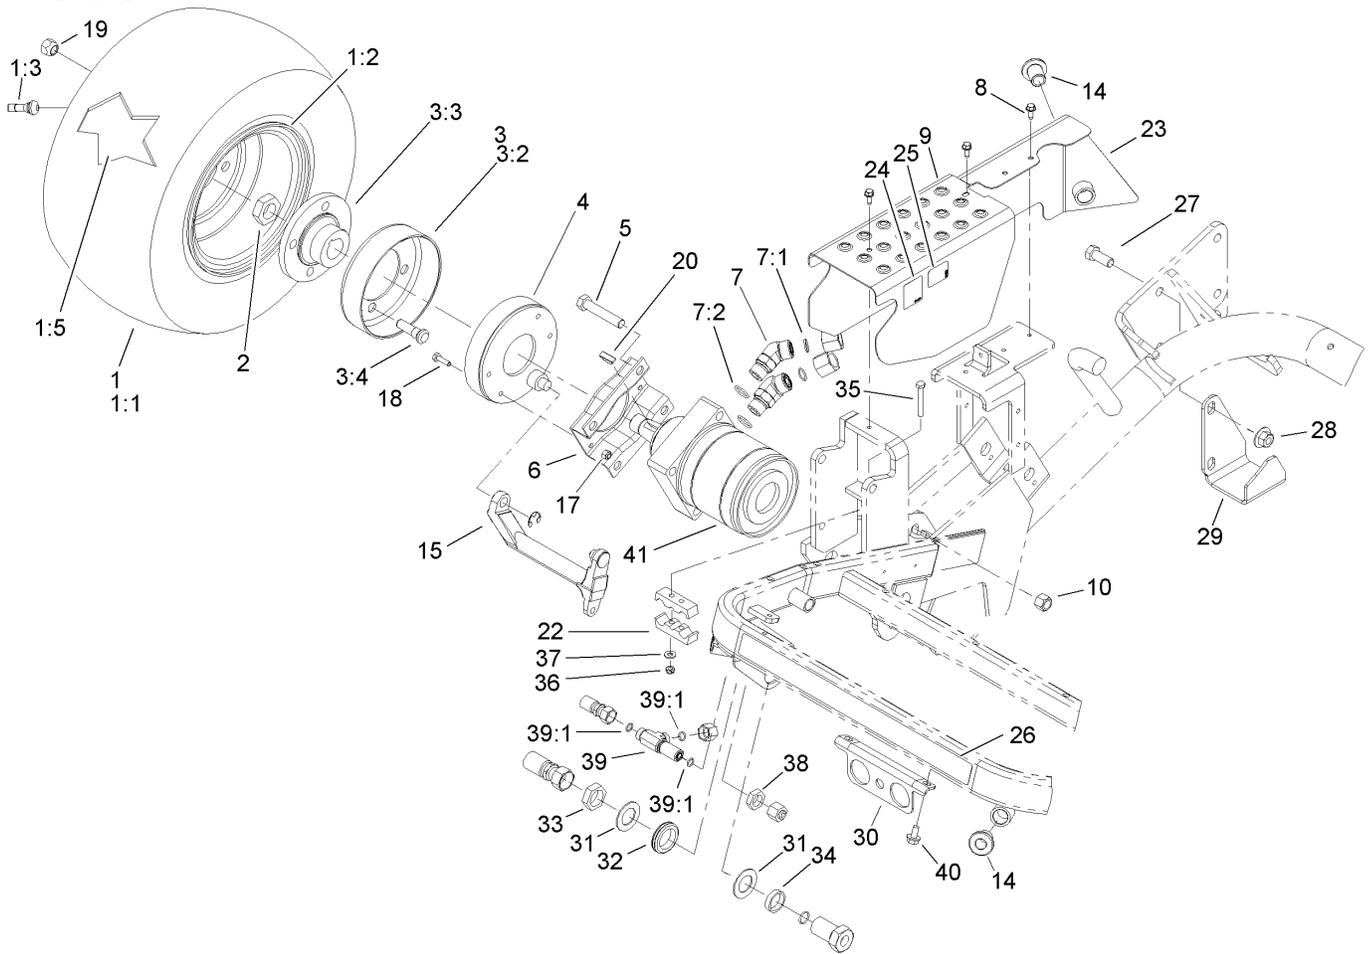

Front Wheel and Brake Assembly

Ref	Part No.	Qty.	Description
①		2	Wheel And Tire ASM
1:1	28-3680	1	Tire
1:2	217-60	1	Rim
1:3	232-27	1	Stem-Valve
1:5	232-37	1	Tube
2	26-3790	2	Nut-Lock
3	10-6821	2	Brake Drum ASM
3:2	10-6850	1	Drum-Brake
3:3	10-6870-03	1	Hub-Wheel
3:4	85-6540	4	Stud-Drive
4	104-7705	2	Brake ASM
5	325-11	8	Screw-HH
6	84-2000-03	2	Bracket-Brake
7	340-14	4	Fitting-HYD, 45 DEG
7:1	237-65	1	O-Ring
7:2	237-80	1	O-Ring
8	32144-10	4	Screw-HWH
9	105-0433-01	1	Channel-Step, RH
10	3296-23	8	Nut-Lock, NI
14	83-1700	3	Bushing-Flange
15	93-2096	2	Lever-Brake
17	3296-42	8	Nut-Lock, NI
18	321-5	8	Screw-HH
19	242-50	8	Nut-Lug


Ref	Part No.	Qty.	Description
20	3257-42	2	Key-Woodruff
①21	3290-378	3	Tie-Cable
22	93-2509	2	Clamp-Tube
23	105-8282-01	1	Side Shield ASM
24	105-4674	1	Decal-Noise
25	93-7252	1	Decal
26	105-5470	1	Decal
27	325-5	2	Screw-HH
28	32128-52	2	Locknut-Flange
29	105-8263-01	1	Bracket-ROPS
30	107-2552-01	1	Bracket-Bulkhead
31	69-9010	2	Washer
32	240-3	1	Grommet-Rubber
33	340-74	1	Locknut-Bulkhead
34	69-9000	1	Spacer
35	321-11	2	Screw-HH
36	3296-56	2	Nut-Lock, NI
37	3256-22	2	Washer-Flat
38	340-70	1	Nut-Lock
39	340-68	1	Fitting-Tee, Bulkhead
39:1	237-22	3	O-Ring
40	32104-32	2	Screw-HH
41	110-4015	2	Motor-Wheel, HYD (LH)

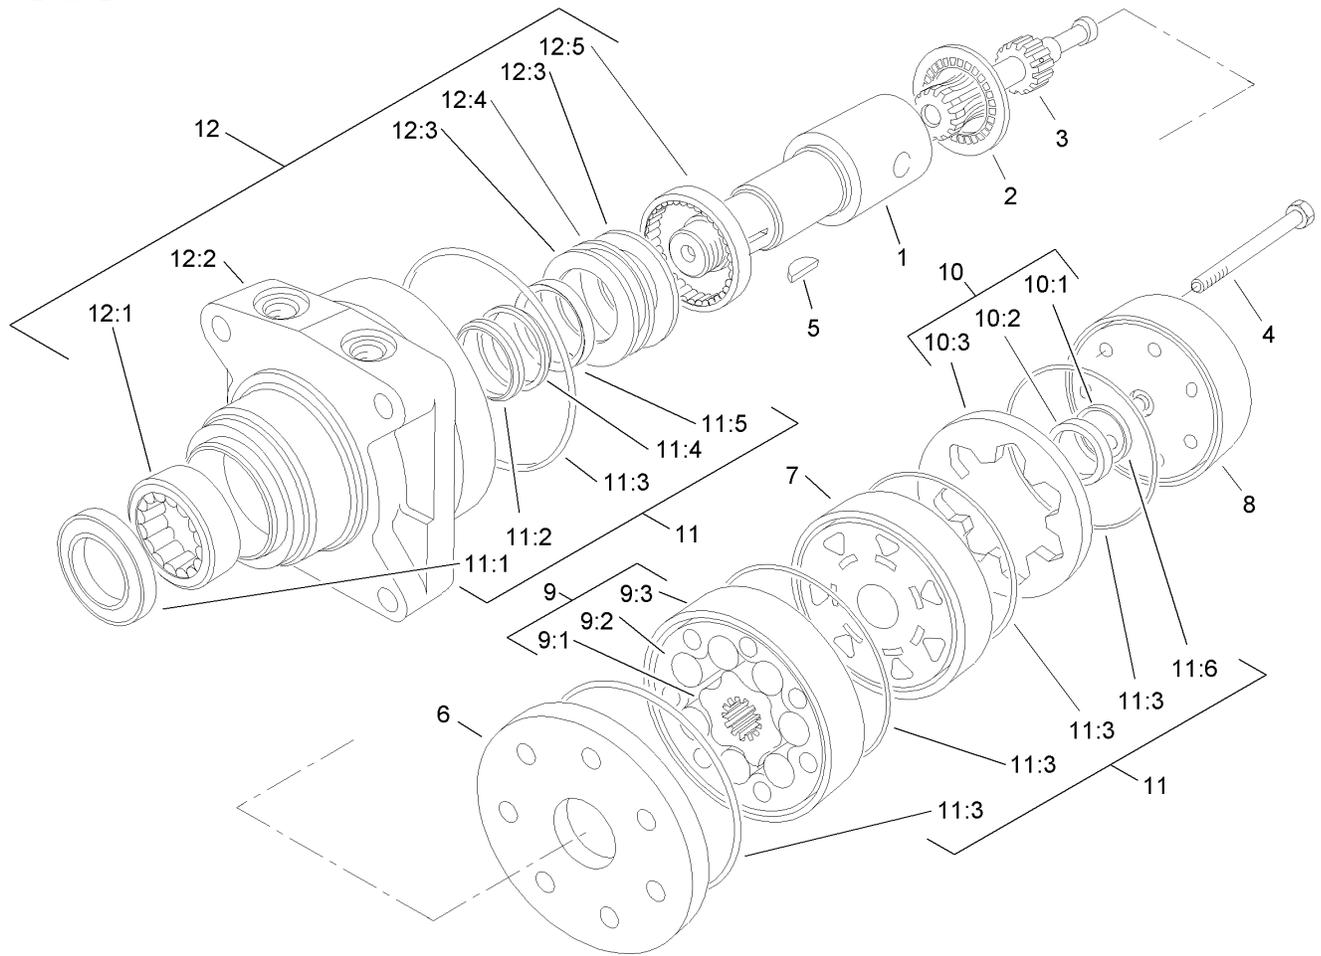

Hydraulic Drive Motor Assembly No. 110-4015


Ref	Part No.	Qty.	Description
1	76-0860	1	Shaft-Coupling
2	76-0850	1	Bearing-Thrust
3	92-9761	1	Link-Drive
4	92-9762	7	Screw-HH
5	3257-42	1	Key-Woodruff
6	76-0870	1	Plate-Wear
7	76-0840	1	Manifold
8	76-0940	1	End Cover ASM
9	92-9763	1	Rotor Set
●9:1		1	Rotor
●9:2		1	Vane
●9:3		1	Stator
10	76-0880	1	Commutator ASM
●10:1		1	Seal-Commutator
●10:2		1	Commutator
●10:3		1	Ring-Commutator
11	94-8178	1	Seal Kit
●11:1		1	Seal-Dirt And Water
●11:2		1	Washer-Backup
●11:3		5	Seal-Ring
●11:4		1	Washer-Backup
●11:5		1	Seal-Inner
●11:6		1	Seal-Commutator
12	76-0810	1	Housing ASM

Ref	Part No.	Qty.	Description
●12:1		1	Bearing
●12:2		1	Housing
●12:3		2	Washer-Thrust
●12:4		1	Bearing-Thrust
●12:5		1	Bearing

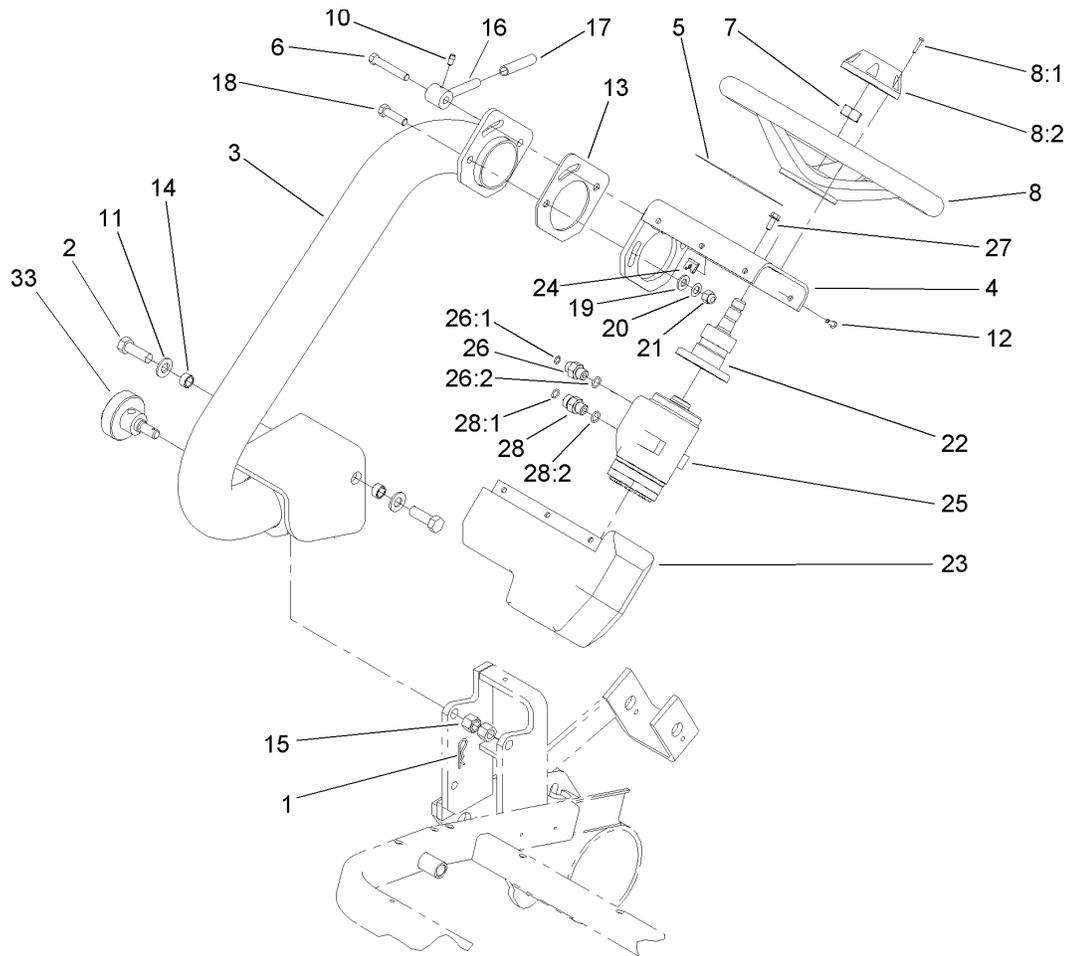

Steering Arm Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	3290-467	1	Pin-Hair	23	83-0810	1	Cover-Steering
2	325-6	2	Screw-HH	24	3290-277	6	Nut-Speed
3	105-0418-01	1	Steering Arm ASM	25	105-0424	1	Valve-Control, Steering
4	105-4316-03	1	Steering Mount ASM	26	340-1	3	Adapter
5	93-8063	1	Decal-Caution, Ce	26:1	237-21	1	O-Ring
5	104-2053	1	Decal-Warning	26:2	237-42	1	O-Ring
6	105-4326	1	Screw-HH, LH	27	33103-016	4	Screw-HHF
7	107-2562	1	Nut-Hex	28	340-2	2	Fitting-HYD, Straight
8	75-0560	1	Wheel-Steering	28:1	237-22	1	O-Ring
8:1	32144-21	1	Screw	28:2	237-42	1	O-Ring
8:2	68-5140	1	Cap-Wheel, Steering	33	105-0484	1	Knob-Steering
10	3241-1	1	Screw-Set, SQH				
11	3256-26	2	Washer-Flat				
12	3274-39	6	Screw-HSBH				
13	105-0457	1	Plate-Friction				
14	47-2890	2	Bushing				
15	3296-23	2	Nut-Lock, NI				
16	105-4313	1	Lever ASM				
17	92-6798	1	Cap-Rod, Tilt				
18	323-29	2	Screw-HH				
19	3256-24	2	Washer-Flat				
20	3290-477	2	Washer-Curved				
21	3296-39	2	Nut-Lock, NI				
22	105-0425	1	Steering Column ASM				

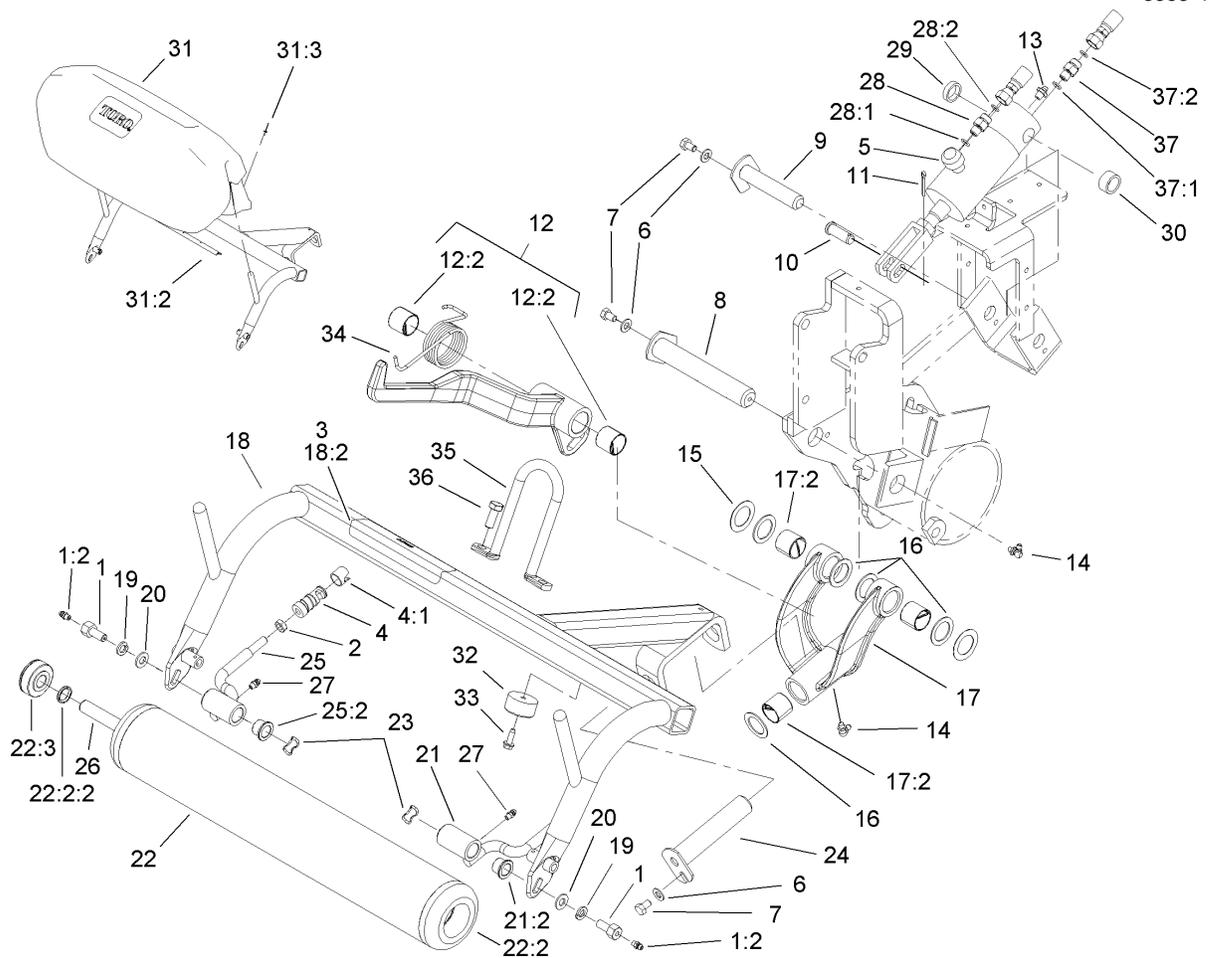

Right Hand Pull Frame Assembly

Ref	Part No.	Qty.	Description
1	11-0160	2	Roller Shaft Screw ASM
1:2	302-5	1	Fitting-Grease
2	3220-3	2	Nut-Hex, Jam
3	93-8064	1	Decal-Danger, Ce
4	99-1460	2	Ball Joint Receiver ASM
4:1	99-1461	1	Sleeve-Joint, Ball
5	106-9066	1	HYD Cylinder ASM
6	3256-23	3	Washer-Flat
7	322-1	3	Screw-HH
8	10-6110	1	Pin-Hinge
9	10-6060	1	Pin-Pivot, Ram
10	283-8	1	Pin-Clevis
11	3272-11	1	Pin-Cotter
12	107-2599	1	RH Lift Arm ASM
12:2	3-0348	2	Bushing
13	302-2	1	Fitting-Grease
14	302-60	2	Fitting-Grease, 90 DEG
15	5-1226	4	Washer
16	10-8110	6	Washer-Thrust
17	10-7820	1	Pivot Hinge ASM
17:2	3-0348	4	Bushing
18	108-8631	1	Right Pull Frame ASM
18:2	62-5070	1	Decal-Warning
19	3253-21	2	Washer-Lock


Ref	Part No.	Qty.	Description
20	3256-24	2	Washer-Flat
21	92-0586	1	Pull Arm ASM
21:2	3-1506	2	Bushing
22	99-4277	1	Roller ASM
22:2	253-83	2	Hub Yoke ASM
22:2:2	253-83	1	Seal-Oil
22:3	251-141	2	Bearing-Ball
23	3290-317	2	Washer-Spring
24	10-6090	1	Pin-Pivot
25	92-0585	1	Pull Arm ASM
25:2	3-1506	2	Bushing
26	21-8470	1	Shaft-Roller
27	302-5	2	Fitting-Grease
28	340-92	1	Fitting-HYD, Straight
28:1	237-78	1	O-Ring
28:2	237-21	1	O-Ring
29	105-3828	1	Spacer
30	74-3730	1	Spacer-Spindle, Rear
31	108-8642	3	Grass Basket ASM
31:2	104-2607	1	Strip-Basket
31:3	3290-382	8	Rivet-Pop
32	94-4548	2	Bumper-Recessed
33	32144-44	2	Screw-HWH
34	110-3951	1	Spring-Torsion, RH

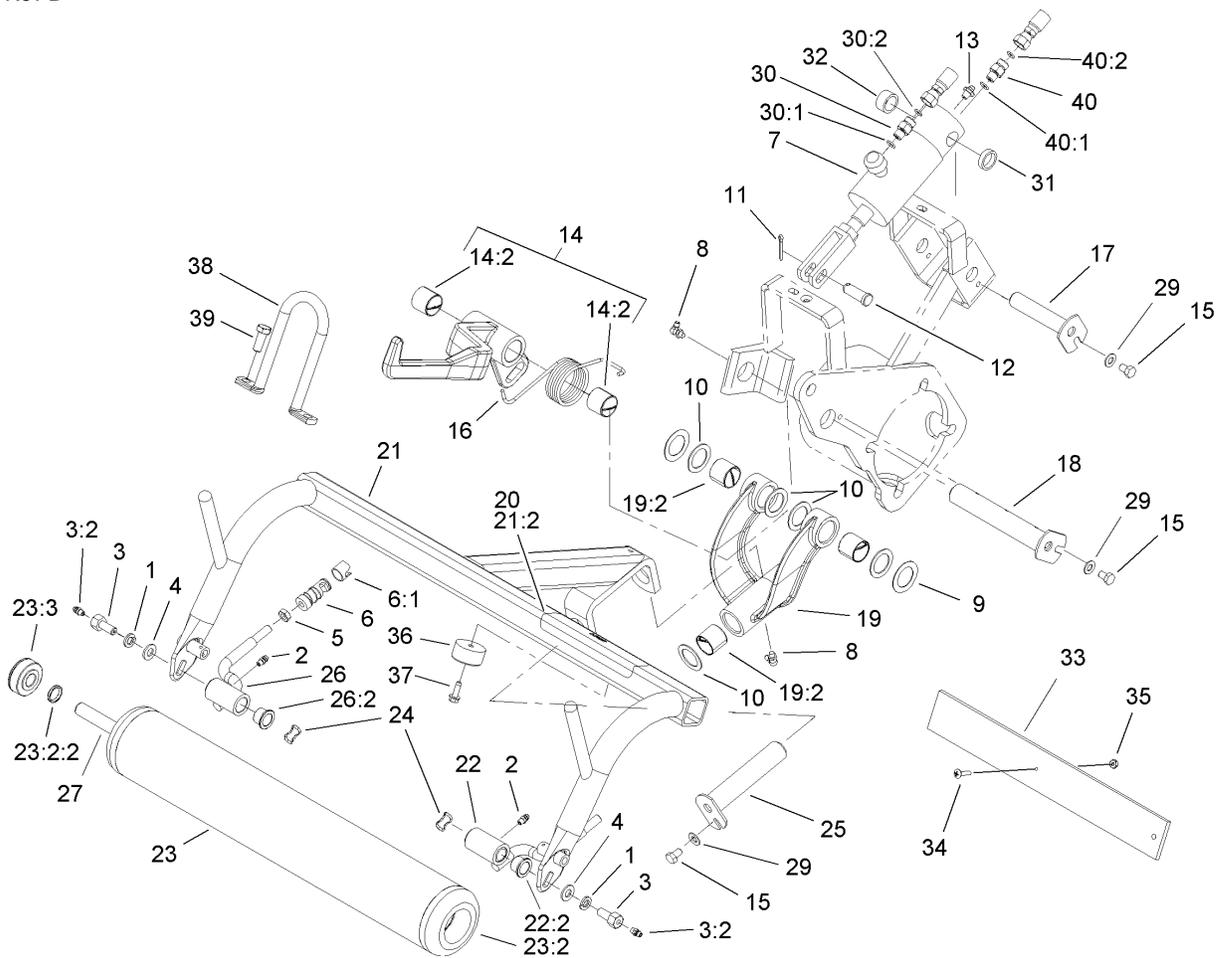

Left Hand Pull Frame Assembly

Ref	Part No.	Qty.	Description
1	3253-21	2	Washer-Lock
2	302-5	2	Fitting-Grease
3	11-0160	2	Roller Shaft Screw ASM
3:2	302-5	1	Fitting-Grease
4	3256-24	2	Washer-Flat
5	3220-3	2	Nut-Hex, Jam
6	99-1460	2	Ball Joint Receiver ASM
6:1	99-1461	1	Sleeve-Joint, Ball
7	106-9066	1	HYD Cylinder ASM
8	302-60	2	Fitting-Grease, 90 DEG
9	5-1226	4	Washer
10	10-8110	6	Washer-Thrust
11	3272-11	1	Pin-Cotter
12	283-8	1	Pin-Clevis
13	302-2	1	Fitting-Grease
14	107-2598	1	LH Lift Arm ASM
14:2	3-0348	2	Bushing
15	322-1	3	Screw-HH
16	110-3952	1	Spring-Torsion, LH
17	10-6060	1	Pin-Pivot, Ram
18	10-6110	1	Pin-Hinge
19	10-7820	1	Pivot Hinge ASM
19:2	3-0348	4	Bushing
20	93-8064	1	Decal-Danger, Ce


Ref	Part No.	Qty.	Description
21	108-8632	1	Left Pull Frame ASM
21:2	62-5070	1	Decal-Warning
22	92-0586	1	Pull Arm ASM
22:2	3-1506	2	Bushing
23	99-4277	1	Roller ASM
23:2	253-83	2	Hub Yoke ASM
23:2:2	253-83	1	Seal-Oil
23:3	251-141	2	Bearing-Ball
24	3290-317	2	Washer-Spring
25	10-6090	1	Pin-Pivot
26	92-0585	1	Pull Arm ASM
26:2	3-1506	2	Bushing
27	21-8470	1	Shaft-Roller
29	3256-23	3	Washer-Flat
30	340-92	1	Fitting-HYD, Straight
30:1	237-78	1	O-Ring
30:2	237-21	1	O-Ring
31	105-3828	1	Spacer
32	74-3730	1	Spacer-Spindle, Rear
33	65-8320	1	Bar-Gauge
34	32122-22	1	Screw-HH
35	3219-14	1	Nut-Hex
36	94-4548	2	Bumper-Recessed
37	32144-44	2	Screw-HWH

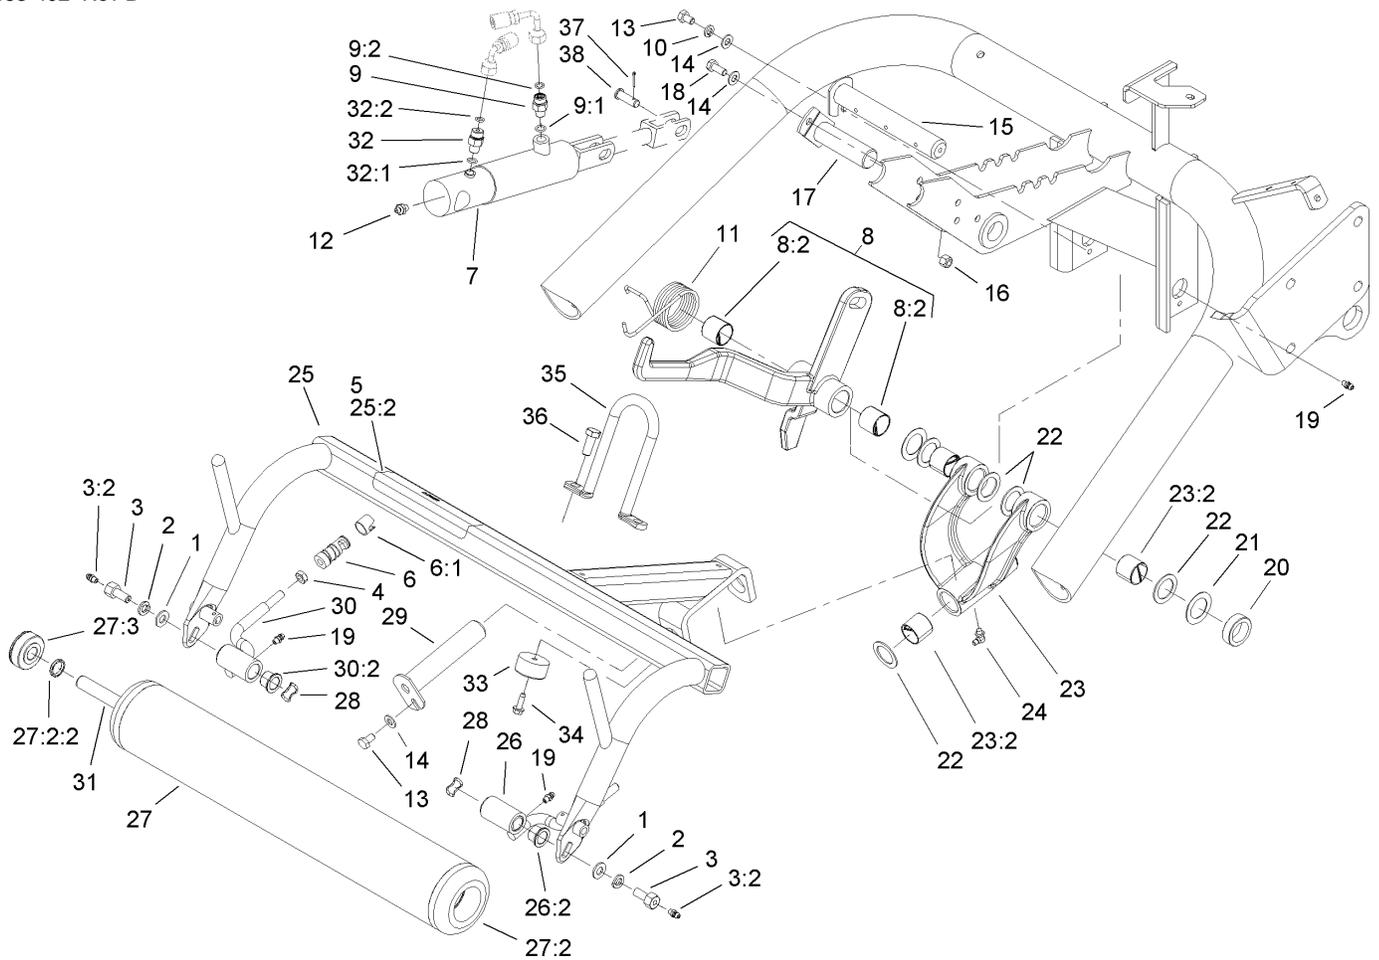

Center Pull Frame Assembly


Ref	Part No.	Qty.	Description
1	3256-24	2	Washer-Flat
2	3253-21	2	Washer-Lock
3	11-0160	2	Roller Shaft Screw ASM
3:2	302-5	1	Fitting-Grease
4	3220-3	2	Nut-Hex, Jam
5	93-8064	1	Decal-Danger, Ce
6	99-1460	2	Ball Joint Receiver ASM
6:1	99-1461	1	Sleeve-Joint, Ball
7	106-9064	1	HYD Cylinder ASM
8	110-3955	1	Center Lift Arm ASM
8:2	3-0348	2	Bushing
9	340-92	1	Fitting-HYD, Straight
9:1	237-78	1	O-Ring
9:2	237-21	1	O-Ring
10	3253-4	1	Washer-Lock
11	110-3953	1	Spring-Torsion, Center
12	302-2	1	Fitting-Grease
13	322-1	2	Screw-HH
14	3256-23	3	Washer-Flat
15	27-2550	1	Pin-Hinge
16	3296-29	1	Nut-Lock, NI
17	68-5560	1	Pin-Cylinder, Pivot
18	322-3	1	Screw-HH
19	302-5	3	Fitting-Grease

Ref	Part No.	Qty.	Description
20	93-2384	1	Spacer-Carrier
21	5-1226	4	Washer
22	10-8110	6	Washer-Thrust
23	105-0452	1	Pivot Hinge ASM
23:2	3-0348	4	Bushing
24	302-60	1	Fitting-Grease, 90 DEG
25	108-8633	1	Rear Pull Frame ASM
25:2	62-5070	1	Decal-Warning
26	92-0586	1	Pull Arm ASM
26:2	3-1506	2	Bushing
27	99-4277	1	Roller ASM
27:2		2	Hub Yoke ASM
27:2:2	253-83	1	Seal-Oil
27:3	251-141	2	Bearing-Ball
28	3290-317	2	Washer-Spring
29	10-6090	1	Pin-Pivot
30	92-0585	1	Pull Arm ASM
30:2	3-1506	2	Bushing
31	21-8470	1	Shaft-Roller
32	95-1639	1	Fitting-HYD
32:1	237-78	1	O-Ring
32:2	237-21	1	O-Ring
33	94-4548	2	Bumper-Recessed
34	32144-44	2	Screw-HWH

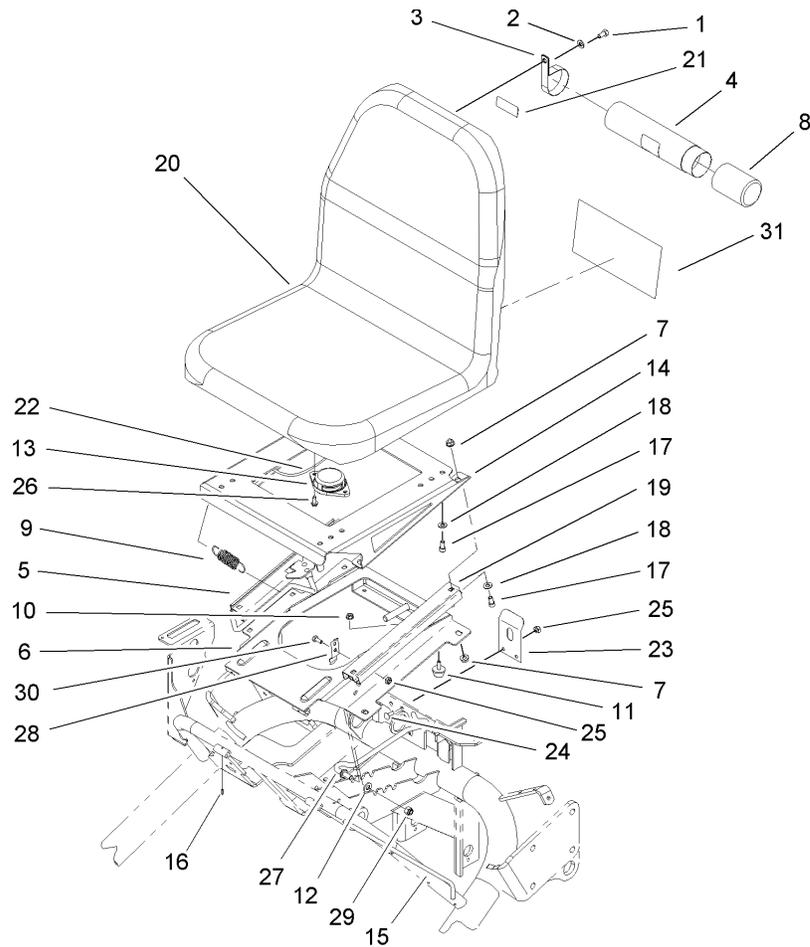

Seat Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	322-2	2	Screw-HH	25	3296-16	4	Nut-Lock, NI
2	3256-23	2	Washer-Flat	26	32144-10	2	Screw-HWH
3	2412-133	2	R-Clamp	27	106-4643	1	Rod-Prop, Seat
4	104-7050	1	Housing-Manual	28	68-5310	1	Clip-Rod, Prop
5	105-8265	1	Adjuster-Seat	29	3296-39	1	Nut-Lock, NI
6	105-0464-03	1	Seat Plate ASM	30	321-3	2	Screw-HH
7	32128-25	8	Nut-HF	31	105-8291	1	Decal-Service
8	104-7048	1	Cap-Housing	31	105-8292	1	Decal-Spanish
9	88-6330	1	Spring-Extension	31	105-8293	1	Decal-French
10	32128-33	2	Nut-HF	31	105-8296	1	Decal-Italian
11	1-523420	2	Bumper	31	105-8295	1	Decal-Swedish
12	3256-24	1	Washer-Flat	31	105-8294	1	Decal-German
13	92-6282	1	Switch-Seat	31	105-8297	1	Decal-Portuguese
14	105-0466-03	1	Plate-Seat, Upper	31	105-8298	1	Decal-Norwegian
15	105-0483	1	Rod-Pivot, Seat	31	105-8299	1	Decal-Finnish
16	32121-7	1	Pin-Roll, Slotted	31	105-8300	1	Decal-Danish
17	3274-12	8	Screw-HSH	31	105-8301	1	Decal-Dutch
18	3256-23	8	Washer-Flat	31	105-8302	1	Decal-Japan
19	51-0780	1	Slider-Seat				
20	104-4620	1	Seat				
21	93-6686	1	Decal-Oil, HYD				
22	108-9466	1	Harness-Wire, Seat				
23	66-2630	1	Latch-Seat				
24	3229-1	2	Screw-CARR				

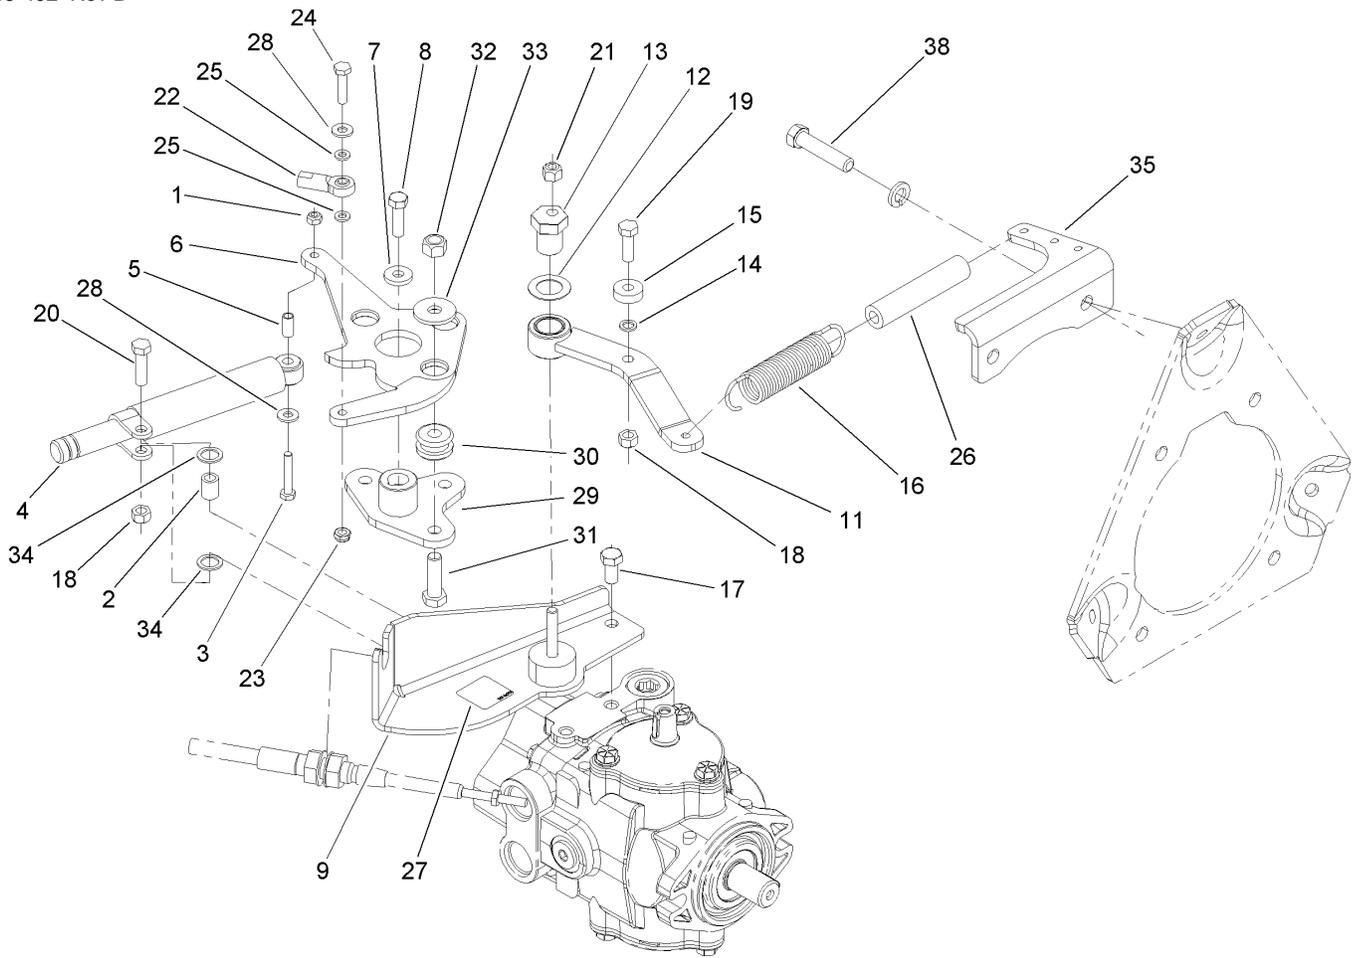

Neutral System Assembly

Ref	Part No.	Qty.	Description
1	33023-00	1	Nut-Lock
2	94-8197	1	Tube-Pivot
3	33113-035	1	Screw-HH
4	76-8870	1	Lever Damper ASM
5	94-1312	1	Spacer-Pivot
6	105-5477-03	1	Lever-Pump
7	88-7200	1	Washer-Flat
8	3210-6	1	Screw-HH
9	105-5475	1	Cable Support ASM
11	105-4302	1	Neutral Arm ASM
12	3-6498	1	Washer-Thrust
13	93-2111	1	Stud-Traction
14	75-5470	1	Spacer-Bearing
15	251-259	1	Bearing-Ball
16	94-1369	1	Spring-Extension
17	323-4	2	Screw-HH
18	33024-00	2	Nut-Lock
19	33114-025	1	Screw-HH
20	33114-030	1	Screw-HH
21	3296-29	1	Nut-Lock, NI
22	2411-41	1	Joint-Ball
23	3296-56	1	Nut-Lock, NI
24	321-7	1	Screw-HH
25	33093-00	2	Washer-Flat


Ref	Part No.	Qty.	Description
26	99-4251	1	Hose-Dampener
27	93-9051	1	Decal-Bolt, Eccentric
28	3256-22	2	Washer-Flat
29	94-3486	1	Plate
30	63-9750	3	Mount
31	33115-035	3	Screw-HH
32	33025-00	3	Nut-Lock
33	2844	3	Washer
34	94-8196	2	Washer-Nylon
35	105-4307-03	1	Bracket-Spring
38	324-8	2	Screw-HH

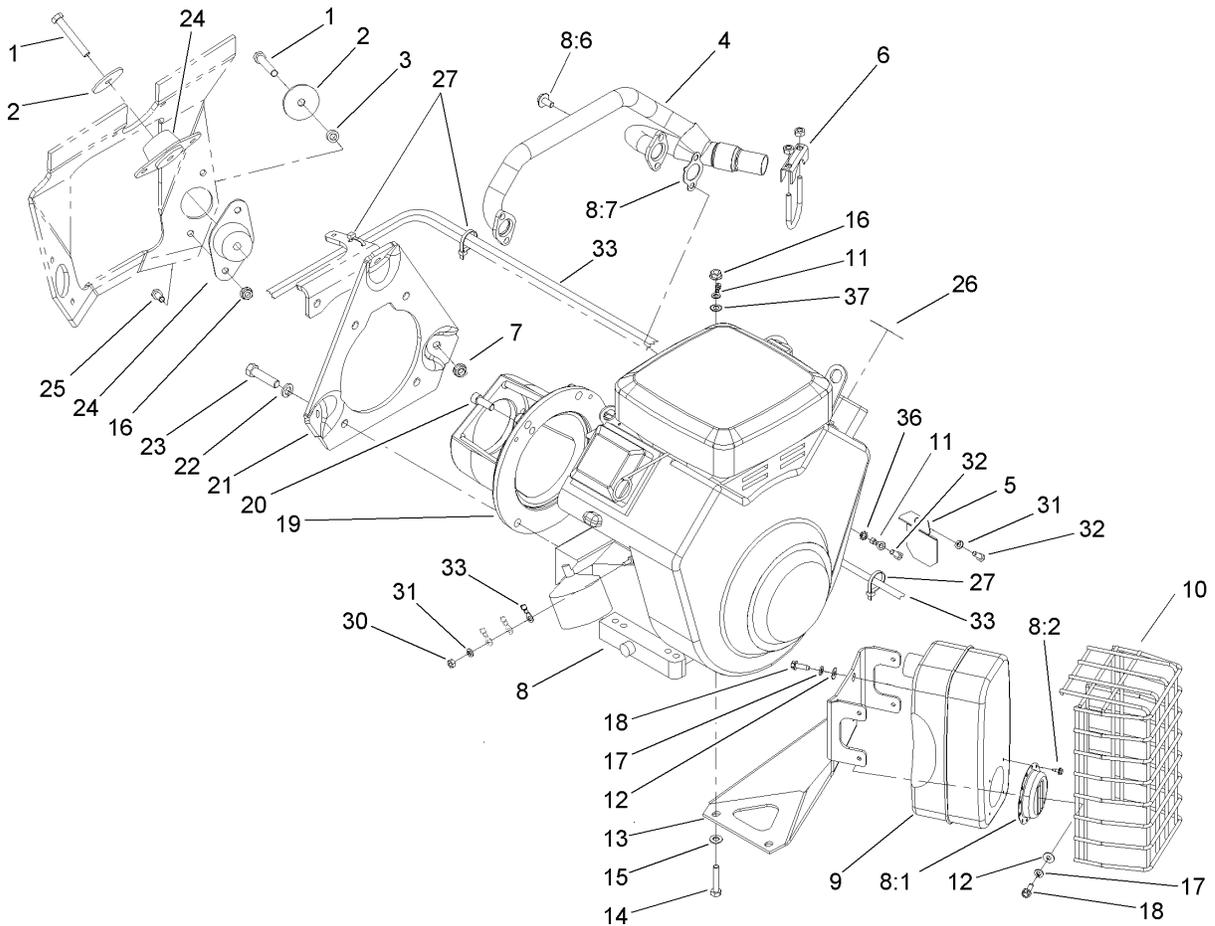

Engine Installation Assembly

Ref	Part No.	Qty.	Description
1	323-12	3	Screw-HH
2	83-1040	3	Washer-Flat
3	83-1050	2	Spacer
4	108-6539	1	Manifold-Exhaust
5	83-2310	1	Shield-Regulator
6	2112-11	1	Clamp-Muffler
7	3290-357	3	Nut-HHF, Whiz
8	108-6499	1	Engine-18Hp, Vanguard
8:1		1	Deflector-Exhaust
8:2		4	Screw-HH
8:6		4	Screw-HHF
8:7		2	Gasket-Manifold, Exhaust
9	98-0616	1	Muffler ASM
10	83-1400-03	1	Shield-Muffler
11	108-6486	1	Wire-Ground
12	3256-1	8	Washer-Flat
13	83-1630-03	1	Bracket-Support, Muffler
14	322-8	2	Screw-HH
15	3256-23	2	Washer-Flat
16	32128-20	8	Nut-HF
17	3253-3	8	Washer-Lock
18	49-2040	8	Screw-HWHTF
19	83-1060-03	1	Adapter-Pump
20	3274-7	2	Screw-HSH


Ref	Part No.	Qty.	Description
21	85-8120-03	1	Plate-Mount, Engine
22	3253-6	4	Washer-Lock
23	324-7	2	Screw-HH
24	107-2560	3	Mount-Engine
25	322-3	6	Screw-HH
26	93-8069	1	Decal-Surface, Hot
27	3290-379	4	Tie-Cable
30	43-2830	1	Nut-Hex
31	43-5930	2	Washer-Spring
32	33113-016	2	Screw-HH
33	105-8276	1	Harness-Wire, Engine
33:1	106-4642	1	Harness-Wire, Fusible Link
36	3255-7	1	Washer-Lock / EXT
37	3255-8	1	Washer-Lock

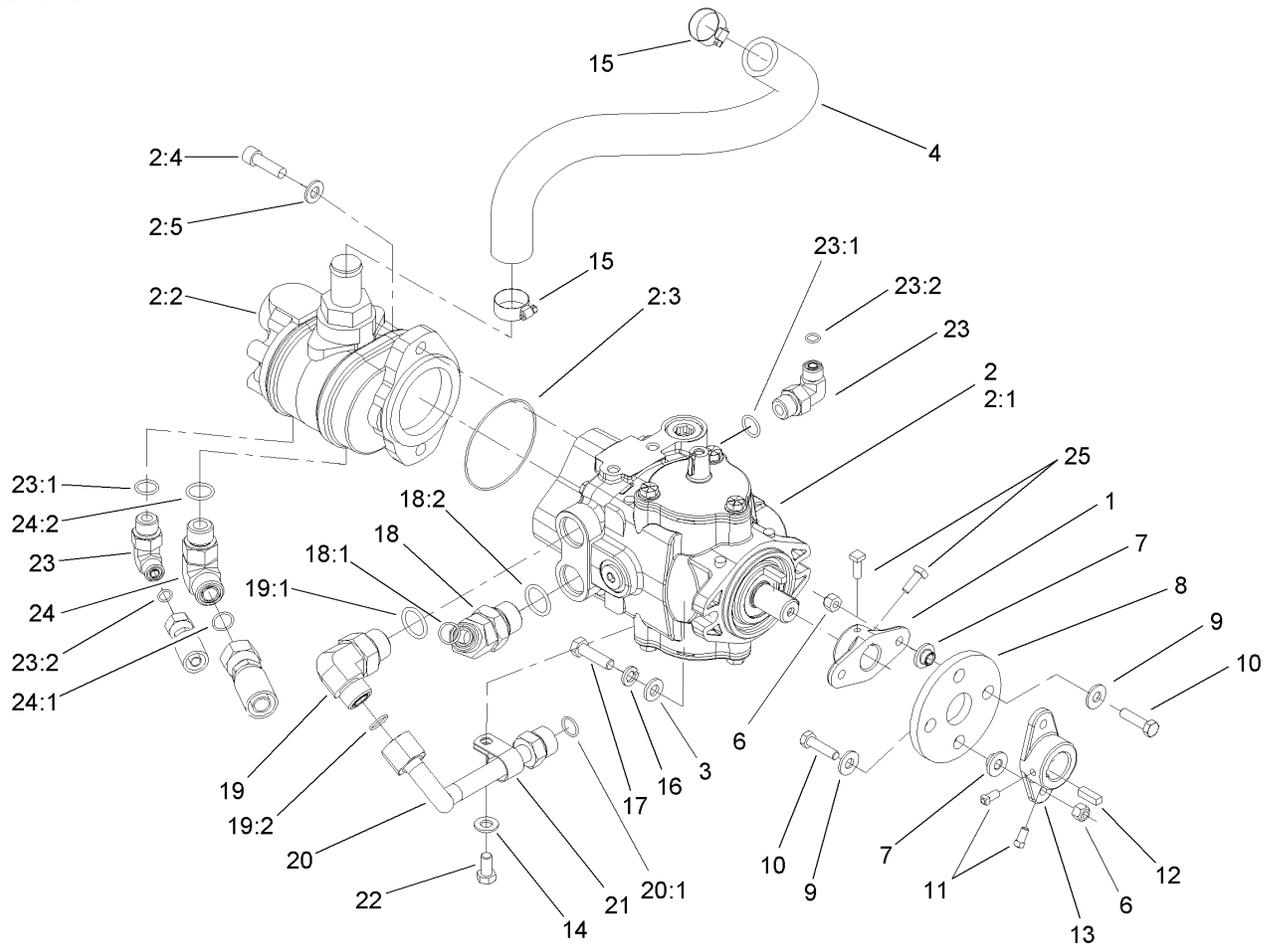

Hydrostat and Gear Pump Drive Assembly

Ref	Part No.	Qty.	Description
1	93-2589	1	Hub-Pump
2	105-0453	1	Hydrostat/Gear Pump ASM
2:1	105-0494	1	Hydrostat ASM
2:2	104-7737	1	Gear Pump ASM
2:3	60-3520	1	O-Ring
2:4	3274-1	2	Screw-HSH
2:5	3256-24	2	Washer-Flat
3	100-4852	2	Washer-Hardened
4	105-8285	1	Hose-Inlet, Pump
6	3296-29	4	Nut-Lock, NI
7	27-6600	4	Spacer-Coupling
8	44-2230	1	Coupling-Rubber
9	3256-3	4	Washer-Flat
10	322-6	4	Screw-HH
11	3241-2	2	Screw-SQH
12	10-7070	1	Key-Square
13	27-1960	1	Hub-Engine
14	3256-24	1	Washer-Flat
15	2412-34	2	Clamp-Hose
16	3253-21	2	Washer-Lock
17	323-29	2	Screw-HH
18	340-156	1	Fitting-HYD
18:1	237-65	1	O-Ring
18:2	237-81	1	O-Ring


Ref	Part No.	Qty.	Description
19	340-139	1	Fitting-HYD, 90 DEG
19:1	237-81	1	O-Ring
19:2	237-65	1	O-Ring
20	105-8307	1	Tube-HYD, Traction
20:1	237-65	1	O-Ring
21	2412-41	1	Clamp
22	323-4	1	Screw-HH
23	340-18	2	Fitting-HYD, 90 DEG
23:1	237-79	1	O-Ring
23:2	237-22	1	O-Ring
24	340-17	1	Fitting-HYD, 90 DEG
24:1	237-65	1	O-Ring
24:2	237-80	1	O-Ring
25	3241-6	2	Screw-SQH

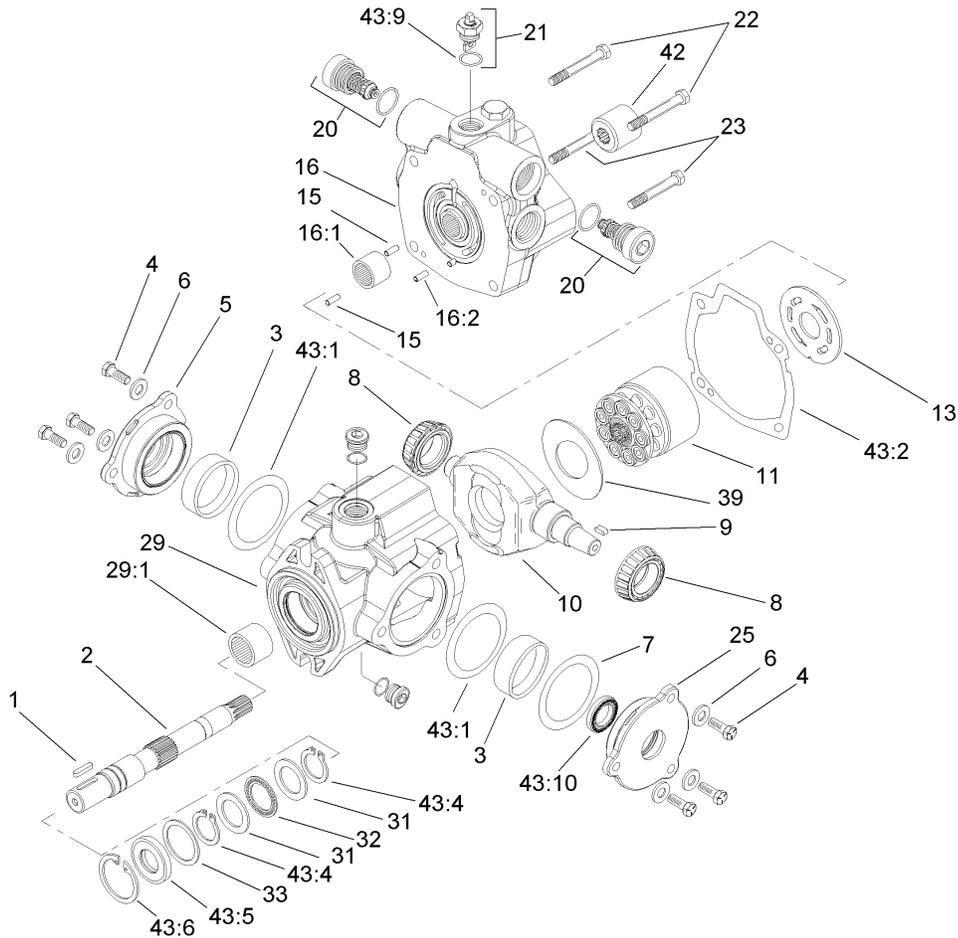

Hydrostat Assembly No. 105-0494

Ref	Part No.	Qty.	Description
1	94-3645	1	Key
2	94-6359	1	Shaft-Drive
3	104-4046	2	Bearing-Cup
4	98-4640	6	Screw-Cap
5	98-4644	1	Plate-Cover
6	105-9762	6	Washer
7	100-3182	2	Shim Kit
8	98-4639	2	Bearing-Cone
9	94-3646	1	Key
10	100-3175	1	Camplate
11	76-6070	1	Rotating Kit
13	100-3180	1	Valve-Plate
15	76-6150	2	Pin-Dowel
16	105-3813	1	Endcover Sub ASM
16:1	94-6368	1	Bearing
●16:2		1	Pin-Roll
20	105-3812	2	Valve-Check
21	105-3811	1	Valve-Bypass
22	76-6170	2	Capscrew
23	76-6160	2	Capscrew
25	98-4645	1	Plate-Cover
29	100-3176	1	Housing ASM
29:1	94-6363	1	Bearing
31	252-71	2	Washer-Thrust


Ref	Part No.	Qty.	Description
32	252-66	1	Bearing-Thrust
33	33-3720	1	Washer
39	98-4635	1	Insert-Plate, Cam
42	74-9040	1	Coupler
43	105-3844	1	Seal Repair Kit
43:1	100-3179	2	O-Ring
43:2	33-4930	1	Gasket-Housing
43:4	32151-29	2	Ring-Retaining
43:5	104-4861	1	Seal-Shaft
43:6	32151-13	1	Ring-Retaining
●43:9		1	O-Ring
●43:10		1	Seal-Shaft

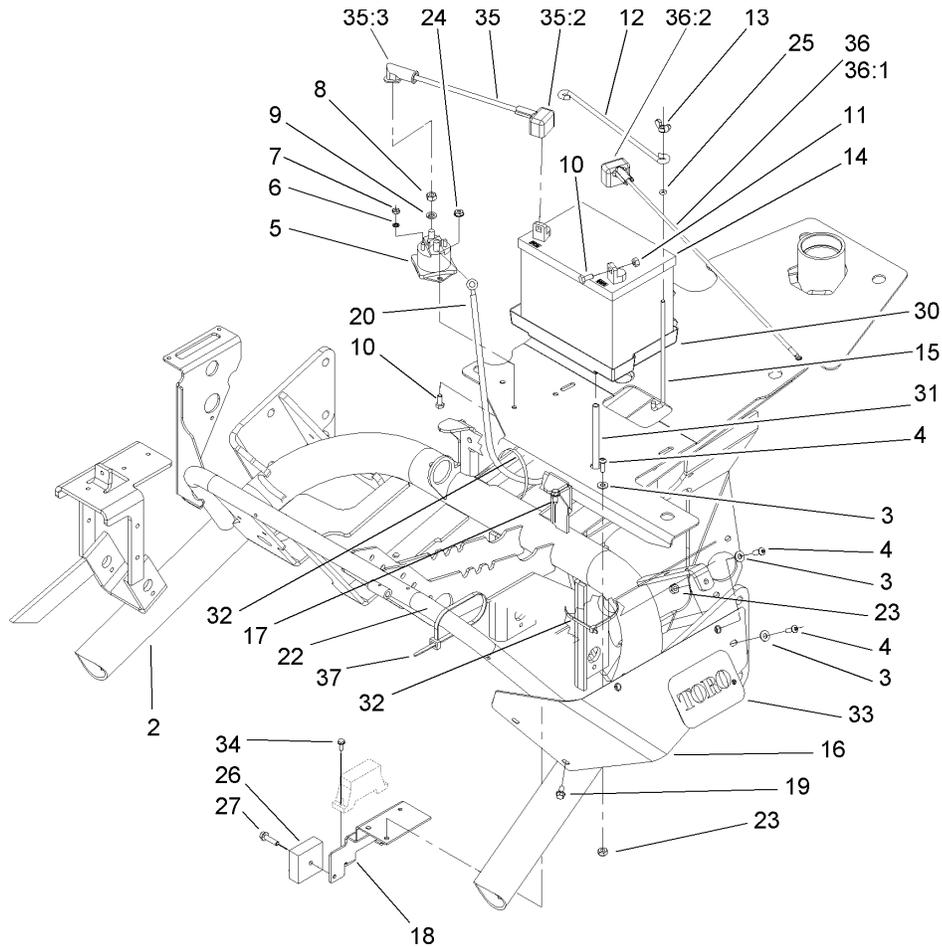

Frame and Battery Assembly

Ref	Part No.	Qty.	Description
2	105-0401-01	1	Frame ASM
3	3256-22	4	Washer-Flat
4	3274-69	4	Screw-HSBH
5	28-4210	1	Solenoid
6	3254-1	2	Washer-Lock, Int
7	3219-14	2	Nut-Hex
8	3218-13	2	Nut-Jam, Brass
9	3253-4	2	Washer-Lock
10	321-3	4	Screw-HH
11	3217-5	2	Nut-Hex
12	100-6434	1	Rod-Battery, Hold Down
13	32103-22	2	Nut-Wing
14	104-8162	1	Battery
15	100-6435	2	Post-Battery
16	105-5411	1	Valve Cover Shield ASM
17	32144-10	1	Screw-HWH
18	105-4310-01	1	Bracket-Fuse
19	32104-116	2	Screw
20	98-2161	1	Cable-Battery, Positive
22	105-0499-03	1	Panel-Control
23	3296-16	2	Nut-Lock, NI
24	32149-2	2	Nut-Keps
25	237-143	2	O-Ring
26	92-2538	1	Module-Timer


Ref	Part No.	Qty.	Description
27	32144-86	1	Screw-HWHTF
30	106948	1	Tray-Battery
31	104-2061	1	Tube-Drain, Battery
32	3290-379	2	Tie-Cable
33	94-2579	1	Decal
34	32144-1	2	Screw-Taptite
35	83-2420	1	Positive Cable ASM
35:2	28-8080	1	Boot-Terminal
35:3	83-2430	1	Boot-Terminal
36	98-2165	1	Negative Cable ASM
36:1	83-1150	1	Engine Ground Wire ASM
36:2	98-0603	1	Boot-Terminal
37	3290-378	1	Tie-Cable

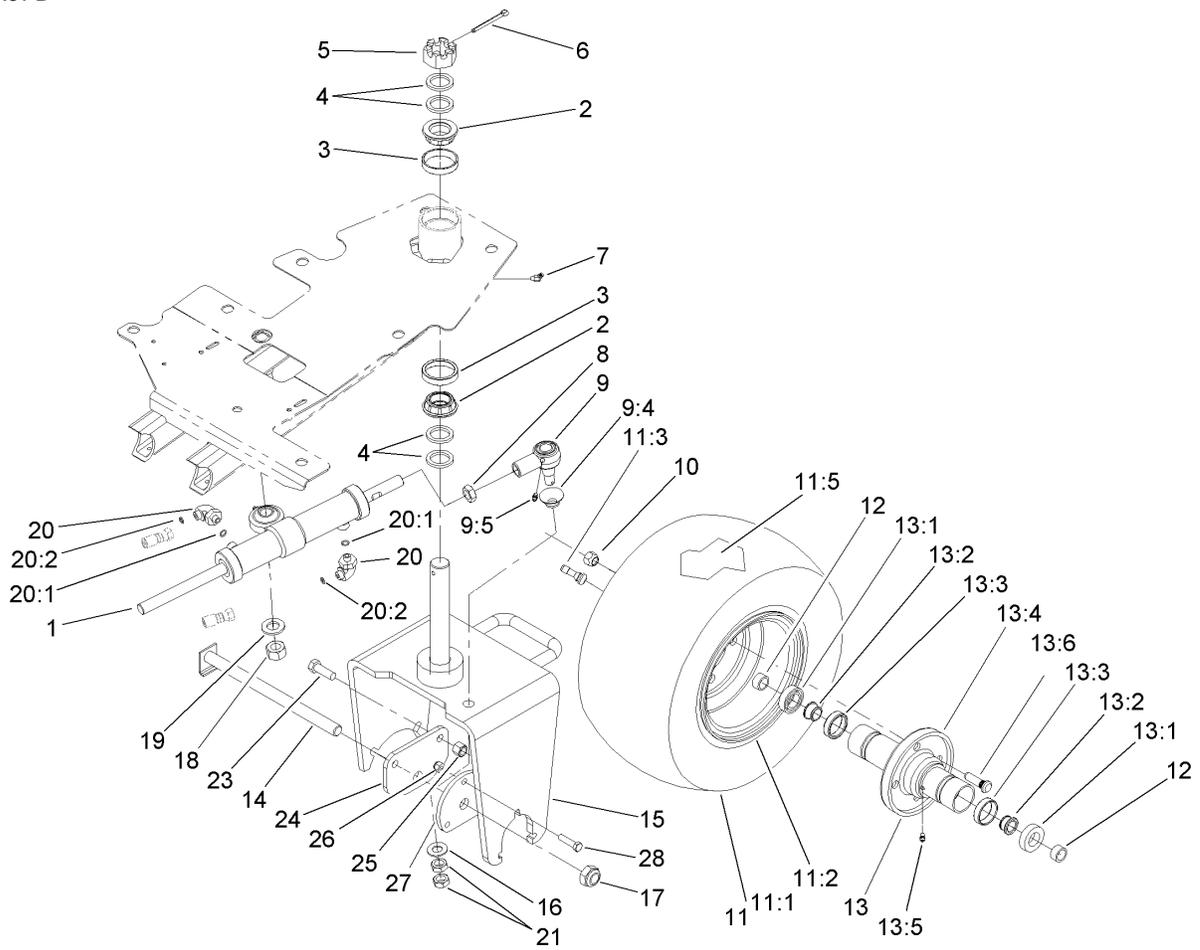

Rear Wheel Assembly


Ref	Part No.	Qty.	Description
1	105-0411	1	Cylinder-Steering
2	254-70	2	Bearing-Cone
3	254-61	2	Cup-Bearing
4	18-6320	4	Washer-Steering
5	32136-9	1	Nut-Hex, Slotted
6	3272-37	1	Pin-Cotter
7	302-11	1	Fitting-Lube, 45 DEG
8	84-5300	1	Nut-Jam
9	107-2553	1	Rod End ASM
9:4	106-6896	1	Seal
9:5	302-5	1	Fitting-Grease
10	242-50	4	Nut-Lug
11		1	Wheel And Tire ASM
11:1	28-3680	1	Tire
11:2	217-60	1	Rim
11:3	232-27	1	Stem-Valve
11:5	232-37	1	Tube
12	74-3730	2	Spacer-Spindle, Rear
13	72-9710	1	Hub-Tire
13:1	253-111	2	Seal-Oil
13:2	254-78	2	Bearing-Cone
13:3	254-79	2	Bearing-Roller, Cup
13:4	75-9440	1	Hub ASM
13:5	302-11	1	Fitting-Lube, 45 DEG

Ref	Part No.	Qty.	Description
13:6	10-6830	4	Stud-Type, Drive
14	5-3934	1	Bolt-Caster
15	93-2529-01	1	Castor Fork ASM
16	3256-27	1	Washer-Flat
17	3296-67	1	Nut-Lock NI
18	3217-12	1	Nut-Hex
19	3256-28	1	Washer-Flat
20	340-132	2	Fitting-HYD, 90 DEG
20:1	237-78	1	O-Ring
20:2	237-21	1	O-Ring
21	3220-6	2	Nut-Jam
23	325-6	2	Screw-HH
24	99-1485-01	1	Plate-Adapter, Motor
25	3296-23	2	Nut-Lock, NI
26	3296-39	3	Nut-Lock, NI
27	99-1486-01	1	Plate-Adapter
28	323-8	3	Screw-HH

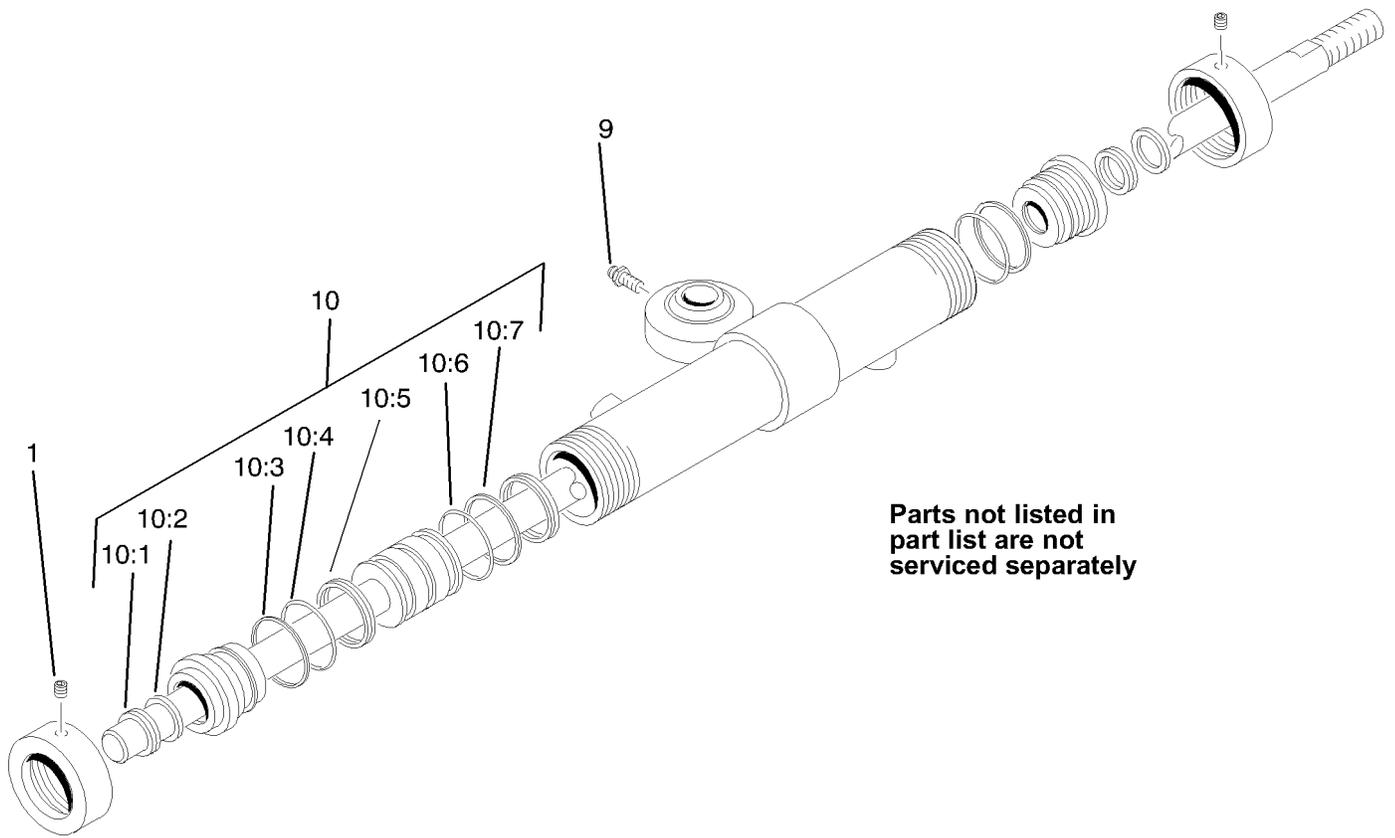

Hydraulic Cylinder Assembly No. 105-0411


Ref	Part No.	Qty.	Description
1	3245-1	2	Screw-Set, HSH
9	302-5	1	Fitting-Grease
10	83-2380	1	Seal Repair Kit
②10:1		2	Wiper-Rod
②10:2		2	U-Cup-Double Lip
②10:3		2	Ring-Back-Up
②10:4		2	O-Ring
②10:5		2	Ring-Wear
②10:6		1	O-Ring
②10:7		1	O-Ring

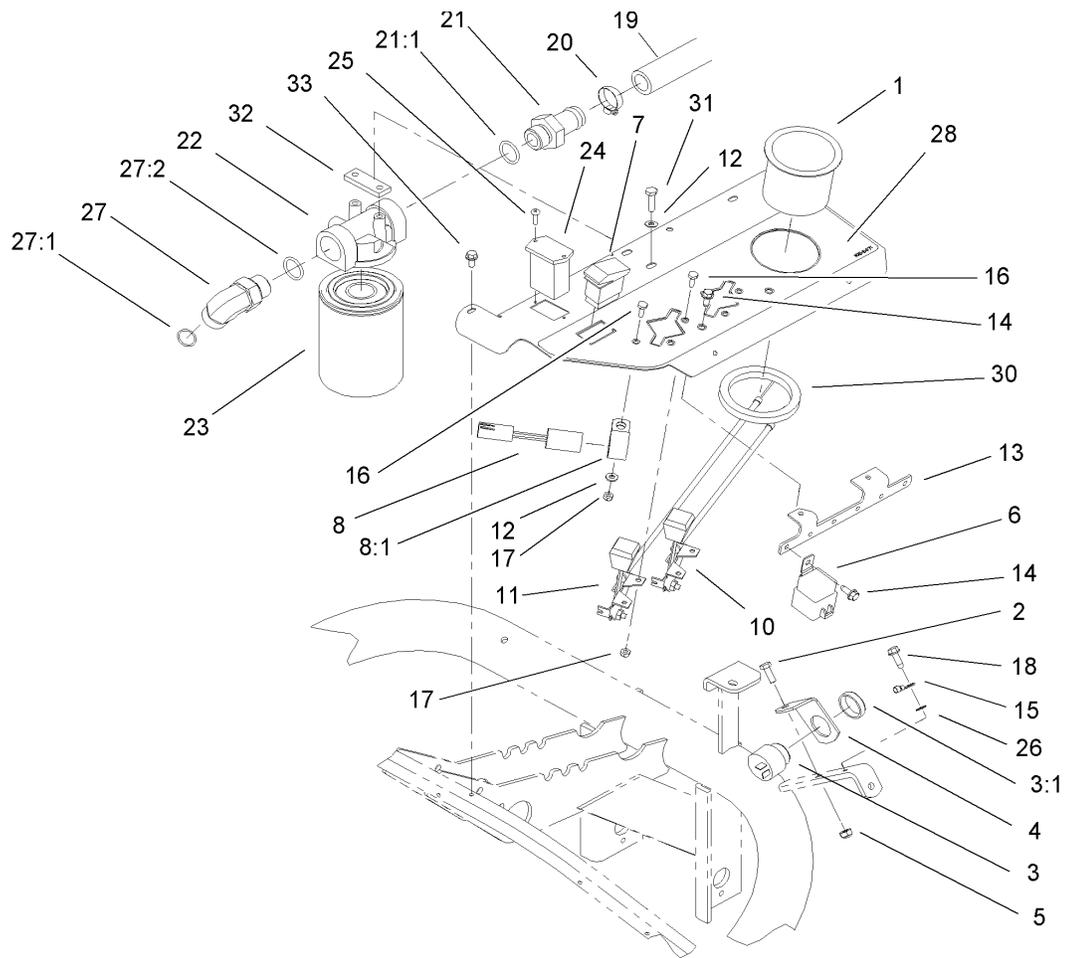

Control Panel Assembly

Ref	Part No.	Qty.	Description
1	94-1410	1	Holder-Can, Beverage
2	321-4	1	Screw-HH
3	80-9330	1	Alarm-Audio
3:1	104-5107	1	Nut-Plastic, Knurled
4	83-1530	1	Bracket-Support, Buzzer
5	3296-16	1	Nut-Lock, NI
6	99-7430	6	Relay
7	105-4320	1	Switch
8	83-2280	1	Timer-Delay
8:1	98-4604	1	R-Clamp
10	83-0040	1	Control-Choke
11	83-0030	1	Control-Throttle
12	3256-22	3	Washer-Flat
13	105-4306-03	1	Bracket-Relay
14	32144-10	8	Screw-HWH
15	83-1150	1	Engine Ground Wire ASM
16	3290-134	5	Screw
17	3296-12	5	Nut-Lock
18	32104-95	1	Screw-HWH
19	105-5410	1	Hose ASM
20	2412-34	1	Clamp-Hose
21	99-3017	1	Fitting
21:1	237-81	1	O-Ring
22	92-5821	1	Filter Head ASM


Ref	Part No.	Qty.	Description
23	107-9531	1	Element-Filter
24	75-6820	1	Hourmeter
25	32144-18	2	Screw-HH
26	3255-7	1	Washer-Lock / EXT
27	340-142	1	Fitting-HYD, 90 DEG
27:1	237-58	1	O-Ring
27:2	237-81	1	O-Ring
28	105-5471	1	Decal-Panel, Left Control
30	104-1476	1	Ring-Rubber
31	321-5	2	Screw-HH
32	105-4309	1	Plate-Filter
33	32104-116	1	Screw

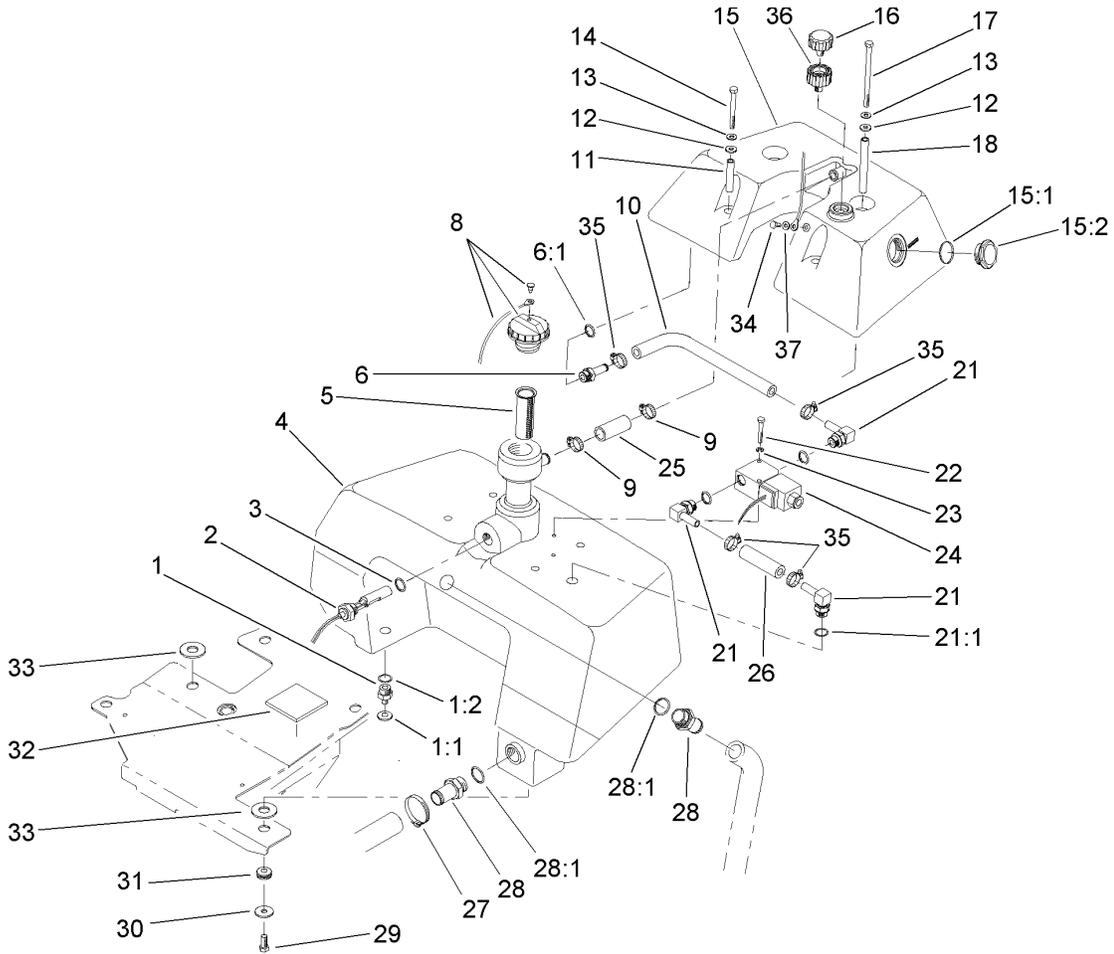

Hydraulic Reservoir and Leak Detector Assembly

Ref	Part No.	Qty.	Description
1	340-3	1	Adapter
1:1	237-22	1	O-Ring
1:2	237-79	1	O-Ring
2	83-1450	1	Sensor-Level, Oil
3	237-80	1	O-Ring
4	105-9783	1	Tank-HYD
5	83-1520	1	Screen-Filler
6	354-121	1	Fitting-HYD, Straight
6:1	237-79	1	O-Ring
8	93-7160	1	Cap-Oil, HYD
9	2412-141	2	Clamp-Drive, Worm
10	83-2070	1	Hose-Valve
11	83-1550	2	Spacer-Tube, Short
12	83-1470	4	Washer-Neoprene
13	3256-71	4	Washer-Flat
14	322-14	2	Screw-HH
15	83-2100	1	Tank-Auxiliary, HYD
15:1	94-8166	1	O-Ring
15:2	83-2250	1	Guage-Sight
16	68-6150	1	Breather
17	322-29	2	Screw-HH
18	83-1560	2	Spacer-Tube, Long
21	354-120	3	Fitting-HYD, 90 DEG
21:1	237-79	1	O-Ring


Ref	Part No.	Qty.	Description
22	321-11	2	Screw-HH
23	3253-3	2	Washer-Lock
24	83-1460	1	Solenoid Valve ASM
●24:2	83-2000	1	Spool-Valve
●24:3	83-2010	1	Coil ASM
25	110-3998	1	Hose-Overflow
26	83-2080	1	Hose-Valve, Tank
27	2412-34	1	Clamp-Hose
28	83-0870	2	Fitting-Hose, Barbed
28:1	237-177	1	O-Ring
29	323-6	3	Screw-HH
30	63-8410	3	Washer
31	240-11	3	Bushing-Flange
32	83-2390	1	Pad-Tank
33	83-2400	2	Spacer
34	321-2	1	Screw-HH
35	2412-36	4	Clamp-Hose
36	92-8020	1	Adapter-Breather
37	3256-22	1	Washer-Flat

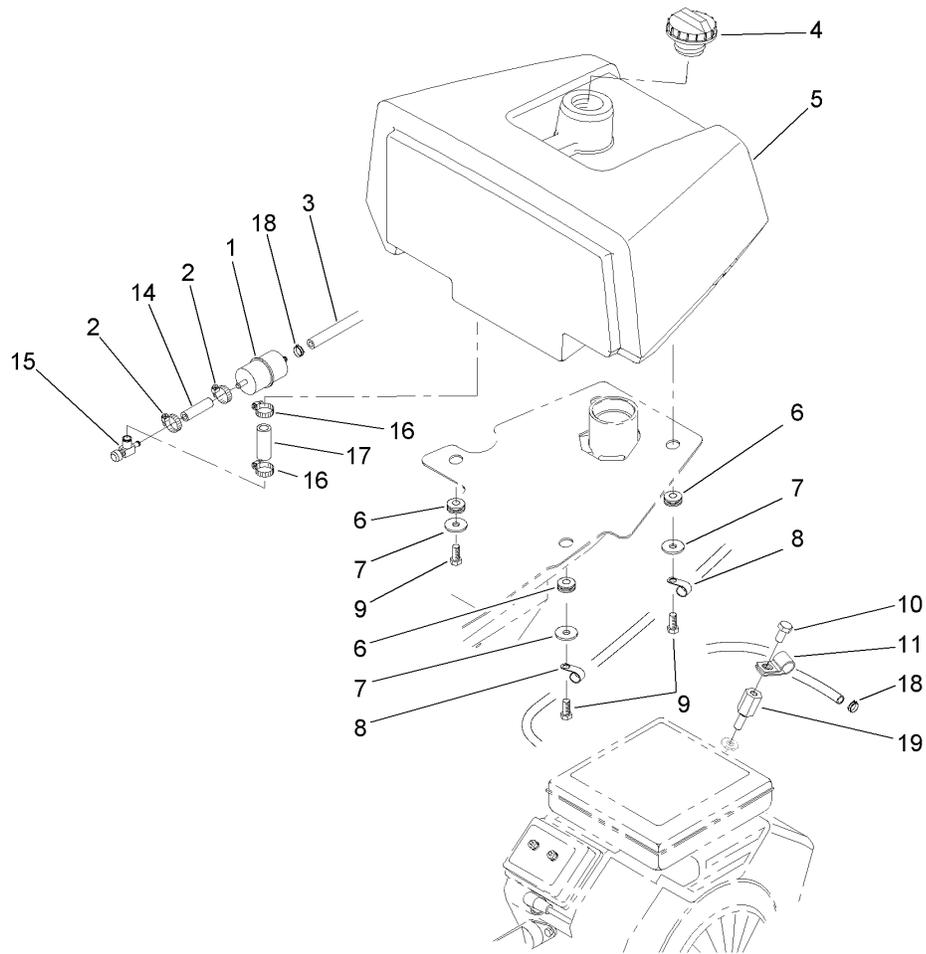

Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	94-2690	1	Filter-Fuel
2	2412-108	2	Clamp-Worm
3	109-0275	1	Hose-Fuel
4	93-7170	1	Cap-Fuel
5	105-8266	1	Tank-Fuel
6	240-11	4	Bushing-Flange
7	63-8410	4	Washer
8	2412-41	3	Clamp
9	323-6	4	Screw-HH
10	33113-012	1	Screw-HH
11	2412-94	1	Clamp
14	109-0660	1	Hose-Fuel
15	83-1390	1	Valve-Shut-Off, Fuel
16	2412-36	2	Clamp-Hose
17	106-1128	1	Hose-Fuel
18	2412-98	2	Clamp
19	106-4616	1	Screw-Spacer


--	--	--	--

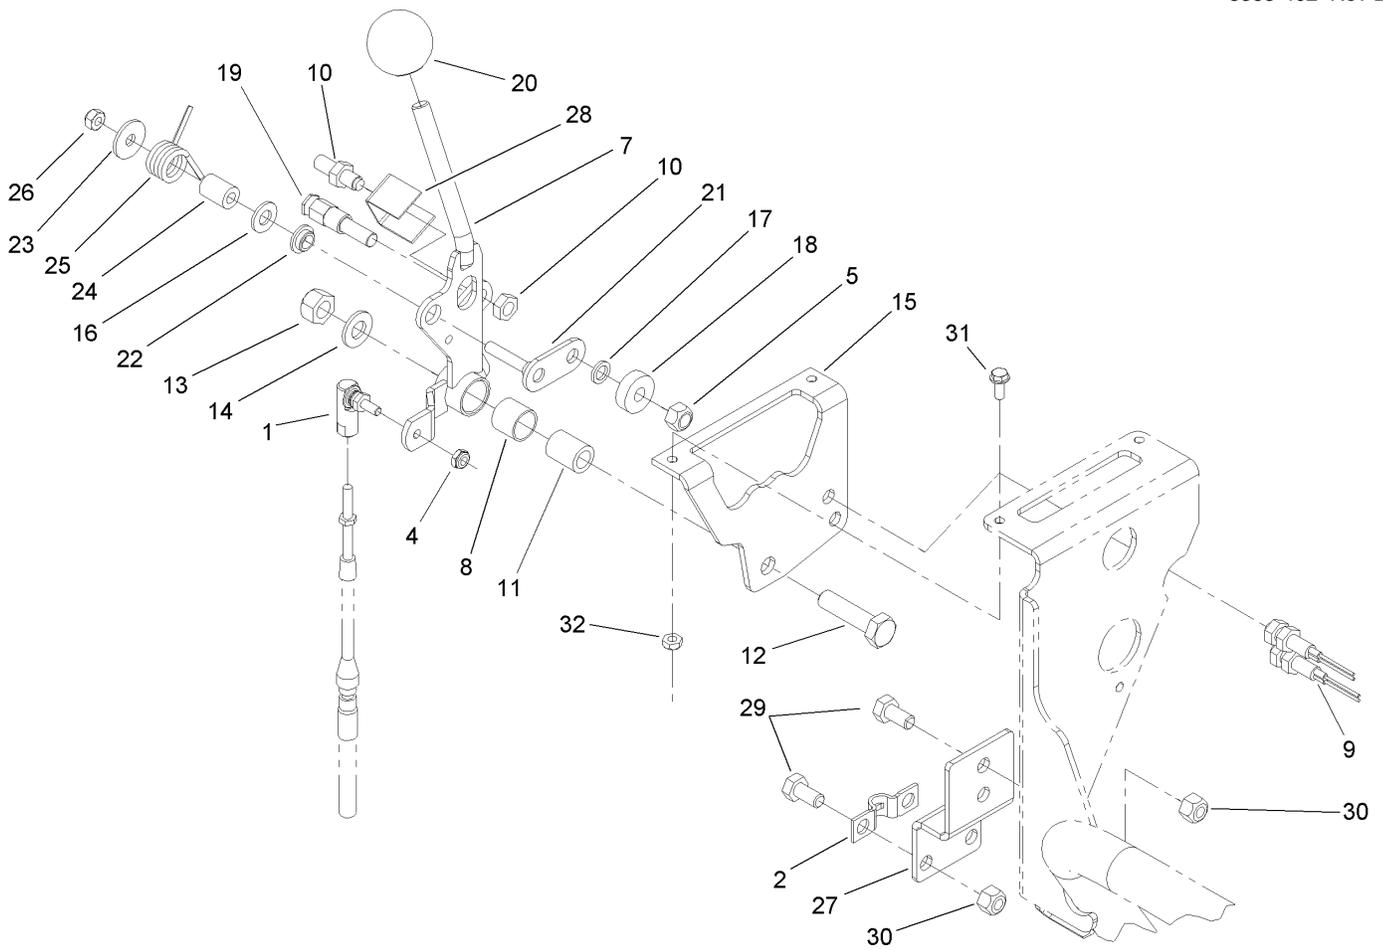

Speed Selector Lever Assembly

Ref	Part No.	Qty.	Description
1	2411-38	1	Joint-Ball
2	93-2279	1	Clamp-Cable
4	3296-27	1	Nut-Lock NI
5	33024-00	1	Nut-Lock
7	94-9611	1	Handle
8	256-311	1	Bushing-Split
9	93-2055	2	Sensor-Switch, Reed
10	93-2056	1	Actuator-Switch, Reed
11	94-1378	1	Tube-Pivot, Handle
12	33115-040	1	Screw-HH
13	33025-00	1	Nut-Lock
14	3256-24	1	Washer-Flat
15	94-6398	1	Bracket-Traction
16	3256-23	1	Washer-Flat
17	75-5470	1	Spacer-Bearing
18	251-259	1	Bearing-Ball
19	94-9617	1	Pin-Spring
20	233-42	1	Knob
21	94-9614	1	Pivot-Roller
22	94-9619	1	Bushing
23	3256-67	1	Washer-Flat
24	94-9618	1	Spacer-Spring
25	94-9620	1	Spring-Torsion
26	33023-00	1	Nut-Lock


Ref	Part No.	Qty.	Description
27	105-5417-03	1	Bracket-Cable, Shifter
28	106-6356	1	Shield-Switch
29	322-2	4	Screw-HH
30	3296-29	4	Nut-Lock, NI
31	3290-321	2	Screw-HWH
32	3296-12	2	Nut-Lock

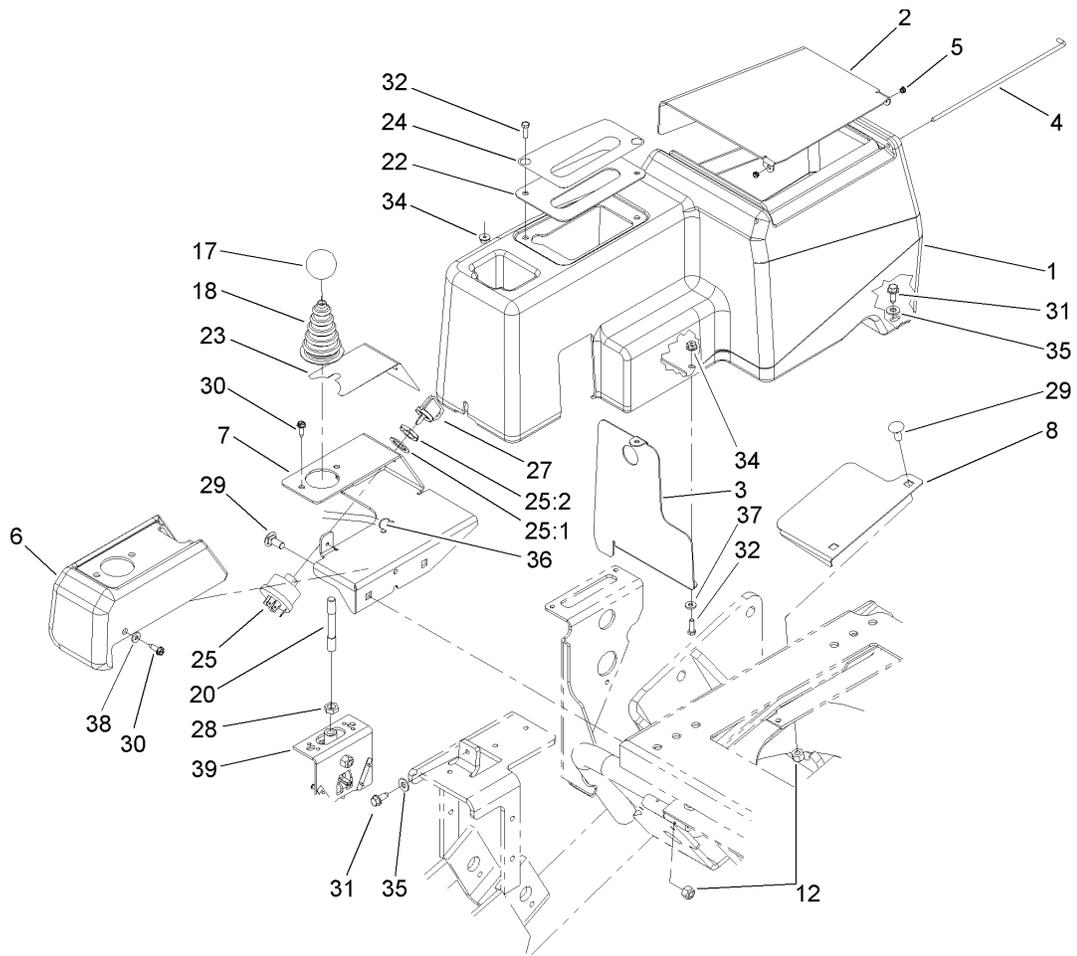

Joystick and Console Assembly

Ref	Part No.	Qty.	Description
1	105-8250	1	Console
2	105-8254-03	1	Lid-Console
3	105-8255-03	1	Baffle-Console
4	105-8256	1	Rod-Hinge
5	105-8283	2	Bushing
6	105-8251	1	Pod
7	105-8252-03	1	Bracket-Pod
8	105-8284-03	1	Shield-Valve
12	3296-29	4	Nut-Lock, NI
17	233-42	1	Knob
18	93-5961	1	Boot-Lever
20	105-8288	1	Rod-Joystick
22	105-8280-03	1	Plate-Console
23	105-8305	1	Decal-Panel, Control
24	105-8306	1	Decal-Selector, Speed
25	104-2541	1	Switch-Key
25:1	218-461	1	Nut-HH
25:2	3254-5	1	Washer-Tooth
27	63-8360	2	Key-Ignition
28	3218-3	1	Nut-Jam
29	3230-1	4	Bolt-CARR
30	32144-19	4	Screw-SHWH
31	32144-10	3	Screw-HWH
32	3290-134	4	Screw


Ref	Part No.	Qty.	Description
34	3290-148	4	Nut-HF
35	3256-22	3	Washer-Flat
36	3290-378	1	Tie-Cable
37	3256-77	2	Washer-Flat
38	3256-14	2	Washer-Flat
39	106-4167	1	Joystick Bracket ASM

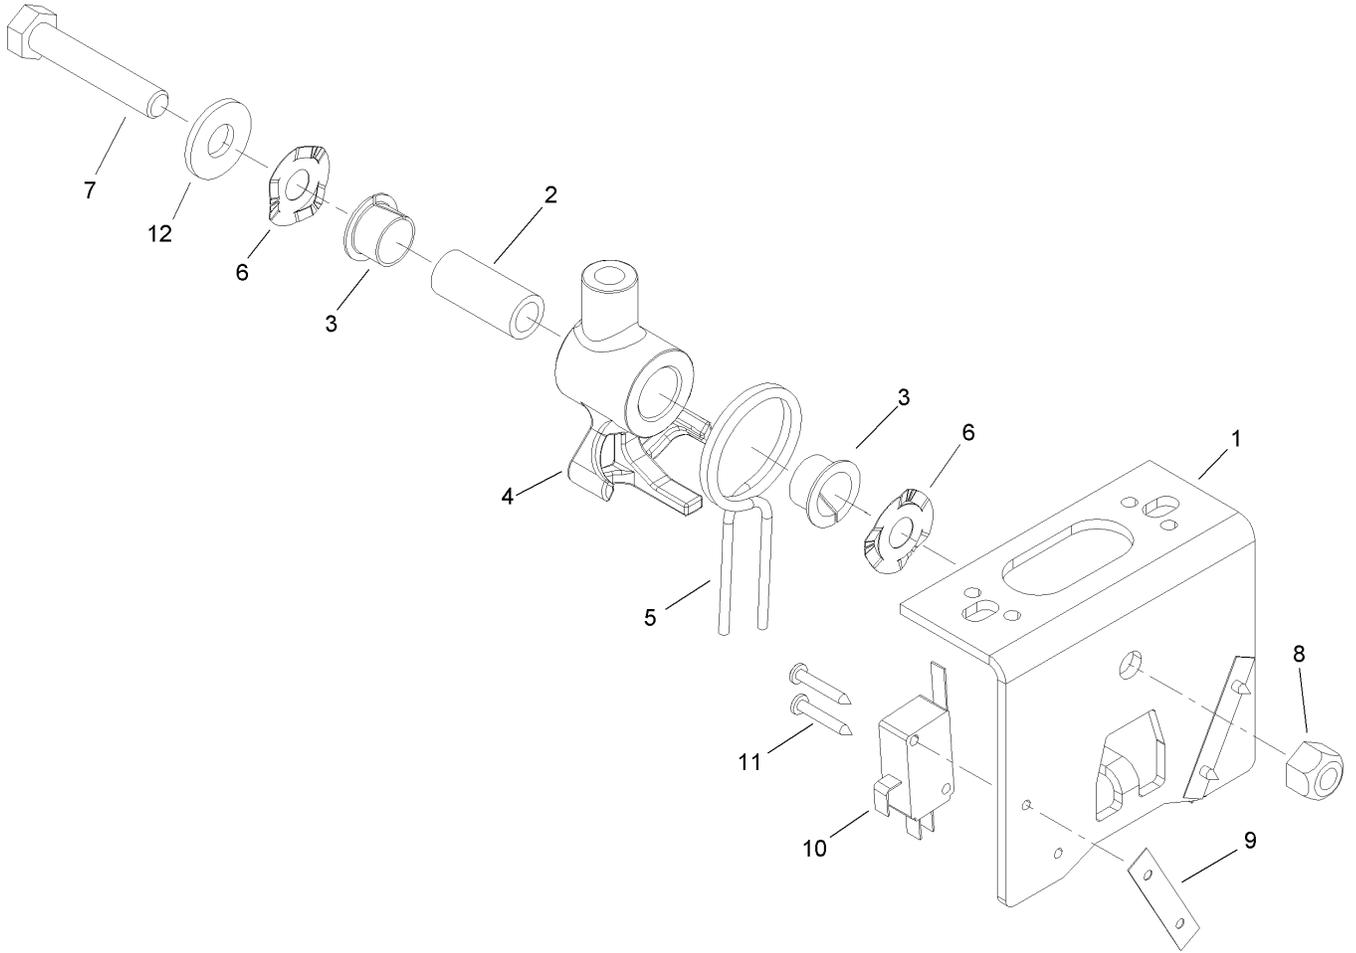

Joystick Bracket Assembly No. 106-4167

Ref	Part No.	Qty.	Description
1	106-4168-03	1	Bracket-Joystick
2	106-4192	1	Spacer
3	93-5547	2	Bushing-Nylon
4	105-7507	1	Hub-Pivot, Joystick
5	105-8289	1	Spring-Torsion
6	106-4193	2	Washer-Finger, Spring
7	322-9	1	Screw-HH
8	3296-29	1	Nut-Lock, NI
9	3290-354	2	Nut-Speed
10	108-6496	2	Switch W/Boot
11	95-3003	4	Screw-HH
12	3256-3	1	Washer-Flat


--	--	--	--

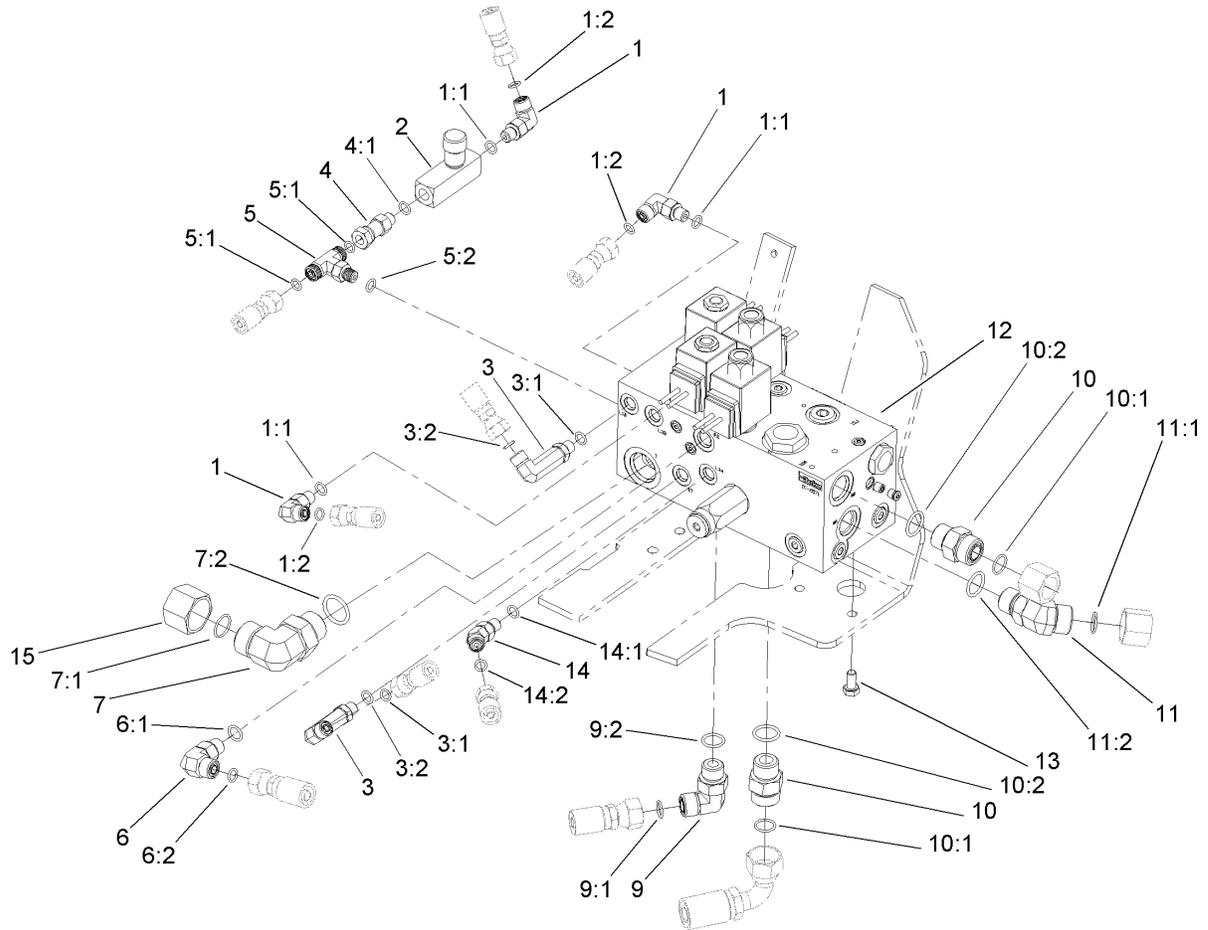

Hydraulic Manifold Assembly

Ref	Part No.	Qty.	Description
1	340-132	3	Fitting-HYD, 90 DEG
1:1	237-78	1	O-Ring
1:2	237-21	1	O-Ring
2	93-7489	1	Orifice Valve ASM
3	100-7695	2	Adapter-HYD
3:1	237-78	1	O-Ring
3:2	237-21	1	O-Ring
4	104-3777	1	Connector-Swivel, Straight
4:1	237-78	1	O-Ring
5	340-125	1	Fitting-Tee
5:1	237-21	2	O-Ring
5:2	237-78	1	O-Ring
6	340-77	1	Fitting-HYD, 90 DEG
6:1	237-22	1	O-Ring
6:2	237-42	1	O-Ring
7	340-142	1	Fitting-HYD, 90 DEG
7:1	237-58	1	O-Ring
7:2	237-81	1	O-Ring
9	340-98	1	Fitting-HYD, 90 DEG
9:1	237-79	1	O-Ring
9:2	237-30	1	O-Ring
10	340-7	2	Adapter
10:1	237-65	1	O-Ring
10:2	237-80	1	O-Ring


Ref	Part No.	Qty.	Description
11	340-14	1	Fitting-HYD, 45 DEG
11:1	237-65	1	O-Ring
11:2	237-80	1	O-Ring
12	110-3956	1	Manifold ASM
13	33114-016	2	Screw-HH
14	340-103	1	Fitting-HYD, 45 DEG
14:1	237-78	1	O-Ring
14:2	237-21	1	O-Ring
15	105-5460	1	Tube-HYD, Manifold / Filter

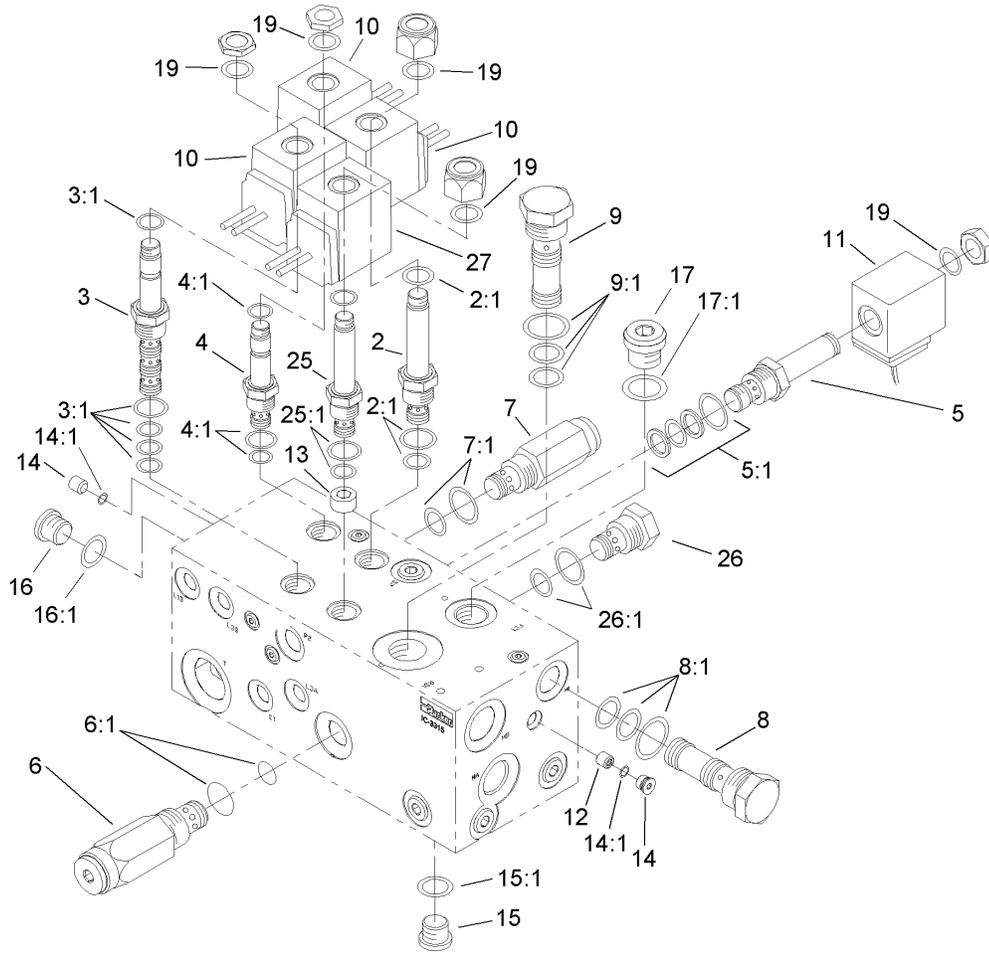

Manifold Assembly No. 110-3956


Ref	Part No.	Qty.	Description
2	93-7494	2	Cartridge
2:1	95-5645	1	Seal Kit
3	94-2627	1	Cartridge
3:1	95-5642	1	Seal Kit
4	92-6315	1	Cartridge-Poppet, N.C.
4:1	95-5645	1	Seal Kit
5	106-9087	1	Spool-Type, Stem
5:1	105-3334	1	Seal Kit
6	95-1601	1	Cartridge-Relief
6:1	95-5645	1	Seal Kit
7	94-6351	1	Cartridge-Relief
7:1	95-5645	1	Seal Kit
8	94-6353	1	Plug-Cavity
8:1	69-4240	1	Seal Kit
9	94-6352	1	Plug-Cavity
9:1	104-7730	1	Seal Kit
10	88-9190	3	Solenoid Coil Kit
11	106-9086	1	Coil-Solenoid
12	106-9084	1	Plug-Orifice
13	106-9083	1	Plug-Orifice
14	353-991	1	Plug-Hex, Hollow
14:1	237-156	1	O-Ring
15	353-989	8	Plug-Hex, Hollow
15:1	237-42	1	O-Ring

Ref	Part No.	Qty.	Description
16	353-988	1	Plug-Hex
16:1	237-79	1	O-Ring
17	354-70	1	Plug-Hex, Hollow
17:1	237-80	1	O-Ring
19	94-5438	8	Seal-Washer
25	110-4003	1	Cartridge, Sd, No Poppet
25:1	95-5645	1	Seal Kit
26	110-4004	1	Cartridge 25Psi Check
26:1	95-5645	1	Seal Kit
27	110-4005	1	Unicoil, 12Vdc, W/Metripak

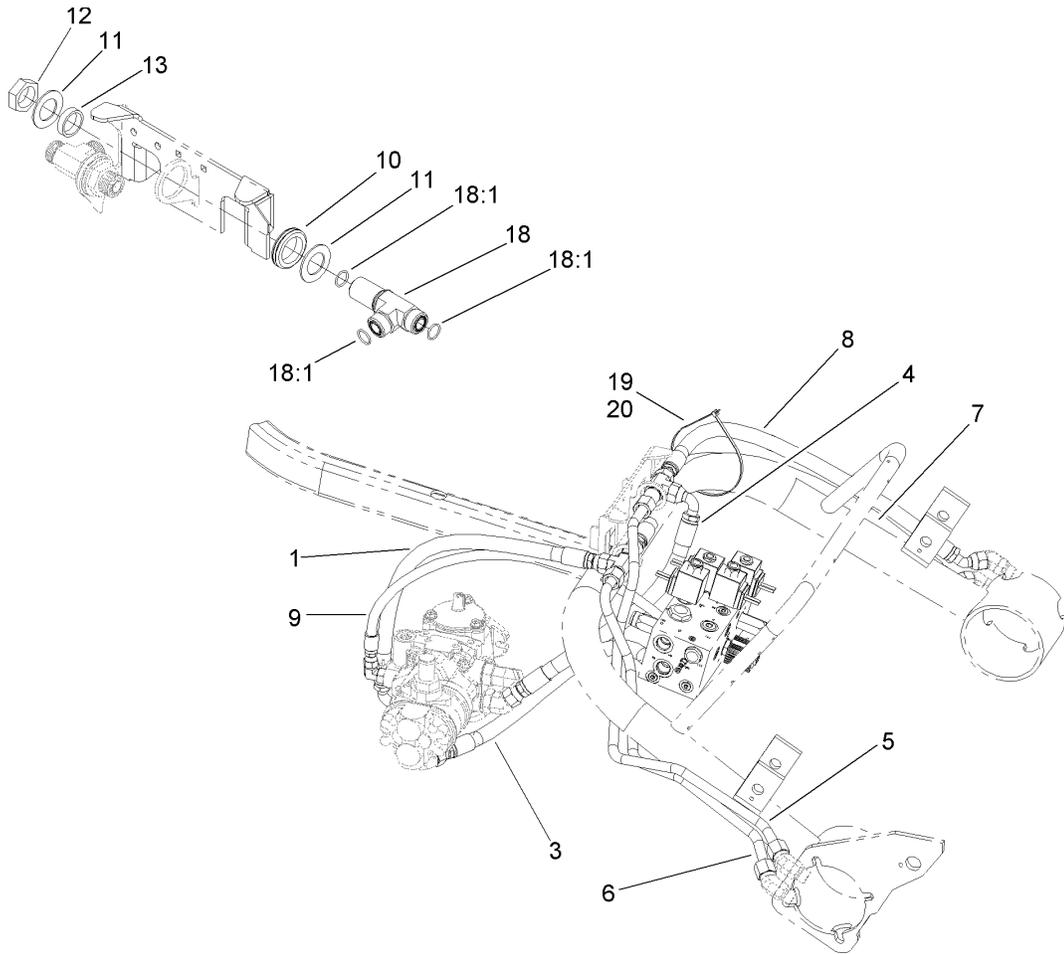

Hydraulic Traction Assembly


Ref	Part No.	Qty.	Description
1	99-6193	1	Hose ASM
3	105-4342	1	Hose ASM
4	105-4332	1	Hose ASM
5	105-5490	1	Tube-HYD
6	105-5489	1	Tube-HYD
7	105-4333	1	Hose ASM
8	105-4336	1	Hose ASM
9	108-6511	1	Hose ASM
10	240-3	2	Grommet-Rubber
11	69-9010	4	Washer
12	340-74	2	Locknut-Bulkhead
13	69-9000	2	Spacer
18	94-5350	2	Tee-Bulkhead
18:1	237-65	3	O-Ring
19	3290-378	1	Tie-Cable
20	3290-379	1	Tie-Cable

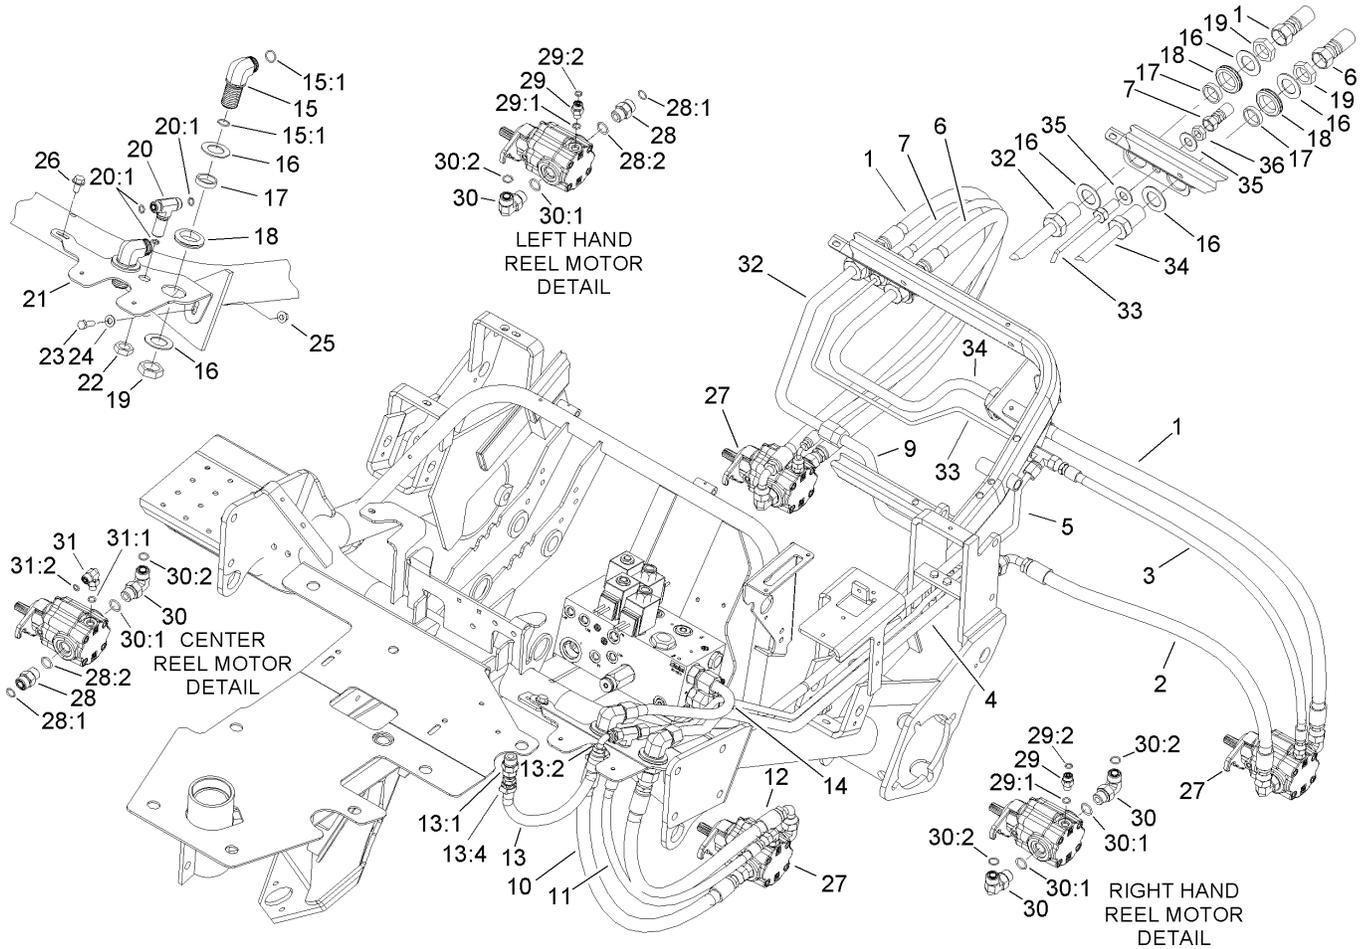

Hydraulic Reel Drive Assembly


Ref	Part No.	Qty.	Description
1	95-2908	2	Hose ASM
2	105-5404	1	Hose ASM
3	105-5405	1	Hose ASM
4	105-5493	1	Tube-HYD
5	105-4327	1	Tube-HYD, Casedrain
6	95-2909	1	Hose ASM
7	106-9674	1	HYD Hose ASM
9	107-2582	1	Tube-HYD
9:1	237-65	1	O-Ring
10	105-5400	1	Hose ASM
11	105-5402	1	Hose ASM
12	105-5401	1	Hose ASM
13	105-5409	1	Hose ASM
13:1	105-8311	1	Fitting-HYD
13:2	105-8312	1	Fitting-HYD, 90
13:4	2412-141	2	Clamp-Drive, Worm
14	105-5482	1	Tube-HYD, Manifold/Center Reel
15	340-72	2	Fitting-Bulkhead, 90 DEG
15:1	237-65	2	O-Ring
16	69-9010	8	Washer
17	69-9000	4	Spacer
18	240-3	4	Grommet-Rubber
19	340-74	4	Locknut-Bulkhead
20	105-8281	1	Tee-Bulkhead

Ref	Part No.	Qty.	Description
20:1	237-22	3	O-Ring
21	105-8253-01	1	Bracket-Bulkhead
22	340-70	1	Nut-Lock
23	322-5	1	Screw-HH
24	3256-23	1	Washer-Flat
25	32128-20	1	Nut-HF
26	32104-32	3	Screw-HH
27	100-6426	3	HYD Motor ASM
28	340-4	2	Fitting-HYD, Straight
28:1	237-30	1	O-Ring
28:2	237-79	1	O-Ring
29	340-92	1	Fitting-HYD, Straight
29:1	237-78	1	O-Ring
29:2	237-21	1	O-Ring
30	340-98	4	Fitting-HYD, 90 DEG
30:1	237-79	1	O-Ring
30:2	237-30	1	O-Ring
31	340-132	2	Fitting-HYD, 90 DEG
31:1	237-78	1	O-Ring
31:2	237-21	1	O-Ring
32	107-2581	1	Tube-HYD
32:1	237-65	1	O-Ring
33	107-2583	1	Tube-HYD
33:1	237-21	1	O-Ring

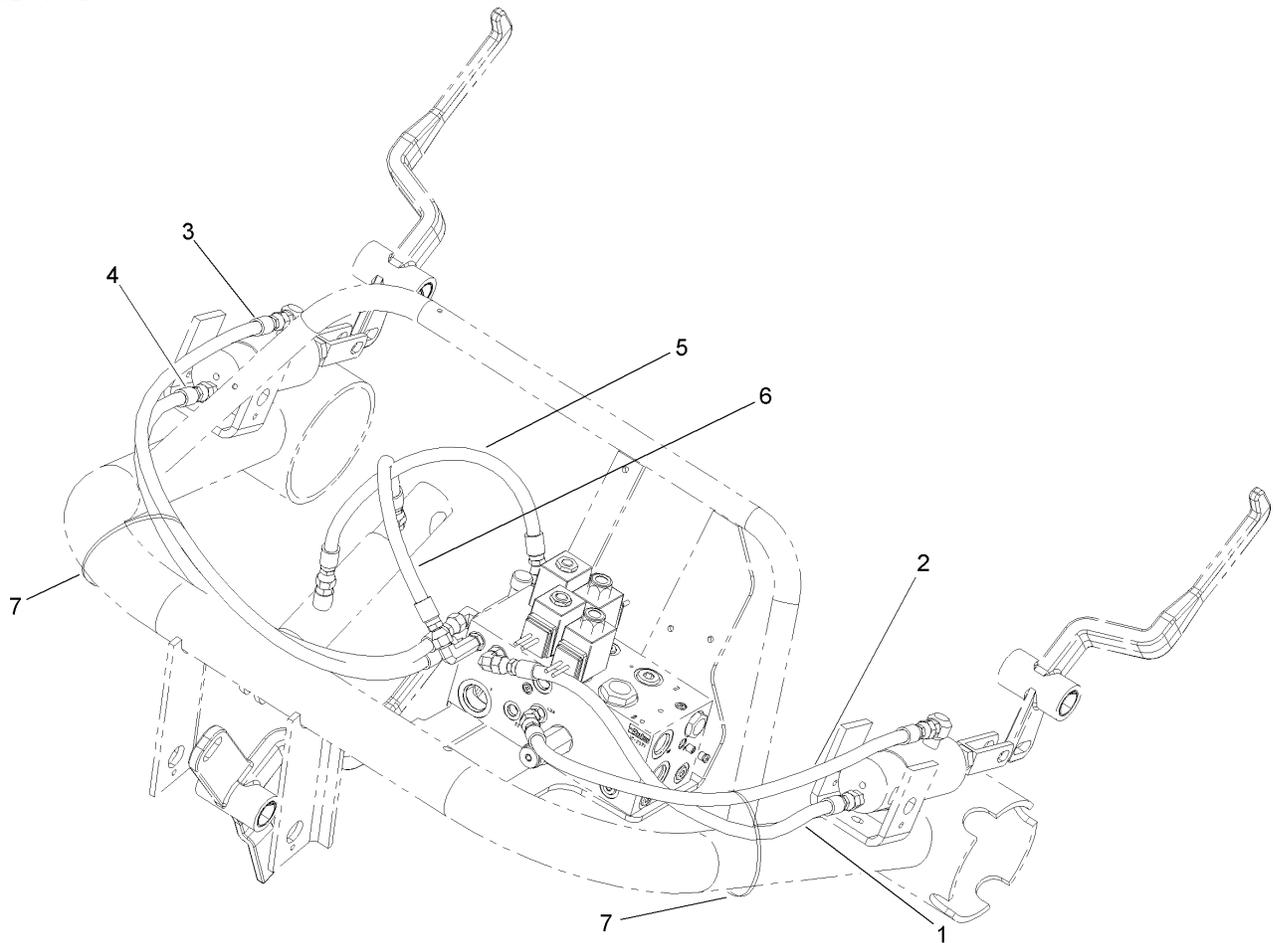


Hydraulic Lift Assembly

Ref	Part No.	Qty.	Description
1	108-6505	1	Hose ASM
2	108-6506	1	Hose ASM
3	108-6507	1	Hose ASM
4	108-6508	1	Hose ASM
5	108-6509	1	Hose ASM
6	108-6510	1	Hose ASM
7	3290-379	2	Tie-Cable

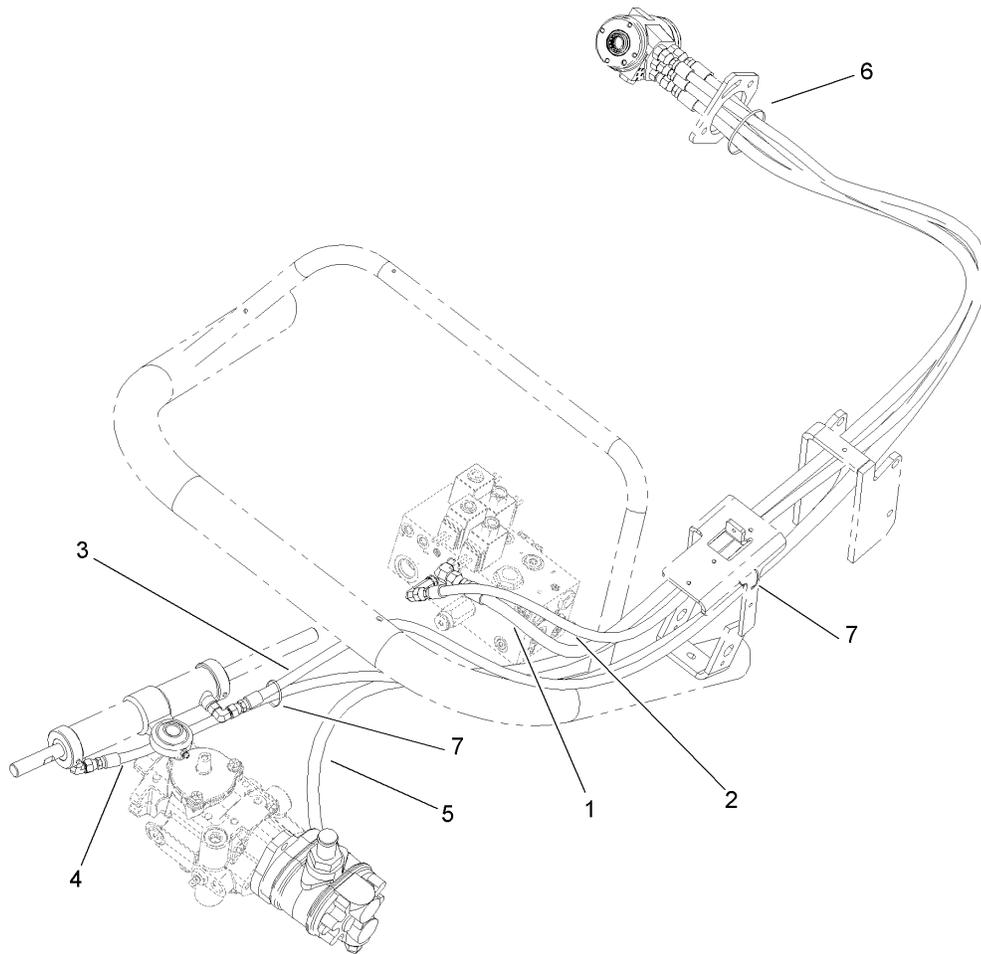

Hydraulic Steering Assembly


Ref	Part No.	Qty.	Description
1	105-4339	1	HYD Hose ASM
2	105-4338	1	HYD Hose ASM
3	105-4337	1	HYD Hose ASM
4	100-4892	1	Hose ASM
5	105-4340	1	HYD Hose ASM
6	3334-945	1	Tie-Cable
7	3290-378	3	Tie-Cable

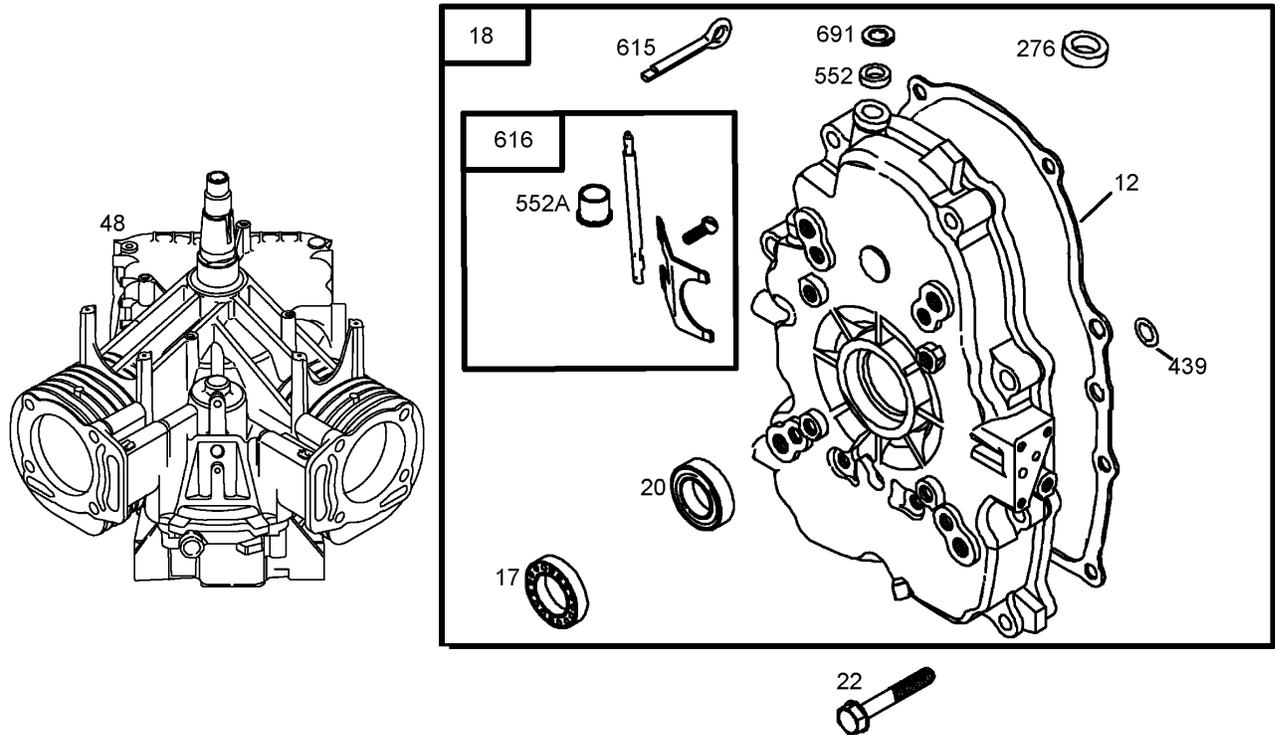

Crankcase Assembly Briggs and Stratton 356447-0200-E1

Ref	Part No.	Qty.	Description
⑤⑤12	691684	1	Gasket-Crankcase
⑤17	690752	1	Bearing-Ball
⑤18	808847	1	Cover-Crankcase
⑤⑤20	805049	1	Seal-Oil
⑤22	807362	1	Screw (Crankcase Cover)
⑤48		1	Short Block (Not Available At Time Of Print)
⑤276	690724	1	Seal-O Ring
⑤⑤439	692154	1	Seal-O Ring
⑤552	690701	1	Bushing-Crank, Governor
⑤552A	806686	1	Bushing-Crank, Governor
⑤615	691550	1	Retainer-Shaft, Governor
⑤616	806685	1	Crank-Governor
⑤⑤691	690680	1	Seal-Shaft, Governor


--	--	--	--

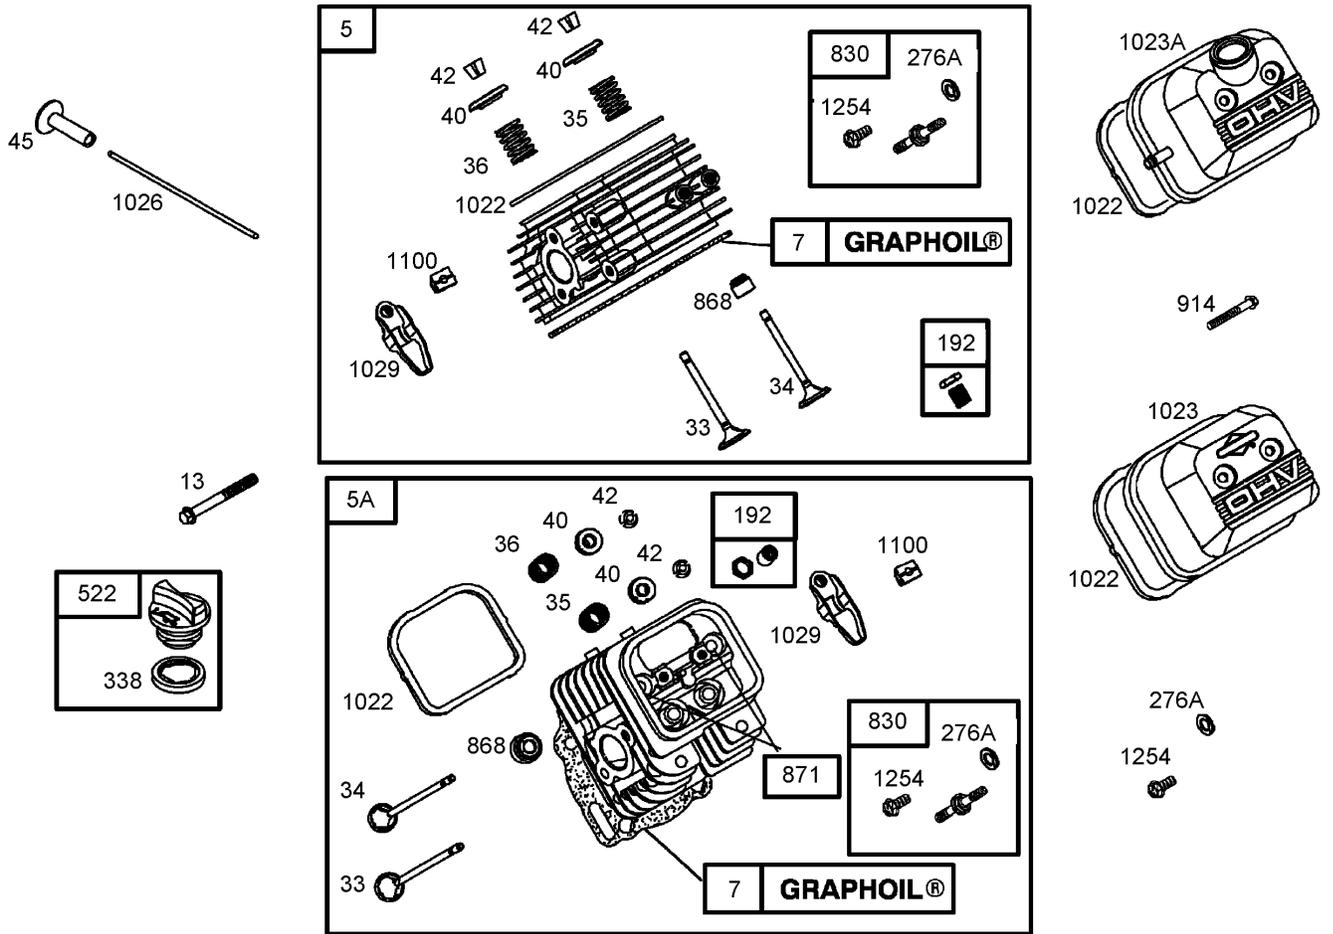

Cylinder Head Assembly Briggs and Stratton 356447-0200-E1

Ref	Part No.	Qty.	Description
5	809185	1	Cylinder Head (No. 1)
5A	809186	1	Cylinder Head (No. 2)
57	690888	1	Gasket-Head, Cylinder
6			
13	692059	1	Screw (Cylinder Head)
33	807681	1	Valve-Exhaust
34	807680	1	Valve-Intake
35	692084	1	Spring-Valve
36	692084	1	Spring-Valve
40	692058	1	Retainer-Valve
42	807683	1	Keeper-Valve
45	690977	1	Valve-Tappet
192	807623	1	Adjuster-Arm, Rocker
276A	807085	1	Washer-Sealing
6			
338	691312	1	Gasket-Dipstick
6			
522	491832	1	Plug-Dipstick / Fill
830	809157	1	Stud-Arm, Rocker
868	691963	1	Seal-Valve
6			
871	692057	1	Bushing-Guide, Valve
914	807120	1	Screw (Rocker Cover)
1022	806039	1	Gasket-Cover, Rocker
6			
1023	691494	1	Cover-Valve


Ref	Part No.	Qty.	Description
1023A	690910	1	Cover-Valve
1026	691836	1	Rod-Push (Intake)
1026	691758	1	Rod-Push (Exhaust)
1029	807323	1	Arm-Rocker
1100	690973	1	Pivot-Arm, Rocker
1254	807084	1	Screw (Rocker Arm Stud)

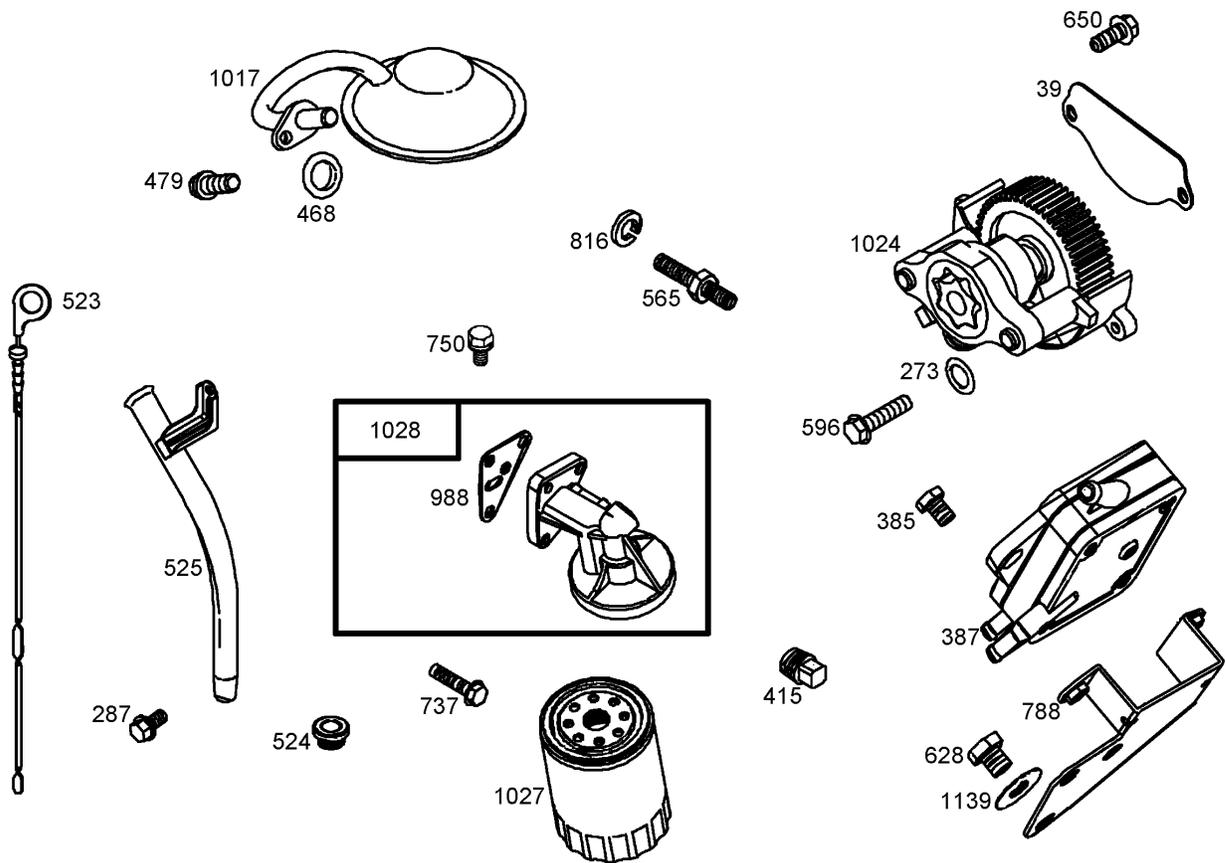

Oil Filter, Tube and Pump Assembly Briggs and Stratton 356447-0200-E1

Ref	Part No.	Qty.	Description
39	690745	1	Deflector-Oil
273	690681	1	Seal-O Ring
287	692062	1	Screw
385	807084	1	Screw
387	808969	1	Pump-Fuel
415	690283	1	Plug
468	690690	1	Seal-O Ring
479	807084	1	Screw
523	693175	1	Dipstick
524	693172	1	Seal-Tube, Dipstick
525	693174	1	Tube-Dipstick
565	690682	1	Stud (Oil Filter Adapter)
596	691492	1	Screw
628	692062	1	Screw
650	841233	1	Screw
737	690679	1	Screw (Oil Filter Adapter)
750	692539	1	Screw
788	691559	1	Bracket-Pump, Fuel
816	690706	1	Washer
988	692063	1	Gasket-Adapter, Oil Filter
1017	690900	1	Screen-Pump, Oil
1024	693185	1	Pump-Oil
1027	492932	1	Filter-Oil


Ref	Part No.	Qty.	Description
1028	808235	1	Adapter-Filter, Oil
1139	806497	1	Washer

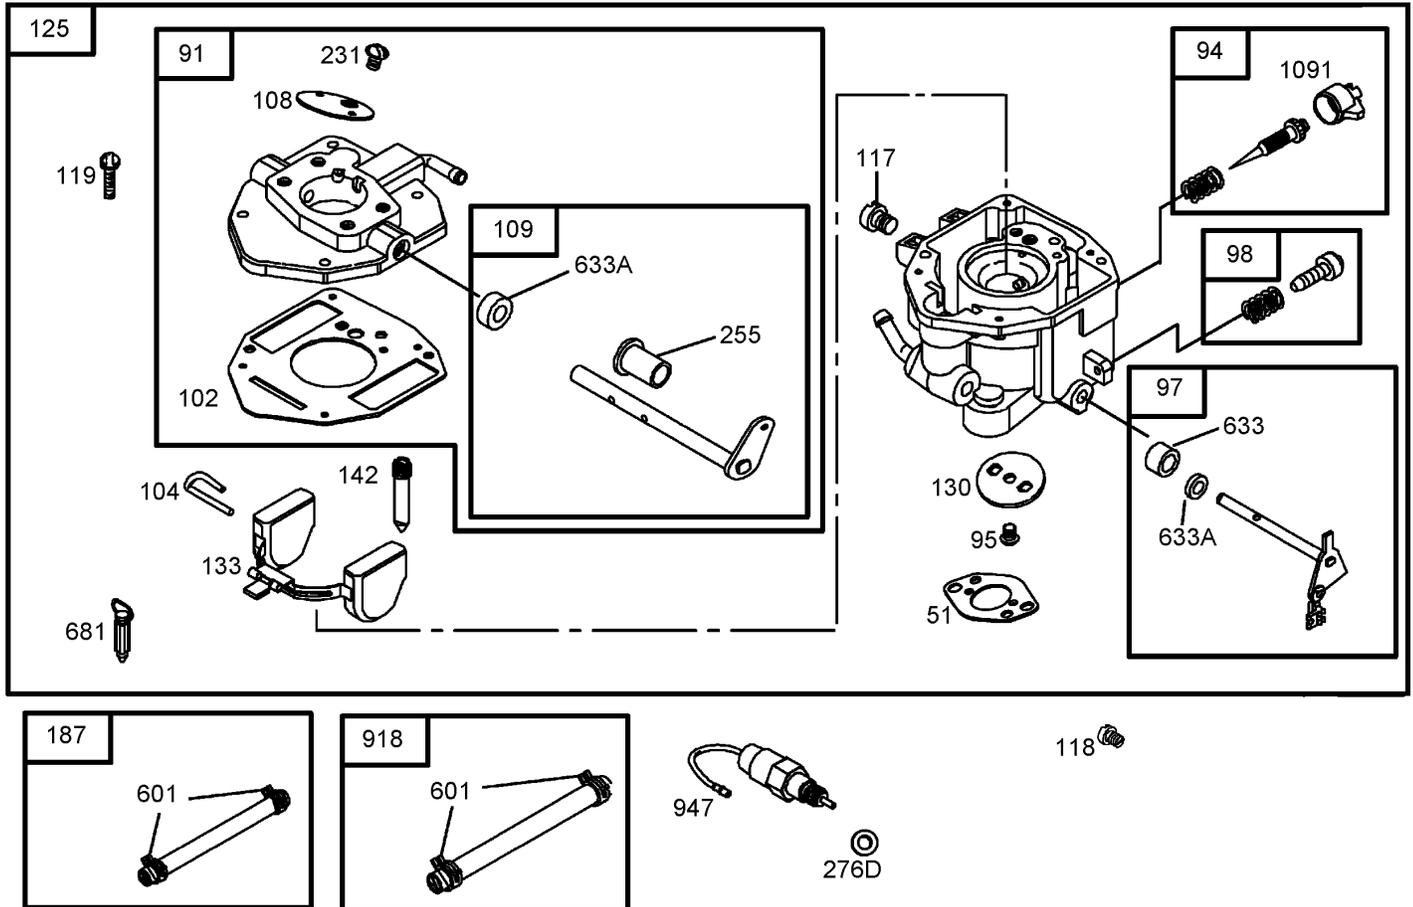

Carburetor Assembly Briggs and Stratton 356447-0200-E1

Ref	Part No.	Qty.	Description
⑤⑤51	691694	1	Gasket-Intake
③91	809208	1	Upper Carburetor Body ASM
③④94	808257	1	Idle Mixture Kit
③95	690718	1	Screw
③97	807495	1	Shaft-Throttle
③98	808981	1	Idle Speed Kit
③④102	692077	1	Gasket-Body, Carburetor
③④104	690723	1	Pin-Hinge, Float
③108	690719	1	Valve-Choke
③109	809096	1	Shaft-Choke
③④117	690862	1	Jet-Main (STD)
③118	809442	1	Jet-Main (High Altitude)
③119	690720	1	Screw
③125	809217	1	Carburetor
③130	690726	1	Valve-Throttle
③133	806961	1	Float-Carburetor
③142	690725	1	Nozzle-Carburetor
③187	791766	1	Line-Fuel
③231	690718	1	Screw
③④255	690721	1	Bushing-Shaft, Choke
③276D	806137	1	Washer-Sealing
③601	791850	1	Clamp-Hose
③④633	806131	1	Seal-Shaft, Choke / Throttle
③④633A	690722	1	Seal-Shaft, Choke / Throttle


Ref	Part No.	Qty.	Description
③④681	808798	1	Valve-Needle, Float
③918	393815	1	Line-Vacuum
③947	692094	1	Solenoid-Fuel
③④1091	691516	1	Cap-Limiter

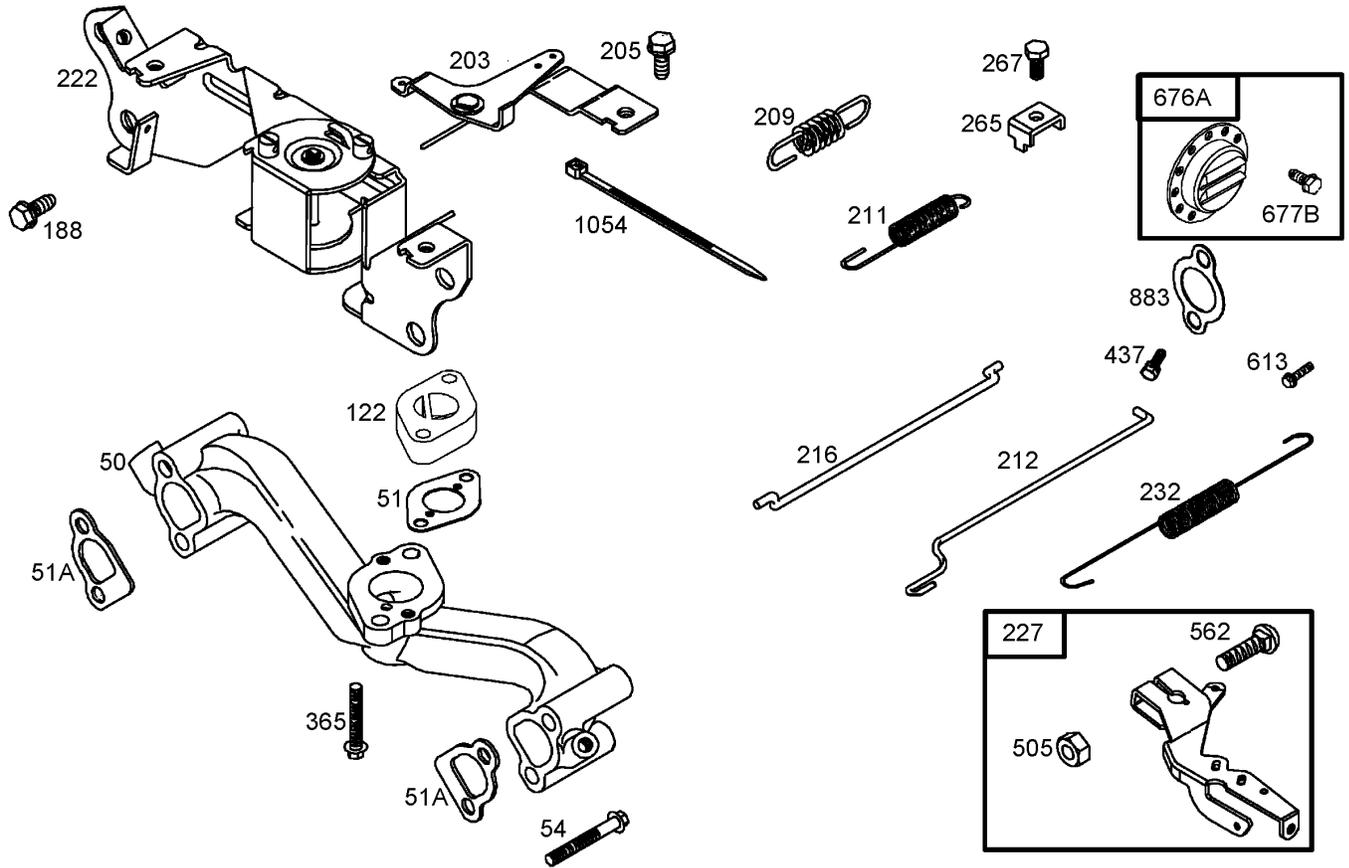

Governor Assembly Briggs and Stratton 356447-0200-E1

Ref	Part No.	Qty.	Description
50	690754	1	Manifold-Intake
51	691694	1	Gasket-Intake
51A	692035	1	Gasket-Intake
54	690676	1	Screw
122	690691	1	Spacer-Carburetor
188	692056	1	Screw
203	690923	1	Crank-Bell
205	692083	1	Screw
209	806872	1	Spring-Governor
211	806868	1	Spring-Idle, Gouverne
212	690712	1	Link-Throttle
216	690705	1	Link-Choke
222	808454	1	Bracket-Control
227	690236	1	Lever-Control, Governor
232	692073	1	Spring-Link, Governor
265	691024	1	Clamp-Casing
267	692083	1	Screw
365	690711	1	Screw
437	691902	1	Screw (Exhaust Manifold)
505	690238	1	Nut
562	690239	1	Bolt
613	691902	1	Screw (Muffler)
676A	397630	1	Deflector-Exhaust


Ref	Part No.	Qty.	Description
677B	690661	1	Screw
6883	691613	1	Gasket-Exhaust
1054	280275	1	Tie-Cable

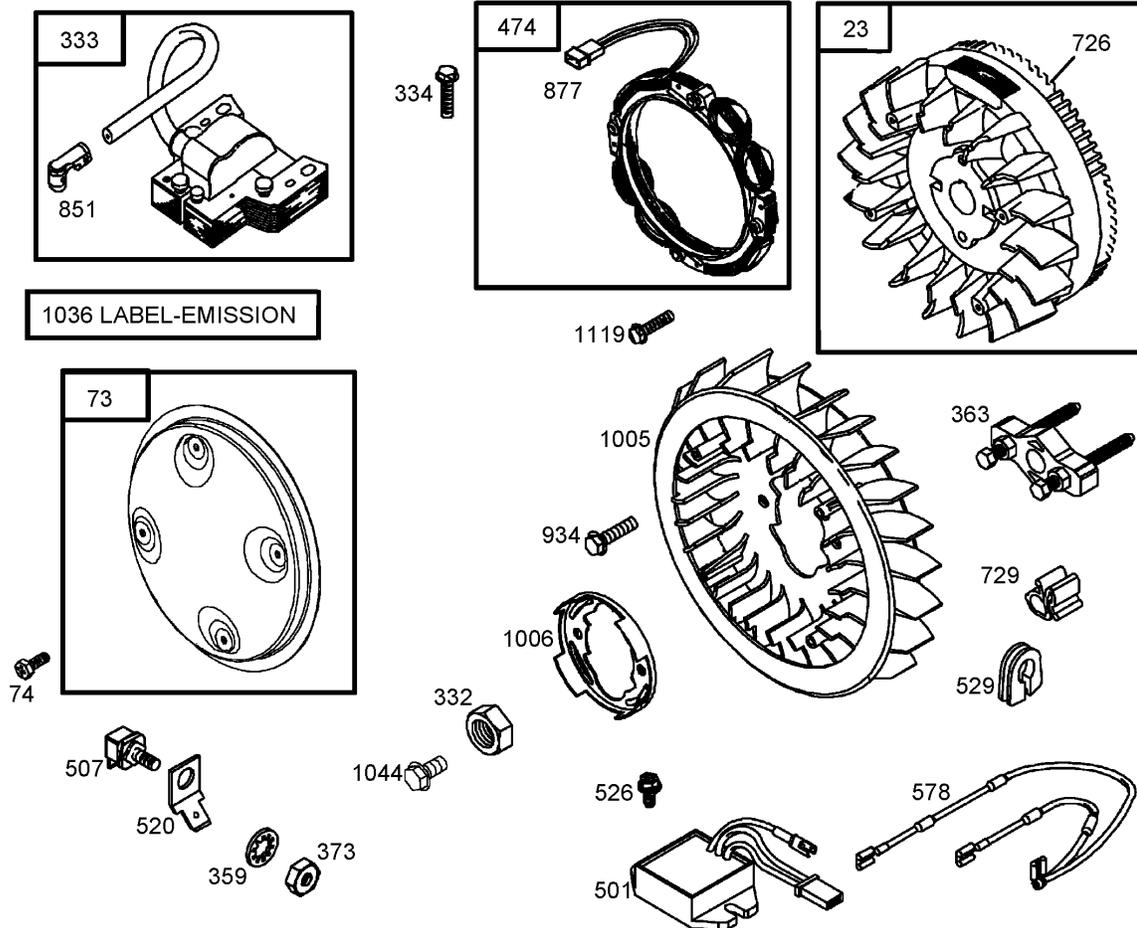

Blower Housing Assembly Briggs and Stratton 356447-0200-E1


Ref	Part No.	Qty.	Description
●23	841050	1	Flywheel
●73	841440	1	Screen-Rotating
●74	841441	1	Screw
●332	690887	1	Nut
●333	492341	1	Armature-Magneto
●334	692066	1	Screw (Magneto Armature)
●359	691077	1	Washer
●363	19203	1	Puller-Flywheel
●373	691612	1	Nut
●474	696458	1	Alternator
●501	691185	1	Regulator
●507	691972	1	Insulator
●520	691084	1	Terminal-Ground
●526	692067	1	Screw
●529	690744	1	Grommet
●578	692319	1	Wire ASM
●726		1	Gear-Ring
●729	690586	1	Clip-Wire
●851	493880	1	Terminal-Spark Plug
●877	399916	1	Wire/Connector-Alternator
●934	691058	1	Screw
●1005	841439	1	Fan-Flywheel
●1006	690452	1	Retainer-Fan
●1036	842669	1	Label-Emission

Ref	Part No.	Qty.	Description
●1044	692056	1	Screw
●1119	691552	1	Screw (Alternator)

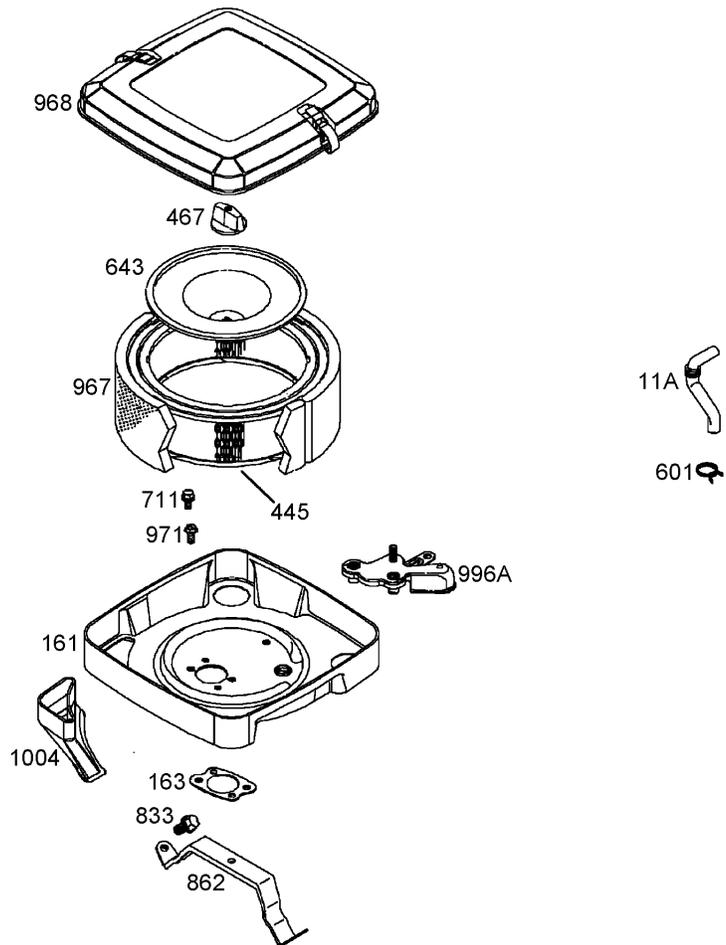

Air Cleaner Assembly Briggs and Stratton 356447-0200-E1

Ref	Part No.	Qty.	Description				
③11A	806083	1	Tube-Breather				
③161	691561	1	Base-Cleaner, Air				
③⑤163	692081	1	Gasket-Cleaner, Air				
③445	394018	1	Filter-Air				
③467	691985	1	Knob-Cleaner, Air				
③601	691038	1	Clamp-Hose				
③643	692079	1	Retainer-Filter, Air				
③711	841233	1	Screw				
③833	841233	1	Screw				
③862	692153	1	Mount-Cleaner				
③967	272490	1	Filter-Air				
③968	699959	1	Cover-Cleaner, Air				
③971	807084	1	Screw				
③996A	691577	1	Shield-Carburetor				
③1004	807121	1	Duct-Air				

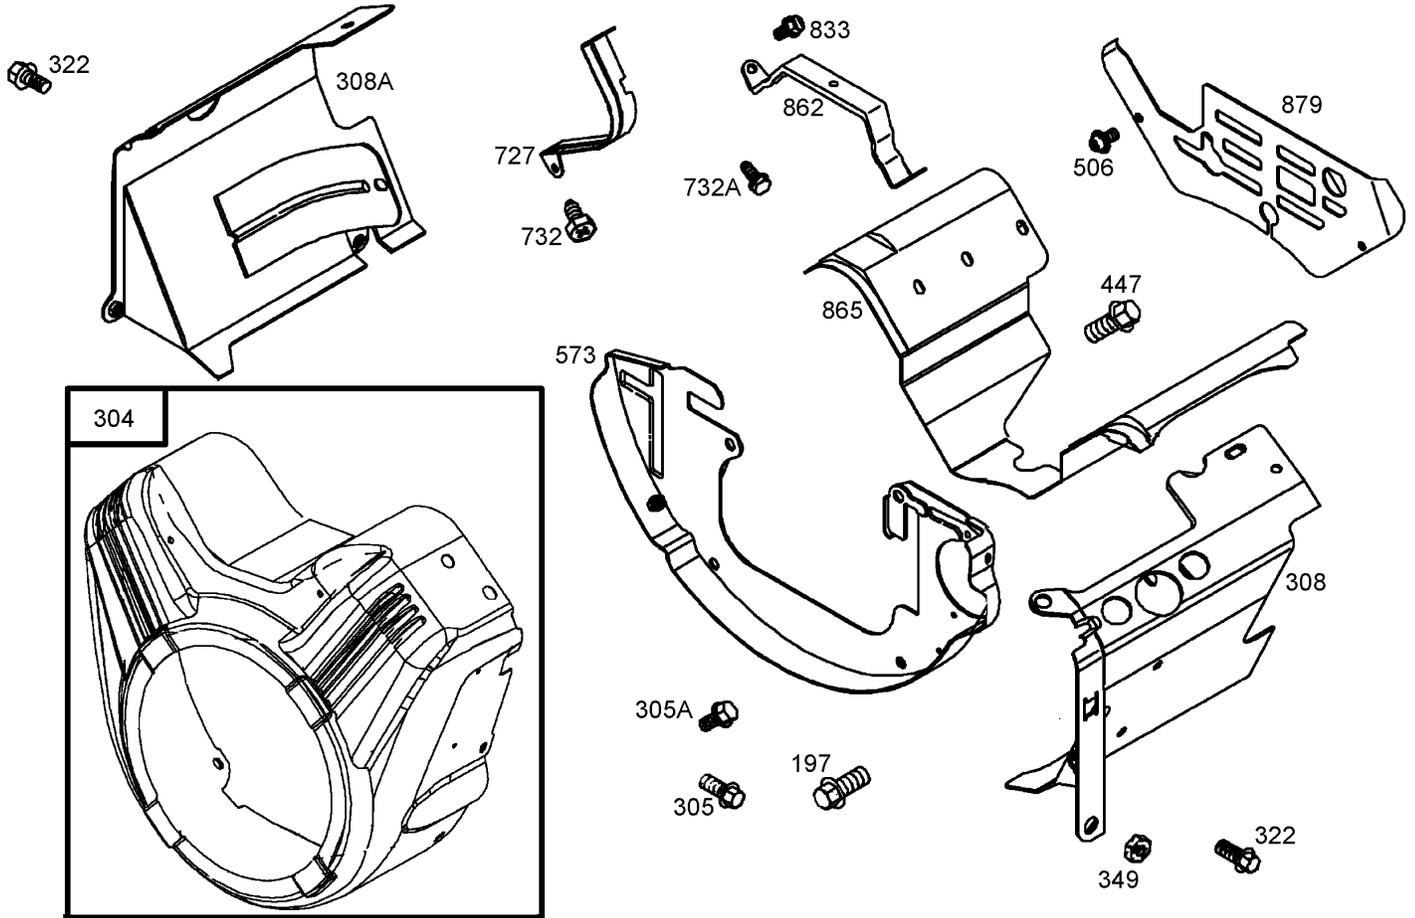

Blower Housing Assembly Briggs and Stratton 356447-0200-E1

Ref	Part No.	Qty.	Description
● 197	807163	1	Screw (Back Plate)
● 304	841397	1	Housing-Blower
● 305	841233	1	Screw (Blower Housing)
● 305A	692056	1	Screw (Blower Housing)
● 308	841232	1	Cover-Head, Cylinder
● 308A	841182	1	Cover-Head, Cylinder
● 322	841233	1	Screw
● 349	690238	1	Nut
● 447	841233	1	Screw
● 506	807120	1	Screw
● 573	841310	1	Plate-Back
● 727	841313	1	Cover-Drive, Starter
● 732	690688	1	Screw
● 732A	841233	1	Screw
● 833	841233	1	Screw
● 862	692153	1	Mount-Cleaner
● 865	807119	1	Cover-Guide, Air
● 879	807118	1	Cover-Carburetor

--	--	--	--

Attachments and Accessories

For 04357 - Greensmaster 3150

Product Name	Model/Part
Three-Wheel Drive Kit	04433
Dethatching Reel ASM	04493
Spiker Kit	04494
Tri-Roller Kit	04495
Backlap / Reel Speed Kit	04498
8-Blade DPA Reel Mower	04610
11-Blade DPA Reel Mower	04611
Roll-Over Protection System Kit	105-8258
Light Kit	105-8336
Oil Cooler Kit	105-8339
Hose Rerouting Kit	107-2559
Lamp-Low Draw LED	108-6471
Speed Control Kit	108-6472
Tire-Traction	231-124
Basket Reinforcement Kit	26-0900

NOTES

NOTES

NOTES

