



Sulky Line Painter 1200

Model No. 42023 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers


Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

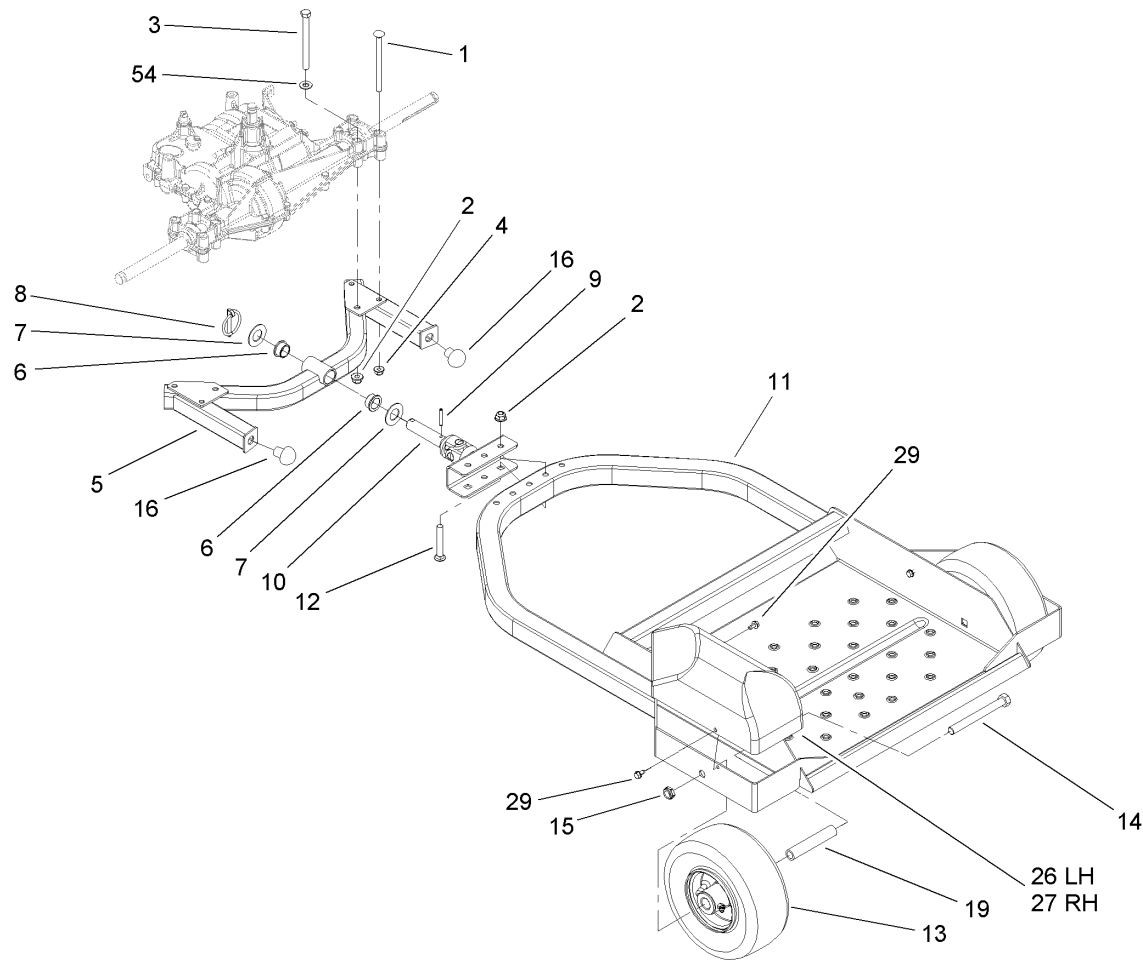

Sulky Line Painter Assembly

Ref	Part No.	Qty.	Description				
1	3230-30	4	Screw-CARR				
2	104-8301	4	Nut-Flange, NI				
3	323-16	2	Screw-HH				
4	104-8300	4	Nut-Flange, NI				
5	108-0301-01	1	Sulky Hitch ASM				
6	27-9080	2	Bearing-Flange				
7	3256-39	2	Washer-Flat				
8	3290-243	1	Pin-Lynch				
9	32121-6	1	Pin-Roll, Slotted				
10	107-0579-01	1	Pivot ASM				
11	107-0580-01	1	Sulky ASM				
12	3231-31	2	Screw-CARR				
13	100-6451	2	Caster Wheel ASM				
14	325-38	2	Screw-HH				
15	3296-45	2	Nut-Lock, NI				
16	110-3247	2	Bumper-Rubber				
19	100-6453	2	Bushing-Spanner				
26	110-3240	1	Fender-LH				
27	110-3241	1	Fender-RH				
29	12-3270	4	Screw				
54	3256-24	2	Washer-Flat				



Ref	Part No.	Qty.	Description				
1	232-27	1	Stem-Valve				
2	302-11	1	Fitting-Lube, 45 DEG				
3	83-4740	1	Bearing				
4	62-5580	2	Bearing-Outside				
5	100-6452	1	Tire-Tubeless				

