



CCR[™] 2450 Snowthrower

Model No. 38413 - 000000001 and up.

Model No. 38419 - 000000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing and Side Plate Assembly	 3	Muffler, Carburetor, and Intake Manifold	
Impeller Drive Assembly	 4	Assemblies Briggs and Stratton 084132-0120- E1	 11
Chute Assembly	 5	Flywheel, Blower Housing, and Rewind Starter	
Impeller Assembly	 6	Assemblies Briggs and Stratton 084132-0120- E1	 12
Engine and Frame Assembly	 7	Cylinder, Piston, and Connecting Rod	
Upper Shroud and Control Panel Assembly	 8	Assemblies Briggs and Stratton 084133-0196- E1	 13
Handle Assembly	 9	Muffler, Carburetor, and Intake Manifold	
Cylinder, Piston, and Connecting Rod		Assemblies Briggs and Stratton 084133-0196- E1	 14
Assemblies Briggs and Stratton 084132-0120- E1	 10	Flywheel, Blower Housing, and Starter	
		Assemblies Briggs and Stratton 084133-0196- E1	 15

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power-take-off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll-over-protection-system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HSBH. hex socket button head	SPH. slotted pan head
HSFH. hex socket flat head	SQH. square head
HSH. hex socket head	SRH. slotted round head
HWH. hex washer head	STD. standard
HWHTF. hex washer head thread forming	TAP. self tapping
HYD. hydraulic	TTH. torx truss head

Footnotes


- ❶ Not serviced separately
- ❷ Obtain from your local Briggs & Stratton dealer

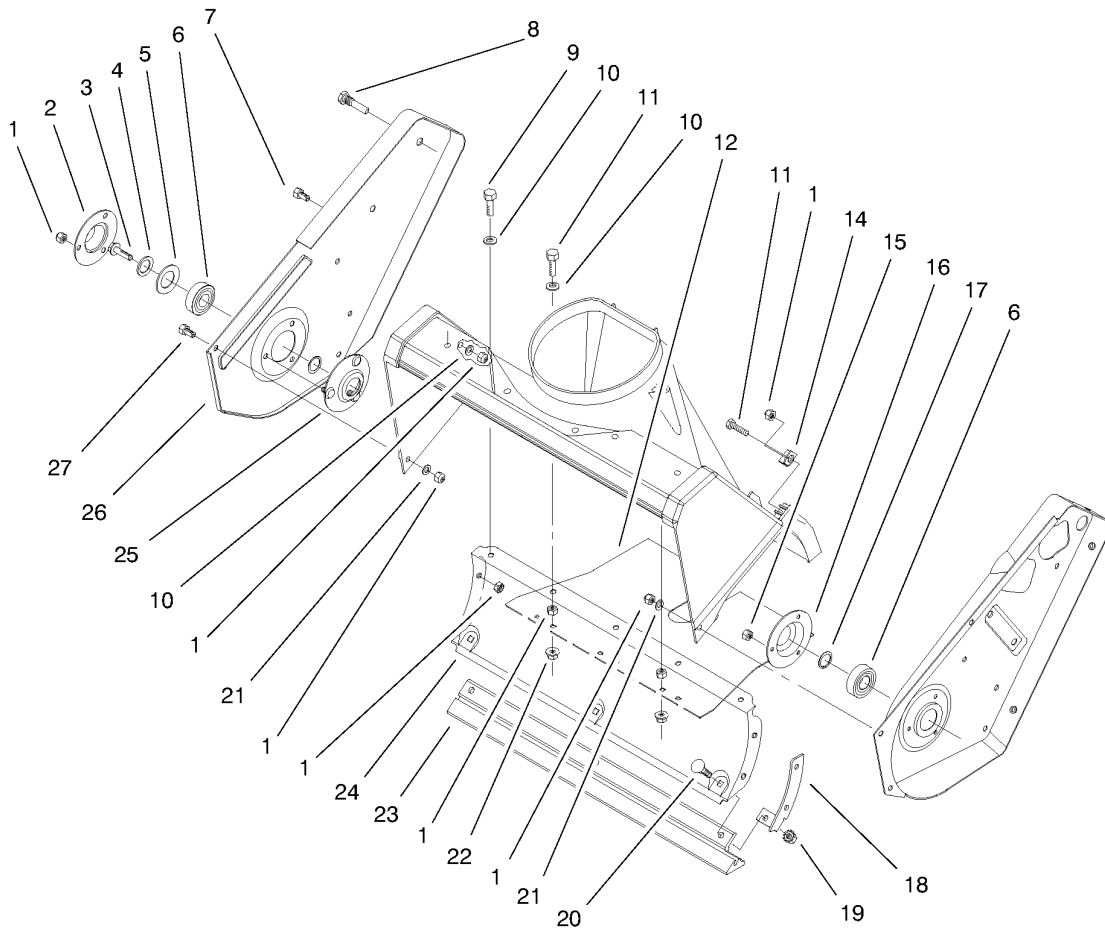

Housing and Side Plate Assembly


Ref	Part No.	Qty.	Description
1	3296-42	16	Nut-Lock, NI
2	52-7290-03	1	Retainer-Bearing
3	3234-25	1	Screw-HHF
4	3256-24	1	Washer-Flat
5	52-7270	1	Washer-Rubber
6	38-7820	2	Bearing-Ball
7	322-43	1	Screw-HH
8	38-8211	1	Pin-Rotor
9	321-4	3	Screw-HH
10	3256-22	7	Washer-Flat
11	321-6	3	Screw-HH
12	55-9512	1	Cover-Bottom
14	55-9430	1	Bracket-Housing
15	3296-2	3	Nut-Lock
16	38-8620	1	Flange-Bearing
17	52-7280	2	Washer-Thrust
18	56-2610	1	Bracket-Housing, Lower
19	32149-2	3	Nut-Keps
20	3229-11	3	Screw-CARR
21	3256-67	2	Washer-Flat
22	32128-10	2	Nut-Lock, HHF
23	55-8760	1	Scraper
24	55-9220-03	1	Housing-Lower
25	52-9110	1	Flange-Bearing

Ref	Part No.	Qty.	Description
26	55-8840-03	1	Plate-Side, RH
27	32105-15	5	Screw

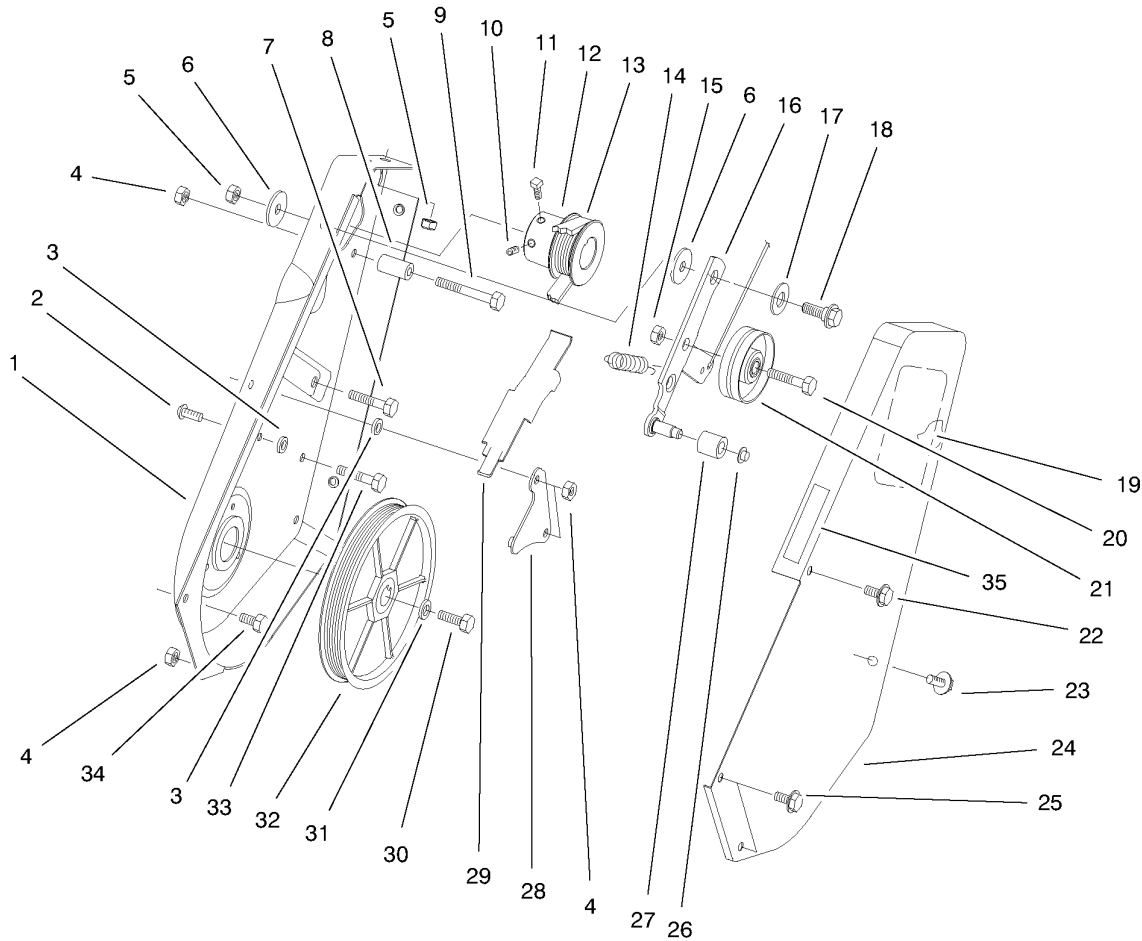 


Impeller Drive Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	55-8851-03	1	Plate-Side, LH	25	32105-15	2	Screw
2	3274-31	1	Screw-HSBH	26	32112-11	1	Nut-Push
3	55-9620	2	Spacer-Plate, Pivot	27	55-9520	1	Roller-Brake
4	3296-42	5	Nut-Lock, NI	28	55-9570	1	Pivot Plate ASM
5	3296-29	3	Nut-Lock, NI	29	55-9550	1	Brake-Arm
6	5-4460	2	Washer-Pivot	30	321-30	1	Screw-HH
7	322-3	2	Screw-HH	31	3290-456	1	Washer-Belleville
8	55-9530	1	Sleeve-Guide, Belt	32	95-2672	1	Pulley Rotor ASM
9	321-13	1	Screw-HH	33	321-4	2	Screw-HH
10	3245-41	1	Screw-HSH	34	32105-8	3	Screw-SHH
11	3241-7	1	Screw-SQH	35	95-1904	1	Decal-Hot
12	95-2673	1	Pulley-Engine				
13	95-6151	1	Belt-Drive				
14	55-9280	1	Spring-Extension				
15	32152-2	1	Nut-Lock, Cone				
16	63-3610	1	Idler Arm ASM				
17	25-5640	1	Washer				
18	27-0410	1	Screw-Shoulder				
19	60-9480	1	Decal				
20	323-29	1	Screw-HH				
21	55-9290	1	Pulley-Idler				
22	36-3860	1	Screw-HWH, TAP				
23	12-3270	2	Screw				
24	16-9449	1	Cover-Drive				

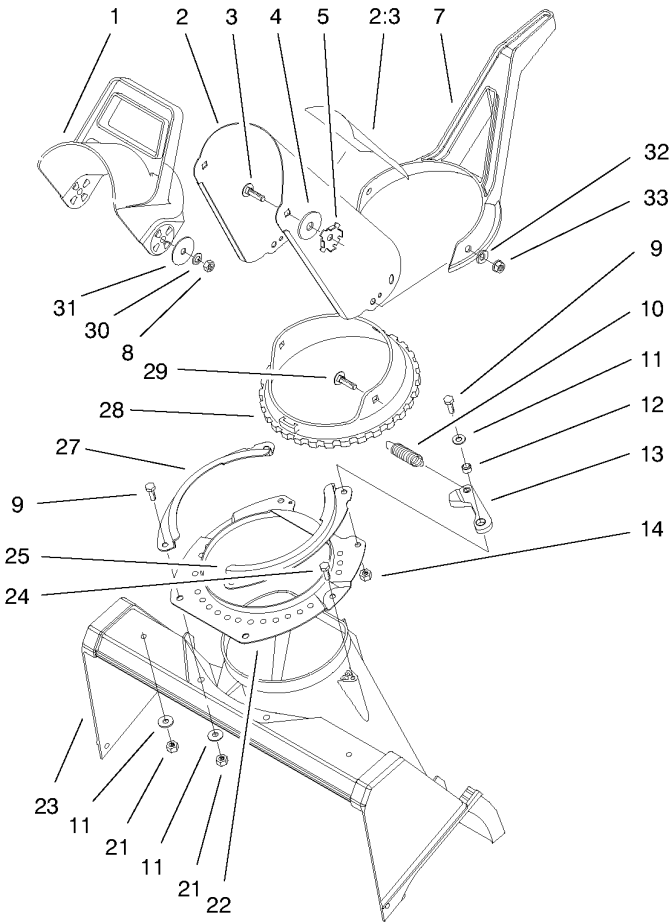 


Chute Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	56-2680	1	Chute-Deflector	32	3256-70	3	Washer-Flat
2	94-2790	1	Chute ASM W/Decal	33	3296-29	3	Nut-Lock, NI
2:3	94-2900	1	Decal - Danger Discharge				
3	3230-22	2	Screw-CARR				
4	20-4320	2	Washer-Rubber				
5	55-8950	2	Plate-Friction				
7	94-9914	1	Handle-Control, Chute				
8	3296-29	2	Nut-Lock, NI				
9	321-4	4	Screw-HH				
10	80-4600	1	Spring-Extension				
11	3256-22	5	Washer-Flat				
12	55-9370	1	Spacer-Blade, Rotor				
13	80-4610	1	Detent				
14	3296-56	1	Nut-Lock, NI				
21	3296-42	5	Nut-Lock, NI				
22	55-8921-03	1	Ring-Support, Chute				
23	55-8700	1	Housing				
24	46-8092	2	Screw-Plastite				
25	71-4980-03	1	Retainer-Chute, LH				
27	71-4990-03	1	Retainer-Chute, RH				
28	71-4950	1	Gear Ring, Chute				
29	3230-23	3	Screw-CARR				
30	3290-456	2	Washer-Belleville				
31	3256-68	2	Washer-Flat				

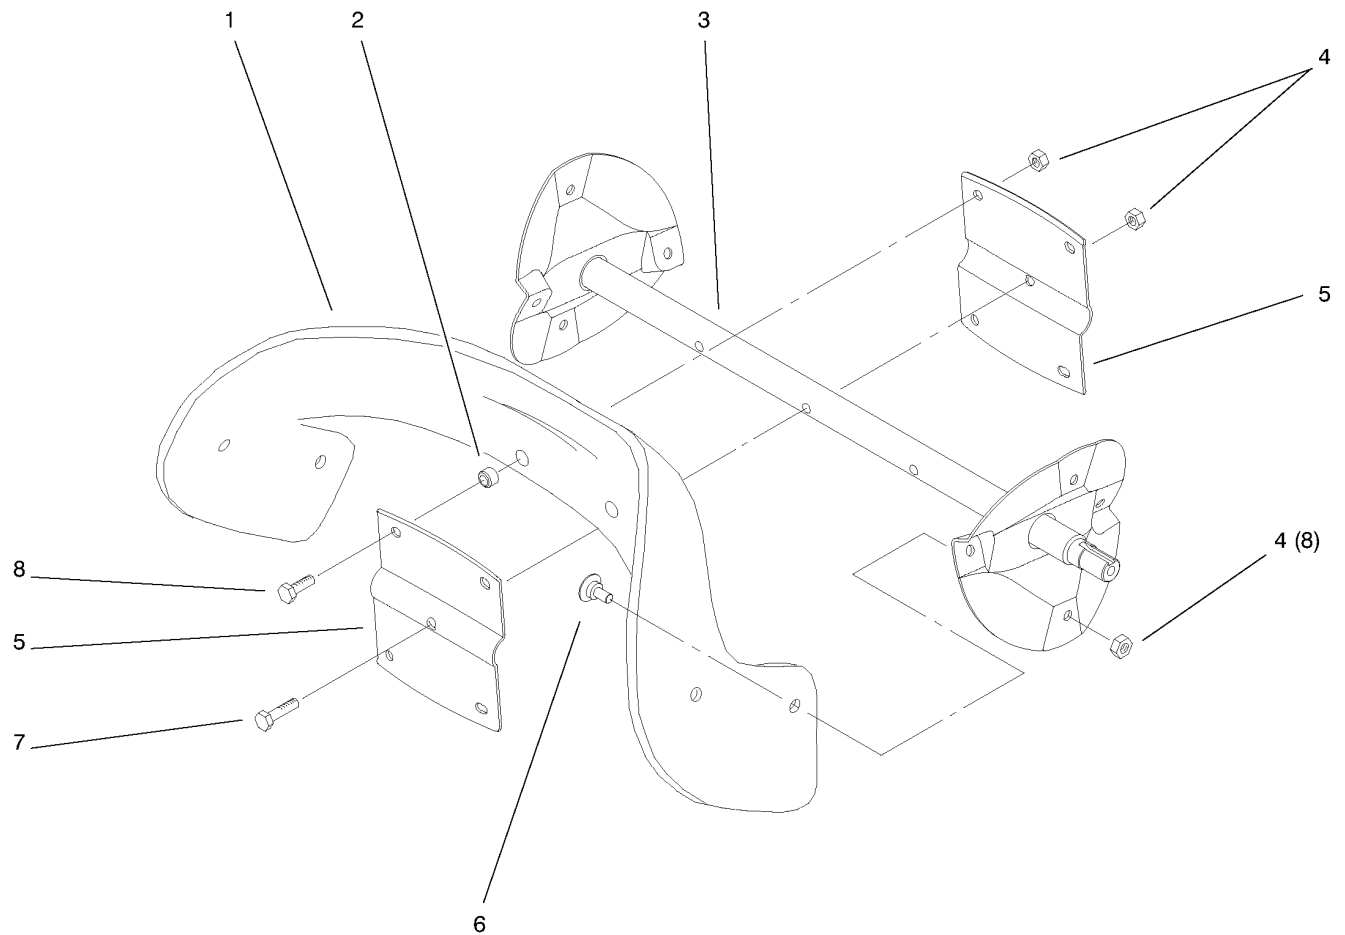 

Impeller Assembly


Ref	Part No.	Qty.	Description				
1	99-9313	2	Blade-Rotor				
2	55-9370	4	Spacer-Blade, Rotor				
3	55-9202-03	1	Rotor				
4	3296-56	12	Nut-Lock, NI				
5	66-6600-03	2	Half-Rotor				
6	84-1971	8	Screw				
7	321-8	1	Screw-HH				
8	321-4	4	Screw-HH				

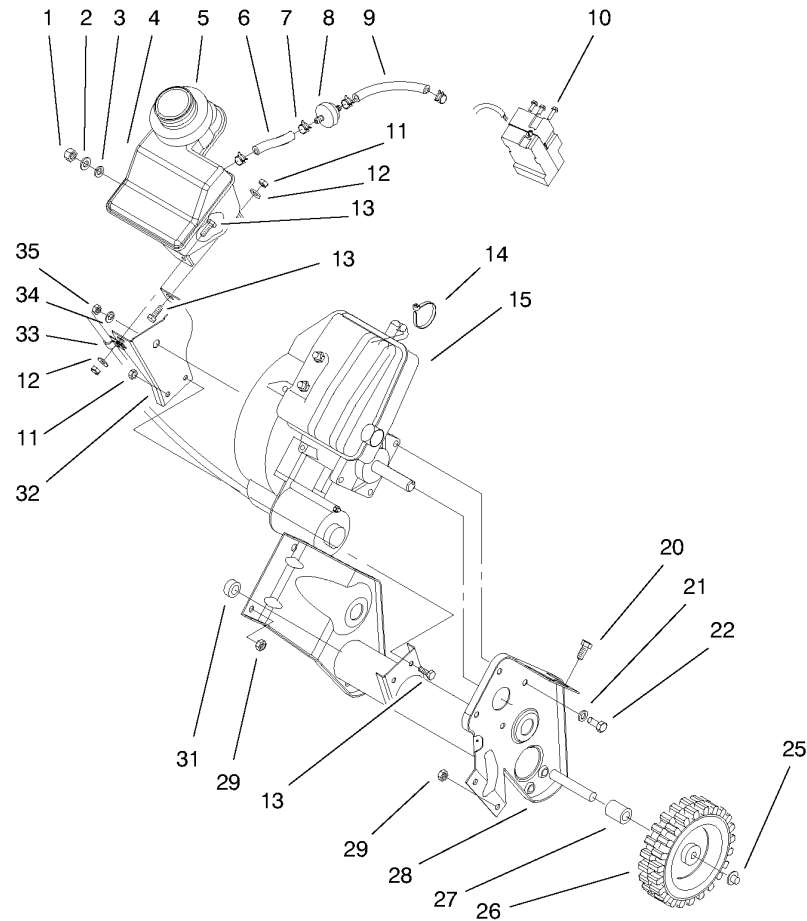 

Engine and Frame Assembly


Ref	Part No.	Qty.	Description
1	32152-8	1	Nut-Lock, Cone
2	3256-23	1	Washer-Flat
3	237-89	1	Grommet-Rubber
4	94-9920	1	Tank-Gas
5	55-9310	1	Seal-Foam
6	49-2482	1	Line-Fuel
7	2412-98	4	Clamp
8	56-6360	1	Filter-Fuel
9	94-9932	1	Hose-Fuel
10	32144-27	3	Screw-Plastite (Only On: 38419)
11	3296-42	4	Nut-Lock, NI
12	3256-22	2	Washer-Flat
13	321-4	4	Screw-HH
14	250-4	1	Tie-Cable
15		1	Engine-Briggs And Stratton, 084132-0120-E1 (Only On: 38413)
15		1	Engine-Briggs And Stratton, 084133-0196-E1 (Only On: 38419)
20	322-3	2	Screw-HH
21	3290-456	5	Washer-Belleville
22	322-3	4	Screw-HH
25	32112-14	2	Nut-Push
26	66-6510	2	Wheel

Ref	Part No.	Qty.	Description
27	66-6501	1	Spacer-Wheel
28	95-1892-03	1	Frame
29	3296-29	3	Nut-Lock, NI
31	66-6500	1	Spacer-Wheel
32	94-9918-03	1	Support-Recoil
33	2412-91	1	Clamp R (Only On: 38419)
34	71-5320	1	Washer-Support, Engine
35	3296-16	1	Nut-Lock, NI

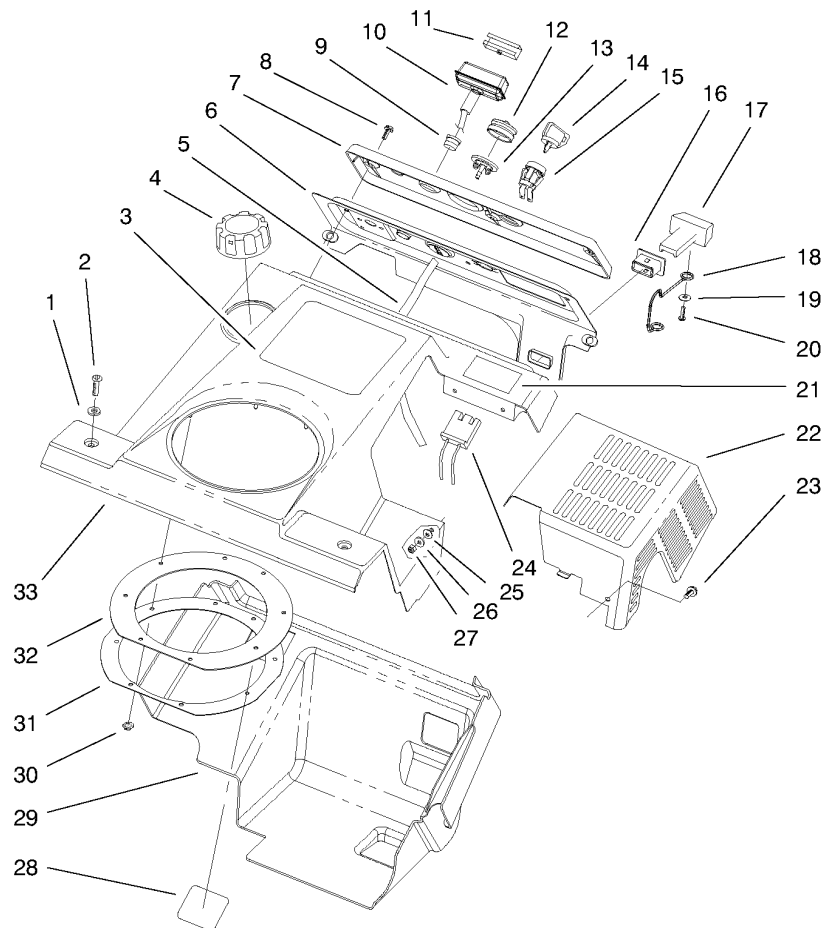 


Upper Shroud and Control Panel Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	3256-22	2	Washer-Flat	25	55-9660	3	Washer
2	3250-32	2	Screw-PPH	26	3256-14	3	Washer-Flat
3	100-3305	1	Decal - Ccr 2450 Gts	27	3296-12	3	Nut-Lock
4	55-3573	1	Cap-Fuel ASM	28	61-4790	1	Decal (Only On: 38419)
5	98-1372	1	Hose-Primer	29	94-9919	1	Shroud - Lower
6	12-4659	1	Cont Panel/Primer Body	30	3290-474	8	Palnut
7	55-9350	1	Control Nameplate	31	55-9540-03	1	Retainer-Seal, Chute
8	32144-112	3	Screw-HWH	32	55-9260	1	Seal-Chute
9	55-9410	1	Guide-Rope, Starter	33	100-3301	1	Upper Shroud/Decal ASM (Only On: 38419)
10	612825	1	Handle-Start	33	100-3300	1	Upper Shroud/Decal ASM (Only On: 38413)
11	612824	1	Clip-Starter				
12	66-7460	1	Bulb-Primer				
13	44-2750	1	Body-Primer				
14	63-8360	1	Key-Ignition				
15	40-5940	1	Switch				
16	55-8820	1	Fitting				
17	55-8810	1	Control-Choke				
18	95-7439	1	Linkage-Choke				
19	3256-49	1	Washer-Flat				
20	32144-111	1	Screw-PPH				
21	98-1373	1	Decal				
22	94-9924-03	1	Shield-Heat				
23	32105-8	3	Screw-SHH				
24	218-532	1	Connector-Body				

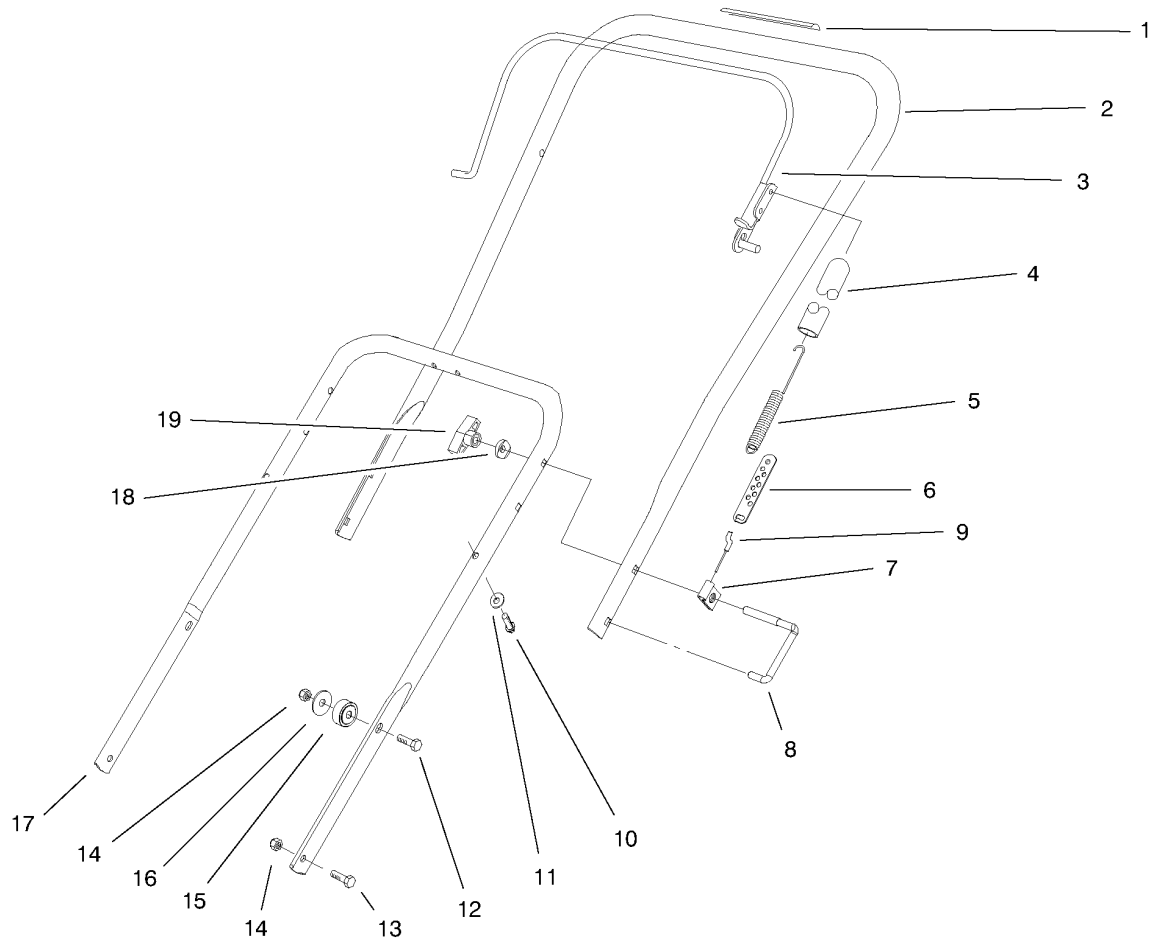 

Handle Assembly

Ref	Part No.	Qty.	Description				
1	66-6870	1	Decal - Rotor Drive				
2	95-2667	1	Handle-Upper				
3	71-5120-03	1	Bail ASM				
4	71-5530	1	Cover-Spring				
5	71-5480	1	Spring-Clutch				
6	55-9380	1	Adjuster-Cable				
7	2412-112	1	Clamp				
8	98-2266	2	Lock-Handle				
9	94-9922	1	Cable-Clutch				
10	61-8640	2	Screw				
11	3-7501	2	Washer				
12	322-17	2	Screw-HH				
13	322-3	2	Screw-HH				
14	3296-29	8	Nut-Lock, NI				
15	94-9923	2	Spacer - Lower Handle				
16	3256-68	2	Washer-Flat				
17	55-9121-03	1	Handle-Lower				
18	75-9130	2	Washer-Curved				
19	98-7134	2	Knob-Handle				

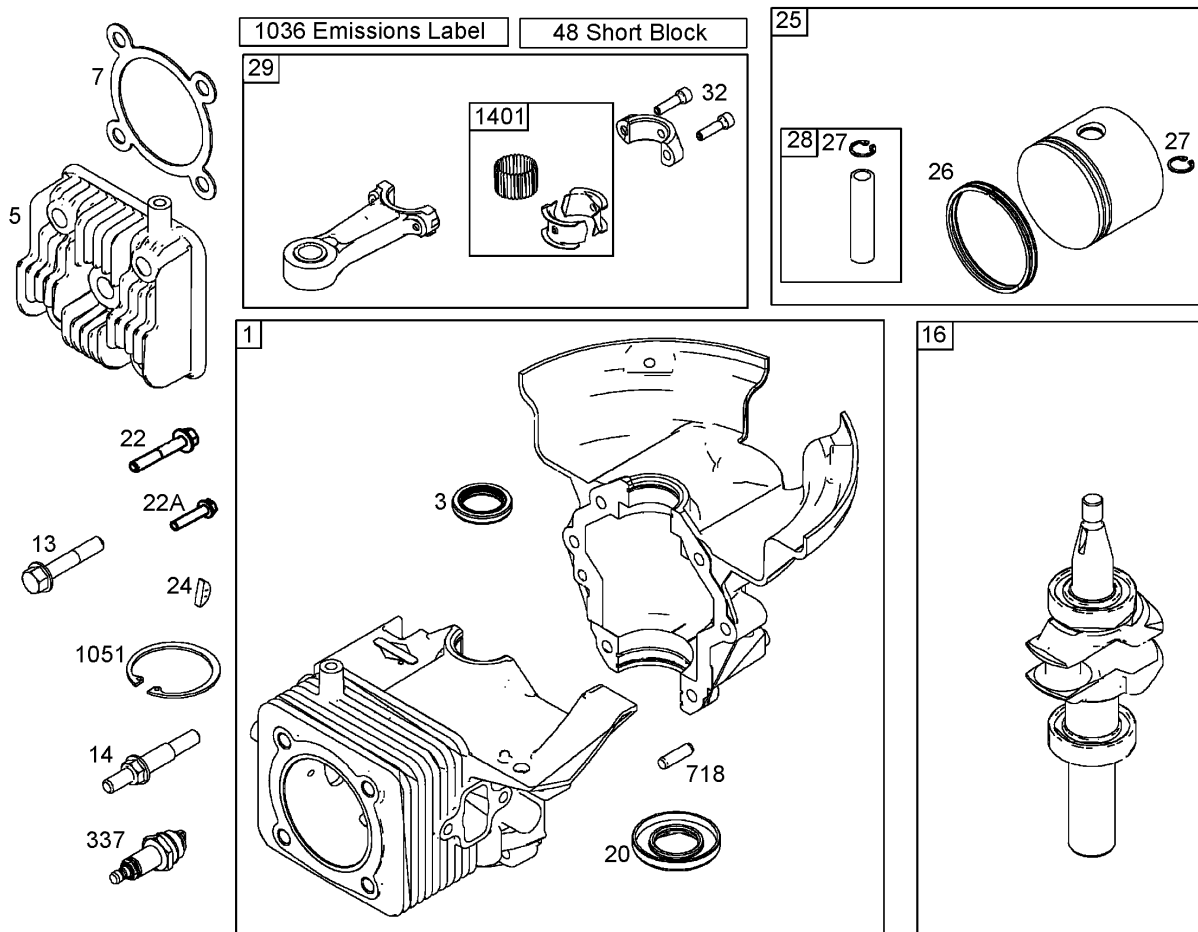 

Cylinder, Piston, and Connecting Rod Assemblies Briggs and Stratton 084132-0120-E1


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
②1	801260	1	Cylinder ASM	②1401	801290	1	Roller-Strip
②3	801262	1	Seal-Oil				
②5	801283	1	Head-Cylinder				
②7	801263	1	Gasket-Head, Cylinder				
②13	801264	1	Screw (Cylinder Head)				
②14	801265	1	Stud (Cylinder Head)				
②16	801220	1	Crankshaft				
②20	801261	1	Seal-Oil				
②22	801266	1	Screw (Crankcase Cover And Sump)				
②22A	801271	1	Screw (Crankcase Cover And Sump)				
②24	801234	1	Key-Flywheel				
②25	801279	1	Piston ASM				
②26	801280	1	Ring Set				
②27	801275	1	Lock-Pin, Piston				
②28	801276	1	Pin-Piston				
②29	801277	1	Rod-Connecting				
②32	801278	1	Screw				
②48	801284	1	Short Block				
②337	801254	1	Plug-Spark				
②718	690959	1	Pin-Locating				
②1051	801274	1	Ring-Retaining				
②1036	801294	1	Label-Emissions				



Muffler, Carburetor, and Intake Manifold Assemblies Briggs and Stratton 084132-0120-E1


Ref	Part No.	Qty.	Description
●50	801232	1	Manifold-Intake
●51	801224	1	Gasket-Intake
●54	801230	1	Screw (Intake Manifold)
●97	801306	1	Shaft-Throttle
●106	801317	1	Seat-Inlet
●109	801307	1	Shaft-Choke
●117	801310	1	Jet-Main
●125	801233	1	Carburetor
●133	801316	1	Float-Carburetor
●142	801313	1	Nozzle-Carburetor
●147	801308	1	Jet-Pilot
●163	801227	1	Gasket-Cleaner, Air
●200	801289	1	Blade-Governor
●201	801225	1	Link-Vane, Air
●209	801223	1	Spring-Governor
●300	801250	1	Muffler
●333	801268	1	Armature-Magneto
●334	801267	1	Screw
●426	801231	1	Screw
●613	801251	1	Screw
●654	801324	1	Nut (Intake Manifold) (Used Before Engine Code Date 05042600)
●711	801229	1	Screw

Ref	Part No.	Qty.	Description
●780	801228	1	Anchor-Spring
●789	801253	1	Wire ASM
●883	801252	1	Gasket-Exhaust
●977	801312	1	Gasket Set-Carburetor
●996	801226	1	Shield-Carburetor
●1127	801318	1	Screw

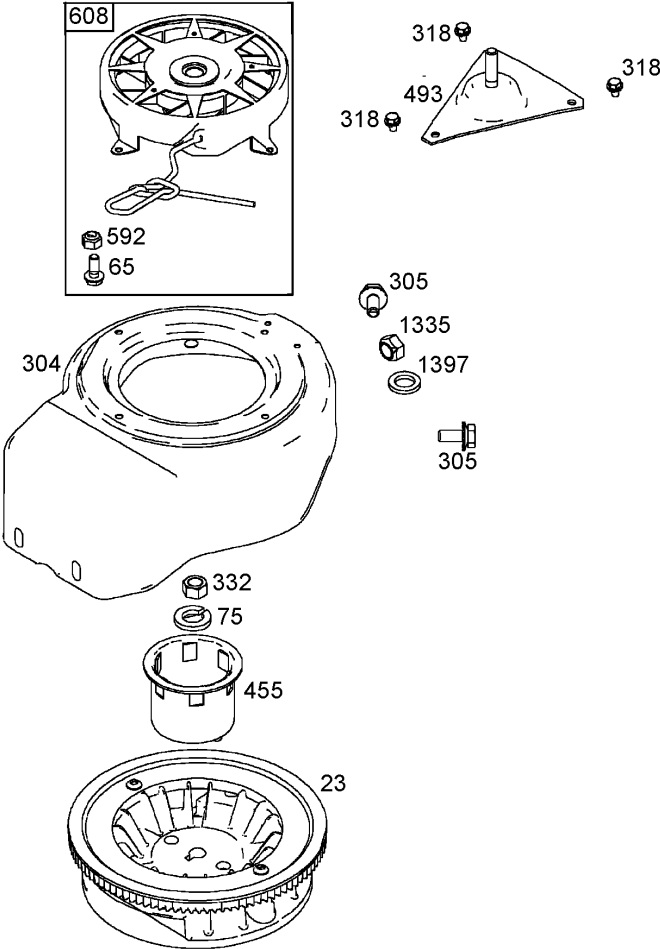


Flywheel, Blower Housing, and Rewind Starter Assemblies
Briggs and Stratton 084132-0120-E1

Ref	Part No.	Qty.	Description				
23	801246	1	Flywheel				
65	801243	1	Screw				
75	801237	1	Washer				
304	801257	1	Housing-Blower				
305	801239	1	Screw				
318	801241	1	Screw				
332	801238	1	Nut				
455	801235	1	Cup-Flywheel				
493	801240	1	Bracket-Mounting				
592	801244	1	Nut				
608	801242	1	Starter-Rewind				
1335	801269	1	Nut				
1397	801270	1	Washer				

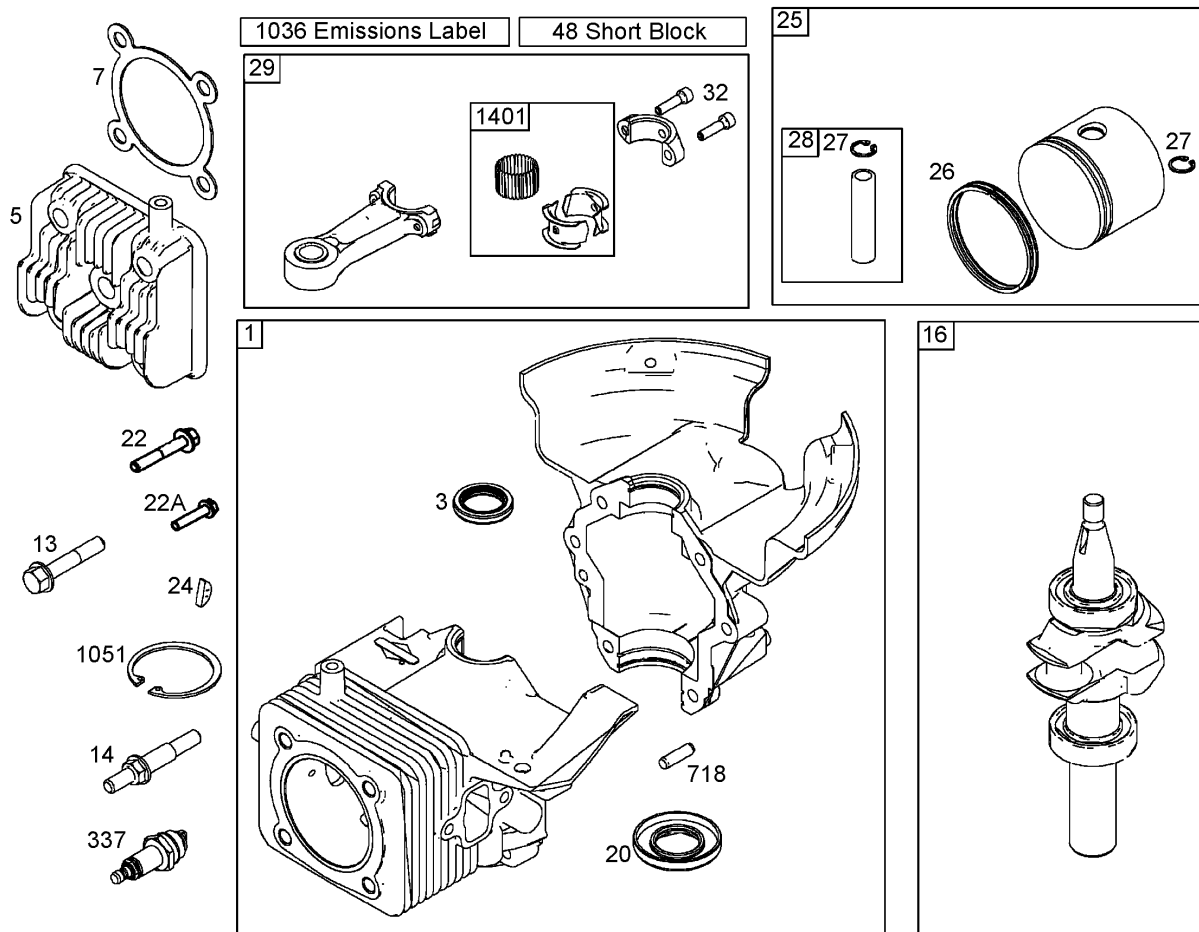

Cylinder, Piston, and Connecting Rod Assemblies Briggs and Stratton 084133-0196-E1


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	801322	1	Cylinder ASM	1401	801290	1	Roller-Strip
3	801262	1	Seal-Oil				
5	801283	1	Head-Cylinder				
7	801263	1	Gasket-Head, Cylinder				
13	801264	1	Screw (Cylinder Head)				
14	801265	1	Stud (Cylinder Head)				
16	801220	1	Crankshaft				
20	801261	1	Seal-Oil				
22	801266	1	Screw (Crankcase And Cover Sump)				
22A	801271	1	Screw (Crankcase And Cover Sump)				
24	801234	1	Key-Flywheel				
25	801279	1	Piston ASM				
26	801280	1	Ring Set				
27	801275	1	Lock-Pin, Piston				
28	801276	1	Pin-Piston				
29	801277	1	Rod-Connecting				
32	801278	1	Screw				
48	801285	1	Short Block				
337	801254	1	Plug-Spark				
718	690959	1	Pin-Locating				
1036	801294	1	Label-Emissions				
1051	801274	1	Ring-Retaining				

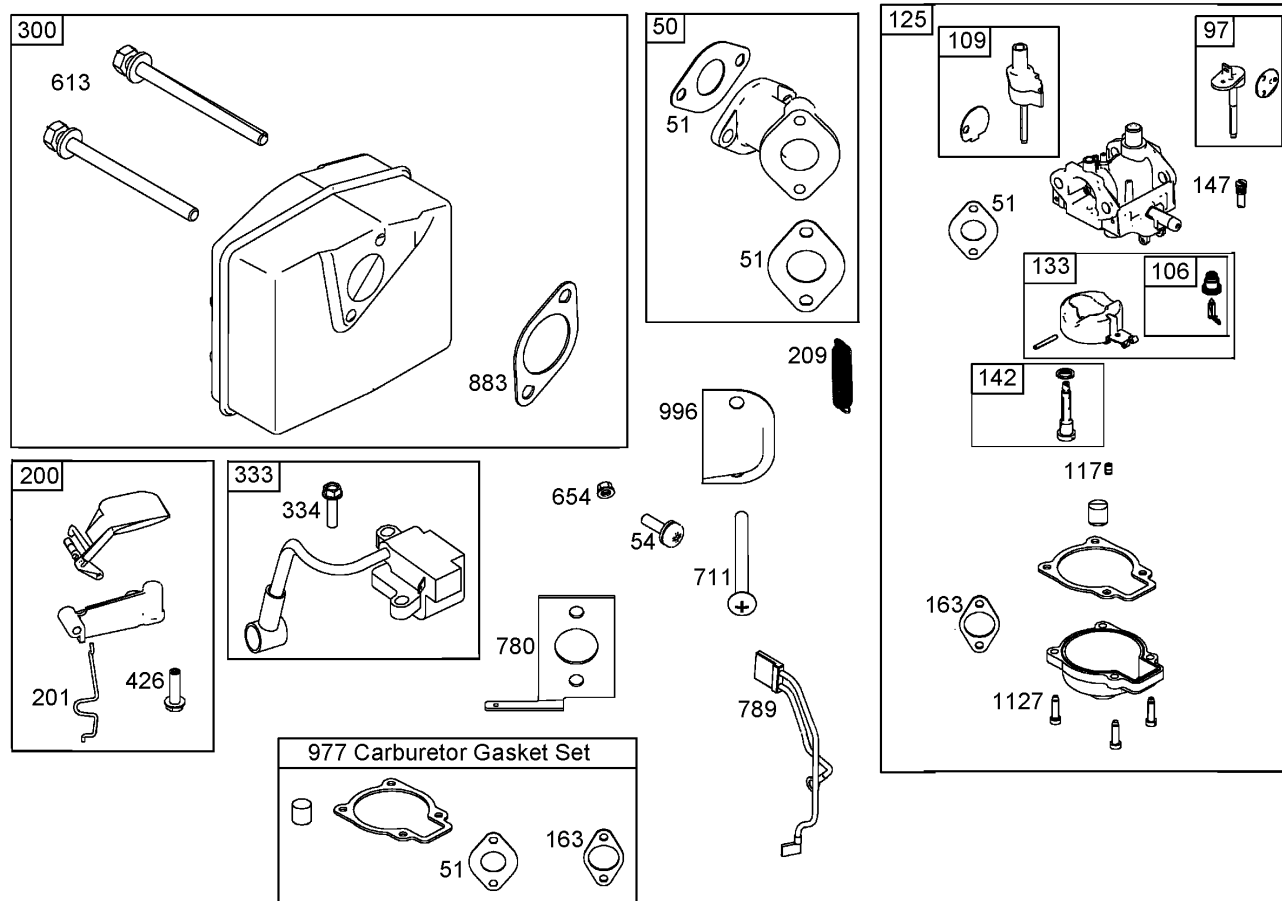

Muffler, Carburetor, and Intake Manifold Assemblies Briggs and Stratton 084133-0196-E1

Ref	Part No.	Qty.	Description
●50	801232	1	Manifold-Intake
●51	801224	1	Gasket-Intake
●54	801230	1	Screw (Intake Manifold)
●97	801306	1	Shaft-Throttle
●106	801317	1	Seat-Inlet
●109	801307	1	Shaft-Choke
●117	801310	1	Jet-Main
●125	801233	1	Carburetor
●133	801316	1	Float-Carburetor
●142	801313	1	Nozzle-Carburetor
●147	801308	1	Jet-Pilot
●163	801227	1	Gasket-Cleaner, Air
●200	801289	1	Blade-Governor
●201	801225	1	Link-Vane, Air
●209	801223	1	Spring-Governor
●300	801250	1	Muffler
●333	801268	1	Armature-Magneto
●334	801267	1	Screw
●426	801231	1	Screw
●613	801251	1	Screw
●654	801324	1	Nut (Intake Manifold) (Used Before Engine Code Date 05042600)
●711	801229	1	Screw (Starter Motor)

Ref	Part No.	Qty.	Description
●780	801228	1	Anchor-Spring
●789	801253	1	Wire ASM
●883	801252	1	Gasket-Exhaust
●977	801312	1	Gasket Set-Carburetor
●996	801226	1	Shield-Carburetor
●1127	801318	1	Screw

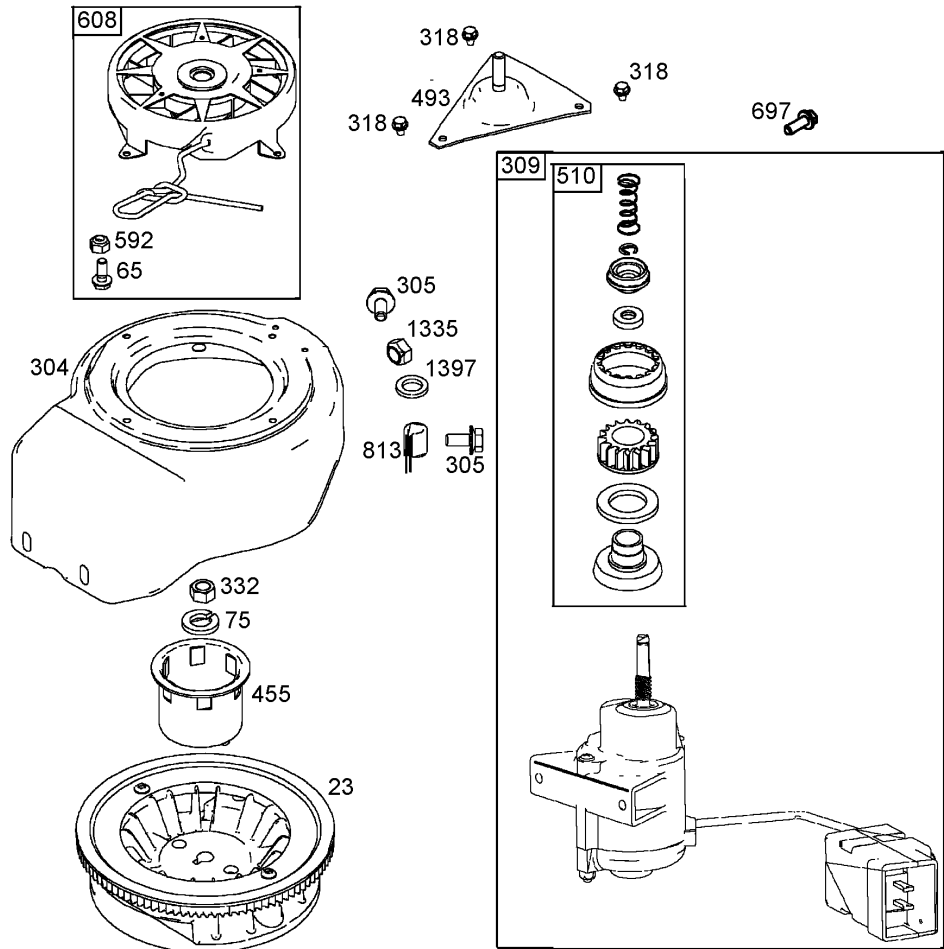

Flywheel, Blower Housing, and Starter Assemblies
Briggs and Stratton 084133-0196-E1

Ref	Part No.	Qty.	Description				
23	801246	1	Flywheel				
65	801243	1	Screw				
75	801237	1	Washer				
304	801236	1	Housing-Blower				
305	801239	1	Screw (Blower Housing)				
309	801247	1	Motor-Starter				
318	801241	1	Screw				
332	801238	1	Nut				
455	801235	1	Cup-Flywheel				
493	801240	1	Bracket-Mounting				
510	801293	1	Drive-Starter				
592	801244	1	Nut				
608	801242	1	Starter-Rewind				
697	801248	1	Screw				
813	801249	1	Clamp				
1335	801269	1	Nut				
1397	801270	1	Washer				

