



CCR[™] 3650 Snowthrower

Model No. 38441 - 200000001 and up.

Model No. 38442 - 200000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing and Side Plate Assembly	 3	Muffler, Carburetor, and Intake Manifold	
Impeller Drive Assembly	 4	Assemblies Briggs and Stratton 084232-0121- E1	 11
Chute Assembly	 5	Flywheel, Blower Housing and Starter	
Impeller Assembly	 6	Assemblies Briggs and Stratton 084232-0121- E1	 12
Engine and Frame Assembly	 7	Cylinder, Piston, and Connecting Rod	
Upper Shroud and Control Panel Assembly	 8	Assemblies Briggs and Stratton	 13
Handle Assembly	 9	Muffler, Carburetor, and Intake Manifold	
Cylinder, Piston, and Connecting Rod		Assemblies Briggs and Stratton	 14
Assemblies Briggs and Stratton 084232-0121- E1	 10	Flywheel, Blower Housing, and Starter	
		Assemblies Briggs and Stratton	 15

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power-take-off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll-over-protection-system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HSBH. hex socket button head	SPH. slotted pan head
HSFH. hex socket flat head	SQH. square head
HS. hex socket head	SRH. slotted round head
HWH. hex washer head	STD. standard
HWHTF. hex washer head thread forming	TAP. self tapping
HYD. hydraulic	TTH. torx truss head

Footnotes

❶ Not serviced separately


❷ Obtain from your local Briggs & Stratton dealer

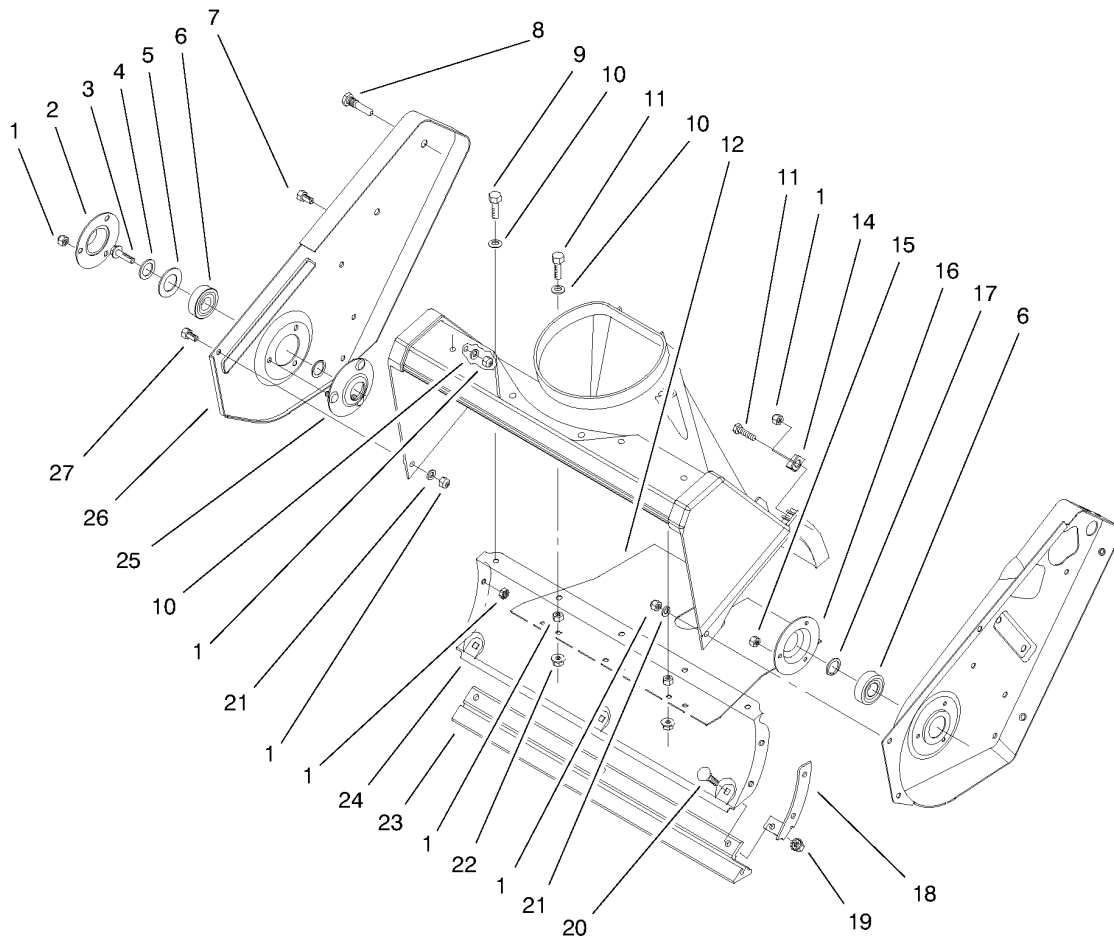

Housing and Side Plate Assembly


Ref	Part No.	Qty.	Description
1	3296-42	16	Nut-Lock, NI
2	52-7290-03	1	Retainer-Bearing
3	3234-25	1	Screw-HHF
4	3256-24	1	Washer-Flat
5	52-7270	1	Washer-Rubber
6	38-7820	2	Bearing-Ball
7	322-43	1	Screw-HH
8	38-8211	1	Pin-Rotor
9	321-4	3	Screw-HH
10	3256-22	7	Washer-Flat
11	321-6	3	Screw-HH
12	55-9512	1	Cover-Bottom
14	55-9430	1	Bracket-Housing
15	3296-2	3	Nut-Lock
16	38-8620	1	Flange-Bearing
17	52-7280	2	Washer-Thrust
18	56-2610	1	Bracket-Housing, Lower
19	32149-2	3	Nut-Keps
20	3229-11	3	Screw-CARR
21	3256-67	2	Washer-Flat
22	32128-10	2	Nut-Lock, HHF
23	55-8760	1	Scraper
24	55-9220-03	1	Housing-Lower
25	52-9110	1	Flange-Bearing

Ref	Part No.	Qty.	Description
26	55-8840-03	1	Plate-Side, RH
27	32105-15	5	Screw

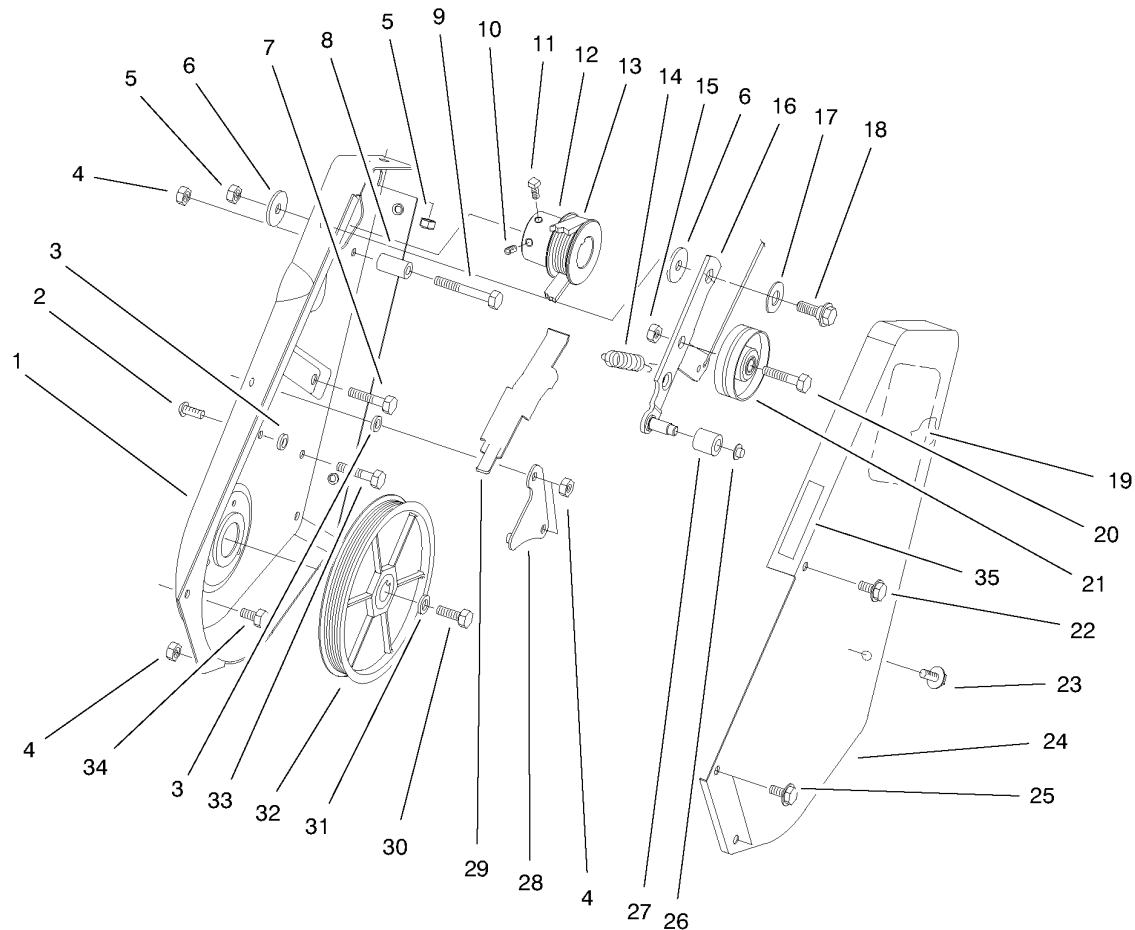

Impeller Drive Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	55-8851-03	1	Plate-Side, LH	25	32105-15	2	Screw
2	3274-31	1	Screw-HSBH	26	32112-11	1	Nut-Push
3	55-9620	2	Spacer-Plate, Pivot	27	55-9520	1	Roller-Brake
4	3296-42	5	Nut-Lock, NI	28	55-9570	1	Pivot Plate ASM
5	3296-29	3	Nut-Lock, NI	29	55-9550	1	Brake-Arm
6	5-4460	2	Washer-Pivot	30	321-30	1	Screw-HH
7	322-3	2	Screw-HH	31	3290-456	1	Washer-Belleville
8	55-9530	1	Sleeve-Guide, Belt	32	95-2672	1	Pulley Rotor ASM
9	321-13	1	Screw-HH	33	321-4	2	Screw-HH
10	3245-41	1	Screw-HSH	34	32105-8	3	Screw-SHH
11	3241-7	1	Screw-SQH	35	94-2561	1	Decal-Hot
12	95-2673	1	Pulley-Engine				
13	95-6151	1	Belt-Drive				
14	55-9280	1	Spring-Extension				
15	32152-2	1	Nut-Lock, Cone				
16	63-3610	1	Idler Arm ASM				
17	25-5640	1	Washer				
18	27-0410	1	Screw-Shoulder				
19	60-9480	1	Decal				
20	323-29	1	Screw-HH				
21	55-9290	1	Pulley-Idler				
22	36-3860	1	Screw-HWH, TAP				
23	12-3270	2	Screw				
24	55-9010-03	1	Cover-Drive				

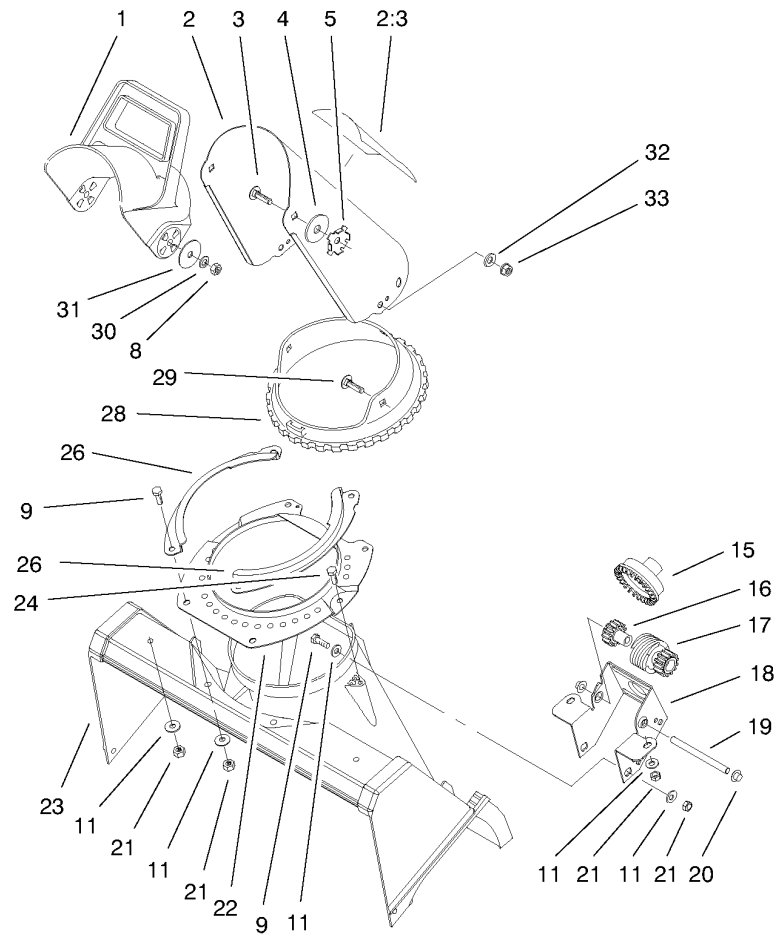

Chute Assembly


Ref	Part No.	Qty.	Description
1	56-2680	1	Chute-Deflector
2	94-2791	1	Chute ASM W/Decal
2:3	94-2901	1	Decal-Danger
3	3230-22	2	Screw-CARR
4	20-4320	2	Washer-Rubber
5	55-8950	2	Plate-Friction
8	3296-29	2	Nut-Lock, NI
9	321-4	6	Screw-HH
11	3256-22	10	Washer-Flat
15	55-8740	1	Gear-Face
16	55-8750	1	Gear-Spur, Spacer
17	55-8730	1	Gear-Spur/Worm
18	84-5650-03	1	Bracket-Gear, Chute
19	55-9150	1	Shaft-Gear, Worm
20	32112-11	2	Nut-Push
21	3296-42	8	Nut-Lock, NI
22	55-8921-03	1	Ring-Support, Chute
23	55-8700	1	Housing
24	46-8092	2	Screw-Plastite
26	55-8910-03	2	Ring-Retainer, Chute
28	55-8720	1	Ring-Gear, Chute
29	3230-18	3	Screw-CARR
30	3290-456	2	Washer-Belleville
31	3256-68	2	Washer-Flat

Ref	Part No.	Qty.	Description
32	3256-70	3	Washer-Flat
33	3296-29	3	Nut-Lock, NI

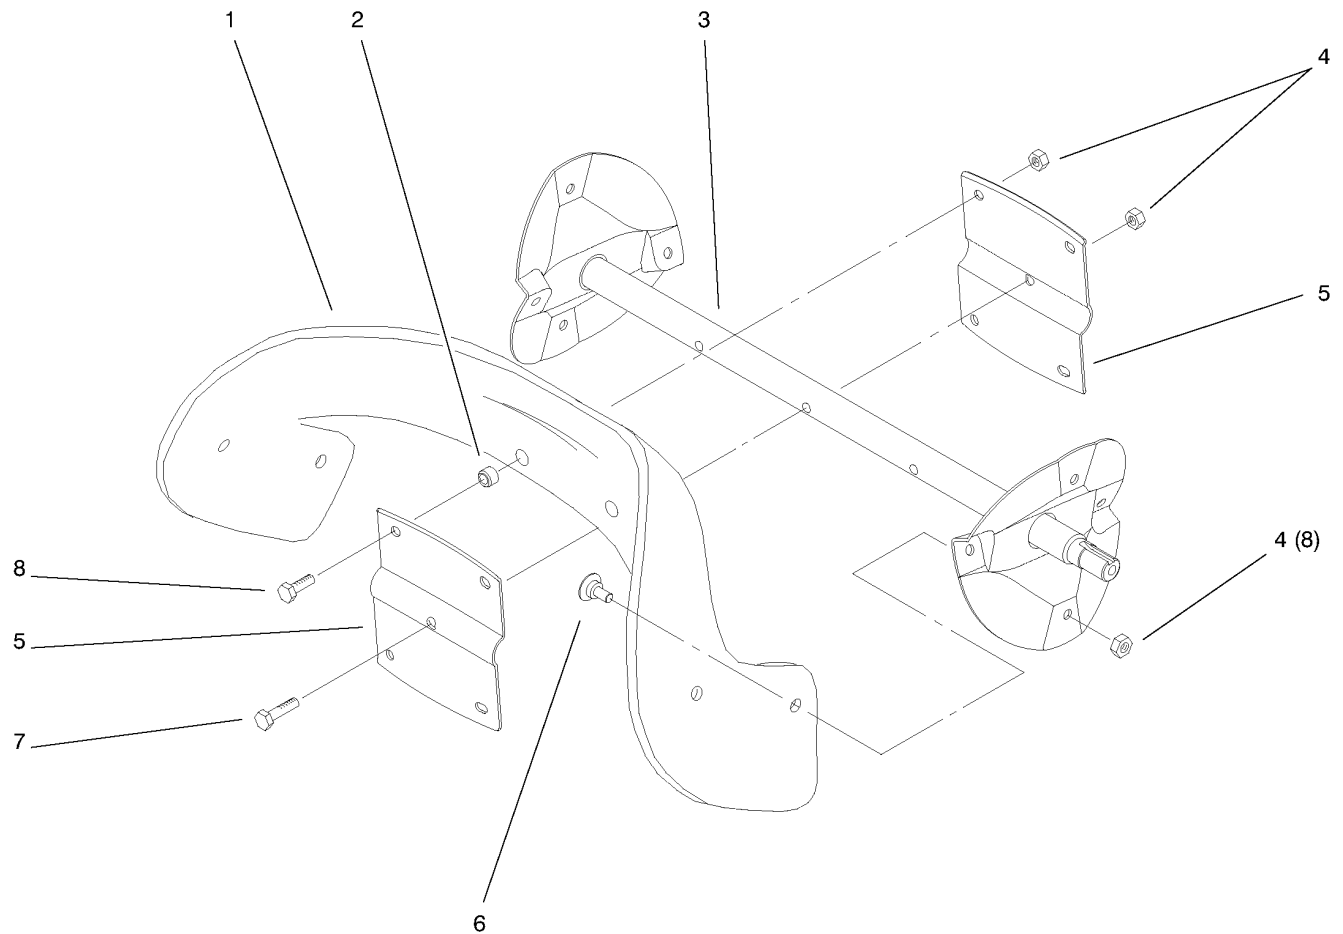

Impeller Assembly


Ref	Part No.	Qty.	Description
1	99-9313	2	Blade-Rotor
2	55-9370	4	Spacer-Blade, Rotor
3	55-9202-03	1	Rotor
4	3296-56	12	Nut-Lock, NI
5	66-6600-03	2	Half-Rotor
6	84-1971	8	Screw
7	321-8	1	Screw-HH
8	321-4	4	Screw-HH

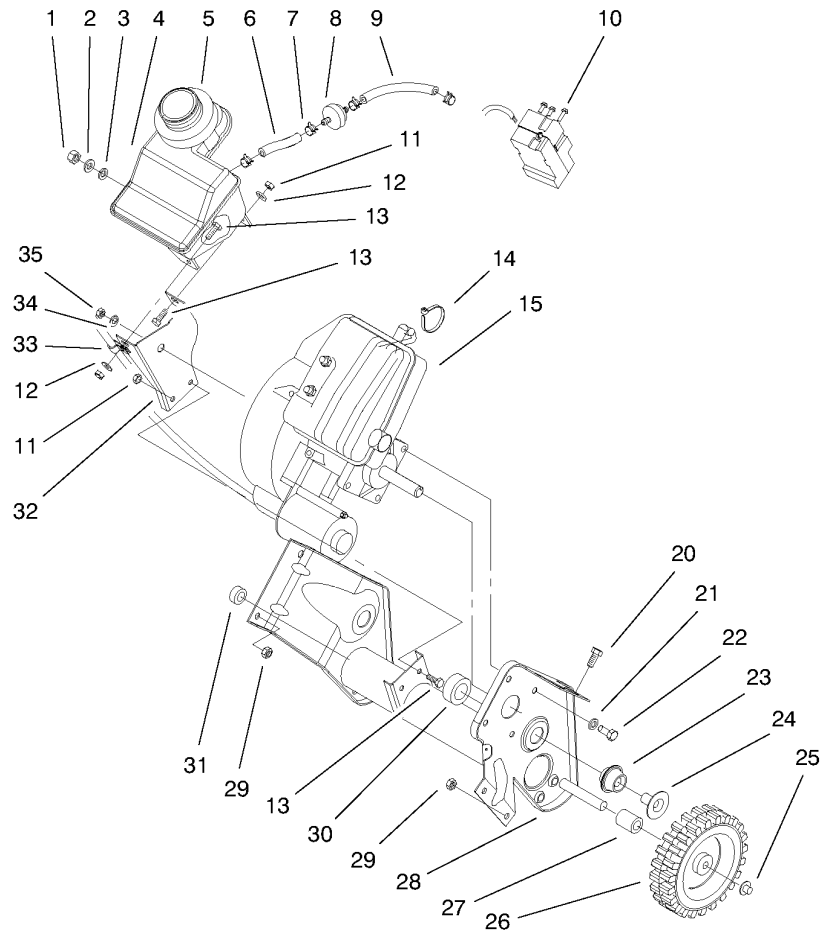

Engine and Frame Assembly


Ref	Part No.	Qty.	Description
1	32152-8	1	Nut-Lock, Cone
2	3256-23	1	Washer-Flat
3	237-89	1	Grommet-Rubber
4	94-9920	1	Tank-Gas
5	55-9310	1	Seal-Foam
6	49-2482	1	Line-Fuel
7	2412-98	4	Clamp
8	56-6360	1	Filter-Fuel
9	94-9932	1	Hose-Fuel
10	32144-27	3	Screw-Plastite (Only On: 38442)
11	3296-42	4	Nut-Lock, NI
12	3256-22	2	Washer-Flat
13	321-4	4	Screw-HH
14	250-4	1	Tie-Cable
15		1	Engine-Briggs And Stratton, 084232-0121-E1 (Only On: 38441)
15		1	Engine-Briggs And Stratton (Only On 38442)
20	322-3	2	Screw-HH
21	3290-456	5	Washer-Belleville
22	322-3	4	Screw-HH
23	55-9460	2	Mount-Rebound
24	55-9470	2	Spacer Tube
25	32112-14	2	Nut-Push

Ref	Part No.	Qty.	Description
26	66-6510	2	Wheel
27	66-6501	1	Spacer-Wheel
28	95-1892-03	1	Frame
29	3296-29	3	Nut-Lock, NI
30	55-9450	2	Load Mount
31	66-6500	1	Spacer-Wheel
32	94-9918-03	1	Support-Recoil
33	2412-91	1	Clamp R (Only On: 38442)
34	71-5320	1	Washer-Support, Engine
35	3296-16	1	Nut-Lock, NI

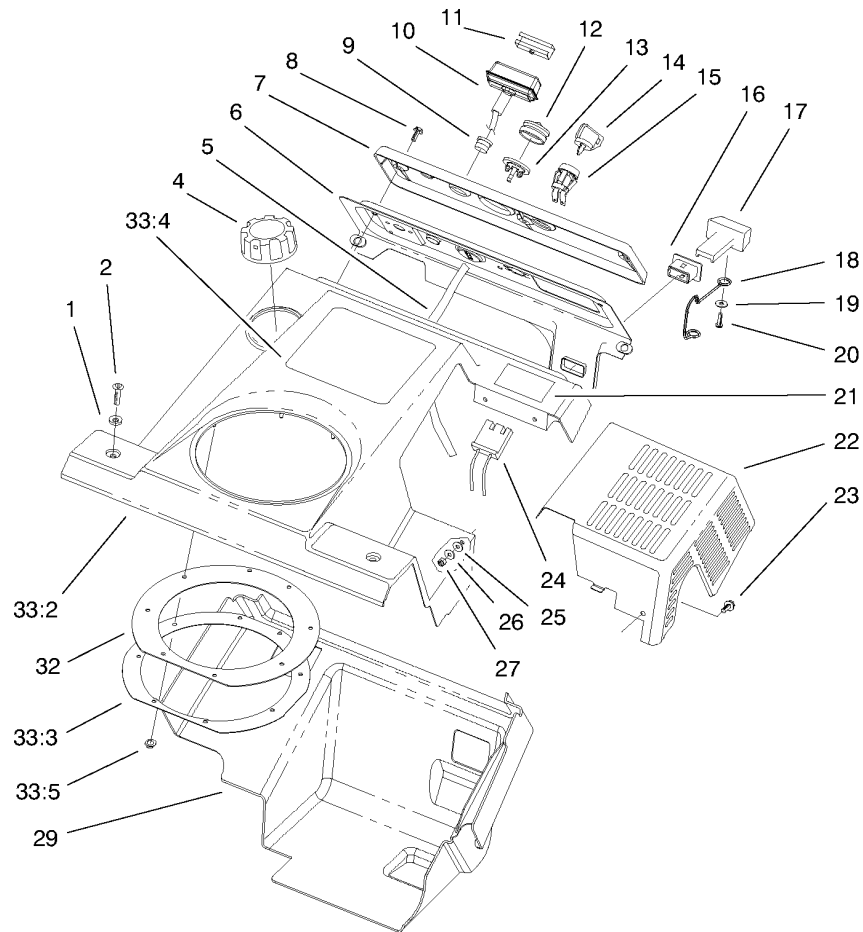

Upper Shroud and Control Panel Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	3256-22	2	Washer-Flat	24	218-532	1	Connector-Body
2	3250-32	2	Screw-PPH	25	55-9660	4	Washer
4	55-3573	1	Cap-Fuel ASM	26	3256-14	4	Washer-Flat
5	98-1372	1	Hose-Primer	27	3296-12	4	Nut-Lock
6	55-9490-03	1	Panel-Control	29	94-9919	1	Shroud - Lower
7	94-2570	1	Cont Nameplate-Intl (Only On: 38441)	33	100-3302	1	Upper Shroud/Decal ASM (Only On: 38441)
7	94-2569	1	Plate (Only On: 38442)	33	100-3303	1	Upper Shroud/Decal ASM (Only On: 38442)
8	32144-112	3	Screw-HWH	33:2	55-9260	1	Seal-Chute
9	55-9410	1	Guide-Rope, Starter	33:3	55-9540-03	1	Retainer-Seal, Chute
10	612825	1	Handle-Start	33:4	100-3308	1	Decal-Ccr 3650 Gts E (Only On: 38442)
11	612824	1	Clip-Starter	33:4	100-3307	1	Decal-Ccr 3650 Gts (Only On: 38441)
12	66-7460	1	Bulb-Primer	33:5	3290-474	8	Palnut
13	44-2750	1	Body-Primer				
14	63-8360	1	Key-Ignition				
15	40-5940	1	Switch				
16	55-8820	1	Fitting				
17	55-8811	1	Choke Control				
18	95-7439	1	Linkage-Choke				
19	3256-49	1	Washer-Flat				
20	32144-111	1	Screw-PPH				
21	98-1373	1	Decal				
22	55-9210-03	1	Shield-Heat				
23	32105-8	4	Screw-SHH				

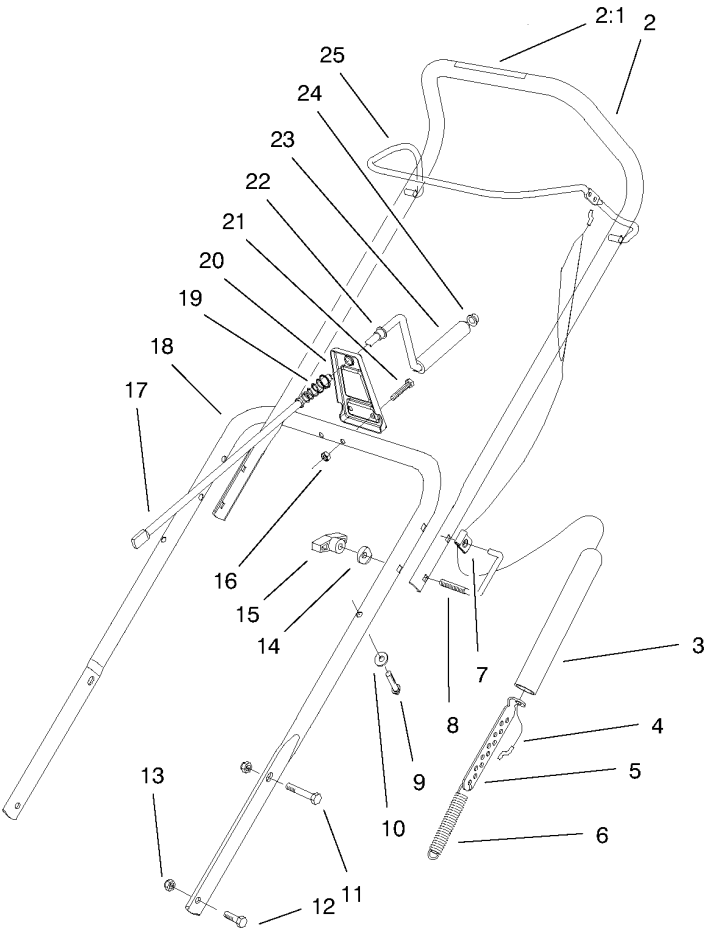

Handle Assembly

Ref	Part No.	Qty.	Description
2	98-2272	1	Handle-Upper W/Decal,
2:1	94-2577	1	Decal-Rotor Drive
3	55-9390	1	Cover-Spring
4	55-9322	1	Cable-Clutch
5	55-9380	1	Adjuster-Cable
6	55-9270	1	Spring-Extension
7	2412-112	1	Clamp
8	98-2266	2	Lock-Handle
9	61-8640	2	Screw
10	3-7501	2	Washer
11	322-9	2	Screw-HH
12	322-3	2	Screw-HH
13	3296-29	4	Nut-Lock, NI
14	75-9130	2	Washer-Curved
15	98-7134	2	Knob-Handle
16	3296-42	2	Nut-Lock, NI
17	55-9140	1	Rod-Crank, Chute
18	55-9121-03	1	Handle-Lower
19	55-9440	1	Spring-Compression
20	55-9090-03	1	Support-Crank, Chute
21	321-13	2	Screw-HH
22	256-249	1	Bushing
23	40-8230	1	Grip-Chute Control
24	3290-320	1	Retainer-Push On

Ref	Part No.	Qty.	Description
25	98-2264-03	1	Bar-Control

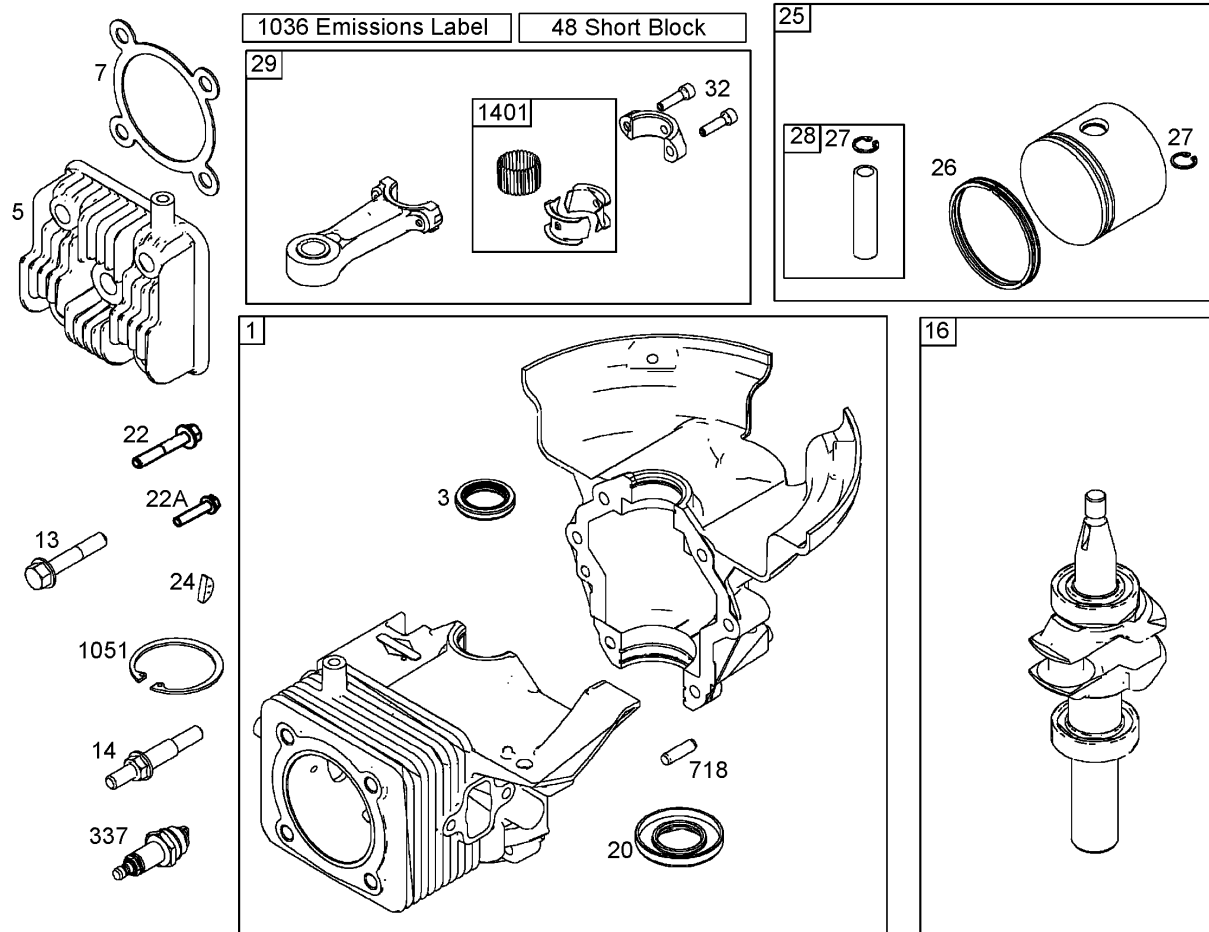

Cylinder, Piston, and Connecting Rod Assemblies

Briggs and Stratton 084232-0121-E1


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	801260	1	Cylinder ASM	1401	801290	1	Roller-Strip
3	801262	1	Seal-Oil				
5	801283	1	Head-Cylinder				
7	801263	1	Gasket-Head, Cylinder				
13	801264	1	Screw (Cylinder Head)				
14	801265	1	Stud (Cylinder Head)				
16	801220	1	Crankshaft				
20	801261	1	Seal-Oil				
22	801266	1	Screw (Crankcase Cover And Sump)				
22A	801271	1	Screw (Crankcase Cover And Sump)				
24	801234	1	Key-Flywheel				
25	801279	1	Piston ASM				
26	801280	1	Ring Set				
27	801275	1	Lock-Pin, Piston				
28	801276	1	Pin-Piston				
29	801277	1	Rod-Connecting				
32	801278	1	Screw				
48	801284	1	Short Block				
337	801254	1	Plug-Spark				
718	690959	1	Pin-Locating				
1036	801294	1	Label-Emissions				
1051	801274	1	Ring-Retaining				



Muffler, Carburetor, and Intake Manifold Assemblies Briggs and Stratton 084232-0121-E1


Ref	Part No.	Qty.	Description
●50	801232	1	Manifold-Intake
●51	801224	1	Gasket-Intake
●54	801230	1	Screw (Intake Manifold)
●97	801306	1	Shaft-Throttle
●106	801317	1	Seat-Inlet
●109	801307	1	Shaft-Choke
●117	801310	1	Jet-Main
●125	801233	1	Carburetor
●133	801316	1	Float-Carburetor
●142	801313	1	Nozzle-Carburetor
●147	801308	1	Jet-Pilot
●163	801227	1	Gasket-Cleaner, Air
●200	801289	1	Blade-Governor
●201	801225	1	Link-Vane, Air
●209	801223	1	Spring-Governor
●300	801250	1	Muffler
●333	801268	1	Armature-Magneto
●334	801267	1	Screw
●426	801231	1	Screw
●613	801251	1	Screw
●654	801324	1	Nut (Intake Manifold) (Used Before Engine Code Date 05042600)
●711	801229	1	Screw

Ref	Part No.	Qty.	Description
●780	801228	1	Anchor-Spring
●789	801253	1	Wire ASM
●883	801252	1	Gasket-Exhaust
●977	801312	1	Gasket Set-Carburetor
●996	801226	1	Shield-Carburetor
●1127	801318	1	Screw

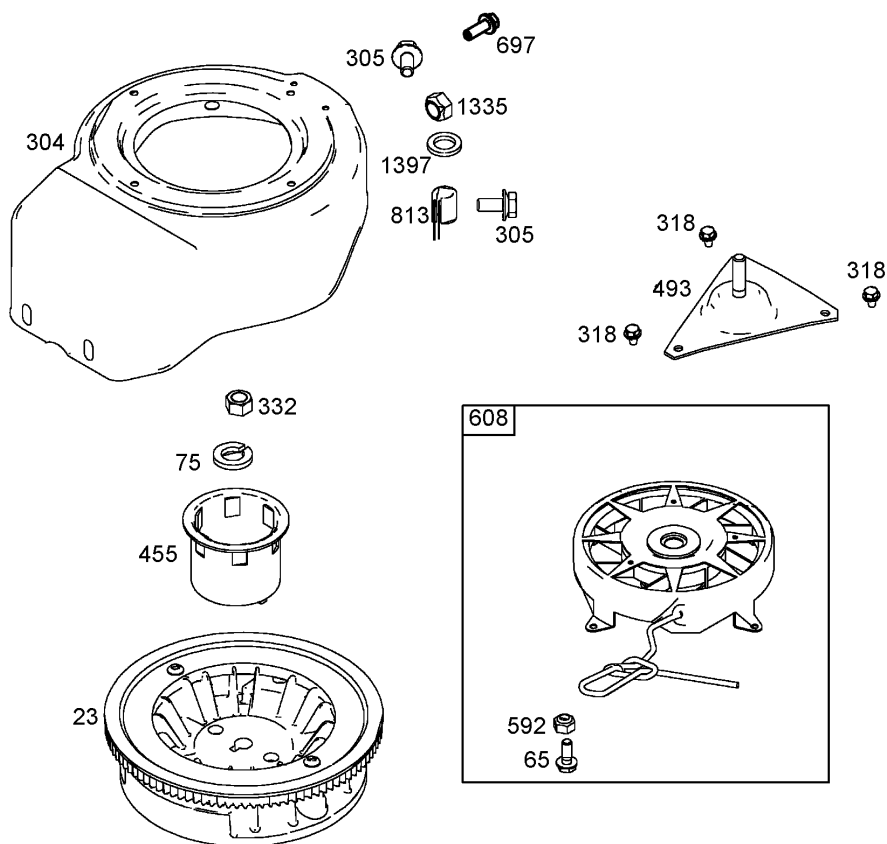


Flywheel, Blower Housing and Starter Assemblies Briggs and Stratton 084232-0121-E1

Ref	Part No.	Qty.	Description				
223	801246	1	Flywheel				
265	801243	1	Screw				
275	801237	1	Washer				
2304	801257	1	Housing-Blower				
2305	801239	1	Screw (Blower Housing)				
2318	801241	1	Screw				
2332	801238	1	Nut				
2455	801235	1	Cup-Flywheel				
2493	801240	1	Bracket-Mounting				
2592	801244	1	Nut				
2608	801242	1	Starter-Rewind				
2697	801248	1	Screw (Strater Motor)				
2813	801249	1	Clamp				
21335	801269	1	Nut (Blower Housing)				
21397	801270	1	Washer				

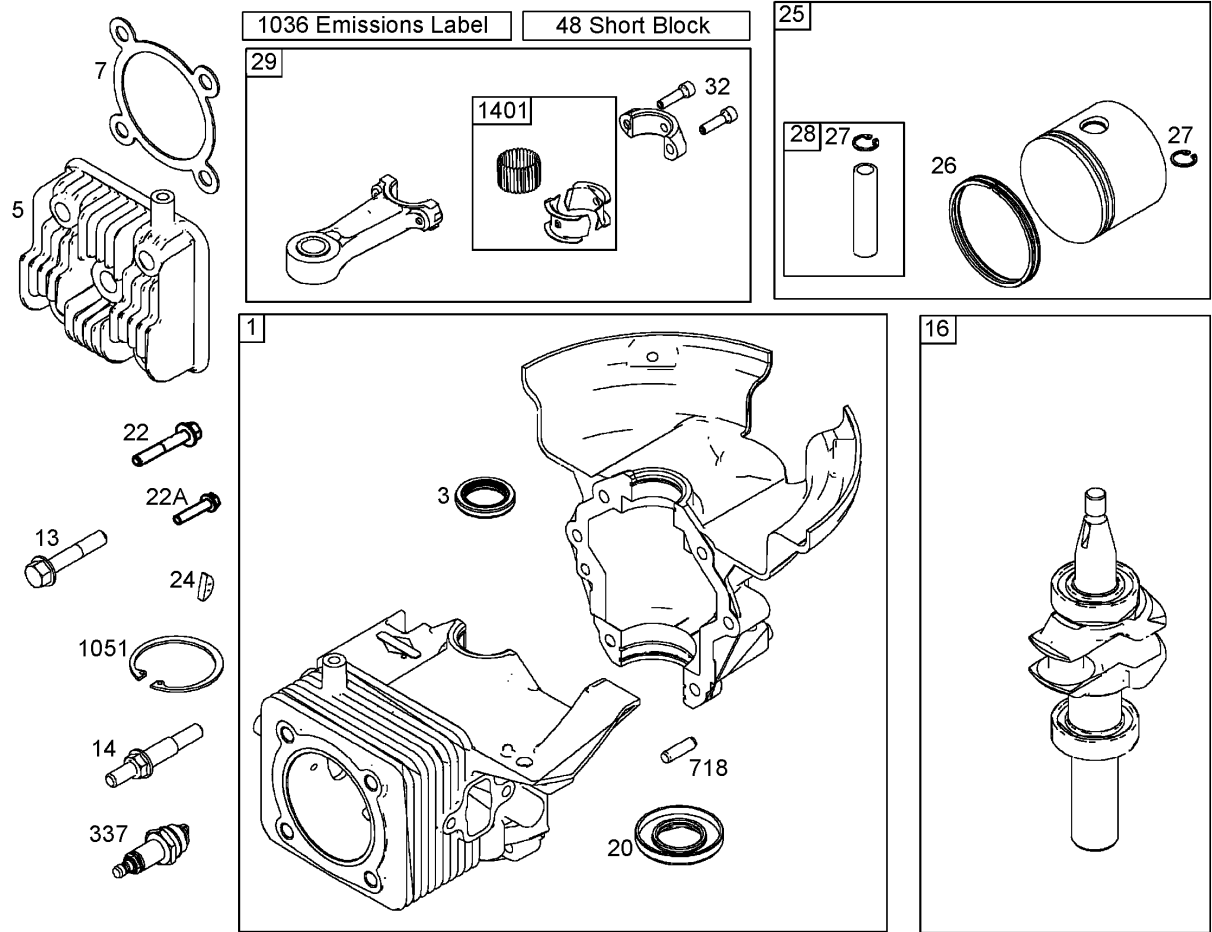

Cylinder, Piston, and Connecting Rod Assemblies
Briggs and Stratton


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶1	801322	1	Cylinder ASM	❶1401	801290	1	Roller-Strip
❷3	801262	1	Seal-Oil				
❸5	801283	1	Head-Cylinder				
❹7	801263	1	Gasket-Head, Cylinder				
❺13	801264	1	Screw (Cylinder Head)				
❻14	801265	1	Stud (Cylinder Head)				
❼16	801220	1	Crankshaft				
❽20	801261	1	Seal-Oil				
❿22	801266	1	Screw (Crankcase Cover And Sump)				
❿22A	801271	1	Screw (Crankcase Cover And Sump)				
❿24	801234	1	Key-Flywheel				
❿25	801279	1	Piston ASM				
❿26	801280	1	Ring Set				
❿27	801275	1	Lock-Pin, Piston				
❿28	801276	1	Pin-Piston				
❿29	801277	1	Rod-Connecting				
❿32	801278	1	Screw				
❿48	801285	1	Short Block				
❿337	801254	1	Plug-Spark				
❿718	690959	1	Pin-Locating				
❿1036	801294	1	Label-Emissions				
❿1051	801274	1	Ring-Retaining				

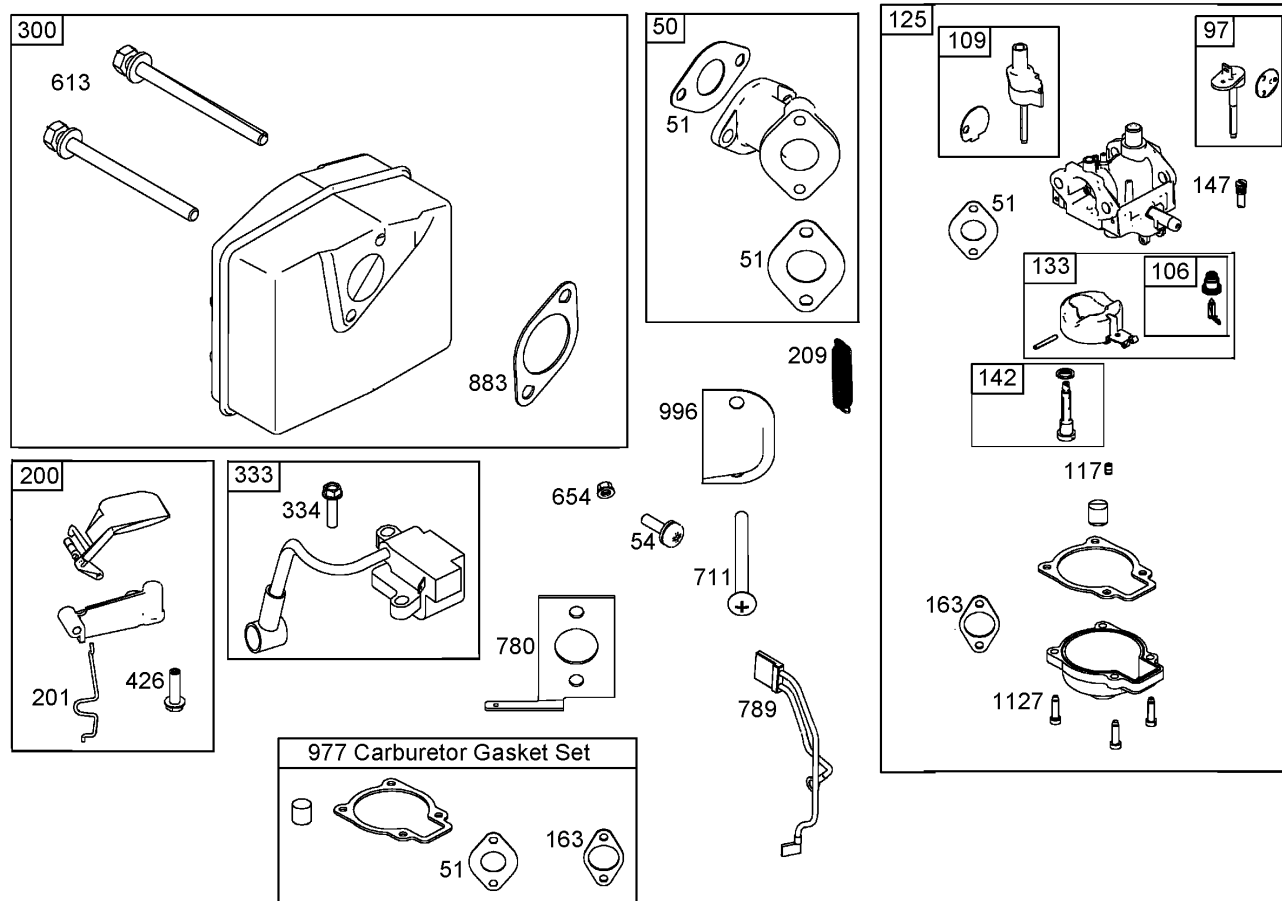

Muffler, Carburetor, and Intake Manifold Assemblies Briggs and Stratton

Ref	Part No.	Qty.	Description
250	801232	1	Manifold-Intake
251	801224	1	Gasket-Intake
254	801230	1	Screw (Intake Manifold)
297	801306	1	Shaft-Throttle
2106	801317	1	Seat-Inlet
2109	801307	1	Shaft-Choke
2117	801310	1	Jet-Main
2125	801233	1	Carburetor
2133	801316	1	Float-Carburetor
2142	801313	1	Nozzle-Carburetor
2147	801308	1	Jet-Pilot
2163	801227	1	Gasket-Cleaner, Air
2200	801289	1	Blade-Governor
2201	801225	1	Link-Vane, Air
2209	801223	1	Spring-Governor
2300	801250	1	Muffler
2333	801268	1	Armature-Magneto
2334	801267	1	Screw
2426	801231	1	Screw
2613	801251	1	Screw
2654	801324	1	Nut (Intake Manifold) (Used Before Engine Code Date 05042600)
2711	801229	1	Screw

Ref	Part No.	Qty.	Description
2780	801228	1	Anchor-Spring
2789	801253	1	Wire ASM
2883	801252	1	Gasket-Exhaust
2977	801312	1	Gasket Set-Carburetor
2996	801226	1	Shield-Carburetor
21127	801318	1	Screw

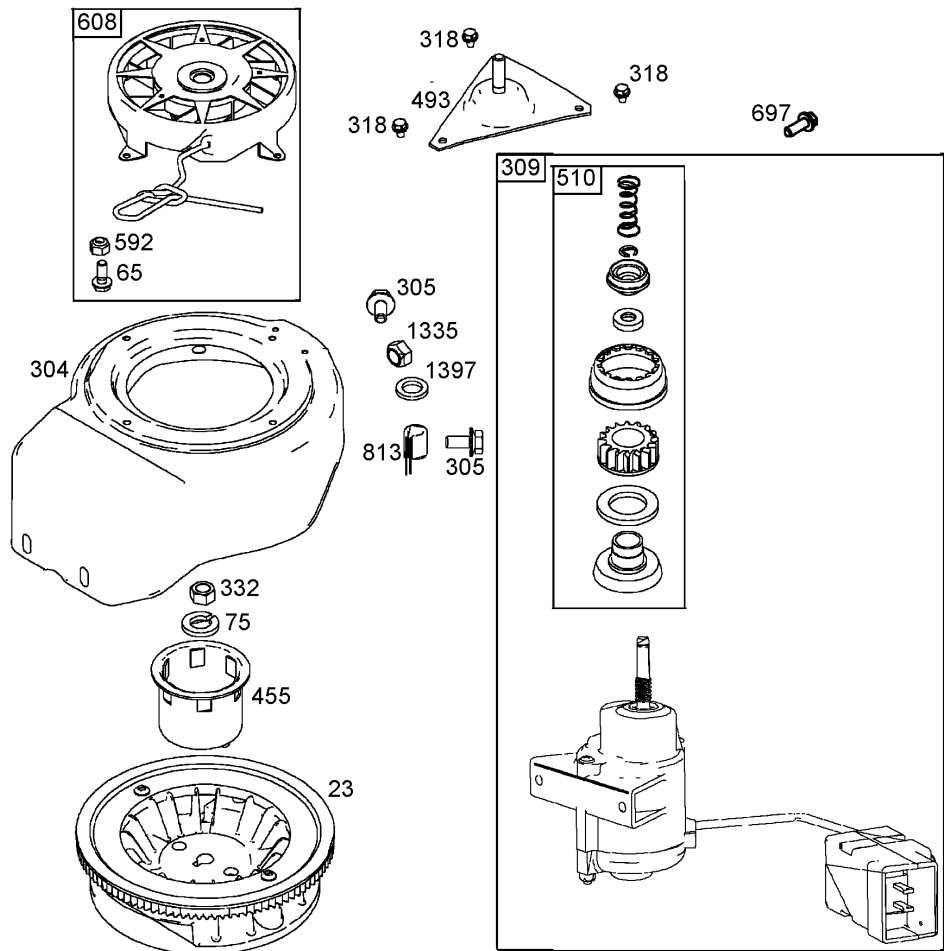

Flywheel, Blower Housing, and Starter Assemblies
Briggs and Stratton

Ref	Part No.	Qty.	Description				
223	801246	1	Flywheel				
265	801243	1	Screw				
275	801237	1	Washer				
2304	801328	1	Housing-Blower				
2305	801239	1	Screw				
2309	801329	1	Motor-Starter				
2318	801241	1	Screw				
2332	801238	1	Nut				
2455	801235	1	Cup-Flywheel				
2493	801240	1	Bracket-Mounting				
2510	801293	1	Drive-Starter				
2592	801244	1	Nut				
2608	801242	1	Starter-Rewind				
2697	801248	1	Screw				
2813	801249	1	Clamp				
21335	801269	1	Nut				
21397	801270	1	Washer				

