



CCR[™] 2450 Snowthrower

Model No. 38413 - 210000001 and up.

Model No. 38419 - 210000001 and up.

Model No. 38428 - 210000001 and up.

Model No. 38429 - 210000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing and Side Plate Assembly	 3	Muffler, Carburetor, and Intake Manifold	
Impeller Drive Assembly	 4	Assemblies Briggs and Stratton 084133-0196- E1	 14
Chute Assembly	 5	Flywheel, Blower Housing, and Starter	
Impeller Assembly	 6	Assemblies Briggs and Stratton 084133-0196- E1	 15
Engine and Frame Assembly	 7	Cylinder, Piston, and Connecting Rod	
Upper Shroud and Control Panel Assembly	 8	Assemblies Briggs and Stratton 084232-0121- E1	 16
Handle Assembly	 9	Muffler, Carburetor, and Intake Manifold	
Cylinder, Piston, and Connecting Rod		Assemblies Briggs and Stratton 084232-0121- E1	 17
Assemblies Briggs and Stratton 084132-0120- E1	 10	Flywheel, Blower Housing and Starter	
Muffler, Carburetor, and Intake Manifold		Assemblies Briggs and Stratton 084232-0121- E1	 18
Assemblies Briggs and Stratton 084132-0120- E1	 11	Cylinder, Piston, and Connecting Rod	
Flywheel, Blower Housing, and Rewind Starter		Assemblies Briggs and Stratton	 19
Assemblies Briggs and Stratton 084132-0120- E1	 12	Muffler, Carburetor, and Intake Manifold	
Cylinder, Piston, and Connecting Rod		Assemblies Briggs and Stratton	 20
Assemblies Briggs and Stratton 084133-0196- E1	 13	Flywheel, Blower Housing, and Starter	
		Assemblies Briggs and Stratton	 21

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power-take-off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll-over-protection-system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HSBH. hex socket button head	SPH. slotted pan head
HSFH. hex socket flat head	SQH. square head
HSH. hex socket head	SRH. slotted round head
HWH. hex washer head	STD. standard
HWHTF. hex washer head thread forming	TAP. self tapping
HYD. hydraulic	TTH. torx truss head

Footnotes

- ❶ Not illustrated
- ❸ Obtain from your local Briggs & Stratton dealer


- ❷ Not serviced separately

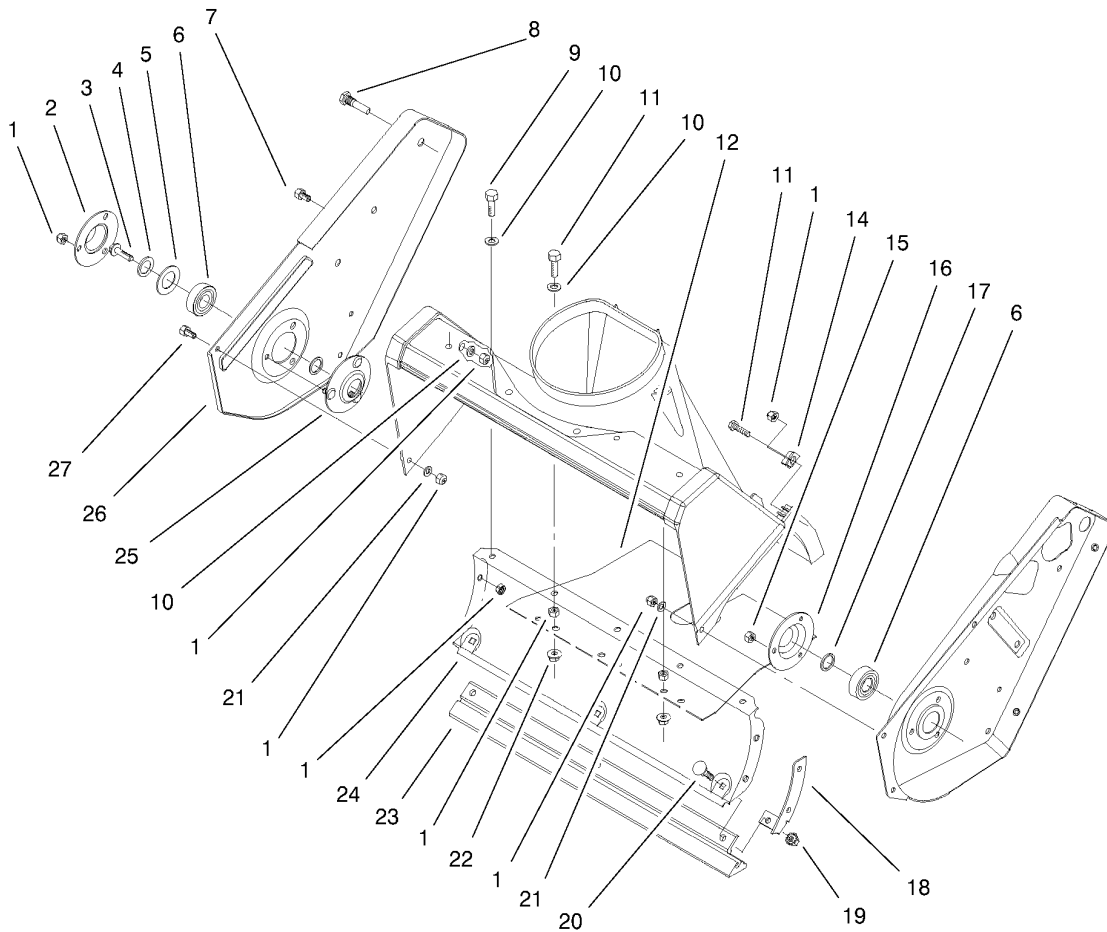

Housing and Side Plate Assembly

Ref	Part No.	Qty.	Description
1	3296-42	16	Nut-Lock, NI
2	52-7290-03	1	Retainer-Bearing
3	3234-25	1	Screw-HHF
4	3256-24	1	Washer-Flat
5	52-7270	1	Washer-Rubber
6	38-7820	2	Bearing-Ball
7	322-43	1	Screw-HH
8	38-8211	1	Pin-Rotor
9	321-4	3	Screw-HH
10	3256-22	7	Washer-Flat
11	321-6	3	Screw-HH
12	55-9512	1	Cover-Bottom
14	55-9430	1	Bracket-Housing
15	3296-2	3	Nut-Lock
16	38-8620	1	Flange-Bearing
17	52-7280	2	Washer-Thrust
18	56-2610	1	Bracket-Housing, Lower
19	32149-2	3	Nut-Keps
20	3229-11	3	Screw-CARR
21	3256-67	2	Washer-Flat
22	32128-10	2	Nut-Lock, HHF
23	55-8760	1	Scraper
24	55-9220-03	1	Housing-Lower
25	52-9110	1	Flange-Bearing


Ref	Part No.	Qty.	Description
26	55-8840-03	1	Plate-Side, RH
27	32105-15	5	Screw

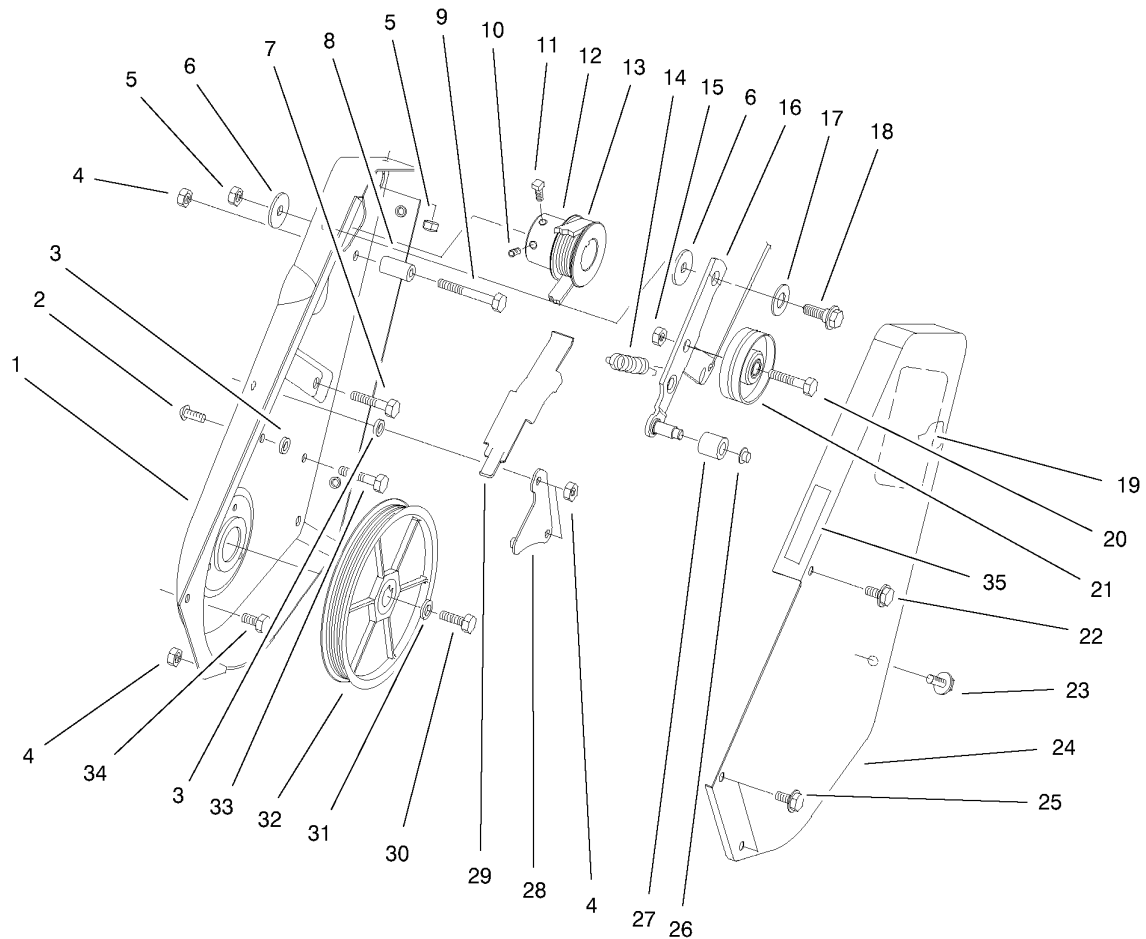

Impeller Drive Assembly


Ref	Part No.	Qty.	Description
1	55-8851-03	1	Plate-Side, LH
2	3274-31	1	Screw-HSBH
3	55-9620	2	Spacer-Plate, Pivot
4	3296-42	5	Nut-Lock, NI
5	3296-29	3	Nut-Lock, NI
6	5-4460	2	Washer-Pivot
7	322-3	2	Screw-HH
8	55-9530	1	Sleeve-Guide, Belt
9	321-13	1	Screw-HH
10	3245-41	1	Screw-HSH
11	3241-7	1	Screw-SQH
12	95-2673	1	Pulley-Engine
13	95-6151	1	Belt-Drive
14	55-9280	1	Spring-Extension
15	32152-2	1	Nut-Lock, Cone
16	63-3610	1	Idler Arm ASM
17	25-5640	1	Washer
18	27-0410	1	Screw-Shoulder
19	60-9480	1	Decal
20	323-29	1	Screw-HH
21	55-9290	1	Pulley-Idler
22	36-3860	1	Screw-HWH, TAP
23	12-3270	2	Screw
24	55-9010-03	1	Cover-Drive

Ref	Part No.	Qty.	Description
25	32105-15	2	Screw
26	32112-11	1	Nut-Push
27	55-9520	1	Roller-Brake
28	55-9570	1	Pivot Plate ASM
29	55-9550	1	Brake-Arm
30	321-30	1	Screw-HH
31	3290-456	1	Washer-Belleville
32	95-2672	1	Pulley Rotor ASM
33	321-4	2	Screw-HH
34	32105-8	3	Screw-SHH
35	104-2767	1	Decal-Hot Surface(Only On: 38413,38419)
35	94-2561	1	Decal-Hot (Only On:38428, 38429)

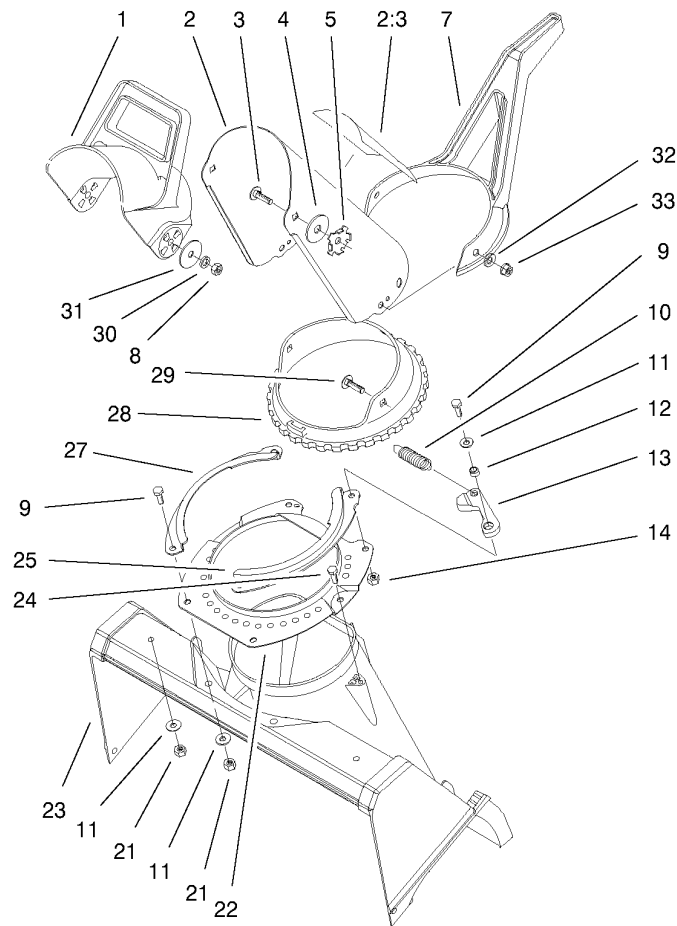


Chute Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	56-2680	1	Chute-Deflector	23	55-8700	1	Housing
2	104-4115	1	Chute-Discharge w/Decal (Only On: 38413, 38419)	24	46-8092	2	Screw-Plastite
2	94-2791	1	Chute ASM W/Decal (Only On: 38428, 38429)	25	71-4980-03	1	Retainer-Chute, LH
2	94-2790	1	Chute ASM W/Decal (Only On: 38413, 38419)	27	71-4990-03	1	Retainer-Chute, RH
2:1	104-4135	1	Decal-Danger (Only On: 38413, 38419)	28	104-2763	1	Ring-Chute
2:3	94-2901	1	Decal-Danger Discharge (Only On: 38428, 38429)	29	100-5487	3	Screw-PTH
2:3	94-2900	1	Decal-Danger Discharge (Only On: 38413, 38419)	30	3290-456	2	Washer-Belleville
3	3230-22	2	Screw-CARR	31	3256-68	2	Washer-Flat
4	20-4320	2	Washer-Rubber	32	3256-70	3	Washer-Flat
5	55-8950	2	Plate-Friction	33	3296-29	3	Nut-Lock, NI
7	94-9914	1	Handle-Control, Chute				
8	3296-29	2	Nut-Lock, NI				
9	321-4	4	Screw-HH				
10	80-4600	1	Spring-Extension				
11	3256-22	5	Washer-Flat				
12	55-9370	1	Spacer-Blade, Rotor				
13	80-4610	1	Detent				
14	3296-56	1	Nut-Lock, NI				
21	3296-42	5	Nut-Lock, NI				
22	55-8921-03	1	Ring-Support, Chute				

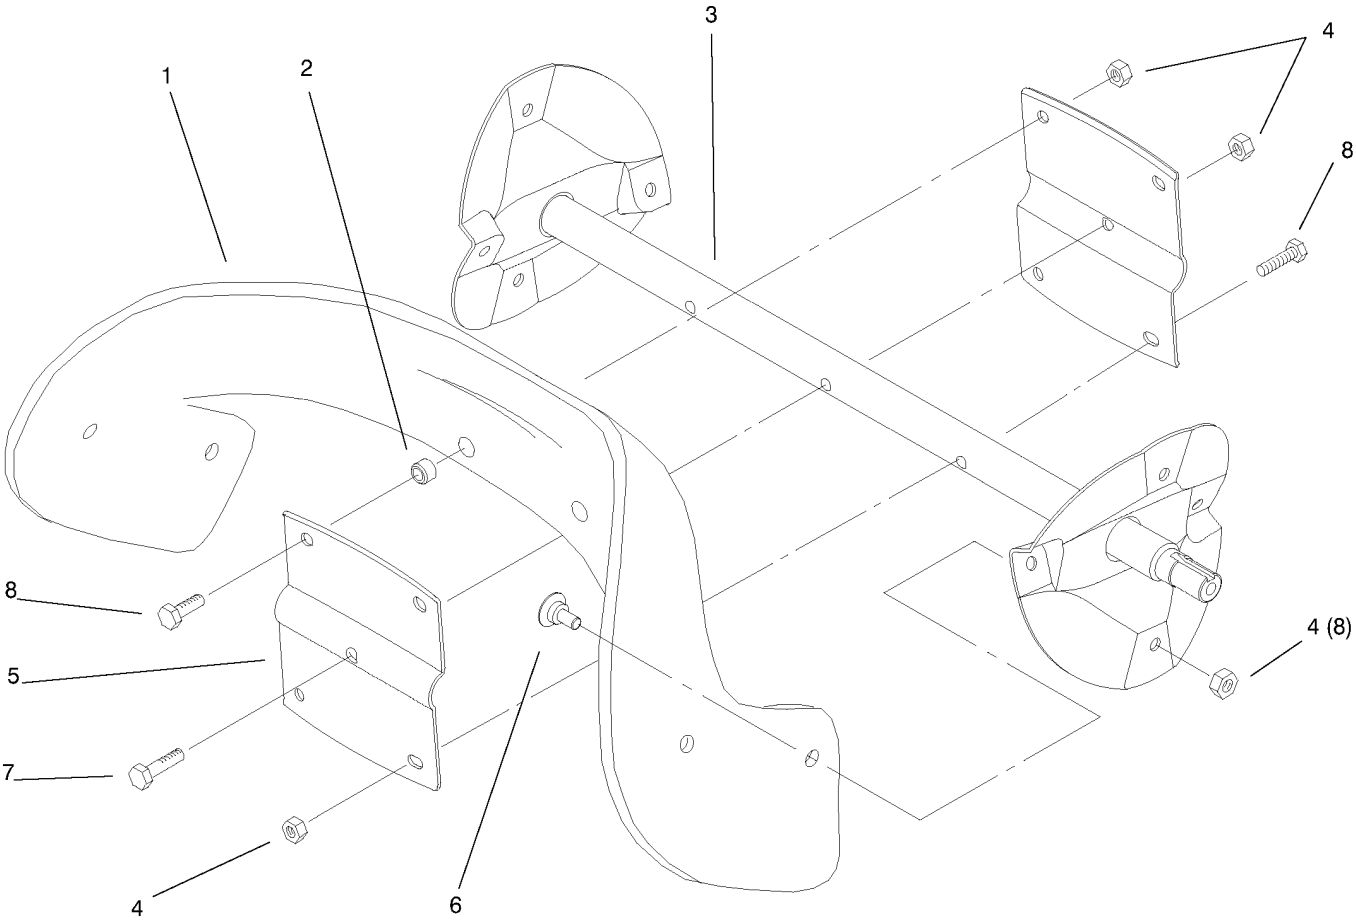


Impeller Assembly

Ref	Part No.	Qty.	Description				
1	99-9313	2	Blade-Rotor				
2	55-9370	4	Spacer-Blade, Rotor				
3	100-5478-03	1	Rotor ASM				
4	3296-56	13	Nut-Lock, NI				
5	66-6600-03	2	Half-Rotor				
6	84-1971	8	Screw				
7	321-8	1	Screw-HH				
8	321-4	4	Screw-HH				

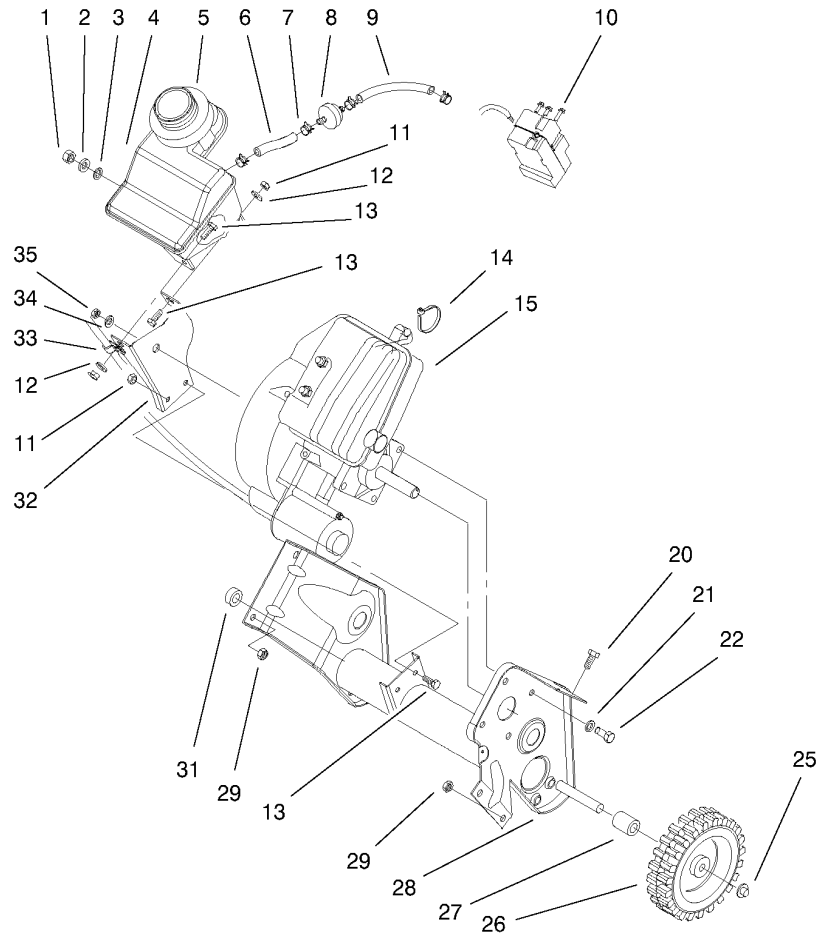


Engine and Frame Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	32152-8	1	Nut-Lock, Cone	20	322-3	2	Screw-HH
3	237-89	1	Grommet-Rubber	21	3290-456	4	Washer-Belleville
4	94-9920	1	Tank-Gas	22	322-3	4	Screw-HH
5	55-9310	1	Seal-Foam	25	32112-14	2	Nut-Push
6	49-2482	1	Line-Fuel	26	66-6510	2	Wheel
7	2412-98	4	Clamp	27	66-6501	1	Spacer-Wheel
8	56-6360	1	Filter-Fuel	28	95-1892-03	1	Frame
9	94-9932	1	Hose-Fuel	29	3296-29	3	Nut-Lock, NI
10	32144-27	3	Screw-Plastite (Only On: 38419, 38429)	31	66-6500	1	Spacer-Wheel
11	3296-42	4	Nut-Lock, NI	32	94-9918-03	1	Support-Recoil
12	3256-22	2	Washer-Flat	33	2412-91	1	Clamp (Only On:38419, 38429)
13	321-4	4	Screw-HH	34	71-5320	1	Washer-Support, Engine
14	250-4	1	Tie (Only On: 38413,38419, 38429)	35	3296-16	1	Nut-Lock, NI
2315		1	Engine-Briggs And Stratton, 084132-0120-E1 (Only On: 38413)	99	28-9170	1	Cord (Only On: 38419)
2315		1	Engine-Briggs And Stratton, 084133-0196-E1 (Only On: 38419)				
2315		1	Engine-Briggs And Stratton, 084232-0121-E1 (Only On: 38428)				
2315		1	Engine-Briggs And Stratton (Only On: 38429)				

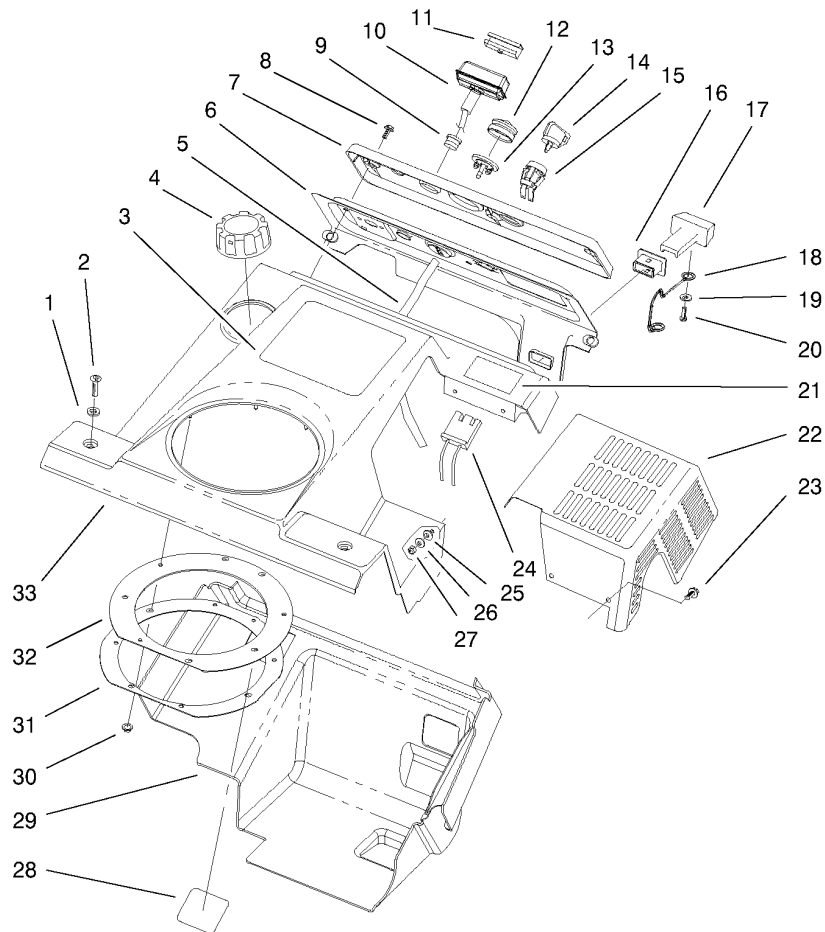


Upper Shroud and Control Panel Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	3256-22	2	Washer-Flat	17	55-8811	1	Choke Control (Onlyon: 38428, 38429)
2	3250-32	2	Screw-PPH	17	55-8810	1	Choke Control (Onlyon: 38413, 38419)
3	100-3306	1	Decal-Ccr 2450 Gtse (Only On: 38419,38429)	18	95-7439	1	Linkage-Choke
3	100-3305	1	Decal-Ccr 2450 Gts(Only On: 38413,38428)	19	3256-49	1	Washer-Flat
4	55-3573	1	Cap-Fuel ASM	20	32144-111	1	Screw-PPH
5	98-1372	1	Hose-Primer	21	98-1373	1	Decal
6	55-9490-03	1	Panel-Control	22	55-9210-03	1	Shield-Heat
7	94-2570	1	Nameplate-Control(Only On: 38428)	23	32105-8	4	Screw-SHH
7	104-2771	1	Nameplate-Control(Only On: 38413)	24	218-532	1	Connector-Body
7	94-2569	1	Plate (Only On: 38429)	25	55-9660	4	Washer
7	104-2772	1	Nameplate-Control(Only On: 38419)	26	3256-14	4	Washer-Flat
8	32144-112	3	Screw-HWH	27	3296-12	4	Nut-Lock
9	55-9410	1	Guide-Rope, Starter	28	61-4790	1	Decal (Only On:38419)
10	612825	1	Handle-Start	29	94-9919	1	Shroud - Lower
11	612824	1	Clip-Starter	30	3290-474	8	Palnut
12	66-7460	1	Bulb-Primer	31	55-9540-03	1	Retainer-Seal, Chute
13	44-2750	1	Body-Primer	32	55-9260	1	Seal-Chute
14	63-8360	1	Key-Ignition	33	100-5480	1	Upper Shroud/Decal ASM (Only On: 38413,38428)
15	40-5940	1	Switch	33	100-5481	1	Upper Shroud/Decalasm (Only On: 38419,38429)
16	55-8820	1	Fitting				

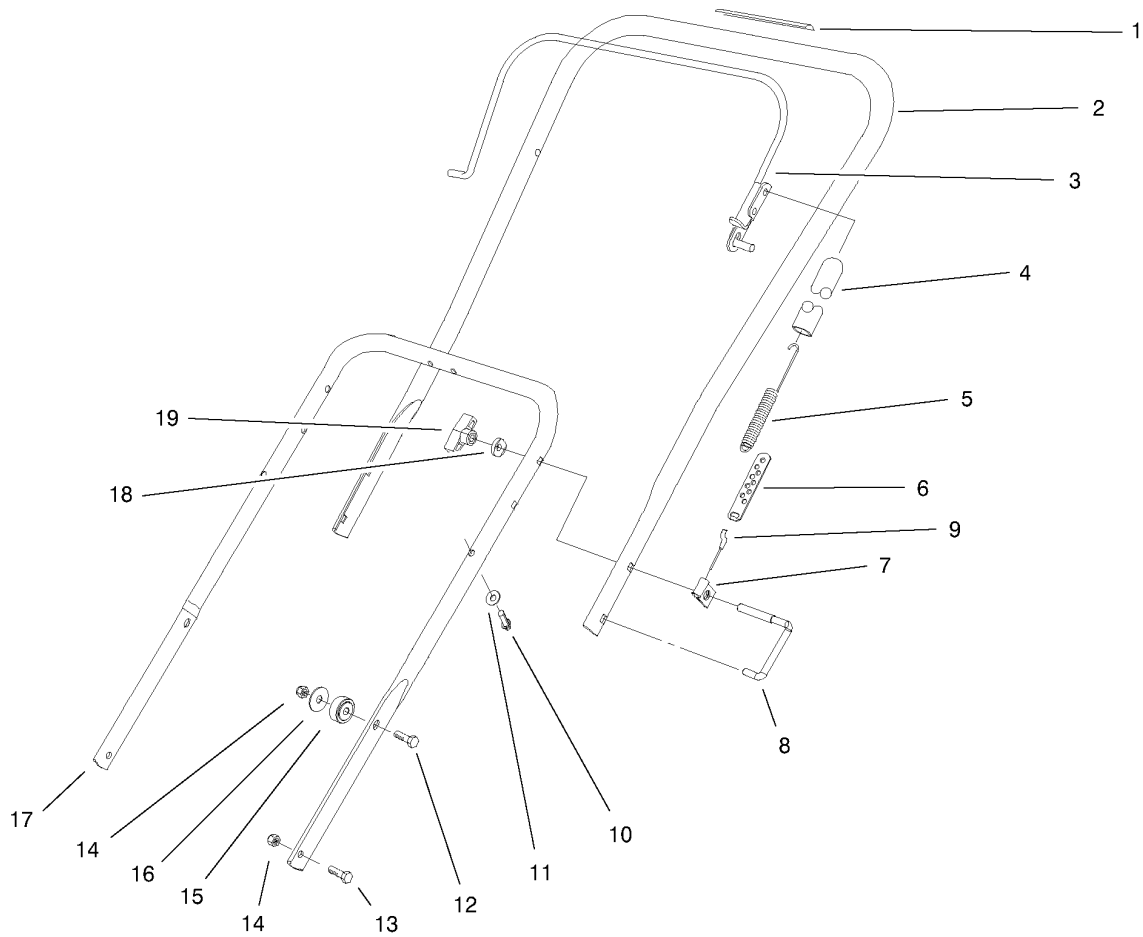

Handle Assembly

Ref	Part No.	Qty.	Description				
1	94-2577	1	Decal-Rotor Drive(Only On: 38428,38429)				
1	104-2775	1	Decal-Rotor Drive(Only On: 38413,38419)				
2	95-2668	1	ASM-Upper Handle(Only On: 38428,38429)				
2	95-2667	1	ASM-Upper Handle(Only On: 38413,38419)				
3	71-5120-03	1	Bail ASM				
4	71-5530	1	Cover-Spring				
5	71-5480	1	Spring-Clutch				
6	55-9380	1	Adjuster-Cable				
7	2412-112	1	Clamp				
8	98-2266	2	Lock-Handle				
9	94-9922	1	Cable-Clutch				
10	61-8640	2	Screw				
11	3-7501	2	Washer				
12	322-17	2	Screw-HH				
13	322-3	2	Screw-HH				
14	3296-29	4	Nut-Lock, NI				
15	94-9923	2	Spacer - Lower Handle				
16	3256-68	2	Washer-Flat				
17	55-9121-03	1	Handle-Lower				
18	75-9130	2	Washer-Curved				
19	98-7134	2	Knob-Handle				

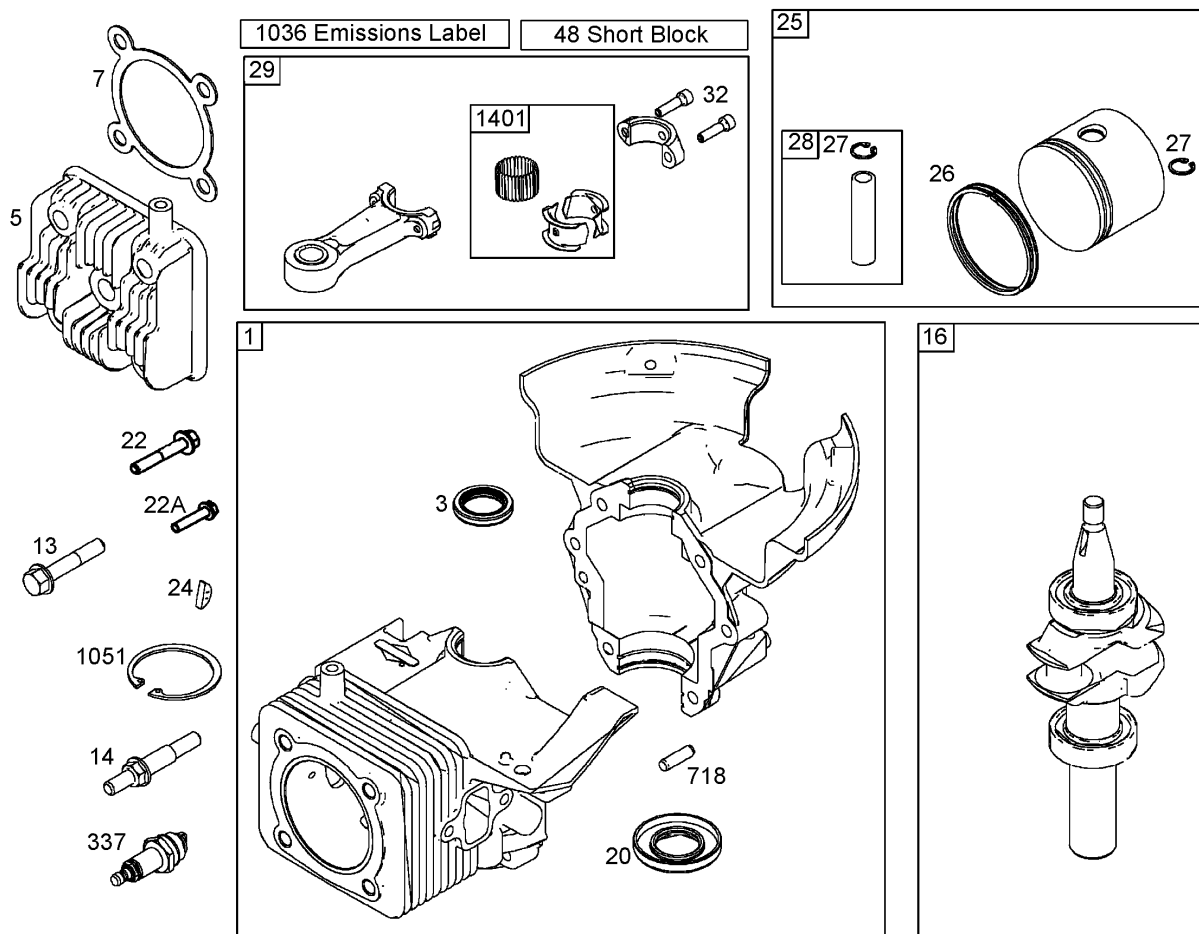

Cylinder, Piston, and Connecting Rod Assemblies Briggs and Stratton 084132-0120-E1


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	801260	1	Cylinder ASM	1401	801290	1	Roller-Strip
3	801262	1	Seal-Oil				
5	801283	1	Head-Cylinder				
7	801263	1	Gasket-Head, Cylinder				
13	801264	1	Screw (Cylinder Head)				
14	801265	1	Stud (Cylinder Head)				
16	801220	1	Crankshaft				
20	801261	1	Seal-Oil				
22	801266	1	Screw (Crankcase Cover And Sump)				
22A	801271	1	Screw (Crankcase Cover And Sump)				
24	801234	1	Key-Flywheel				
25	801279	1	Piston ASM				
26	801280	1	Ring Set				
27	801275	1	Lock-Pin, Piston				
28	801276	1	Pin-Piston				
29	801277	1	Rod-Connecting				
32	801278	1	Screw				
48	801284	1	Short Block				
337	801254	1	Plug-Spark				
718	690959	1	Pin-Locating				
1051	801274	1	Ring-Retaining				
1036	801294	1	Label-Emissions				



Muffler, Carburetor, and Intake Manifold Assemblies Briggs and Stratton 084132-0120-E1


Ref	Part No.	Qty.	Description
50	801232	1	Manifold-Intake
51	801224	1	Gasket-Intake
54	801230	1	Screw (Intake Manifold)
97	801306	1	Shaft-Throttle
106	801317	1	Seat-Inlet
109	801307	1	Shaft-Choke
117	801310	1	Jet-Main
125	801233	1	Carburetor
133	801316	1	Float-Carburetor
142	801313	1	Nozzle-Carburetor
147	801308	1	Jet-Pilot
163	801227	1	Gasket-Cleaner, Air
200	801289	1	Blade-Governor
201	801225	1	Link-Vane, Air
209	801223	1	Spring-Governor
300	801250	1	Muffler
333	801268	1	Armature-Magneto
334	801267	1	Screw
426	801231	1	Screw
613	801251	1	Screw
654	801324	1	Nut (Intake Manifold) (Used Before Engine Code Date 05042600)
711	801229	1	Screw

Ref	Part No.	Qty.	Description
780	801228	1	Anchor-Spring
789	801253	1	Wire ASM
883	801252	1	Gasket-Exhaust
977	801312	1	Gasket Set-Carburetor
996	801226	1	Shield-Carburetor
1127	801318	1	Screw

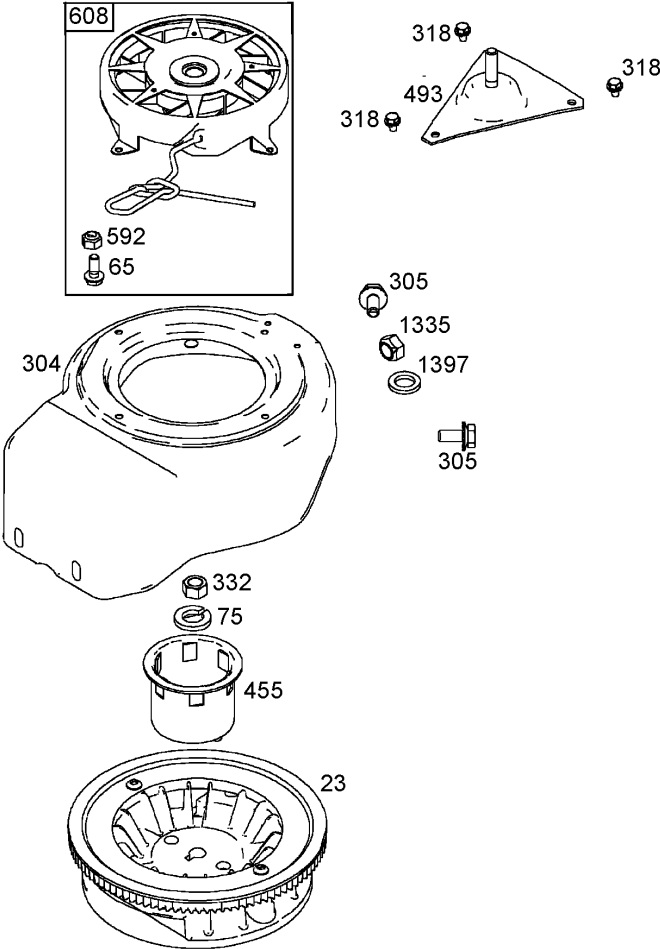

Flywheel, Blower Housing, and Rewind Starter Assemblies
Briggs and Stratton 084132-0120-E1


Ref	Part No.	Qty.	Description				
❶23	801246	1	Flywheel				
❶65	801243	1	Screw				
❶75	801237	1	Washer				
❶304	801257	1	Housing-Blower				
❶305	801239	1	Screw				
❶318	801241	1	Screw				
❶332	801238	1	Nut				
❶455	801235	1	Cup-Flywheel				
❶493	801240	1	Bracket-Mounting				
❶592	801244	1	Nut				
❶608	801242	1	Starter-Rewind				
❶1335	801269	1	Nut				
❶1397	801270	1	Washer				

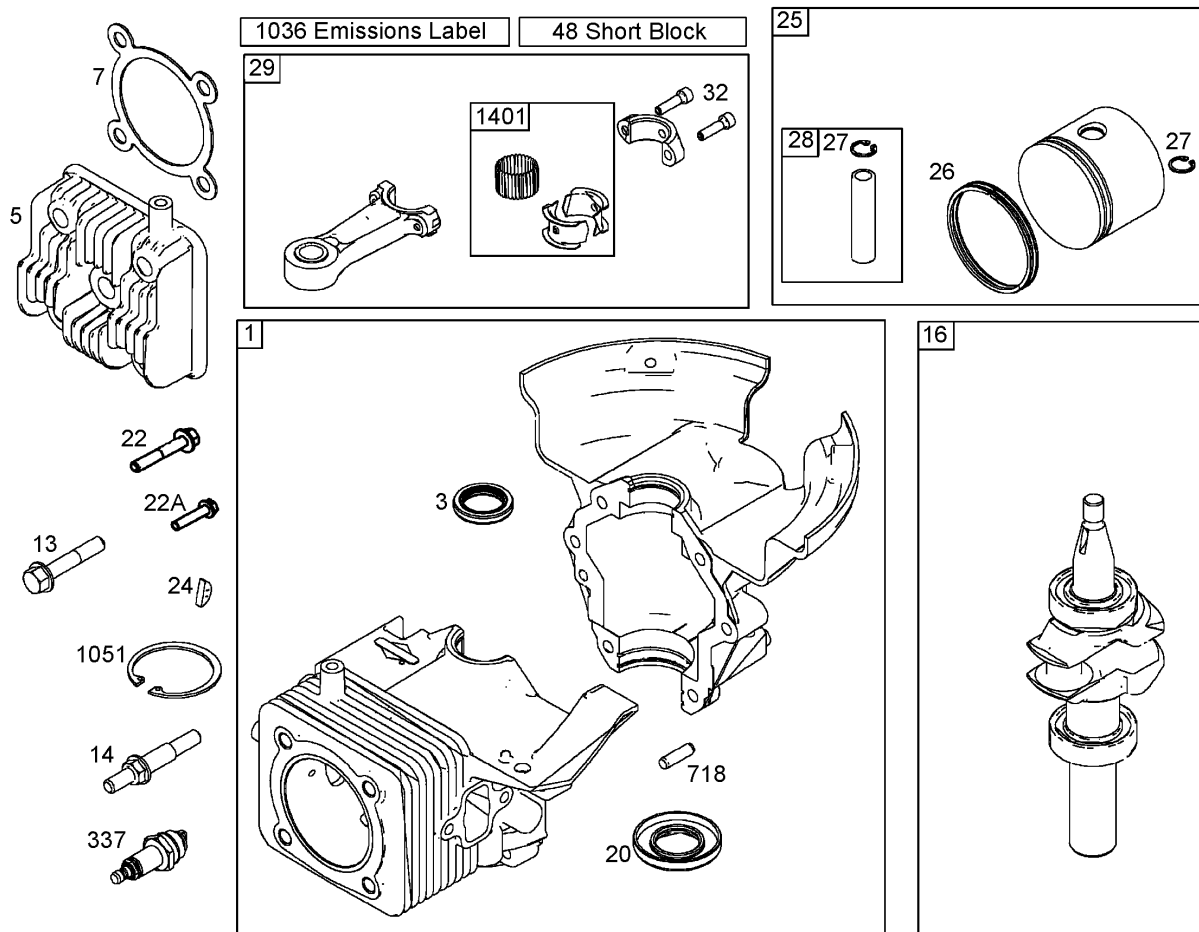

Cylinder, Piston, and Connecting Rod Assemblies

Briggs and Stratton 084133-0196-E1


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	801322	1	Cylinder ASM	1401	801290	1	Roller-Strip
3	801262	1	Seal-Oil				
5	801283	1	Head-Cylinder				
7	801263	1	Gasket-Head, Cylinder				
13	801264	1	Screw (Cylinder Head)				
14	801265	1	Stud (Cylinder Head)				
16	801220	1	Crankshaft				
20	801261	1	Seal-Oil				
22	801266	1	Screw (Crankcase And Cover Sump)				
22A	801271	1	Screw (Crankcase And Cover Sump)				
24	801234	1	Key-Flywheel				
25	801279	1	Piston ASM				
26	801280	1	Ring Set				
27	801275	1	Lock-Pin, Piston				
28	801276	1	Pin-Piston				
29	801277	1	Rod-Connecting				
32	801278	1	Screw				
48	801285	1	Short Block				
337	801254	1	Plug-Spark				
718	690959	1	Pin-Locating				
1036	801294	1	Label-Emissions				
1051	801274	1	Ring-Retaining				

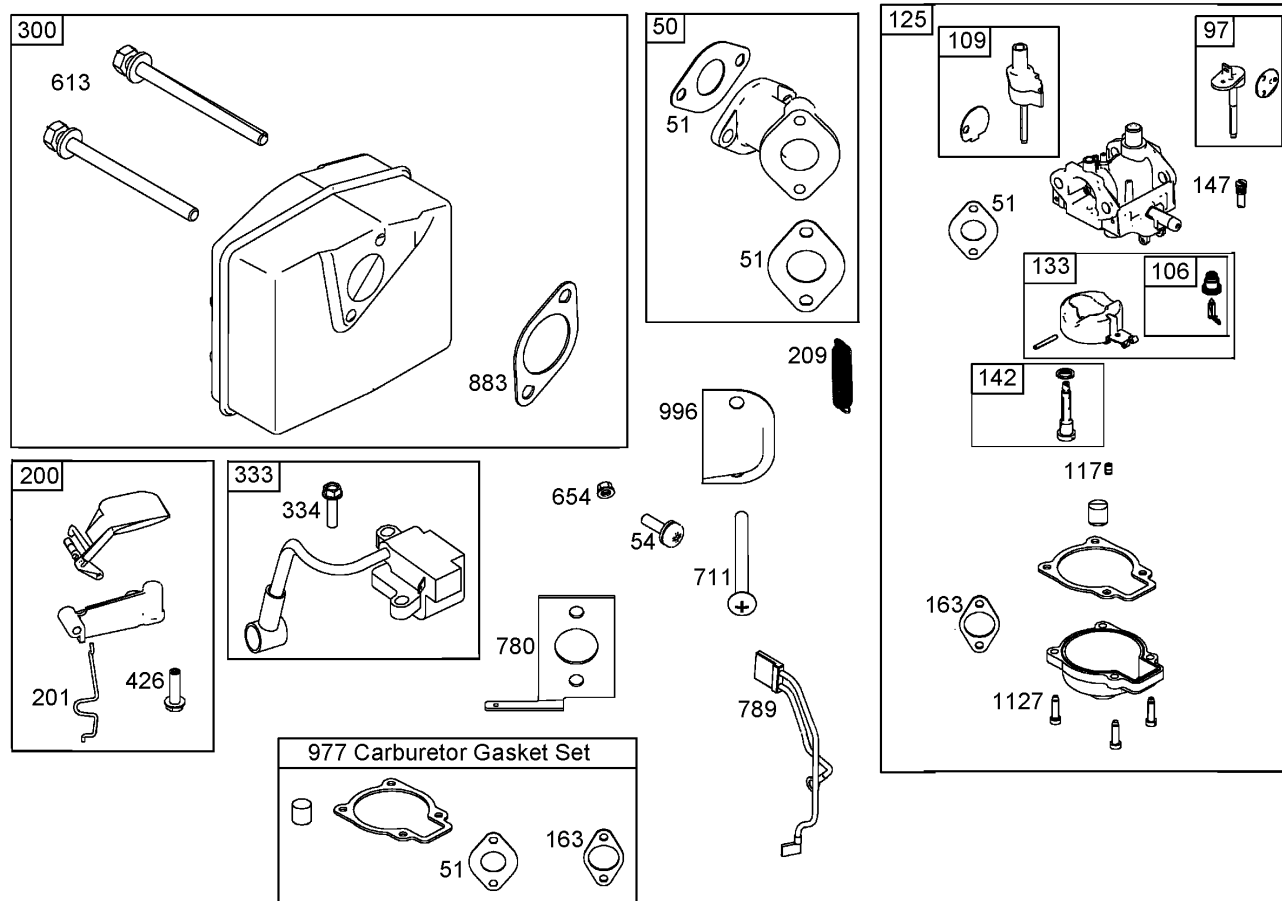

Muffler, Carburetor, and Intake Manifold Assemblies Briggs and Stratton 084133-0196-E1


Ref	Part No.	Qty.	Description
⑤50	801232	1	Manifold-Intake
⑤51	801224	1	Gasket-Intake
⑤54	801230	1	Screw (Intake Manifold)
⑤97	801306	1	Shaft-Throttle
⑤106	801317	1	Seat-Inlet
⑤109	801307	1	Shaft-Choke
⑤117	801310	1	Jet-Main
⑤125	801233	1	Carburetor
⑤133	801316	1	Float-Carburetor
⑤142	801313	1	Nozzle-Carburetor
⑤147	801308	1	Jet-Pilot
⑤163	801227	1	Gasket-Cleaner, Air
⑤200	801289	1	Blade-Governor
⑤201	801225	1	Link-Vane, Air
⑤209	801223	1	Spring-Governor
⑤300	801250	1	Muffler
⑤333	801268	1	Armature-Magneto
⑤334	801267	1	Screw
⑤426	801231	1	Screw
⑤613	801251	1	Screw
⑤654	801324	1	Nut (Intake Manifold) (Used Before Engine Code Date 05042600)
⑤711	801229	1	Screw (Starter Motor)

Ref	Part No.	Qty.	Description
③780	801228	1	Anchor-Spring
③789	801253	1	Wire ASM
③883	801252	1	Gasket-Exhaust
③977	801312	1	Gasket Set-Carburetor
③996	801226	1	Shield-Carburetor
③1127	801318	1	Screw

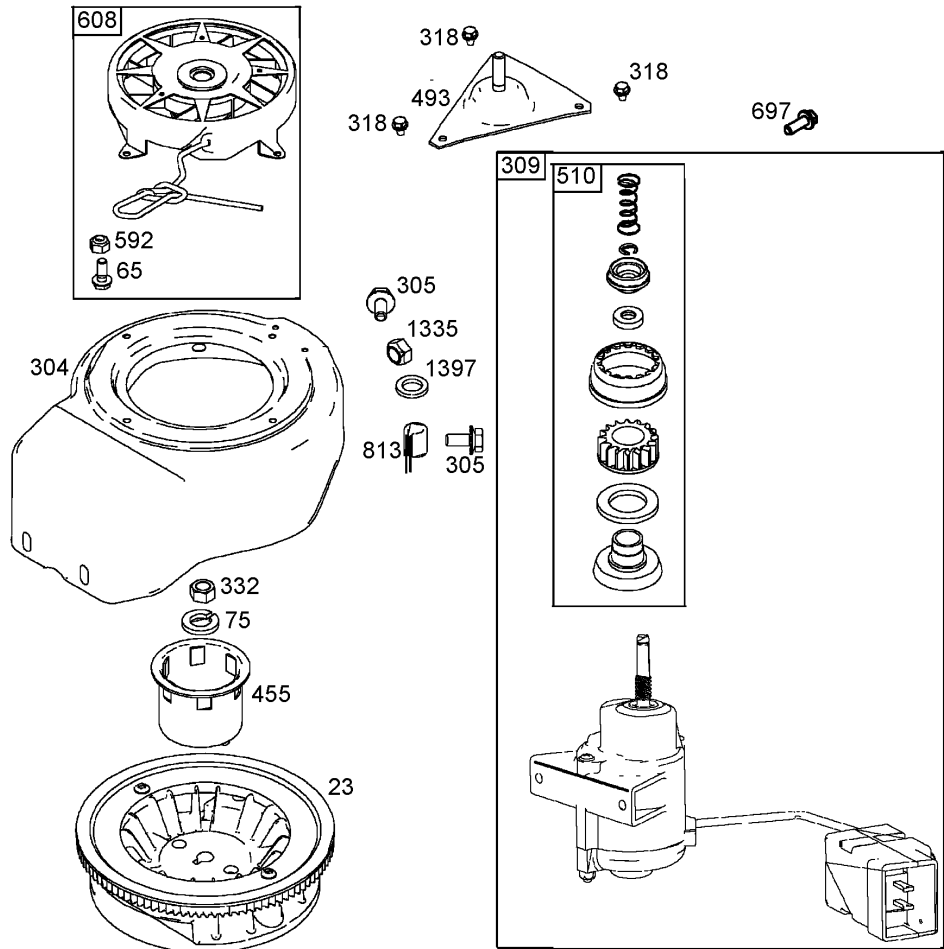


Flywheel, Blower Housing, and Starter Assemblies
Briggs and Stratton 084133-0196-E1

Ref	Part No.	Qty.	Description				
❶23	801246	1	Flywheel				
❶65	801243	1	Screw				
❶75	801237	1	Washer				
❶304	801236	1	Housing-Blower				
❶305	801239	1	Screw (Blower Housing)				
❶309	801247	1	Motor-Starter				
❶318	801241	1	Screw				
❶332	801238	1	Nut				
❶455	801235	1	Cup-Flywheel				
❶493	801240	1	Bracket-Mounting				
❶510	801293	1	Drive-Starter				
❶592	801244	1	Nut				
❶608	801242	1	Starter-Rewind				
❶697	801248	1	Screw				
❶813	801249	1	Clamp				
❶1335	801269	1	Nut				
❶1397	801270	1	Washer				

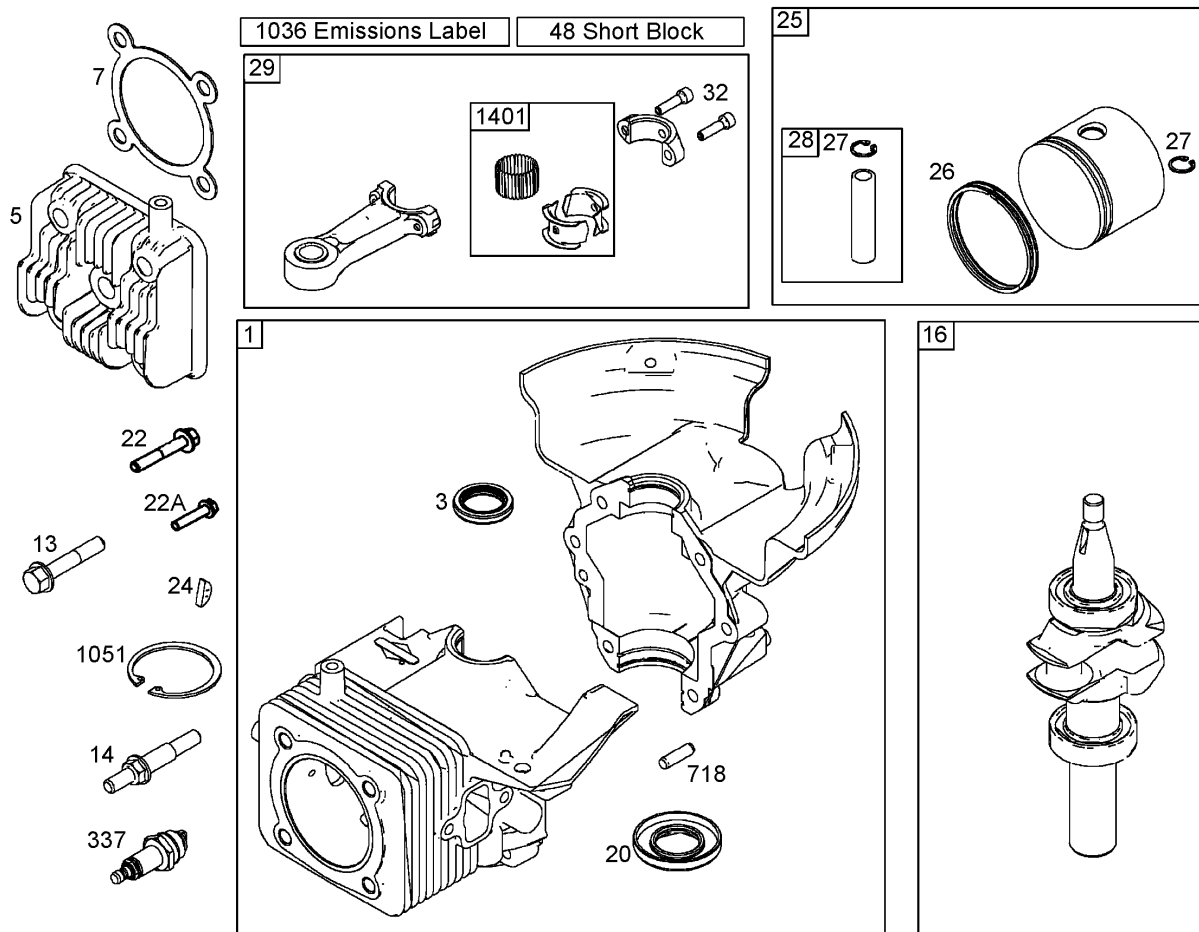

Cylinder, Piston, and Connecting Rod Assemblies Briggs and Stratton 084232-0121-E1


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	801260	1	Cylinder ASM	1401	801290	1	Roller-Strip
3	801262	1	Seal-Oil				
5	801283	1	Head-Cylinder				
7	801263	1	Gasket-Head, Cylinder				
13	801264	1	Screw (Cylinder Head)				
14	801265	1	Stud (Cylinder Head)				
16	801220	1	Crankshaft				
20	801261	1	Seal-Oil				
22	801266	1	Screw (Crankcase Cover And Sump)				
22A	801271	1	Screw (Crankcase Cover And Sump)				
24	801234	1	Key-Flywheel				
25	801279	1	Piston ASM				
26	801280	1	Ring Set				
27	801275	1	Lock-Pin, Piston				
28	801276	1	Pin-Piston				
29	801277	1	Rod-Connecting				
32	801278	1	Screw				
48	801284	1	Short Block				
337	801254	1	Plug-Spark				
718	690959	1	Pin-Locating				
1036	801294	1	Label-Emissions				
1051	801274	1	Ring-Retaining				

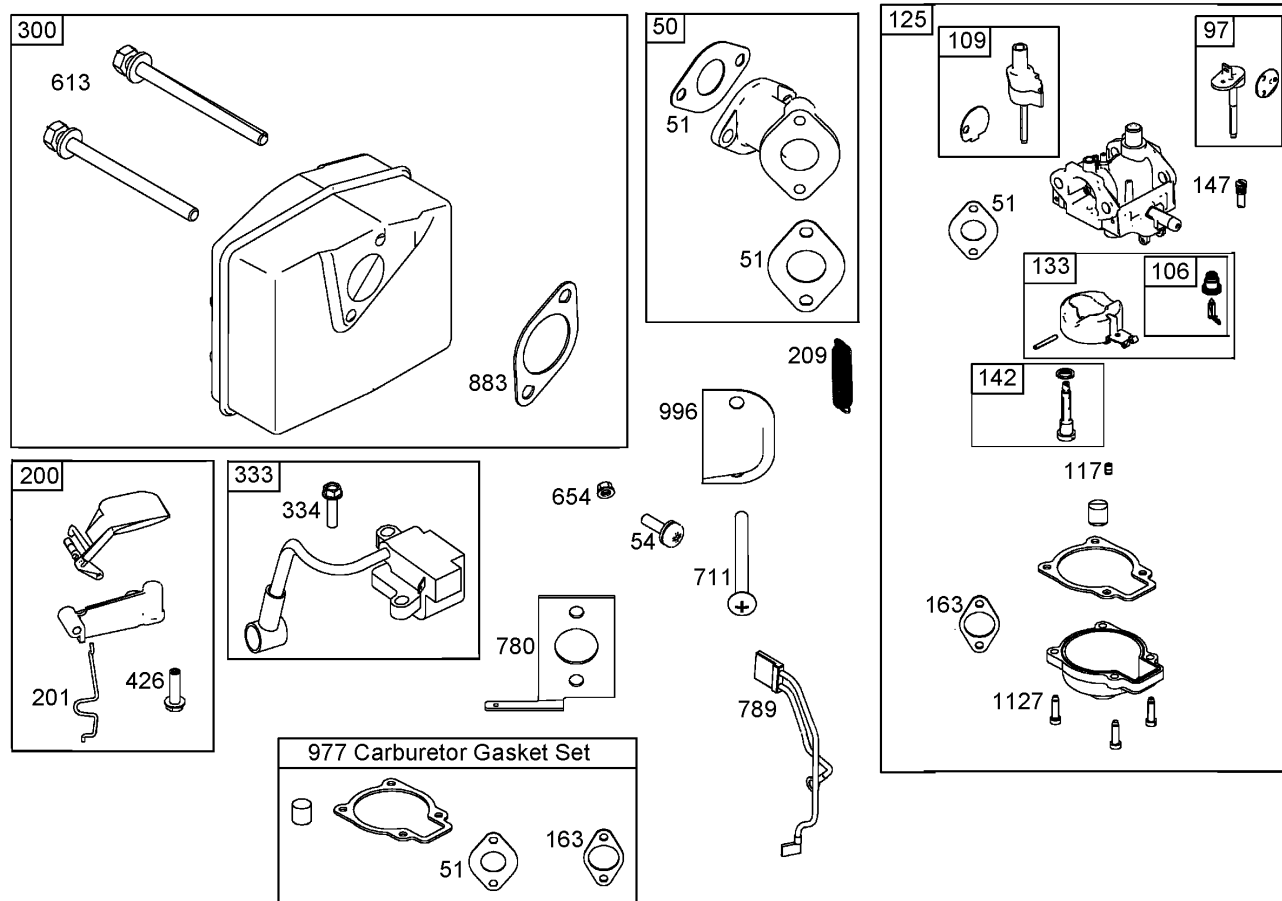

Muffler, Carburetor, and Intake Manifold Assemblies Briggs and Stratton 084232-0121-E1


Ref	Part No.	Qty.	Description
⑤50	801232	1	Manifold-Intake
⑤51	801224	1	Gasket-Intake
⑤54	801230	1	Screw (Intake Manifold)
⑤97	801306	1	Shaft-Throttle
⑤106	801317	1	Seat-Inlet
⑤109	801307	1	Shaft-Choke
⑤117	801310	1	Jet-Main
⑤125	801233	1	Carburetor
⑤133	801316	1	Float-Carburetor
⑤142	801313	1	Nozzle-Carburetor
⑤147	801308	1	Jet-Pilot
⑤163	801227	1	Gasket-Cleaner, Air
⑤200	801289	1	Blade-Governor
⑤201	801225	1	Link-Vane, Air
⑤209	801223	1	Spring-Governor
⑤300	801250	1	Muffler
⑤333	801268	1	Armature-Magneto
⑤334	801267	1	Screw
⑤426	801231	1	Screw
⑤613	801251	1	Screw
⑤654	801324	1	Nut (Intake Manifold) (Used Before Engine Code Date 05042600)
⑤711	801229	1	Screw

Ref	Part No.	Qty.	Description
③780	801228	1	Anchor-Spring
③789	801253	1	Wire ASM
③883	801252	1	Gasket-Exhaust
③977	801312	1	Gasket Set-Carburetor
③996	801226	1	Shield-Carburetor
③1127	801318	1	Screw

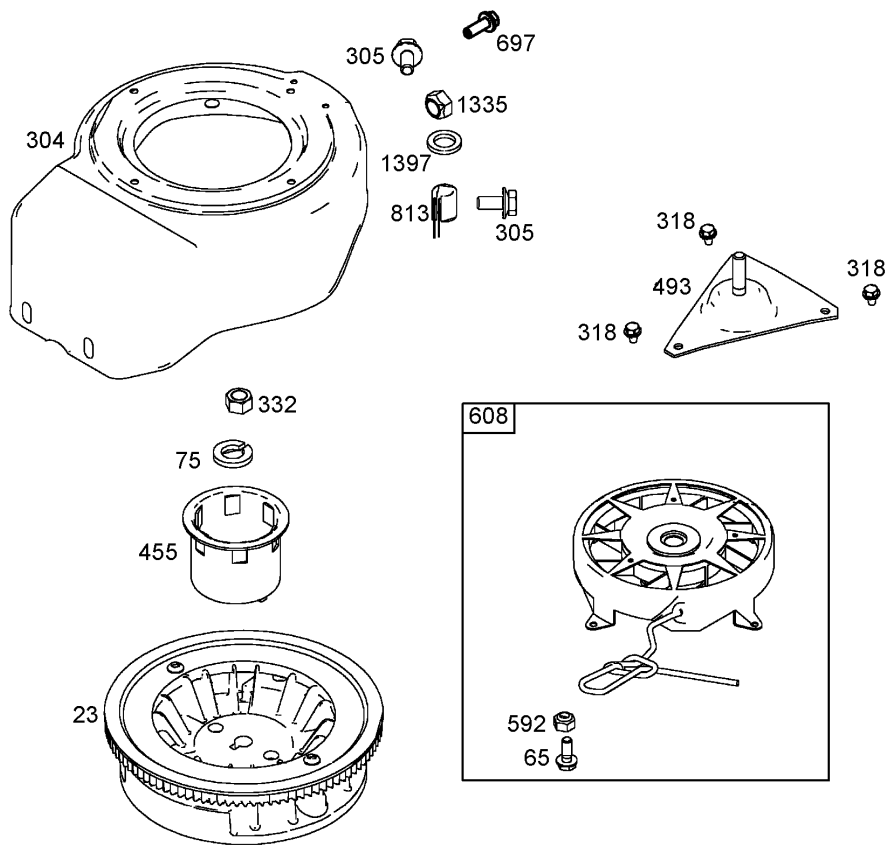


Flywheel, Blower Housing and Starter Assemblies
Briggs and Stratton 084232-0121-E1

Ref	Part No.	Qty.	Description				
❶23	801246	1	Flywheel				
❶65	801243	1	Screw				
❶75	801237	1	Washer				
❶304	801257	1	Housing-Blower				
❶305	801239	1	Screw (Blower Housing)				
❶318	801241	1	Screw				
❶332	801238	1	Nut				
❶455	801235	1	Cup-Flywheel				
❶493	801240	1	Bracket-Mounting				
❶592	801244	1	Nut				
❶608	801242	1	Starter-Rewind				
❶697	801248	1	Screw (Strater Motor)				
❶813	801249	1	Clamp				
❶1335	801269	1	Nut (Blower Housing)				
❶1397	801270	1	Washer				

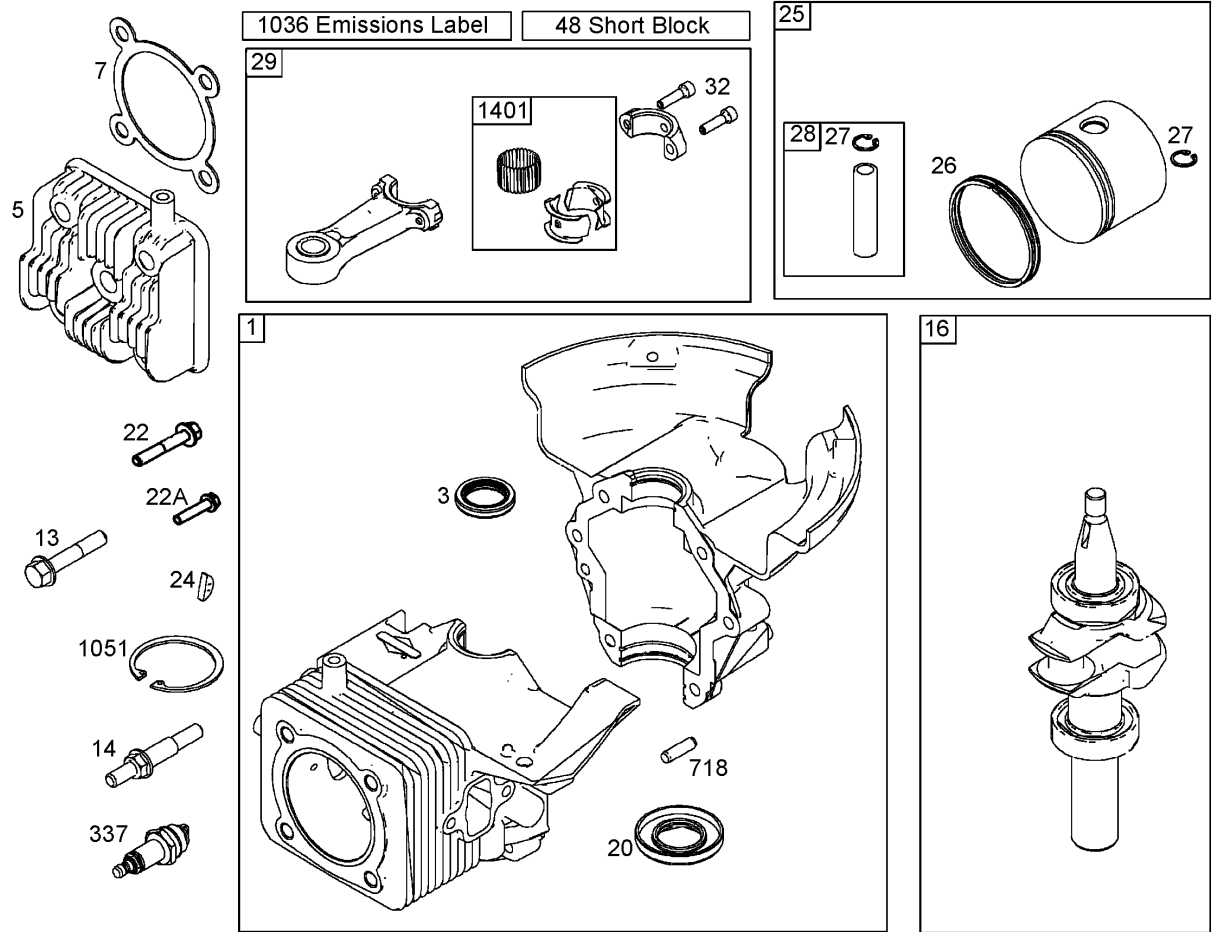

Cylinder, Piston, and Connecting Rod Assemblies
Briggs and Stratton


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	801322	1	Cylinder ASM	1401	801290	1	Roller-Strip
3	801262	1	Seal-Oil				
5	801283	1	Head-Cylinder				
7	801263	1	Gasket-Head, Cylinder				
13	801264	1	Screw (Cylinder Head)				
14	801265	1	Stud (Cylinder Head)				
16	801220	1	Crankshaft				
20	801261	1	Seal-Oil				
22	801266	1	Screw (Crankcase And Cover Sump)				
22A	801271	1	Screw (Crankcase And Cover Sump)				
24	801234	1	Key-Flywheel				
25	801279	1	Piston ASM				
26	801280	1	Ring Set				
27	801275	1	Lock-Pin, Piston				
28	801276	1	Pin-Piston				
29	801277	1	Rod-Connecting				
32	801278	1	Screw				
48	801285	1	Short Block				
337	801254	1	Plug-Spark				
718	690959	1	Pin-Locating				
1036	801294	1	Label-Emissions				
1051	801274	1	Ring-Retaining				

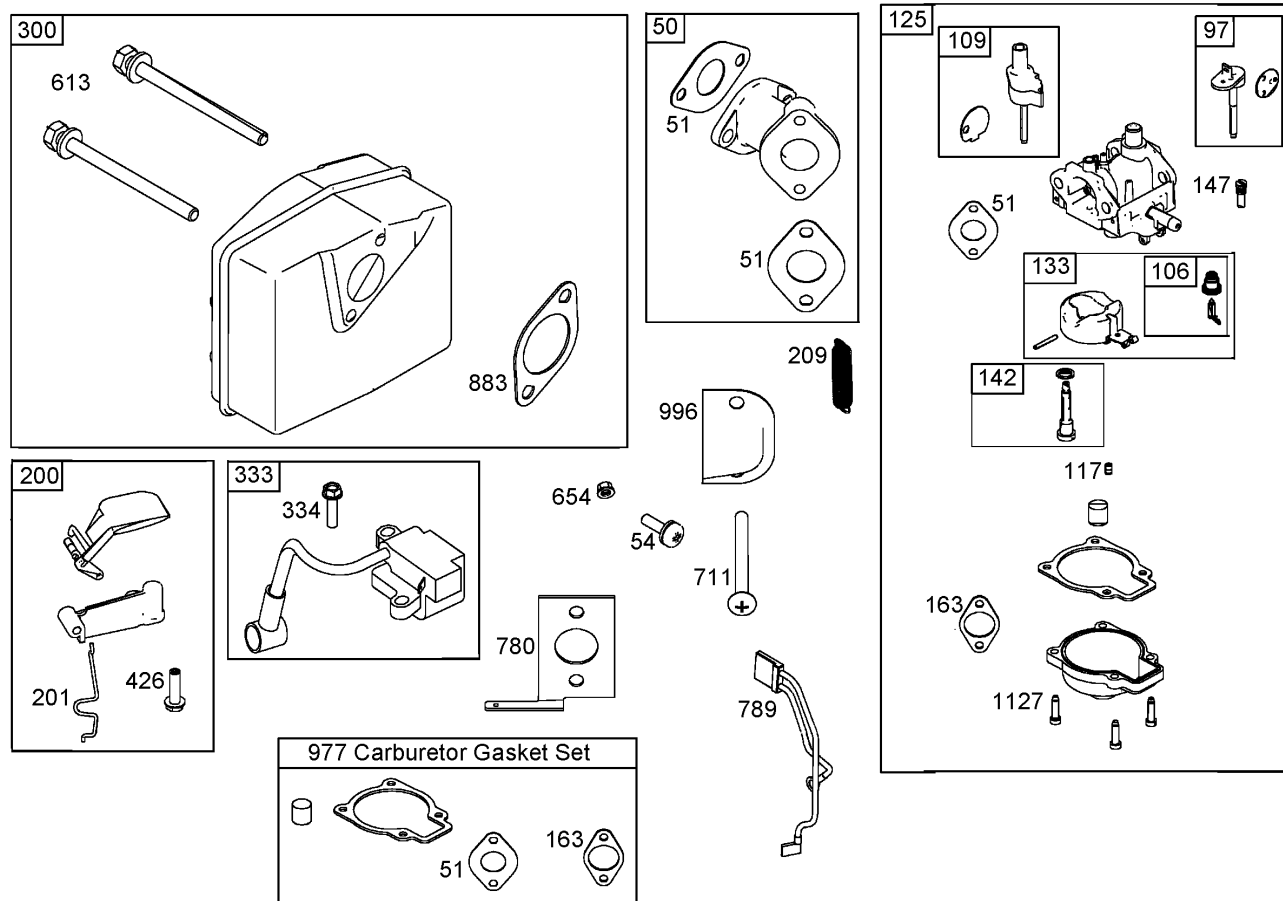

Muffler, Carburetor, and Intake Manifold Assemblies Briggs and Stratton

Ref	Part No.	Qty.	Description
50	801232	1	Manifold-Intake
51	801224	1	Gasket-Intake
54	801230	1	Screw (Intake Manifold)
97	801306	1	Shaft-Throttle
106	801317	1	Seat-Inlet
109	801307	1	Shaft-Choke
117	801310	1	Jet-Main
125	801233	1	Carburetor
133	801316	1	Float-Carburetor
142	801313	1	Nozzle-Carburetor
147	801308	1	Jet-Pilot
163	801227	1	Gasket-Cleaner, Air
200	801289	1	Blade-Governor
201	801225	1	Link-Vane, Air
209	801223	1	Spring-Governor
300	801250	1	Muffler
333	801268	1	Armature-Magneto
334	801267	1	Screw
426	801231	1	Screw
613	801251	1	Screw
654	801324	1	Nut (Intake Manifold) (Used Before Engine Code Date 05042600)
711	801229	1	Screw

Ref	Part No.	Qty.	Description
780	801228	1	Anchor-Spring
789	801253	1	Wire ASM
883	801252	1	Gasket-Exhaust
977	801312	1	Gasket Set-Carburetor
996	801226	1	Shield-Carburetor
1127	801318	1	Screw

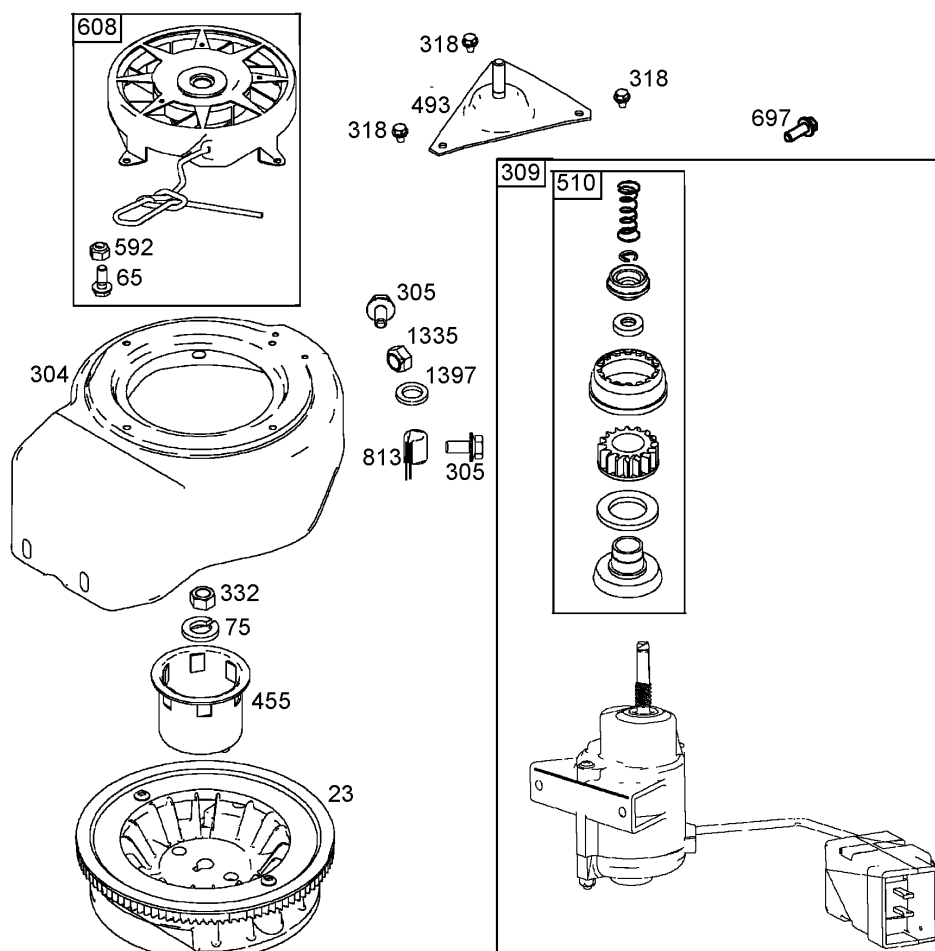

Flywheel, Blower Housing, and Starter Assemblies Briggs and Stratton

Ref	Part No.	Qty.	Description
③23	801246	1	Flywheel
③65	801243	1	Screw
③75	801237	1	Washer
③304	801328	1	Housing-Blower
③305	801239	1	Screw
③309	801329	1	Motor-Starter
③318	801241	1	Screw
③332	801238	1	Nut
③455	801235	1	Cup-Flywheel
③493	801240	1	Bracket-Mounting
③510	801293	1	Drive-Starter
③592	801244	1	Nut
③608	801242	1	Starter-Rewind
③697	801248	1	Screw
③813	801249	1	Clamp
③1335	801269	1	Nut
③1397	801270	1	Washer

NOTES

NOTES

