



Snow Commander® Snowthrower

Model No. 38600 - 210000001 and up.

Model No. 38602 - 210000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Upper Housing and Side Plate Assembly	 3	Crankcase, Crankshaft, Cylinder Head, and	
Lower Housing Assembly	 4	Connecting Rod Assemblies Briggs and	 12
Impeller Drive Assembly	 5	Stratton 084332-0130-E1	
Chute Assembly	 6	Intake Manifold, Carburetor, and Muffler	
Impeller Assembly	 7	Assemblies Briggs and Stratton 084332-0130-	 13
Engine and Frame Assembly	 8	E1	
Upper Shroud and Control Panel Assembly	 9	Flywheel, Blower Housing, and Starter	
Upper Handle Assembly	 10	Assemblies Briggs and Stratton 084332-0130-	 14
Lower Handle Assembly	 11	E1	
		Crankcase, Crankshaft, Cylinder Head, and	
		Connecting Rod Assemblies Briggs and	 15
		Stratton 084333-0199-E1	
		Intake Manifold, Carburetor, and Muffler	
		Assemblies Briggs and Stratton 084333-0199-	 16
		E1	
		Flywheel, Blower Housing, and Starter	
		Assemblies Briggs and Stratton 084333-0199-	 17
		E1	

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power-take-off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll-over-protection-system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HSBH. hex socket button head	SPH. slotted pan head
HSFH. hex socket flat head	SQH. square head
HSH. hex socket head	SRH. slotted round head
HWH. hex washer head	STD. standard
HWHTF. hex washer head thread forming	TAP. self tapping
HYD. hydraulic	TTH. torx truss head

Footnotes


- ❶ Not illustrated
- ❷ Not serviced separately
- ❸ Obtain from your local Briggs & Stratton dealer

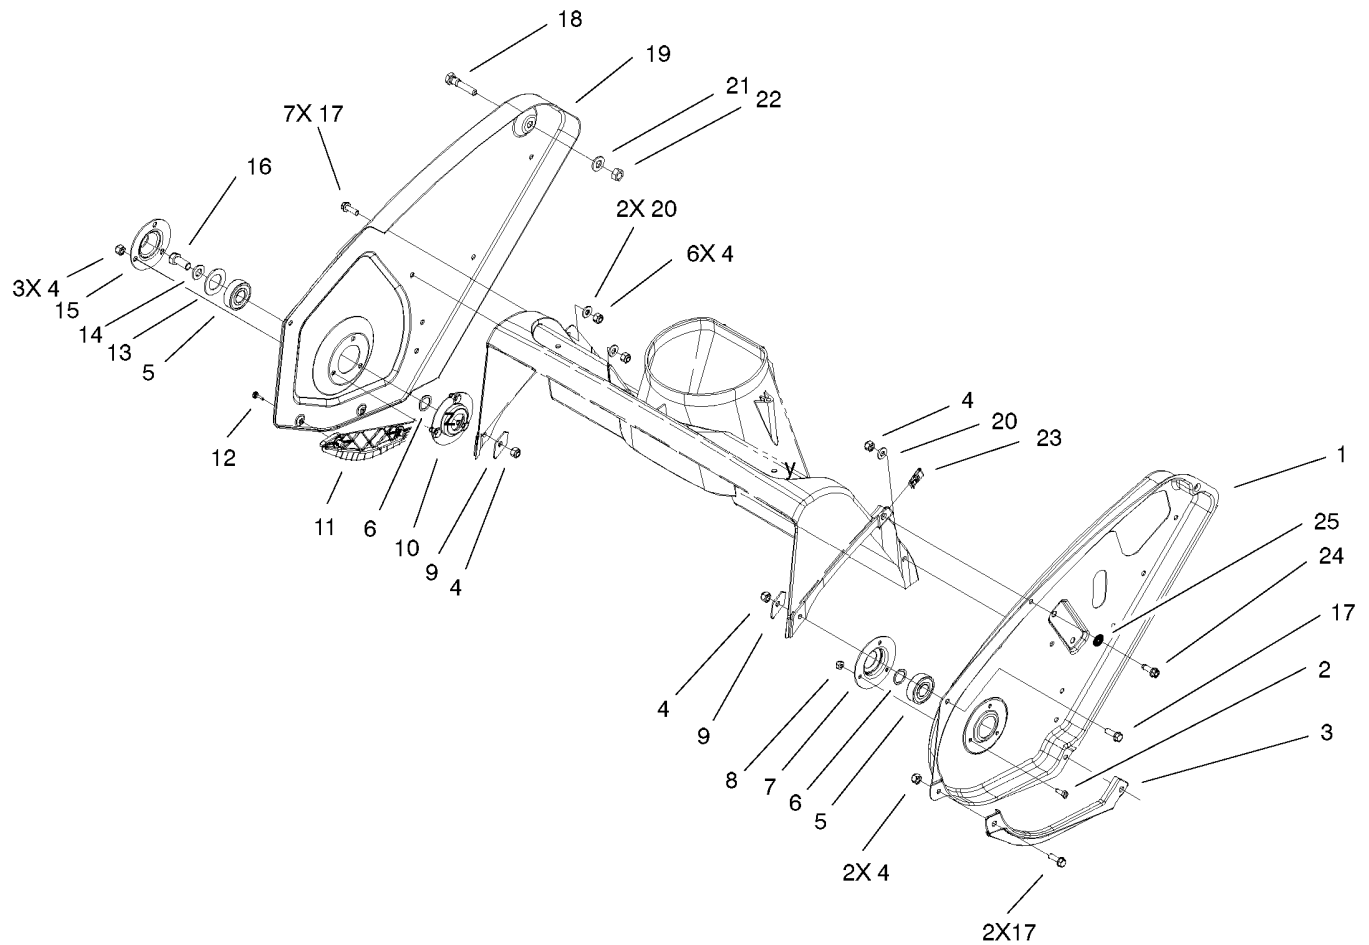

Upper Housing and Side Plate Assembly


Ref	Part No.	Qty.	Description
1	100-9865-03	1	Sideplate-LH
2	32105-8	3	Screw-SHH
3	104-0871	1	Guard-Rotor, LH
4	3296-42	14	Nut-Lock, NI
5	38-7820	2	Bearing-Ball
6	52-7280	2	Washer-Thrust
7	38-8620	1	Flange-Bearing
8	3296-2	3	Nut-Lock
9	104-4105	2	Washer
10	52-9110	1	Flange-Bearing
11	104-0872	1	Guard-Rotor, RH
12	95-4234	2	Screw-PPH
13	52-7270	1	Washer-Rubber
14	3256-24	1	Washer-Flat
15	52-7290-03	1	Retainer-Bearing
16	3234-25	1	Screw-HHF
17	32105-15	10	Screw
18	104-4144	1	Pin-Tank
19	100-9870-03	1	Sideplate-RH
20	3256-22	3	Washer-Flat
21	3256-24	1	Washer-Flat
22	32152-8	1	Nut-Lock, Cone
23	702552	1	Nut-Speed
24	49-2040	1	Screw-Tapping (Only On: 38600)

Ref	Part No.	Qty.	Description
25	104-8657	1	O-Ring

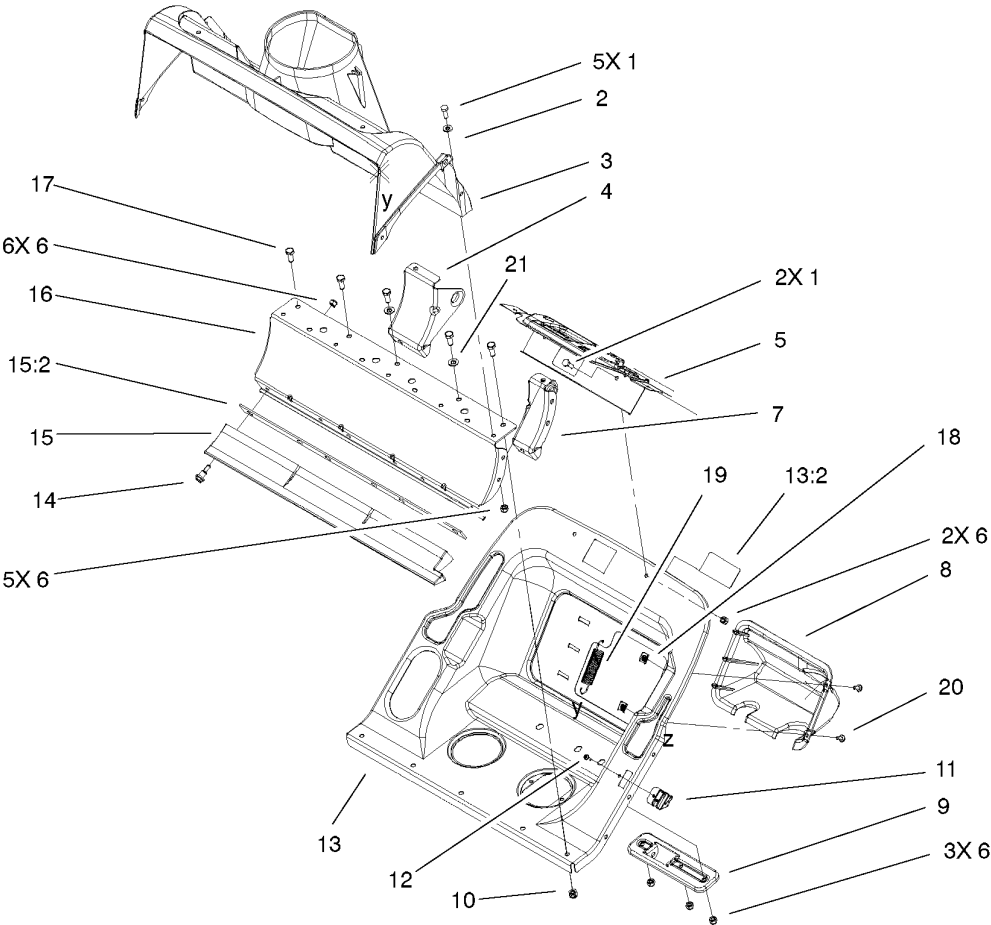 

Lower Housing Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	321-4	7	Screw-HH	21	3290-456	2	Washer-Belleville
2	3256-22	5	Washer-Flat				
3	100-9894	1	Housing-Rotor, Upper				
4	104-0865	1	Bracket-Pivot, RH				
5	104-0887-03	1	Control Panel Support ASM				
6	3296-42	16	Nut-Lock, NI				
7	104-0864	1	Bracket-Pivot, LH				
8	104-0874	1	Cover-Carb				
9	100-9897	1	Bracket-Pivot, Center				
10	3296-29	5	Nut-Lock, NI				
11	104-0880	1	Guide-Cable, Clutch				
12	95-4234	1	Screw-PPH				
13	104-4131	1	Housing-Lower W/Decal (Only On: 38602)				
13	100-9888-03	1	Housing-Lower (Only On: 38600)				
13:2	61-4790	1	Decal (Only On: 38602)				
14	104-0858	6	Bolt-Shoulder				
15	104-4138	1	Scraper ASM				
15:2	104-0879	1	Foam-Scraper				
16	100-9893-03	1	Housing-Rotor, Lower				
17	322-3	5	Screw-HH				
18	100-9889	2	Nut-Speed				
19	104-4130	1	Spring-Extension, Pivot				
20	32144-112	2	Screw-HWH				

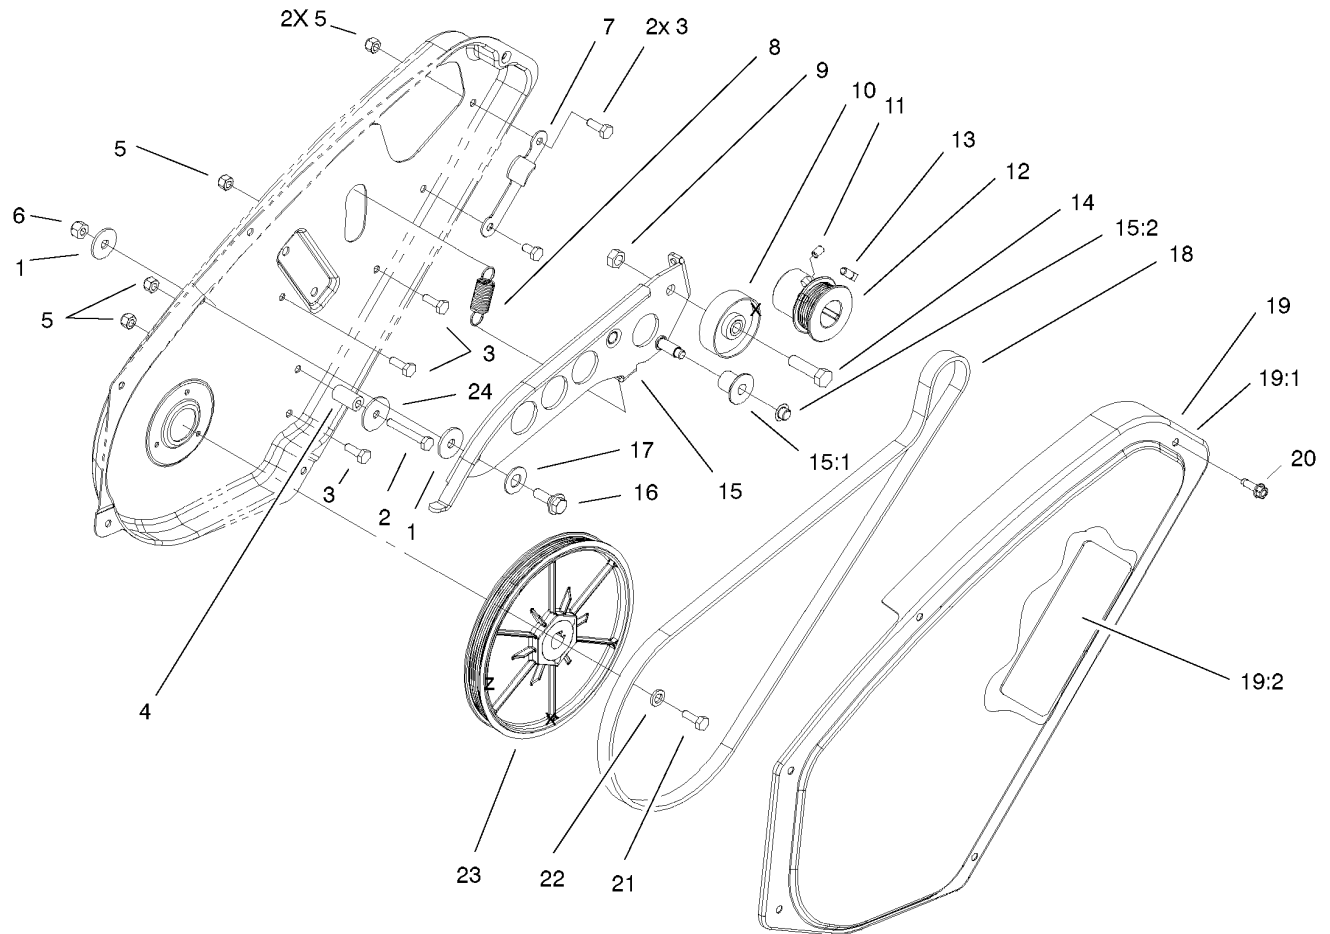 

Impeller Drive Assembly


Ref	Part No.	Qty.	Description
1	5-4460	2	Washer-Pivot
2	321-10	1	Screw-HH
3	321-4	5	Screw-HH
4	55-9530	1	Sleeve-Guide, Belt
5	3296-42	5	Nut-Lock, NI
6	3296-29	1	Nut-Lock, NI
7	104-0868	1	Belt-Guide
8	104-0869	1	Spring-Brake
9	32152-2	1	Nut-Lock, Cone
10	55-9290	1	Pulley-Idler
11	3245-41	1	Screw-HSH
12	3241-7	1	Screw-SQH
13	104-4108	1	Pulley
14	323-29	1	Screw-HH
15	104-4113	1	Brake-Arm
15:1	104-4114	1	Roller-Brake
15:2	32112-11	1	Nut-Push
16	27-0410	1	Screw-Shoulder
17	25-5640	1	Washer
18	104-0851	1	Belt-Drive
19	104-4140	1	Drive Cover ASM
19:1	104-2767	1	Decal-Warning
19:2	104-4125	1	Decal-Belt Routing
20	49-2040	1	Screw-HWHTF

Ref	Part No.	Qty.	Description
21	321-30	1	Screw-HH
22	3290-456	1	Washer-Belleville
23	100-9871	1	Pulley-Rotor
24	3256-55	1	Washer-Flat

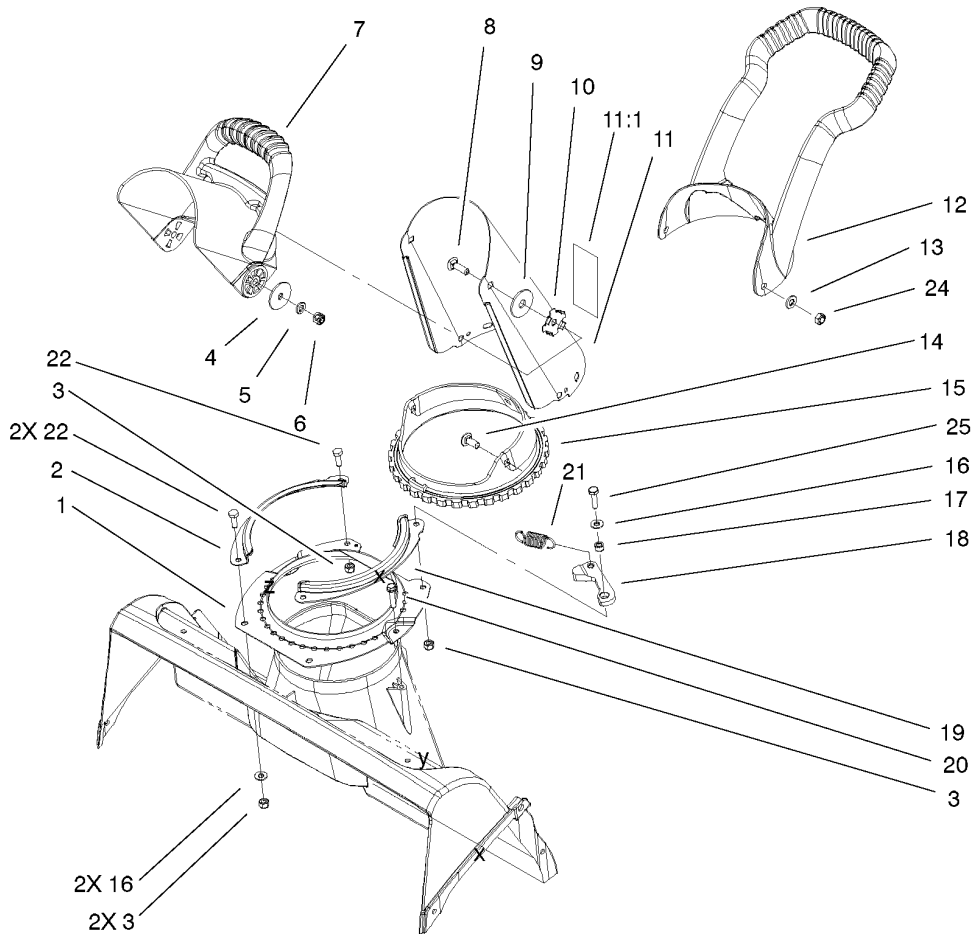 


Chute Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	55-8921-03	1	Ring-Support, Chute	25	321-6	1	Screw-HH
2	71-4990-03	1	Retainer-Chute, RH				
3	3296-42	4	Nut-Lock, NI				
4	3256-68	2	Washer-Flat				
5	3290-456	2	Washer-Belleville				
6	3296-29	2	Nut-Lock, NI				
7	104-0882	1	Chute-Deflector				
8	3230-22	2	Screw-CARR				
9	20-4320	2	Washer-Rubber				
10	55-8950	2	Plate-Friction				
11	104-4115	1	Chute ASM				
11:1	104-4135	1	Decal-Danger				
12	104-0884	1	Handle-Control, Chute				
13	3256-70	3	Washer-Flat				
14	100-5487	3	Screw-PTH				
15	104-2763	1	Ring-Chute				
16	3256-22	3	Washer-Flat				
17	55-9370	1	Spacer-Blade, Rotor				
18	80-4610	1	Detent				
19	71-4980-03	1	Retainer-Chute, LH				
20	46-8092	2	Screw-Plastite				
21	80-4600	1	Spring-Extension				
22	321-4	3	Screw-HH				
24	3296-47	3	Nut-Lock, NI				

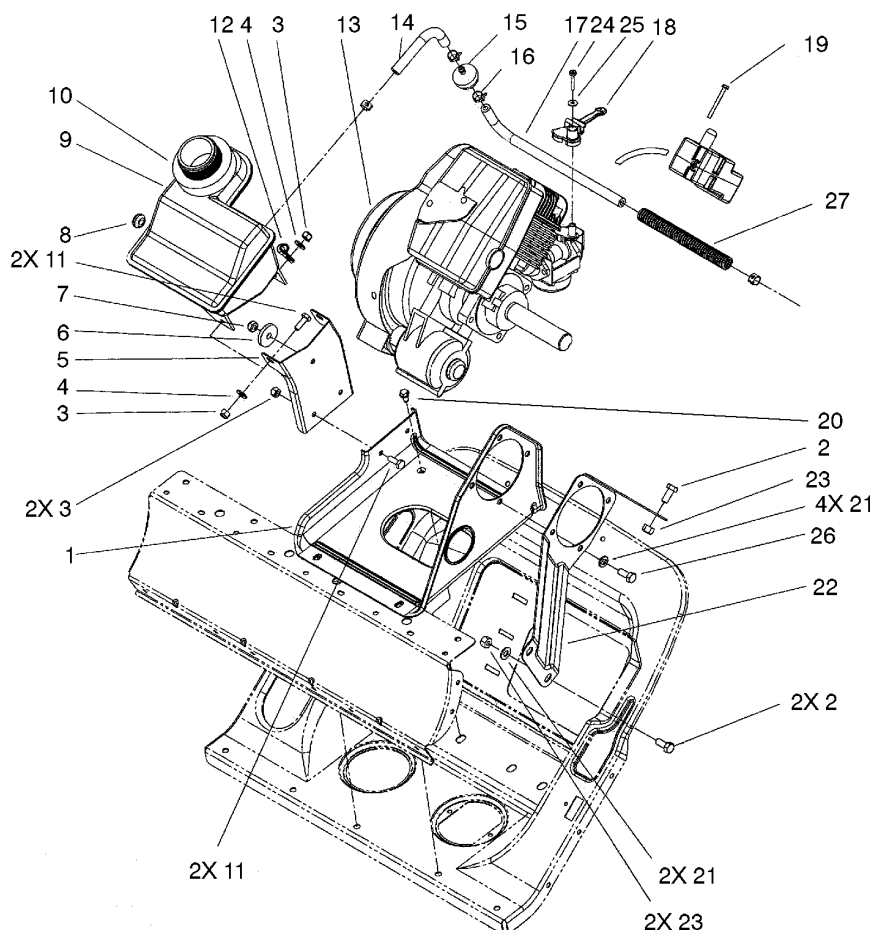 

Engine and Frame Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	100-9898-03	1	Support-Engine	21	3290-456	6	Washer-Belleville
2	322-3	3	Screw-HH	22	104-0875-03	1	Brace-Engine
3	3296-42	4	Nut-Lock, NI	23	3296-29	3	Nut-Lock, NI
4	3256-22	2	Washer-Flat	24	32144-97	1	Screw-PPH, Plastite
5	100-9899-03	1	Support-Recoil	25	104-4143	1	Washer
6	71-5320	1	Washer-Support, Engine	26	322-4	4	Screw-HH
7	3296-16	1	Nut-Lock, NI	27	104-4149	1	Conduit
8	237-89	1	Grommet-Rubber	①	28-9170	1	Cord (Only On: 38602)
9	55-8831	1	Tank-Gas				
10	55-9310	1	Seal-Foam				
11	321-4	4	Screw-HH				
12	2412-91	1	Clamp (Only On: 38602)				
② ③ 13		1	Engine-Briggs And Stratton, 084332-0130-E1 (Only On: 38600)				
② ③ 13		1	Engine-Briggs And Stratton, 084333-0199-E1 (Only On: 38602)				
14	94-9932	1	Hose-Fuel				
15	56-6360	1	Filter-Fuel				
16	2412-98	4	Clamp				
17	104-4119	1	Hose - Gas				
18	104-0878	1	Lever-Choke				
19	32144-27	3	Screw-Plastite (Only On: 38602)				
20	32144-44	3	Screw-HWH				

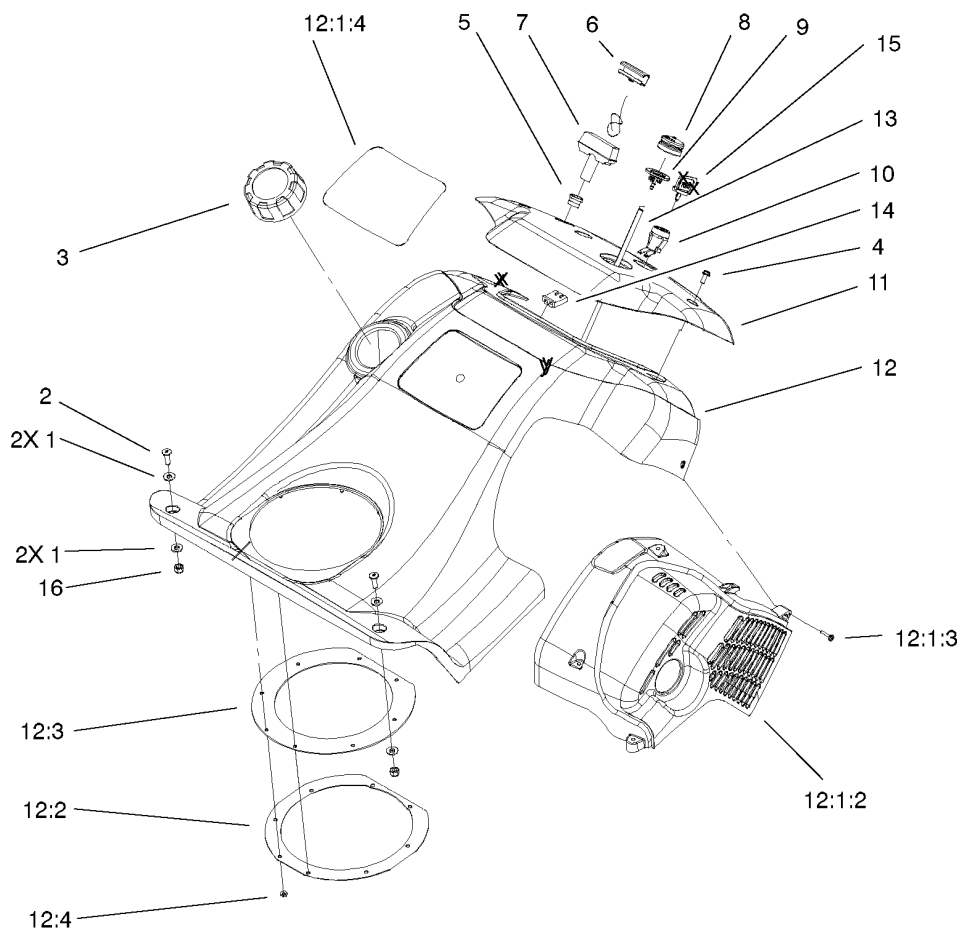 

Upper Shroud and Control Panel Assembly


Ref	Part No.	Qty.	Description
1	3256-22	4	Washer-Flat
2	3250-32	2	Screw-PPH
3	104-4133	1	Gas Cap ASM
4	32144-112	2	Screw-HWH
5	55-9410	1	Guide-Rope, Starter
6	612824	1	Clip-Starter
7	612825	1	Handle-Start
8	66-7460	1	Bulb-Primer
9	44-2750	1	Body-Primer
10	40-5940	1	Switch
11	104-0863	1	Panel-Control (Electric)(Only On: 38602)
11	104-4106	1	Panel-Control (Recoil)(Only On: 38600)
12	104-4147	1	Upper Shroud ASM Es (Only On: 38602)
12	104-4109	1	Upper Shroud ASM Recoil (Only On: 38600)
12:1		1	Upper Shroud ASM Es (Only On: 38602)
12:1		1	Upper Shroud ASM Recoil (Only On: 38600)
12:1:2	104-0860	1	Shield-Heat
12:1:3	94-4496	5	Screw-PPH
12:1:4	104-4146	1	Decal-Shroud Es (Only On: 38602)

Ref	Part No.	Qty.	Description
12:1:4	104-4141	1	Decal-Shroud Recoil (Only On: 38600)
12:2	55-9260	1	Seal-Chute
12:3	55-9540-03	1	Retainer-Seal, Chute
12:4	3290-474	8	Palnut
13	95-1861	1	Hose-Primer
15	63-8360	1	Key-Ignition
16	3296-42	2	Nut-Lock NI (Only On: 38602)
1	250-4	1	Tie-Cable

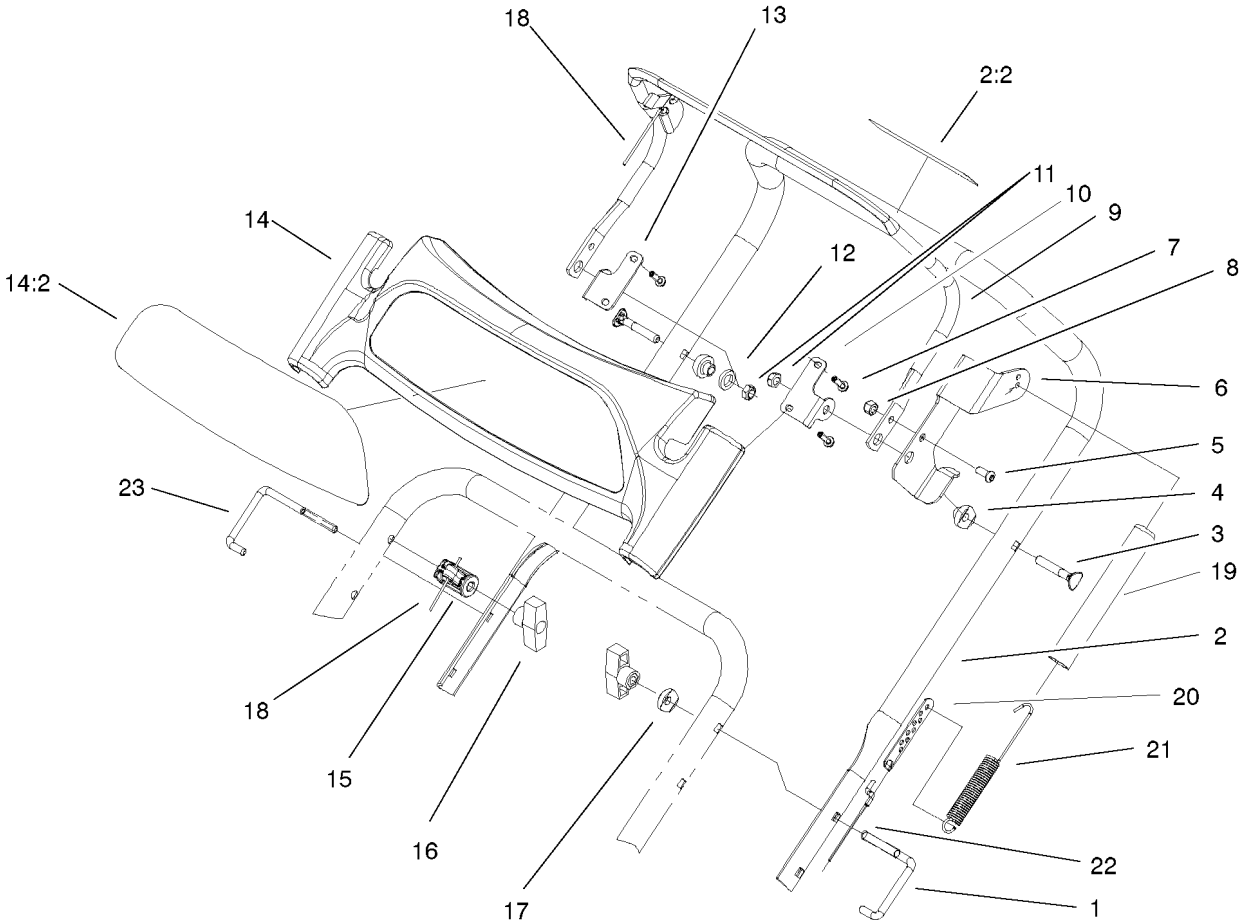 

Upper Handle Assembly






Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	98-2266	1	Lock-Handle	23	104-4126	1	Lock-Handle, RH
2	104-4137	1	Upper Handle ASM				
2:2	104-2775	1	Decal-Drive, Rotor				
3	92-2260	2	Screw-Handle				
4	55-9340	2	Spacer-Bar, Control				
5	3274-31	1	Screw-HSBH				
6	100-9882-03	1	Arm-Clutch, Handle				
7	98-1375	4	Screw-HWH				
8	3296-42	1	Nut-Lock, NI				
9	104-4104-03	1	Bar-Control				
10	104-4100	1	Bracket-Panel, LH				
11	3296-47	2	Nut-Lock, NI				
12	55-9670	1	Washer				
13	104-4101	1	Bracket-Panel, RH				
14	104-4127	1	Panel-Display Handle W/Decal				
14:2	104-4112	1	Decal-Display Handle				
15	100-9868	1	Guide-Pivot Cable				
16	98-7134	2	Knob-Handle				
17	75-9130	1	Washer-Curved				
18	104-0895	1	Cable-Pivot				
19	104-4145	1	Cover-Spring				
20	71-5330	1	Adjuster-Cable, Clutch				
21	104-0894	1	Spring-Cable				
22	104-0896	1	Cable-Clutch				

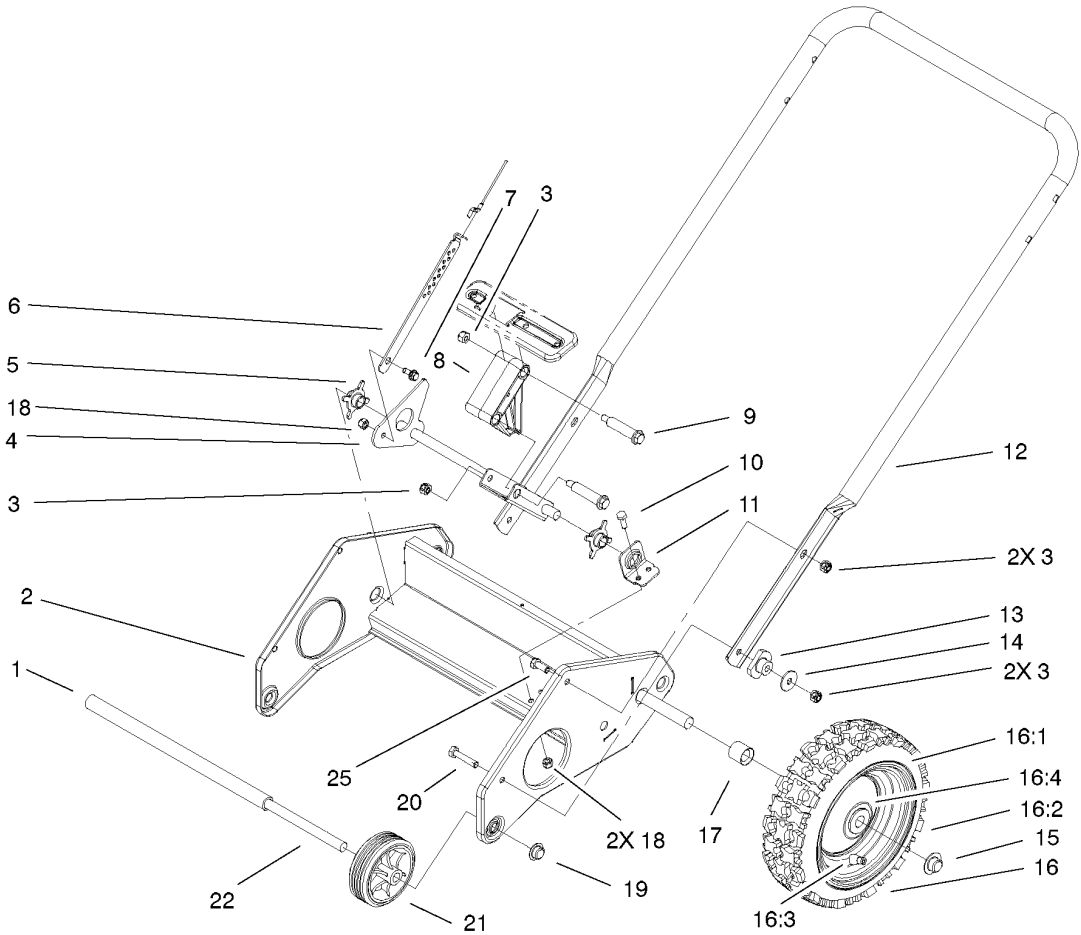 

Lower Handle Assembly

Ref	Part No.	Qty.	Description				
1	100-9878	1	Spacer-Plastic				
2	100-9887-03	1	Wheelframe ASM				
3	3296-29	6	Nut-Lock, NI				
4	104-0853	1	Pivot ASM				
5	104-0855	2	Bushing-Rod, Pivot				
6	104-0899	1	Adjuster-Cable, Pivot				
7	104-4102	1	Screw-Shoulder				
8	100-9896	1	Block-Pivot				
9	100-9880	2	Bolt-Shoulder				
10	321-4	2	Screw-HH				
11	100-9879	1	Support-Rod, Pivot				
12	100-9890-03	1	Handle-Lower				
13	100-9883	2	Bushing-Pivot				
14	3256-82	2	Washer-Flat				
15	104-4111	2	Nut-Push				
16	100-9869	2	10" Tire & Wheel ASM				
17	104-0892	2	Spacer-Axle, Rear				
18	3296-42	3	Nut-Lock, NI				
19	32112-14	2	Nut-Push				
20	322-7	2	Screw-HH				
21	100-9864	2	Tire And Wheel ASM				
22	100-9875	1	Axle-Front				
25	322-3	2	Screw-HH				

     
1036 EMISSIONS LABEL
48 Short Block

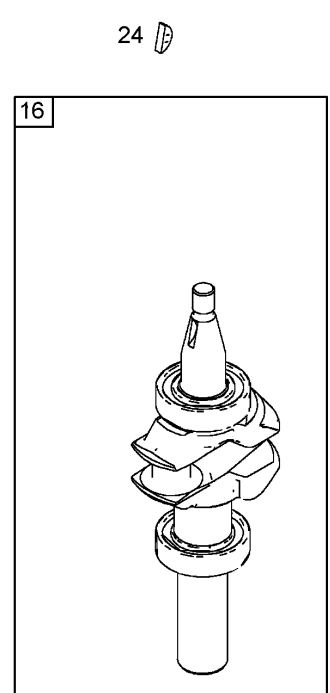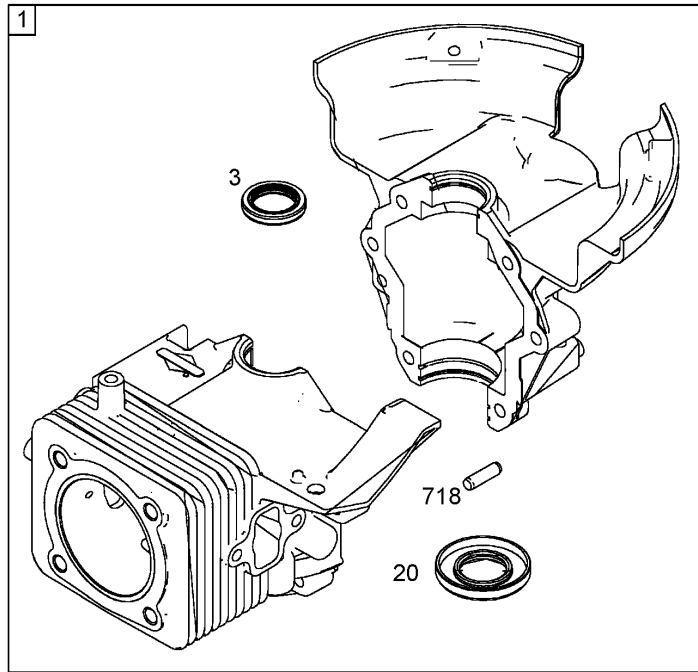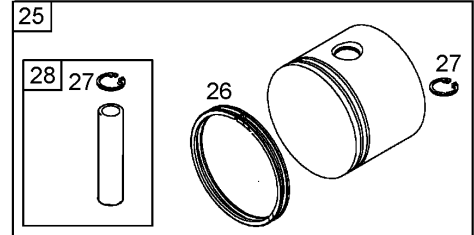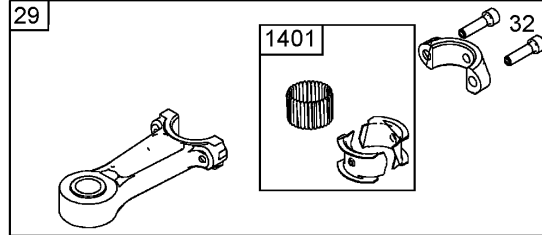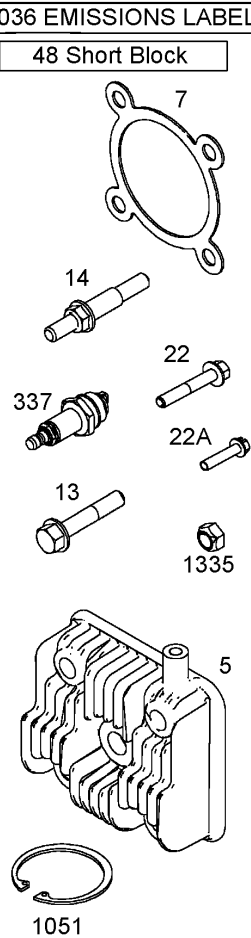

Crankcase, Crankshaft, Cylinder Head, and Connecting Rod Assemblies Briggs and Stratton 084332-0130-E1

Ref	Part No.	Qty.	Description
1	801273	1	Cylinder ASM
3	801262	1	Seal-Oil
5	801283	1	Head-Cylinder
7	801263	1	Gasket-Head, Cylinder
13	801264	1	Screw (Cylinder Head)
14	801265	1	Stud (Cylinder Head)
16	801221	1	Crankshaft
20	801261	1	Seal-Oil
22	801266	1	Screw (Crankcase Cover And Sump)
22A	801271	1	Screw (Crankcase Cover And Sump)
24	801234	1	Key-Flywheel
25	801281	1	Piston ASM
26	801282	1	Ring Set
27	801275	1	Lock-Pin, Piston
28	801276	1	Pin-Piston
29	801277	1	Rod-Connecting
32	801278	1	Screw
48	801286	1	Short Block
337	801254	1	Plug-Spark
718	690959	1	Pin-Locating
1036	801295	1	Label-Emissions
1051	801274	1	Ring-Retaining


Ref	Part No.	Qty.	Description
1335	801269	1	Nut (Blower Housing)
1401	801290	1	Roller-Strip

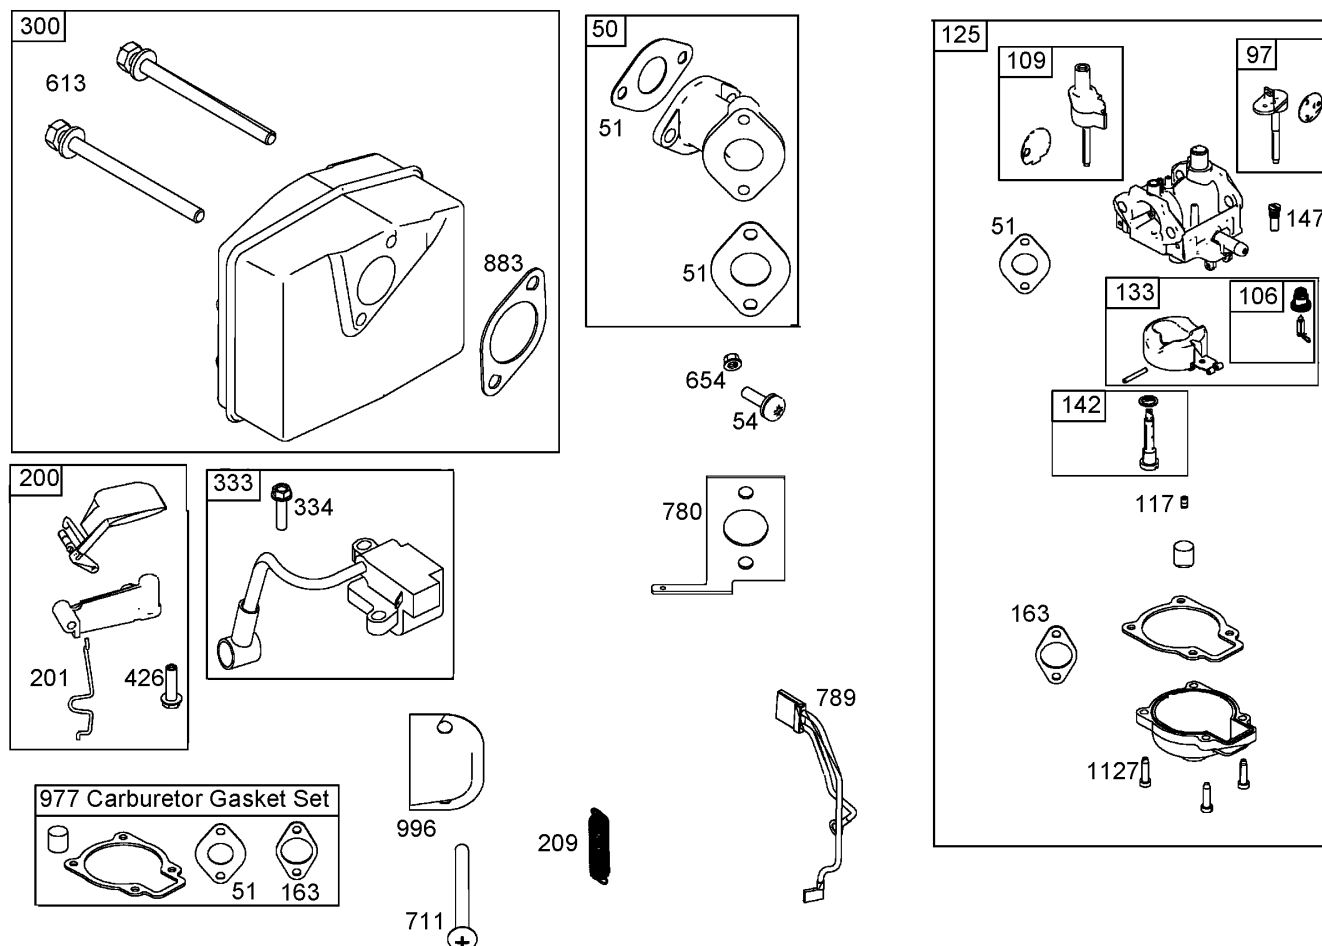 

Intake Manifold, Carburetor, and Muffler Assemblies Briggs and Stratton 084332-0130-E1

Ref	Part No.	Qty.	Description
50	801232	1	Manifold-Intake
51	801224	1	Gasket-Intake
54	801230	1	Screw (Intake Manifold)
97	801306	1	Shaft-Throttle
106	801317	1	Seat-Inlet
109	801307	1	Shaft-Choke
117	801311	1	Jet-Main
125	801255	1	Carburetor
133	801316	1	Float-Carburetor
142	801313	1	Nozzle-Carburetor
147	801309	1	Jet-Pilot
163	801227	1	Gasket-Cleaner, Air
200	801289	1	Blade-Governor
201	801225	1	Link-Vane, Air
209	801223	1	Spring-Governor
300	801250	1	Muffler
333	801268	1	Armature-Magneto
334	801267	1	Screw
426	801231	1	Screw
613	801251	1	Screw
654	801324	1	Nut (Intake Manifold) (Used Before Engine Code Date 05042600)
711	801229	1	Screw

Ref	Part No.	Qty.	Description
780	801228	1	Anchor-Spring
789	801253	1	Wire ASM
883	801252	1	Gasket-Exhaust
977	801312	1	Gasket Set-Carburetor
996	801226	1	Shield-Carburetor
1127	801318	1	Screw





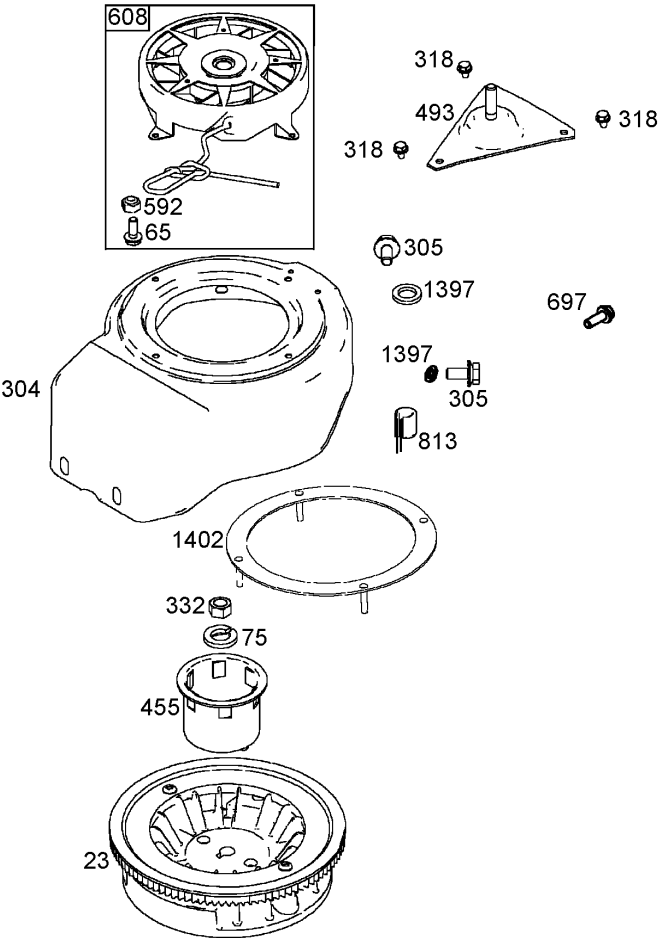 


Flywheel, Blower Housing, and Starter Assemblies

Briggs and Stratton 084332-0130-E1

Ref	Part No.	Qty.	Description				
❶23	801246	1	Flywheel				
❶65	801243	1	Screw				
❶75	801237	1	Washer				
❶304	801257	1	Housing-Blower				
❶305	801239	1	Screw (Blower Housing)				
❶318	801241	1	Screw				
❶332	801238	1	Nut				
❶455	801235	1	Cup-Flywheel				
❶493	801240	1	Bracket-Mounting				
❶592	801244	1	Nut				
❶608	801242	1	Starter-Rewind				
❶697	801248	1	Screw (Starter Motor)				
❶813	801249	1	Clamp				
❶1397	801270	1	Washer (Blower Housing)				
❶1402	801272	1	Ring-Support				

     
1036 EMISSIONS LABEL
48 Short Block

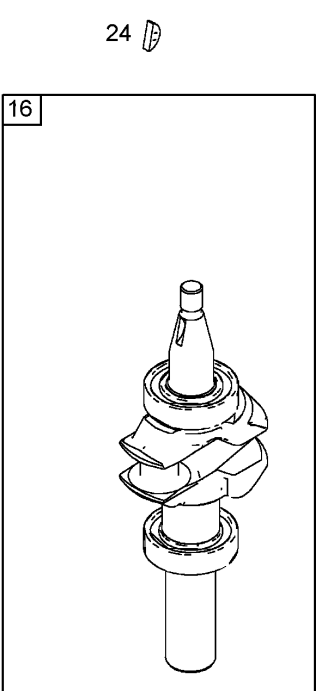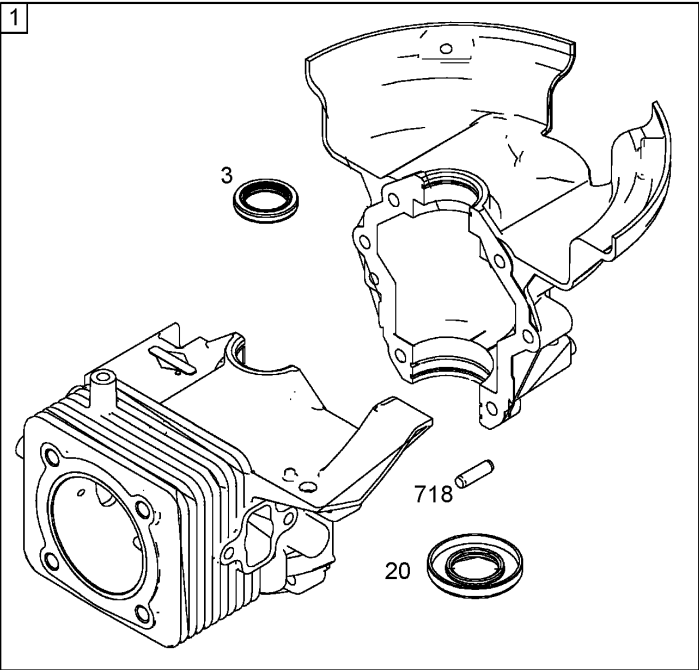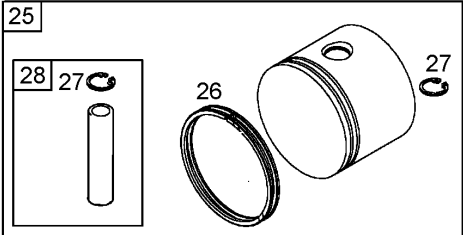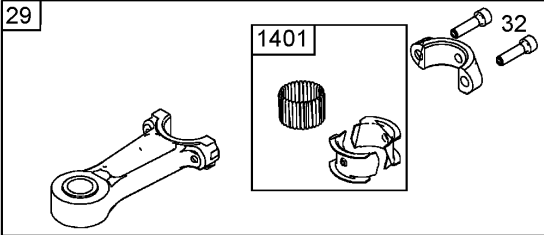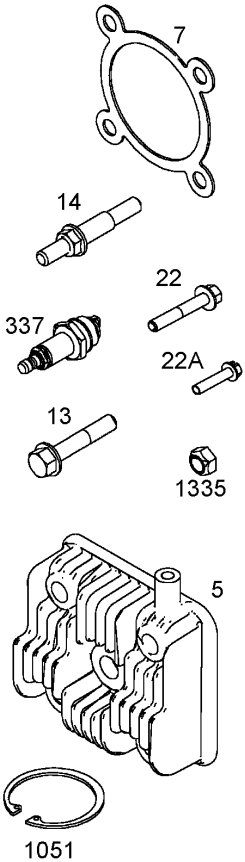

Crankcase, Crankshaft, Cylinder Head, and Connecting Rod Assemblies Briggs and Stratton 084333-0199-E1


Ref	Part No.	Qty.	Description
1	801321	1	Cylinder ASM
3	801262	1	Seal-Oil
5	801283	1	Head-Cylinder
7	801263	1	Gasket-Head, Cylinder
13	801264	1	Screw (Cylinder Head)
14	801265	1	Stud (Cylinder Head)
16	801221	1	Crankshaft
20	801261	1	Seal-Oil
22	801266	1	Screw (Crankcase Cover And Sump)
22A	801271	1	Screw (Crankcase Cover And Sump)
24	801234	1	Key-Flywheel
25	801281	1	Piston ASM
26	801282	1	Ring Set
27	801275	1	Lock-Pin, Piston
28	801276	1	Pin-Piston
29	801277	1	Rod-Connecting
32	801278	1	Screw
48	801287	1	Short Block
337	801254	1	Plug-Spark
718	690959	1	Pin-Locating
1036	801295	1	Label-Emissions
1051	801274	1	Ring-Retaining

Ref	Part No.	Qty.	Description
1335	801269	1	Nut (Blower Housing)
1401	801290	1	Roller-Strip

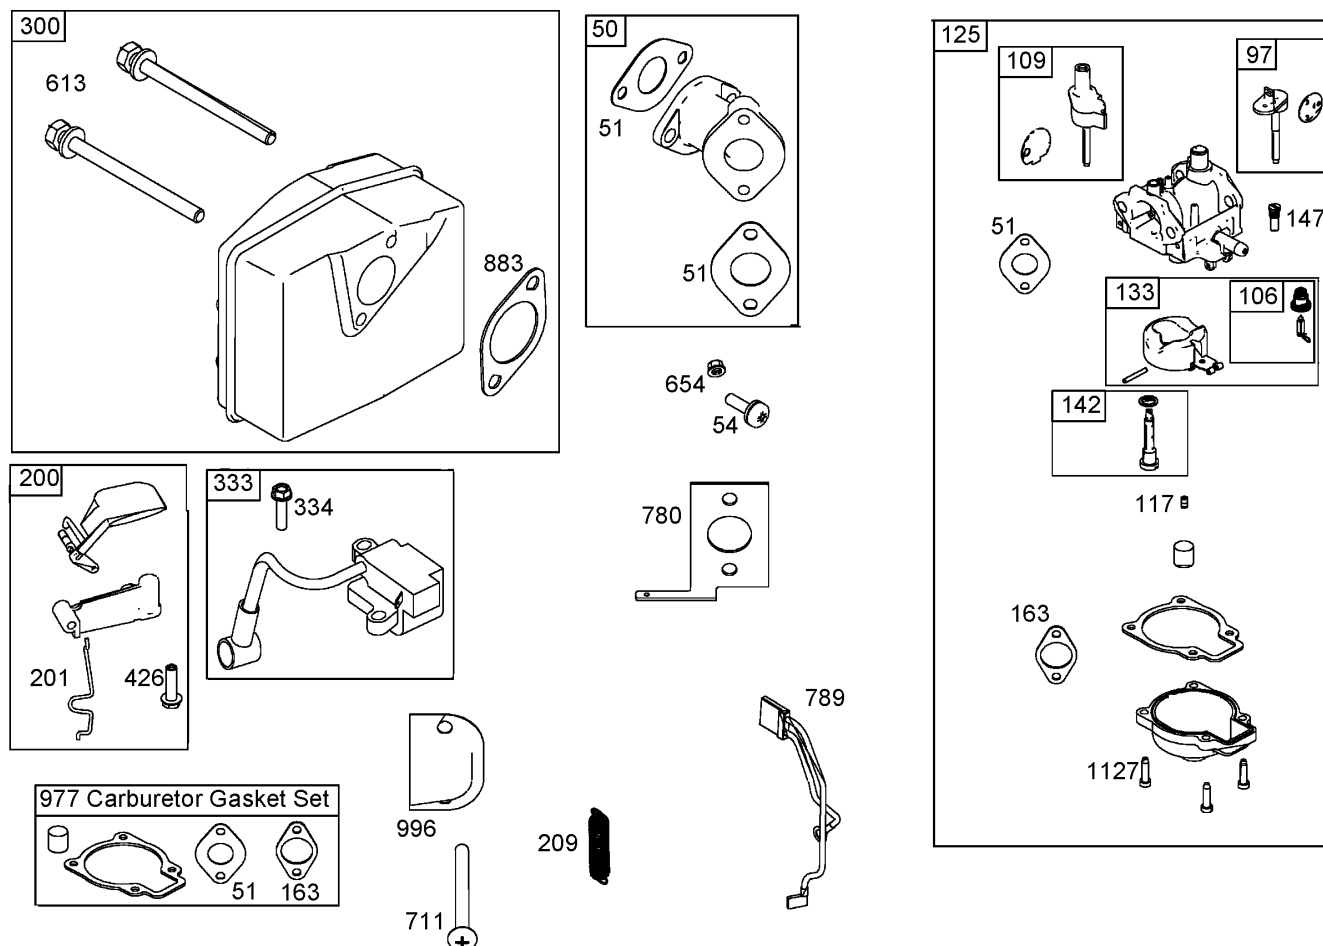 

Intake Manifold, Carburetor, and Muffler Assemblies Briggs and Stratton 084333-0199-E1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
50	801232	1	Manifold-Intake	780	801228	1	Anchor-Spring
51	801224	1	Gasket-Intake	789	801253	1	Wire ASM
54	801230	1	Screw (Intake Manifold)	883	801252	1	Gasket-Exhaust
97	801306	1	Shaft-Throttle	977	801312	1	Gasket Set-Carburetor
106	801317	1	Seat-Inlet	996	801226	1	Shield-Carburetor
109	801307	1	Shaft-Choke	1127	801318	1	Screw
117	801311	1	Jet-Main				
125	801255	1	Carburetor				
133	801316	1	Float-Carburetor				
142	801313	1	Nozzle-Carburetor				
147	801309	1	Jet-Pilot				
163	801227	1	Gasket-Cleaner, Air				
200	801289	1	Blade-Governor				
201	801225	1	Link-Vane, Air				
209	801223	1	Spring-Governor				
300	801250	1	Muffler				
333	801268	1	Armature-Magneto				
334	801267	1	Screw				
426	801231	1	Screw				
613	801251	1	Screw				
654	801324	1	Nut (Intake Manifold) (Used Before Engine Code Date 05042600)				
711	801229	1	Screw				

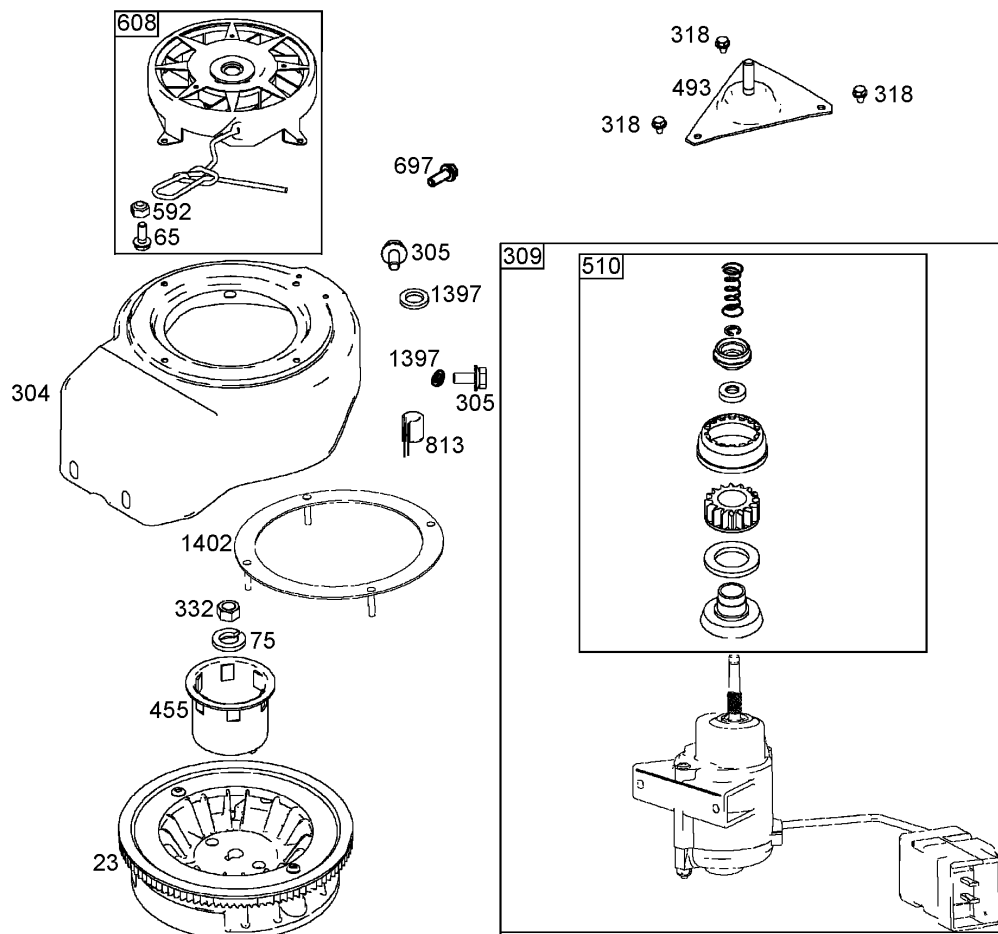 

Flywheel, Blower Housing, and Starter Assemblies Briggs and Stratton 084333-0199-E1

Ref	Part No.	Qty.	Description
⑨23	801246	1	Flywheel
⑨65	801243	1	Screw
⑨75	801237	1	Washer
⑨304	801236	1	Housing-Blower
⑨305	801239	1	Screw (Blower Housing)
⑨309	801247	1	Motor-Starter
⑨318	801241	1	Screw
⑨332	801238	1	Nut
⑨455	801235	1	Cup-Flywheel
⑨493	801240	1	Bracket-Mounting
⑨510	801293	1	Drive-Starter
⑨592	801244	1	Nut
⑨608	801242	1	Starter-Rewind
⑨697	801248	1	Screw (Starter Motor)
⑨813	801249	1	Clamp
⑨1397	801270	1	Washer (Blower Housing)
⑨1402	801272	1	Ring-Support

NOTES

NOTES

