



720E Snowthrower

Model No. 28226 - 220000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Side Plate and Scraper Assembly	 3	Handle Assembly	 9
Drive Cover and Pulley Assembly	 4	Cylinder, Piston, and Connecting Rod	
Discharge Chute Assembly	 5	Assemblies Briggs and Stratton 084133-0196- E1	 10
Rotor Assembly	 6	Muffler, Carburetor, and Intake Manifold	
Engine and Fuel Tank Assembly	 7	Assemblies Briggs and Stratton 084133-0196- E1	 11
Shroud and Control Panel Assembly	 8	Flywheel, Blower Housing, and Starter	
		Assemblies Briggs and Stratton 084133-0196- E1	 12


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power-take-off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll-over-protection-system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HSBH. hex socket button head	SPH. slotted pan head
HSFH. hex socket flat head	SQH. square head
HSH. hex socket head	SRH. slotted round head
HWH. hex washer head	STD. standard
HWHTF. hex washer head thread forming	TAP. self tapping
HYD. hydraulic	TTH. torx truss head


Footnotes

- | | |
|---|---------------------------|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain from your local Briggs & Stratton dealer | |

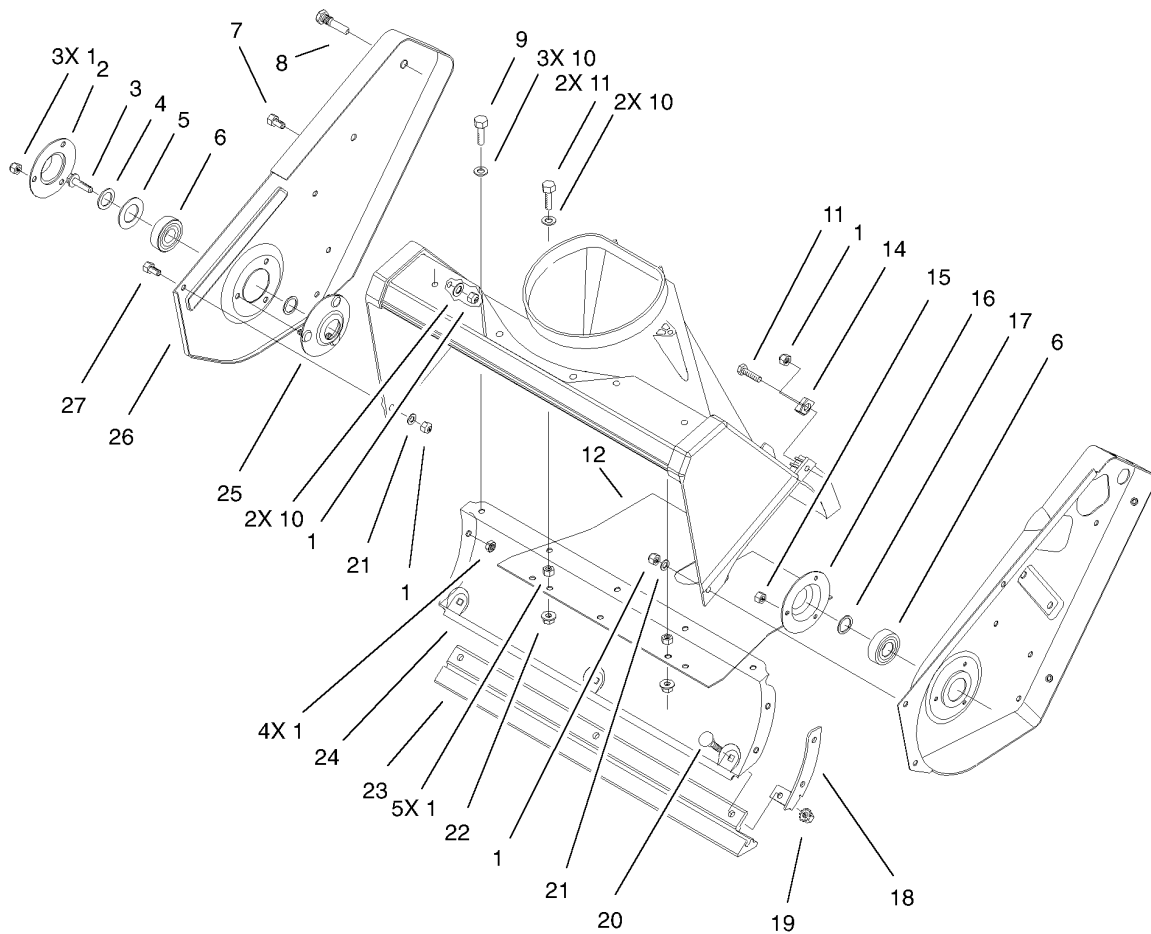

Side Plate and Scraper Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	3296-42	16	Nut-Lock, NI	26	55-8840-03	1	Plate-Side, RH
2	52-7290-03	1	Retainer-Bearing	27	32105-15	5	Screw
3	3234-25	1	Screw-HHF				
4	3256-24	1	Washer-Flat				
5	52-7270	1	Washer-Rubber				
6	38-7820	2	Bearing-Ball				
7	322-43	1	Screw-HH				
8	38-8211	1	Pin-Rotor				
9	321-4	3	Screw-HH				
10	3256-22	7	Washer-Flat				
11	321-6	3	Screw-HH				
12	55-9512	1	Cover-Bottom				
14	55-9430	1	Bracket-Housing				
15	3296-2	3	Nut-Lock				
16	38-8620	1	Flange-Bearing				
17	52-7280	2	Washer-Thrust				
18	56-2610	1	Bracket-Housing, Lower				
19	32149-2	3	Nut-Keps				
20	3229-11	3	Screw-CARR				
21	3256-67	2	Washer-Flat				
22	32128-10	2	Nut-Lock, HHF				
23	55-8760	1	Scraper				
24	55-9220-03	1	Housing-Lower				
25	52-9110	1	Flange-Bearing				

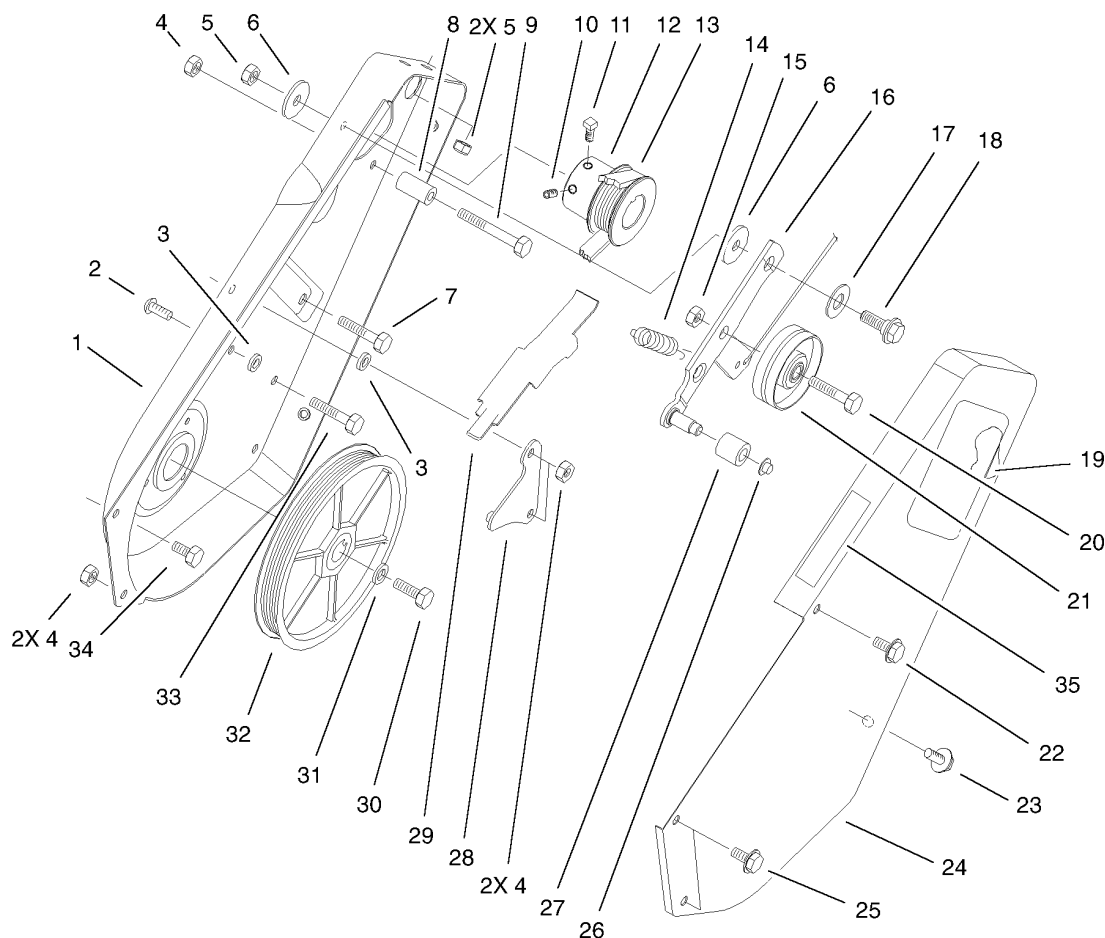


Drive Cover and Pulley Assembly

Ref	Part No.	Qty.	Description
1	55-8851-03	1	Plate-Side, LH
2	3274-31	1	Screw-HSBH
3	55-9620	2	Spacer-Plate, Pivot
4	3296-42	5	Nut-Lock, NI
5	3296-29	3	Nut-Lock, NI
6	5-4460	2	Washer-Pivot
7	322-3	2	Screw-HH
8	55-9530	1	Sleeve-Guide, Belt
9	321-13	1	Screw-HH
10	3245-41	1	Screw-HSH
11	3241-7	1	Screw-SQH
12	95-2673	1	Pulley-Engine
13	95-6151	1	Belt-Drive
14	55-9280	1	Spring-Extension
15	32152-2	1	Nut-Lock, Cone
16	63-3610	1	Idler Arm ASM
17	25-5640	1	Washer
18	27-0410	1	Screw-Shoulder
19	60-9480	1	Decal
20	323-29	1	Screw-HH
21	55-9290	1	Pulley-Idler
22	36-3860	1	Screw-HWH, TAP
23	12-3270	2	Screw
24	16-9449	1	Cover-Drive


Ref	Part No.	Qty.	Description
25	32105-15	2	Screw
26	32112-11	1	Nut-Push
27	55-9520	1	Roller-Brake
28	55-9570	1	Pivot Plate ASM
29	55-9550	1	Brake-Arm
30	321-30	1	Screw-HH
31	3290-456	1	Washer-Belleville
32	95-2672	1	Pulley Rotor ASM
33	321-4	2	Screw-HH
34	32105-8	3	Screw-SHH
35	104-2767	1	Decal-Warning

5

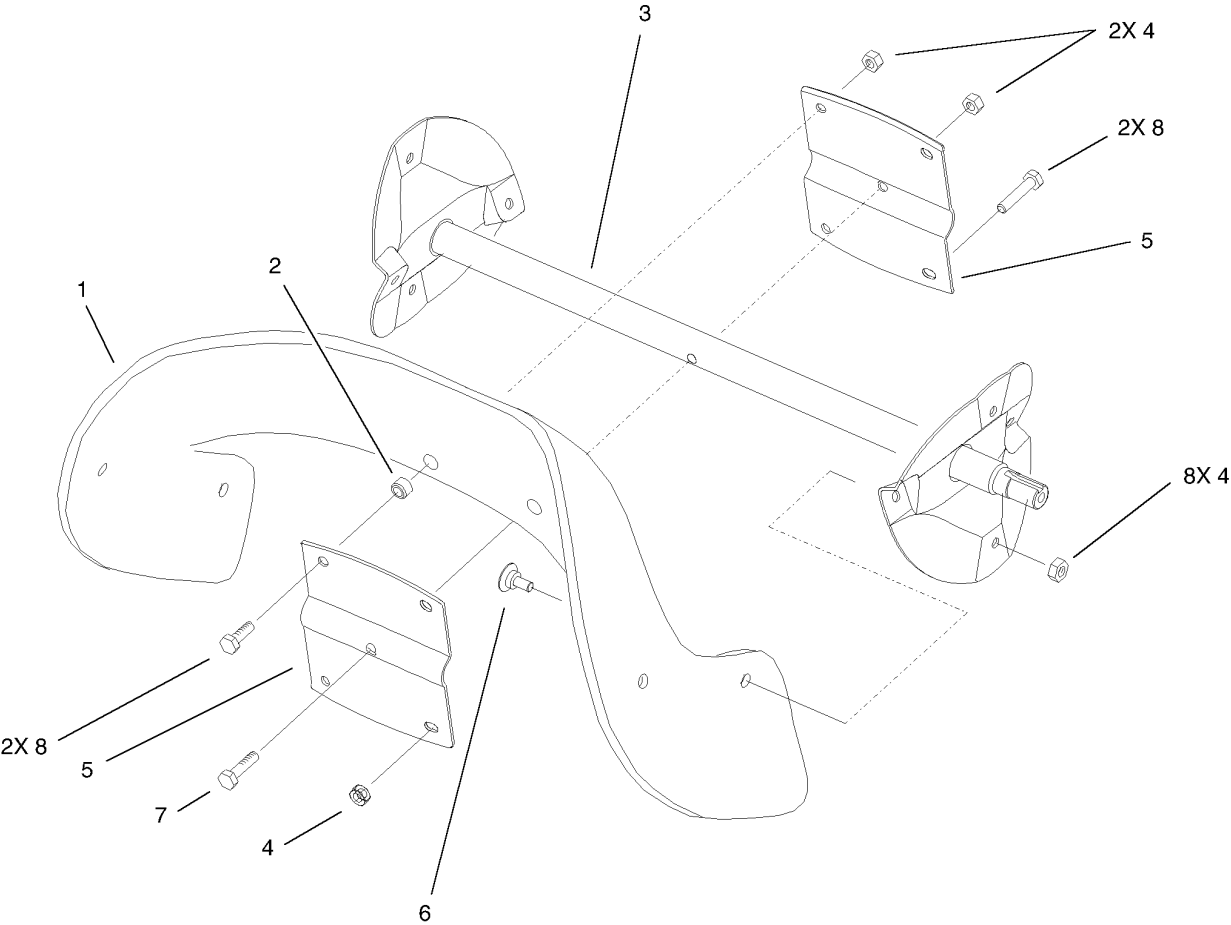

Rotor Assembly


Ref	Part No.	Qty.	Description				
1	99-9313	2	Blade-Rotor				
2	55-9370	4	Spacer-Blade, Rotor				
3	100-5478-03	1	Rotor ASM				
4	3296-56	13	Nut-Lock, NI				
5	66-6600-03	2	Half-Rotor				
6	84-1971	8	Screw				
7	321-8	1	Screw-HH				
8	321-4	4	Screw-HH				

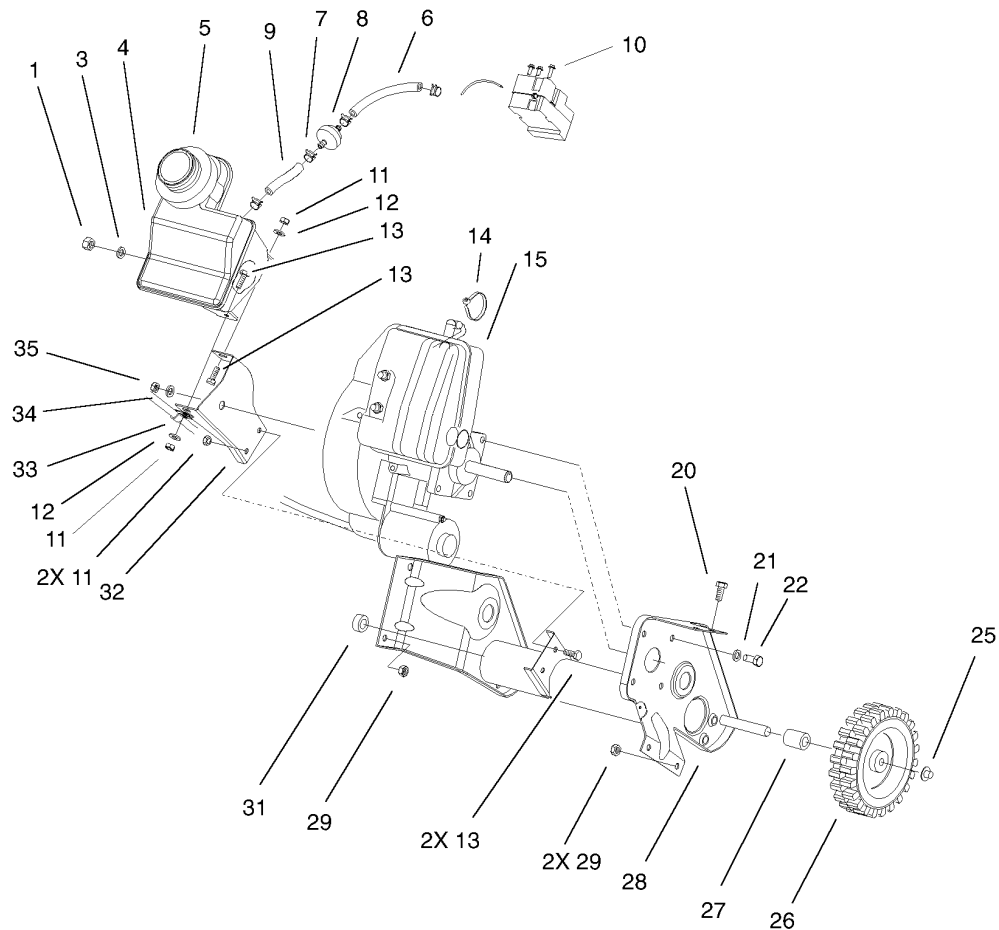

Engine and Fuel Tank Assembly


Ref	Part No.	Qty.	Description
1	32152-8	1	Nut-Lock, Cone
3	237-89	1	Grommet-Rubber
4	94-9920	1	Tank-Gas
5	55-9310	1	Seal-Foam
6	49-2482	1	Line-Fuel
7	2412-98	4	Clamp
8	56-6360	1	Filter-Fuel
9	94-9932	1	Hose-Fuel
10	32144-27	3	Screw
11	3296-42	4	Nut-Lock, NI
12	3256-22	2	Washer-Flat
13	321-4	4	Screw-HH
14	250-4	1	Tie-Cable
15		1	Engine-Briggs And Stratton, 084133-0196-E1
20	322-3	2	Screw-HH
21	3290-456	4	Washer-Belleville
22	322-3	4	Screw-HH
25	32112-14	2	Nut-Push
26	66-6510	2	Wheel
27	66-6501	1	Spacer-Wheel
28	105-1965-03	1	Frame
29	3296-29	3	Nut-Lock, NI
31	66-6500	1	Spacer-Wheel

Ref	Part No.	Qty.	Description
32	94-9918-03	1	Support-Recoil
33	2412-91	1	Clamp
34	71-5320	1	Washer-Support, Engine
35	3296-16	1	Nut-Lock, NI
1	104-9705	1	Cord-Electric

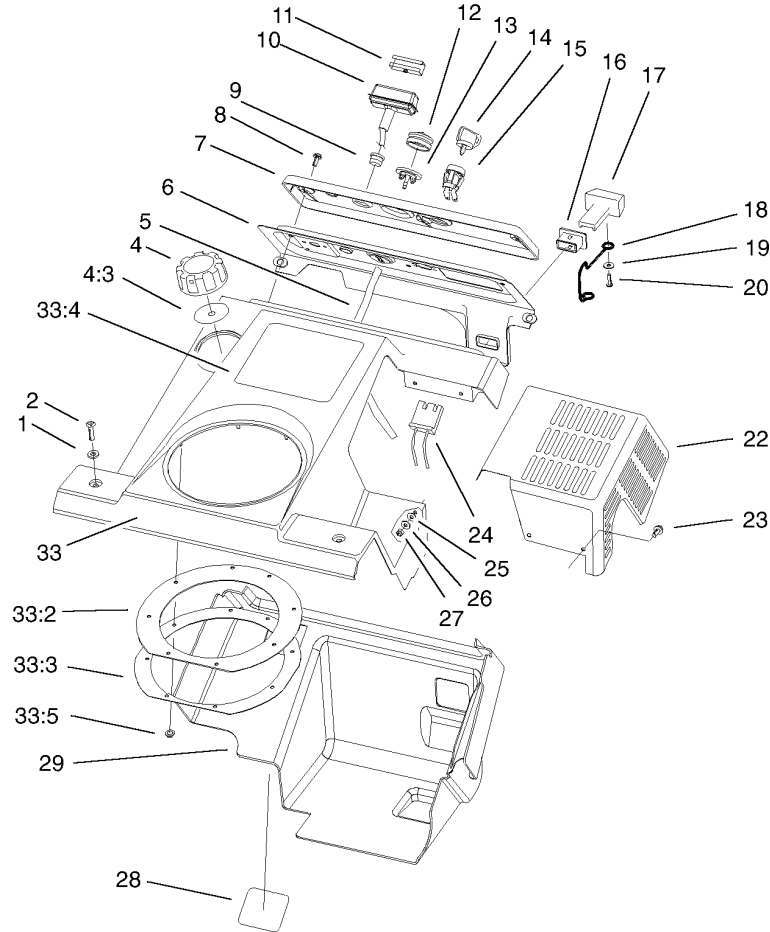

Shroud and Control Panel Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	3256-22	2	Washer-Flat	27	3296-12	4	Nut-Lock
2	3250-32	2	Screw-PPH	28	61-4790	1	Decal
4	55-3573	1	Cap-Fuel ASM	33:3	55-9540-03	1	Retainer-Seal, Chute
4:3	56-6110	1	Gasket-Vented	33:5	3290-474	8	Palnut
5	98-1372	1	Hose-Primer				
6	55-9490-03	1	Panel-Control				
8	32144-112	3	Screw-HWH				
9	55-9410	1	Guide-Rope, Starter				
10	612825	1	Handle-Start				
11	612824	1	Clip-Starter				
12	66-7460	1	Bulb-Primer				
13	44-2750	1	Body-Primer				
14	700918	1	Key				
15	40-5940	1	Switch				
16	55-8820	1	Fitting				
17	55-8810	1	Control-Choke				
18	95-7439	1	Linkage-Choke				
19	3256-49	1	Washer-Flat				
20	32144-111	1	Screw-PPH				
22	55-9210-03	1	Shield-Heat				
23	32105-8	4	Screw-SHH				
24	218-532	1	Connector-Body				
25	55-9660	4	Washer				
26	3256-14	4	Washer-Flat				

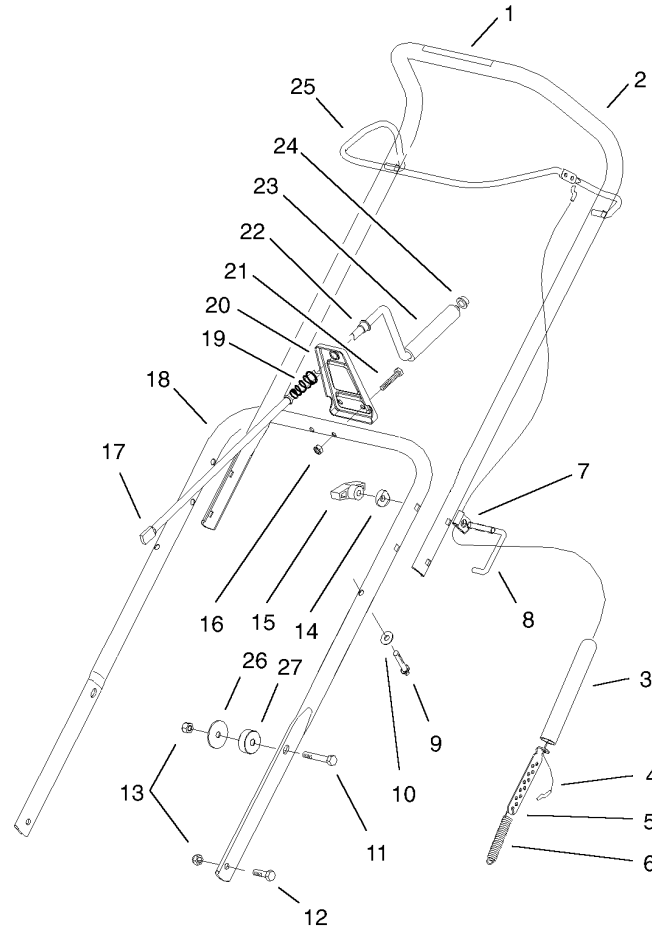

Handle Assembly

Ref	Part No.	Qty.	Description
1	104-2775	1	Decal-Drive, Rotor
2	95-2669	1	Handle-Upper W/Decal ASM
3	55-9390	1	Cover-Spring
4	55-9322	1	Cable-Clutch
5	55-9380	1	Adjuster-Cable
6	55-9270	1	Spring-Extension
7	2412-112	1	Clamp
8	98-2266	2	Lock-Handle
9	61-8640	2	Screw
10	3-7501	2	Washer
11	322-17	2	Screw-HH
12	322-3	2	Screw-HH
13	3296-29	4	Nut-Lock, NI
14	75-9130	2	Washer-Curved
15	98-7134	2	Knob-Handle
16	3296-42	2	Nut-Lock, NI
17	55-9140	1	Rod-Crank, Chute
18	55-9121-03	1	Handle-Lower
19	55-9440	1	Spring-Compression
20	55-9090-03	1	Support-Crank, Chute
21	321-13	2	Screw-HH
22	256-249	1	Bushing
23	40-8230	1	Grip-Chute Control
24	3290-320	1	Retainer-Push On

Ref	Part No.	Qty.	Description
25	100-5473-03	1	Bail-Control
26	3256-68	2	Washer-Flat
27	105-1961	2	Spacer

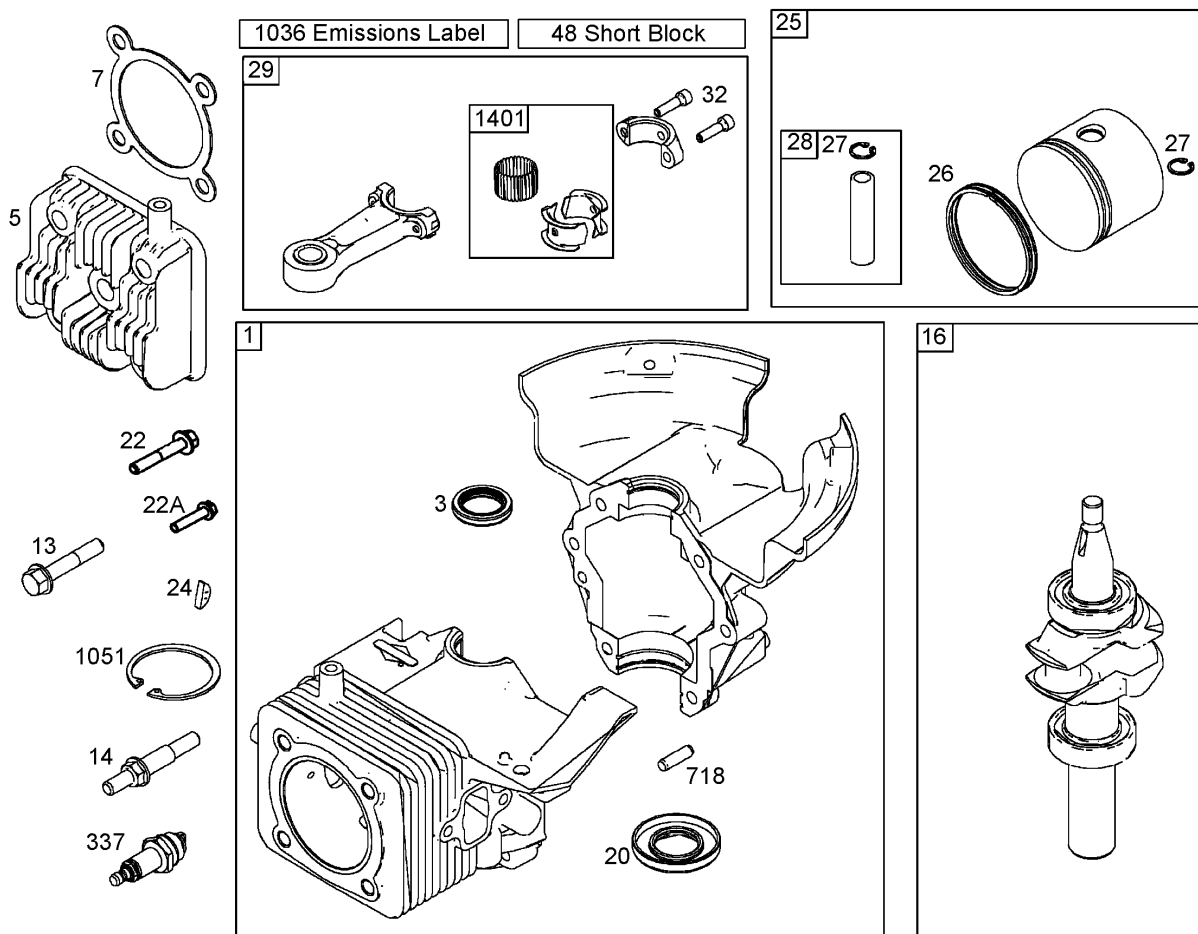

Cylinder, Piston, and Connecting Rod Assemblies Briggs and Stratton 084133-0196-E1


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	801322	1	Cylinder ASM	1401	801290	1	Roller-Strip
3	801262	1	Seal-Oil				
5	801283	1	Head-Cylinder				
7	801263	1	Gasket-Head, Cylinder				
13	801264	1	Screw (Cylinder Head)				
14	801265	1	Stud (Cylinder Head)				
16	801220	1	Crankshaft				
20	801261	1	Seal-Oil				
22	801266	1	Screw (Crankcase And Cover Sump)				
22A	801271	1	Screw (Crankcase And Cover Sump)				
24	801234	1	Key-Flywheel				
25	801279	1	Piston ASM				
26	801280	1	Ring Set				
27	801275	1	Lock-Pin, Piston				
28	801276	1	Pin-Piston				
29	801277	1	Rod-Connecting				
32	801278	1	Screw				
48	801285	1	Short Block				
337	801254	1	Plug-Spark				
718	690959	1	Pin-Locating				
1036	801294	1	Label-Emissions				
1051	801274	1	Ring-Retaining				



Muffler, Carburetor, and Intake Manifold Assemblies Briggs and Stratton 084133-0196-E1

Ref	Part No.	Qty.	Description
50	801232	1	Manifold-Intake
51	801224	1	Gasket-Intake
54	801230	1	Screw (Intake Manifold)
97	801306	1	Shaft-Throttle
106	801317	1	Seat-Inlet
109	801307	1	Shaft-Choke
117	801310	1	Jet-Main
125	801233	1	Carburetor
133	801316	1	Float-Carburetor
142	801313	1	Nozzle-Carburetor
147	801308	1	Jet-Pilot
163	801227	1	Gasket-Cleaner, Air
200	801289	1	Blade-Governor
201	801225	1	Link-Vane, Air
209	801223	1	Spring-Governor
300	801250	1	Muffler
333	801268	1	Armature-Magneto
334	801267	1	Screw
426	801231	1	Screw
613	801251	1	Screw
654	801324	1	Nut (Intake Manifold) (Used Before Engine Code Date 05042600)
711	801229	1	Screw (Starter Motor)

Ref	Part No.	Qty.	Description
780	801228	1	Anchor-Spring
789	801253	1	Wire ASM
883	801252	1	Gasket-Exhaust
977	801312	1	Gasket Set-Carburetor
996	801226	1	Shield-Carburetor
1127	801318	1	Screw

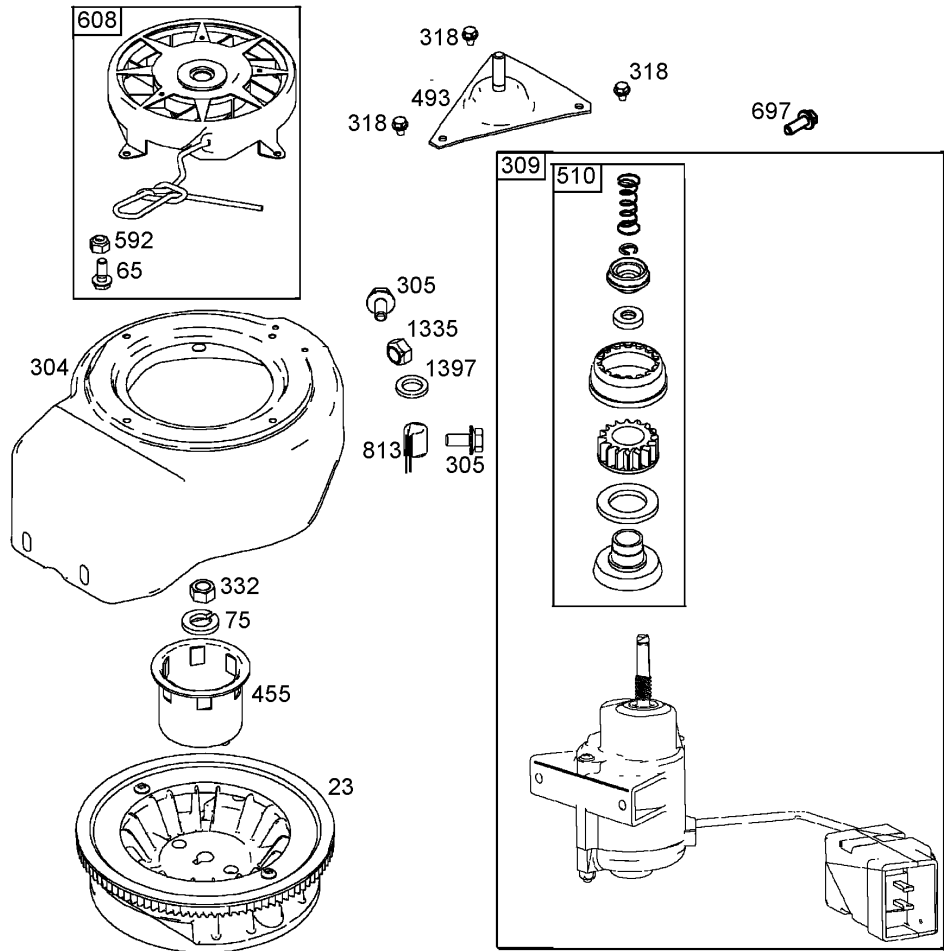

Flywheel, Blower Housing, and Starter Assemblies
Briggs and Stratton 084133-0196-E1

Ref	Part No.	Qty.	Description				
❶23	801246	1	Flywheel				
❷65	801243	1	Screw				
❸75	801237	1	Washer				
❹304	801236	1	Housing-Blower				
❺305	801239	1	Screw (Blower Housing)				
❻309	801247	1	Motor-Starter				
❼318	801241	1	Screw				
❽332	801238	1	Nut				
❾455	801235	1	Cup-Flywheel				
❿493	801240	1	Bracket-Mounting				
⓫510	801293	1	Drive-Starter				
⓬592	801244	1	Nut				
⓭608	801242	1	Starter-Rewind				
⓮697	801248	1	Screw				
⓯813	801249	1	Clamp				
⓰1335	801269	1	Nut				
⓱1397	801270	1	Washer				

NOTES

NOTES

NOTES

