



## Snow Commander® Snowthrower

Model No. 38603 - 250000001 and up.

### Parts Catalog

#### Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

#### Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

#### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

## Contents

| Description                             | Page    | Description                                       | Page     |
|-----------------------------------------|---------|---------------------------------------------------|----------|
| Upper Housing and Side Plate Assembly   | ..... 3 | Upper Handle Assembly                             | ..... 10 |
| Lower Housing Assembly                  | ..... 4 | Lower Handle Assembly                             | ..... 11 |
| Impeller Drive Assembly                 | ..... 5 | Crankcase, Crankshaft, Cylinder Head, and         |          |
| Chute Assembly                          | ..... 6 | Connecting Rod Assemblies Briggs and              | ..... 12 |
| Impeller Assembly                       | ..... 7 | Stratton 084333-0199-E1                           |          |
| Engine and Frame Assembly               | ..... 8 | Intake Manifold, Carburetor, and Muffler          |          |
| Upper Shroud and Control Panel Assembly | ..... 9 | Assemblies Briggs and Stratton 084333-0199-<br>E1 | ..... 13 |
|                                         |         | Flywheel, Blower Housing, and Starter             |          |
|                                         |         | Assemblies Briggs and Stratton 084333-0199-<br>E1 | ..... 14 |

 
## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

|                                               |                                                 |
|-----------------------------------------------|-------------------------------------------------|
| AR. .... as required                          | INC. .... incorporated                          |
| ASM. .... assembly                            | LH. .... left hand                              |
| BBC. .... blade brake clutch                  | NI. .... nylon insert                           |
| CARR. .... carriage                           | NPTF. .... national pipe thread fine            |
| DEG. .... degrees                             | PFH. .... phillips flat head                    |
| EXT. .... external                            | PPH. .... phillips pan head                     |
| FH. .... flat head                            | PPHTF. .... phillips pan head thread<br>forming |
| GA. .... gauge                                | PRH. .... phillips round head                   |
| HF. .... hex flange                           | PTH. .... phillips truss head                   |
| HH. .... hex head                             | PTO. .... power-take-off                        |
| HHF. .... hex head flange                     | RH. .... right hand                             |
| HHFTF. .... hex head flange thread forming    | ROPS. .... roll-over-protection-system          |
| HJ. .... hex jam                              | SFH. .... slotted fillister head                |
| HLH. .... hex lag head                        | SHH. .... slotted hex head                      |
| HOC. .... height-of-cut                       | SHWH. .... slotted hex washer head              |
| HSBH. .... hex socket button head             | SPH. .... slotted pan head                      |
| HSFH. .... hex socket flat head               | SQH. .... square head                           |
| HSH. .... hex socket head                     | SRH. .... slotted round head                    |
| HWH. .... hex washer head                     | STD. .... standard                              |
| HWHTF. .... hex washer head thread<br>forming | TAP. .... self tapping                          |
| HYD. .... hydraulic                           | TTH. .... torx truss head                       |

## Footnotes


- |   |                                                 |   |                         |
|---|-------------------------------------------------|---|-------------------------|
| ❶ | Not illustrated                                 | ❷ | Not serviced separately |
| ❸ | Obtain from your local Briggs & Stratton dealer |   |                         |

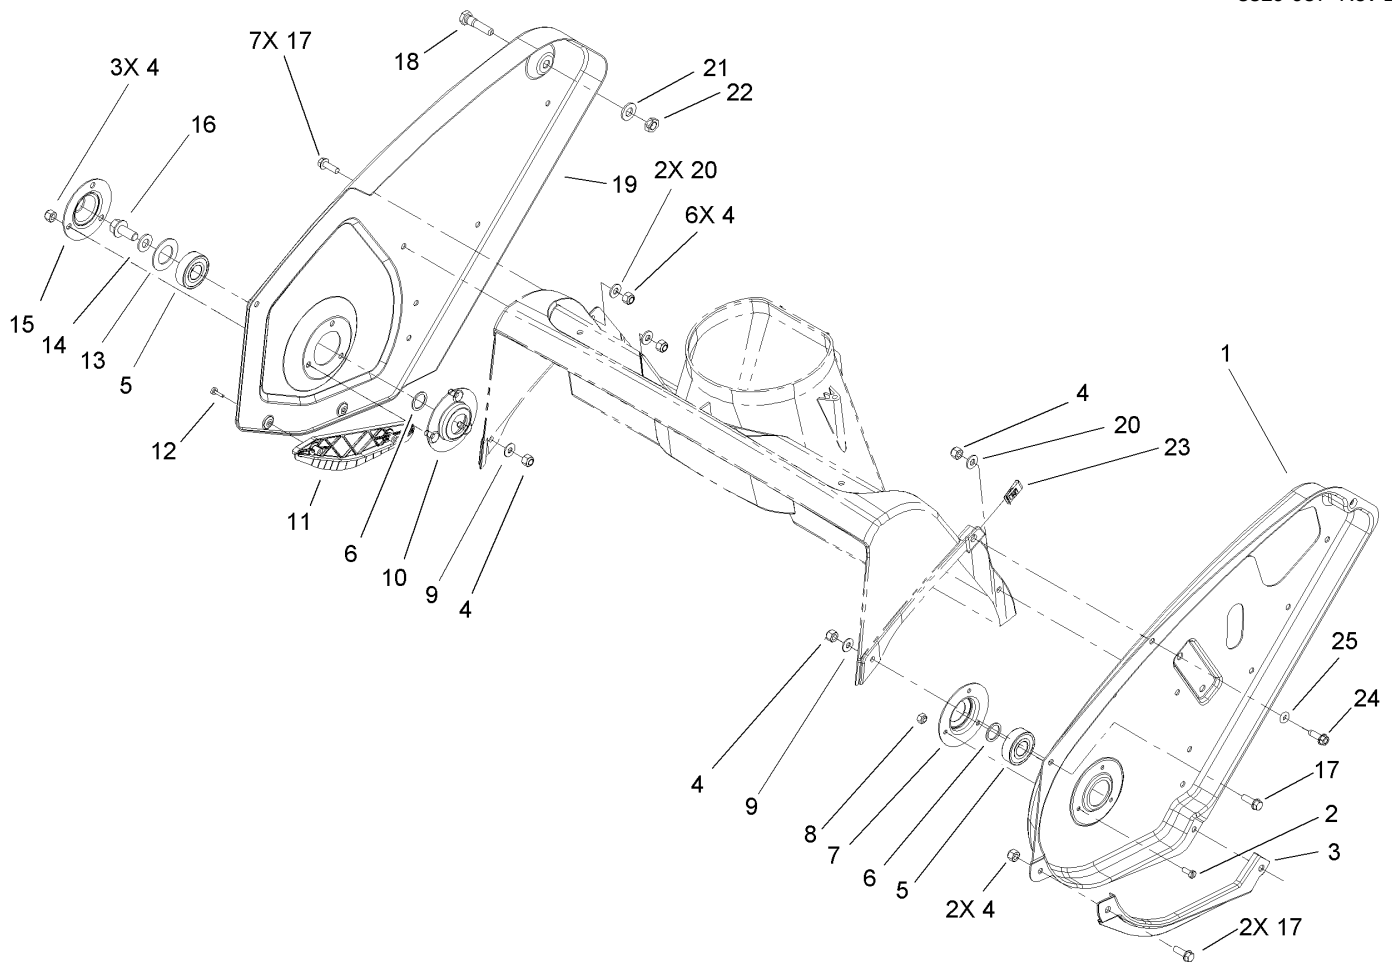

## Upper Housing and Side Plate Assembly

| Ref | Part No.    | Qty. | Description      |
|-----|-------------|------|------------------|
| 1   | 100-9865-03 | 1    | Sideplate-LH     |
| 2   | 32105-8     | 3    | Screw-SHH        |
| 3   | 104-0871    | 1    | Guard-Rotor, LH  |
| 4   | 3296-42     | 14   | Nut-Lock, NI     |
| 5   | 100-1048    | 2    | Bearing-Ball     |
| 6   | 52-7280     | 2    | Washer-Thrust    |
| 7   | 38-8620     | 1    | Flange-Bearing   |
| 8   | 3296-2      | 3    | Nut-Lock         |
| 9   | 3256-1      | 2    | Washer-Flat      |
| 10  | 52-9110     | 1    | Flange-Bearing   |
| 11  | 104-0872    | 1    | Guard-Rotor, RH  |
| 12  | 95-4234     | 2    | Screw-PPH        |
| 13  | 52-7270     | 1    | Washer-Rubber    |
| 14  | 3256-24     | 1    | Washer-Flat      |
| 15  | 52-7290-03  | 1    | Retainer-Bearing |
| 16  | 3234-25     | 1    | Screw-HHF        |
| 17  | 32105-15    | 10   | Screw            |
| 18  | 38-8211     | 1    | Pin-Rotor        |
| 19  | 100-9870-03 | 1    | Sideplate-RH     |
| 20  | 3256-22     | 3    | Washer-Flat      |
| 21  | 3256-24     | 1    | Washer-Flat      |
| 22  | 32152-8     | 1    | Nut-Lock, Cone   |
| 23  | 702552      | 1    | Nut-Speed        |
| 24  | 49-2040     | 1    | Screw-HWHTF      |

 
| Ref | Part No. | Qty. | Description |
|-----|----------|------|-------------|
| 25  | 104-8657 | 1    | O-Ring      |

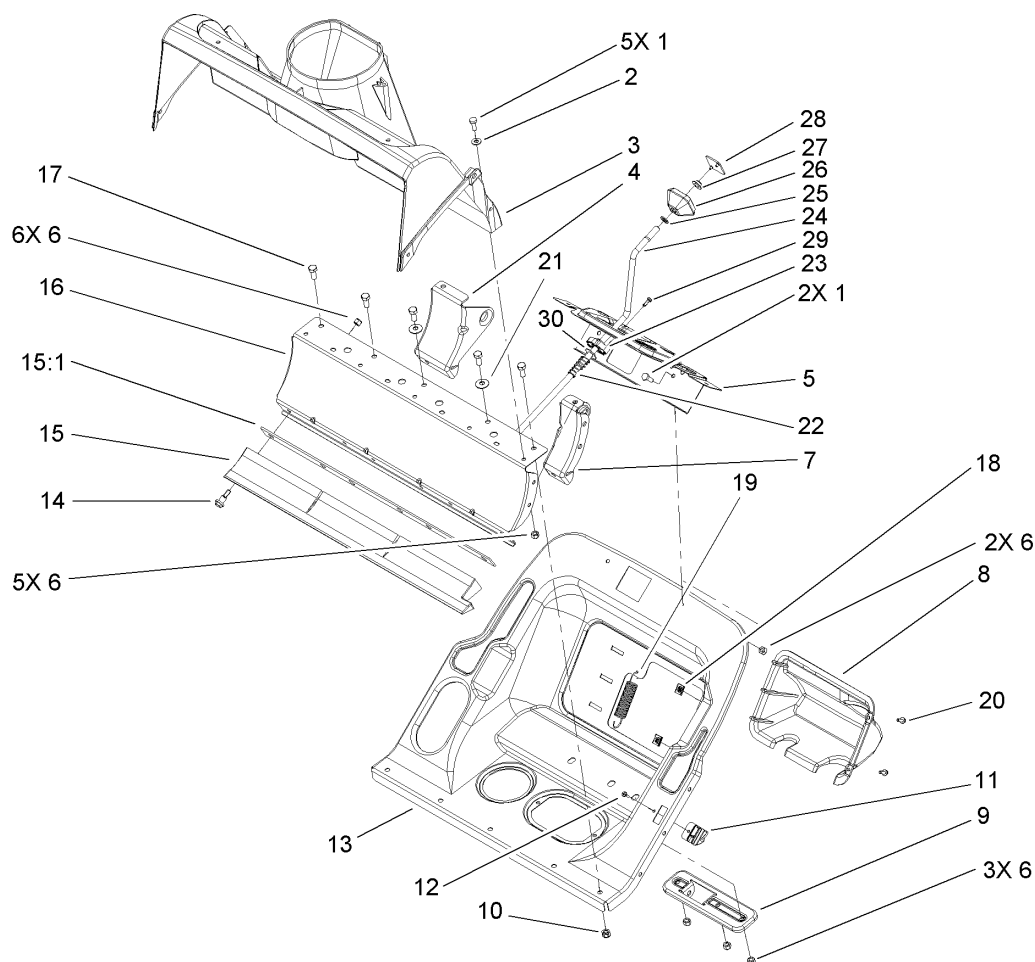

## Lower Housing Assembly

| Ref  | Part No.    | Qty. | Description               |
|------|-------------|------|---------------------------|
| 1    | 321-4       | 7    | Screw-HH                  |
| 2    | 3256-22     | 5    | Washer-Flat               |
| 3    | 100-9894    | 1    | Housing-Rotor, Upper      |
| 4    | 104-0865    | 1    | Bracket-Pivot, RH         |
| 5    | 104-0887-03 | 1    | Control Panel Support ASM |
| 6    | 3296-42     | 16   | Nut-Lock, NI              |
| 7    | 104-0864    | 1    | Bracket-Pivot, LH         |
| 8    | 104-8663    | 1    | Cover-Carb Ce             |
| 9    | 100-9897    | 1    | Bracket-Pivot, Center     |
| 10   | 3296-29     | 10   | Nut-Lock, NI              |
| 11   | 104-0880    | 1    | Guide-Cable, Clutch       |
| 12   | 95-4234     | 1    | Screw-PPH                 |
| 13   | 105-3514-03 | 1    | Housing-Lower             |
| 14   | 104-0858    | 6    | Bolt-Shoulder             |
| 15   | 104-4138    | 1    | Scraper ASM               |
| 15:1 | 104-0879    | 1    | Foam-Scraper              |
| 16   | 100-9893-03 | 1    | Housing-Rotor, Lower      |
| 17   | 322-3       | 5    | Screw-HH                  |
| 18   | 100-9889    | 2    | Nut-Speed                 |
| 19   | 104-4130    | 1    | Spring-Extension, Pivot   |
| 20   | 32144-112   | 2    | Screw-HWH                 |
| 21   | 3290-456    | 2    | Washer-Belleville         |
| 22   | 104-8664    | 1    | Spring-Compression        |
| 23   | 104-8659    | 1    | Bushing-Chute Crank       |

 
| Ref | Part No. | Qty. | Description         |
|-----|----------|------|---------------------|
| 24  | 104-8658 | 1    | Rod-Chute Crank     |
| 25  | 104-8665 | 1    | Washer-Chute Crank  |
| 26  | 62-1320  | 1    | Knob-Control, Chute |
| 27  | 3290-320 | 1    | Retainer-Push On    |
| 28  | 62-1520  | 1    | Cover-Knob          |
| 29  | 94-6961  | 2    | Screw               |
| 30  | 105-3540 | 1    | Washer              |

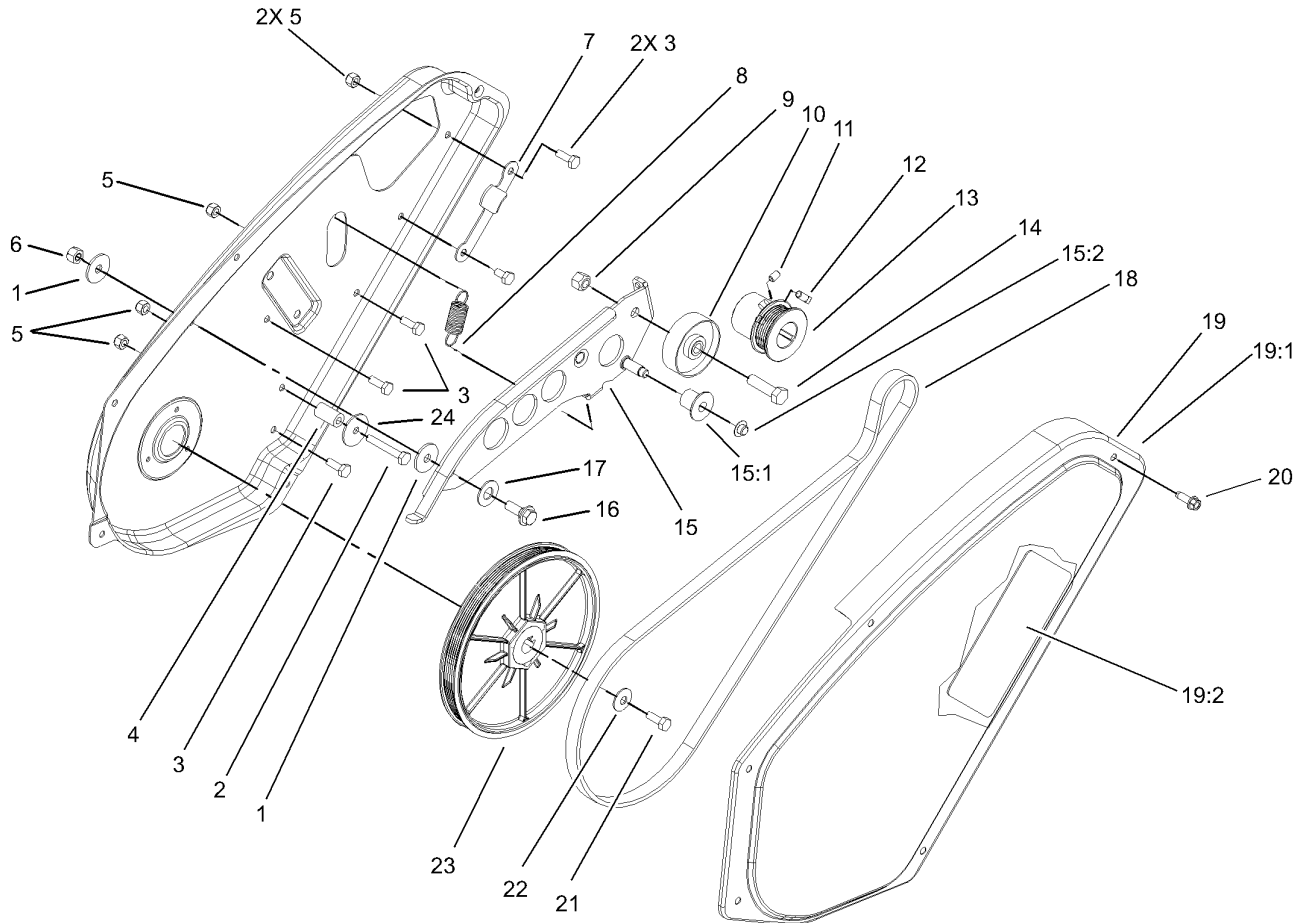

## Impeller Drive Assembly

| Ref  | Part No. | Qty. | Description            |
|------|----------|------|------------------------|
| 1    | 5-4460   | 2    | Washer-Pivot           |
| 2    | 321-10   | 1    | Screw-HH               |
| 3    | 321-4    | 5    | Screw-HH               |
| 4    | 55-9530  | 1    | Sleeve-Guide, Belt     |
| 5    | 3296-42  | 5    | Nut-Lock, NI           |
| 6    | 3296-29  | 1    | Nut-Lock, NI           |
| 7    | 104-0868 | 1    | Belt-Guide             |
| 8    | 104-0869 | 1    | Spring-Brake           |
| 9    | 32152-2  | 1    | Nut-Lock, Cone         |
| 10   | 55-9290  | 1    | Pulley-Idler           |
| 11   | 3245-41  | 1    | Screw-HSH              |
| 12   | 3241-7   | 1    | Screw-SQH              |
| 13   | 104-4108 | 1    | Pulley                 |
| 14   | 323-29   | 1    | Screw-HH               |
| 15   | 104-4113 | 1    | Brake-Arm              |
| 15:1 | 104-4114 | 1    | Roller-Brake           |
| 15:2 | 32112-11 | 1    | Nut-Push               |
| 16   | 27-0410  | 1    | Screw-Shoulder         |
| 17   | 25-5640  | 1    | Washer                 |
| 18   | 104-0851 | 1    | Belt-Drive             |
| 19   | 104-8669 | 1    | Cover-Drive W/Decal Ce |
| 19:1 | 94-2561  | 1    | Decal-Hot              |
| 19:2 | 104-4125 | 1    | Decal-Belt Routing     |
| 20   | 49-2040  | 1    | Screw-HWHTF            |

 
| Ref | Part No. | Qty. | Description       |
|-----|----------|------|-------------------|
| 21  | 321-30   | 1    | Screw-HH          |
| 22  | 3290-456 | 1    | Washer-Belleville |
| 23  | 100-9871 | 1    | Pulley-Rotor      |
| 24  | 3256-55  | 1    | Washer-Flat       |

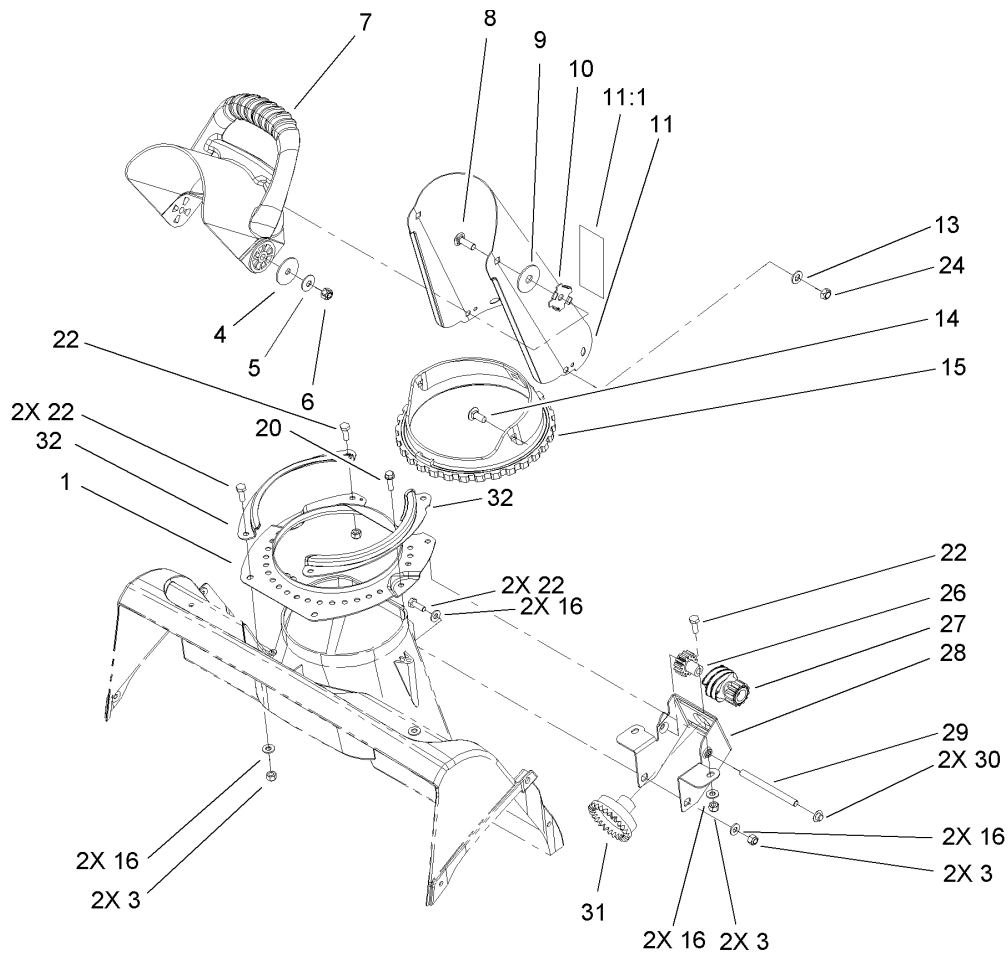

Chute Assembly


| Ref  | Part No.    | Qty. | Description              | Ref | Part No.   | Qty. | Description          |
|------|-------------|------|--------------------------|-----|------------|------|----------------------|
| 1    | 55-8921-03  | 1    | Ring-Support, Chute      | 32  | 55-8910-03 | 2    | Ring-Retainer, Chute |
| 3    | 3296-42     | 6    | Nut-Lock, NI             |     |            |      |                      |
| 4    | 3256-68     | 2    | Washer-Flat              |     |            |      |                      |
| 5    | 3290-456    | 2    | Washer-Belleville        |     |            |      |                      |
| 6    | 3296-29     | 2    | Nut-Lock, NI             |     |            |      |                      |
| 7    | 104-0882    | 1    | Chute-Deflector          |     |            |      |                      |
| 8    | 3230-22     | 2    | Screw-CARR               |     |            |      |                      |
| 9    | 20-4320     | 2    | Washer-Rubber            |     |            |      |                      |
| 10   | 55-8950     | 2    | Plate-Friction           |     |            |      |                      |
| 11   | 94-2791     | 1    | Chute ASM W/Decal        |     |            |      |                      |
| 11:1 | 94-2901     | 1    | Decal-Danger             |     |            |      |                      |
| 13   | 3256-70     | 3    | Washer-Flat              |     |            |      |                      |
| 14   | 100-5486    | 3    | Screw-Truss Hd, Phillips |     |            |      |                      |
| 15   | 55-8720     | 1    | Ring-Gear, Chute         |     |            |      |                      |
| 16   | 3256-22     | 8    | Washer-Flat              |     |            |      |                      |
| 20   | 46-8091     | 2    | Screw-HWH                |     |            |      |                      |
| 22   | 321-4       | 6    | Screw-HH                 |     |            |      |                      |
| 24   | 3296-47     | 3    | Nut-Lock, NI             |     |            |      |                      |
| 26   | 55-8750     | 1    | Gear-Spur, Spacer        |     |            |      |                      |
| 27   | 105-3512    | 1    | Gear-Spur/Worm           |     |            |      |                      |
| 28   | 104-8660-03 | 1    | Bracket-Chute Gears      |     |            |      |                      |
| 29   | 55-9150     | 1    | Shaft-Gear, Worm         |     |            |      |                      |
| 30   | 32112-11    | 2    | Nut-Push                 |     |            |      |                      |
| 31   | 55-8740     | 1    | Gear-Face                |     |            |      |                      |



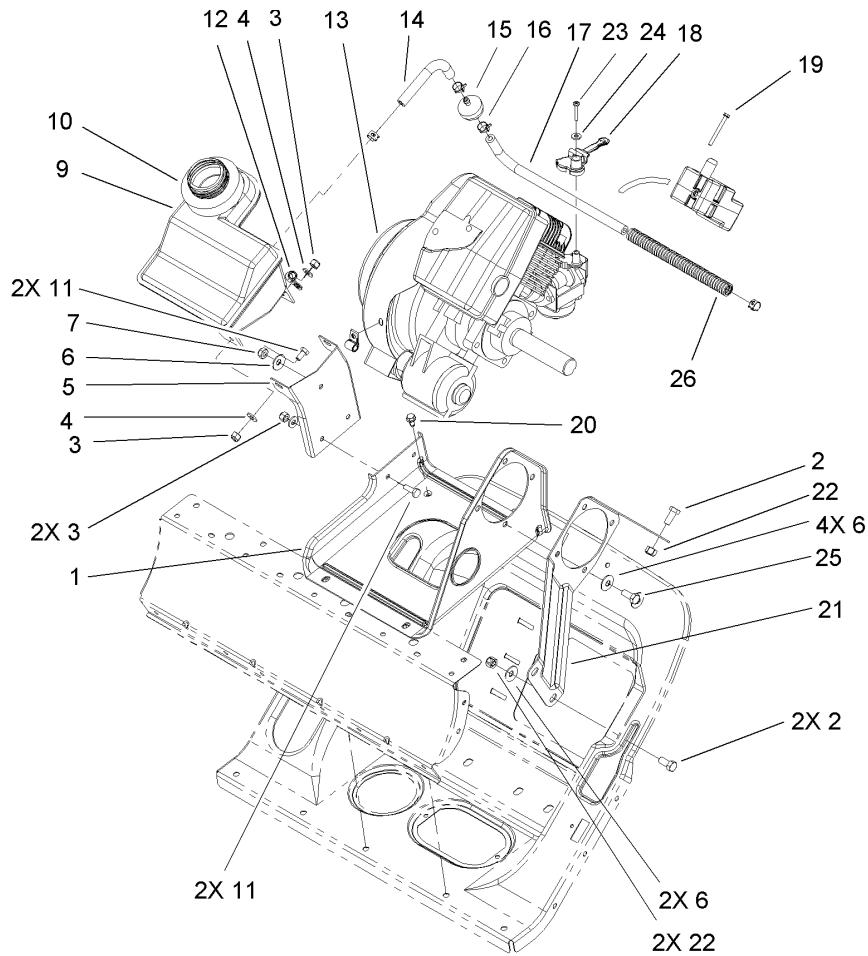 


Engine and Frame Assembly

| Ref | Part No.    | Qty. | Description                                | Ref | Part No. | Qty. | Description |
|-----|-------------|------|--------------------------------------------|-----|----------|------|-------------|
| 1   | 105-3515-03 | 1    | Support-Engine                             | 25  | 322-4    | 4    | Screw-HH    |
| 2   | 322-3       | 3    | Screw-HH                                   | 26  | 104-4149 | 1    | Conduit     |
| 3   | 3296-42     | 4    | Nut-Lock, NI                               |     |          |      |             |
| 4   | 3256-22     | 2    | Washer-Flat                                |     |          |      |             |
| 5   | 100-9899-03 | 1    | Support-Recoil                             |     |          |      |             |
| 6   | 3290-456    | 7    | Washer-Belleville                          |     |          |      |             |
| 7   | 3296-42     | 1    | Nut-Lock, NI                               |     |          |      |             |
| 9   | 105-8953    | 1    | Tank-Gas                                   |     |          |      |             |
| 10  | 55-9310     | 1    | Seal-Foam                                  |     |          |      |             |
| 11  | 321-4       | 4    | Screw-HH                                   |     |          |      |             |
| 12  | 2412-91     | 1    | Clamp                                      |     |          |      |             |
| 13  |             | 1    | Engine-Briggs And Stratton, 084333-0199-E1 |     |          |      |             |
| 14  | 94-9932     | 1    | Hose-Fuel                                  |     |          |      |             |
| 15  | 56-6360     | 1    | Filter-Fuel                                |     |          |      |             |
| 16  | 2412-98     | 4    | Clamp                                      |     |          |      |             |
| 17  | 49-2482     | 1    | Line-Fuel                                  |     |          |      |             |
| 18  | 104-0878    | 1    | Lever-Choke                                |     |          |      |             |
| 19  | 32144-27    | 3    | Screw                                      |     |          |      |             |
| 20  | 32144-44    | 3    | Screw-HWH                                  |     |          |      |             |
| 21  | 104-0875-03 | 1    | Brace-Engine                               |     |          |      |             |
| 22  | 3296-29     | 3    | Nut-Lock, NI                               |     |          |      |             |
| 23  | 32144-97    | 1    | Screw-PPH, Plastite                        |     |          |      |             |
| 24  | 3256-14     | 1    | Washer-Flat                                |     |          |      |             |

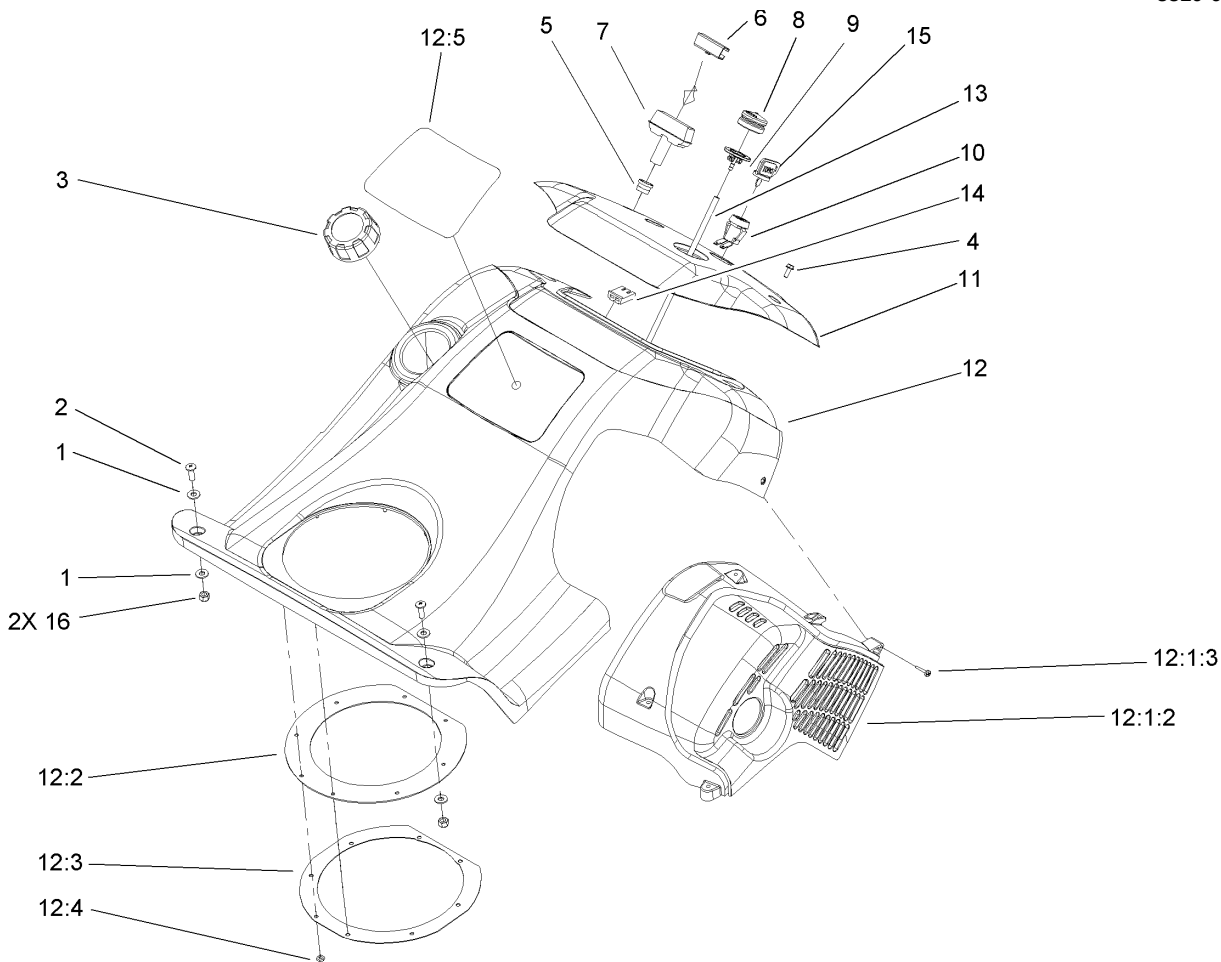 

### Upper Shroud and Control Panel Assembly

 
| Ref    | Part No.   | Qty. | Description                  |  |  |  |  |
|--------|------------|------|------------------------------|--|--|--|--|
| 1      | 3256-22    | 4    | Washer-Flat                  |  |  |  |  |
| 2      | 3250-32    | 2    | Screw-PPH                    |  |  |  |  |
| 3      | 104-4133   | 1    | Gas Cap ASM                  |  |  |  |  |
| 4      | 32144-112  | 2    | Screw-HWH                    |  |  |  |  |
| 5      | 55-9410    | 1    | Guide-Rope, Starter          |  |  |  |  |
| 6      | 612824     | 1    | Clip-Starter                 |  |  |  |  |
| 7      | 612825     | 1    | Handle-Start                 |  |  |  |  |
| 8      | 66-7460    | 1    | Bulb-Primer                  |  |  |  |  |
| 9      | 44-2750    | 1    | Body-Primer                  |  |  |  |  |
| 10     | 40-5940    | 1    | Switch                       |  |  |  |  |
| 11     | 104-8661   | 1    | Panel-Control Es,Ce          |  |  |  |  |
| 12     | 106-4736   | 1    | Upper Shroud ASM             |  |  |  |  |
| 12:1:2 | 104-0860   | 1    | Shield-Heat                  |  |  |  |  |
| 12:1:3 | 94-4496    | 5    | Screw-PPH                    |  |  |  |  |
| 12:2   | 105-3543   | 1    | Seal-Chute                   |  |  |  |  |
| 12:3   | 55-9540-03 | 1    | Retainer-Seal, Chute         |  |  |  |  |
| 12:4   | 3290-474   | 8    | Palnut                       |  |  |  |  |
| 12:5   | 106-4718   | 1    | Decal-Shroud, Electric Start |  |  |  |  |
| 13     | 95-1861    | 1    | Hose-Primer                  |  |  |  |  |
| 14     | 218-532    | 1    | Connector-Body               |  |  |  |  |
| 15     | 63-8360    | 1    | Key-Ignition                 |  |  |  |  |
| 16     | 3296-42    | 2    | Nut-Lock, NI                 |  |  |  |  |
| 199    | 250-4      | 1    | Tie-Cable                    |  |  |  |  |

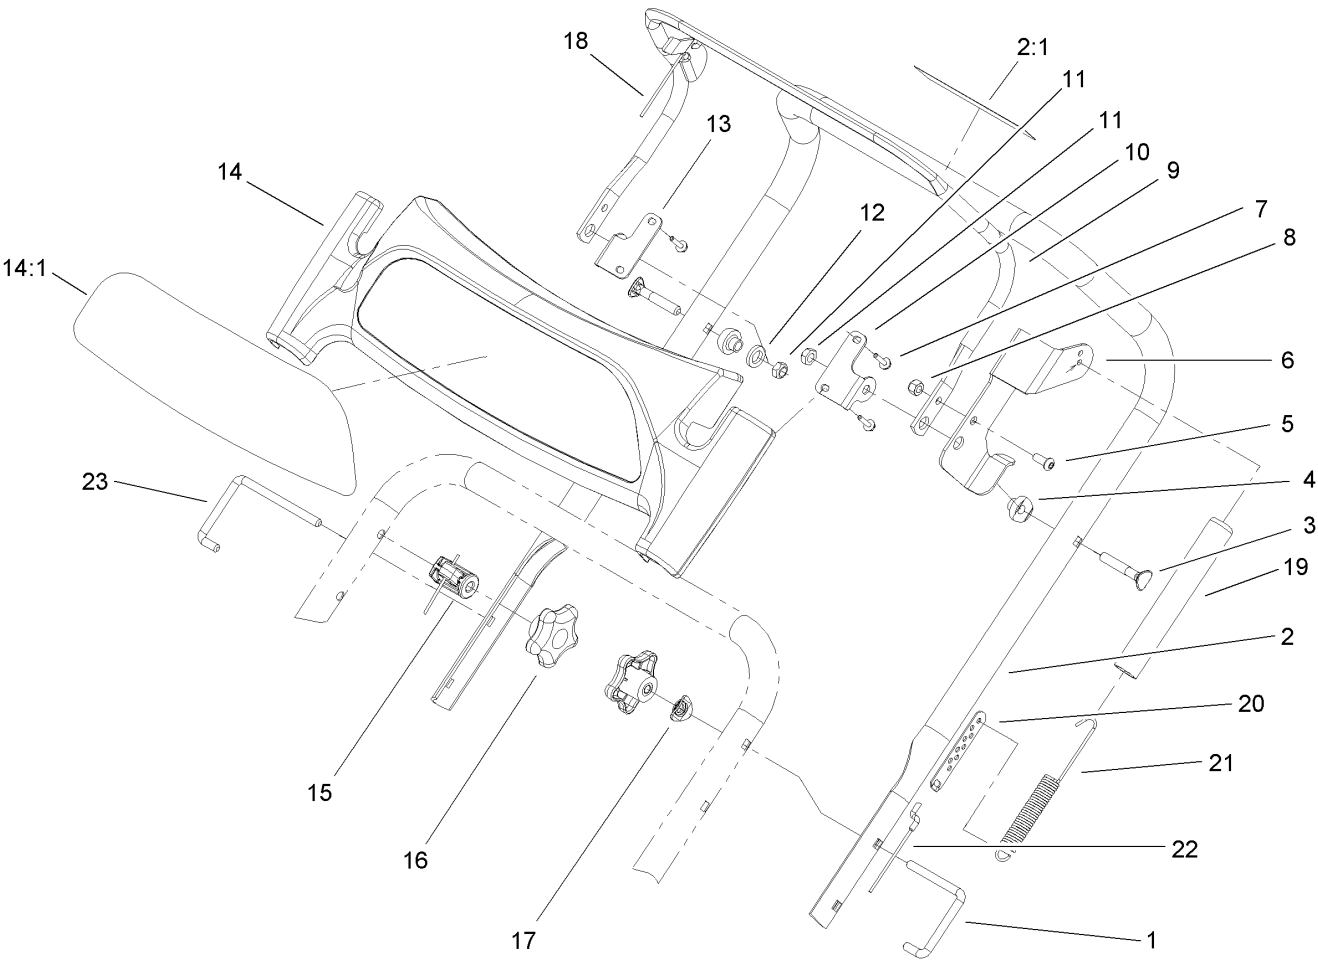

Upper Handle Assembly

| Ref  | Part No.    | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 98-2266     | 1    | Lock-Handle              |
| 2    | 105-1991    | 1    | Handle-Upper W/Decal     |
| 2:1  | 94-2577     | 1    | Decal-Rotor Drive        |
| 3    | 92-2260     | 2    | Screw-Handle             |
| 4    | 55-9340     | 2    | Spacer-Bar, Control      |
| 5    | 3274-31     | 1    | Screw-HSBH               |
| 6    | 100-9882-03 | 1    | Arm-Clutch, Handle       |
| 7    | 98-1375     | 4    | Screw-HWH                |
| 8    | 3296-42     | 1    | Nut-Lock, NI             |
| 9    | 104-4104-03 | 1    | Bar-Control              |
| 10   | 104-4100    | 1    | Bracket-Panel, LH        |
| 11   | 3296-47     | 2    | Nut-Lock, NI             |
| 12   | 55-9670     | 1    | Washer                   |
| 13   | 104-4101    | 1    | Bracket-Panel, RH        |
| 14   | 106-4737    | 1    | Display Handle Panel ASM |
| 14:1 | 106-4716    | 1    | Decal-Handle Display     |
| 15   | 100-9868    | 1    | Guide-Pivot Cable        |
| 16   | 106-4161    | 2    | Knob-Handle              |
| 17   | 107-3844    | 1    | Washer                   |
| 18   | 104-0895    | 1    | Cable-Pivot              |
| 19   | 104-4145    | 1    | Cover-Spring             |
| 20   | 71-5330     | 1    | Adjuster-Cable, Clutch   |
| 21   | 104-0894    | 1    | Spring-Cable             |
| 22   | 104-0896    | 1    | Cable-Clutch             |






| Ref | Part No. | Qty. | Description     |
|-----|----------|------|-----------------|
| 23  | 104-4126 | 1    | Lock-Handle, RH |

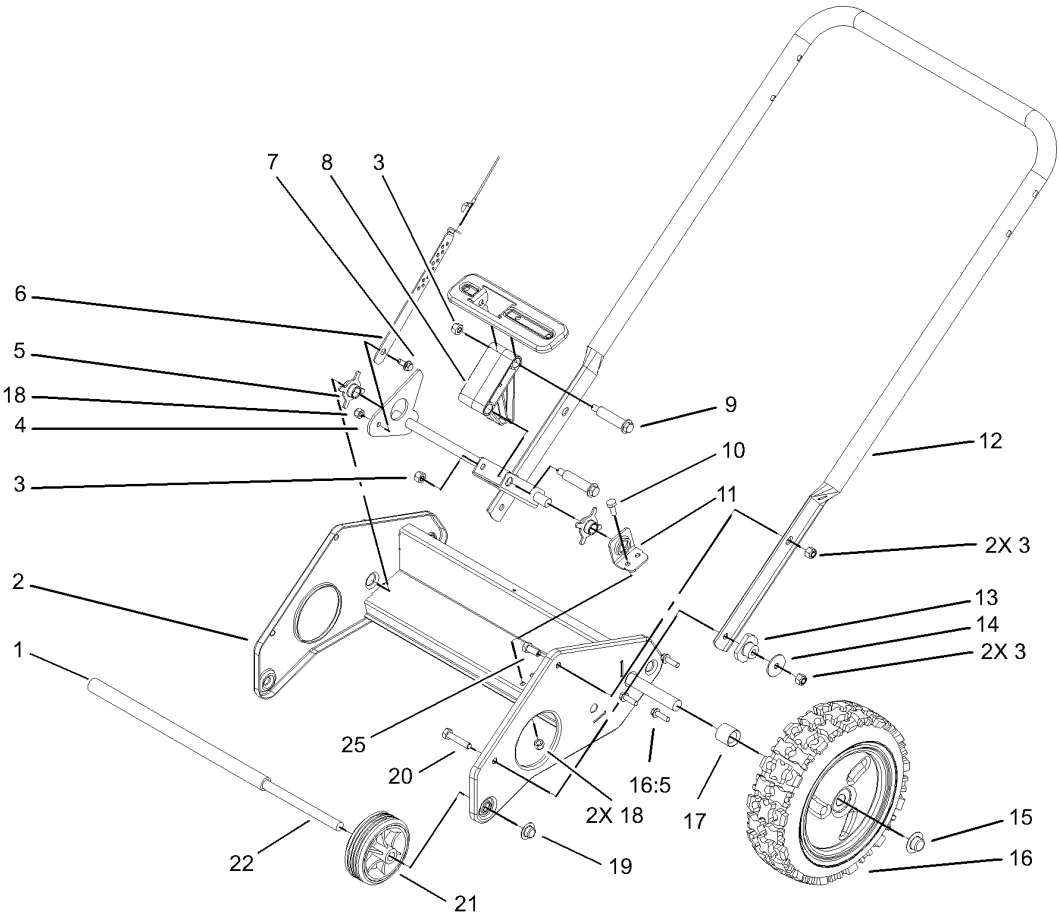 

Lower Handle Assembly

| Ref  | Part No.    | Qty. | Description           |  |  |  |  |
|------|-------------|------|-----------------------|--|--|--|--|
| 1    | 100-9878    | 1    | Spacer-Plastic        |  |  |  |  |
| 2    | 100-9887-03 | 1    | Wheelframe ASM        |  |  |  |  |
| 3    | 3296-29     | 6    | Nut-Lock, NI          |  |  |  |  |
| 4    | 104-0853    | 1    | Pivot ASM             |  |  |  |  |
| 5    | 104-0855    | 2    | Bushing-Rod, Pivot    |  |  |  |  |
| 6    | 104-0899    | 1    | Adjuster-Cable, Pivot |  |  |  |  |
| 7    | 104-4102    | 1    | Screw-Shoulder        |  |  |  |  |
| 8    | 100-9896    | 1    | Block-Pivot           |  |  |  |  |
| 9    | 100-9880    | 2    | Bolt-Shoulder         |  |  |  |  |
| 10   | 321-4       | 2    | Screw-HH              |  |  |  |  |
| 11   | 100-9879    | 1    | Support-Rod, Pivot    |  |  |  |  |
| 12   | 100-9890-03 | 1    | Handle-Lower          |  |  |  |  |
| 13   | 100-9883    | 2    | Bushing-Pivot         |  |  |  |  |
| 14   | 3256-57     | 2    | Washer-Flat           |  |  |  |  |
| 15   | 104-4111    | 2    | Nut-Push              |  |  |  |  |
| 16   | 105-3549    | 2    | Wheel ASM             |  |  |  |  |
| 16:5 | 46-8091     | 3    | Screw-HWH             |  |  |  |  |
| 17   | 104-0892    | 2    | Spacer-Axle, Rear     |  |  |  |  |
| 18   | 3296-42     | 3    | Nut-Lock, NI          |  |  |  |  |
| 19   | 32112-14    | 2    | Nut-Push              |  |  |  |  |
| 20   | 322-7       | 2    | Screw-HH              |  |  |  |  |
| 21   | 100-9864    | 2    | Tire And Wheel ASM    |  |  |  |  |
| 22   | 100-9875    | 1    | Axle-Front            |  |  |  |  |
| 25   | 322-3       | 2    | Screw-HH              |  |  |  |  |

     
1036 EMISSIONS LABEL  
48 Short Block

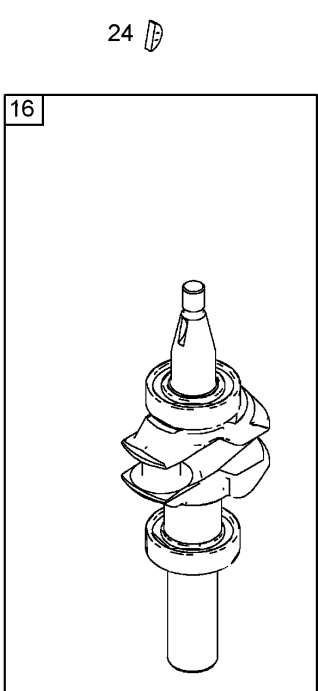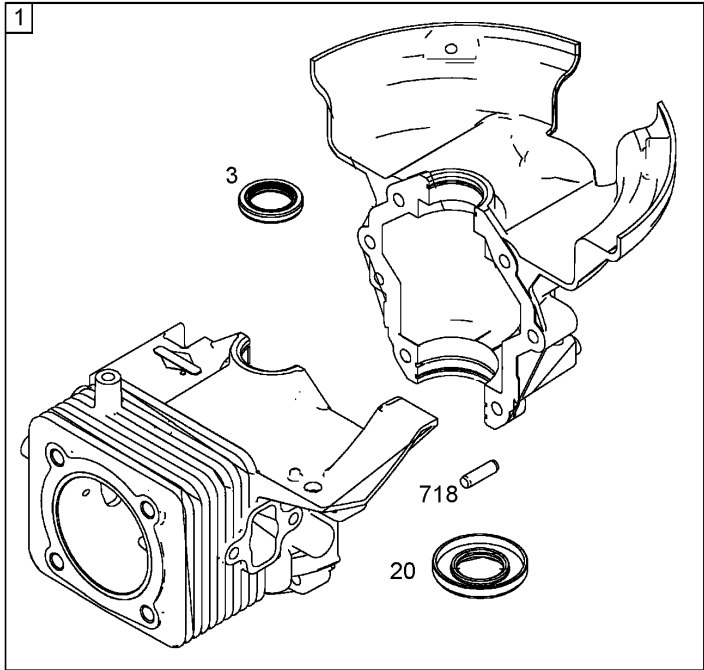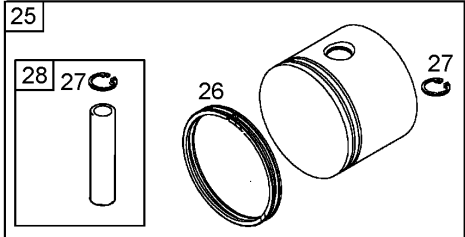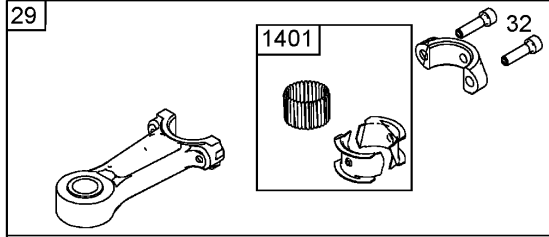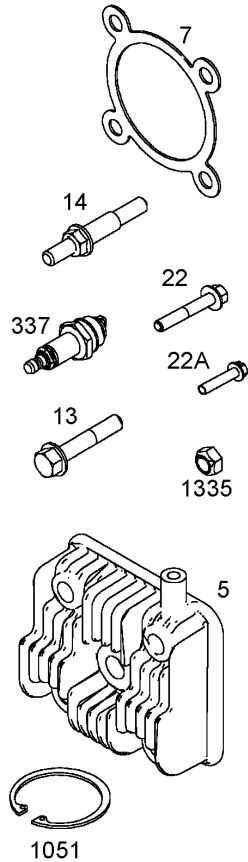

# Crankcase, Crankshaft, Cylinder Head, and Connecting Rod Assemblies Briggs and Stratton 084333-0199-E1

| Ref  | Part No. | Qty. | Description                      |
|------|----------|------|----------------------------------|
| 1    | 801321   | 1    | Cylinder ASM                     |
| 3    | 801262   | 1    | Seal-Oil                         |
| 5    | 801283   | 1    | Head-Cylinder                    |
| 7    | 801263   | 1    | Gasket-Head, Cylinder            |
| 13   | 801264   | 1    | Screw (Cylinder Head)            |
| 14   | 801265   | 1    | Stud (Cylinder Head)             |
| 16   | 801221   | 1    | Crankshaft                       |
| 20   | 801261   | 1    | Seal-Oil                         |
| 22   | 801266   | 1    | Screw (Crankcase Cover And Sump) |
| 22A  | 801271   | 1    | Screw (Crankcase Cover And Sump) |
| 24   | 801234   | 1    | Key-Flywheel                     |
| 25   | 801281   | 1    | Piston ASM                       |
| 26   | 801282   | 1    | Ring Set                         |
| 27   | 801275   | 1    | Lock-Pin, Piston                 |
| 28   | 801276   | 1    | Pin-Piston                       |
| 29   | 801277   | 1    | Rod-Connecting                   |
| 32   | 801278   | 1    | Screw                            |
| 48   | 801287   | 1    | Short Block                      |
| 337  | 801254   | 1    | Plug-Spark                       |
| 718  | 690959   | 1    | Pin-Locating                     |
| 1036 | 801295   | 1    | Label-Emissions                  |
| 1051 | 801274   | 1    | Ring-Retaining                   |

 
| Ref  | Part No. | Qty. | Description          |
|------|----------|------|----------------------|
| 1335 | 801269   | 1    | Nut (Blower Housing) |
| 1401 | 801290   | 1    | Roller-Strip         |

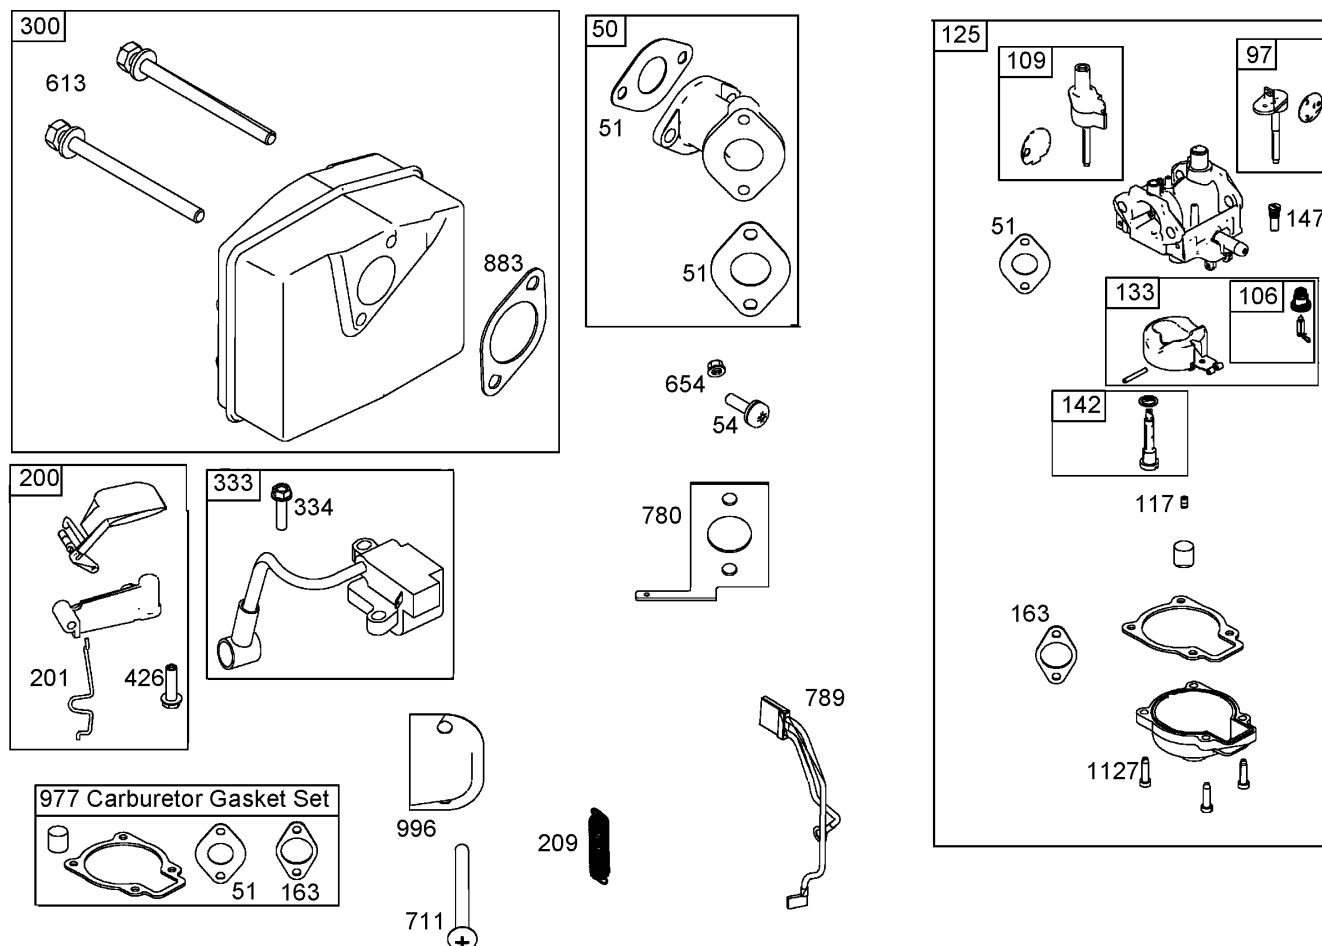

## Intake Manifold, Carburetor, and Muffler Assemblies Briggs and Stratton 084333-0199-E1

| Ref | Part No. | Qty. | Description                                                   |
|-----|----------|------|---------------------------------------------------------------|
| 50  | 801232   | 1    | Manifold-Intake                                               |
| 51  | 801224   | 1    | Gasket-Intake                                                 |
| 54  | 801230   | 1    | Screw (Intake Manifold)                                       |
| 97  | 801306   | 1    | Shaft-Throttle                                                |
| 106 | 801317   | 1    | Seat-Inlet                                                    |
| 109 | 801307   | 1    | Shaft-Choke                                                   |
| 117 | 801311   | 1    | Jet-Main                                                      |
| 125 | 801255   | 1    | Carburetor                                                    |
| 133 | 801316   | 1    | Float-Carburetor                                              |
| 142 | 801313   | 1    | Nozzle-Carburetor                                             |
| 147 | 801309   | 1    | Jet-Pilot                                                     |
| 163 | 801227   | 1    | Gasket-Cleaner, Air                                           |
| 200 | 801289   | 1    | Blade-Governor                                                |
| 201 | 801225   | 1    | Link-Vane, Air                                                |
| 209 | 801223   | 1    | Spring-Governor                                               |
| 300 | 801250   | 1    | Muffler                                                       |
| 333 | 801268   | 1    | Armature-Magneto                                              |
| 334 | 801267   | 1    | Screw                                                         |
| 426 | 801231   | 1    | Screw                                                         |
| 613 | 801251   | 1    | Screw                                                         |
| 654 | 801324   | 1    | Nut (Intake Manifold) (Used Before Engine Code Date 05042600) |
| 711 | 801229   | 1    | Screw                                                         |
 
| Ref  | Part No. | Qty. | Description           |
|------|----------|------|-----------------------|
| 780  | 801228   | 1    | Anchor-Spring         |
| 789  | 801253   | 1    | Wire ASM              |
| 883  | 801252   | 1    | Gasket-Exhaust        |
| 977  | 801312   | 1    | Gasket Set-Carburetor |
| 996  | 801226   | 1    | Shield-Carburetor     |
| 1127 | 801318   | 1    | Screw                 |

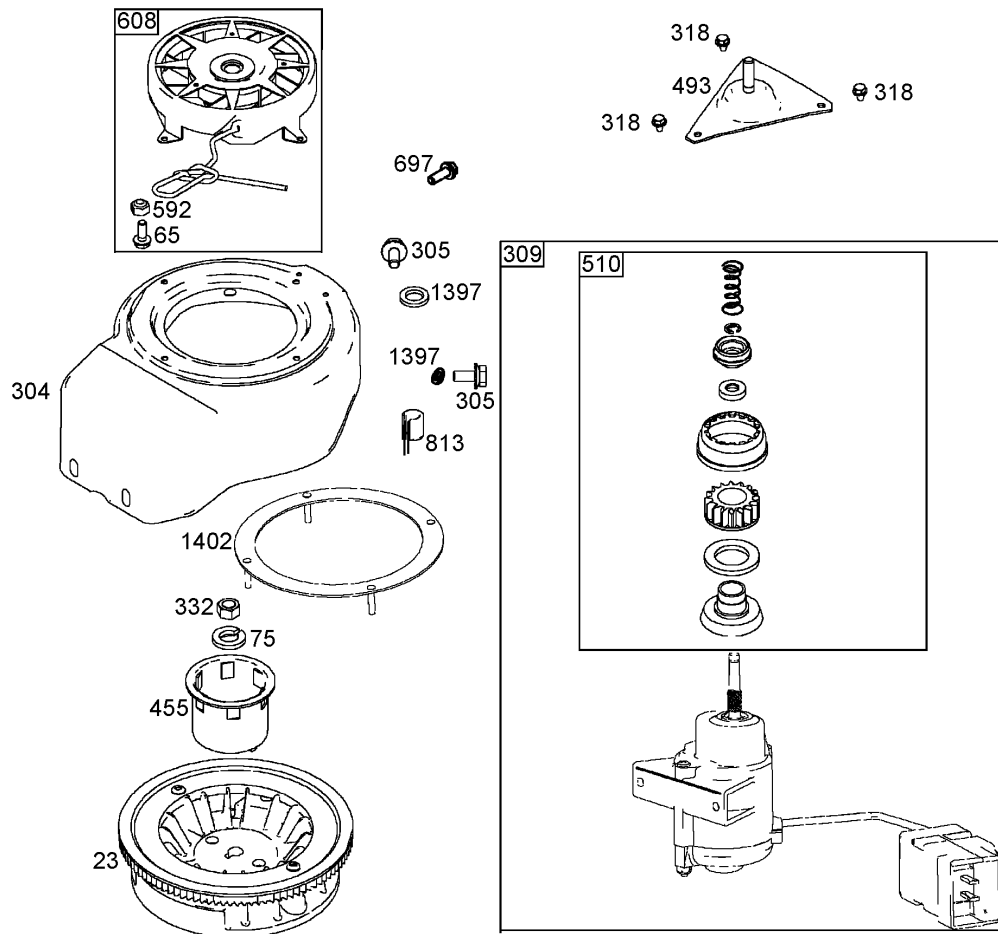

# Flywheel, Blower Housing, and Starter Assemblies

## Briggs and Stratton 084333-0199-E1

| Ref   | Part No. | Qty. | Description             |
|-------|----------|------|-------------------------|
| ③23   | 801246   | 1    | Flywheel                |
| ③65   | 801243   | 1    | Screw                   |
| ③75   | 801237   | 1    | Washer                  |
| ③304  | 801236   | 1    | Housing-Blower          |
| ③305  | 801239   | 1    | Screw (Blower Housing)  |
| ③309  | 801247   | 1    | Motor-Starter           |
| ③318  | 801241   | 1    | Screw                   |
| ③332  | 801238   | 1    | Nut                     |
| ③455  | 801235   | 1    | Cup-Flywheel            |
| ③493  | 801240   | 1    | Bracket-Mounting        |
| ③510  | 801293   | 1    | Drive-Starter           |
| ③592  | 801244   | 1    | Nut                     |
| ③608  | 801242   | 1    | Starter-Rewind          |
| ③697  | 801248   | 1    | Screw (Starter Motor)   |
| ③813  | 801249   | 1    | Clamp                   |
| ③1397 | 801270   | 1    | Washer (Blower Housing) |
| ③1402 | 801272   | 1    | Ring-Support            |

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |

## NOTES

