



Power Max 726TE Snowthrower

Model No. 38610 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Auger and Housing Assembly	 3	Chute Control Assembly	 11
Auger Gearcase Assembly No. 106-4580	 4	2 Cycle Engine and Frame Assembly	 12
Chute Assembly	 5	Crankcase, Crankshaft, Cylinder Head, and Connecting Rod Assemblies Briggs and Stratton 084333-0197-E1	 13
Frame Assembly	 6	Intake Manifold, Carburetor, and Muffler Assemblies Briggs and Stratton 084333-0197-E1	 14
Chain Drive Assembly	 8	Flywheel, Blower Housing, and Starter Assemblies Briggs and Stratton 084333-0197-E1	 15
Handle Control Assembly	 9		
Handle and Control Assembly	 10		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power-take-off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll-over-protection-system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HSBH. hex socket button head	SPH. slotted pan head
HSFH. hex socket flat head	SQH. square head
HSH. hex socket head	SRH. slotted round head
HWH. hex washer head	STD. standard
HWHTF. hex washer head thread forming	TAP. self tapping
HYD. hydraulic	TTH. torx truss head

Footnotes


- | | | | |
|---|---|---|-------------------------|
| ❶ | Not illustrated | ❷ | Not serviced separately |
| ❸ | Obtain from your local Briggs & Stratton dealer | | |

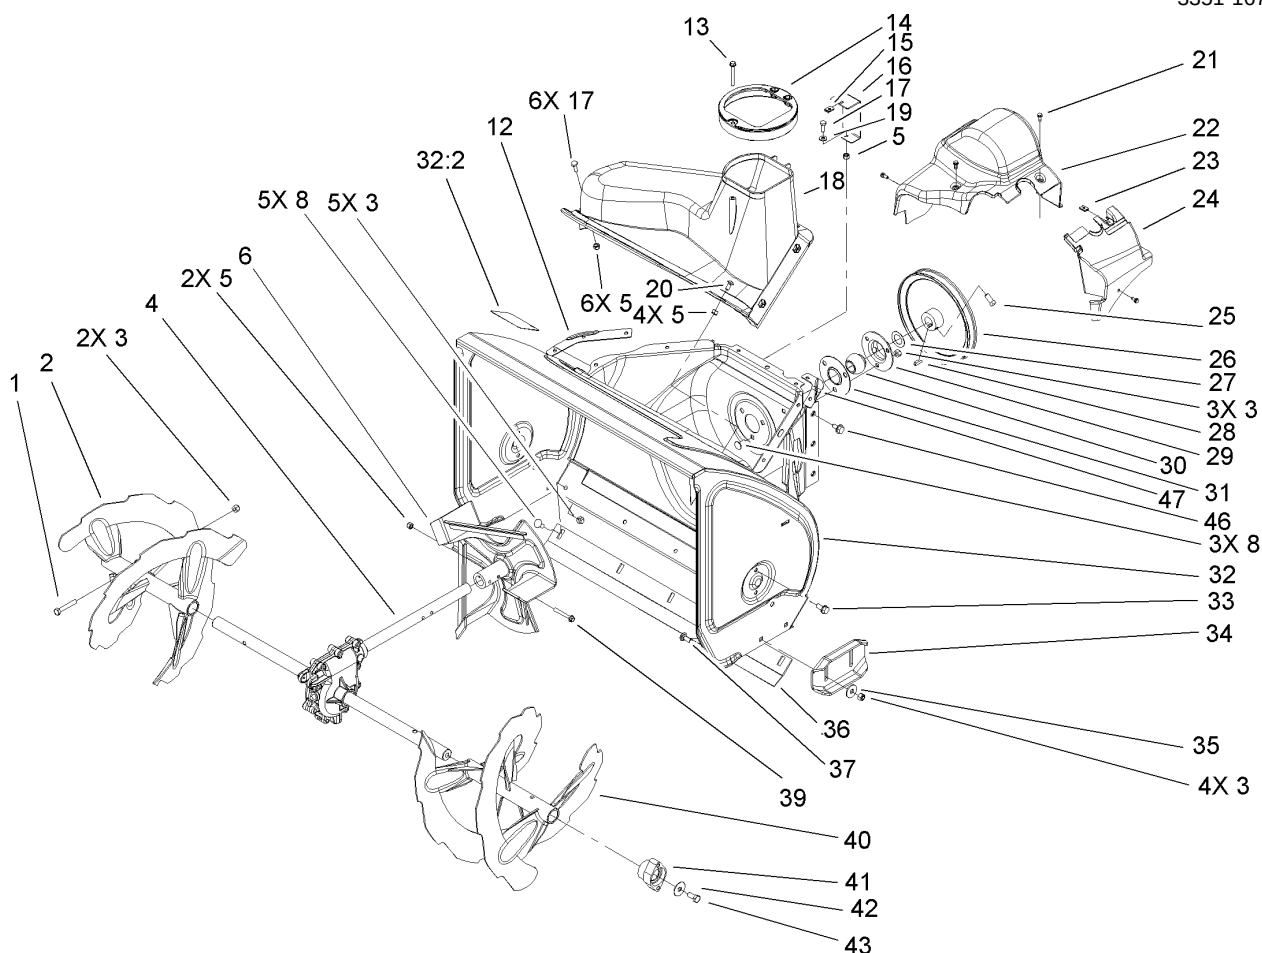

Auger and Housing Assembly


Ref	Part No.	Qty.	Description
1	322-10	2	Screw-HH
2	106-7289-03	1	RH Auger ASM
3	3296-29	14	Nut-Lock, NI
4	106-4580	1	26In Auger Gearcase ASM
5	3296-42	13	Nut-Lock, NI
6	106-4576-03	1	Impeller ASM
8	3230-23	8	Screw-CARR
12	107-1017-03	1	Seal-Flange, Cover
13	107-3003	1	Screw-Plastite
14	107-3006	1	Guide-Chute
15	107-1013	1	Nut-Speed, U-Type
16	107-1014-03	1	Bracket-Cover, Clip Nut
17	321-4	7	Screw-HH
18	108-0017	1	Cover
19	3256-22	1	Washer-Flat
20	3229-1	4	Screw-CARR
21	32144-112	4	Screw-HWH
22	107-1001	1	Cover-Belt
23	701493	1	Nut-Speed
24	107-1016	1	Cover-Extension, Belt
25	3242-4	2	Screw-Set, SQH
26	62-1300	1	Pulley-Impeller
27	252-80	1	Washer-Thrust
28	3257-23	1	Key-Woodruff

Ref	Part No.	Qty.	Description
29	26-6110	1	Flange-Cup, Bearing
30	63-3450	1	Bearing-Ball
31	26-6120	1	Flange-Cup, Bearing
32	107-3821	1	26 Inch Auger Housing ASM
32:2	53-7670	1	Decal-Warning, Auger
33	32144-70	4	Screw-HH
34	106-4588-01	2	Skid
35	52-2861	4	Washer
36	105-9976-01	1	Scraper-Fixed
37	3230-16	4	Screw-CARR
39	321-44	2	Screw-HHF
40	106-7299-03	1	LH Auger ASM
41	106-4570	2	Auger-Bearing
42	3-0750	2	Washer
43	323-4	2	Screw-HH
46	32144-14	6	Screw-HWH
47	108-0039-03	1	Seal
99	281-1	1	Plug-Pipe, SQH

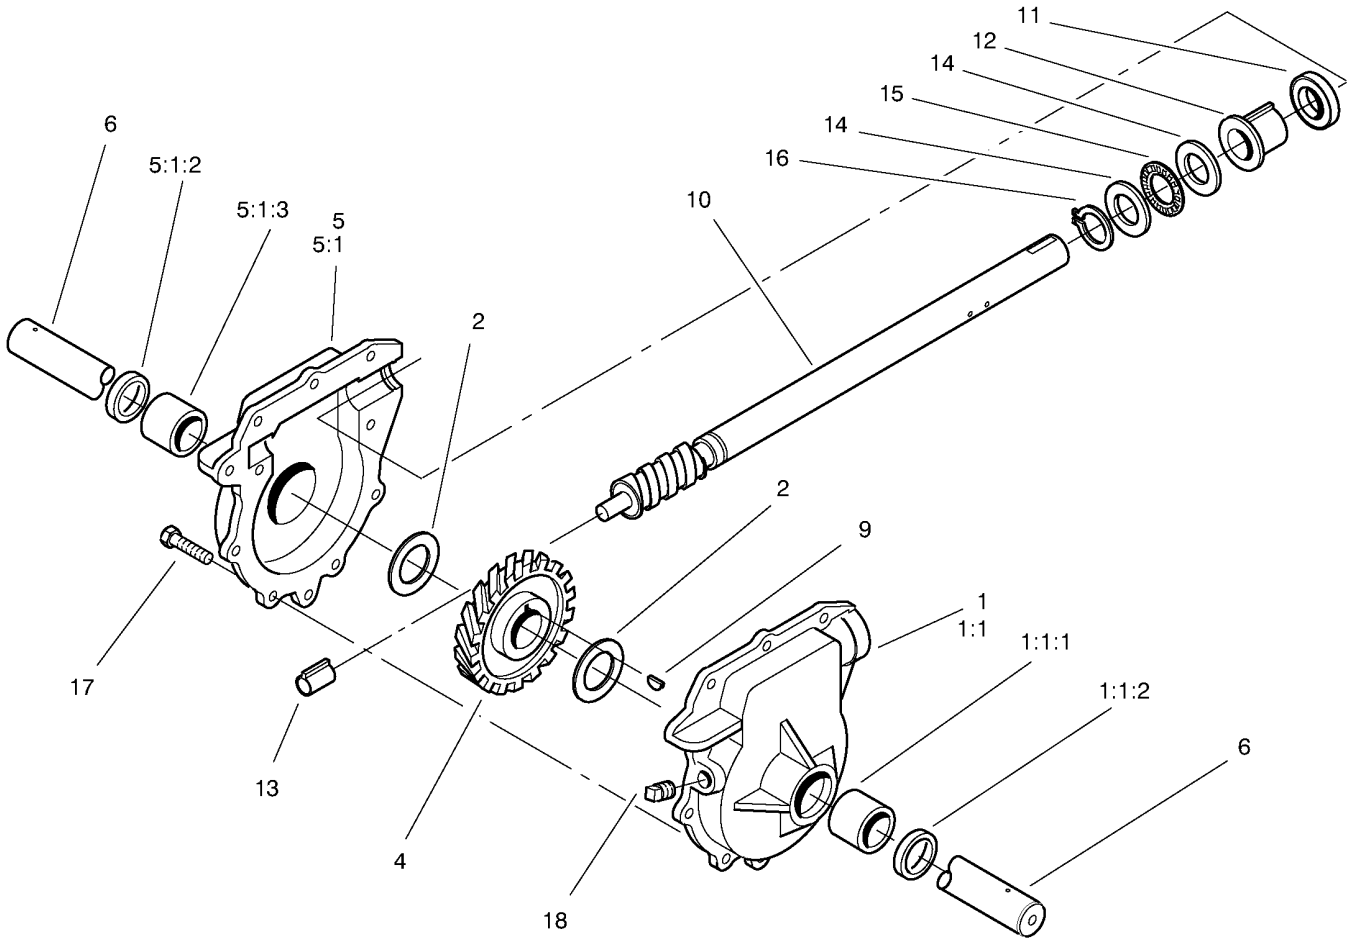 


Auger Gearcase Assembly No. 106-4580

Ref	Part No.	Qty.	Description				
1	74-1570	1	LH Auger Gearcase ASM				
2	1:1	1	Gearcase-Auger, LH				
1:1:1	256-237	1	Bushing				
1:1:2	7-0045	1	Seal-Oil				
2	252-71	2	Washer-Thrust				
4	62-0120	1	Gear-Helical				
5	74-1580	1	RH Auger Gearcase ASM				
5	5:1	1	Gearcase-Auger, RH				
5:1:2	7-0045	1	Seal-Oil				
5:1:3	256-237	1	Bushing				
6	106-4579	1	Shaft-Auger				
9	3257-10	1	Key-Woodruff				
10	66-7811	1	Shaft-Impeller				
11	253-149	1	Seal-Oil				
12	37-6560	1	Bushing-Input				
13	62-1150	1	Bushing-Worm				
14	252-78	2	Bearing-Thrust				
15	252-76	1	Bearing-Thrust				
16	32151-33	1	Ring-Retaining, EXT				
17	32144-110	9	Screw-HWH				
18	281-1	1	Plug-Pipe, SQH				

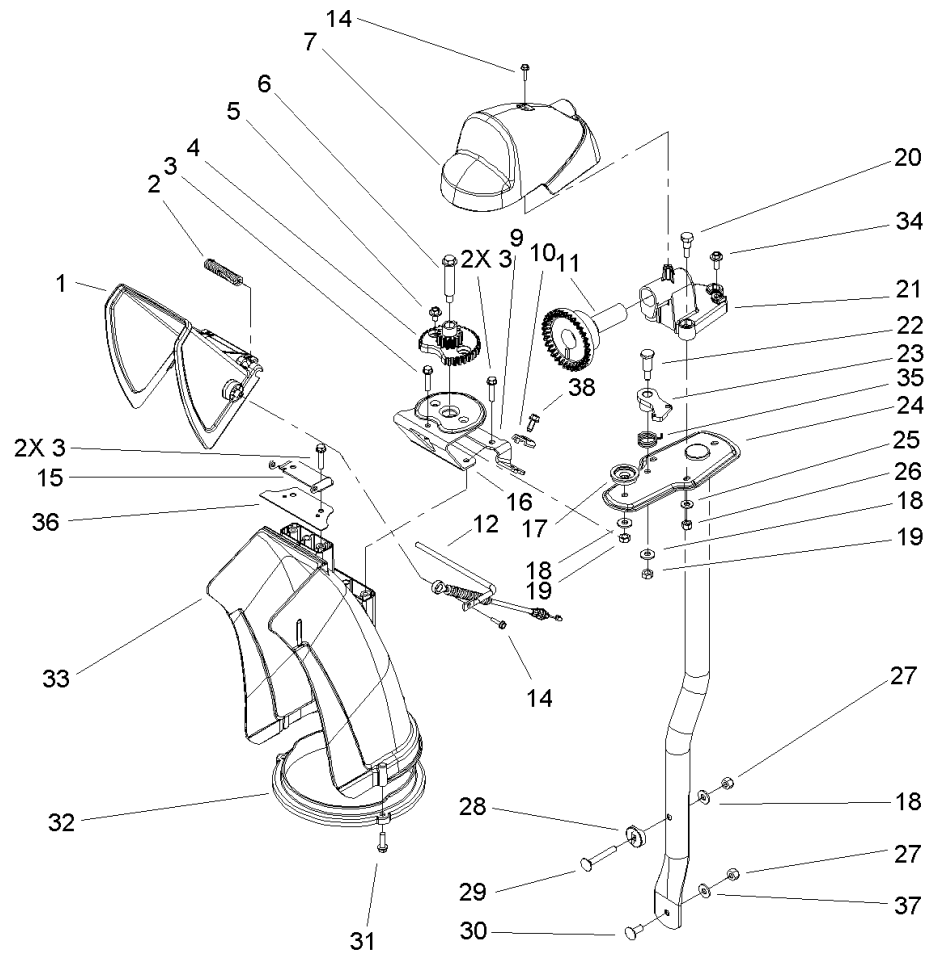 

Chute Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-4587	1	Deflector-Chute	27	3296-29	2	Nut-Lock, NI
2	106-4594	1	Spring-Torsion	28	106-7260	1	Washer-Curved
3	46-8092	5	Screw-Plastite	29	3230-5	1	Screw-CARR
4	106-4472	1	Gear-Chute	30	3230-23	1	Screw-CARR
5	46-6810	2	Screw And Washer ASM	31	46-8091	3	Screw-HWH
6	100-9880	1	Bolt-Shoulder	32	105-9991	1	Ring-Chute
7	106-4585	1	Cover-Gear, Chute	33	106-4440	1	Chute-Discharge
9	106-7296	1	Bracket-Cable, Clamp	34	46-6811	1	Screw-HWH
10	106-7297	1	Clamp-Cable	35	106-4475	1	Spring-Torsion
11	106-4471	1	Gear-Face	36	107-1019	1	Seal-Chute
12	107-1021	1	Rod-Deflector	37	3290-456	1	Washer-Belleville
14	98-1375	2	Screw-HWH	38	32144-10	1	Screw-HWH
15	106-7266	1	Bracket-Deflector				
16	106-4582-03	1	Bracket-Support, Chute				
17	106-4422	1	Spacer-Chute				
18	3256-2	3	Washer-Flat				
19	3296-47	2	Nut-Lock, NI				
20	106-7276	3	Screw-Shoulder				
21	106-7257	1	Mount-Gear, Face				
22	63-2650	1	Screw-Shoulder				
23	106-4476	1	Latch-Chute				
24	106-7253-03	1	Tube-Support				
25	3256-22	3	Washer-Flat				
26	3296-42	3	Nut-Lock, NI				

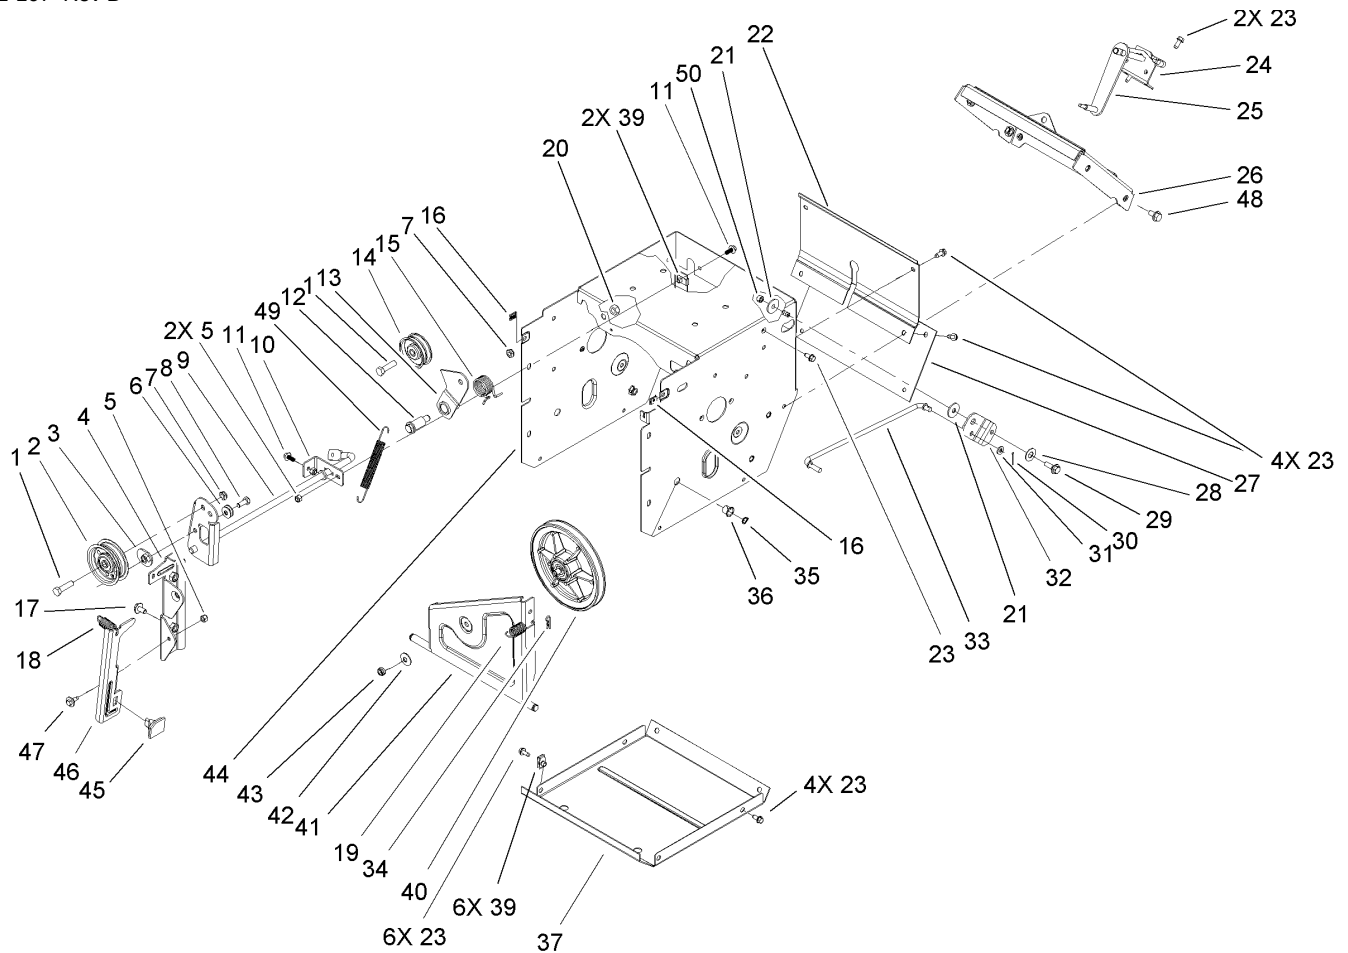 

Frame Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	323-8	2	Screw-HH	25	106-7268	1	Lever-Control, Traction
2	92-7104	1	Pulley-Idler	26	108-0026-01	1	Shift Plate ASM
3	107-1047	1	Nut	27	106-7345-01	1	Cover-Lower
4	107-1039	1	Bracket-Idler, Impeller	28	25-5640	1	Washer
5	3296-42	3	Nut-Lock, NI	29	27-0410	1	Screw-Shoulder
6	3290-456	1	Washer-Belleville	30	3272-4	1	Pin-Cotter
7	3296-59	2	Nut-Lock, NI	31	3256-23	1	Washer-Flat
8	322-3	1	Screw-HH	32	107-1011	1	Bellcrank-Drive
9	107-3838-03	1	Impeller Clutch ASM	33	106-4467	1	Link-Control, Speed
10	106-7341	1	Bracket-Rear, Clutch	34	3290-307	1	Pin-Hair
11	99-6810	2	Screw-HH	35	32151-61	2	Ring-Retaining
12	107-1022	1	Bolt-Shoulder	36	256-257	2	Bushing-Nyliner
13	108-0011	1	Arm-Idler, Traction	37	106-7330-01	1	Pan-Bottom
14	3-4244	1	Pulley-Idler	39	107069	8	Clip
15	108-0010	1	Spring-Torsion	40	108-0031	1	Traction Pulley ASM
16	107-1013	2	Nut-Speed, U-Type	41	108-0032	1	Pulley Pivot ASM
17	3234-7	2	Screw-HHF	42	3290-340	1	Washer-Belleville
18	107-1045	1	Spring-Extension	43	3296-5	1	Nut-Lock
19	107-1003	1	Spring-Extension	44	108-0019-01	1	Traction Frame ASM
20	3296-76	1	Nut-Lock, NI	45	66-8060	1	Pad-Brake
21	5-4460	2	Washer-Pivot	46	107-1000	1	Arm-Brake
22	106-4556-01	1	Cover-Upper	47	92-9698	1	Screw-Shoulder
23	32144-10	17	Screw-HWH	48	32144-14	4	Screw-HWH
24	108-0036	1	Bracket-Rod, Shift	49	108-2976	1	Spring-Extension

 7

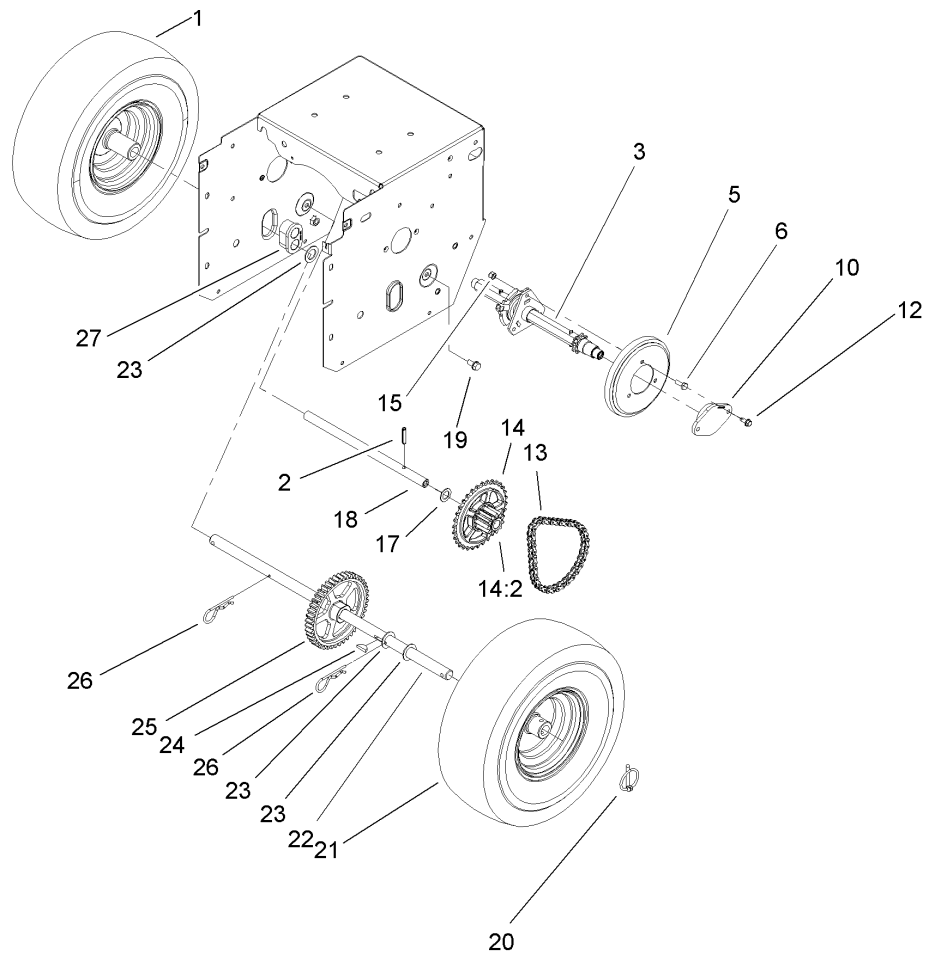

Chain Drive Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	107-3043	1	Rim-Tire	27	106-4558	2	Bearing-Axle
1	107-3042	1	Tire				
2	32121-9	1	Pin-Roll, Slotted				
3	108-2988	1	Hexshaft-ASM				
5	106-4480	1	Wheel-Friction				
6	321-4	3	Screw-HH				
10	108-2981	2	Retainer-Bearing				
12	32144-10	4	Screw-HWH				
13	108-0016	1	Chain-Roller				
13	2710-6	1	Link-Connecting				
14	108-0013	1	Sprocket ASM				
14:2	108-2974	2	Bushing-Flange				
15	3296-42	3	Nut-Lock, NI				
17	107-3041	1	Washer-Flat				
18	106-4592	1	Shaft-Intermediate				
19	32144-14	2	Screw-HWH				
20	107-3039	2	Klik Pin ASM				
21	107-3042	1	Tire				
21	107-3043	1	Rim-Tire				
22	106-4449	1	Shaft-Axle				
23	3-8664	3	Washer-Thrust				
24	3257-7	1	Key-Woodruff				
25	106-4572	1	Gear-Axle, 44 Tooth				
26	3290-343	2	Pin-Hair				

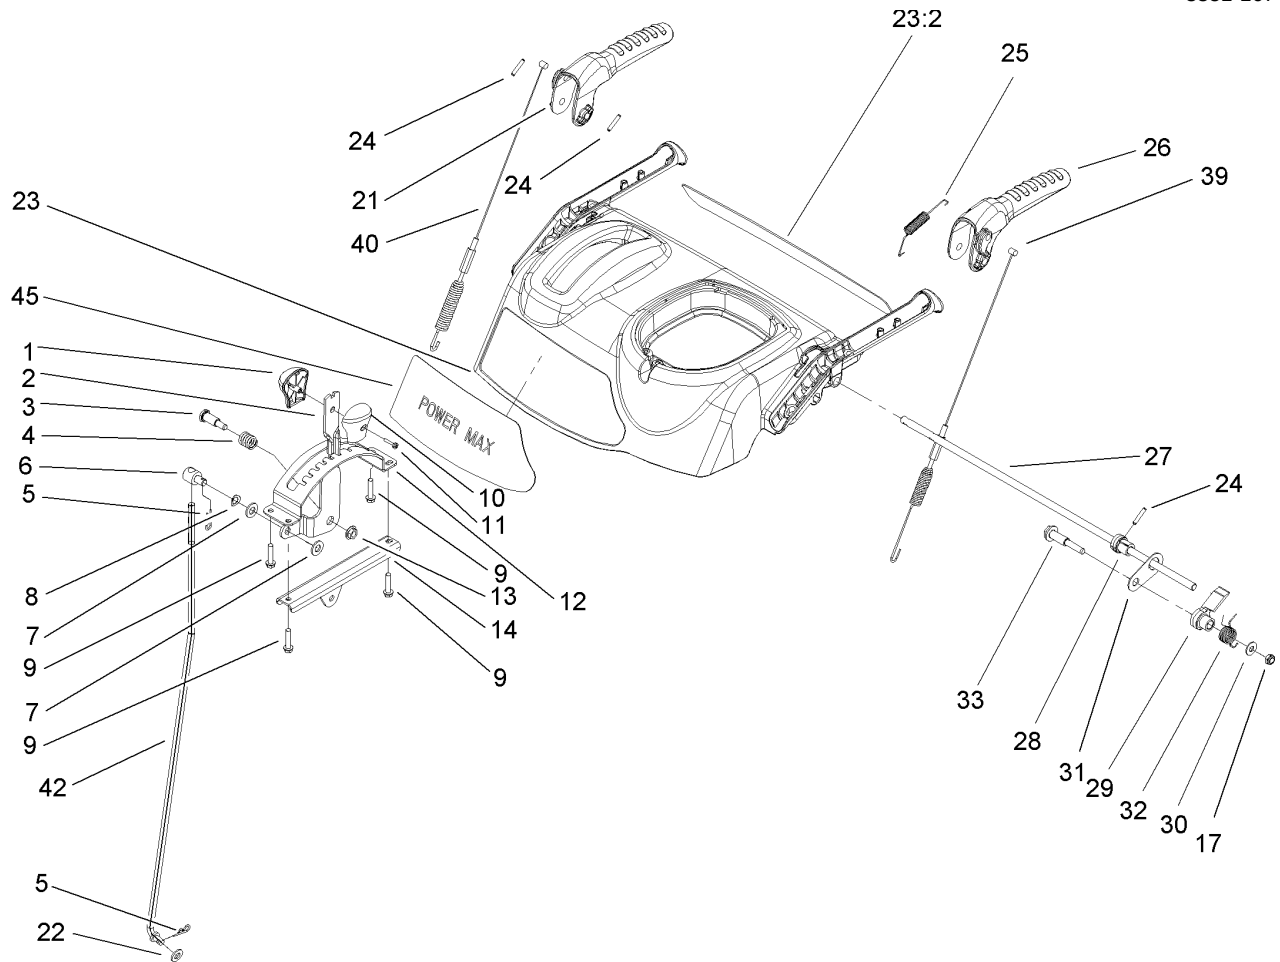 

Handle Control Assembly


Ref	Part No.	Qty.	Description
1	106-4423	1	Knob-Shift, RH
2	106-7278-03	1	Selector-Speed
3	63-2650	1	Screw-Shoulder
4	107-3017	1	Spring-Compression
5	3290-307	2	Pin-Hair
6	101161	1	Trunnion
7	3256-24	2	Washer-Flat
8	612586	1	Washer-Spring
9	46-8092	4	Screw-Plastite
10	105-9999	1	Knob-Shift, LH
11	94-4496	1	Screw-PPH
12	106-7277-03	1	Guide-Selector, Speed
13	32128-13	1	Nut-HF
14	106-7279-03	1	Mount-Selector, Speed
17	3296-72	1	Nut-Lock, NI
21	106-4413	1	Lever-Auger
22	3256-38	1	Washer-Flat
23	107-3825	1	Control Panel ASM
23:2	106-4521	1	Decal-Control Panel
24	32121-125	3	Pin-Spring
25	107-3001	1	Spring-Tension
26	106-4410	1	Lever-Traction
27	105-9996	1	Rod-Lockout
28	107-1043	1	Cam-Lockout

Ref	Part No.	Qty.	Description
29	108-0023	1	Latch-Lockout
30	98-3499	1	Washer-Flat
31	107-3000	1	Link-Lockout
32	108-0024	1	Spring-Torsion
33	106-4412	1	Screw-Shoulder
39	106-4563	1	Cable-Traction
40	106-4599	1	Cable-Auger
42	107-1005	1	Rod-Shift
45	106-4512	1	Decal-Control Panel

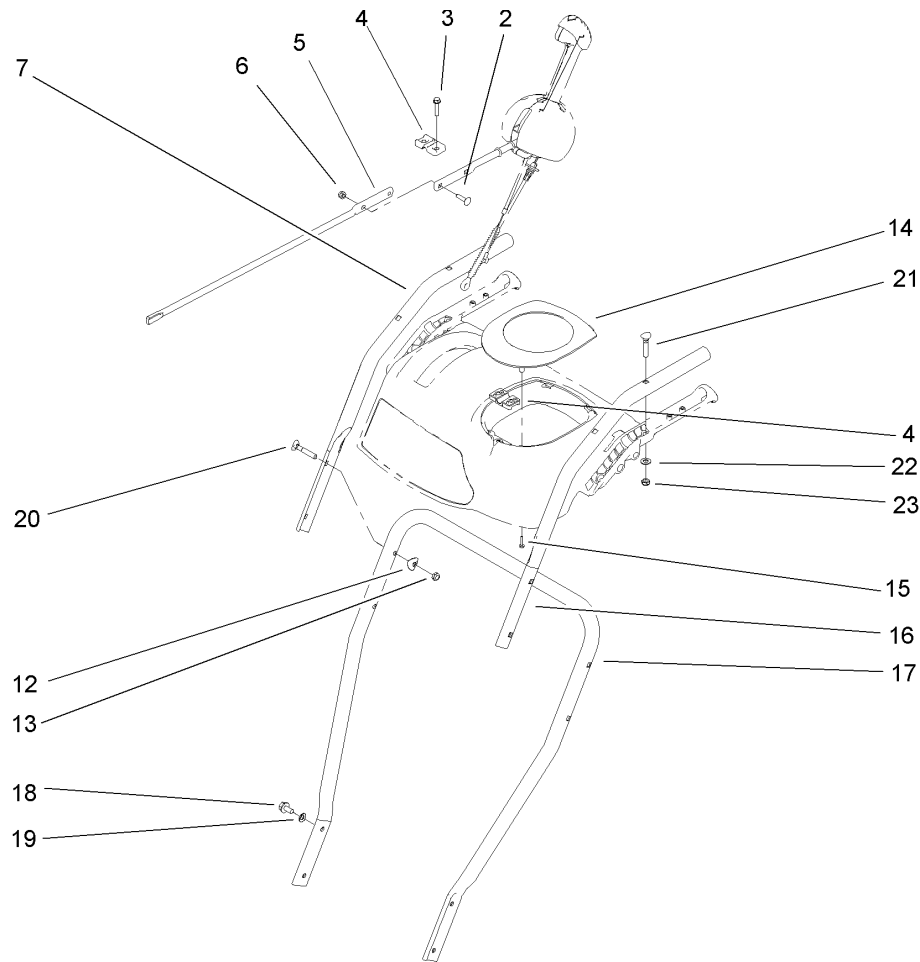 


Handle and Control Assembly

Ref	Part No.	Qty.	Description				
2	3229-30	2	Screw-CARR				
3	46-8092	2	Screw-Plastite				
4	105-9987	2	Support-Rod				
5	106-7283	1	Rod-Chute, Front				
6	3296-73	2	Nut-Lock, NI				
7	108-0038-03	1	Handle-Upper, RH				
12	107-3844	4	Washer				
13	3296-72	4	Nut-Lock, NI				
14	106-4586	1	Cover-Panel, Control				
15	94-4496	2	Screw-PPH				
16	108-0037-03	1	Handle-Upper, LH				
17	105-9981-03	1	Handle-Lower				
18	32144-14	4	Screw-HWH				
19	3290-475	4	Washer-Belleville				
20	92-2260	4	Screw-Handle				
21	107-3018	4	Screw-Handle				
22	3256-70	4	Washer-Flat				
23	3296-72	4	Nut-Lock, NI				

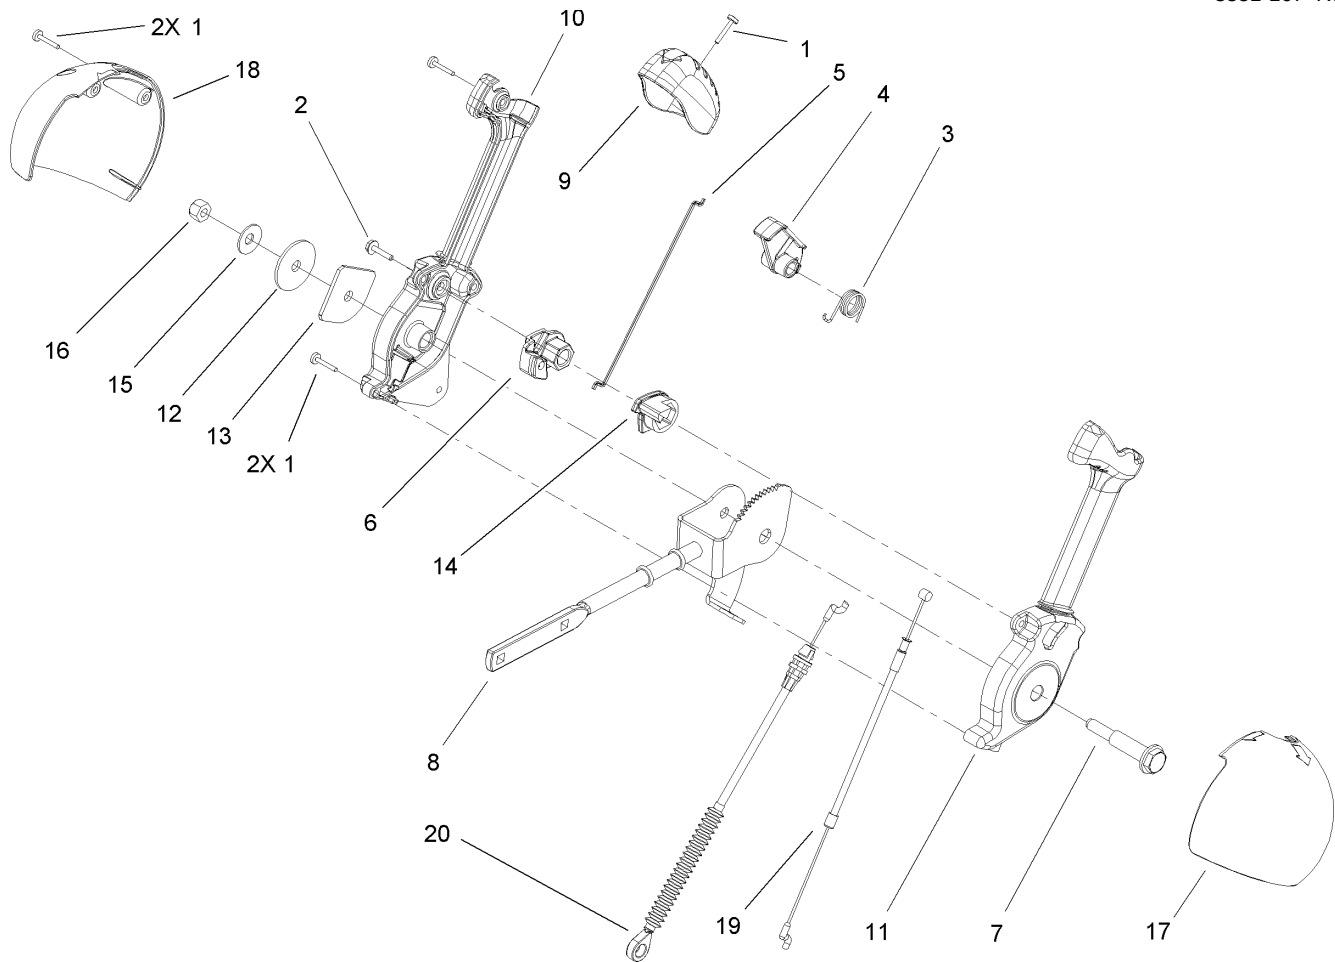 

Chute Control Assembly

Ref	Part No.	Qty.	Description				
1	94-4496	5	Screw-PPH				
2	98-1375	1	Screw-HWH				
3	105-9982	1	Spring-Torsion				
4	105-9984	1	Trigger-Latch				
5	105-9985	1	Link-Latch				
6	105-9988	1	Lever-Cable, Deflector				
7	105-9995	1	Screw-Shoulder				
8	106-4479	1	Rod-Control, Chute				
9	106-7280	1	Cap-Lever				
10	106-7281	1	Lever-Chute Control, RH				
11	106-7282	1	Lever-Chute Control, LH				
12	107-3002	1	Washer-Nylon				
13	106-7295	1	Plate-Friction				
14	106-7310	1	Pawl-Latch				
15	3290-456	1	Washer-Belleville				
16	3296-29	1	Nut-Lock, NI				
17	105-9986	1	Cover-Chute Lever, LH				
18	106-7292	1	Cover-Chute Lever, RH				
19	105-9989	1	Cable-Chute Release				
20	105-9990	1	Cable-Control, Deflector				

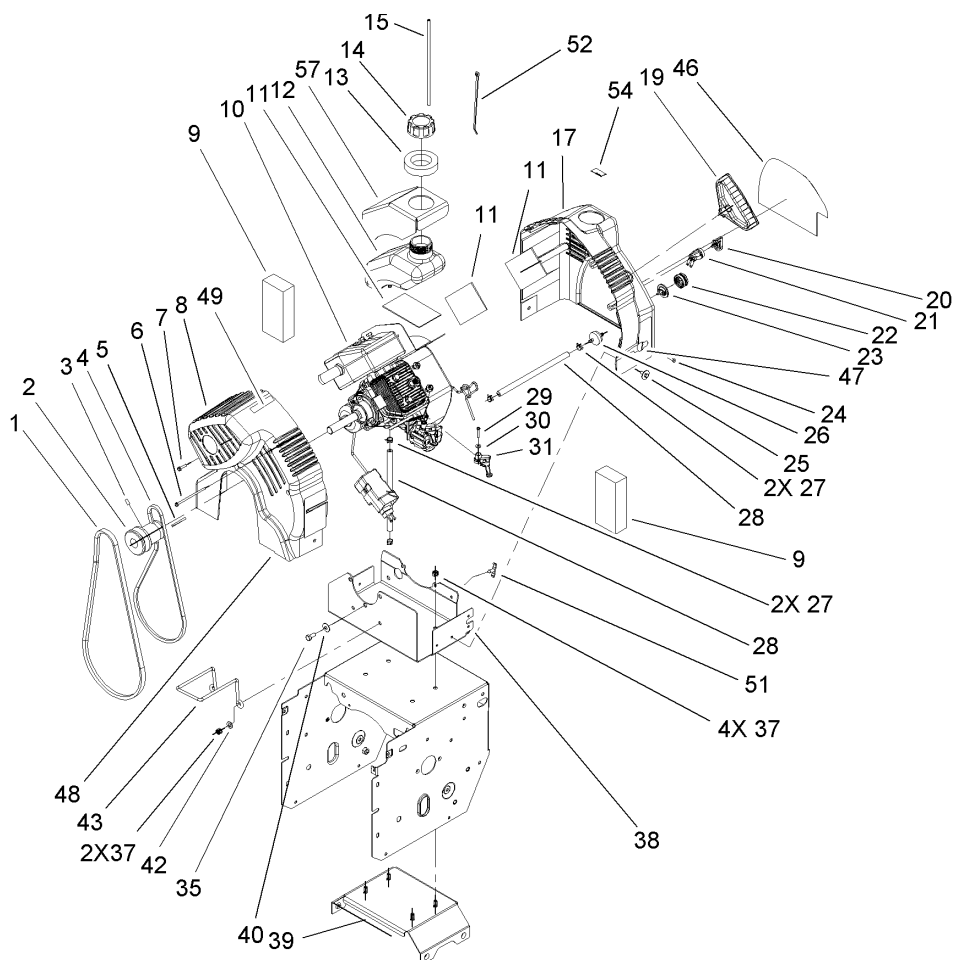 






2 Cycle Engine and Frame Assembly

Ref	Part No.	Qty.	Description
1	106-9193	1	V Belt-Augur
2	105-8883	1	Pulley-Engine
3	3245-9	2	Screw-Set
4	106-9192	1	V Belt-Traction
5	7-0036	1	Key-Square
6	106-9174	2	Screw
7	106-9169	1	Screw
8	106-9194	1	Cover-Front, Styling
9	106-9178	2	Foam
10		1	Engine-Briggs And Stratton, 084333-0197-E1
11	98-1386	3	Pad-Foam
12	106-9199	1	Tank-Fuel
13	55-9310	1	Seal-Foam
14	104-4133	1	Gas Cap ASM
15	44-3170	1	Hose-Primer
17	106-9152	1	Cover ASM
19	106-9175	1	Handle-Rope Start
20	63-8360	1	Key-Ignition
21	40-5940	1	Switch
22	66-7460	1	Bulb-Primer
23	44-2750	1	Body-Primer
24	32144-27	2	Screw
25	106-9173	4	Screw

Ref	Part No.	Qty.	Description
26	56-6360	1	Filter-Fuel
27	2412-98	4	Clamp
28	49-2482	2	Line-Fuel
29	32144-97	1	Screw-PPH, Plastite
30	3256-14	1	Washer-Flat
31	104-0878	1	Lever-Choke
35	322-3	3	Screw-HH
37	3296-29	6	Nut-Lock, NI
38	105-8897-03	1	Plate-Mounting, Engine
39	106-9189	1	Frame Brace ASM
40	3290-456	3	Washer-Belleville
42	3256-23	2	Washer-Flat
43	106-9184	1	Guide-Belt
46	106-9158	1	Decal-Panel
47	106-9160	1	Decal-Starter, Electric
48	106-9159	1	Decal-Choke
49	104-2767	1	Decal-Warning
51	32180-012	1	Clip-Harness
52	614249	3	Strap-Tie
54	93-6659	1	Decal-Fuel, 2 Cycle
57	107-4579	1	Foam-Tank, Fuel
99	106-4741	1	Cord-Electric

1036 EMISSIONS LABEL

     
48 Short Block

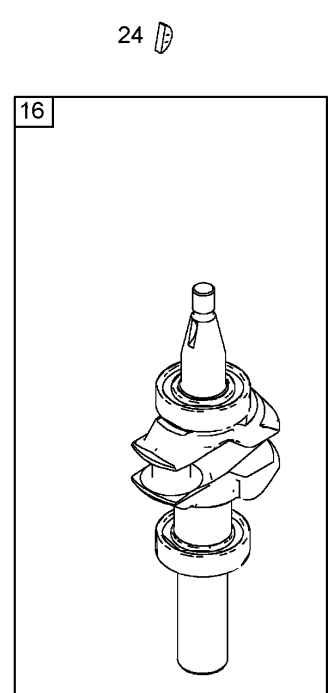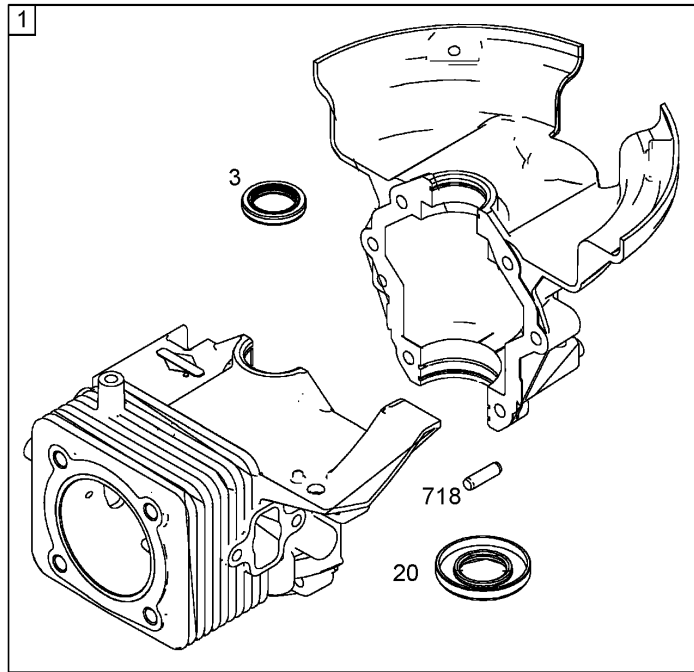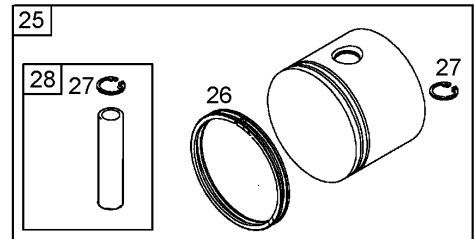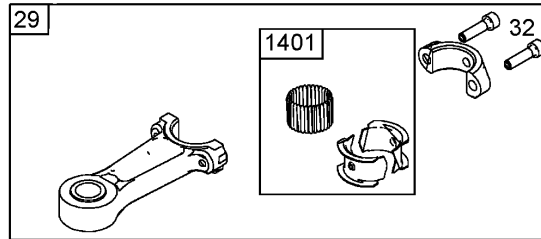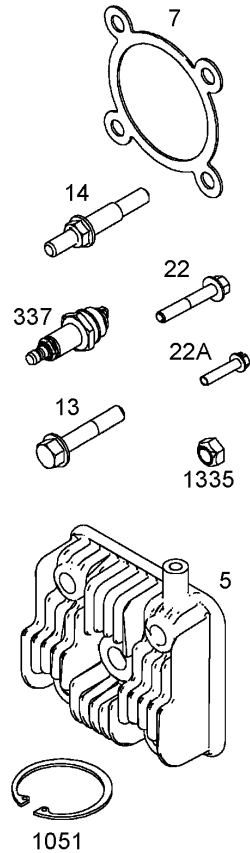

Crankcase, Crankshaft, Cylinder Head, and Connecting Rod Assemblies Briggs and Stratton 084333-0197-E1

Ref	Part No.	Qty.	Description
❶1	801321	1	Cylinder ASM
❸3	801262	1	Seal-Oil
❺5	801283	1	Head-Cylinder
❷7	801263	1	Gasket-Head, Cylinder
❸13	801264	1	Screw (Cylinder Head)
❸14	801265	1	Stud (Cylinder Head)
❸16	801222	1	Crankshaft
❸20	801261	1	Seal-Oil
❸22	801266	1	Screw (Crankcase Cover And Sump)
❸22A	801271	1	Screw (Crankcase Cover And Sump)
❸24	801234	1	Key-Flywheel
❸25	801281	1	Piston ASM
❸26	801282	1	Ring Set
❸27	801275	1	Lock-Pin, Piston
❸28	801276	1	Pin-Piston
❸29	801277	1	Rod-Connecting
❸32	801278	1	Screw
❸48	801288	1	Short Block
❸337	801254	1	Plug-Spark
❸718	690959	1	Pin-Locating
❸1036	801295	1	Label-Emissions
❸1051	801274	1	Ring-Retaining


Ref	Part No.	Qty.	Description
❸1335	801269	1	Nut (Blower Housing)
❸1401	801290	1	Roller-Strip

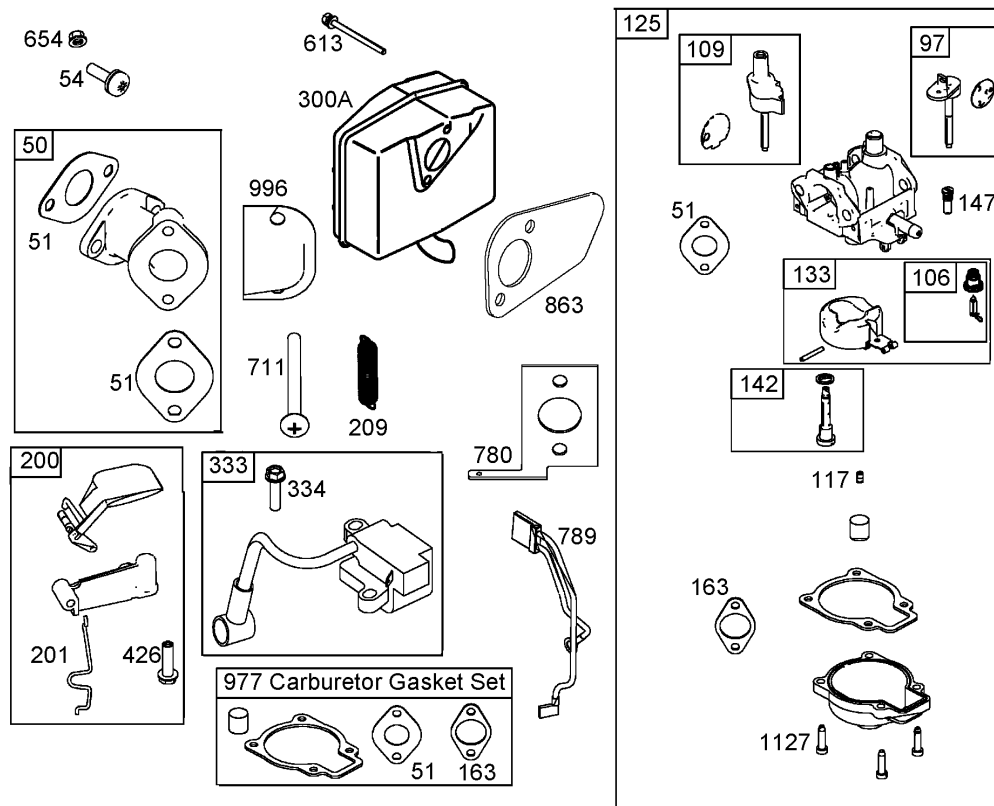 

Intake Manifold, Carburetor, and Muffler Assemblies Briggs and Stratton 084333-0197-E1

Ref	Part No.	Qty.	Description
●50	801232	1	Manifold-Intake
●51	801224	1	Gasket-Intake
●54	801230	1	Screw (Intake Manifold)
●97	801306	1	Shaft-Throttle
●106	801317	1	Seat-Inlet
●109	801307	1	Shaft-Choke
●117	801311	1	Jet-Main
●125	801255	1	Carburetor
●133	801316	1	Float-Carburetor
●142	801313	1	Nozzle-Carburetor
●147	801309	1	Jet-Pilot
●163	801227	1	Gasket-Cleaner, Air
●200	801289	1	Blade-Governor
●201	801225	1	Link-Vane, Air
●209	801223	1	Spring-Governor
●300A	801258	1	Muffler
●333	801268	1	Armature-Magneto
●334	801267	1	Screw
●426	801231	1	Screw
●613	801251	1	Screw
●654	801324	1	Nut (Intake Manifold) (Used Before Engine Code Date 05042600)
●711	801229	1	Screw

Ref	Part No.	Qty.	Description
●780	801228	1	Anchor-Spring
●789	801253	1	Wire ASM
●863	801259	1	Bracket-Muffler
●977	801312	1	Gasket Set-Carburetor
●996	801226	1	Shield-Carburetor
●1127	801318	1	Screw

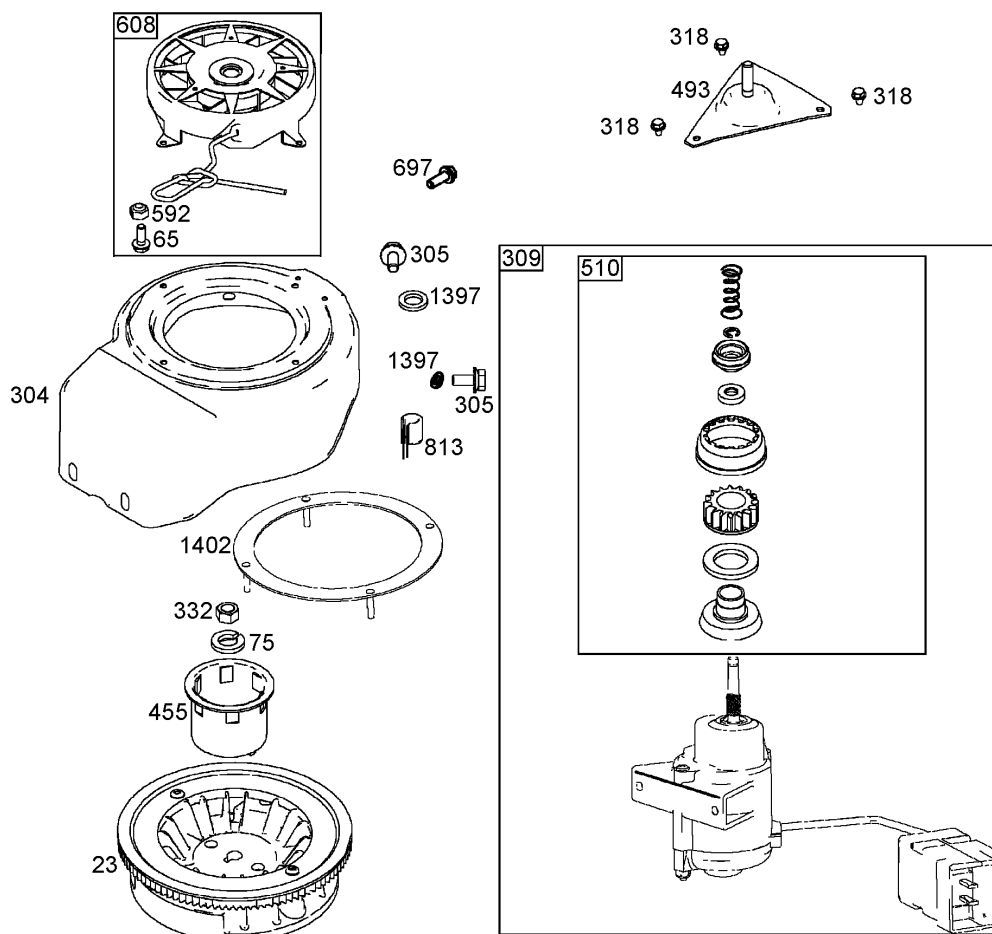 

Flywheel, Blower Housing, and Starter Assemblies

Briggs and Stratton 084333-0197-E1

Ref	Part No.	Qty.	Description
③23	801246	1	Flywheel
③65	801243	1	Screw
③75	801237	1	Washer
③304	801315	1	Housing-Blower
③305	801239	1	Screw (Blower Housing)
③309	801247	1	Motor-Starter
③318	801241	1	Screw
③332	801238	1	Nut
③455	801235	1	Cup-Flywheel
③493	801240	1	Bracket-Mounting
③510	801293	1	Drive-Starter
③592	801244	1	Nut
③608	801242	1	Starter-Rewind
③697	801248	1	Screw (Starter Motor)
③813	801249	1	Clamp
③1397	801270	1	Washer (Blower Housing)
③1402	801272	1	Ring-Support

