



CCR[™] 2450 GTS[®] Snowthrower

Model No. 38516 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Rotor Housing and Scraper Assembly	 3	Cylinder, Piston, and Connecting Rod	
Impeller Drive Assembly	 4	Assemblies Briggs and Stratton 084133-0196- E1	 10
Chute Assembly	 5	Muffler, Carburetor, and Intake Manifold	
Rotor Assembly	 6	Assemblies Briggs and Stratton 084133-0196- E1	 11
Engine and Frame Assembly	 7	Flywheel, Blower Housing, and Starter	
Shroud and Control Panel Assembly	 8	Assemblies Briggs and Stratton 084133-0196- E1	 12
Handle Assembly	 9	Attachments and Accessories List	 13


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power-take-off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll-over-protection-system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HSBH. hex socket button head	SPH. slotted pan head
HSFH. hex socket flat head	SQH. square head
HSH. hex socket head	SRH. slotted round head
HWH. hex washer head	STD. standard
HWHTF. hex washer head thread forming	TAP. self tapping
HYD. hydraulic	TTH. torx truss head

Footnotes


- ❶ Not serviced separately
- ❷ Obtain from your local Briggs & Stratton dealer

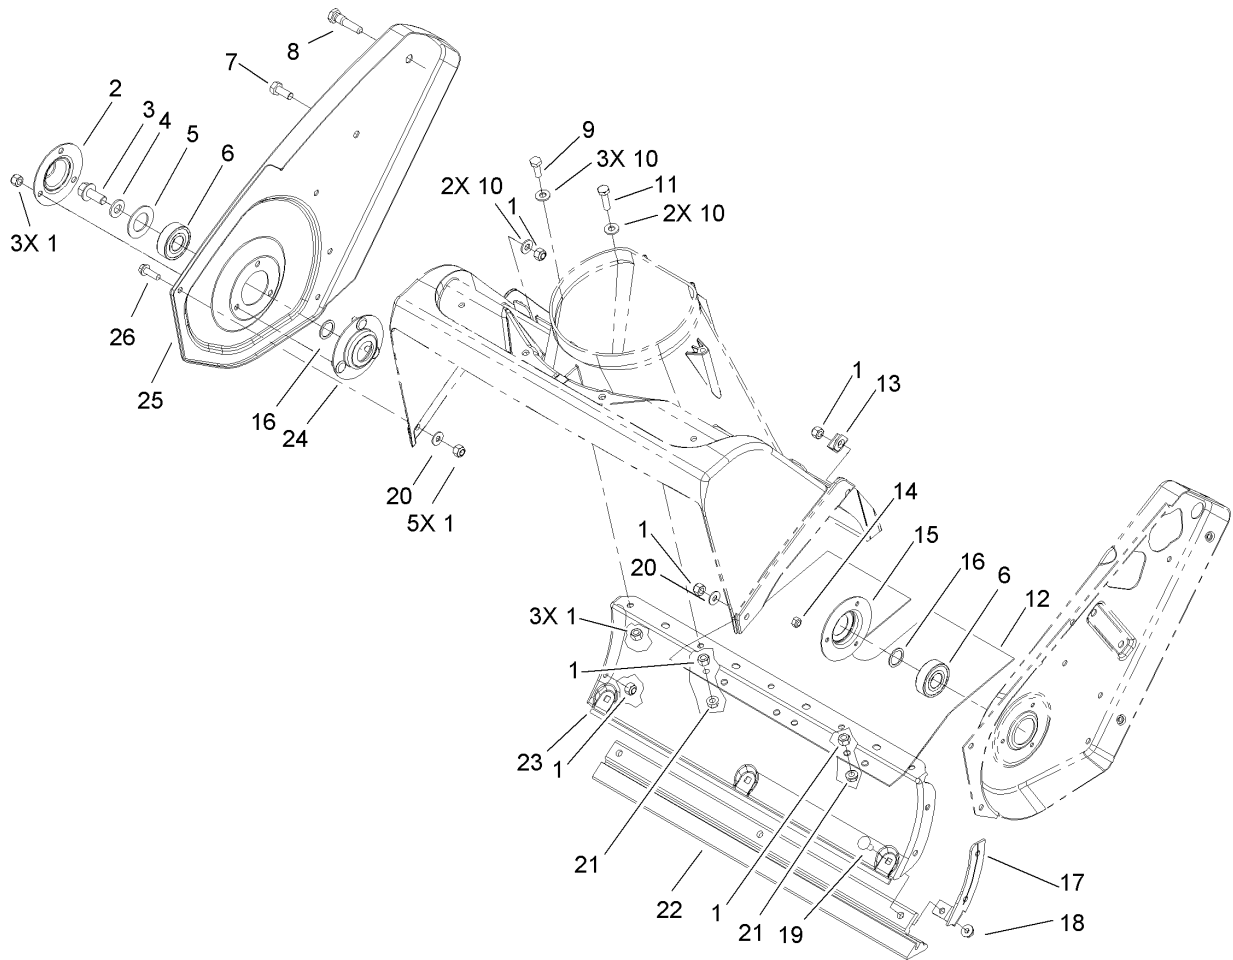

Rotor Housing and Scraper Assembly

Ref	Part No.	Qty.	Description
1	3296-42	17	Nut-Lock, NI
2	52-7290-03	1	Retainer-Bearing
3	3234-25	1	Screw-HHF
4	3256-24	1	Washer-Flat
5	52-7270	1	Washer-Rubber
6	100-1048	2	Bearing-Ball
7	322-43	1	Screw-HH
8	38-8211	1	Pin-Rotor
9	321-4	3	Screw-HH
10	3256-22	7	Washer-Flat
11	321-6	2	Screw-HH
12	55-9512	1	Cover-Bottom
13	55-9430	1	Bracket-Housing
14	3296-2	3	Nut-Lock
15	38-8620	1	Flange-Bearing
16	52-7280	2	Washer-Thrust
17	56-2610	1	Bracket-Housing, Lower
18	32149-2	3	Nut-Keps
19	3229-11	3	Screw-CARR
20	3256-1	2	Washer-Flat
21	32128-10	2	Nut-Lock, HHF
22	55-8760	1	Scraper
23	105-1967-03	1	Housing-Lower
24	52-9110	1	Flange-Bearing


Ref	Part No.	Qty.	Description
25	105-1952-03	1	Sideplate-Right
26	32105-15	5	Screw

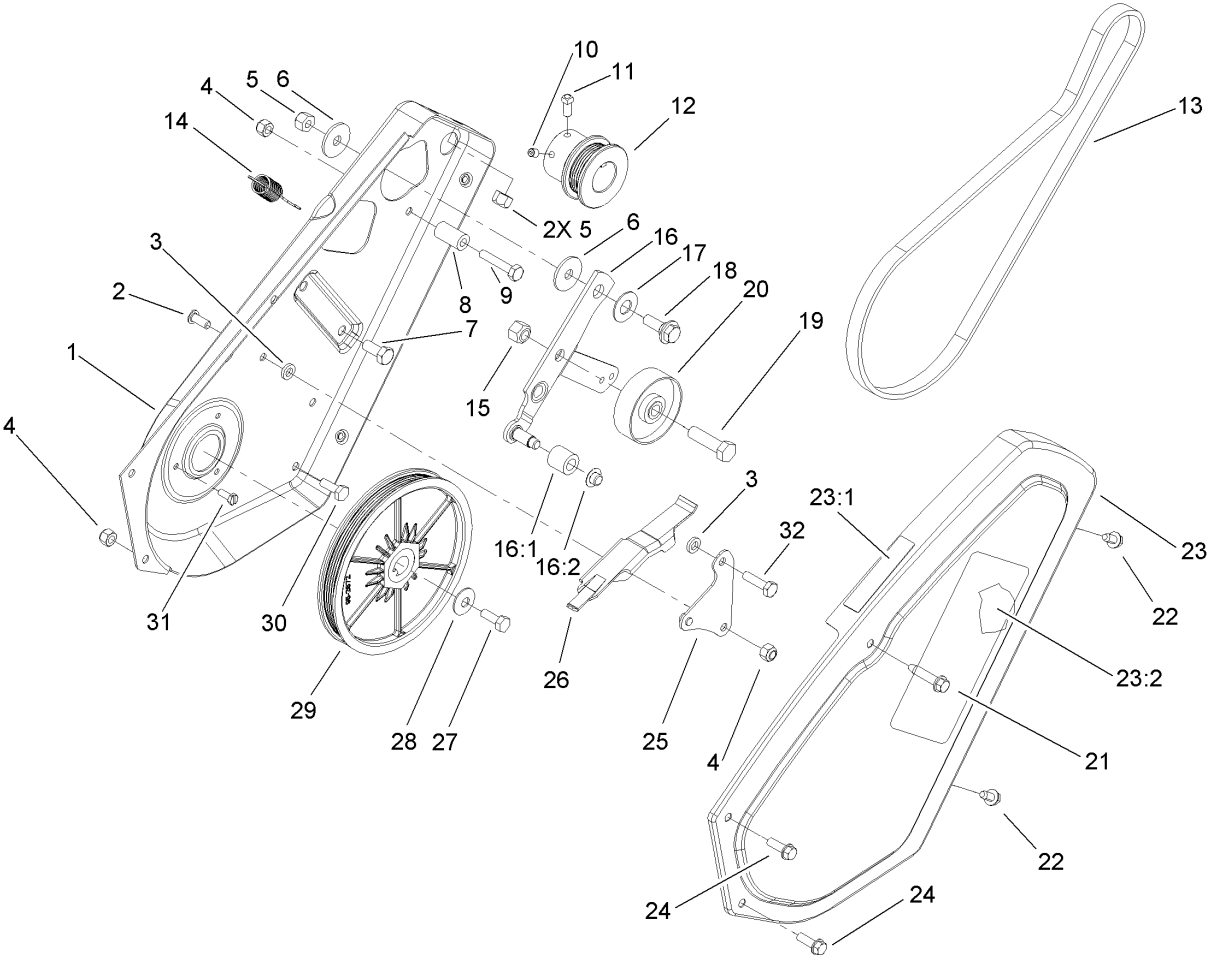

Impeller Drive Assembly


Ref	Part No.	Qty.	Description
1	55-8851-03	1	Plate-Side, LH
2	3274-31	1	Screw-HSBH
3	55-9620	2	Spacer-Plate, Pivot
4	3296-42	3	Nut-Lock, NI
5	3296-29	3	Nut-Lock, NI
6	5-4460	2	Washer-Pivot
7	322-3	2	Screw-HH
8	55-9530	1	Sleeve-Guide, Belt
9	321-13	1	Screw-HH
10	3245-32	1	Screw-HSH
11	3241-7	1	Screw-SQH
12	95-2673	1	Pulley-Engine
13	95-6151	1	Belt-Drive
14	55-9280	1	Spring-Extension
15	32152-2	1	Nut-Lock, Cone
16	105-3542	1	Idler Arm ASM
16:1	55-9520	1	Roller-Brake
16:2	32112-11	1	Nut-Push
17	25-5641	1	Washer
18	27-0410	1	Screw-Shoulder
19	323-29	1	Screw-HH
20	55-9290	1	Pulley-Idler
21	36-3860	1	Screw-HWH, TAP
22	12-3270	2	Screw

Ref	Part No.	Qty.	Description
23	105-1997	1	Cover-Drive
23:1	104-2767	1	Decal-Warning
23:2	60-9480	1	Decal
24	32105-15	2	Screw
25	55-9570	1	Pivot Plate ASM
26	55-9550	1	Brake-Arm
27	321-30	1	Screw-HH
28	3290-456	1	Washer-Belleville
29	95-2672	1	Pulley Rotor ASM
30	321-4	2	Screw-HH
31	32105-8	3	Screw-SHH
32	321-6	1	Screw-HH

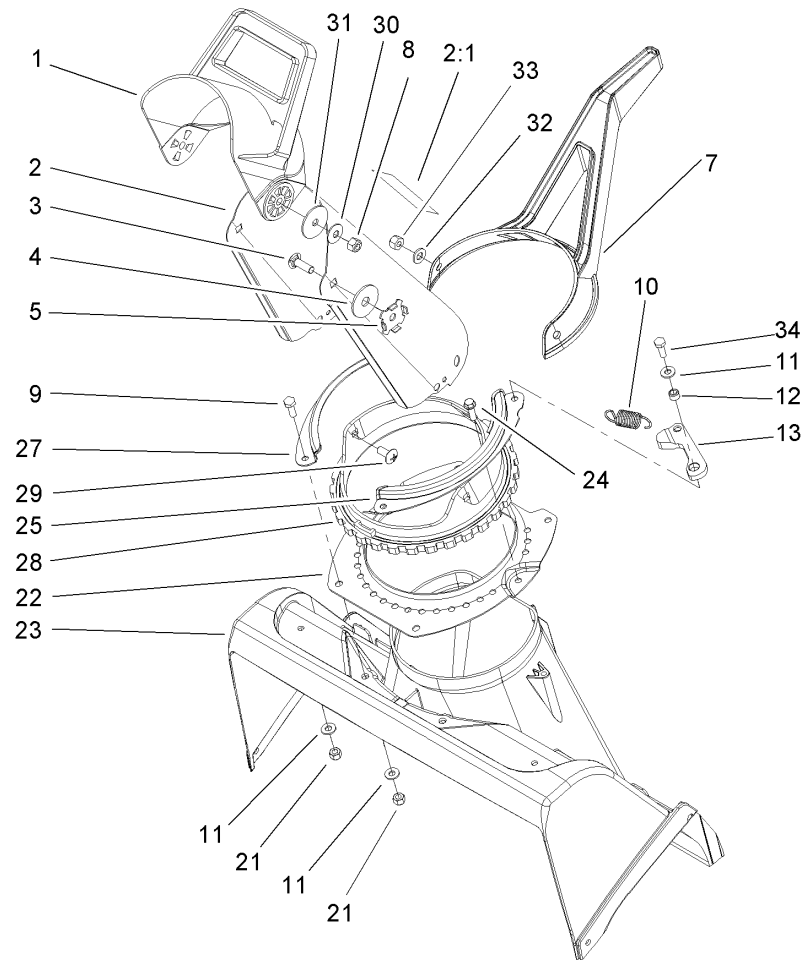


Chute Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	56-2680	1	Chute-Deflector	33	3296-47	3	Nut-Lock, NI
2	104-4115	1	Chute ASM	34	321-6	1	Screw-HH
2:1	104-4135	1	Decal-Danger				
3	3230-22	2	Screw-CARR				
4	20-4320	2	Washer-Rubber				
5	55-8950	2	Plate-Friction				
7	94-9914	1	Handle-Control, Chute				
8	3296-29	2	Nut-Lock, NI				
9	321-4	3	Screw-HH				
10	80-4600	1	Spring-Extension				
11	3256-22	5	Washer-Flat				
12	55-9370	1	Spacer-Blade, Rotor				
13	80-4610	1	Detent				
21	3296-42	6	Nut-Lock, NI				
22	55-8921-03	1	Ring-Support, Chute				
23	105-1950	1	Housing-Rotor, Upper				
24	46-8091	2	Screw-HWH				
25	71-4980-03	1	Retainer-Chute, LH				
27	71-4990-03	1	Retainer-Chute, RH				
28	104-2763	1	Ring-Chute				
29	100-5487	3	Screw-PTH				
30	3290-456	2	Washer-Belleville				
31	3256-68	2	Washer-Flat				
32	3256-70	3	Washer-Flat				

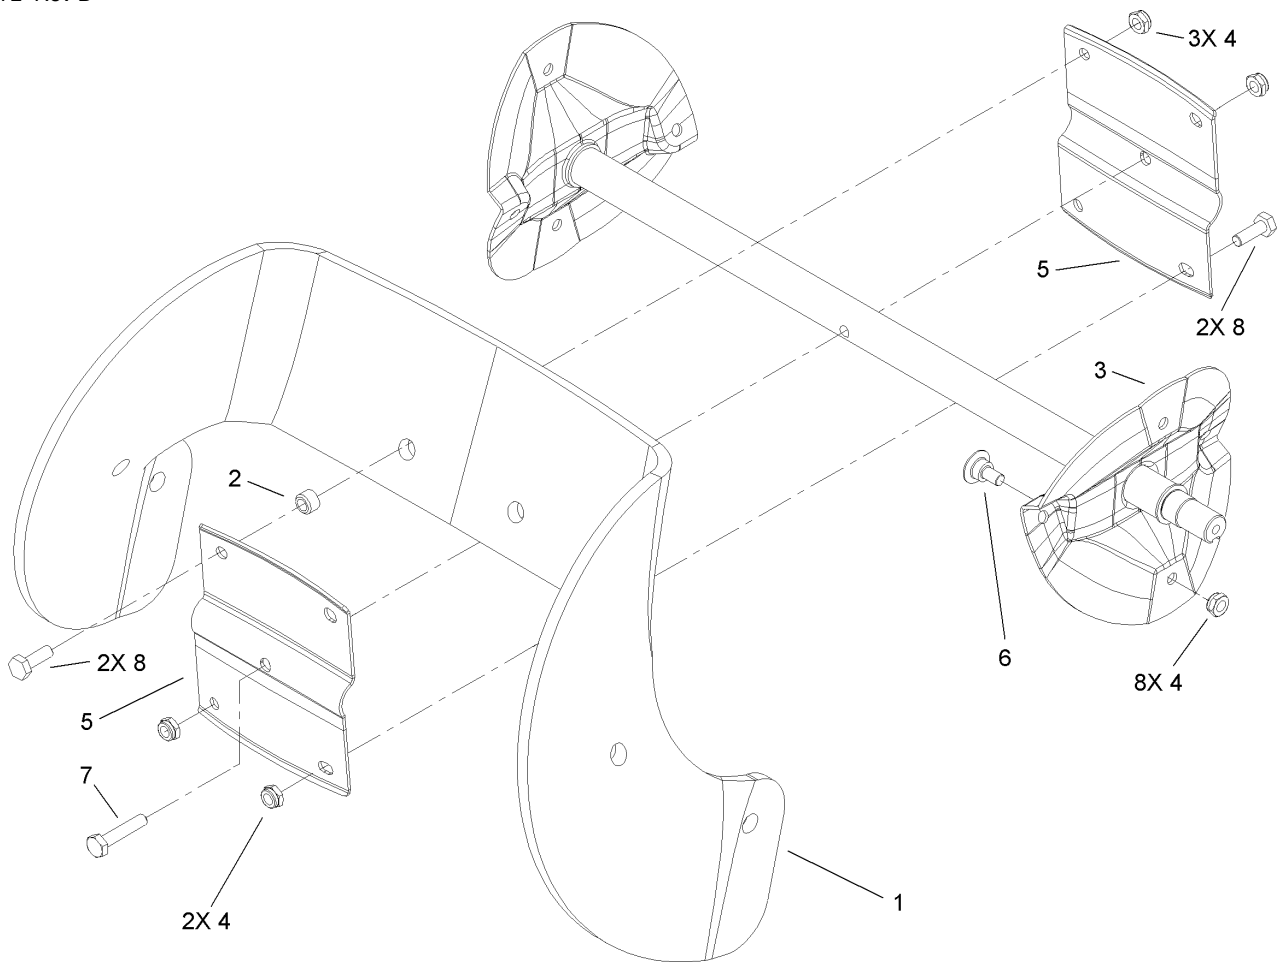

Rotor Assembly


Ref	Part No.	Qty.	Description				
1	99-9313	2	Blade-Rotor				
2	55-9370	4	Spacer-Blade, Rotor				
3	100-5478-03	1	Rotor ASM				
4	3296-56	13	Nut-Lock, NI				
5	66-6600-03	2	Half-Rotor				
6	84-1971	8	Screw				
7	321-8	1	Screw-HH				
8	321-4	4	Screw-HH				

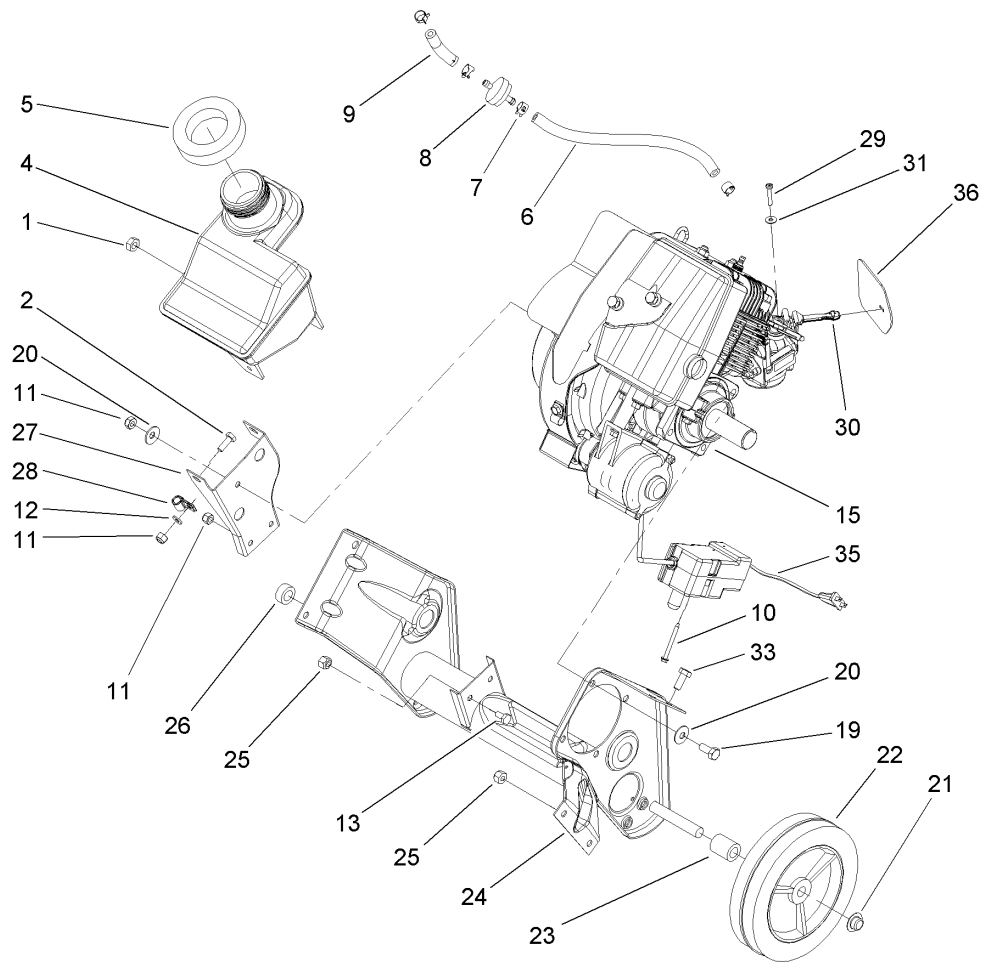

Engine and Frame Assembly


Ref	Part No.	Qty.	Description
1	32152-8	1	Nut-Lock, Cone
2	321-4	2	Screw-HH
4	105-8952	1	Tank-Gas
5	55-9310	1	Seal-Foam
6	49-2482	1	Line-Fuel
7	2412-98	4	Clamp
8	56-6360	1	Filter-Fuel
9	94-9932	1	Hose-Fuel
10	32144-27	3	Screw
11	3296-42	5	Nut-Lock, NI
12	3256-22	2	Washer-Flat
13	321-2	2	Screw-HH
15		1	Engine-Briggs And Stratton, 084133-0196-E1
19	322-3	4	Screw-HH
20	3290-456	5	Washer-Belleville
21	32112-14	2	Nut-Push
22	66-6510	2	Wheel
23	66-6501	1	Spacer-Wheel
24	105-1965-03	1	Frame
25	3296-29	3	Nut-Lock, NI
26	66-6500	1	Spacer-Wheel
27	105-1968-03	1	Bracket-Support, Recoil
28	2412-91	1	Clamp

Ref	Part No.	Qty.	Description
29	32144-97	1	Screw-PPH, Plastite
30	104-0878	1	Lever-Choke
31	3256-14	1	Washer-Flat
33	322-43	2	Screw-HH
35	106-4741	1	Cord-Electric
36	108-7340	1	Shield-Hole, Choke

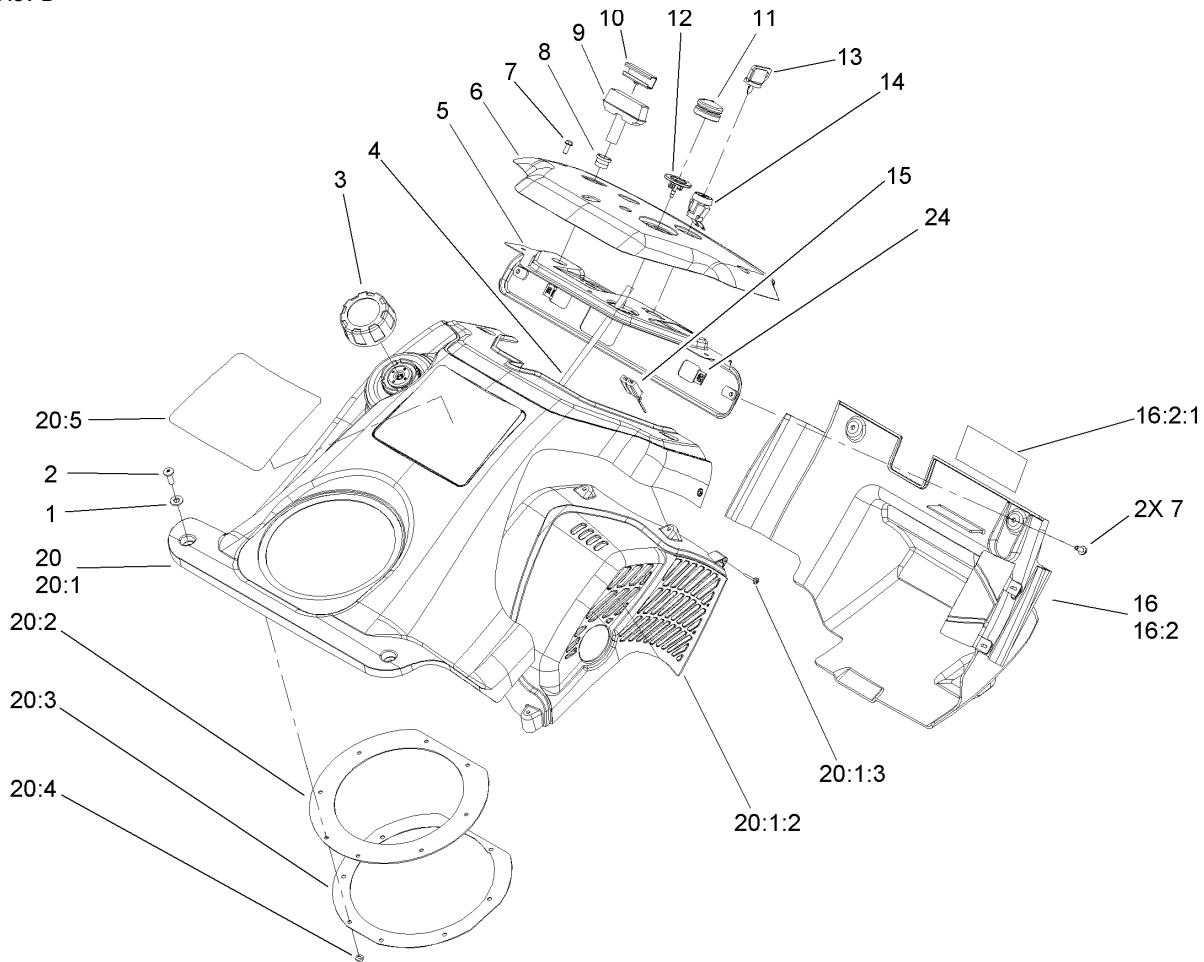


Shroud and Control Panel Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	3256-22	2	Washer-Flat	20:4	3290-474	8	Palnut
2	3250-32	2	Screw-PPH	20:5	108-5088	1	Decal-Shroud, Upper
3	104-4133	1	Gas Cap ASM	24	100-9889	2	Nut-Speed
4	98-1372	1	Hose-Primer				
5	105-1999-03	1	Panel-Support, Control				
6	105-3523	1	Panel-Control				
7	32144-112	5	Screw-HWH				
8	55-9410	1	Guide-Rope, Starter				
9	612825	1	Handle-Start				
10	612824	1	Clip-Starter				
11	66-7460	1	Bulb-Primer				
12	44-2750	1	Body-Primer				
13	63-8360	1	Key-Ignition				
14	40-5940	1	Switch				
15	218-532	1	Connector-Body				
16	108-7339	1	Lower Shroud ASM				
●16:2		1	Shroud-Lower				
16:2:1	61-4790	1	Decal				
20	108-7346	1	Upper Shroud ASM				
●20:1		1	Shroud-Upper				
20:1:2	108-7333	1	Shield-Heat				
20:1:3	94-4496	5	Screw-PPH				
20:2	105-3543	1	Seal-Chute				
20:3	55-9540-03	1	Retainer-Seal, Chute				

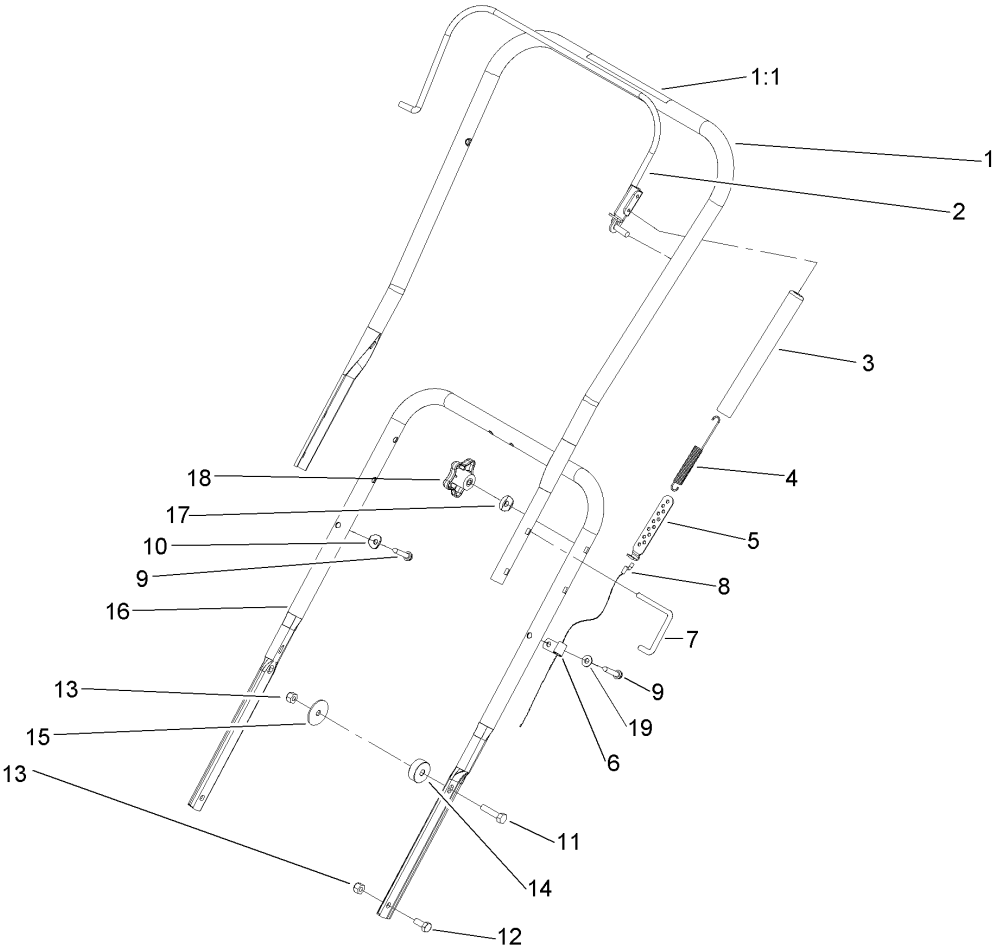


Handle Assembly

Ref	Part No.	Qty.	Description				
1	95-2667	1	Handle-Upper				
1:1	104-2775	1	Decal-Drive, Rotor				
2	71-5120-03	1	Bail ASM				
3	71-5530	1	Cover-Spring				
4	71-5480	1	Spring-Clutch				
5	71-5330	1	Adjuster-Cable, Clutch				
6	2412-91	1	Clamp				
7	98-2266	2	Lock-Handle				
8	110-3437	1	Cable-Clutch				
9	36-3860	2	Screw-HWH, TAP				
10	3-7501	1	Washer				
11	322-6	2	Screw-HH				
12	322-3	2	Screw-HH				
13	3296-29	4	Nut-Lock, NI				
14	105-1961	2	Spacer				
15	3256-68	2	Washer-Flat				
16	55-9121-03	1	Handle-Lower				
17	107-3844	2	Washer				
18	106-4161	2	Knob-Handle				
19	3256-22	1	Washer-Flat				

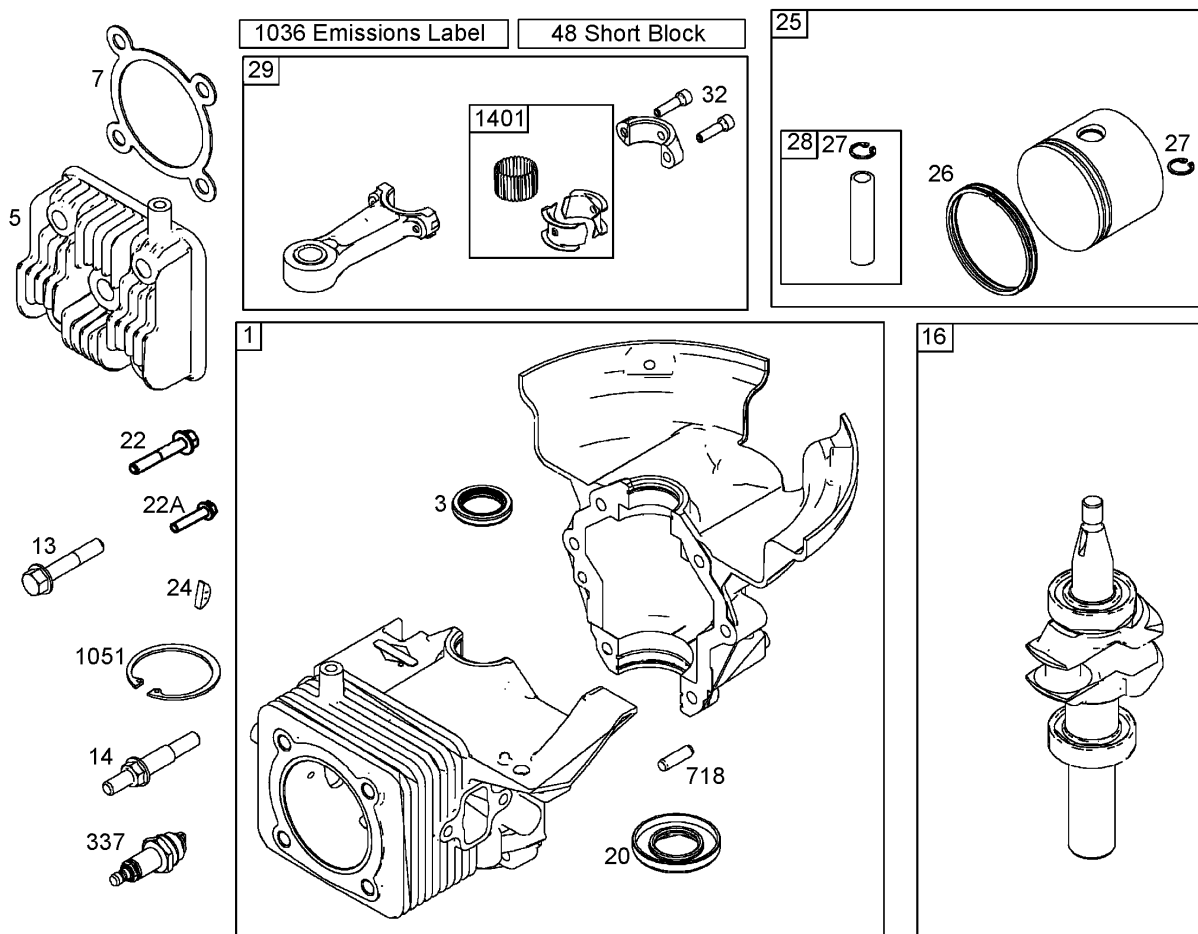

Cylinder, Piston, and Connecting Rod Assemblies Briggs and Stratton 084133-0196-E1


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
②1	801322	1	Cylinder ASM	②1401	801290	1	Roller-Strip
②3	801262	1	Seal-Oil				
②5	801283	1	Head-Cylinder				
②7	801263	1	Gasket-Head, Cylinder				
②13	801264	1	Screw (Cylinder Head)				
②14	801265	1	Stud (Cylinder Head)				
②16	801220	1	Crankshaft				
②20	801261	1	Seal-Oil				
②22	801266	1	Screw (Crankcase And Cover Sump)				
②22A	801271	1	Screw (Crankcase And Cover Sump)				
②24	801234	1	Key-Flywheel				
②25	801279	1	Piston ASM				
②26	801280	1	Ring Set				
②27	801275	1	Lock-Pin, Piston				
②28	801276	1	Pin-Piston				
②29	801277	1	Rod-Connecting				
②32	801278	1	Screw				
②48	801285	1	Short Block				
②337	801254	1	Plug-Spark				
②718	690959	1	Pin-Locating				
②1036	801294	1	Label-Emissions				
②1051	801274	1	Ring-Retaining				

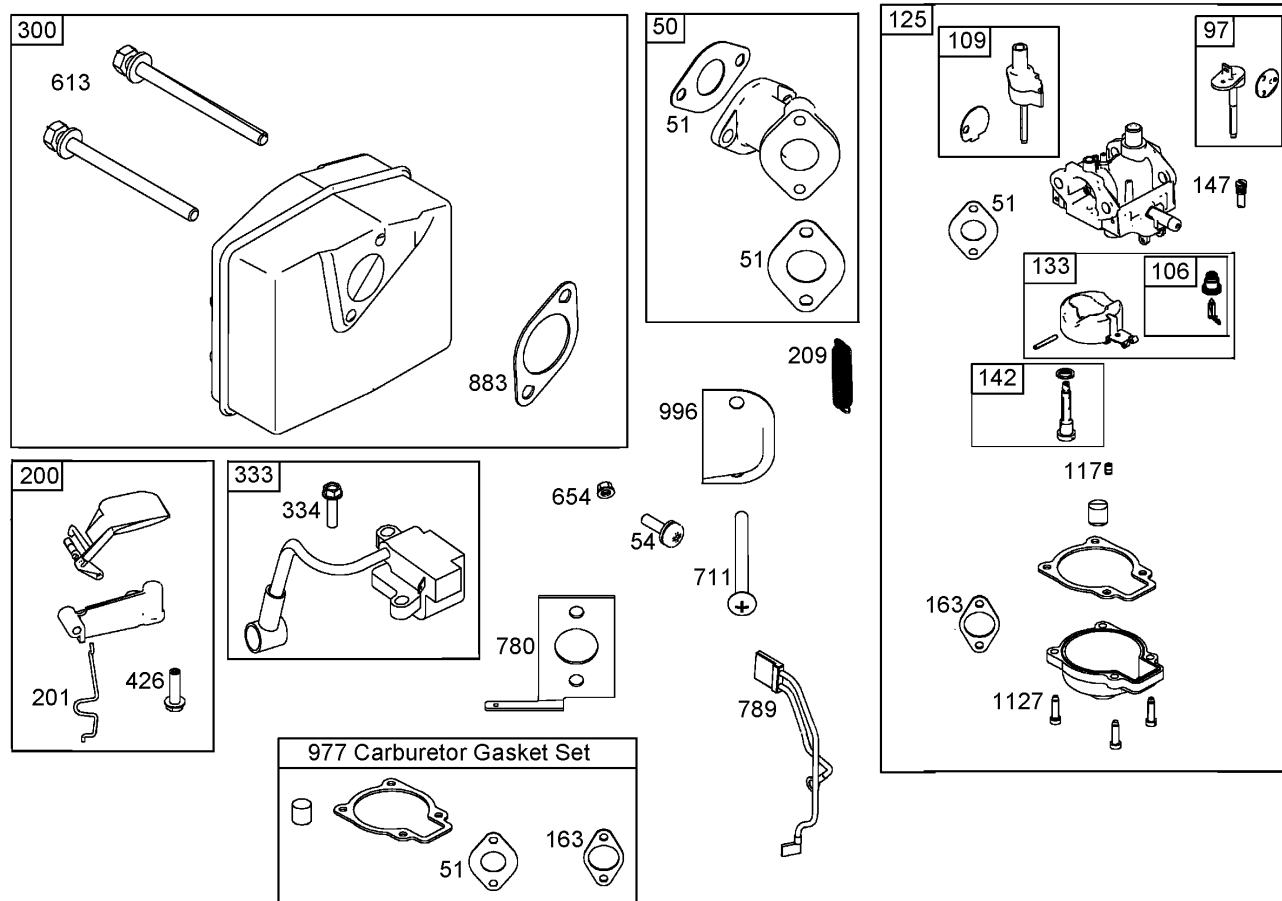

Muffler, Carburetor, and Intake Manifold Assemblies Briggs and Stratton 084133-0196-E1

Ref	Part No.	Qty.	Description
●50	801232	1	Manifold-Intake
●51	801224	1	Gasket-Intake
●54	801230	1	Screw (Intake Manifold)
●97	801306	1	Shaft-Throttle
●106	801317	1	Seat-Inlet
●109	801307	1	Shaft-Choke
●117	801310	1	Jet-Main
●125	801233	1	Carburetor
●133	801316	1	Float-Carburetor
●142	801313	1	Nozzle-Carburetor
●147	801308	1	Jet-Pilot
●163	801227	1	Gasket-Cleaner, Air
●200	801289	1	Blade-Governor
●201	801225	1	Link-Vane, Air
●209	801223	1	Spring-Governor
●300	801250	1	Muffler
●333	801268	1	Armature-Magneto
●334	801267	1	Screw
●426	801231	1	Screw
●613	801251	1	Screw
●654	801324	1	Nut (Intake Manifold) (Used Before Engine Code Date 05042600)
●711	801229	1	Screw (Starter Motor)

Ref	Part No.	Qty.	Description
●780	801228	1	Anchor-Spring
●789	801253	1	Wire ASM
●883	801252	1	Gasket-Exhaust
●977	801312	1	Gasket Set-Carburetor
●996	801226	1	Shield-Carburetor
●1127	801318	1	Screw

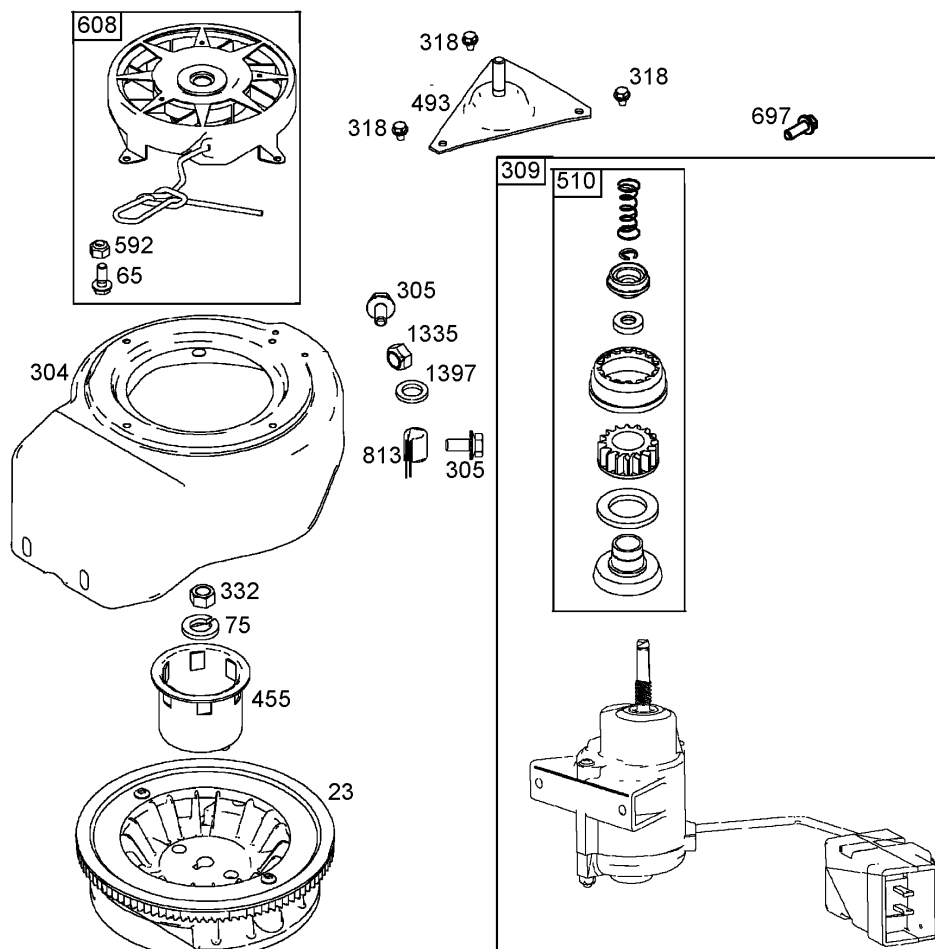

Flywheel, Blower Housing, and Starter Assemblies Briggs and Stratton 084133-0196-E1

Ref	Part No.	Qty.	Description
223	801246	1	Flywheel
265	801243	1	Screw
275	801237	1	Washer
2304	801236	1	Housing-Blower
2305	801239	1	Screw (Blower Housing)
2309	801247	1	Motor-Starter
2318	801241	1	Screw
2332	801238	1	Nut
2455	801235	1	Cup-Flywheel
2493	801240	1	Bracket-Mounting
2510	801293	1	Drive-Starter
2592	801244	1	Nut
2608	801242	1	Starter-Rewind
2697	801248	1	Screw
2813	801249	1	Clamp
21335	801269	1	Nut
21397	801270	1	Washer

Attachments and Accessories

For 38516 - CCR 2450 GTS Snowthrower

Product Name	Model/Part
Snow Cab	88-0600

NOTES

NOTES

