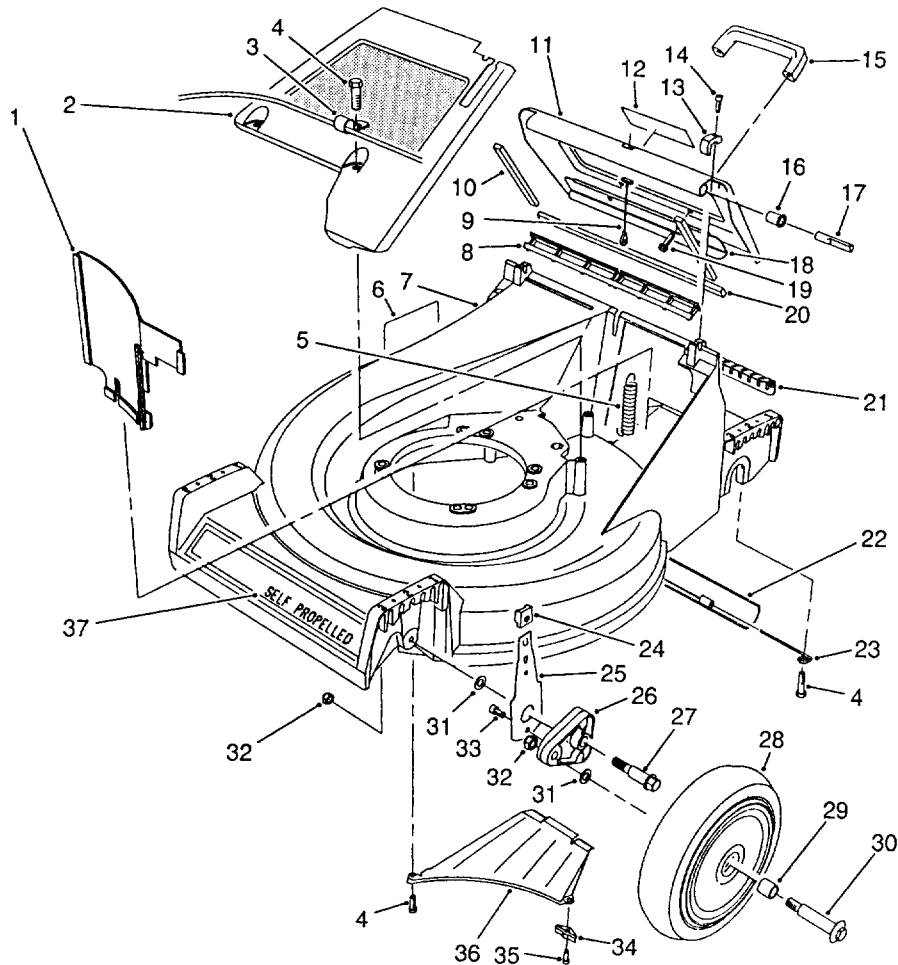


TORO®

MODEL NO. 26641-9000001 & UP


**PARTS
CATALOG****21" S.P. REAR BAGGER****HOUSING ASSEMBLY**

C-0358

Ref. No.	Part No.	Description	No. Used
1	66-0020	Panel - Vertical	1
2	65-5660	Panel - Screen	1
3	2412-68	Clamp - R	1
4	32144-70	Screw - Cap Hex. Hd.	5
5	65-5360	Spring - Extension	1
6	39-5770	Decal - Danger	1
7	13-6589	21" Housing Assembly (Incl. Ref. #6)	1
8	65-5160	Seal - Door	1
9	65-5370	Cable - Door	1
10	65-5480	Seal - Door Side	2
11	13-2189	Door - Discharge (Incl. Ref. #10, 12, 18 & 20)	1
12	63-5090	Decal - Warning	1
13	65-5140	Clamp - Hinge	2

Ref. No.	Part No.	Description	No. Used
14	65-5210	Screw - Hex. Socket Hd.	2
15	65-5100	Handle - Door	1
16	65-5460	Bushing - Door	2
17	65-5290	Pin - Hinge	2
18	66-0610	Brace - Door	1
19	46-8091	Screw - Handle	2
20	65-5490	Seal - Door (End)	1
21	65-5150	Cover - Access	1
22	65-5350	Shield - Trailing	1
23	66-0150	Hanger - Shield (L.H.)	1
*	66-0140	Hanger - Shield (R.H.)	1
24	25-7740	Knob - Spring Arm	2
25	66-0540	Arm - Front Spring	2
26	66-0580	Arm - Front Pivot	2
27	66-0560	Screw - Shoulder	2

*Not Illustrated

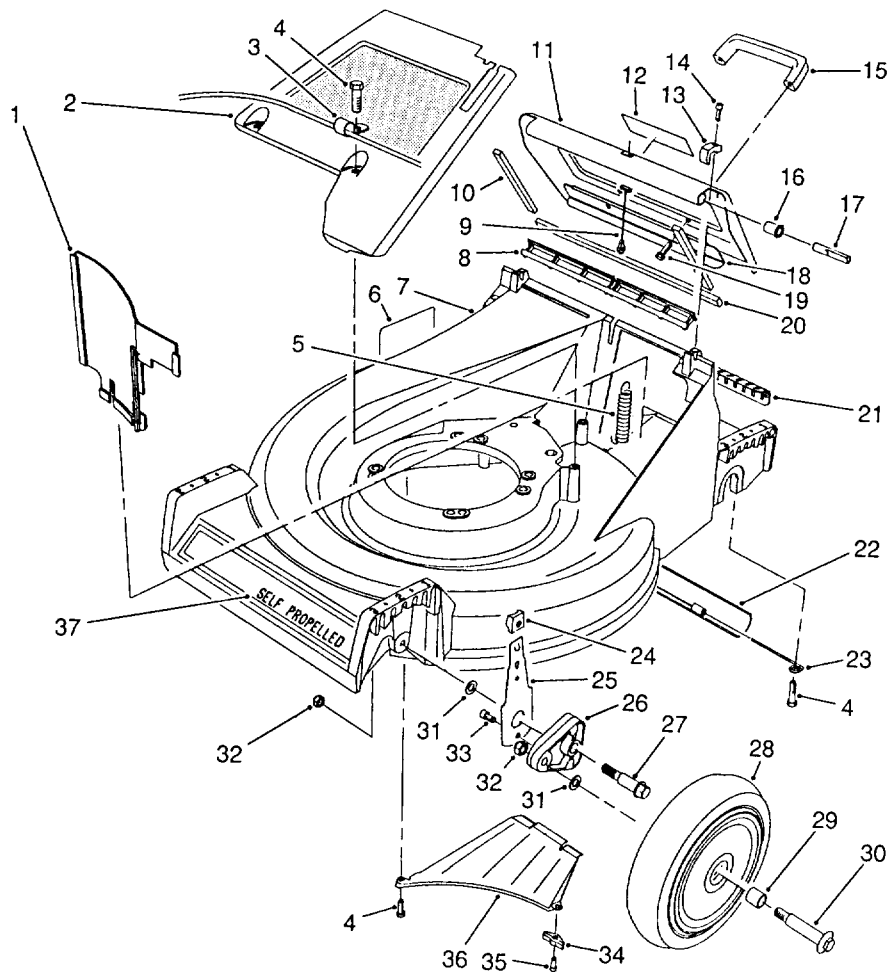


C-0358

HOUSING ASSEMBLY(Continued)

Ref. No.	Part No.	Description	No. Used
28	11-9509	Wheel & Tire Assembly (Incl. Ref. #29)	2
29	27-6250	Bushing - Wheel	4
30	27-6231	Bolt - Wheel	2
31	40-1940	Washer - Wheel	4
32	52-3620	Nut - Lock	4

Ref. No.	Part No.	Description	No. Used
33	65-5220	Screw - Cap Socket Hd.	2
34	66-0640	Bracket - Discharge	1
35	65-5221	Screw - Bracket	1
36	65-5010	Ramp - Discharge	1
37	66-0480	Decal - 21"	1

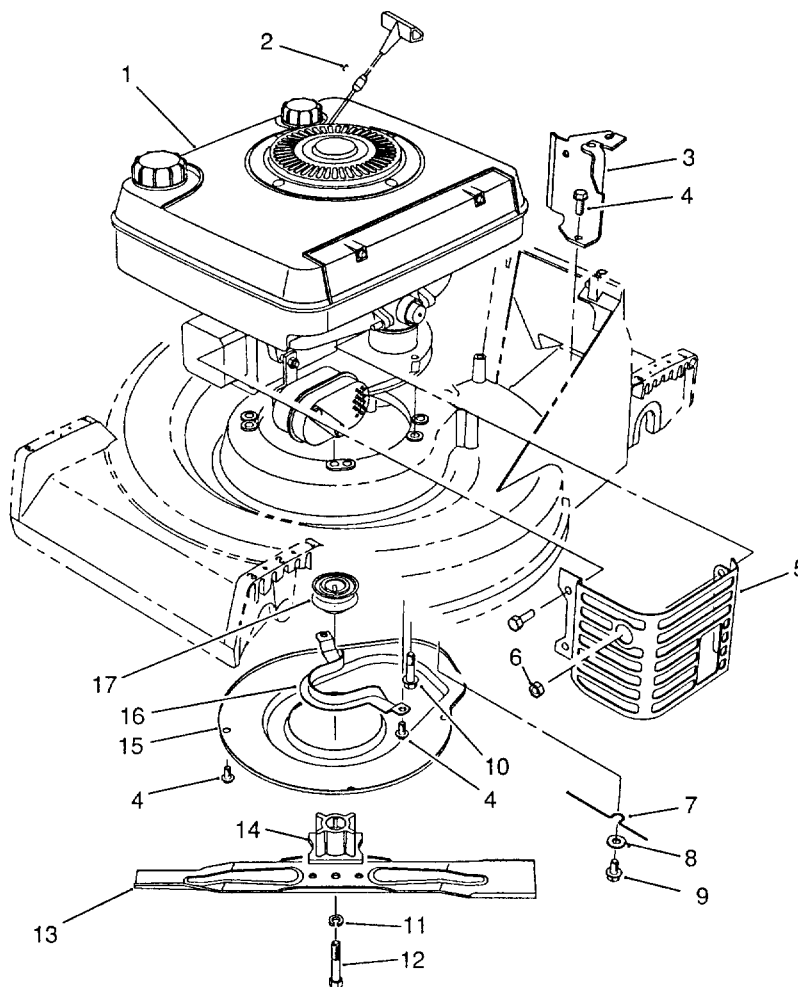


C-0284

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
†1		Engine - Tecumseh Model No. OVRM40-42604	1	9	32144-15	Screw - Hex. Washer Hd.	1
†2		Staple - Rope Stop	1	10	11-0590	Bolt - Engine	3
3	66-0030	Bracket - Cable Support	1	11	3253-22	Washer - Lock	1
4	32144-70	Screw - Hex. Washer Hd.	7	12	26-0670	Bolt - Blade	1
5	70-7720	Heat Shield - Muffler	1	13	62-7700	Blade - 21"	1
6	32149-3	Nut - Lock	1	14	62-7540	Retainer - Blade	1
7	66-0620	Retainer - Belt	1	15	65-5200	Shield	1
8	3256-24	Washer - Flat	1	16	66-0570	Guide - Belt	1
				17	62-7550	Pulley - Engine	1

†Obtain from your local Tecumseh dealer.

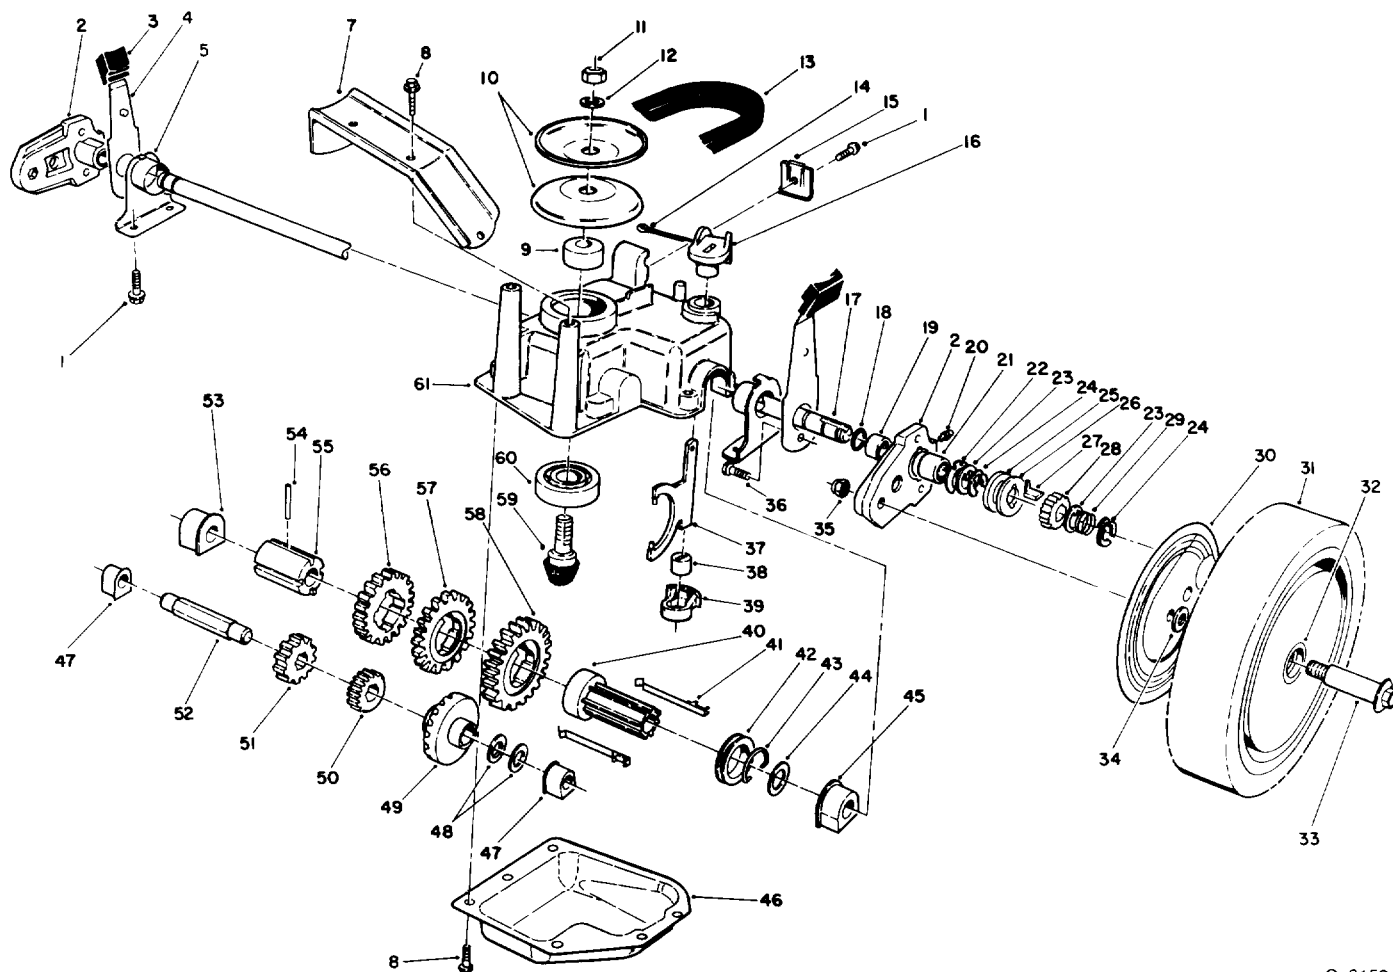


C-0152

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-70	Screw - Hex. Washer Hd.	5
2	65-5040	Pivot Arm Assembly (Incl. Ref. #19-21)	2
3	25-7740	Knob - Arm	2
4	65-5440	Spring Arm Assembly	2
5	66-0360	Cap - End	2
7	65-5190	Bracket - Belt Guide	1
8	49-2040	Screw - Self Tapping	8
9	62-6660	Spacer	1
10	60-8840	Pulley - Half	2
11	3296-5	Nut - Lock	1
12	3256-24	Washer - Flat	1
13	66-0210	V-Belt	1
14	3272-5	Pin - Cotter	1
15	66-0240	Clamp - Cable	1
16	66-0250	Lever - Shift	1
17	65-4770	Shaft - Output	1
18	237-153	Seal - O-Ring	2
19	47-2900	Bushing - Sleeve	2
20	302-56	Fitting - Grease	2
21	48-2060	Bearing - Needle	2
22	65-4730	Washer - Thrust (Inner)	2
23	65-4740	Washer - Thrust (Keyed)	4

Ref. No.	Part No.	Description	No. Used
24	65-2720	Ring - Retaining	4
25	65-4710	Ring - Friction	2
26	65-4760	Washer - Clutch	2
27	66-6050	Key - Rocking (L.H.)	1
*	66-6040	Key - Rocking (R.H.)	1
28	65-4750	Pinion	2
29	65-4720	Spring - Compression	2
30	63-5270	Cover - Wheel	2
31	11-9519	Wheel Tire & Gear Assy. (Incl. Ref. #32)	2
32	27-6250	Bushing - Wheel	4
33	27-6231	Bolt - Wheel	2
34	40-1940	Washer - Wheel Bolt	4
35	52-3620	Nut - Lock	2
36	65-5220	Screw - Cap Socket Hd.	2
37	60-8870	Yoke - Shift	1
38	29-9570	Bushing - Yoke	1
39	60-8810	Retainer - Shift Fork	1
40	60-8780	Sleeve - Shift Key	1
41	65-5230	Key - Shift	2
42	60-8760	Collar - Shift	1
43	65-5250	Clip - Spring	1
44	36-4780	Washer - Thrust	1

*Not Illustrated

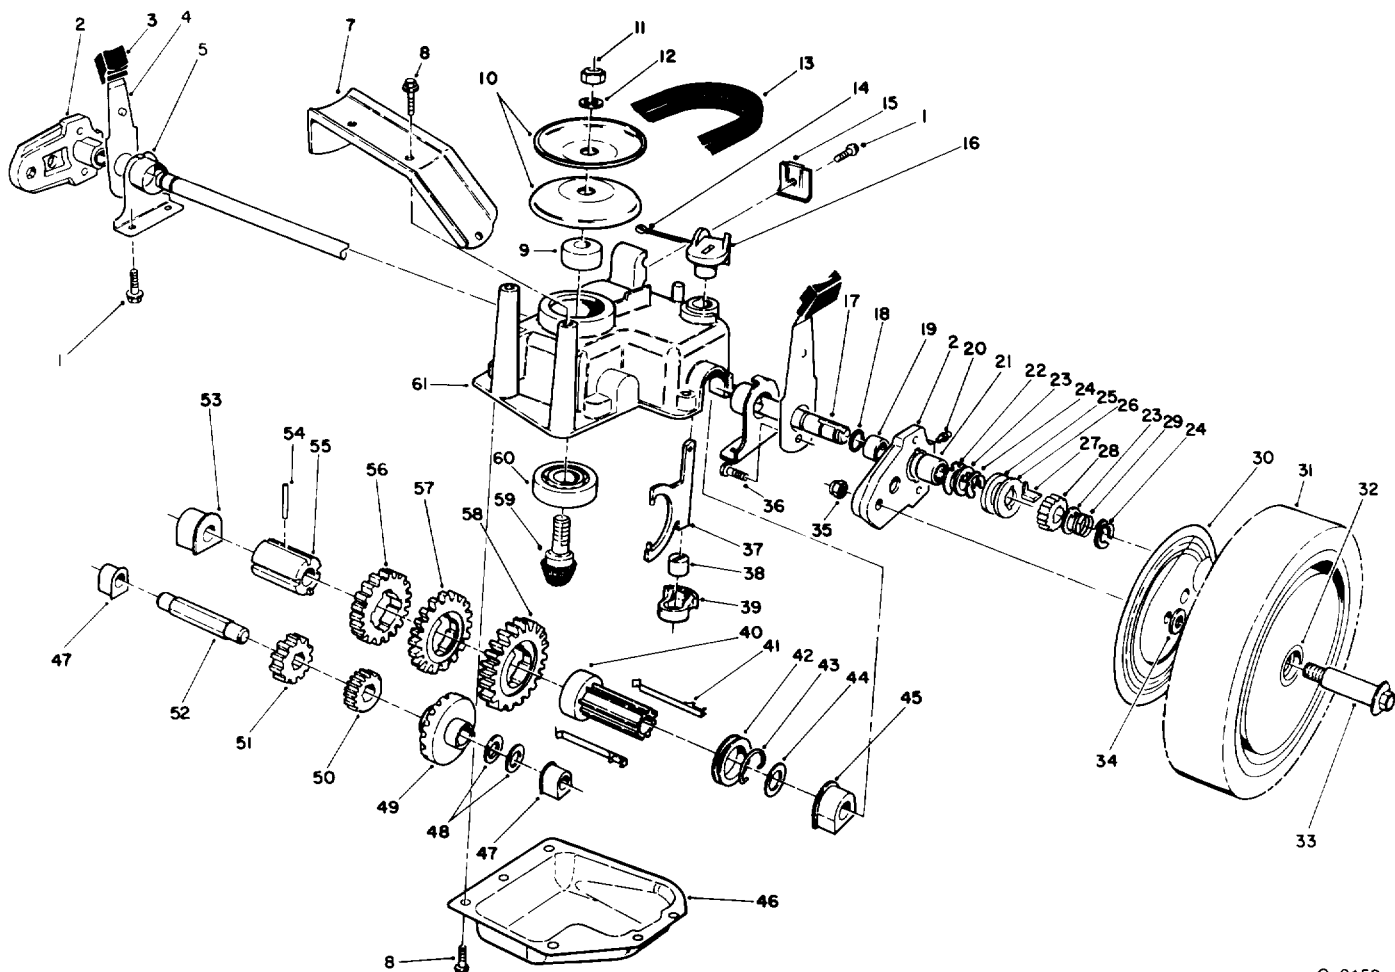


C-0152

GEAR CASE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	60-8770	Bushing - Output Shaft	1
46	60-8730	Cover - Gear Case	1
47	60-8750	Bushing - Intrmdt. Shaft	2
48	36-4791	Washer - Thrust	2
49	55-3760	Gear - Pinion 15T	1
50	55-3780	Gear - Pinion 20T	1
51	55-3800	Gear - Pinion 25T	1
52	60-8800	Shaft - Intermediate	1
53	60-8850	Bushing - Output Shaft	1

Ref. No.	Part No.	Description	No. Used
54	32121-120	Pin - Coil	1
55	60-8790	Sleeve - Gear	1
56	55-3810	Gear - 39T (3rd Gear)	1
57	55-3790	Gear - 44T (2nd Gear)	1
58	55-3770	Gear - 49T (1st Gear)	1
59	60-8890	Pinion - Bevel	1
60	38-7820	Bearing - Ball	1
61	60-8710	Case - Gear (Upper)	1
*	62-6672	Gear Case Assy. Complete	1

*Not Illustrated

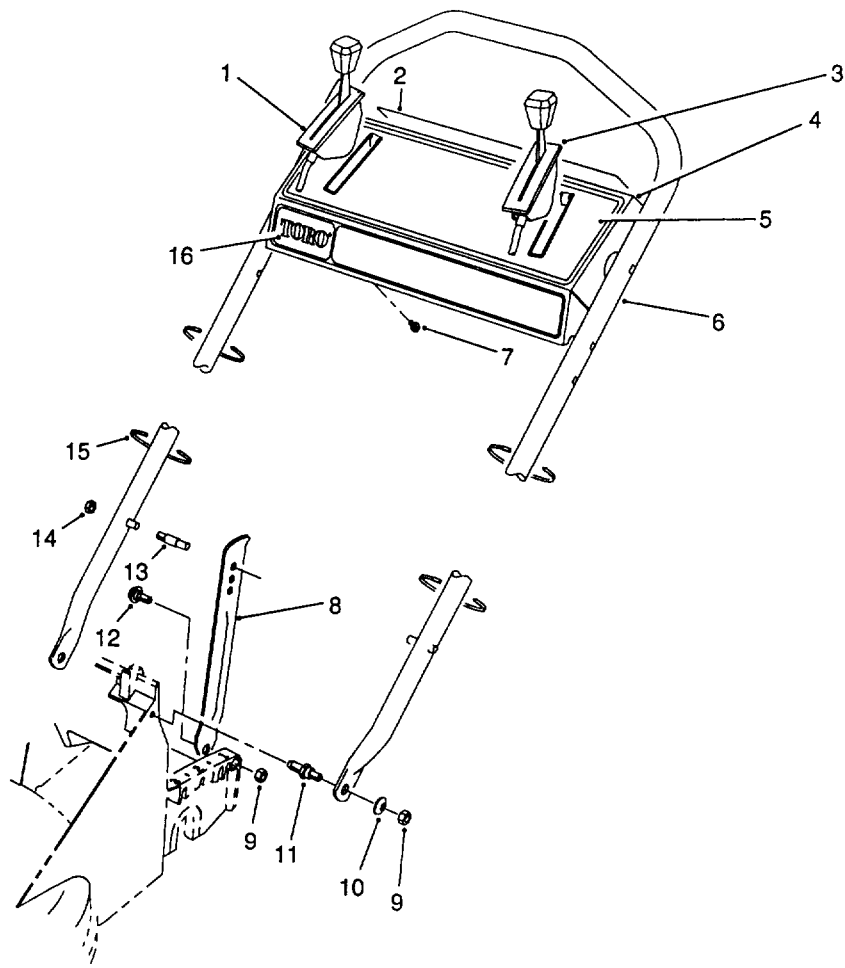


C-0173

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	65-5530	Control - Ground Speed Bend Type #3 Sheath Lg. 51-1/4" Wire Lg. 2-1/8"	1	6	66-0320	Handle	1
2	63-9060	Decal - Danger	1	7	32104-76	Screw - Self Tapping	5
3	71-0650	Control - Throttle Bend Type #1 Sheath Lg. 44-1/2" Wire Lg. 2-3/16"	1	8	65-5730	Latch - Handle	2
4	13-6389	Control Panel Assembly (Incl. Ref. #2, 5 & 16)	1	9	3296-29	Nut - Lock	4
5	66-0430	Decal - Instruction	1	10	3256-23	Washer - Flat	2
				11	66-0450	Screw - Shoulder Stud	2
				12	66-0440	Screw - Shoulder	2
				†13	49-2750	Pin - Handle	2
				†14	3296-47	Nut - Lock	2
				15	3290-378	Tie - Cable	4
				16	66-1770	Decal - TORO	1

*Not Illustrated

†Service Replacement Parts

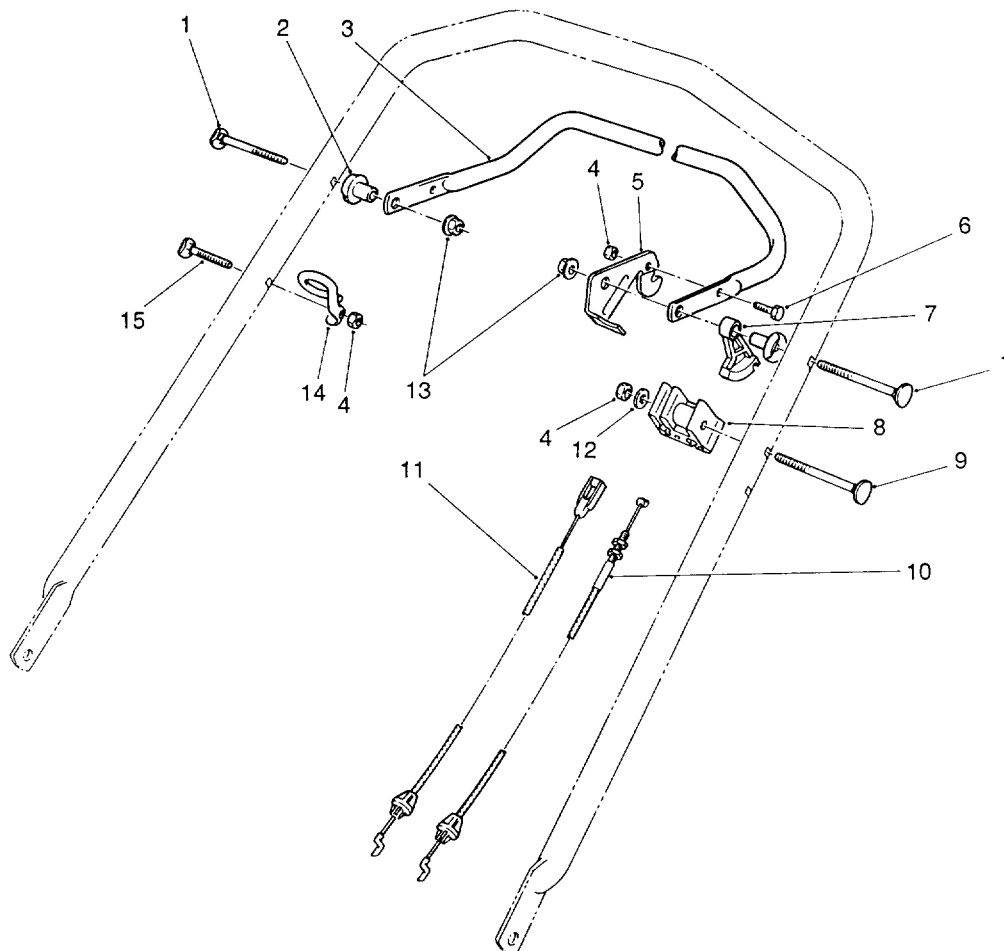


C-0287

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	17-9426	Screw - Handle	2
2	66-0330	Support - Spacer	2
3	52-7430	Bar - Control	1
4	3296-42	Nut - Lock	3
5	66-5350	Lever - Control	1
6	321-3	Screw - Cap Hex. Hd.	1
7	46-5520	Lever - Traction	1
8	71-0960	Support - Cable	1

Ref. No.	Part No.	Description	No. Used
9	46-6432	Screw - Handle	1
10	71-0620	Cable - Traction	1
11	71-0630	Cable - Brake	1
12	3256-22	Washer - Flat	1
13	3296-58	Nut - Flange Lock	2
14	46-8081	Guide - Rope	1
15	46-6435	Screw - Handle	1

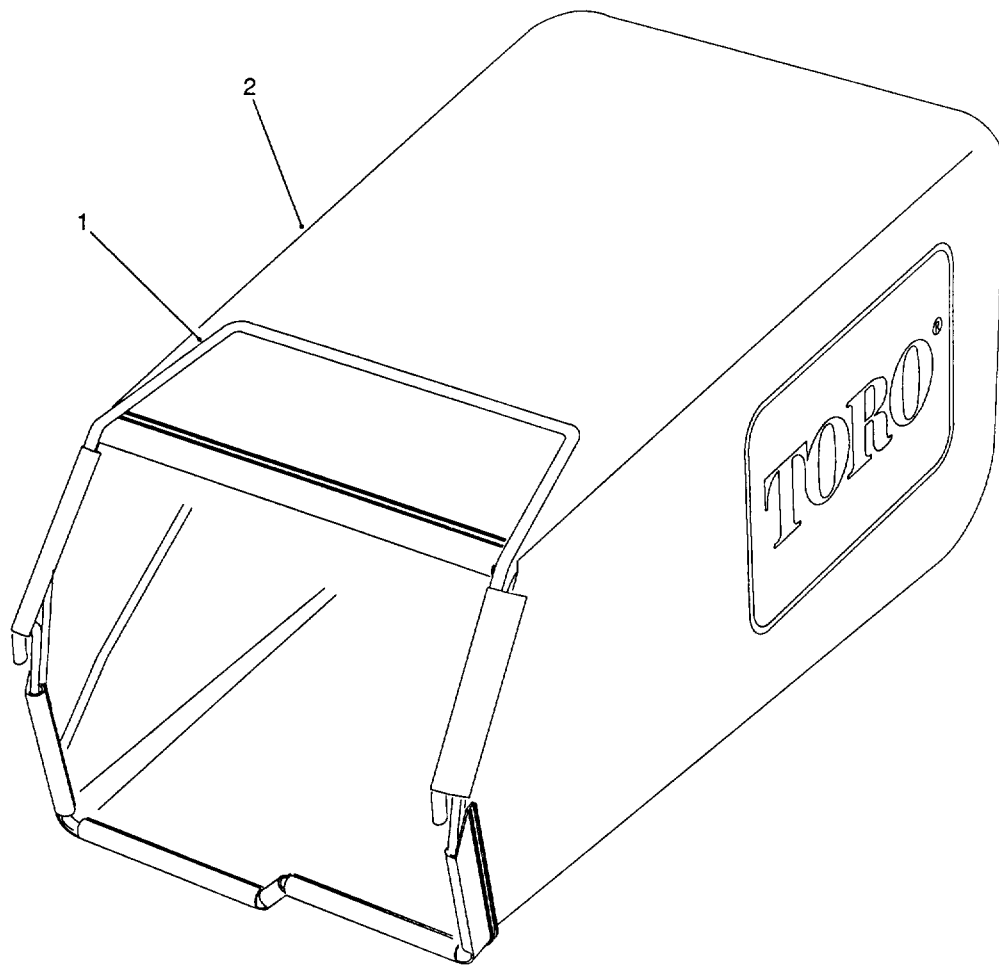


C-0168

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-2970	Frame - Grass Bag	1
2	66-0010	Bag	1

Ref. No.	Part No.	Description	No. Used
*	13-6349	Grass Bag Assembly (Incl. Ref. #1 & 2)	1

*Not Illustrated

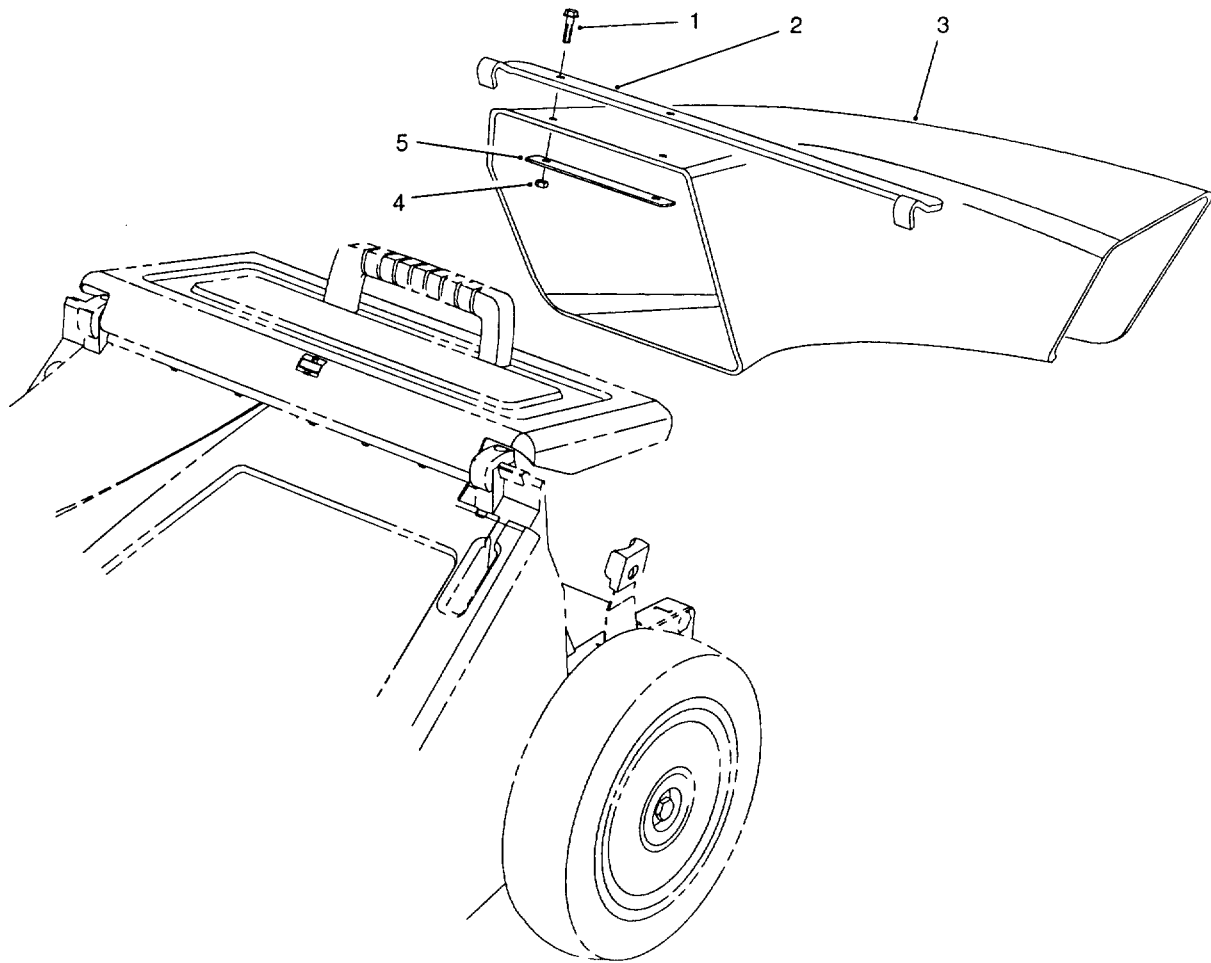


C-0169

SIDE DISCHARGE CHUTE MODEL NO. 59112 (Optional)

Ref. No.	Part No.	Description	No. Used
1	3290-126	Screw - Hex. Washer Hd.	2
2	66-0070	Bracket - Chute Hanger	1
3	65-5240	Chute - Discharge	1

Ref. No.	Part No.	Description	No. Used
4	3296-12	Nut - Lock	2
5	66-0060	Plate - Stress	1

ENGINE TECUMSEH MODEL NO. OVRM40-42604 (Cont.)

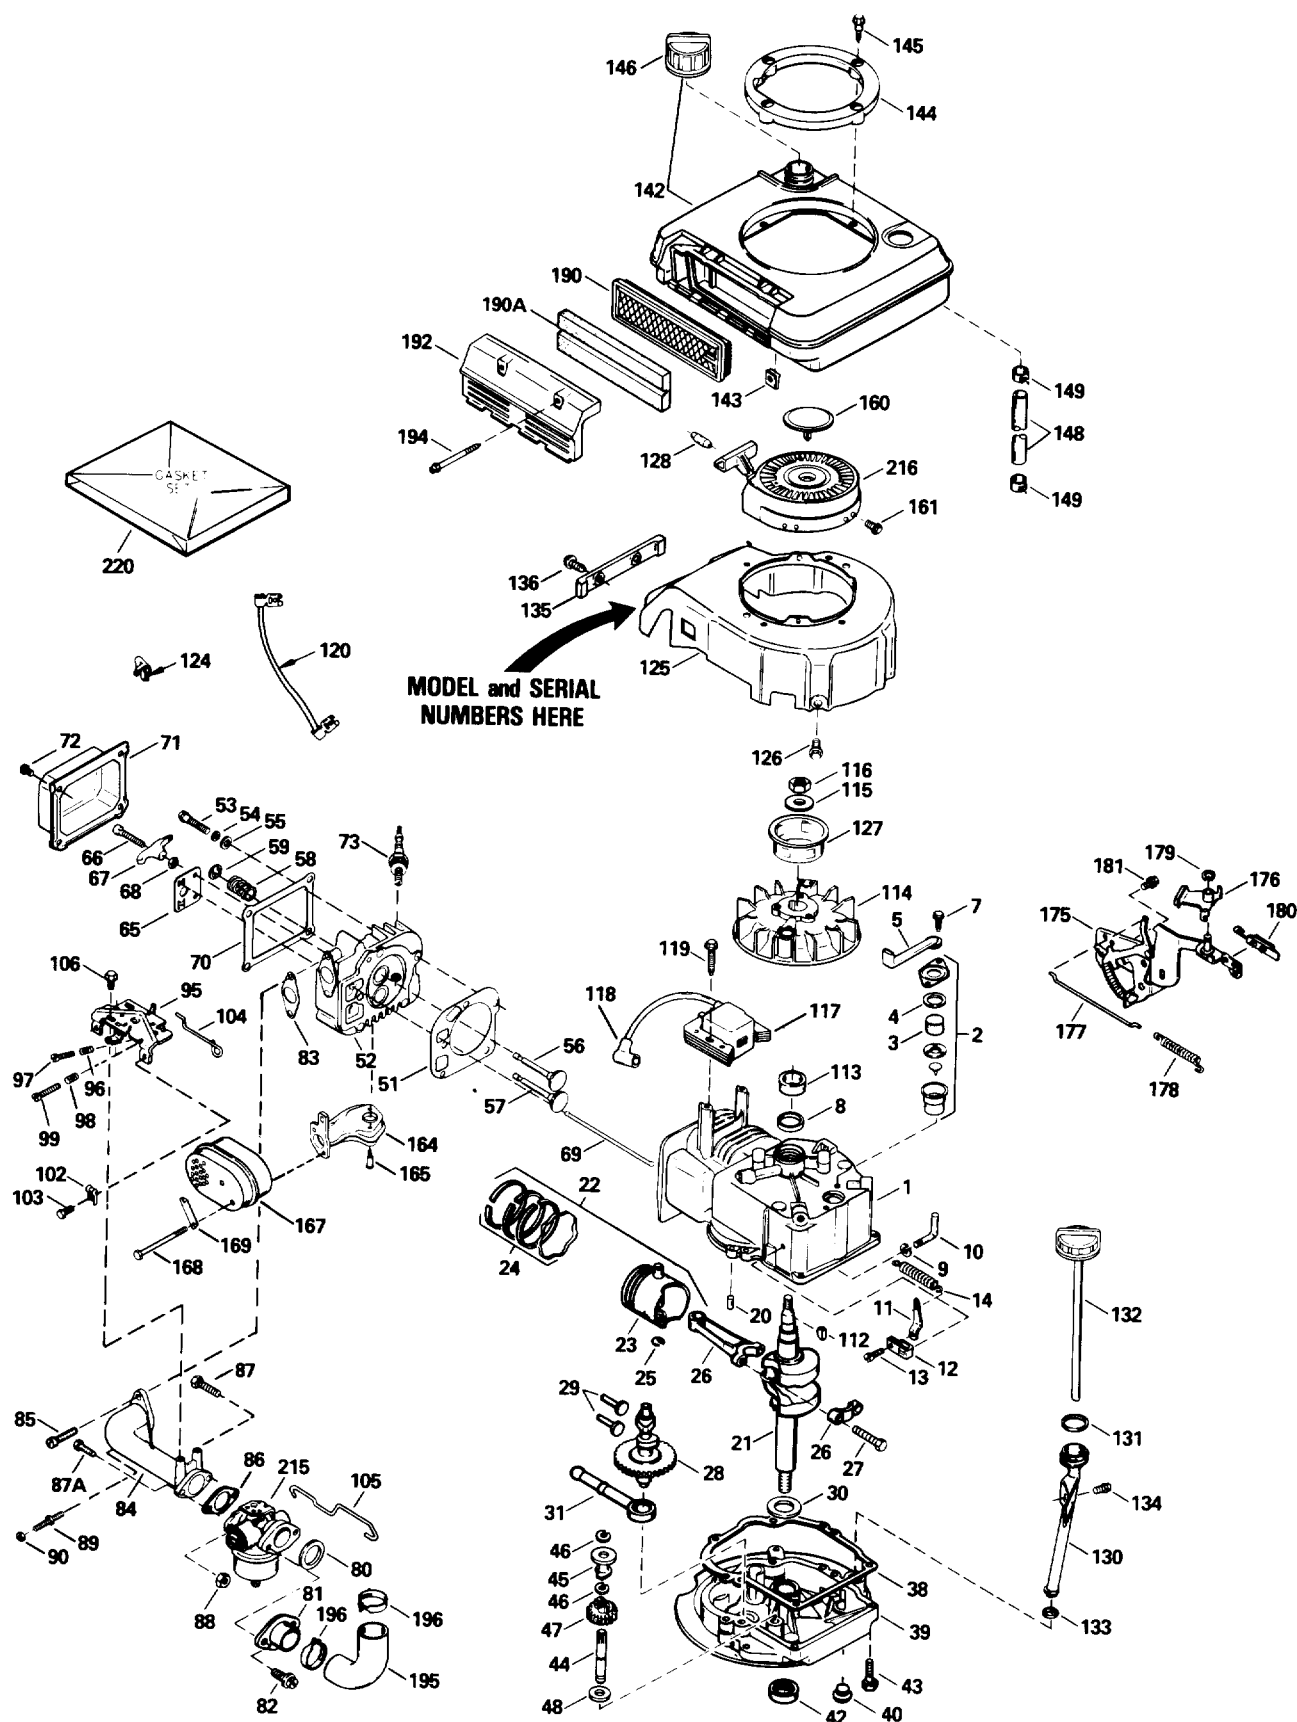

ENGINE TECUMSEH MODEL NO. OVRM40-42604


Ref. No.	Part No.	Description	No. Used
1	35613	Cylinder Assembly (Incl. Ref. #8 & 20)	1
2	34214A	Breather Assembly (Incl. Ref. #3, 4 & 7)	1
3	33734	Element - Breather	1
4	†33735	Gasket - Breather	1
5	35496	Tube - Breather	1
7	30200	Screw - Hex. Washer Hd.	2
8	32600	Seal - Oil	1
9	28277	Washer - Flat	1
10	30589	Rod - Governor (Incl. Ref. #9)	1
11	31383A	Lever - Governor	1
12	31335	Clamp - Governor Lever	1
13	650548	Screw - Hex. Washer Hd.	1
14	33578	Spring - Extension	1
20	26727	Pin - Dowel	2
21	35749	Crankshaft	1
22	34514	Piston Pin & Ring Std. (Incl. Ref. #23-25)	1
*	34515	Piston Pin & Ring .010 O.S. (Incl. Ref. #23-25)	1
*	34516	Piston Pin & Ring .020 O.S. (Incl. Ref. #23-25)	1
23	32538B	Piston & Pin Std. (Incl. Ref. #25)	1
*	32548B	Piston & Pin .010 O.S. (Incl. Ref. #25)	1
*	32549B	Piston & Pin .020 O.S. (Incl. Ref. #25)	1
24	28986	Piston Ring Set Std.	1
*	28987	Piston Ring Set .010 O.S.	1
*	28988	Piston Ring Set .020 O.S.	1
25	20381	Ring - Retaining	2
26	30963B	Connecting Rod Assy. (Incl. Ref. #27)	1
27	32610A	Bolt - Connecting Rod	2
28	35615	Camshaft	1
29	35616	Valve - Lifter	2
30	32323	Washer - Thrust	1
31	29914	Oil Pump Assembly	1
38	†35261	Gasket - Mounting Flange	1
39	34311B	Flange - Mounting (Incl. Ref. #40, 40A, 42 & 44)	1
40	27244	Plug - Oil Drain	1
42	27897	Seal - Oil	1
43	650488	Screw - Hex. Hd.	6
44	30574	Shaft - Governor	1
45	30588A	Spool - Governor	1
46	29193	Ring - Retaining	2
47	30591	Governor Gear Assembly (Incl. Ref. #48)	1
48	35479	Washer - Flat	1
51	†35617	Gasket - Cylinder Head	1
52	35630	Head - Cylinder	1
53	650912	Screw - Hex. Hd.	5
54	650691	Washer - Flat	5
55	650690	Washer - Belleville	5

Ref. No.	Part No.	Description	No. Used
56	35619	Valve - Intake Std. (Incl. Ref. #59)	1
*	35620	Valve - Intake .031 O.S. (Incl. Ref. #59)	1
57	35621	Valve - Exhaust Std. (Incl. Ref. #59)	1
*	35622	Valve - Exhaust .031 O.S. (Incl. Ref. #59)	1
58	31672	Spring - Valve	2
59	31673	Cap - Valve Spring Keeper	2
65	35623	Guide - Push Rod	1
66	650913	Stud - Rocker Arm	2
67	35624	Arm - Rocker	2
68	650914	Nut - Hex. Jam	2
69	35625	Rod - Push	2
70	†35626	Gasket - Rocker Cover	1
71	35718	Cover - Rocker Arm	1
72	30063	Screw - Hex. Washer Hd.	4
73	34645	Spark Plug - Resistor (Champion RN-4C or equivalent)	1
80	†27272A	Gasket - Air Cleaner	1
81	32971	Adapter - Air Cleaner	1
82	650709	Screw - Round Hd.	2
83	†35629	Gasket - Intake Pipe	1
84	35628	Pipe - Intake	1
85	65-451	Screw - Hex. Hd.	1
86	†26756	Gasket - Carburetor	1
87	6201	Screw - Hex. Hd.	1
87A	650920	Screw - Special Hex. Hd.	1
88	29752	Nut - Lock	2
89	650917	Stud - Manifold	1
90	29752	Nut - Lock	1
95	33131A	Control Bracket Assembly (Incl. Ref. #96-100)	1
96	33802	Spring - Compression	1
97	650777	Screw - Filester Hd.	1
98	31342	Spring - Compression	1
99	650549	Screw - Filester Hd.	1
102	27793	Clip - Conduit	1
103	28942	Screw - Hex. Washer Hd.	1
104	34337	Link - Governor Spring	1
105	34336	Link - Throttle	1
106	30200	Screw - Hex. Washer Hd.	2
112	611004	Key - Flywheel	1
113	34080	Spacer - Flywheel Key	1
114	611112	Flywheel	1
115	650815	Washer - Belleville	1
116	650816	Nut - Flywheel	1
117	34443A	Solid State Assembly	1
118	610118	Cover - Spark Plug	1
119	650814	Screw - Torx Washer Hd.	2
120	34961	Wire - Ground	1
124	29443	Clip - Spring	1
125	35719	Housing - Blower	1
126	650831	Screw - Hex. Washer Hd.	3
127	35000	Hub - Starter	1
128	34985	Retainer - Starter Rope	1
130	35498	Tube - Oil Fill	1
131	35499	Seal - O-Ring	1

*Not Illustrated

†Included In Gasket Set Ref. No. 220

ENGINE TECUMSEH MODEL NO. OVRM40-42604

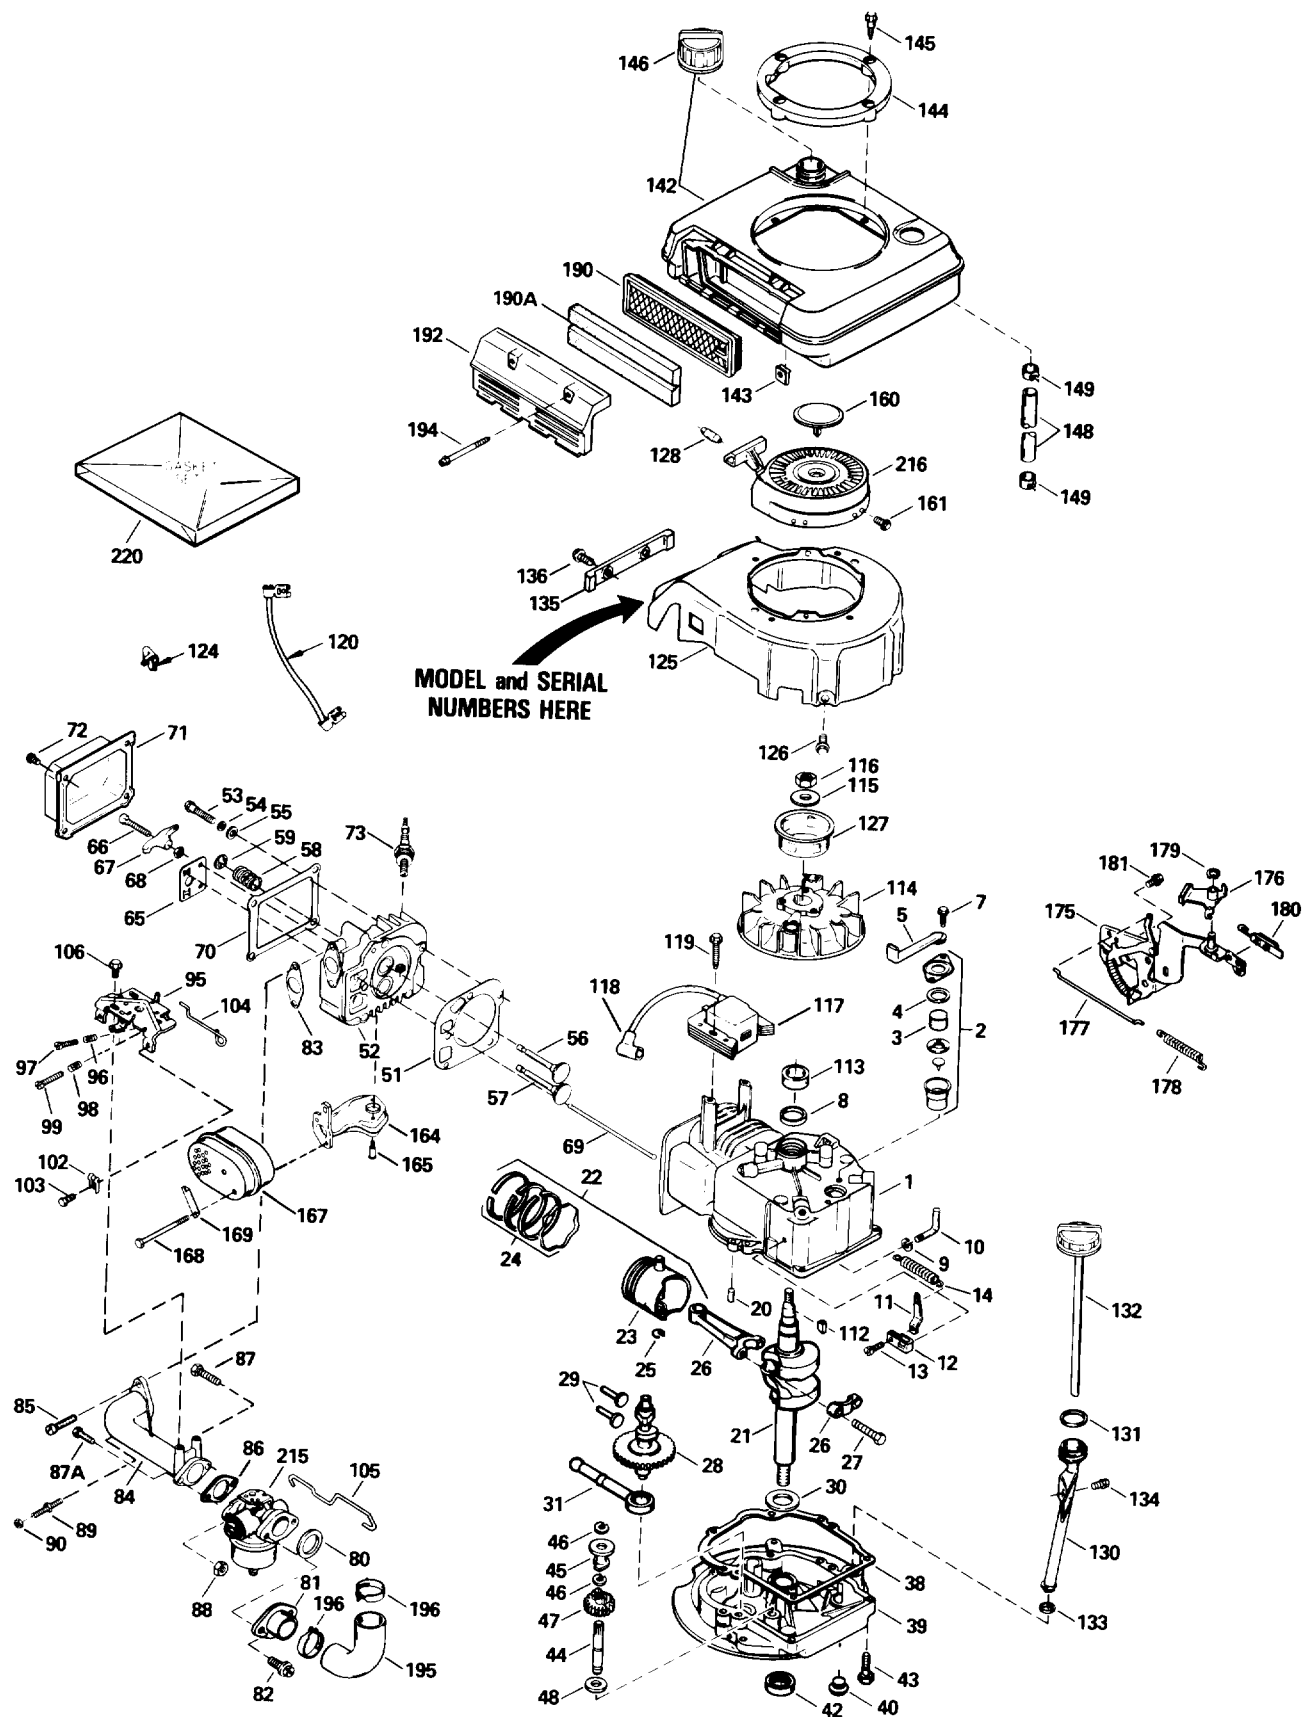

ENGINE TECUMSEH MODEL NO. OVRM40-42604 (Cont.)

Ref. No.	Part No.	Description	No. Used
132	35507	Dipstick - Oil Fill	1
133	†34265	Gasket - Fill Tube	1
134	650562	Screw - Hex. Washer Hd.	1
135	35721	Cover - Blower Housing	1
136	650821	Screw - Hex. Washer Hd.	2
142	35501A	Shroud & Tank Assembly (Incl. Ref. #143 & 146)	1
143	650900	Clip - U-Nut	2
144	35502	Ring - Shroud	1
145	650898	Screw - Shoulder	4
146	35355	Cap - Fuel	1
148	30705	Line - Fuel	1
149	26460	Clamp - Fuel Line	2
160	35392	Plug - Starter	1
161	650884	Screw - Hex. Washer Hd.	2
164	35720	Exhaust Manifold Assembly	1
165	650918	Screw - Torx Hd. Shoulder	2
167	391028	Muffler Assembly	1
168	650697A	Screw - Hex. Washer Hd.	2


Ref. No.	Part No.	Description	No. Used
169	31588	Plate - Lock	1
175	35039	Bracket - Brake	1
176	34968	Lever - Brake	1
177	34966	Link - Control	1
178	34965	Spring - Extension	1
179	32309	Ring - Retaining	1
180	610973	Terminal Assembly	1
181	650839	Screw - Hex. Hd.	2
190	35500	Filter - Air Cleaner	1
190A	35705	Filter - Pre-Cleaner	1
192	35503	Cover - Air Cleaner	1
194	650899	Screw - Flaster Hd.	2
195	35504	Tube - Air Cleaner	1
196	35505	Clamp - Air Cleaner	2
215	632521	Carburetor Assembly (Incl. Ref. #86)	1
216	590621	Starter - Rewind	1
220	35633A	Gasket Set	1

*Not Illustrated

†Included In Gasket Set Ref. No. 220



Ref. No.	Part No.	Description	No. Used
13	631022	Clip - Needle	1
14	632019	Float - Carburetor	1
15	631024	Shaft - Float	1
16	631867	Bowl - Float	1
17	632386	Spring - Float Shaft	1
21	27110	Washer - Fiber	1
22	632505	Nut - Float Bowl	1
25	631028	Gasket - Float Bowl	1
26	631807	Fitting - Fuel Inlet	1

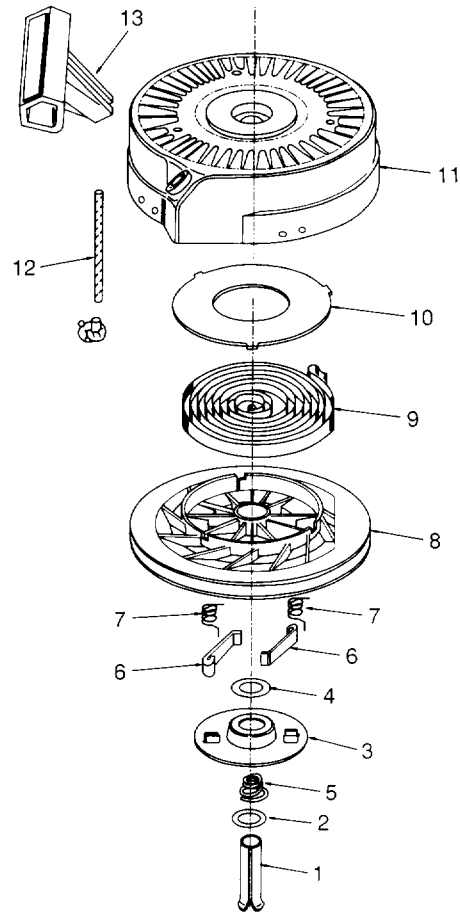

REWIND STARTER TECUMSEH NO. 590621

Ref. No.	Part No.	Description	No. Used
1	590599A	Pin - Spring	1
2	590600	Washer	1
3	590615	Retainer	1
4	590601	Washer	1
5	590598	Spring - Brake	1
6	590616	Dog - Starter	2
7	590617	Spring - Dog	2

Ref. No.	Part No.	Description	No. Used
8	590618	Pulley	1
9	590619	Spring - Rewind	1
10	590620	Cover - Spring	1
11	590622	Housing - Starter	1
12	590535	Rope - Starter 62"	1
13	590452	Handle - Starter	1

