


TORO®

MODEL NO. 26624-9000001 & UP
MODEL NO. 26624C-9900001 & UP

PARTS CATALOG

21" S.P. REAR BAGGER

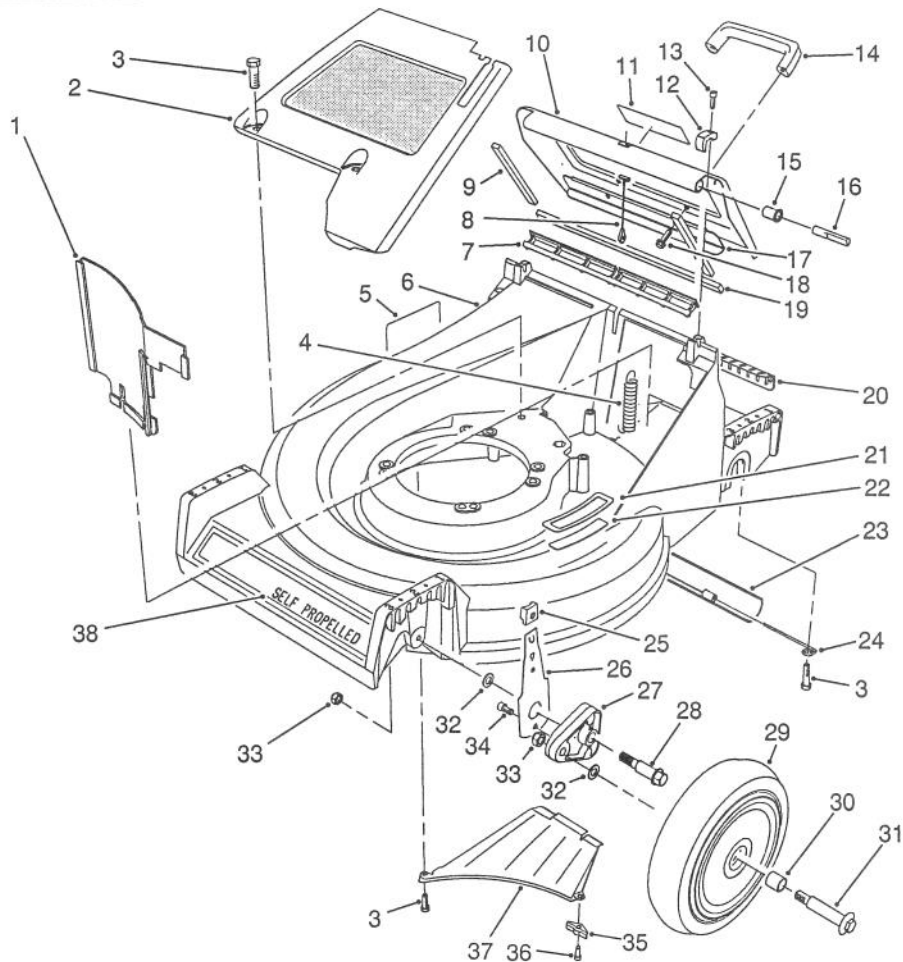


C-0250

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66-0020	Panel - Vertical	1
2	65-5660	Panel - Screen	1
3	32144-70	Screw - Cap Hex. Hd.	6
4	65-5360	Spring - Extension	1
5	43-8480	Decal - Danger (Model No. 26624)	1
*	56-6270	Decal - Danger (Model No. 26624C)	1
6	13-4689	Housing - 21" (Incl. Ref. #5, 21 & 22) (Model No. 26624)	1
*	13-5869	Housing - 21" (Incl. Ref. #5, 21 & 22) (Model No. 26624C)	1
7	65-5160	Seal - Door	1
8	65-5370	Cable - Door	1
9	65-5480	Seal - Door Side	2

Ref. No.	Part No.	Description	No. Used
10	13-2189	Door - Discharge (Incl. Ref. #9, 11, 17 & 19) (Model No. 26624)	1
*	13-5889	Door - Discharge (Incl. Ref. #9, 11, 17 & 19) (Model No. 26624C)	1
11	63-9050	Decal - Warning (Model No. 26624)	1
*	68-9570	Decal - Warning (Model No. 26624C)	1
12	65-5140	Clamp - Hinge	2
13	65-5210	Screw - Hex. Socket Hd.	2
14	65-5100	Handle - Door	1
15	65-5460	Bushing - Door	2
16	65-5290	Pin - Hinge	2
17	66-0610	Brace - Door	1
18	46-8091	Screw - Handle	2

*Not Illustrated

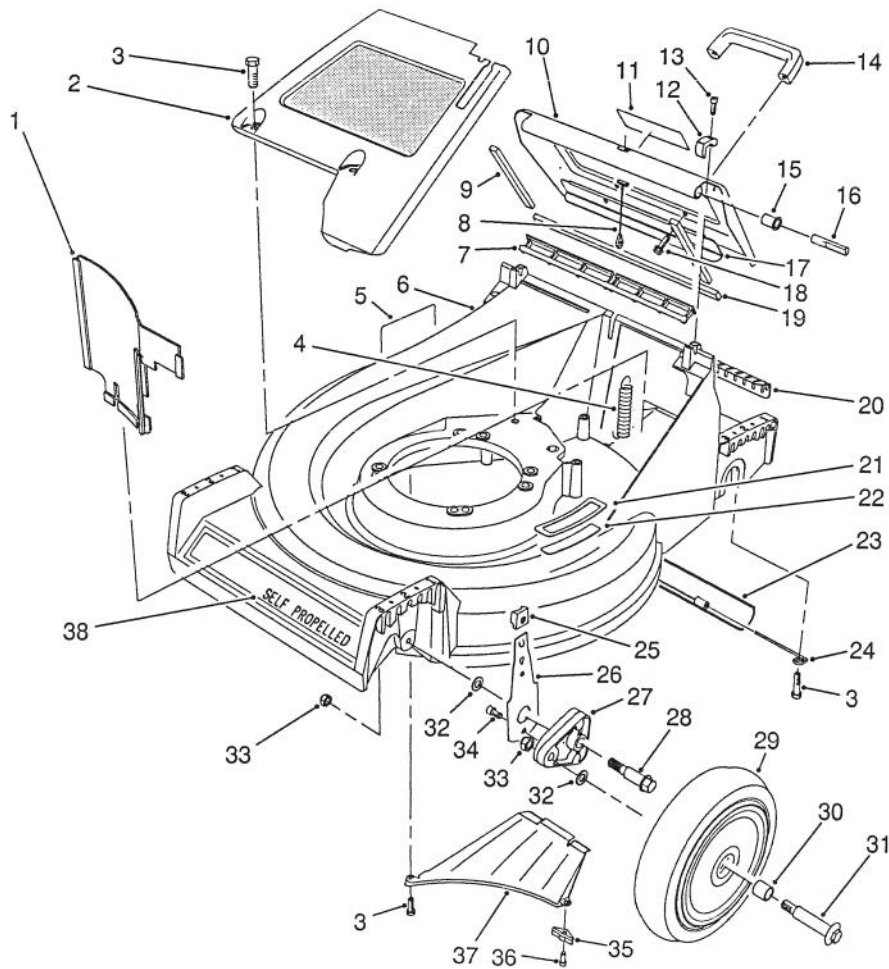


C-0250

HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
19	65-5490	Seal - Door (End)	1	29	11-9509	Wheel & Tire Assembly (Incl. Ref. #30)	2
20	65-5150	Cover - Access	1	30	27-6250	Bushing - Wheel	4
21	66-0110	Pad - Step (Model No. 26624 Only)	1	31	27-6231	Bolt - Wheel	2
22	46-7370	Decal - Step Pad (Model No. 26624)	1	32	40-1940	Washer - Wheel	4
*	62-3950	Decal - Step Pad (Model No. 26624C)	1	33	52-3620	Nut - Lock	4
23	65-5350	Shield - Trailing	1	34	65-5220	Screw - Cap Socket Hd.	2
24	66-0150	Hanger - Shield (L.H.)	1	35	66-0640	Bracket - Discharge	1
*	66-0140	Hanger - Shield (R.H.)	1	36	65-5221	Screw - Bracket	1
25	25-7740	Knob - Spring Arm	2	37	65-5010	Ramp - Discharge	1
26	66-0540	Arm - Front Spring	2	38	66-0460	Decal - 21" (Model No. 26624)	1
27	66-0580	Arm - Front Pivot	2	*	70-7590	Decal - 53 cm (Model No. 26624C)	1
28	66-0560	Screw - Shoulder	2				

*Not Illustrated

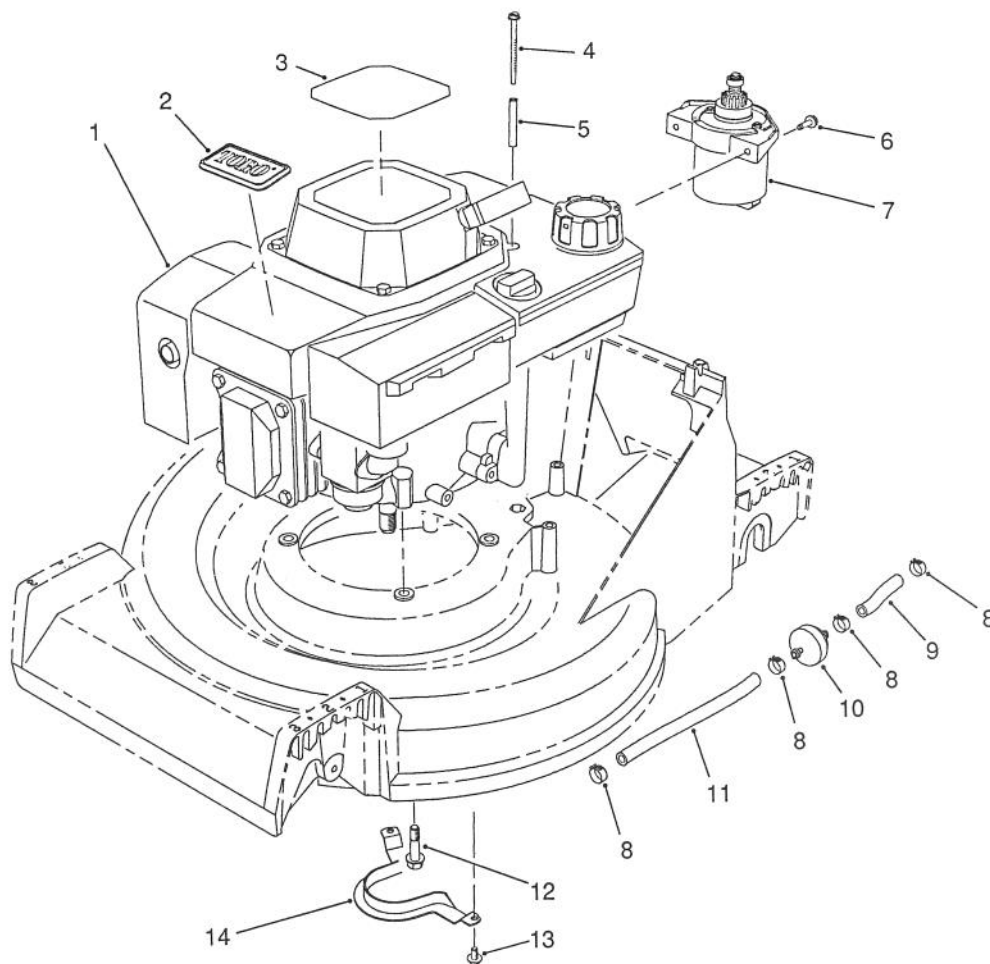


C-0165

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	72-4142	Engine - OHV	1	7	53-4500	Starter Motor Assembly	1
2	46-8290	Plate - TORO Logo	1	8	2412-95	Clamp - Fuel Line	4
3	66-0490	Decal - Recoil (Model No. 26624)	1	9	51-3211	Line - Fuel	1
*	57-3120	Decal - Recoil (Model No. 26624C)	1	10	56-6360	Filter - Fuel	1
4	56-6610	Screw - Thread Forming	2	11	51-3214	Line - Fuel	1
5	57-3830	Spacer - Tubular	2	12	11-0590	Screw - Cap Hex. Hd.	3
6	56-6380	Screw - Thread Forming	2	13	32144-70	Screw - Cap Hex. Hd.	2
				14	66-0570	Guide - Belt	1
				*	56-6680	Tube - Oil Drain	1

*Not Illustrated

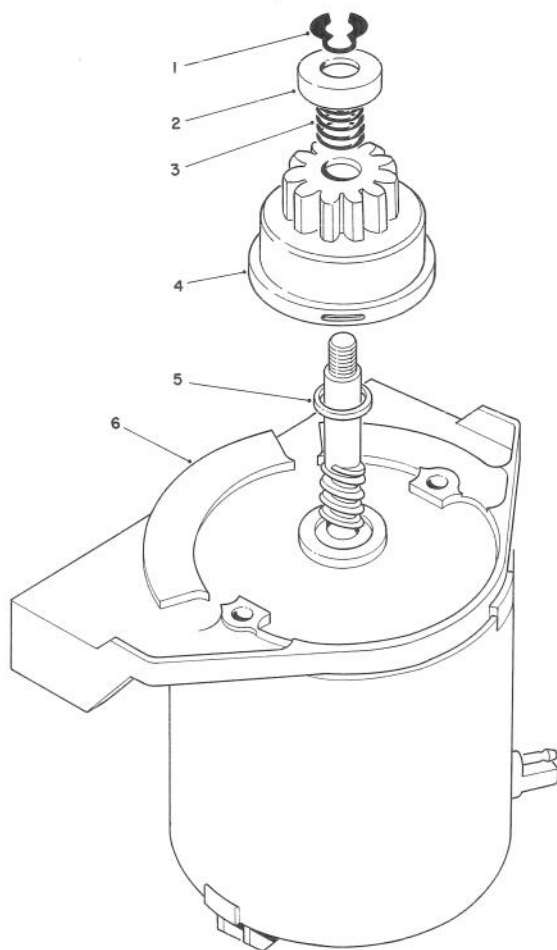


C-0156

STARTER MOTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32151-47	Ring - Retaining	1	5	23-9591	Spacer	1
2	49-2170	Stop - Pinion	1	6	53-4460	Frame - End	1
3	44-0500	Spring - Compression	1	*	53-4500	Starter Motor Assembly (Incl. Ref. #1-6)	1
4	43-4370	Pinion Assembly	1				

*Not Illustrated

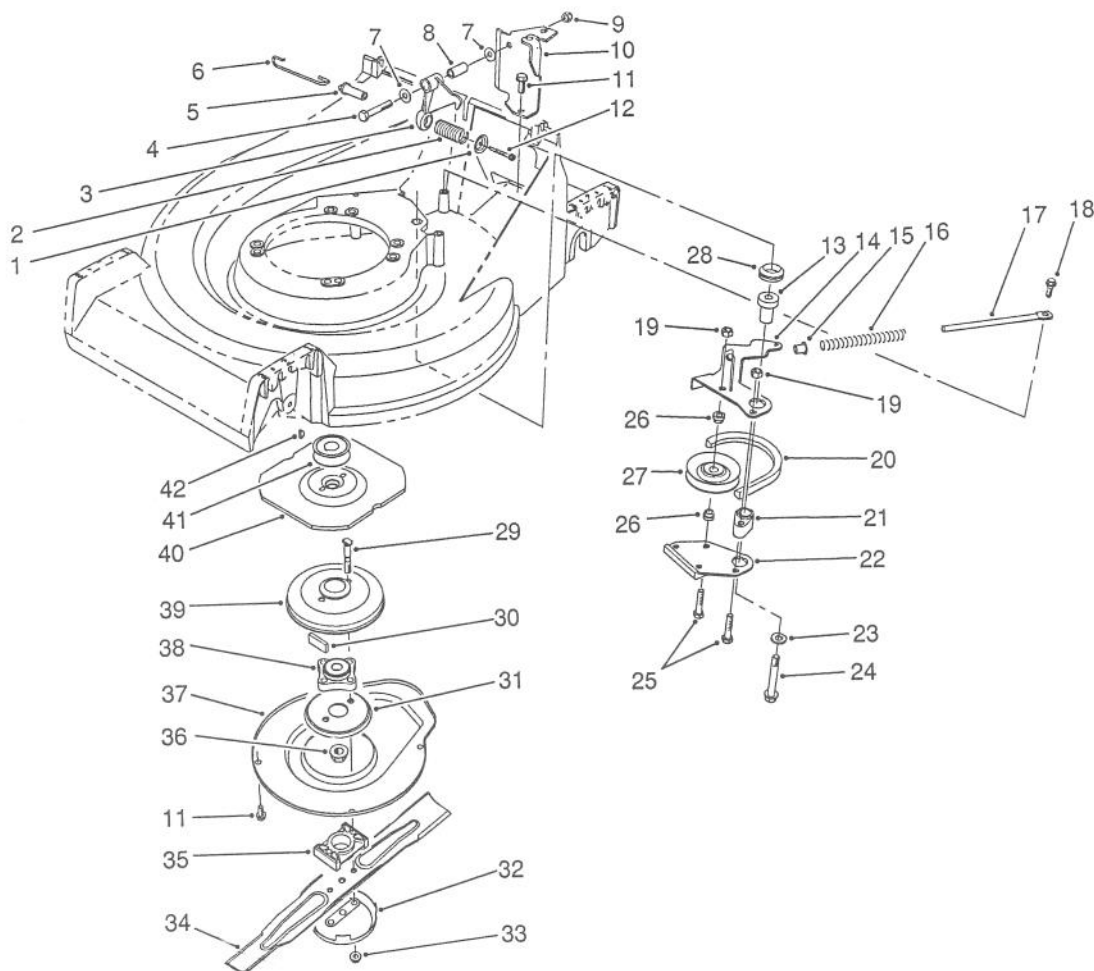


C-0182

BLADE BRAKE CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	65-5280	Retainer - Spring	1
2	71-3630	Spring - Compression	1
3	65-5700	Crank	1
4	322-21	Screw - Cap Hex. Hd.	1
5	71-3660	Pin - BBC Spring	1
6	71-3650	Link - Control	1
7	3256-23	Washer - Flat	2
8	65-5690	Bushing - Bellcrank	1
9	32128-44	Nut - Lock	1
10	66-0030	Bracket - Cable Support	1
11	32144-70	Screw - Cap Hex. Hd.	5
12	46-7040	Screw - Cap Hex. Hd.	1
13	65-5720	Bushing - BBC	1
14	66-0090	Lever - Brake	1
15	66-0350	Bushing - Flange	1
16	71-3640	Spring - Compression	1
17	65-5320	Rod - Brake Spring	1
18	65-5670	Bolt - Shoulder	1
19	3296-42	Nut - Lock	2
20	65-5740	Belt - BBC	1
21	65-5070	Hub - Brake Plate	1

Ref. No.	Part No.	Description	No. Used
22	65-5780	Brake Plate Assembly	1
23	65-5380	Washer	1
24	11-0580	Screw - Cap Hex. Hd.	1
25	321-13	Screw - Cap Hex. Hd.	2
26	65-5130	Hub - Idler Pulley	2
27	46-5650	Idler Pulley Assembly	1
28	253-151	Seal - V-Ring	1
29	42-3190	Screw - BBC	2
30	52-3480	Dampner - Vibration	2
31	65-5330	Screen - BBC	1
32	42-0910	Cup - Anti Scalp	1
33	54-9190	Nut - Flange Lock	2
34	62-7700	Blade - 21"	1
35	62-4280	Spacer - Blade	1
36	3296-33	Nut - Lock	1
37	65-5200	Cover - BBC	1
38	42-6890	Hub Assembly	1
39	62-3890	Drum - Brake	1
40	65-5300	Flywheel - BBC	1
41	62-7560	Pulley - Engine	1
42	3257-3	Key - Woodruff	1

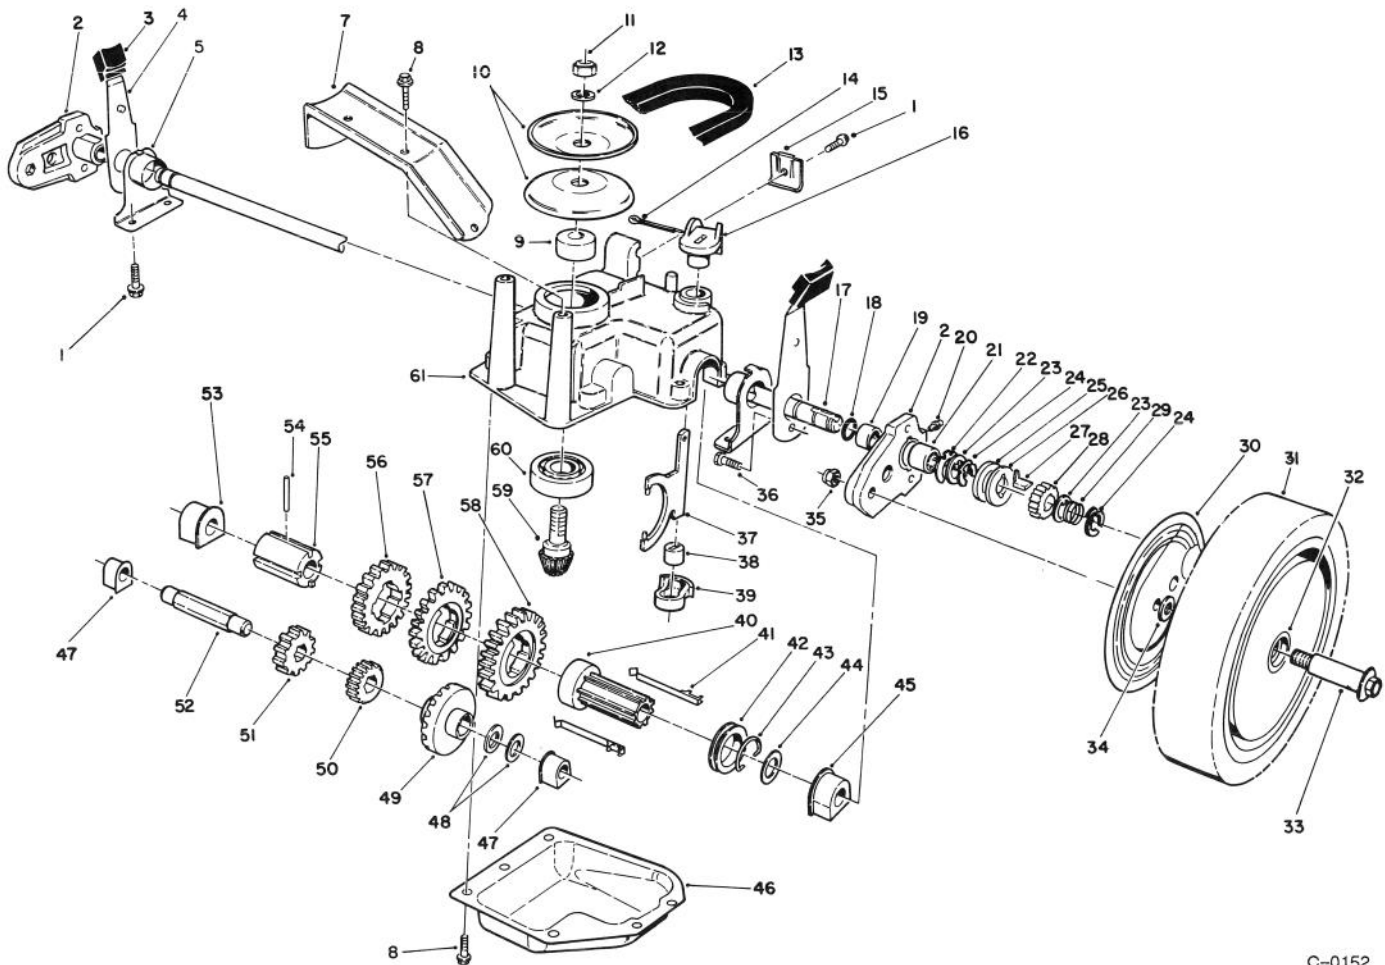


C-0152

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-70	Screw - Hex. Washer Hd.	5
2	65-5040	Pivot Arm Assembly (Incl. Ref. #19-21)	2
3	25-7740	Knob - Arm	2
4	65-5440	Spring Arm Assembly	2
5	66-0360	Cap - End	2
7	65-5190	Bracket - Belt Guide	1
8	49-2040	Screw - Self Tapping	8
9	62-6660	Spacer	1
10	60-8840	Pulley - Half	2
11	3296-5	Nut - Lock	1
12	3256-24	Washer - Flat	1
13	66-0210	V-Belt	1
14	3272-5	Pin - Cotter	1
15	66-0240	Clamp - Cable	1
16	66-0250	Lever - Shift	1
17	65-4770	Shaft - Output	1
18	237-153	Seal - O-Ring	2
19	47-2900	Bushing - Sleeve	2
20	302-56	Fitting - Grease	2
21	48-2060	Bearing - Needle	2
22	65-4730	Washer - Thrust (Inner)	2
23	65-4740	Washer - Thrust (Keyed)	4

Ref. No.	Part No.	Description	No. Used
24	65-2720	Ring - Retaining	4
25	65-4710	Ring - Friction	2
26	65-4760	Washer - Clutch	2
27	66-6050	Key - Rocking (L.H.)	1
*	66-6040	Key - Rocking (R.H.)	1
28	65-4750	Pinion	2
29	65-4720	Spring - Compression	2
30	63-5270	Cover - Wheel	2
31	11-9519	Wheel Tire & Gear Assy. (Incl. Ref. #32)	2
32	27-6250	Bushing - Wheel	4
33	27-6231	Bolt - Wheel	2
34	40-1940	Washer - Wheel Bolt	4
35	52-3620	Nut - Lock	2
36	65-5220	Screw - Cap Socket Hd.	2
37	60-8870	Yoke - Shift	1
38	29-9570	Bushing - Yoke	1
39	60-8810	Retainer - Shift Fork	1
40	60-8780	Sleeve - Shift Key	1
41	65-5230	Key - Shift	2
42	60-8760	Collar - Shift	1
43	65-5250	Clip - Spring	1
44	36-4780	Washer - Thrust	1

*Not Illustrated

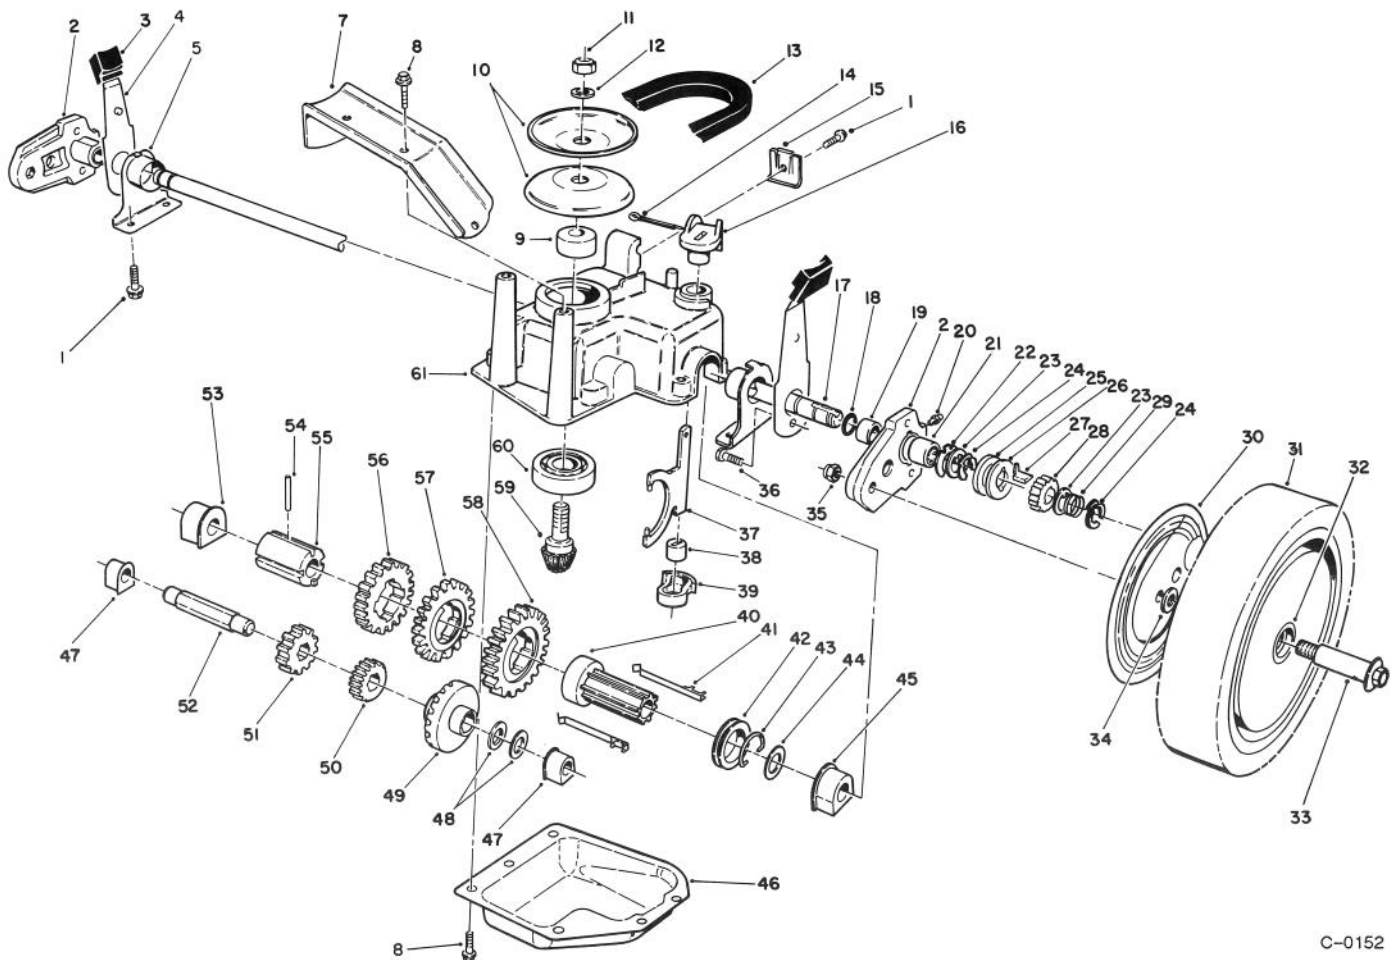


C-0152

GEAR CASE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
45	60-8770	Bushing - Output Shaft	1	54	32121-120	Pin - Coil	1
46	60-8730	Cover - Gear Case	1	55	60-8790	Sleeve - Gear	1
47	60-8750	Bushing - Intrmdt. Shaft	2	56	55-3810	Gear - 39T (3rd Gear)	1
48	36-4791	Washer - Thrust	2	57	55-3790	Gear - 44T (2nd Gear)	1
49	55-3760	Gear - Pinion 15T	1	58	55-3770	Gear - 49T (1st Gear)	1
50	55-3780	Gear - Pinion 20T	1	59	60-8890	Pinion - Bevel	1
51	55-3800	Gear - Pinion 25T	1	60	38-7820	Bearing - Ball	1
52	60-8800	Shaft - Intermediate	1	61	60-8710	Case - Gear (Upper)	1
53	60-8850	Bushing - Output Shaft	1	*	62-6672	Gear Case Assy. Complete	1

*Not Illustrated

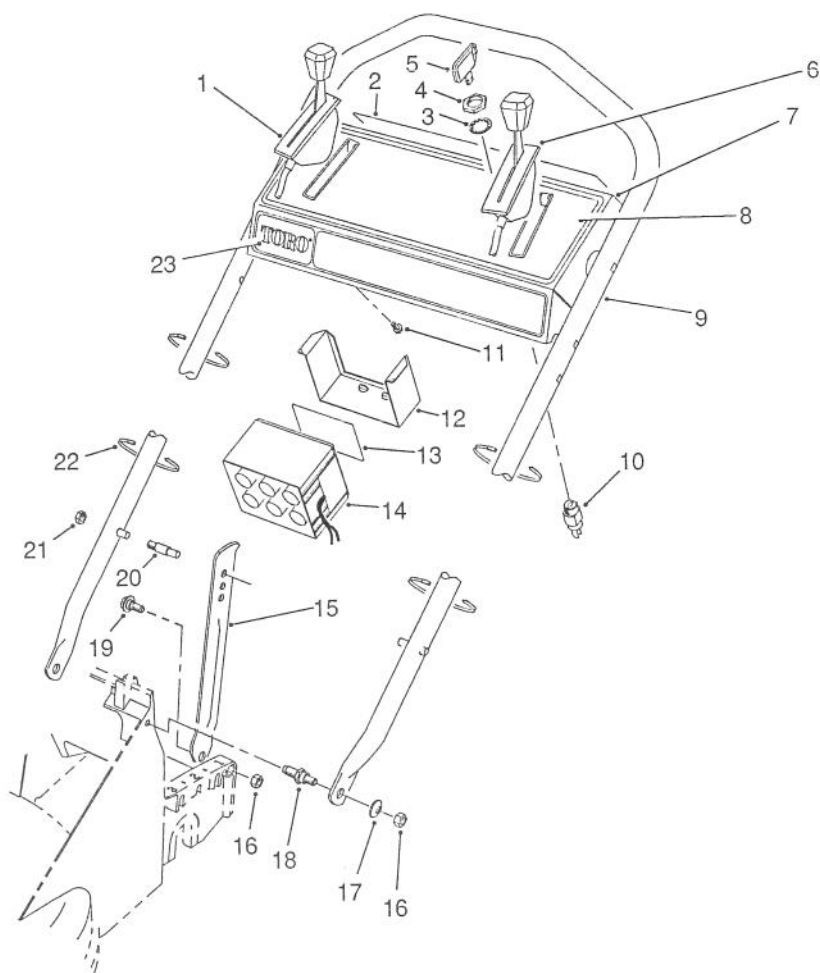


C-0292

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	65-5530	Control - Ground Speed Bend Type #3 Sheath Lg. 51-1/4" Wire Lg. 2-1/8"	1	8	63-9040	Decal - Instruction (Model No. 26624)	1
2	63-9060	Decal - Danger (Model No. 26624)	1	*	66-0270	Decal - Instruction (Model No. 26624C)	1
*	66-1790	Decal - Danger (Model No. 26624C)	1	9	66-0320	Handle	1
3	3254-5	Washer - Lock	1	10	46-5780	Switch - Starter (Incl. Ref. #4 & 5)	1
4	218-461	Nut - Lock	1	11	32104-76	Screw - Self Tapping	4
5	63-8360	Key - Ignition	1	12	55-8180	Retainer - Battery	1
6	66-0230	Control - Throttle Bend Type #2 Sheath Lg. 44-3/4" Wire Lg. 2-1/2"	1	13	55-8190	Decal - Instructions	1
7	13-2229	Panel - Control (Incl. Ref. #8) (Model No. 26624)	1	14	55-7520	Battery (Incl. Ref. #13)	1
*	13-6539	Panel - Control (Incl. Ref. #8) (Model No. 26624C)	1	15	65-5730	Latch - Handle	2
				16	3296-29	Nut - Lock	4
				17	3256-23	Washer - Flat	2
				18	66-0450	Screw - Shoulder Stud	2
				19	66-0440	Screw - Shoulder	2
				†20	49-2750	Pin - Handle	2
				†21	3296-47	Nut - Lock	2
				22	3290-378	Tie - Cable	5
				23	65-5650	Decal - TORO	1
				*	49-8312	Harness - Wire	1
				*	6-9780	Charger - Battery (110V)	1

*Not Illustrated


†Service Replacement Parts

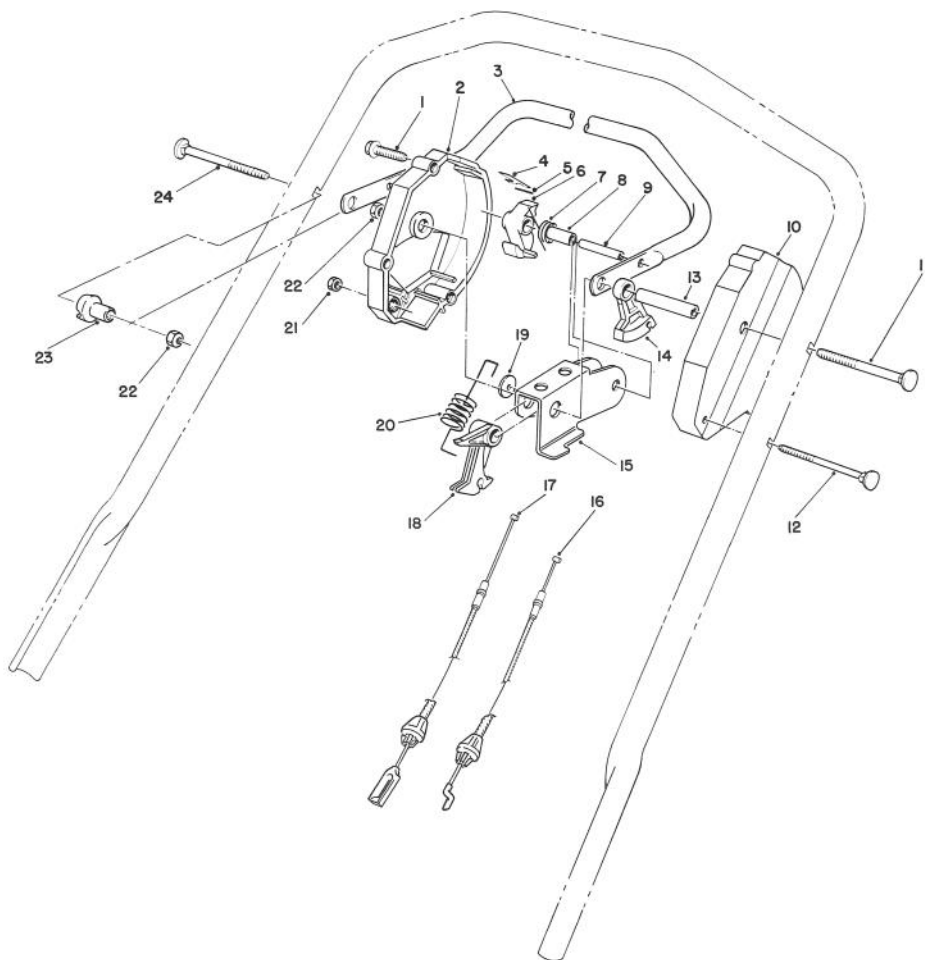

C-0153

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	46-7040	Screw - Hex. Washer Hd.	3	13	46-5590	Spacer	1
2	66-0160	Housing - Control R.H.	1	14	46-5520	Lever - Traction	1
3	52-7430	Control Bar Assembly	1	15	66-0180	Rocker	1
4	52-7410	Spring - Leaf	1	16	65-5520	Cable - Traction	1
5	57-6290	Pin - Insert	1	17	66-0730	Cable - Clutch	1
6	46-5530	Hook - Control	1	18	46-5540	Lever - Cable	1
7	46-5510	Spring - Torsion	1	19	66-0170	Washer - Nylon	1
8	46-5550	Bushing - Sleeve	1	20	66-0190	Spring - Detent	1
9	32121-9	Pin - Coil	1	21	3296-8	Nut - Lock	1
10	46-5460	Housing - Control (L.H.)	1	22	3296-58	Nut - Lock	2
11	17-9425	Screw - Handle	1	23	66-0330	Support - Spacer	1
12	46-6431	Screw - Handle	1	24	17-9426	Screw - Handle	1

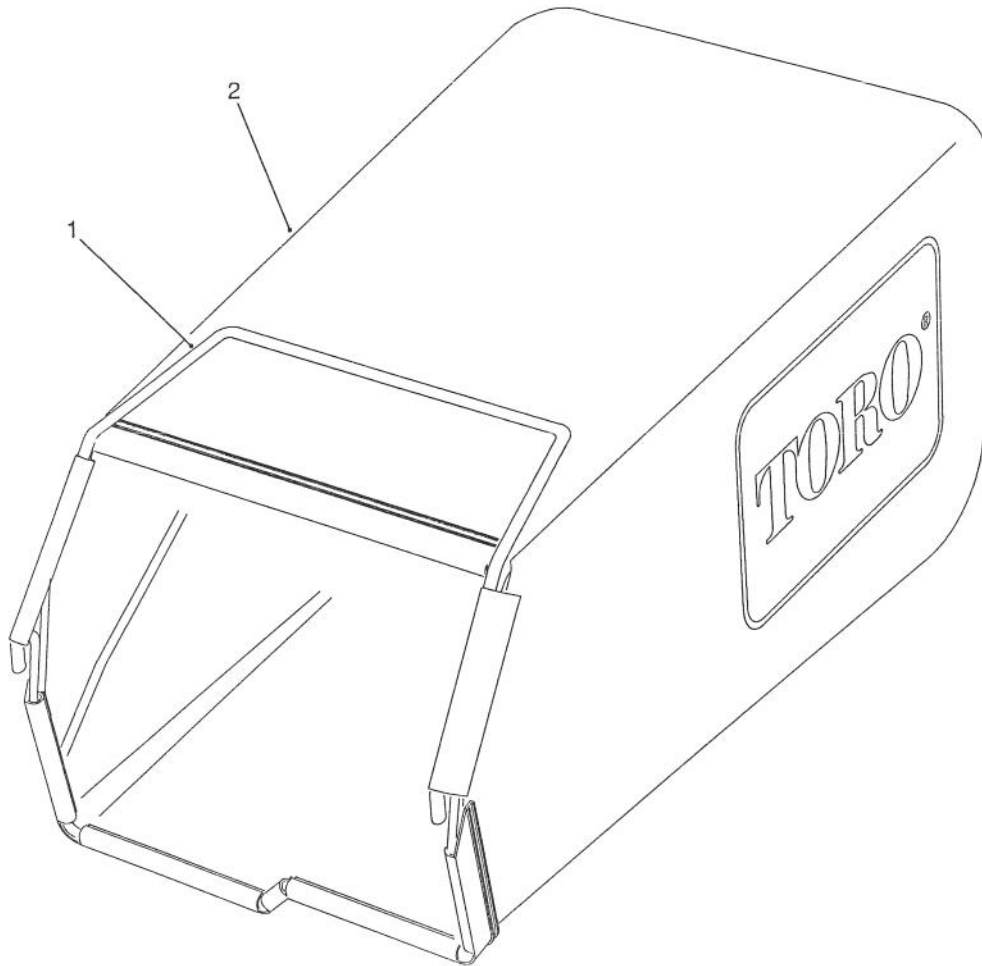


C-0168

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-2970	Frame - Grass Bag	1
2	66-0010	Bag	1

Ref. No.	Part No.	Description	No. Used
*	13-6349	Grass Bag Assembly (Incl. Ref. #1 & 2)	1

*Not Illustrated

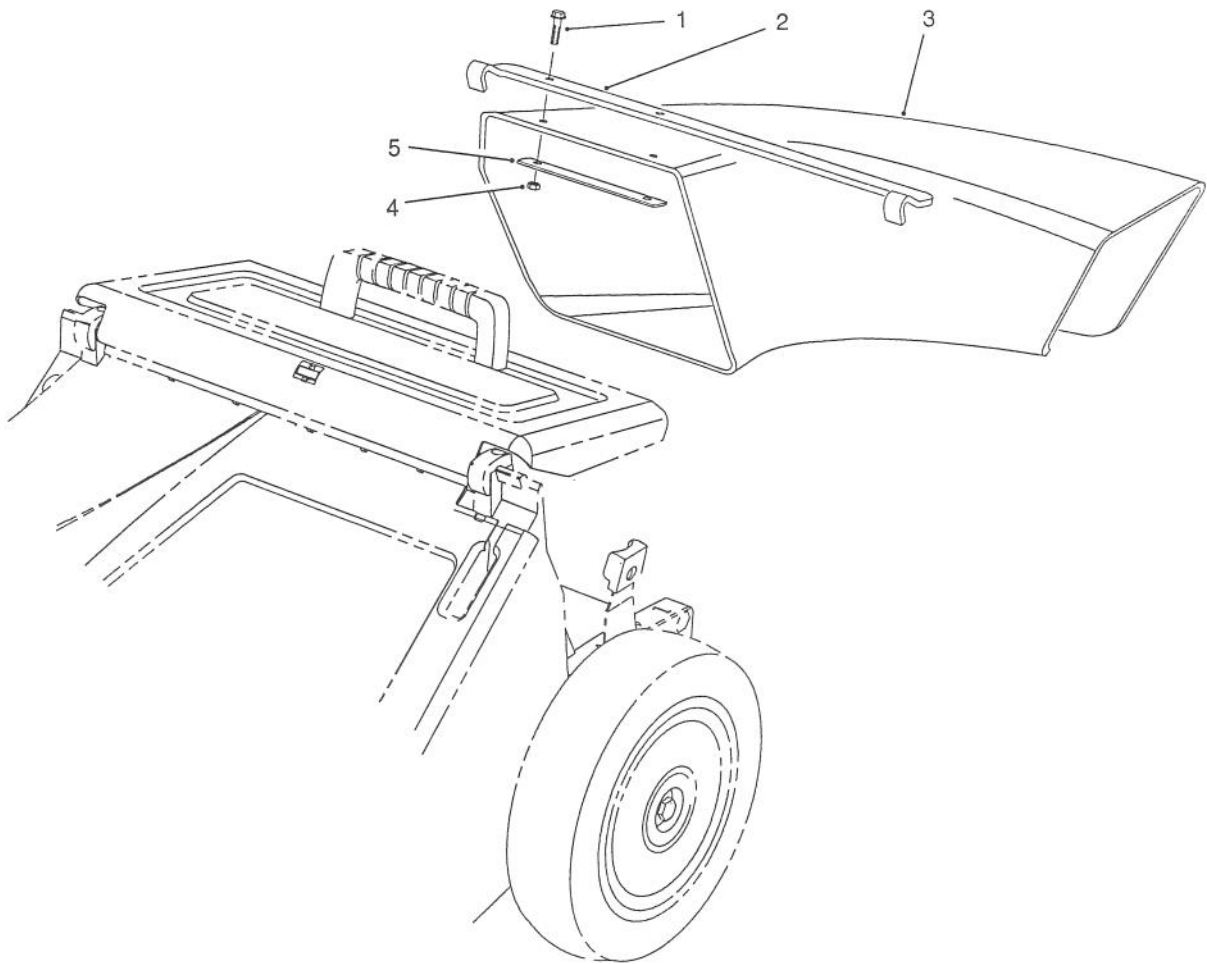


C-0169

SIDE DISCHARGE CHUTE MODEL NO. 59112 (Optional)

Ref. No.	Part No.	Description	No. Used
1	3290-126	Screw - Hex. Washer Hd.	2
2	66-0070	Bracket - Chute Hanger	1
3	65-5240	Chute - Discharge	1

Ref. No.	Part No.	Description	No. Used
4	3296-12	Nut - Lock	2
5	66-0060	Plate - Stress	1

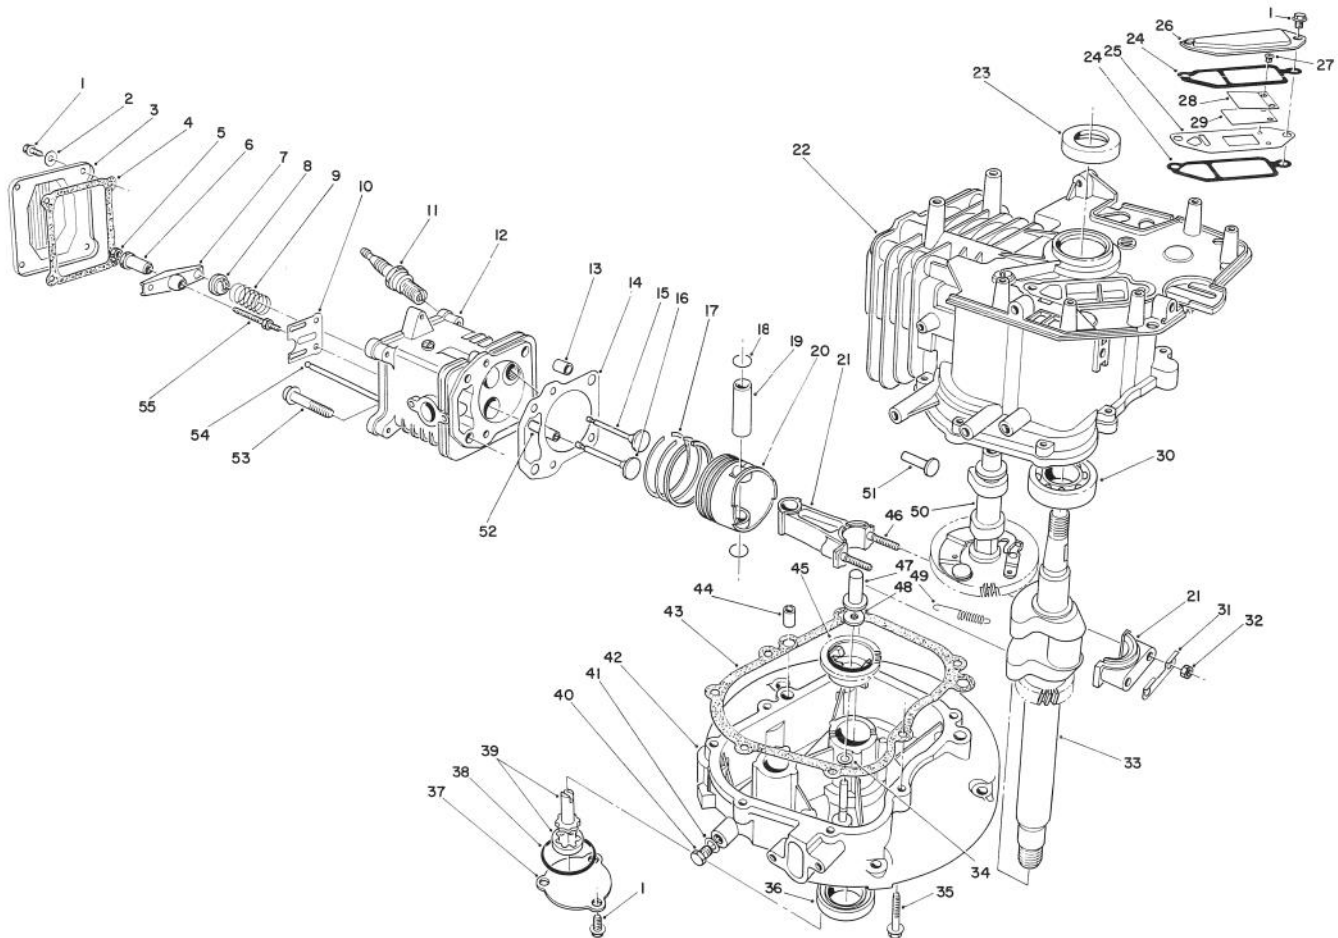


C-0157

CRANKCASE ASSEMBLY (Engine Model No. VMG6 & VMH7)

Ref. No.	Part No.	Description	No. Used
1	81-1170	Bolt	9
2	81-3790	Washer	4
3	81-3780	Cover - Rocker Arm	1
4	81-3770	Gasket - Cover	1
5	81-3760	Nut - Jam	2
6	81-3750	Pivot - Rocker Arm	2
7	81-3740	Arm - Rocker	2
8	81-3730	Retainer - Valve Spring	2
9	81-3720	Spring - Valve	2
10	81-3710	Guide - Push Rod	1
11	81-3250	Plug - Spark	1
12	81-3700	Head - Cylinder (Incl. Ref. #52)	1
*	81-3840	Cylinder Head Assembly (Incl. Ref. #1-10, 12 & 52-55)	1
13	81-3690	Pin - Dowel	2
14	81-4710	Gasket - Cylinder Head	1
*	81-3820	Gasket Set	1
15	81-3660	Valve - Exhaust	1
16	81-3670	Valve - Intake	1
17	81-3650	Piston Ring Set	1

Ref. No.	Part No.	Description	No. Used
18	50-0960	Circlip	2
19	81-3630	Pin - Piston	1
20	81-3620	Piston	1
21	81-3390	Connecting Rod Assembly (Incl. Ref. #31, 32 & 46)	1
22	81-3280	Block - Engine (Incl. Ref. #23 & 30)	1
23	81-3290	Seal - Upper Crankshaft	1
24	81-3300	Gasket - Breather	2
25		Plate - Breather	1
26	81-3320	Cover - Breather	1
27		Screw - Reed Valve	2
28		Retainer - Reed Valve	1
29		Valve - Reed	1
*	81-3370	Reed Valve Assembly (Incl. Ref. # 25 & 27-29)	1
30	81-3380	Bearing - Ball	1
31	81-3400	Plate - Lock	1
32	50-0510	Nut	2
33	81-3430	Crankshaft	1
34	81-3440	Washer	1
35	81-3450	Bolt	7

*Not Illustrated

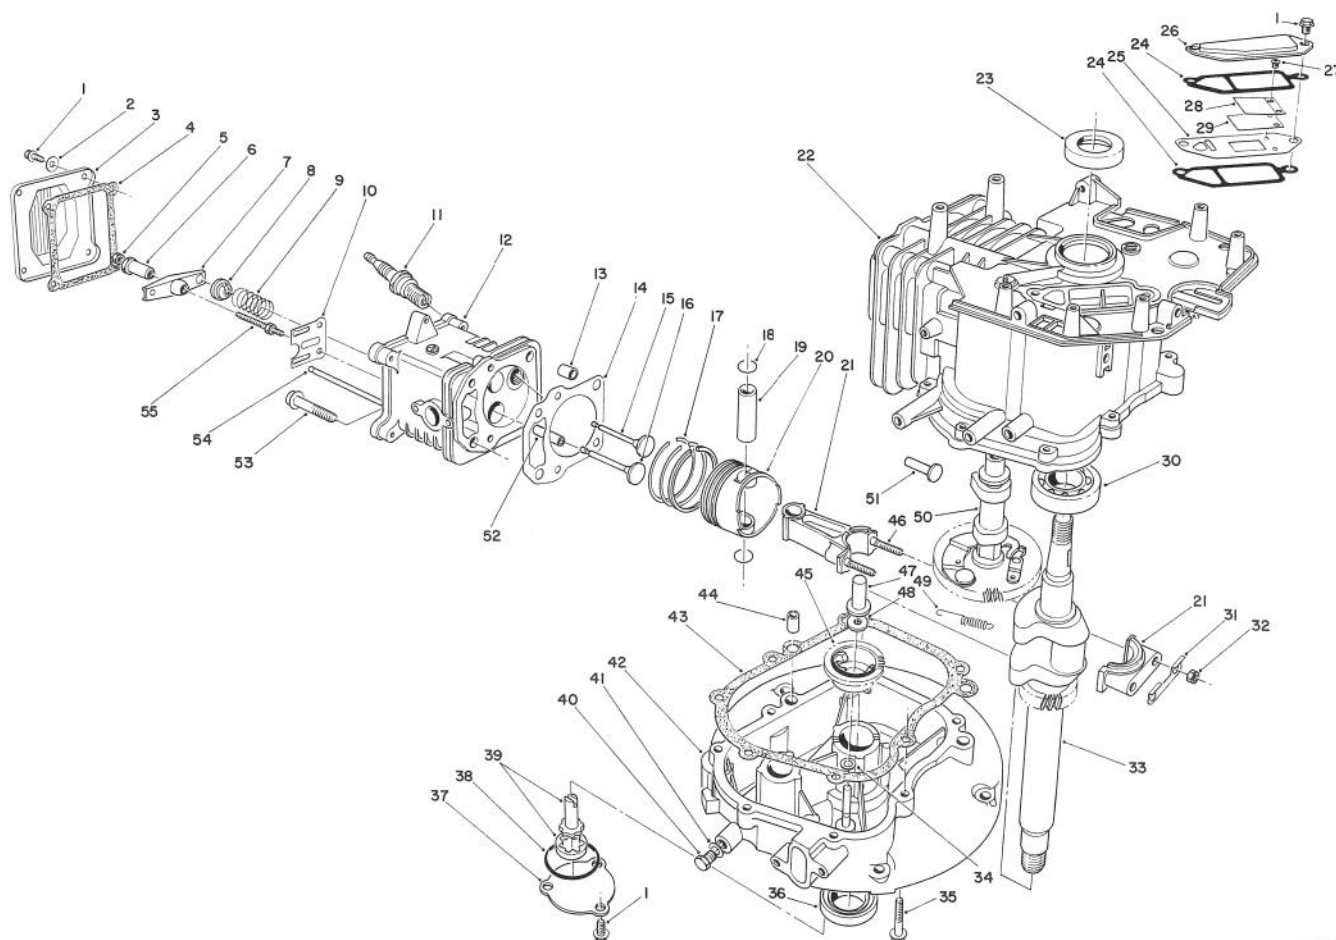


C-0157

CRANKCASE ASSEMBLY (Continued) (Engine Model No. VMG6 & VMH7)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
36	81-3460	Seal - Lower Crankshaft	1	47	81-3560	Plunger - Governor	1
37	81-3470	Cover - Oil Pump	1	48	81-3570	Washer	1
38	81-3480	Seal - O-Ring	1	49	81-3580	Spring - Comp. Release	1
39	81-3490	Oil Pump Assembly	1	50	81-3590	Camshaft Assembly (Incl. Ref. #49)	1
40	81-4970	Plug - Oil Drain	1	51	81-3600	Tappet	2
41	81-3510	Gasket - Oil Plug	1	52	81-3830	Guide - Valve	2
42	81-3520	Crankcase - Lower	1	53	50-0190	Bolt	4
43	81-3530	Gasket - Crankcase	1	54	81-3810	Rod - Push	2
44	50-0450	Pin - Dowel	2	55	81-3800	Stud - Rocker Arm	2
45	81-3550	Governor Flyweight Assy.	1	*	12-2619	Short Block Assembly	1
46	81-3610	Stud - Connecting Rod	2				

*Not Illustrated

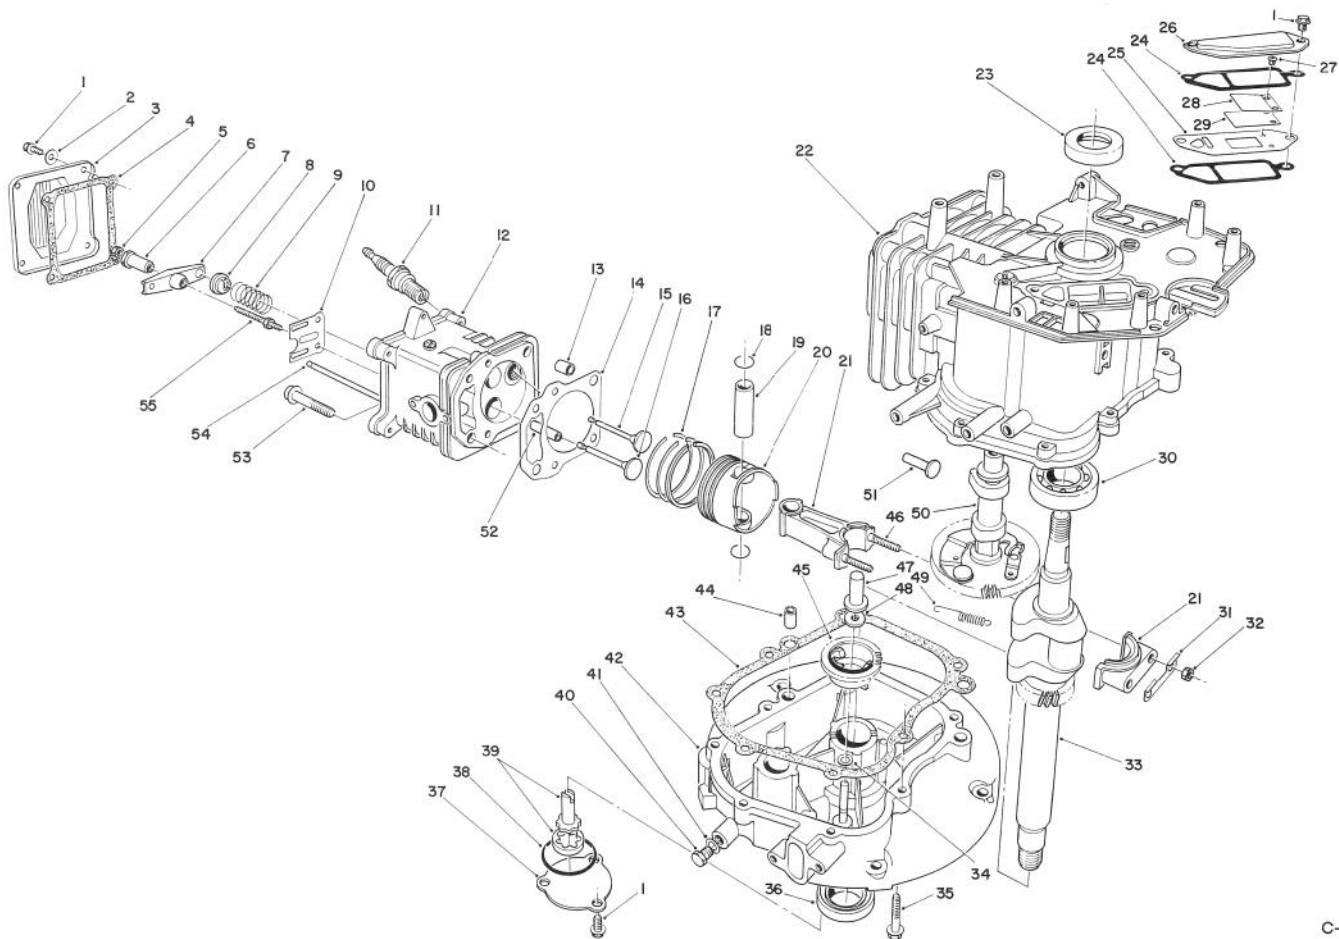


C-0157

CRANKCASE ASSEMBLY (Engine Model No. VMJ8)

Ref. No.	Part No.	Description	No. Used
1	81-1170	Bolt	9
2	81-3790	Washer	4
3	81-3780	Cover - Rocker Arm	1
4	81-3770	Gasket - Cover	1
5	81-3760	Nut - Jam	2
6	81-3750	Pivot - Rocker Arm	2
7	81-3740	Arm - Rocker	2
8	81-3730	Retainer - Valve Spring	2
9	81-3720	Spring - Valve	2
10	81-3710	Guide - Push Rod	1
11	81-3250	Plug - Spark	1
12	81-5540	Head - Cylinder (Incl. Ref. #52)	1
*	81-5730	Cylinder Head Assembly (Incl. Ref. #1-10, 12 & 52-55)	1
13	81-3690	Pin - Dowel	2
14	81-4710	Gasket - Cylinder Head	1
*	81-3820	Gasket Set	1
15	81-3660	Valve - Exhaust	1
16	81-3670	Valve - Intake	1
17	81-3650	Piston Ring Set	1
18	50-0960	Circlip	2

Ref. No.	Part No.	Description	No. Used
19	81-3630	Pin - Piston	1
20	81-3620	Piston	1
21	81-3390	Connecting Rod Assembly (Incl. Ref. #31, 32 & 46)	1
22	81-3280	Block - Engine (Incl. Ref. #23 & 30)	1
23	81-3290	Seal - Upper Crankshaft	1
24	81-3300	Gasket - Breather	2
25		Plate - Breather	1
26	81-3320	Cover - Breather	1
27		Screw - Reed Valve	2
28		Retainer - Reed Valve	1
29		Valve - Reed	1
*	81-3370	Reed Valve Assembly (Incl. Ref. # 25 & 27-29)	1
30	81-3380	Bearing - Ball	1
31	81-3400	Plate - Lock	1
32	50-0510	Nut	2
33	81-3430	Crankshaft	1
34	81-3440	Washer	1
35	81-3450	Bolt	7
36	81-3460	Seal - Lower Crankshaft	1
37	81-3470	Cover - Oil Pump	1

*Not Illustrated

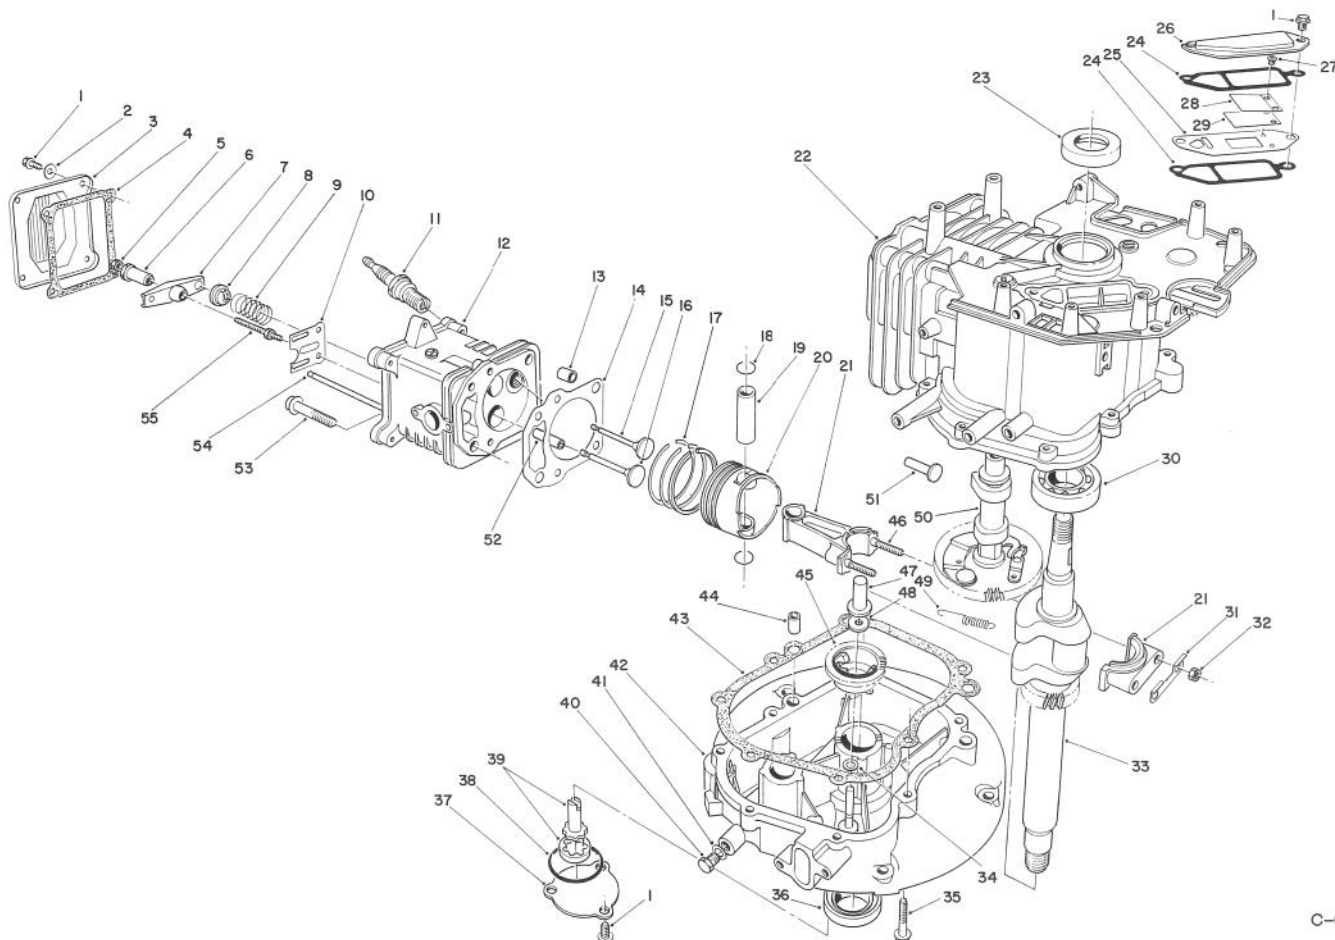


C-0157

CRANKCASE ASSEMBLY (Continued) (Engine Model No. VMJ8)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
38	81-3480	Seal - O-Ring	1	48	81-3570	Washer	1
39	81-3490	Oil Pump Assembly	1	49	81-3580	Spring - Comp. Release	1
40	81-4970	Plug - Oil Drain	1	50	81-5550	Camshaft Assembly (Incl. Ref. #49)	1
41	81-3510	Gasket - Oil Plug	1	51	81-3600	Tappet	2
42	81-3520	Crankcase - Lower	1	52	81-3830	Guide - Valve	2
43	81-3530	Gasket - Crankcase	1	53	50-0190	Bolt	4
44	50-0450	Pin - Dowel	2	54	81-3810	Rod - Push	2
45	81-3550	Governor Flyweight Assy.	1	55	81-3800	Stud - Rocker Arm	2
46	81-3610	Stud - Connecting Rod	2	*	13-5949	Short Block Assembly	1
47	81-3560	Plunger - Governor	1				

*Not Illustrated

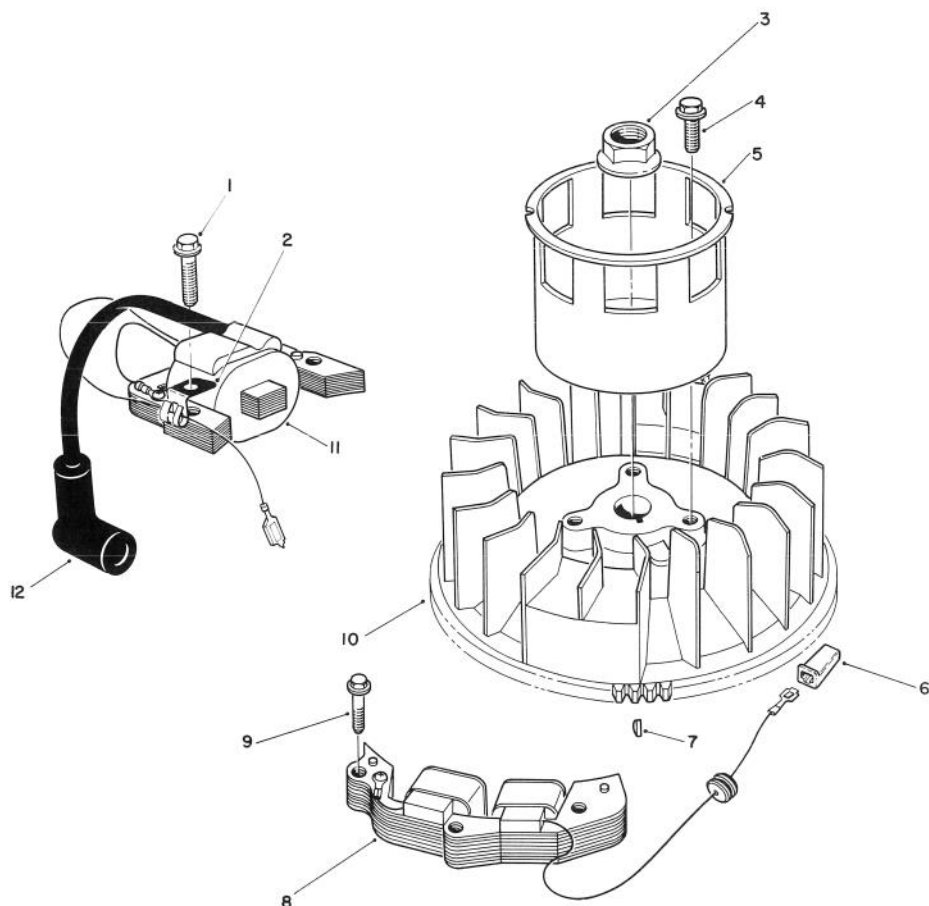


C-0158

MAGNETO & FLYWHEEL ASSEMBLY (Engine Model No. VMG6, VMH7 & VMJ8)

Ref. No.	Part No.	Description	No. Used
1	53-0860	Bolt	2
2	81-1480	Clamp	1
3	81-3890	Nut	1
4	81-1300	Bolt	3
5	81-3910	Cup - Starter	1
6	218-550	Connector - Wire	1

Ref. No.	Part No.	Description	No. Used
7	81-3930	Key - Flywheel	1
8	81-3940	Coil - Alternator	1
9	81-3950	Bolt	2
10	81-3920	Flywheel	1
11	81-3850	Magneto Coil Assembly	1
12	81-3860	Cover - Spark Plug	1

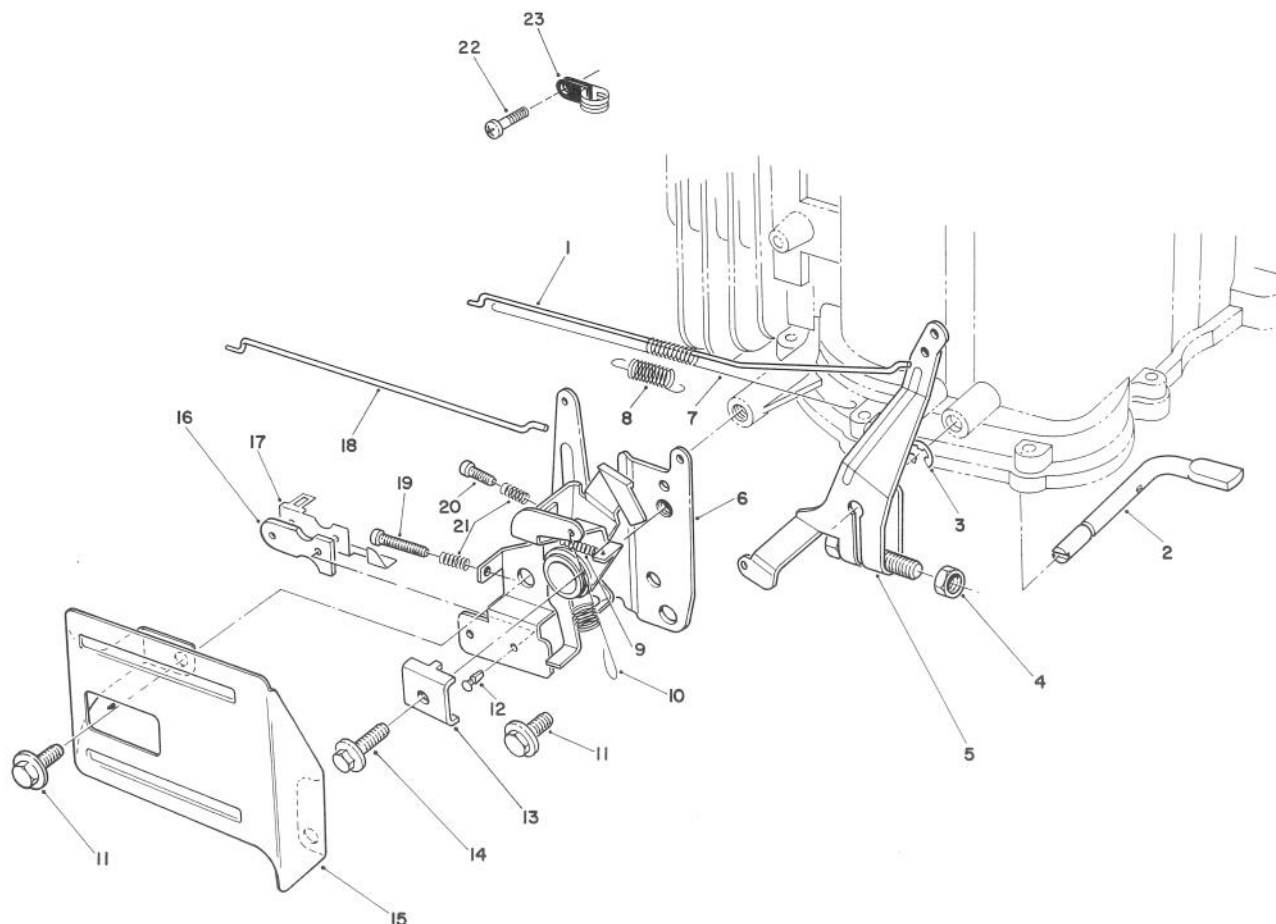


C-0159

GOVERNOR ASSEMBLY (Engine Model No. VMG6, VMH7 & VMJ8)

Ref. No.	Part No.	Description	No. Used
1	81-4450	Rod - Carburetor	1
2	81-4480	Shaft - Governor	1
3	81-4540	E-Ring	1
4	81-3760	Nut	1
5	81-4500	Governor Arm Assembly	1
6	81-4510	Throttle & Choke Control	1
7	81-4470	Spring - Carburetor Rod	1
8	81-4460	Spring - Choke Lever	1
9	81-4570	Spring	1
10	81-4520	Spring - Governor	1
11	81-1170	Bolt	2
12	81-4530	Rivet	2

Ref. No.	Part No.	Description	No. Used
13	81-1690	Clamp - Cable	1
14	50-0130	Bolt	1
15	57-5750	Guard - Throttle	1
16	81-1830	Insulator - Kill Switch	1
17	81-1840	Terminal - Switch	1
18	81-4440	Rod - Choke	1
19	81-4560	Screw	1
20	81-4550	Screw	1
21	81-2900	Spring	2
22	81-0380	Screw	1
23	81-4780	Clamp	1

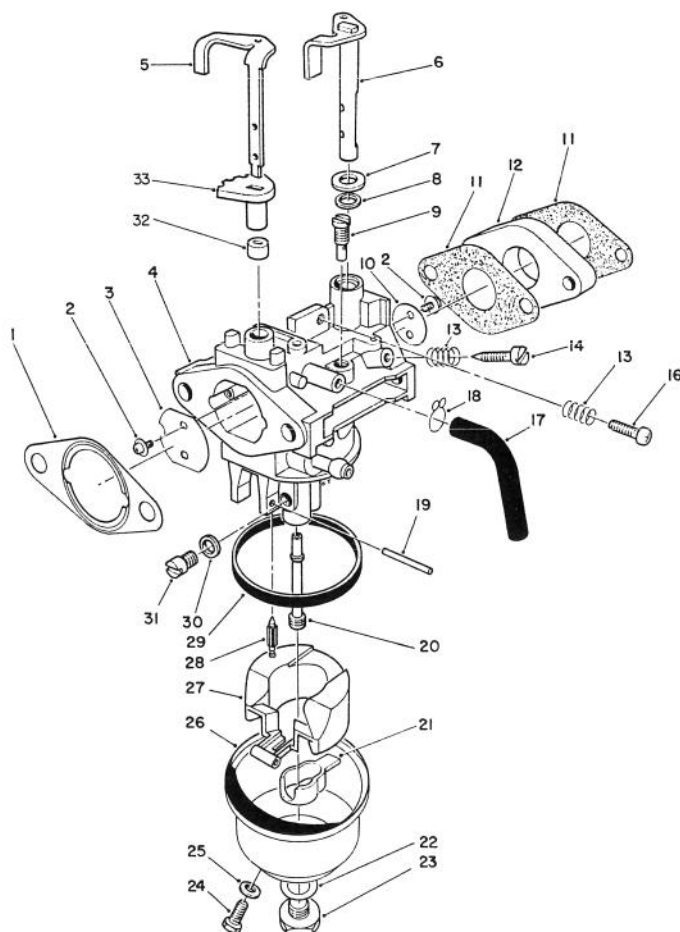


C-0160

CARBURETOR ASSEMBLY (Engine Model No. VMG6 & VMH7)

Ref. No.	Part No.	Description	No. Used
1	81-4250	Gasket - Air Cleaner	1
2	81-2710	Screw - Choke Valve	4
3	81-2720	Valve - Choke	1
4		Body - Carburetor	1
5	81-5500	Shaft - Choke Control	1
6	81-2920	Shaft - Throttle Valve	1
7	81-4280	Washer	1
8	81-4290	Seal - Throttle Shaft	1
9	81-1030	Jet - Pilot (#40)	1
10	81-2940	Valve - Throttle	1
11	81-2570	Gasket - Carburetor	2
12	81-0460	Block - Insulator	1
13	81-2580	Spring - Pilot/Idle Screw	2
14	50-2360	Screw - Pilot	1
16	50-0250	Screw - Idle Stop	1
17	81-4310	Tube - Bowl Vent	1
18	81-4300	Clamp	1
19	81-0980	Pin - Hinge	1
20	81-4330	Nozzle - Main	1
21	81-4940	Spacer - Float	1

Ref. No.	Part No.	Description	No. Used
22	81-2650	Gasket - Bowl Screw	1
23	81-2660	Screw - Bowl	1
24	81-2670	Screw - Drain	1
25	81-2680	Gasket - Drain Screw	1
26	81-4340	Bowl - Float	1
27	81-4920	Float	1
28	81-4700	Needle	1
29	81-2630	Gasket - Float Bowl	1
30	81-4350	Spacer	1
31	50-4760	Jet - Main (#82.5)	1
*	81-1040	Jet - Main (#80 High Alt.)	1
32	81-5530	Ring - Choke (Lower)	1
33	81-5520	Ring - Choke (Upper)	1
*	81-4270	Choke Shaft Assembly (Incl. Ref. #5 & 32-33)	1
*	81-4890	Carburetor Repair Kit (Incl. Ref. #1, 11, 22, 25, 28 & 29)	1
*	81-4750	Carburetor Assembly (Incl. Ref. #2-33)	1

*Not Illustrated

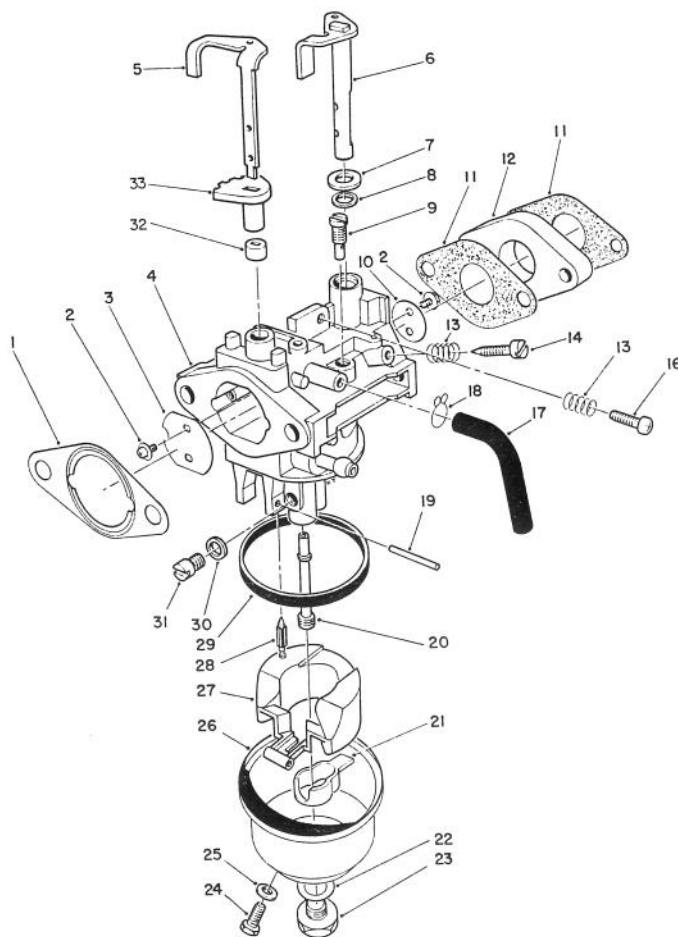


C-0160

CARBURETOR ASSEMBLY (Engine Model No. VMJ8)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	81-4250	Gasket - Air Cleaner	1	22	81-2650	Gasket - Bowl Screw	1
2	81-2710	Screw - Choke Valve	4	23	81-2660	Screw - Bowl	1
3	81-2720	Valve - Choke	1	24	81-2670	Screw - Drain	1
4		Body - Carburetor	1	25	81-2680	Gasket - Drain Screw	1
5	81-5500	Shaft - Choke Control	1	26	81-4340	Bowl - Float	1
6	81-2920	Shaft - Throttle Valve	1	27	81-4920	Float	1
7	81-4280	Washer	1	28	81-4700	Needle	1
8	81-4290	Seal - Throttle Shaft	1	29	81-2630	Gasket - Float Bowl	1
9	81-5620	Jet - Pilot (#38.8)	1	30	81-4350	Spacer	1
10	81-2940	Valve - Throttle	1	31	50-5610	Jet - Main (#70)	1
11	81-5560	Gasket - Carburetor	2	*	81-5640	Jet - Main (#77.5 High Alt.)	1
12	81-5570	Block - Insulator	1	32	81-5530	Ring - Choke (Lower)	1
13	81-2580	Spring - Pilot Screw	2	33	81-5520	Ring - Choke (Upper)	1
14	50-2360	Screw - Pilot	1	*	81-4270	Choke Shaft Assembly (Incl. Ref. #5 & 32-33)	1
16	50-0250	Screw - Idle Stop	1	*	81-5650	Carburetor Repair Kit (Incl. Ref. #1, 11, 22, 25, 28 & 29)	1
17	81-4310	Tube - Bowl Vent	1	*	81-5590	Carburetor Assembly (Incl. Ref. #2-33)	1
18	81-4300	Clamp	1				
19	81-5600	Pin - Hinge	1				
20	81-5630	Nozzle - Main	1				
21	81-4940	Spacer - Float	1				

*Not Illustrated

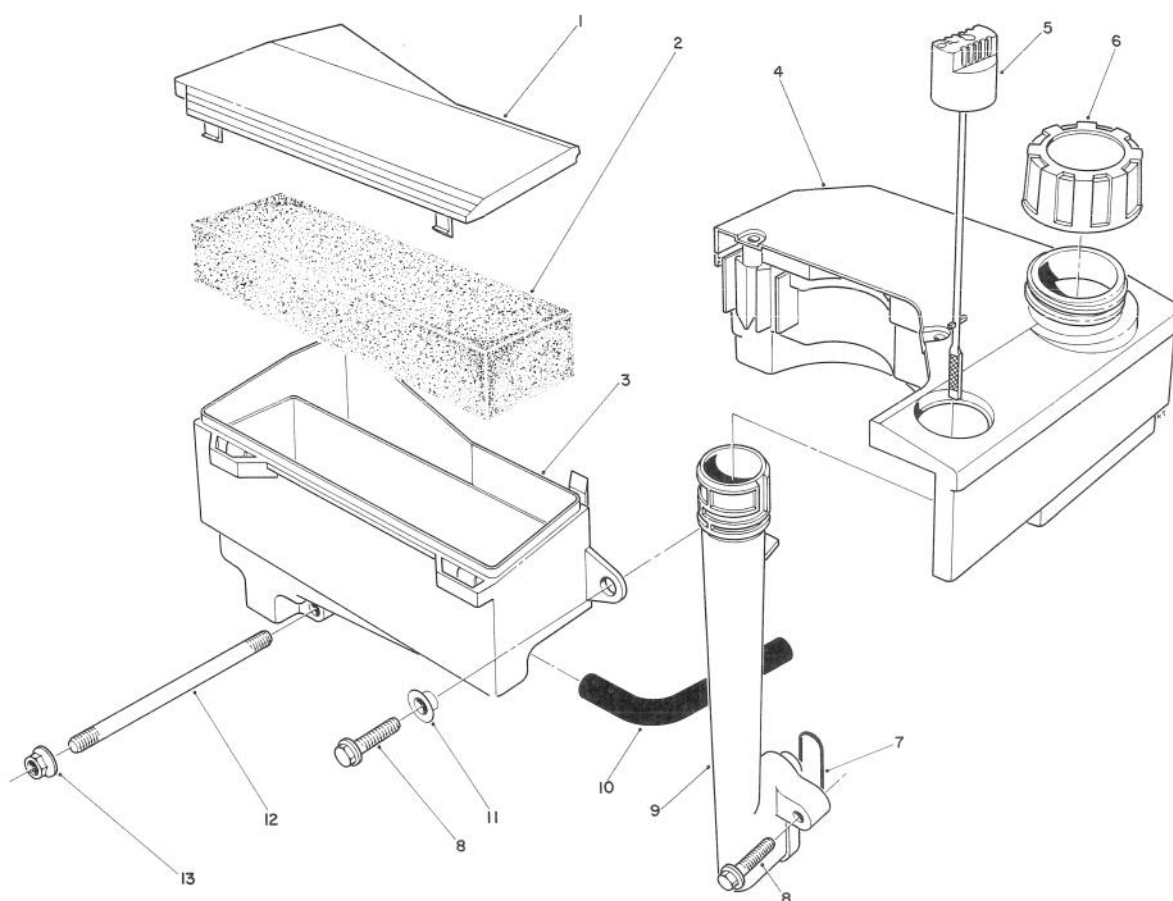


C-0161

AIR CLEANER & FUEL TANK ASSEMBLY (Engine Model No. VMG6, VMH7 & VMJ8)

Ref. No.	Part No.	Description	No. Used
1	81-4110	Cover - Air Cleaner	1
2	81-4120	Filter - Foam	1
3		Body - Air Cleaner	1
4	55-3530	Tank - Fuel	1
5	81-4140	Dipstick - Oil	1
6	55-3570	Cap - Gas	1
7	81-4150	Seal - Oil Tube	1
8	81-4160	Bolt	3
9	81-4170	Tube - Oil Fill	1

Ref. No.	Part No.	Description	No. Used
10	81-4180	Hose - Crankcase Breather	1
11	81-4200	Spacer	1
12	81-4220	Stud - Carburetor	2
13	50-7180	Nut	2
*	81-4240	Air Cleaner Assembly (Incl. Ref. #1 & 3)	1
*	12-3369	Air Cleaner Assembly (Incl. Ref. #1-3 & 10)	1

*Not Illustrated

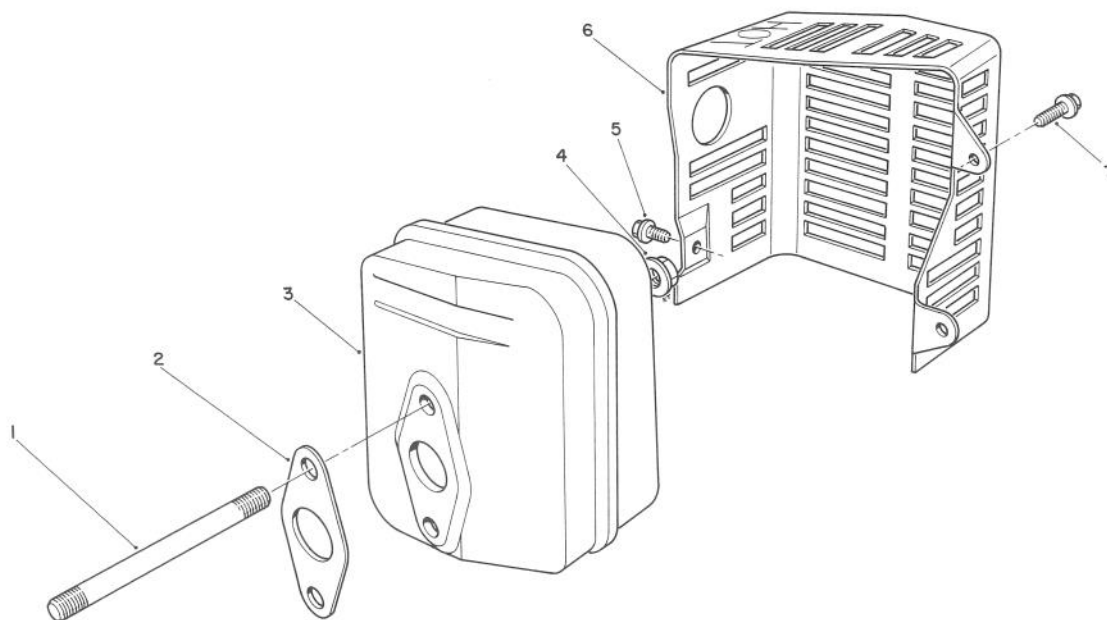


T-0726

MUFFLER ASSEMBLY (Engine Model No. VMG6, VMH7 & VMJ8)

Ref. No.	Part No.	Description	No. Used
1	81-4380	Stud - Muffler	2
2	81-4390	Gasket - Muffler	1
3	81-4400	Muffler	1
4	50-0530	Nut	2
5	81-4420	Screw	1

Ref. No.	Part No.	Description	No. Used
6	81-4430	Cover - Muffler	1
7	81-1170	Bolt	2
*	56-6730	Spark Arrester Kit (Incl. Ref. #2) Optional	1

*Not Illustrated

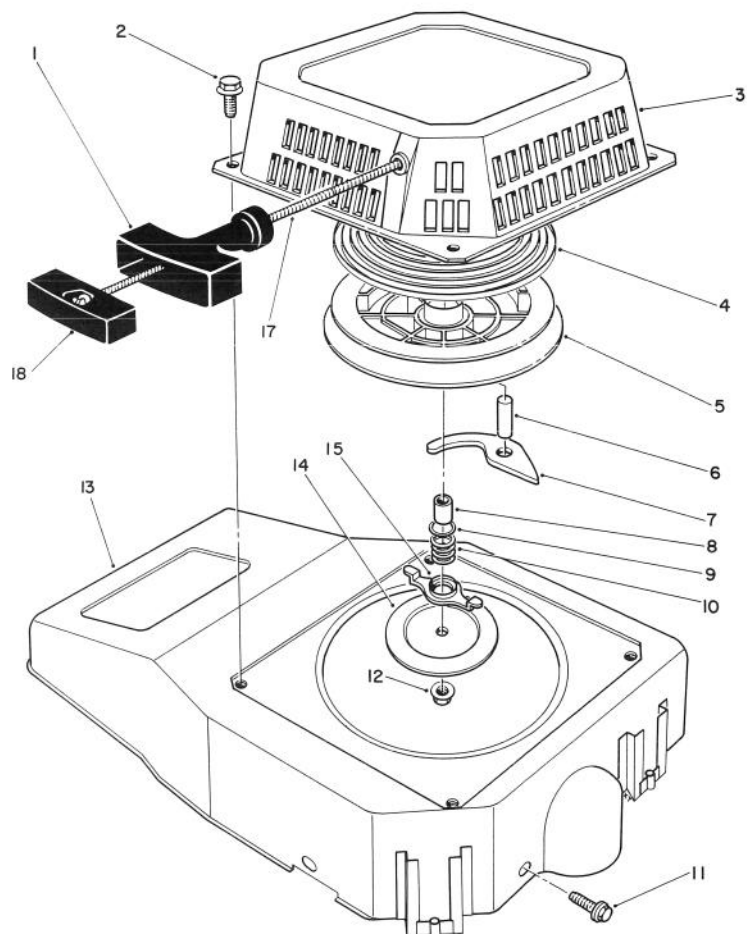

C-0162

RECOIL ASSEMBLY (Engine Model No. VMG6, VMH7 & VMJ8)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	81-4000	Handle	1	11	81-1170	Bolt	3
2	81-1280	Bolt	4	12	81-4100	Nut - Lock	1
3	81-3970	Case - Recoil	1	13	81-3960	Shroud - Blower	1
4	81-4010	Spring - Recoil	1	14	81-4090	Plate - Friction	1
5	81-4020	Reel - Rope Pulley	1	15	81-4080	Guide - Pawl	1
6	81-4030	Pin	1	17	81-1270	Rope - Recoil	1
7	81-4040	Pawl	1	18	81-4960	Retainer - Rope	1
8	81-4050	Spacer	1	*	81-3270	Recoil Starter Assembly (Incl. Ref. #1, 3-10, 12 & 14-18)	1
9	81-4060	Washer	1				
10	81-4070	Spring - Friction	1				

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Lawnmower has two identification numbers; a model number and a serial number. The two numbers are stamped on a decal which is located on the rear of the housing. In any correspondence concerning the lawnmower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the lawnmower.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any

reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.
AL-891894-R