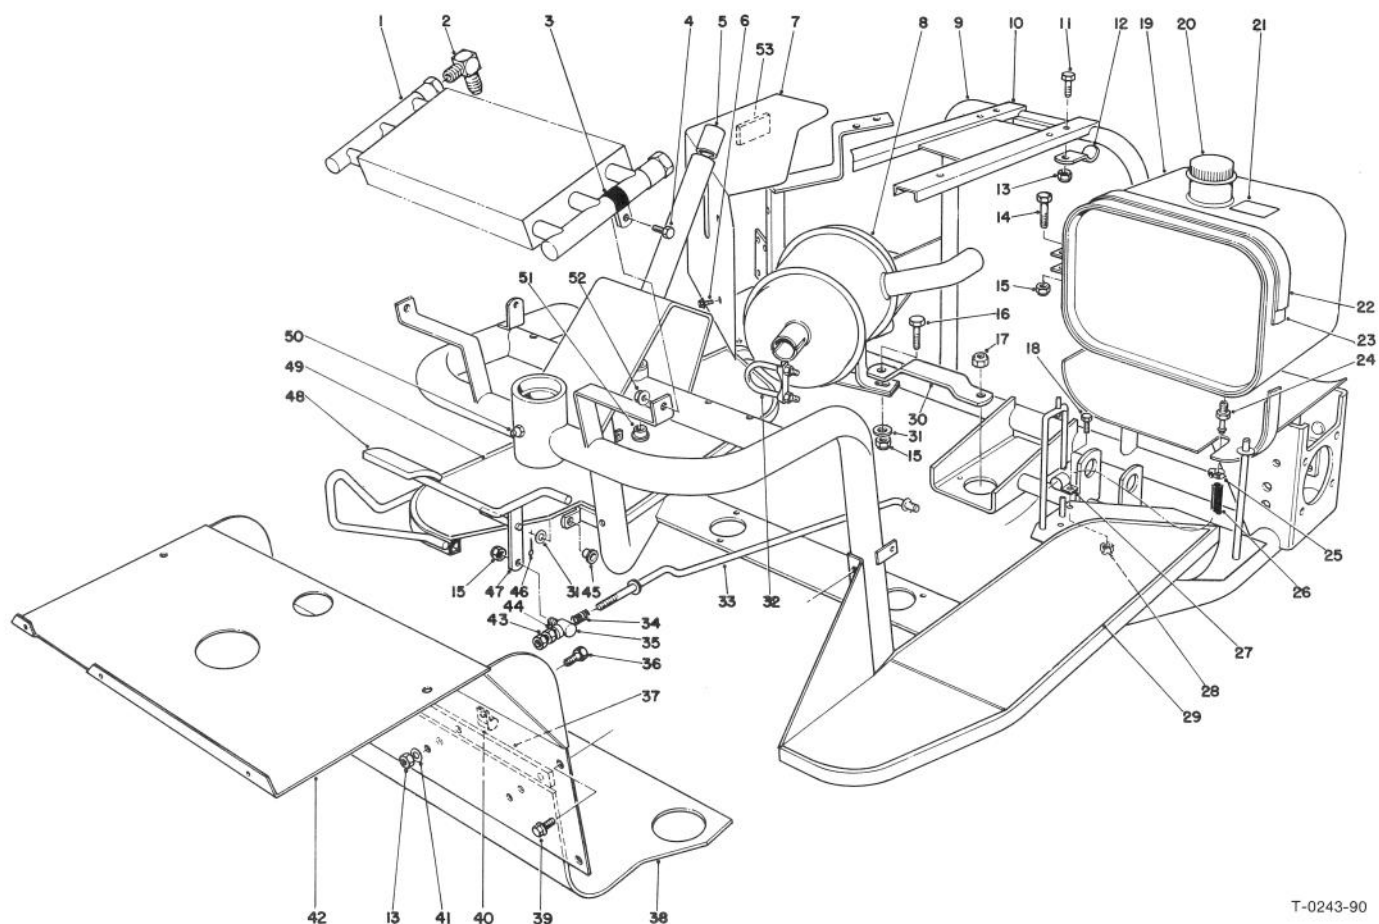 


TORO®

MODEL NO. 08880 — 00001 & UP

**PARTS
CATALOG****SAND PRO® 14**


T-0243-90

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	24-0760	Oil Cooler	1
2	353-372	Fitting 90°	2
3	2412-39	Clamp "R"	2
4	323-6	Screw — Cap Hex. Hd.	2
5	256-185	Bushing	1
6	32104-76	Screw — Self Tapping Hex Hd.	2
7	49-9930	Valve Shroud	1
8	51-0700	Muffler	1
*	51-0990	Spark Arrestor, Muffler	1
9	49-9430	Frame (Incl. Ref. #5, 45 & 51)	1
10	51-0760	Seat Channel	1
11	322-3	Screw — Cap Hex Hd.	4
12	10-9240	Seat Clamp	2
13	3296-29	Nut — Lock	5
14	323-12	Screw — Cap Hex Hd.	2
15	3296-44	Locknut	5

Ref. No.	Part No.	Description	No. Used
16	323-7	Screw — Cap Hex Hd.	1
17	3296-5	Locknut	1
18	321-4	Screw — Cap Hex Hd.	1
19	49-9790	Gas Tank (Incl. Ref. #20)	1
20	222-8	Gas Cap	1
21	53-4420	Decal — Gas	1
22	49-9650	Strap — Tank	2
23	49-9780	Strip — Felt	2
24	353-711	Fitting — Straight	1
25	2412-108	Hose Clamp — Worm Drive	1
26	44-2670	Hose Gas Line	1
27	2412-73	Clamp — "R"	1
28	3296-42	Nut — Lock	1
29	51-0580	Foot Rest Pad L.H.	1
30	49-9580	Bracket — Muffler	1
31	3256-24	Washer — Plain	2

 *Not Illustrated

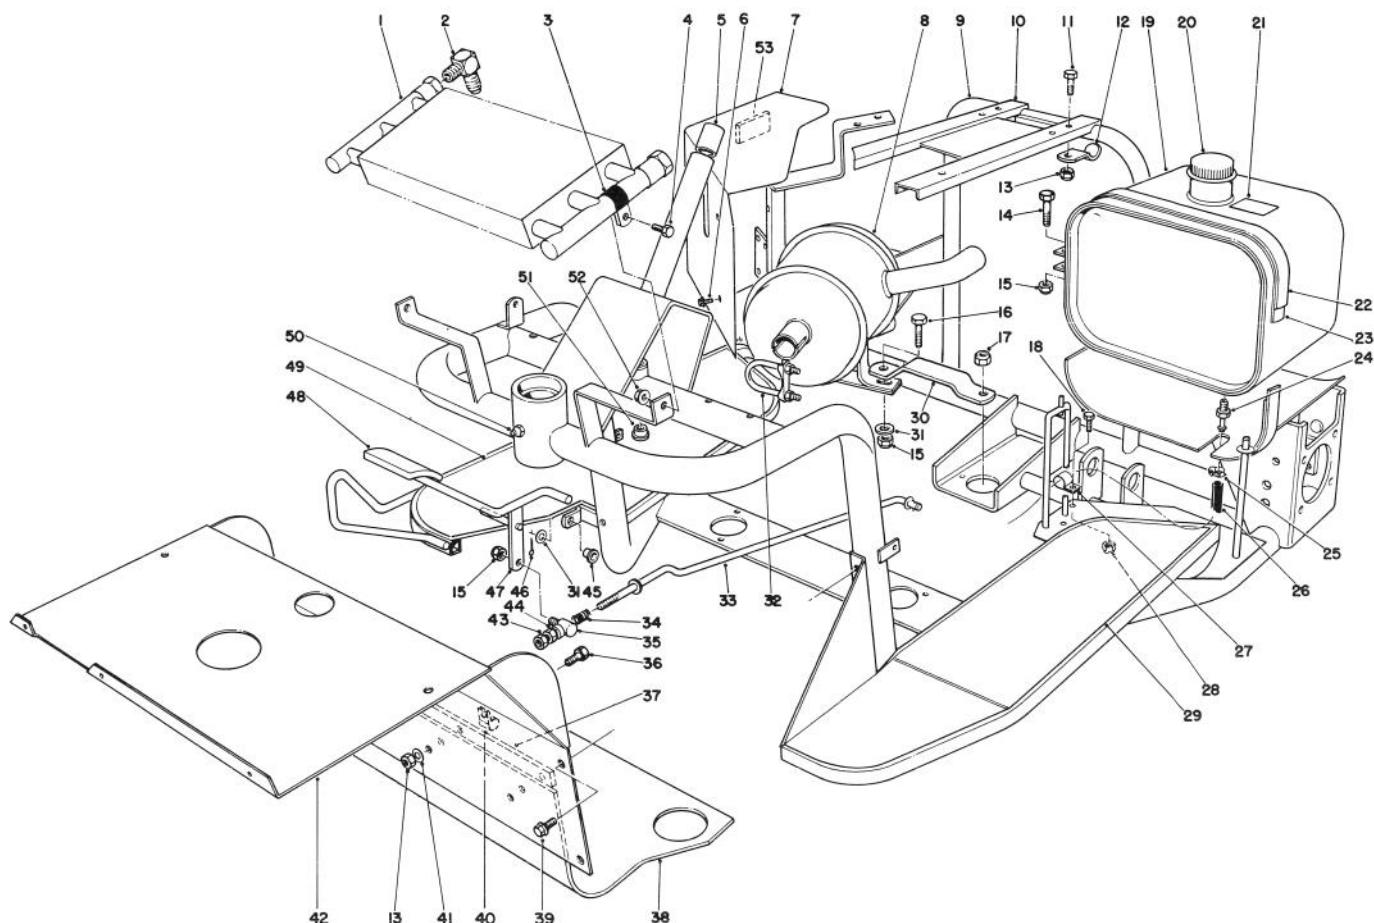


T-0243-90

FRAME ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
32	2412-37	Muffler Clamp Assembly	1
33	49-9570	Pump Rod	1
34	46-9130	Spring — Compression	1
35	18-6650	Nut — Adjuster	1
36	322-5	Screw — Cap Hex. Hd.	3
37	49-9980	Retainer — Rubber Shield	1
38	49-9590	Shield — Rubber	1
39	46-8560	Screw — Sems Hex. Hd.	6
40	2412-41	Clamp	1
41	3256-23	Washer — Plain	3
42	49-9760	Shield	1
43	3218-4	Nut — Jam	2

Ref. No.	Part No.	Description	No. Used
44	37-4700	Spacer	1
45	256-116	Bushing	2
46	3272-4	Pin — Cotter	1
47	49-9990	Pedal	1
48	49-6470	Pedal Pad — Forward	1
49	51-0570	Foot Rest Pad R.H.	1
50	302-11	Grease Fitting	1
51	256-155	Bushing	2
52	3290-357	Nut — Flange	2
53	55-4450	Sponge Rubber — Self Adhesive	1

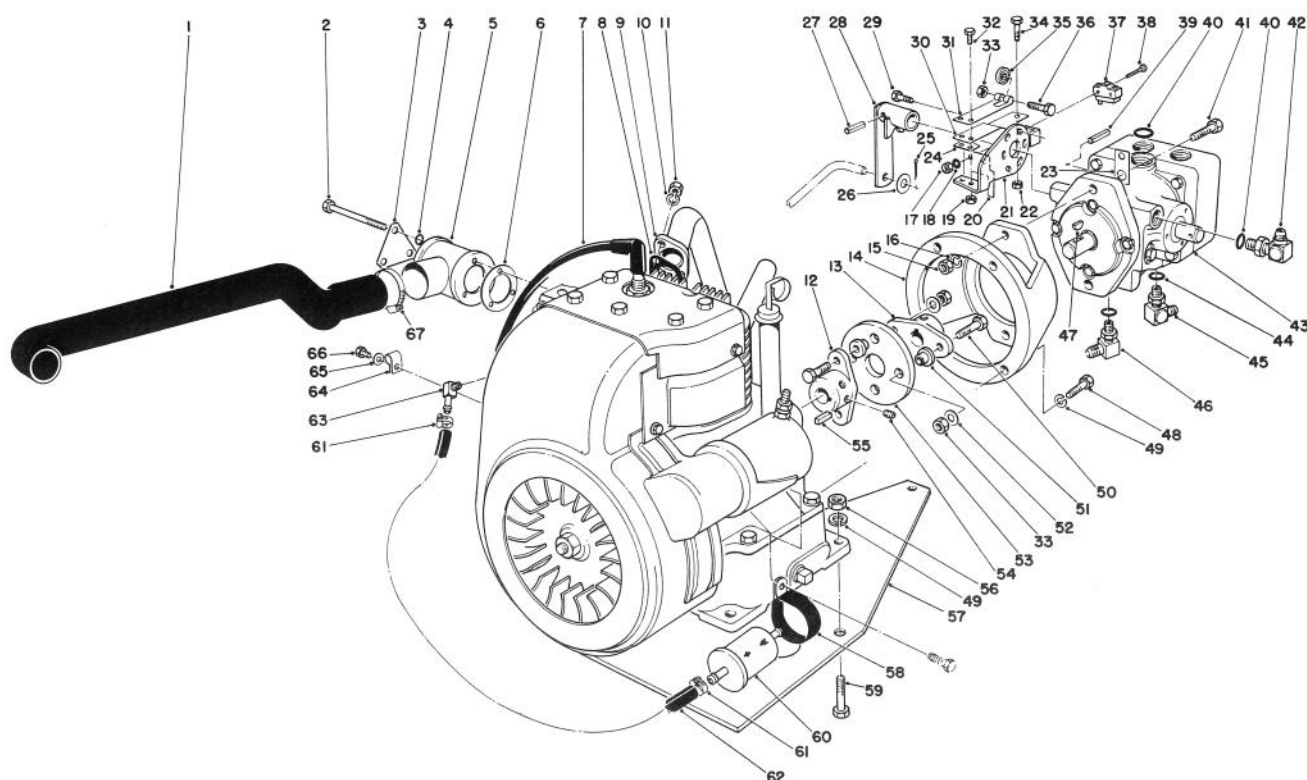 


T-0244-90

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	49-9850	Hose — Air Intake	1
2	55-4190	Screw — Machine Hex Hd.	3
3	51-1030	Tab Lock	1
4	237-137	O-Ring	3
5	51-1020	Adaptor Assembly	1
6†		Gasket — Air Intake	1
7	11-9949	Engine (Kohler K-321S Type 60434)	1
8	2210-118	Gasket — Exhaust	1
9	49-9550	Exhaust Pipe	1
10	3253-4	Washer — Lock	2
11	3217-6	Nut — Hex	2
12	27-1960	Coupling — Engine	1
13	49-9600	Hub Pump	1
14	37-8030	Pump Mount	1
15	3217-9	Nut Hex	2
16	3253-7	Washer — Lock	2
17	3217-16	Nut — Hex	2
18	3254-9	Washer — Lock Internal Tooth	2
19	3296-42	Nut — Lock	2
20	46-8810	Stop — Leaf Spring	1
21	29-6120	Pump Plate	1

Ref. No.	Part No.	Description	No. Used
22	3219-2	Nut — Hex	1
23	26-2950	Wire Stand Off	1
24	51-3150	Shim — Spring Arm	1
25	3272-16	Pin — Cotter	1
26	3256-25	Washer — Plain	1
27	32121-24	Pin — Roll	1
28	26-2810	Pump Lever	1
29	46-8560	Screw — Self Tapping Hex. Head	3
30	29-6170	Extended Leaf Spring Assembly	1
31	29-6150	Spring Leaf	1
32	321-4	Screw — Cap Hex. Hd.	2
33	3296-29	Nut — Lock	5
34	3210-7	Screw — Cap Hex. Hd.	1
35	251-259	Bearing	1
36	322-17	Screw — Cap Hex. Hd.	1
37	29-6162	Micro Switch	1
38	3249-11	Screw — Machine Round Head	2
39	32121-16	Pin — Roll	1
40	237-79	O-Ring	3
41	325-7	Screw — Cap Hex. Hd.	2

 †Obtain from your local Kohler Dealer.

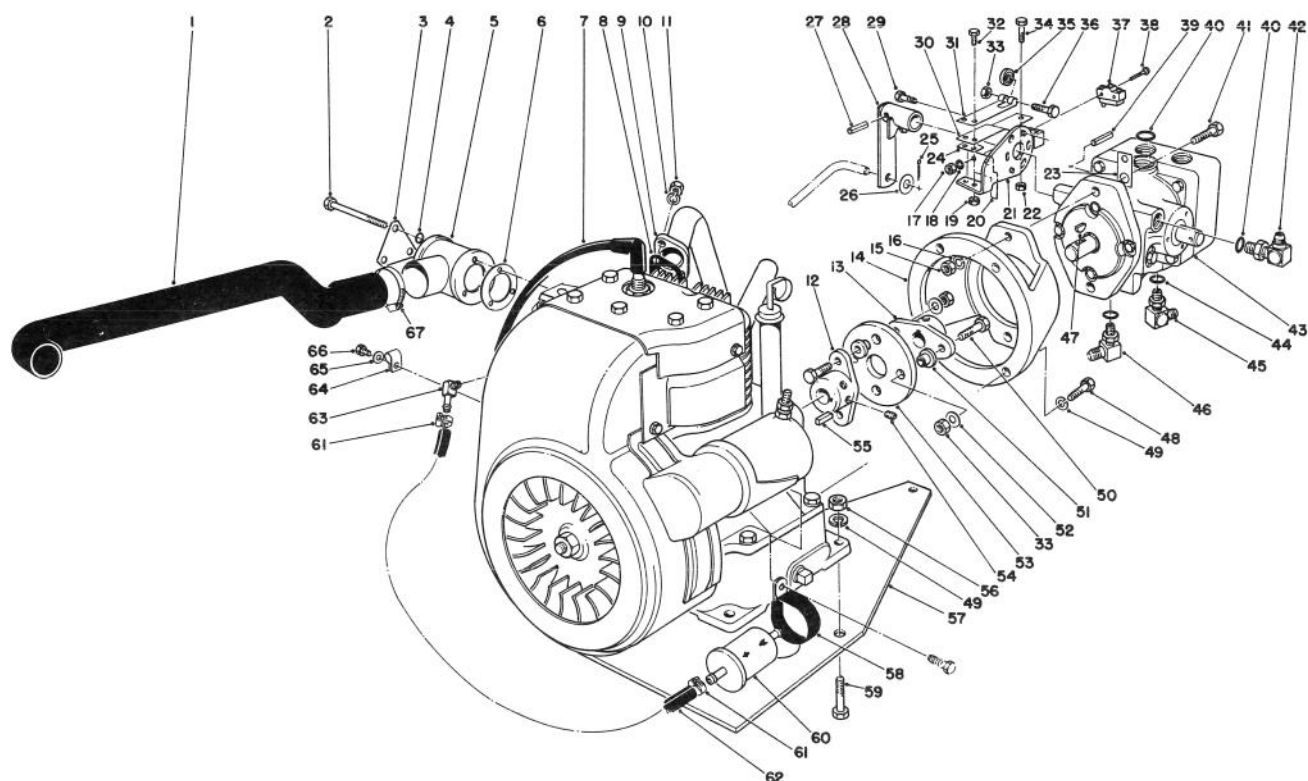


T-0244-90

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
42	353-370	90° Adj. Elbow	1
43	53-9360	Pump	1
44	237-42	O-Ring	2
45	353-374	90° Adj. Elbow	1
46	353-511	90° Adj. Elbow	1
47	3257-32	Key Woodruff	1
48	323-6	Screw — Cap Hex. Hd.	4
49	3253-5	Washer — Lock	6
50	322-16	Screw — Cap Hex. Hd.	4
51	27-6600	Spacer — Rubber Coupling	4
52	3256-23	Washer — Plain	4
53	44-2230	Coupling — Rubber	1
54	3241-5	Screw — Set Sq. Hd.	4

Ref. No.	Part No.	Description	No. Used
55	10-7070	Key Square	1
56	3217-7	Nut Hex	2
57	49-9500	Engine Base	1
58	2412-44	Clamp — "R"	1
59	323-8	Screw — Cap Hex. Hd.	2
60	18-1520	Gasoline Filter Assembly	1
61	2412-108	Clamp — Hose	3
62	51-0670	Hose — Fuel Line	1
63	46-3710	Fitting	1
64	2412-31	Clip — Throttle Wire	1
65	3256-22	Washer	1
66	32104-42	Hex Hd. Self Tap. Screw	1
67	2412-92	Hose Clamp	1

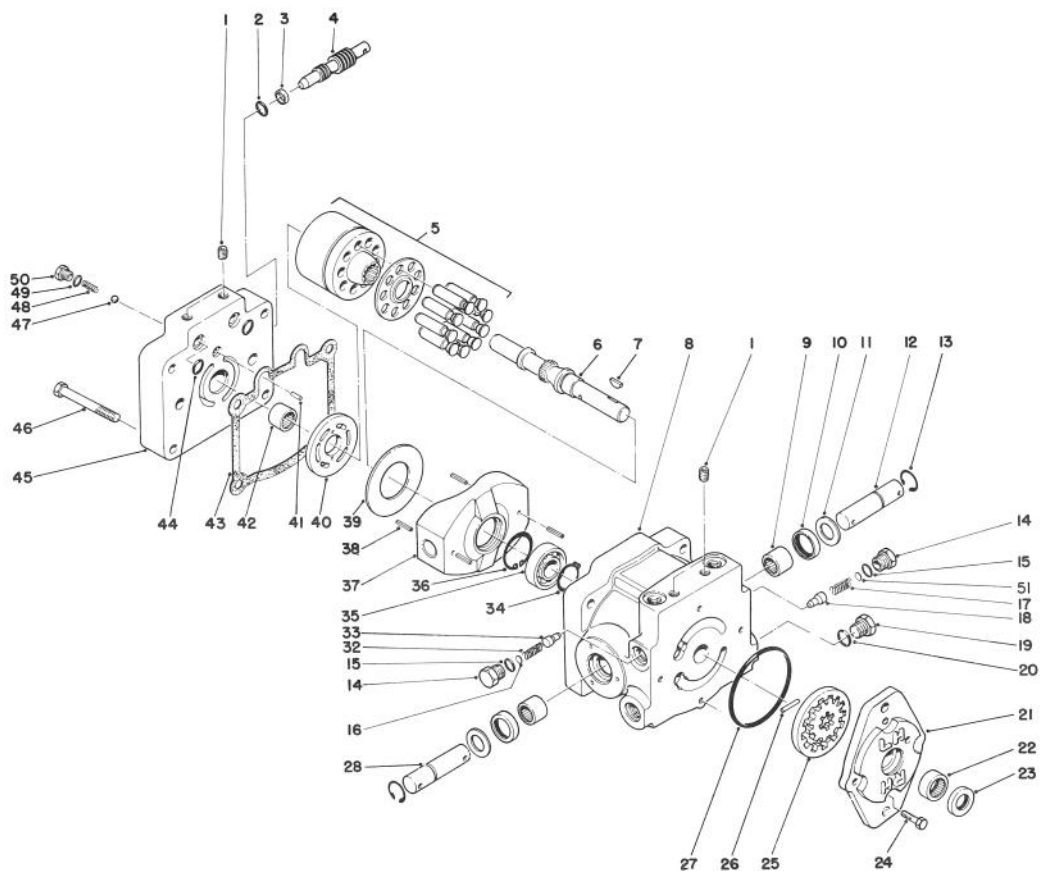 


T-0245-90

PUMP ASSEMBLY NO. 53-9360

Ref. No.	Part No.	Description	No. Used
1	285-17	Pipe Plug	4
2	237-22	O-Ring	1
3	25-2630	Ring	1
4	25-2620	Valve By-Pass	1
5	48-1800	Cylinder Block Kit	1
6	36-5370	Shaft Pump	1
7	3257-32	Key — Woodruff	1
8	53-9360	Kit Housing (Incl. Ref. #1, 8-10)	1
9	252-82	Needle Bearing	2
10	25-3210	Lip Seal	2
11	25-2510	Washer	2
12	25-2580	Shaft Trunion	1
13	32151-46	Retaining Ring	2
14	25-2460	Plug	2
15	237-86	O-Ring	2
16	25-2470	Kit — Shim Pack	2
17	25-2570	Relief Valve Spring	1
18	25-2560	Relief Valve Cone	1
19	49-8490	Plug Standard Thread	1
20		O-Ring	1
21	25-2690	Charge Pump Housing	1
22	252-87	Needle Bearing	1
23	253-44	Lip Seal	1
24	322-4	Screw — Cap Hex. Hd.	4
25	25-2680	Gerator Assembly	1
26	25-2530	Headless Straight Pin	1
27	237-95	O-Ring	1

Ref. No.	Part No.	Description	No. Used
28	49-8480	Shaft — Trunion	1
32	25-2480	Charge Relief Spring	1
33	25-2560	Relief Valve Cone	1
34	32120-15	Retaining Ring	1
35	251-8	Ball Bearing	1
36	32120-11	Retaining Ring	1
37	25-2450	Swashplate	1
38	32121-91	Coiled Spring Pin	3
39	25-2380	Thrust Plate	1
40	25-2390	Valve Plate	1
41	25-2430	Pin Straight Headless	1
42	25-3300	Needle Bearing	1
43	25-2400	Gasket	1
44	237-30	O-Ring	2
45		End Cap Pump	1
46	323-11	Screw — Cap Hex Hd.	4
47	25-2490	Check Valve Ball	2
48	25-2640	Spring — Check Valve	2
49	237-86	O-Ring	2
50	25-2650	Check Valve Plug	2
51	49-8470	Kit — Shim-Pack	2
*	25-3180	Check Valve Kit (Incl. Ref. #47-50)	1
*	49-8510	Kit — Charge Relief Valve (Incl. Ref. #14-16 & 32-33)	1
*	49-8520	Kit — Implement Relief (Incl. Ref. #14-18)	1
*	25-3220	Kit — Charge Pump (Incl. Ref. #21-27)	1

 *Not Illustrated

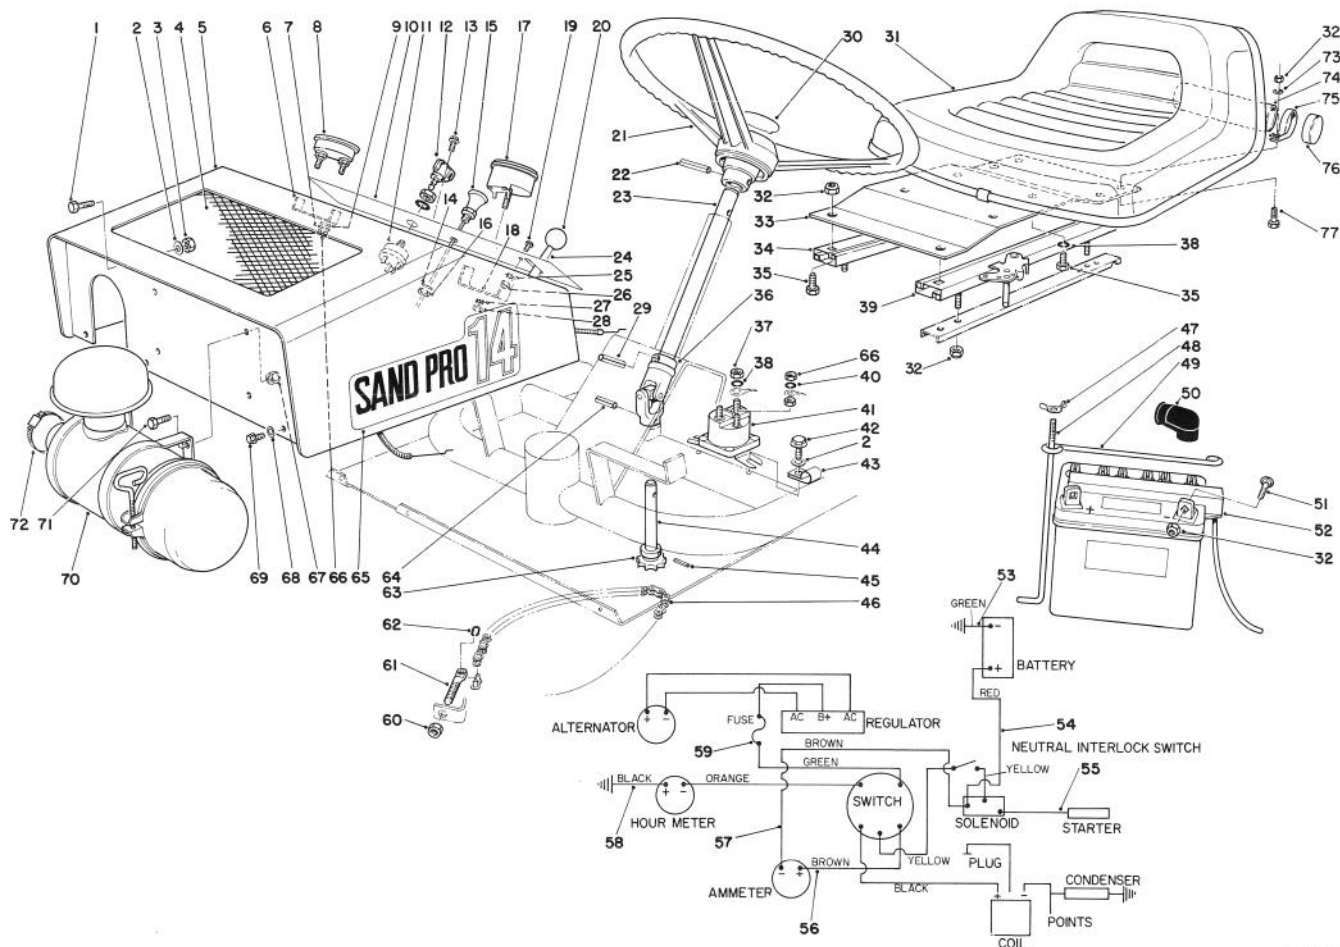


T-0247-90

INSTRUMENT PANEL AND WIRING DIAGRAM

Ref. No.	Part No.	Description	No. Used
1	321-3	Screw — Cap Hex. Hd.	4
2	3256-22	Washer — Plain	6
3	3296-16	Nut — Lock	4
4	49-9730	Screen — Dash Panel	1
5	49-9620	Dash	1
6	39-9600	Mounting Clamp	1
7	3254-1	Lockwasher	2
8	33-0990	Ammeter (Incl. Ref. #6-7, 9 & 66)	1
9	3256-21	Washer	2
10	51-0730	Decal — Dash	1
11	12-8140	Switch (Incl. Ref. #12)	1
12	218-412	Key	2
13	32144-11	Screw — Self Tapping Hex. Hd.	2
14	3254-6	Lockwasher	1
15	19-2090	Control — Choke (Incl. Ref. #14 & 16)	1
16	3219-3	Nut	1
17	12-9990	Hour Meter	1
18	218-515	Mounting Bracket	1
19	3251-2	Screw — Machine Round Hd.	2
20	233-25	Knob	1
21	25-6260	Steering Wheel	1

Ref. No.	Part No.	Description	No. Used
22	32121-10	Pin — Roll Slotted	1
23	25-8140	Steering Shaft	1
24	51-0680	Control — Throttle	1
25	3255-17	Washer — Lock Int./Ext. Tooth	2
26	3296-12	Nut — Lock	2
27	3254-1	Washer — Lock External Tooth	1
28	3217-26	Nut — Hex	1
29	32121-84	Pin — Roll Slotted	1
30	24-2090	Cap — Steering Wheel	1
31	27-5170	Seat	1
32	3296-29	Nut — Lock	14
33	72-9520	Plate — Seat	1
34	51-0780	Seat Slider	1
35	322-2	Capscrew	8
36	25-8160	U-Joint	1
37	3218-13	Nut — Hex	4
38	3253-4	Washer — Lock	6
39	51-0790	Seat Adjuster	1
40	3253-17	Washer — Lock	1
41	6-1600	Solenoid	1
42	32104-42	Screw — Self Tapping Hex. Hd.	2
43	2412-73	Clamp	1
44	18-6340	Steering Shaft	1

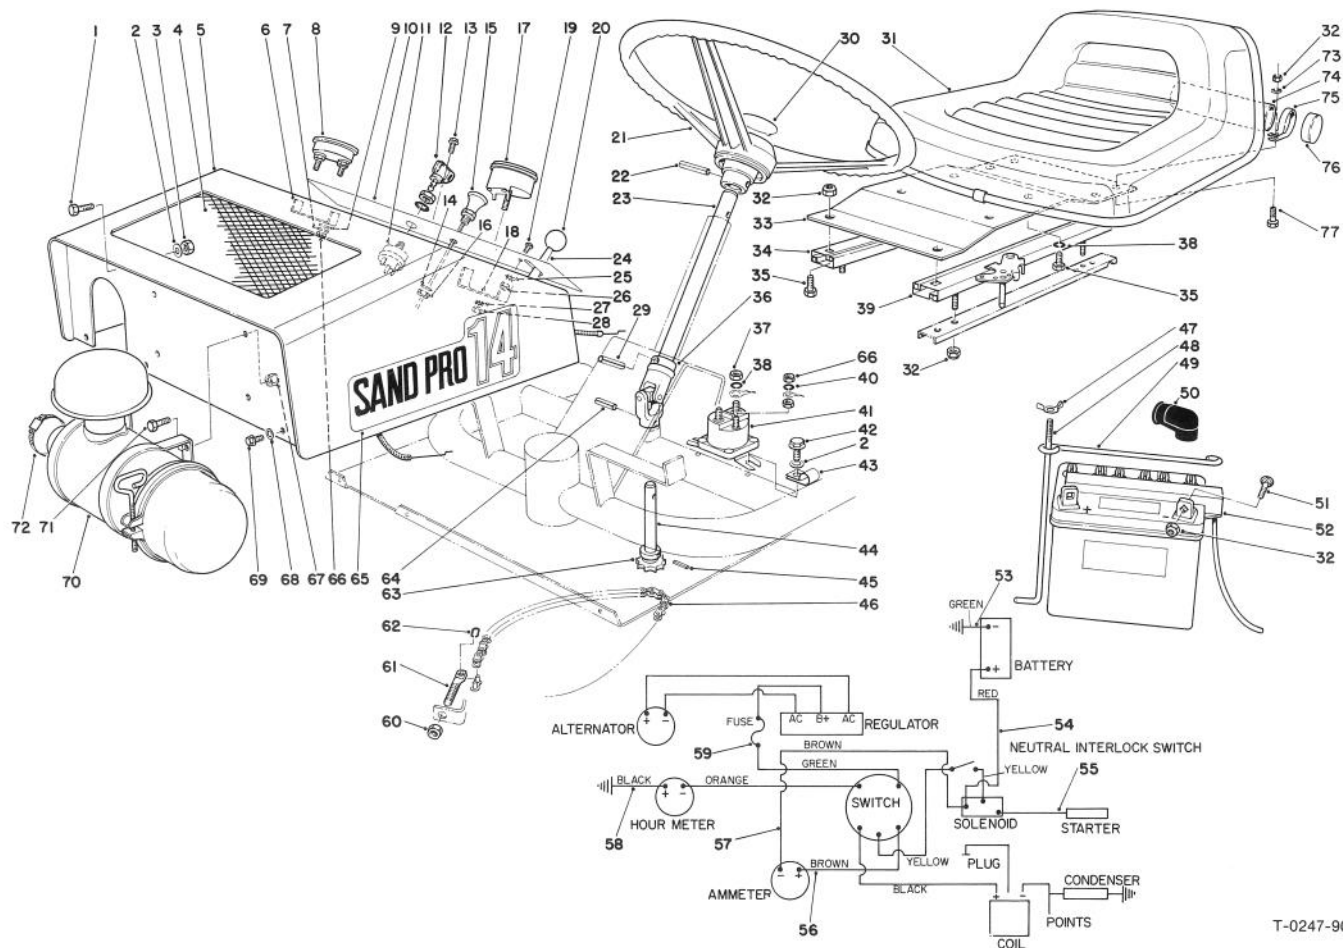 

T-0247-90


INSTRUMENT PANEL AND WIRING DIAGRAM (Continued)

Ref. No.	Part No.	Description	No. Used
45	32121-16	Pin — Roll Slotted	1
46	18-6370	Chain	1
47	32103-12	Wing — Nut	2
48	7-3328	Bolt — Battery	2
49	47-1680	Battery Clamp	1
50	218-331	Battery Boot	1
51	3230-15	Bolt — Carriage	2
52	49-7030	Battery — 12 Volt	1
53	52-1460	Wire (Battery to Ground)	1
54	18-7840	Wire (Solenoid to Battery)	1
55	18-6560	Wire (Solenoid to Starter)	1
56	51-0710	Wire Harness	1
57	18-7830	Wire (Solenoid to neg. ammeter)	1
58	18-6580	Wire (Hour Meter Ground)	1
59†		Fuse 30 AMP.	1
60	3296-4	Nut — Lock	2
61	18-6380	Steering Adjustment Pin	2

Ref. No.	Part No.	Description	No. Used
62	2710-31	Chain — Connecting Link	2
63	17-2490	Sprocket	1
64	32121-6	Pin — Roll Slotted	1
65	51-0720	Decal — Sand Pro 14	2
66	3219-14	Nut — Hex	10
67	32128-20	Nut — Lock	4
68	3256-14	Washer	3
69	32104-76	Screw Self Tapping Hex. Hd.	3
70	11-4659	Air Cleaner Assembly	1
71	322-1	Screw — Cap Hex. Hd.	4
72	2412-92	Hose Clamp	1
73	3256-23	Washer — Flat	2
74	65-5871	Tube — Manual	1
75	2412-102	R-Clamp	2
76	65-5890	Cap Manual	2
77	322-3	Capscrew — Hex Hd.	2
*	3290-378	Cable Tie	3

†Obtain Locally

 *Not Illustrated

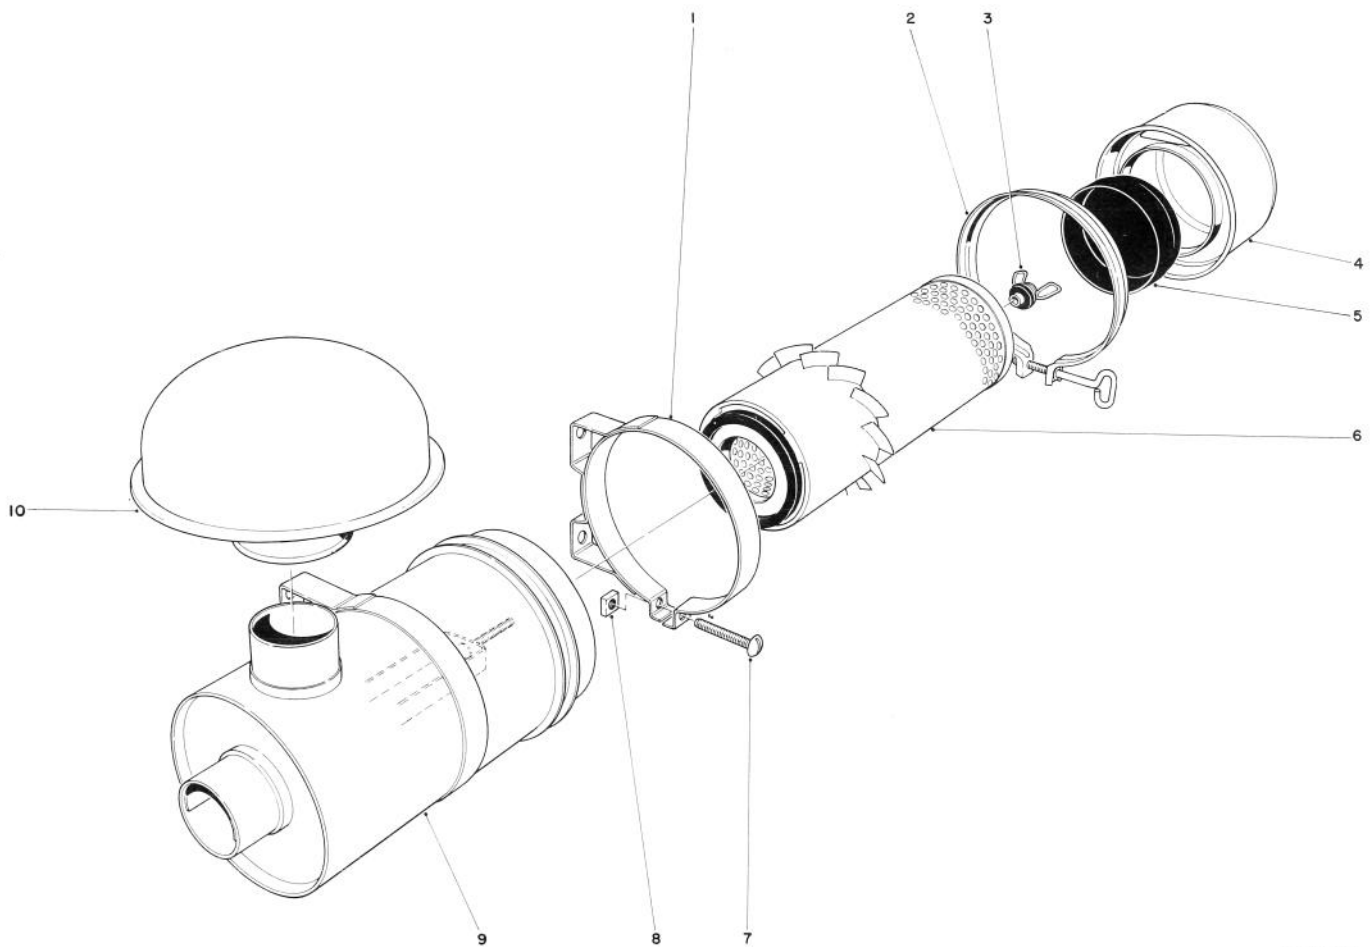


T-0248-90

AIR CLEANER ASSEMBLY 11-4659

Ref. No.	Part No.	Description	No. Used
1	33-1350	Band Assembly Mounting	2
2	33-1340	Clamp Assembly	1
3	33-1330	Nut Assembly	1
4	33-1320	Cup Assembly	1
5	33-1310	Baffle	1

Ref. No.	Part No.	Description	No. Used
6	33-1300	Element Assembly	1
7	3258-19	Screw – Machine	2
8	32107-11	Nut – Square	2
9		Body Assembly	1
10	46-7510	Hood Air Inlet	1

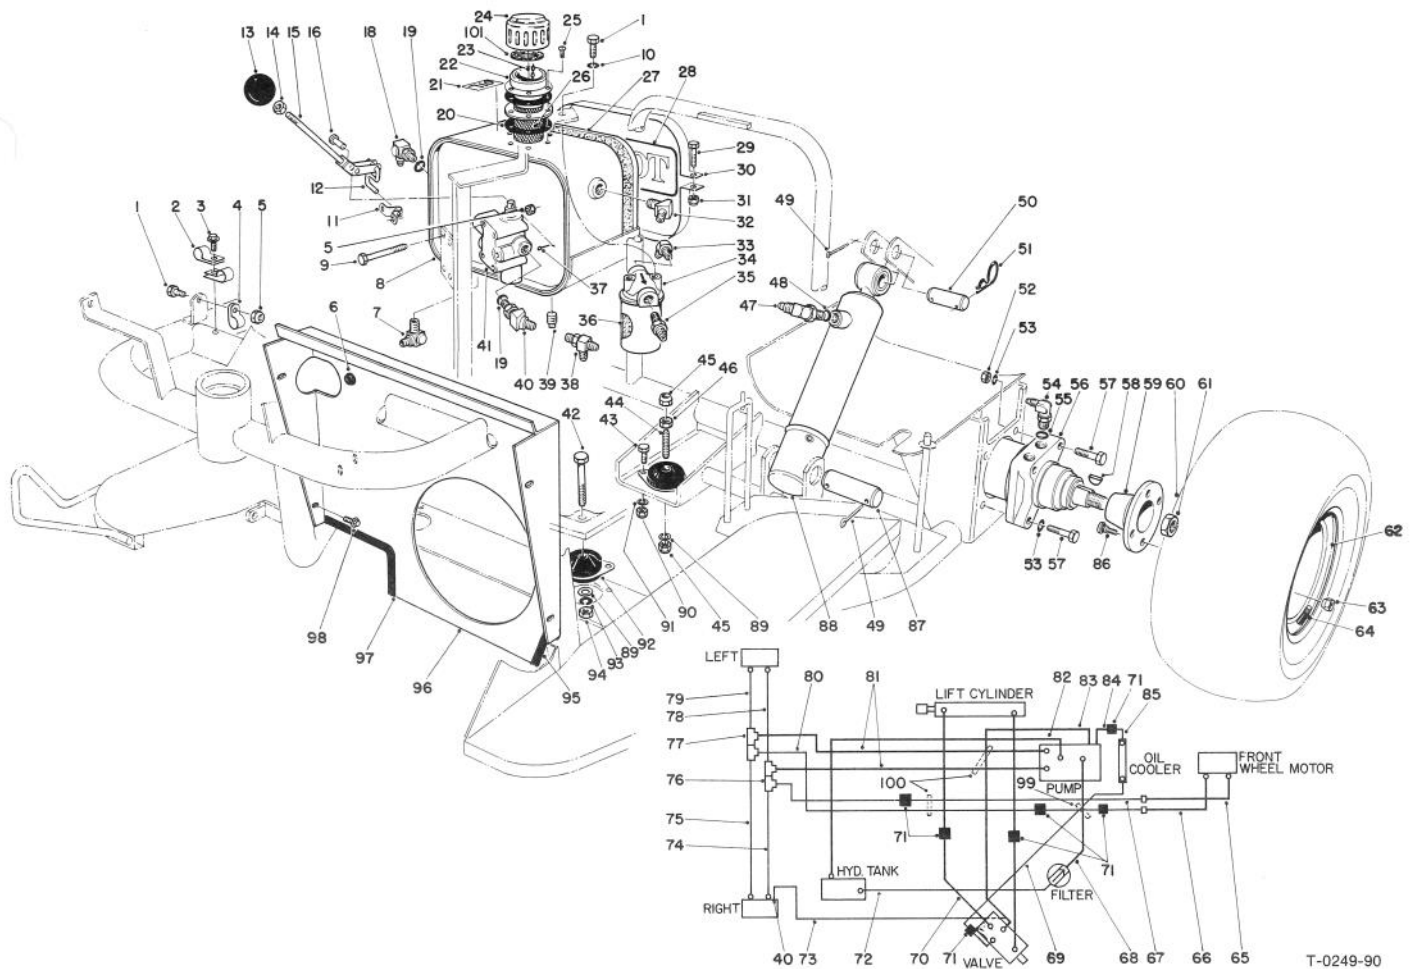 


T-0249-90

HYDRAULIC TANK AND SYSTEMS DIAGRAM

Ref. No.	Part No.	Description	No. Used
1	321-4	Screw — Cap Hex. Hd.	4
2	2412-70	Clamp	2
3	32144-11	Screw — Self Tapping Hex. Hd.	1
4	2412-73	Clamp — "R"	1
5	3296-42	Nut — Lock	6
6	237-88	Grommet	1
7	353-533	Fitting 90°	1
8	51-0690	Hydraulic Tank	1
9	321-14	Screw — Cap Hex. Hd.	4
10	3253-3	Washer — Lock	2
11	22-4600	Bracket — Pivot	1
12	36-4630	S-Link	1
13	233-33	Knob	1
14	3218-2	Nut — Jam	1
15	22-4560	Control Rod	1
16	283-17	Pin — Clevis	1
18	353-511	Fitting 90°	1
19	237-42	O-Ring	2
20	353-963	Gasket	2
21	53-4430	Decal — Oil	1
22	353-961	Flange Adapter	1
23	353-962	Capture Spring & Chain Assy.	1
24	62-2570	Breather Cap (Incl. Ref. #20, 22-23, 26, 101)	1

Ref. No.	Part No.	Description	No. Used
25	32104-111	Screw — Pan Hd.	6
26	62-2610	Screen Assembly	1
27	49-9780	Strip — Felt	1
28	43-5110	Decal — Toro	1
29	323-12	Screw — Cap Hex. Hd.	1
30	49-9650	Strap Tank	1
31	3296-44	Locknut	1
32	353-510	Fitting 45°	1
33	353-535	Fitting 45°	1
34	43-8590	Filter Head Assembly	1
35	353-506	Fitting — Male Adapter	1
36	23-9740	Oil Filter	1
37	3272-4	Cotter Pin	1
38	353-877	Fitting Swivel "T"	1
39	281-3	Plug	1
40	353-212	Fitting 45°	2
41	43-1950	Valve — Control Hydraulic	1
42	323-12	Screw — Cap Hex. Hd.	2
43	3290-134	Screw — Machine Hex. Hd.	6
44	44-1790	Stud — Adjustment	1
45	3296-5	Nut — Lock	2
46	3219-3	Nut — Hex	1

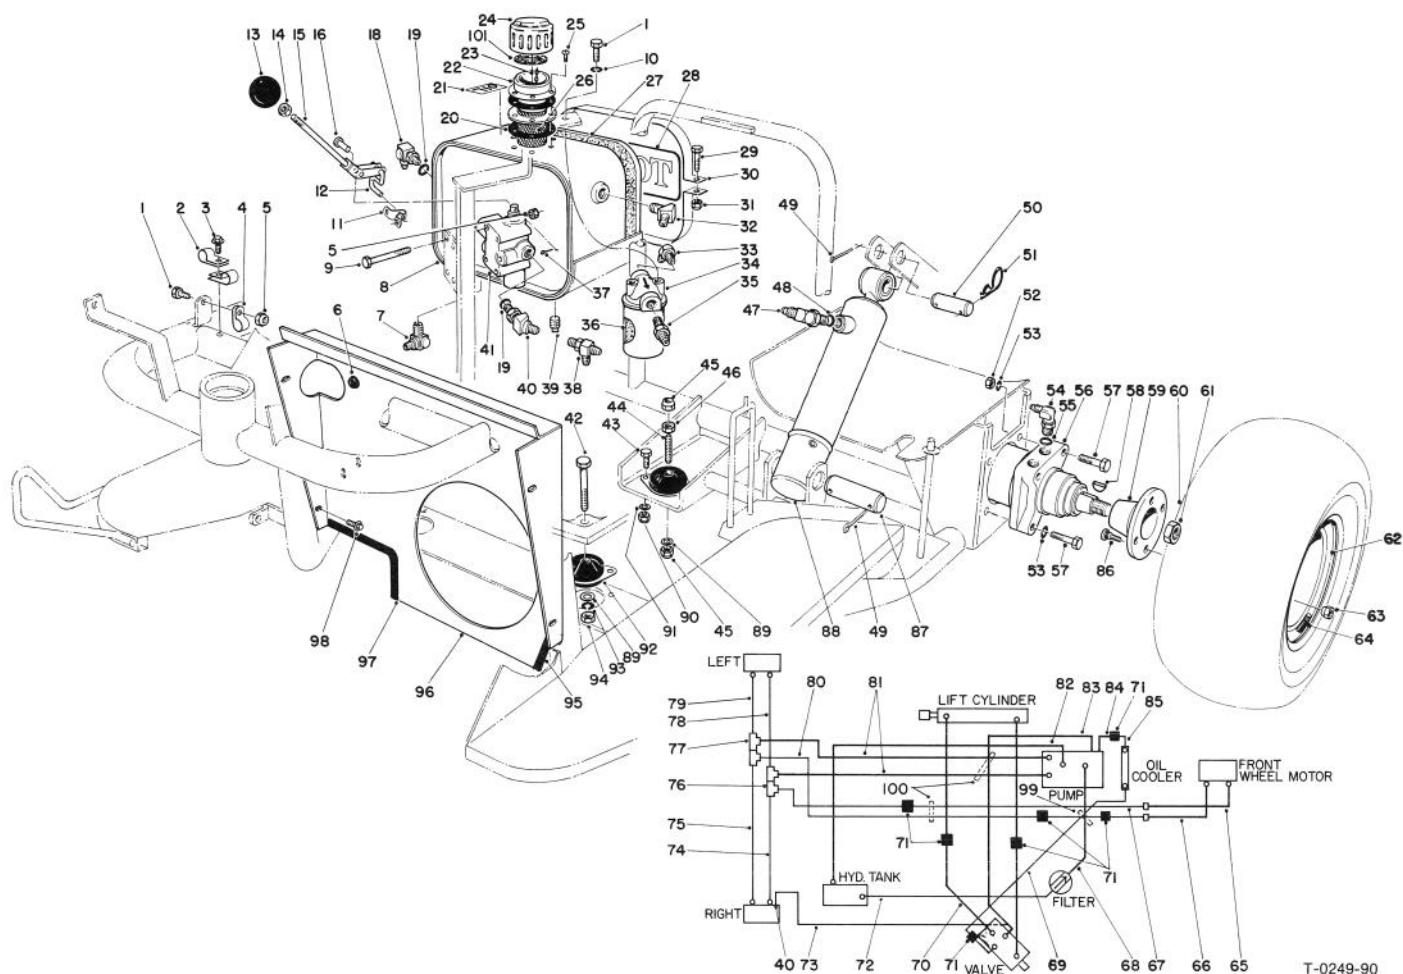 


T-0249-90

HYDRAULIC TANK AND SYSTEMS DIAGRAM (Continued)

Ref. No.	Part No.	Description	No. Used
47	353-431	Fitting 45°	2
48	237-78	O-Ring	2
49	3272-23	Cotter Pin	3
50	18-7310	Pin Rake	1
51	3290-256	Pin — Hair Cotter	1
52	3217-9	Nut Hex	4
53	3253-7	Washer — Lock	8
54	353-426	Fitting 90°	4
55	237-80	O-Ring	4
56	75-9831	Wheel Motor Left Rear	1
*	75-9840	Wheel Motor Right Rear	1
57	325-10	Screw — Cap Hex. Hd.	8
58	3257-42	Key — Woodruff	2
59	17-4710	Wheel Hub	2
60	28-1070	Tire	2
61	26-3790	Nut Lock	2
62	46-4810	Rim	2
63	242-50	Wheel Nut	8
64	232-35	Valve Stem	2
65	51-0600	Hose (Front Motor)	1
66	51-0610	Hose (Front Motor)	1
67	51-0660	Tube (Front Motor L.H.)	1
68	53-9470	Hose (Filter to Pump)	1

Ref. No.	Part No.	Description	No. Used
69	51-0650	Tube (Valve to Cooler)	1
70	22-4670	Hose (Valve to Cylinder)	2
71	38-3400	Guard — Rubber	7
72	51-0770	Tube (Filter to Tank)	1
73	51-0620	Tube — Shuttle Valve	1
74	18-6700	Tube — Front (R.H. Rear Motor)	1
75	18-6730	Tube — Rear (R.H. Rear Motor)	1
76	353-424	"T" Fitting	2
77	353-425	"T" Fitting	2
78	18-6710	Tube — Front (L.H. Rear Motor)	1
79	18-6720	Tube — Rear (L.H. Rear Motor)	1
80	51-0640	Tube (Front Motor R.H.)	1
81	21-5370	Hose (Pump to "T")	2
82	21-5360	Hose (Pump to Reservoir)	1
83	51-0590	Hose (Pump to Valve)	1
84	49-9970	Hose (Pump to Cooler)	1
85	51-0630	Tube (Cooler to Pump)	1
86	10-6830	Wheel Stud	8
87	18-7160	Pin	1
88	68-9700	Hydraulic Cylinder	1
89	3256-24	Washer — Plain	3
90	3296-12	Nut — Lock	6
91	3256-14	Washer — Plain	6

 * Not Illustrated

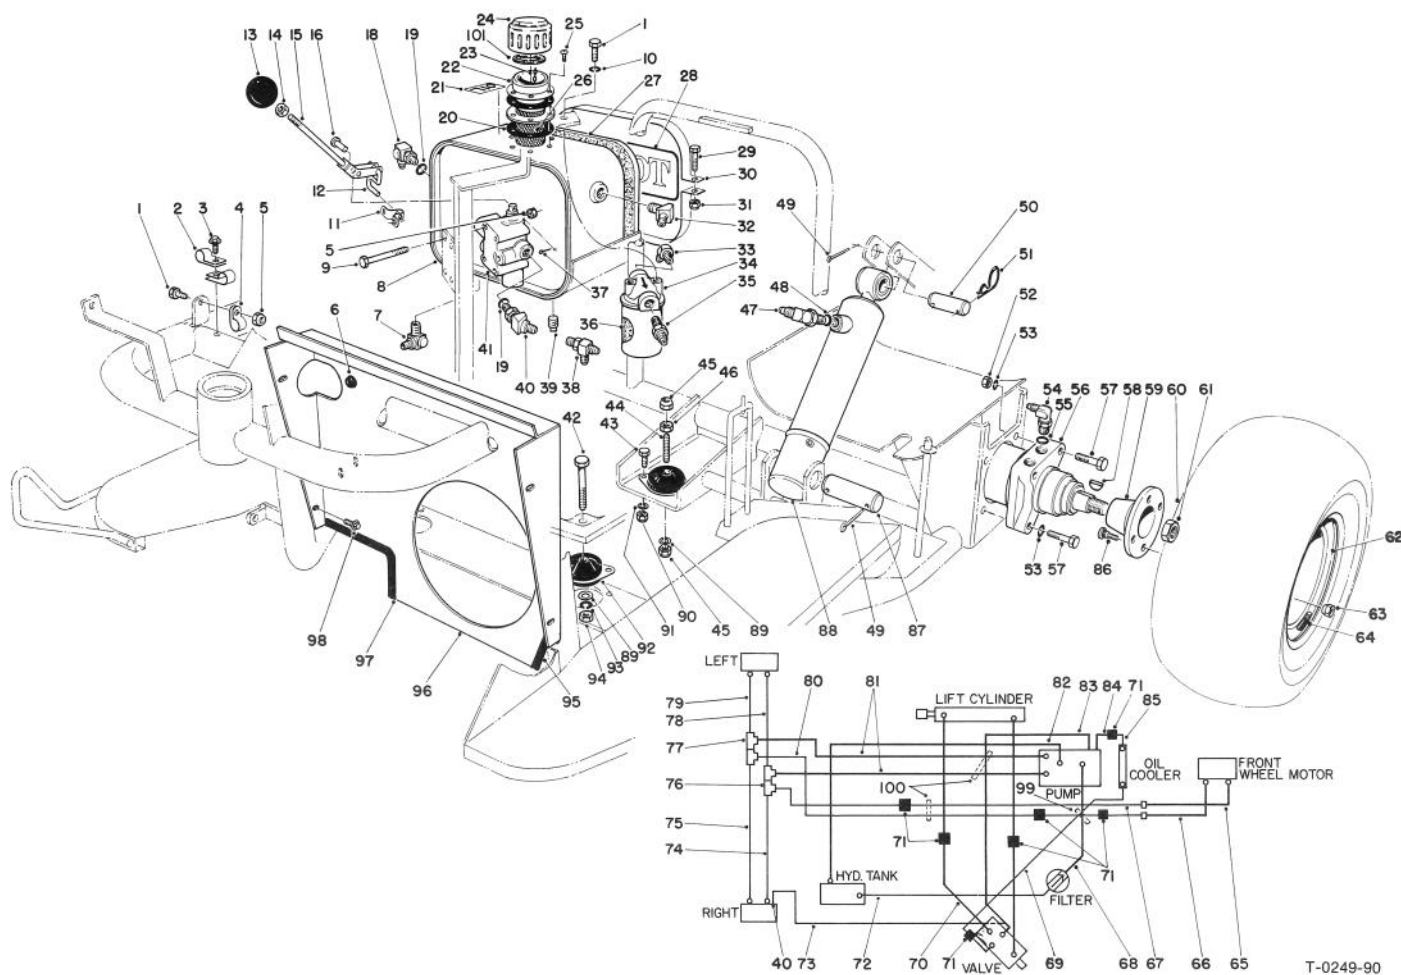


HYDRAULIC TANK AND SYSTEMS DIAGRAM (Continued)

Ref. No.	Part No.	Description	No. Used
92	18-8000	Mount Rubber	3
93	3253-21	Washer — Lock	2
94	3217-7	Nut — Hex	2
95	51-3160	Jiffy Trim	1
96	49-9770	Shield — Blower	

Ref. No.	Part No.	Description	No. Used
97	51-3161	Jiffy Trim	1
98	46-8560	Screw — Self Tapping	4
99	3290-378	Cable Tie	1
100	3290-379	Cable Tie	2
101	76-1720	Gasket Filler Cap	1
*	232-37	Inner Tube	2

 *Not Illustrated

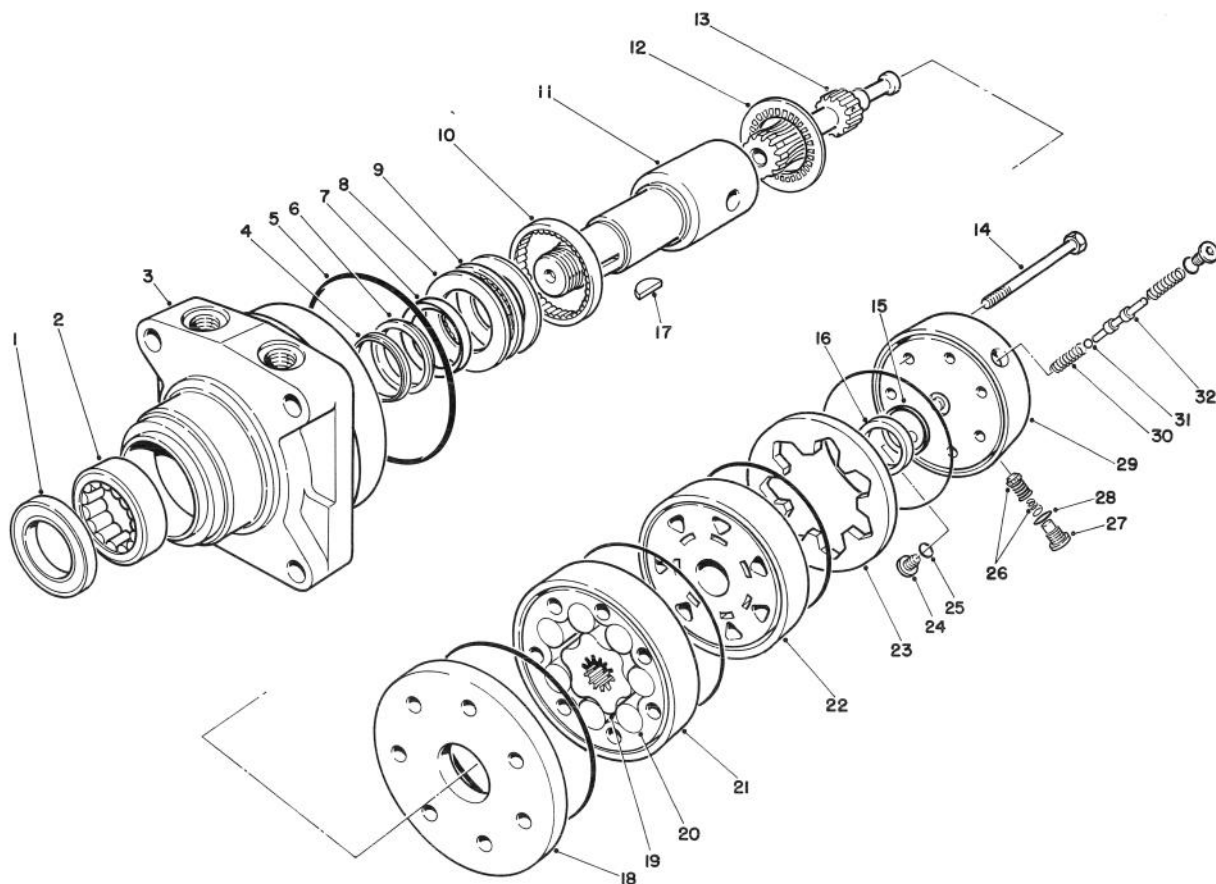

T-0982-90


HYDRAULIC DRIVE MOTOR RIGHT REAR NO. 75-9840

Ref. No.	Part No.	Description	No. Used
1		Seal — Dirt & Water	1
2		Bearing	1
3		Housing	1
4		Washer — Backup	1
5		Seal Rings	5
6		Washer — Backup	1
7		Seal — Inner	1
8		Washer — Thrust	2
9		Bearing — Thrust	1
10		Bearing	1
11	76-0860	Shaft — Coupling	1
12	76-0850	Bearing — Thrust	1
13	76-0820	Link — Drive	1
14	76-1040	Screw — Cap, Hex Hd.	7
15		Seal — Commutator	1
16		Commutator	1
17	3257-42	Key — Woodruff	1
18	76-0870	Plate — Wear	1
19		Rotor	1
20		Vane	7
21		Stator	1

Ref. No.	Part No.	Description	No. Used
22	76-0840	Manifold	1
23		Ring — Commutator	1
24		Plug	2
25		O-Ring	2
26		Valve — Relief	1
27		Plug	1
28		O-Ring	1
29	76-0890	End Cover Assy. (Incl. Ref. #24, 25 & 30-32)	1
30		Spring	2
31		Ball	1
32		Valve — Shuttle	1
*	76-0830	Rotor Set (Incl. Ref. #19-21)	1
*	76-0880	Commutator Assy. (Incl. Ref. #15, 16 & 23)	1
*	76-0800	Seal Kit (Incl. Ref. #1, 4-7 & 15)	1
*	76-0810	Housing Assy. (Incl. Ref. #2, 3 & 8-10)	1

*Not Illustrated

 12 †Not available from Toro as a replacement part.

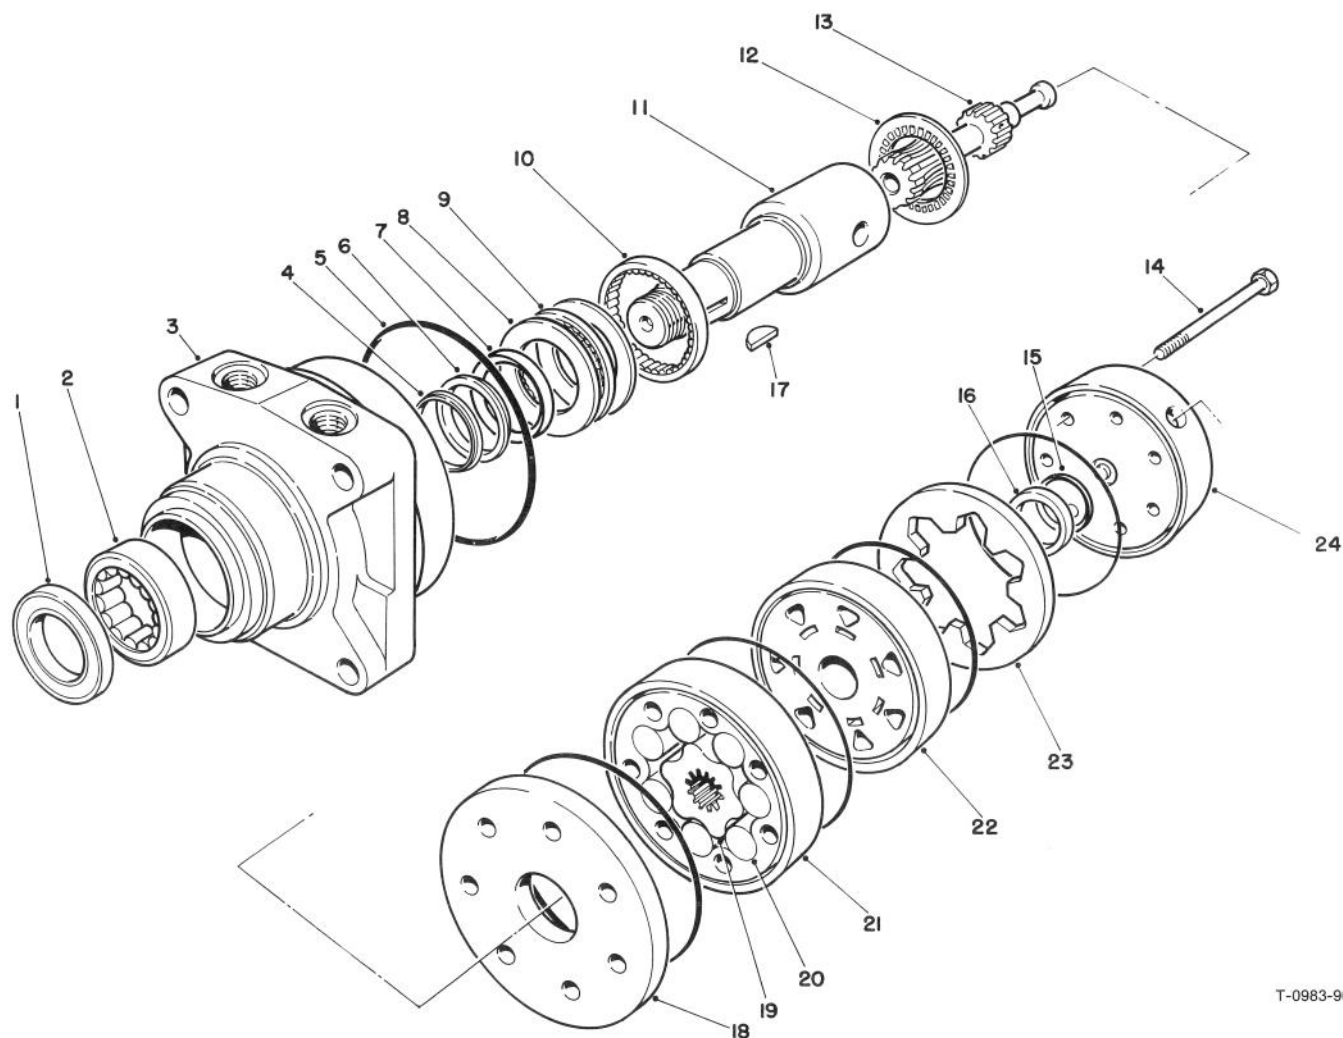


T-0983-90

HYDRAULIC DRIVE MOTOR LEFT REAR NO. 75-9831

Ref. No.	Part No.	Description	No. Used
1		Seal — Dirt & Water	1
2		Bearing	1
3		Housing	1
4		Washer — Backup	1
5		Seal Rings	5
6		Washer — Backup	1
7		Seal — Inner	1
8		Washer — Thrust	2
9		Bearing — Thrust	1
10		Bearing	1
11	76-0860	Shaft — Coupling	1
12	76-0850	Bearing — Thrust	1
13	76-0820	Link — Drive	7
14	76-1020	Screw — Cap, Hex Hd.	1
15		Seal — Commutator	1
16		Commutator	1

Ref. No.	Part No.	Description	No. Used
17	3257-42	Key — Woodruff	1
18	76-0870	Plate — Wear	1
19		Rotor	1
20		Vane	7
21		Stator	1
22	76-0840	Manifold	1
23		Ring — Commutator	1
24	76-0940	End Cover Assy.	1
*	76-0830	Rotor Set (Incl. Ref. #19-21)	1
*	76-0880	Commutator Assy. (Incl. Ref. #15, 16 & 23)	1
*	76-0800	Seal Kit (Incl. Ref. #1, 4-7 & 15)	1
*	76-0810	Housing Assy. (Incl. Ref. #2, 3 & 8-10)	1

 *Not Illustrated

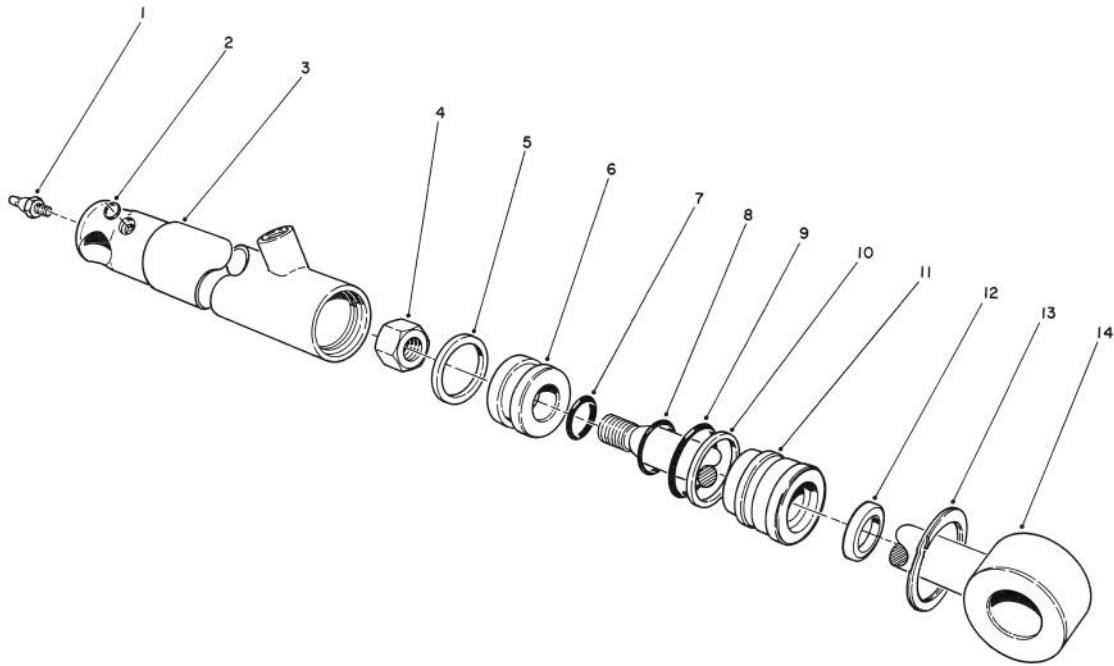


T-0217-90

HYDRAULIC CYLINDER NO. 68-9700

Ref. No.	Part No.	Description	No. Used
1	302-2	Grease Fitting	1
2	237-78	O-Ring	2
3	43-5260	Barrel w/Clevis & Ports	1
4	32152-10	Nut	1
5		Uniring	1
6	70-2780	Piston	1
7		O-Ring	1
8		Poly-Pack	1

Ref. No.	Part No.	Description	No. Used
9		O-Ring	1
10		Back Up	1
11	70-2770	Head	1
12		Dust Seal	1
13	43-5220	Retaining Ring	1
14	43-5230	Shaft with Clevis	1
*	70-2790	Seal Repair Kit (Incl. Ref. #5, 7, 8, 9, 10 & 12)	1

 *Not Illustrated

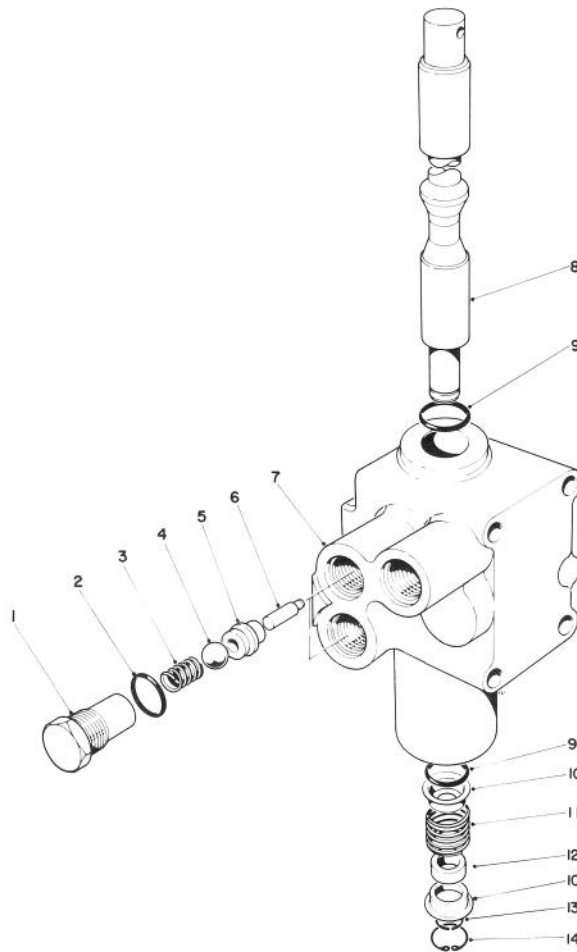


T-0236-90

CONTROL VALVE NO. 43-1950

Ref. No.	Part No.	Description	No. Used
1	22-8330	Plug	2
2	237-42	O-Ring	2
3	22-8340	Spring	2
4	22-8350	Ball	2
5	22-8370	Seat-Check Valve	2
6	22-8360	Pin Cam	2
7	43-1730	Body	1

Ref. No.	Part No.	Description	No. Used
8	22-8420	Spool	1
9	22-8500	O-Ring	2
10	22-8380	Retainer Spring	2
11	22-8410	Spring	1
12	23-3030	Spacer	1
13	22-8480	Snap Ring Spool	1
14	22-8490	Snap Ring	1

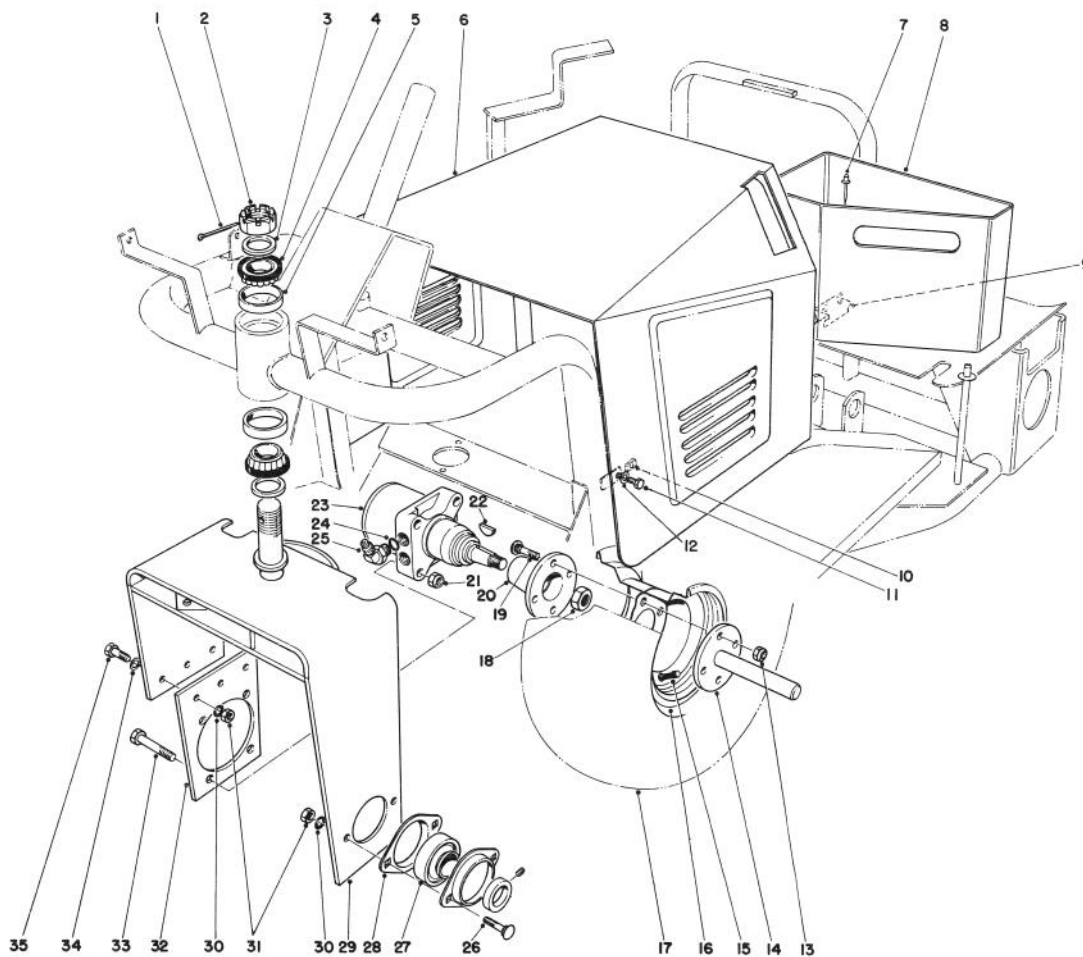 


T-0252-90

FRONT STEERING FORK AND MOTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3272-37	Pin — Cotter	1
2	32136-9	Nut — Hex Slotted	1
3	18-6320	Washer — Steering	3
4	254-70	Bearing Cone & Seal	2
5	254-61	Bearing Cup	2
6	49-9530	Engine Shield	1
7	3290-54	Rivet — Pop	2
8	51-0900	Litter Box (Incl. Ref. #7 & 9)	1
9	44-2520	Clip — Spring	1
10	32115-11	Tinnerman Nut Retainer	2
11	321-5	Screw — Cap Hex. Hd.	2
12	3256-22	Washer	2
13	242-50	Lug Nut	4
14	18-6290	Axle Shaft	1
15	232-35	Valve Stem	1
16	46-4810	Rim	1
17	28-1070	Tire	1
18	26-3790	Locknut	1

Ref. No.	Part No.	Description	No. Used
19	17-2520	Drive Type Stud	4
20	18-8090	Wheel Hub	1
21	3296-25	Locknut	4
22	3257-42	Key — Woodruff	1
23	75-9830	Hydraulic Motor	1
24	237-80	O-Ring	2
25	353-427	45° Fitting	2
26	3231-2	Bolt — Carriage	2
27	251-165	Bearing w/Collar	1
28	251-166	Flange — Bearing	2
29	18-6210	Fork	1
30	3253-21	Washer — Lock	5
31	3217-7	Nut — Hex	5
32	18-6270	Wheel Motor Mount — Fork	1
33	325-10	Capscrew	4
34	3256-24	Washer — Plain	3
35	323-7	Screw — Cap Hex. Hd.	3
*	232-37	Inner Tube	1

 *Not Illustrated

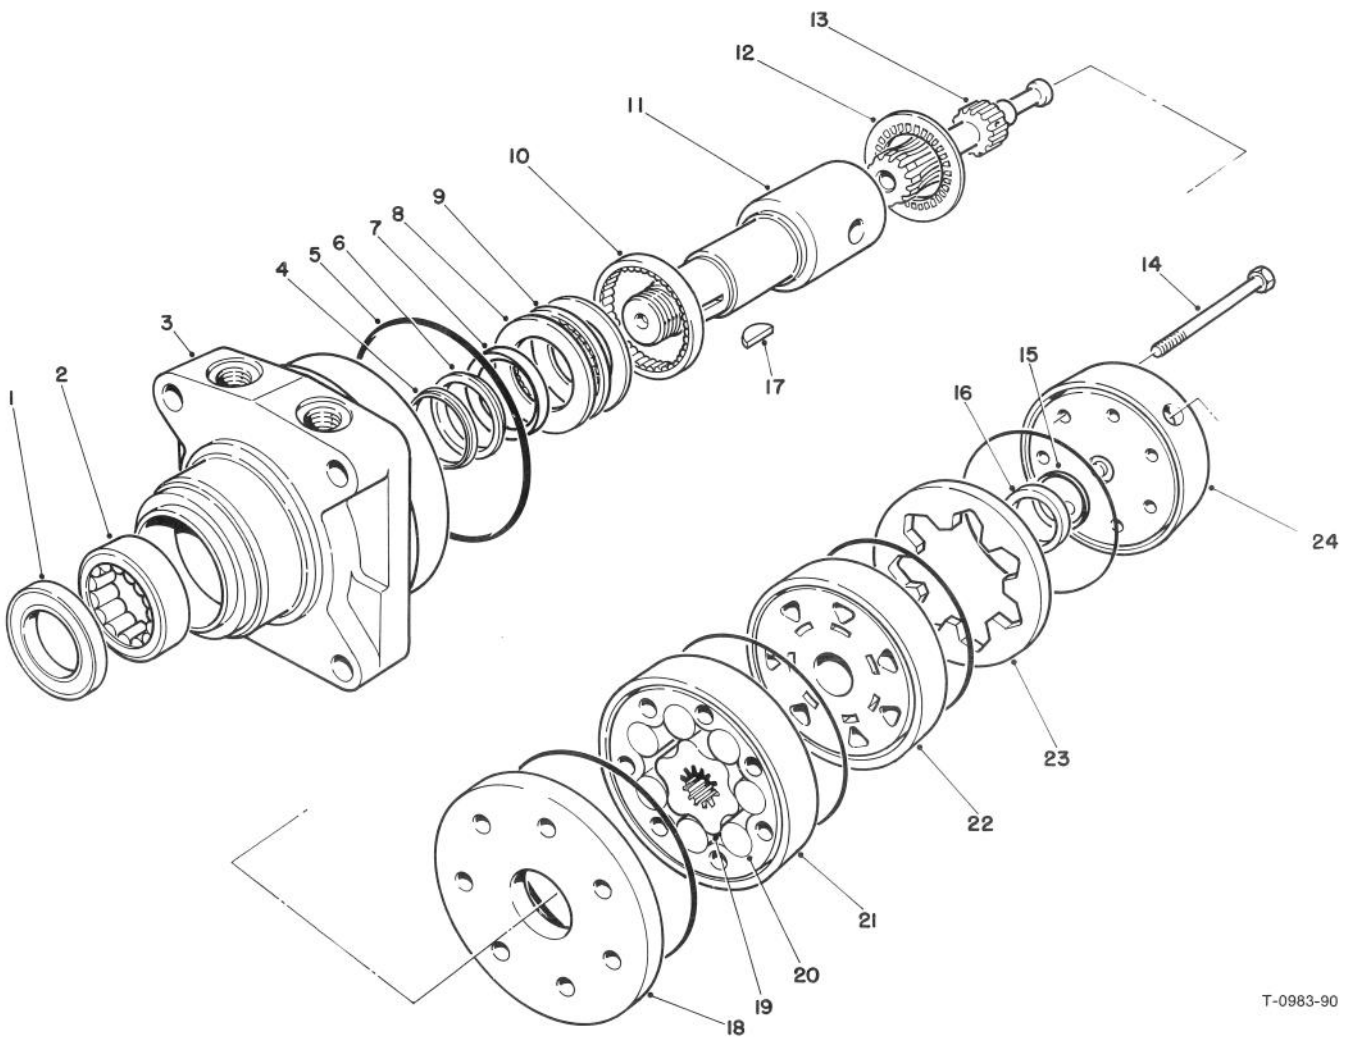


T-0983-90

HYDRAULIC DRIVE MOTOR (FRONT) NO. 75-9830

Ref. No.	Part No.	Description	No. Used
1		Seal — Dirt & Water	1
2		Bearing	1
3		Housing	1
4		Washer — Backup	1
5		Seal Rings	5
6		Washer — Backup	1
7		Seal — Inner	1
8		Washer — Thrust	2
9		Bearing — Thrust	1
10		Bearing	1
11	76-0860	Shaft — Coupling	1
12	76-0850	Bearing — Thrust	1
13	76-0930	Link — Drive	1
14	76-1030	Screw — Cap, Hex Hd.	7
15		Seal — Commutator	1
16		Commutator	1

Ref. No.	Part No.	Description	No. Used
17	3257-42	Key — Woodruff	1
18	76-0870	Plate — Wear	1
19		Rotor	1
20		Vane	7
21		Stator	1
22	76-0840	Manifold	1
23		Ring — Commutator	1
24	76-0940	End Cover Assy.	1
*	76-0950	Rotor Set (Incl. Ref. #19-21)	1
*	76-0880	Commutator Assy. (Incl. Ref. #15, 16, & 23)	1
*	76-0800	Seal Kit (Incl. Ref. #1, 4-7, & 15)	1
*	76-0810	Housing Assy. (Incl. Ref. #2, 3, & 8-10)	1

 *Not Illustrated

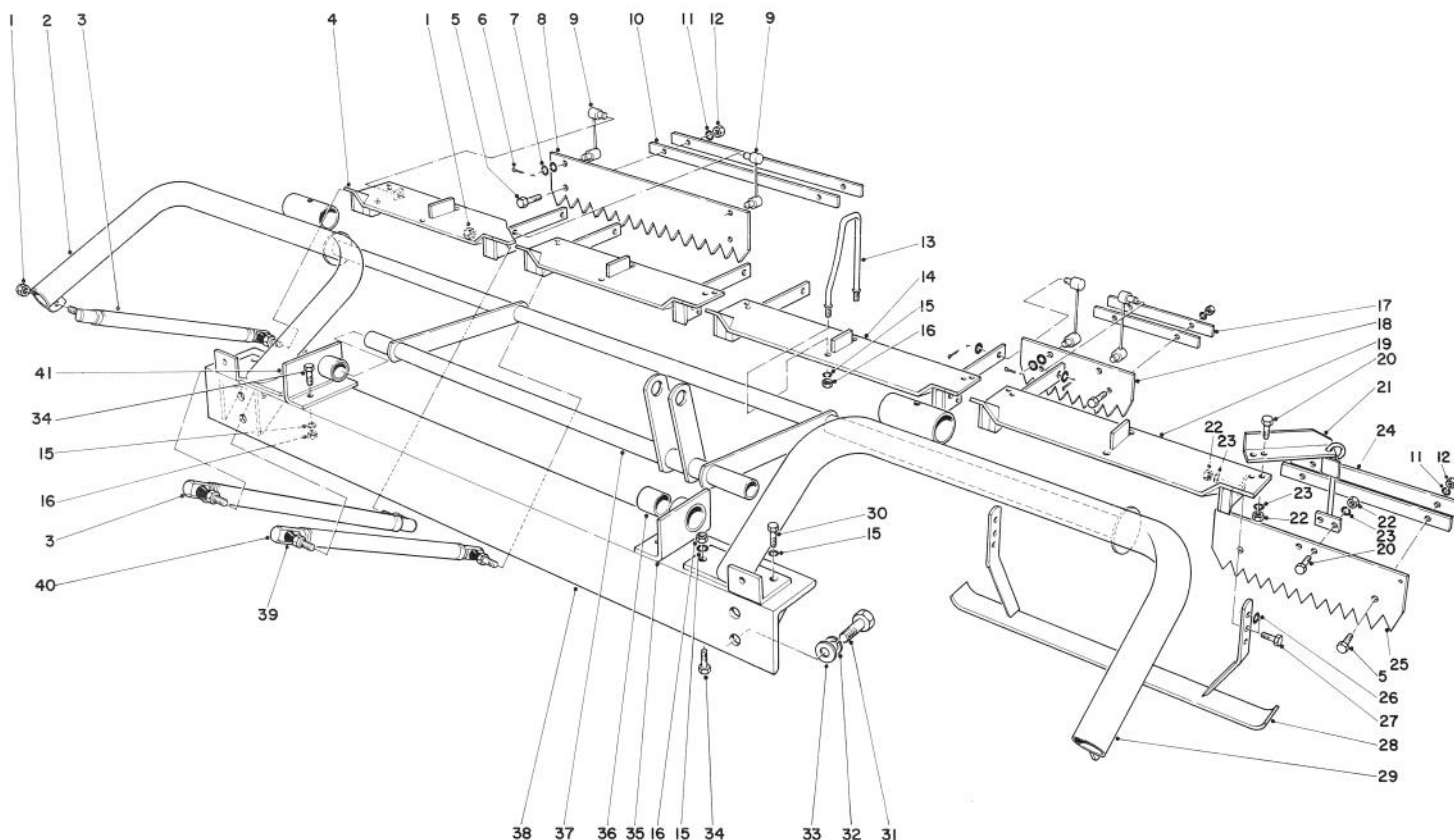


T-0253-90

RAKE ASSEMBLY MODEL NO. 08811 (Optional)

Ref. No.	Part No.	Description	No. Used
1	3296-5	Nut	16
2	18-7260	Wheel Hoop R.H.	1
3	18-7550	Ball Joint Assembly (Incl. Ref. #39)	4
4	18-7450	Upper Rake	1
5	322-5	Capscrew	18
6	3272-10	Cotter Pin	28
7	3256-23	Washer	42
8	18-7560	Plate Drag Main	4
9	20-4670	Drag Cable Assembly	14
10	18-7570	Weight Drag	8
11	3253-4	Lockwasher	18
12	3217-6	Nut	18
13	18-7520	Hoop Lift	4
14	18-7380	Upper Rake (Center)	2
15	3253-21	Lockwasher	14
16	3217-7	Nut	12
17	18-7590	Weight Drag (Secondary)	6
18	18-7580	Plate Drag (Secondary)	3
19	18-7420	Upper Rake L.H.	1
20	321-4	Capscrew	8
21	18-7660	Swivel Bracket	2
22	3217-5	Nut	24

Ref. No.	Part No.	Description	No. Used
23	3253-3	Lockwasher	24
24	18-7650	Weight	4
25	18-7640	Swivel Drag	2
26	3256-22	Washer	8
27	321-31	Capscrew	16
28	18-7460	Rake Bar	4
29	18-7360	Wheel Hoop L.H.	1
30	323-3	Capscrew	2
31	325-5	Capscrew	4
32	3253-7	Lockwasher	4
33	3256-26	Flatwasher	4
34	323-6	Capscrew	4
35	18-7220	Pivot Bracket L.H. (Incl. Ref. #36)	1
36	256-234	Bushing	2
37	18-7170	Lift Bar	1
38	18-7280	Mount Rake	1
39	2411-31	Rubber Boot	16
40	18-7530	Ball Joint Assembly (Center) (Incl. Ref. #39)	4
41	18-7250	Pivot Bracket R.H. (Incl. Ref. #36)	1

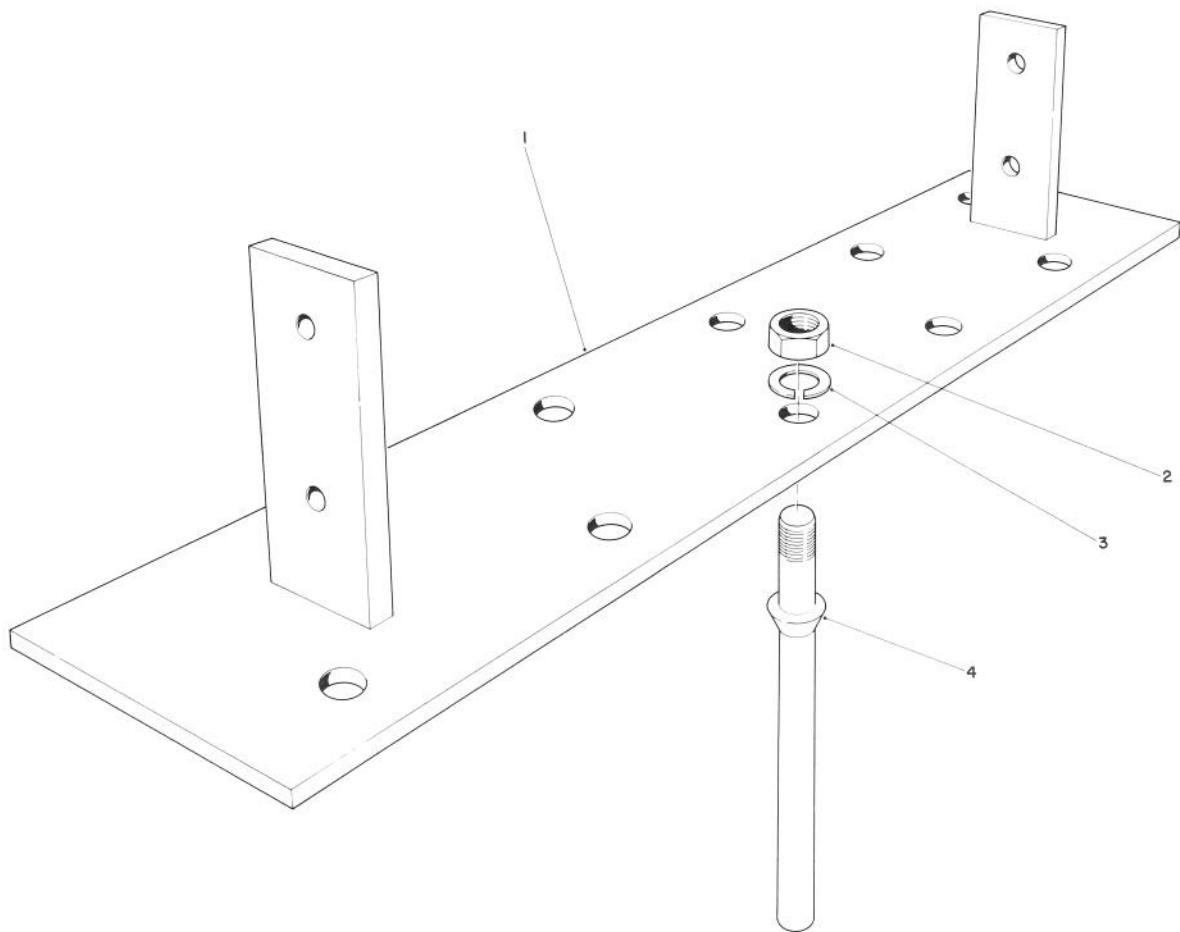 

T-0254-90

PRONG RAKE KIT NO. 42-3960 (Optional)

Ref. No.	Part No.	Description	No. Used
1	42-1910	Plate	4
2	3217-7	Nut	40


Ref. No.	Part No.	Description	No. Used
3	3253-29	Lockwasher	40
4	42-1940	Prong – Rake	40

Note: Used with Rake Attachment Model No. 08811.



Ref. No.	Part No.	Description	No. Used
1	20-3910	Hitch	1

Ref. No.	Part No.	Description	No. Used

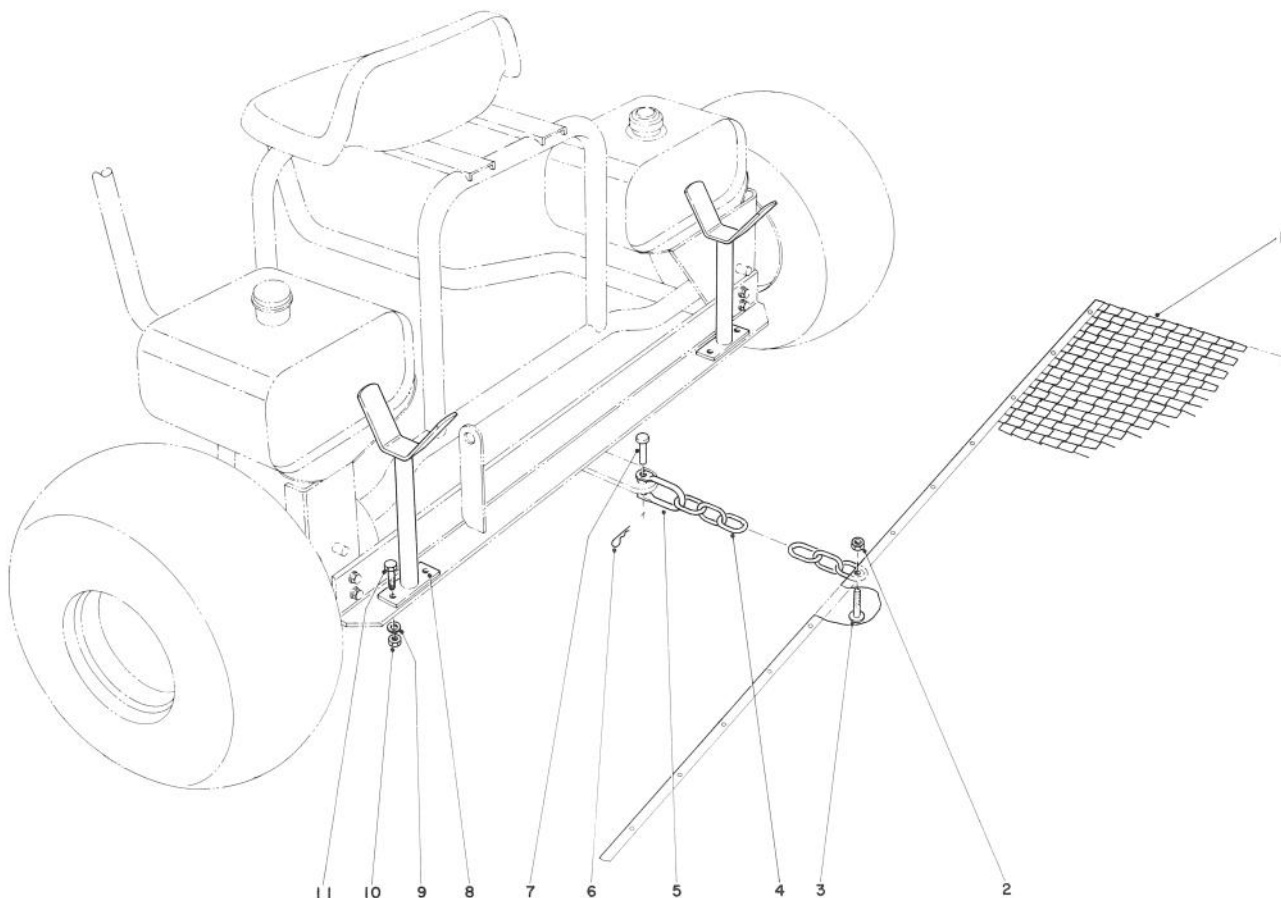 


T-0256-90

DRAG MAT KIT MODEL NO. 08844 (Optional)

Ref. No.	Part No.	Description	No. Used
1	20-4290	Drag Mat	1
2	3296-29	Locknut	1
3	32122-35	Machine Screw	1
4	2820-2	Chain	1
5	5-2942	Shackle	1
6	3290-250	Hair Pin Cotter	1

Ref. No.	Part No.	Description	No. Used
7	283-10	Pin	1
8	28-0830	Drag Mat Holder	2
9	3253-21	Lockwasher	4
10	3217-7	Nut	4
11	323-29	Capscrew	4

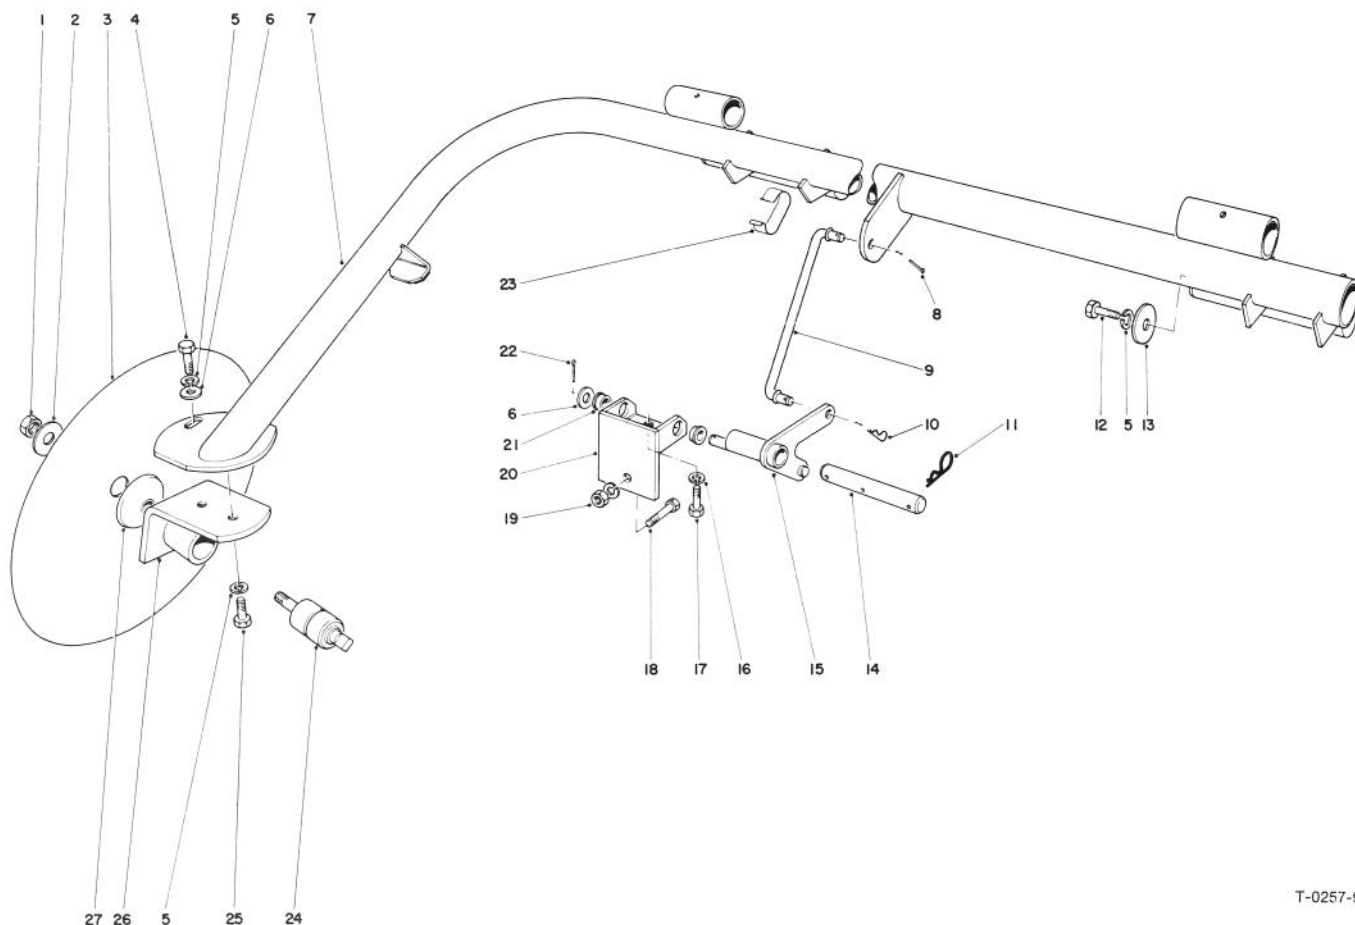 


T-0257-90

EDGER KIT MODEL NO. 08822 (Optional)

Ref. No.	Part No.	Description	No. Used
1	3296-33	Locknut	1
2	3256-7	Flatwasher	1
3	20-4070	Edger Disk	1
4	325-5	Capscrew	1
5	3253-7	Lockwasher	3
6	3256-26	Flatwasher	2
7	20-4030	Edger Arm	1
8	3272-2	Cotter Pin	1
9	20-4190	Actuator Link	1
10	3290-250	Hair Pin Cotter	1
11	3290-256	Hair Pin Cotter	2
12	323-4	Capscrew	1
13	5-1720	Washer	1
14	20-4230	Cylinder Pin	1

Ref. No.	Part No.	Description	No. Used
15	20-3980	Bell Crank	1
16	3253-21	Lockwasher	2
17	325-2	Capscrew	1
18	323-7	Capscrew	1
19	3217-7	Full Nut	1
20	20-3970	Pivot Mount (Incl. Ref. 21)	1
21	256-156	Bushing	2
22	3272-7	Cotter Pin	1
23	20-4200	Spring Clip	2
24	20-4090	Edger-Disk Bearing	1
25	325-4	Capscrew	1
26	20-4020	Disk Support Plate (Incl. Ref. 24)	1
27	20-4050	Disk Support	1

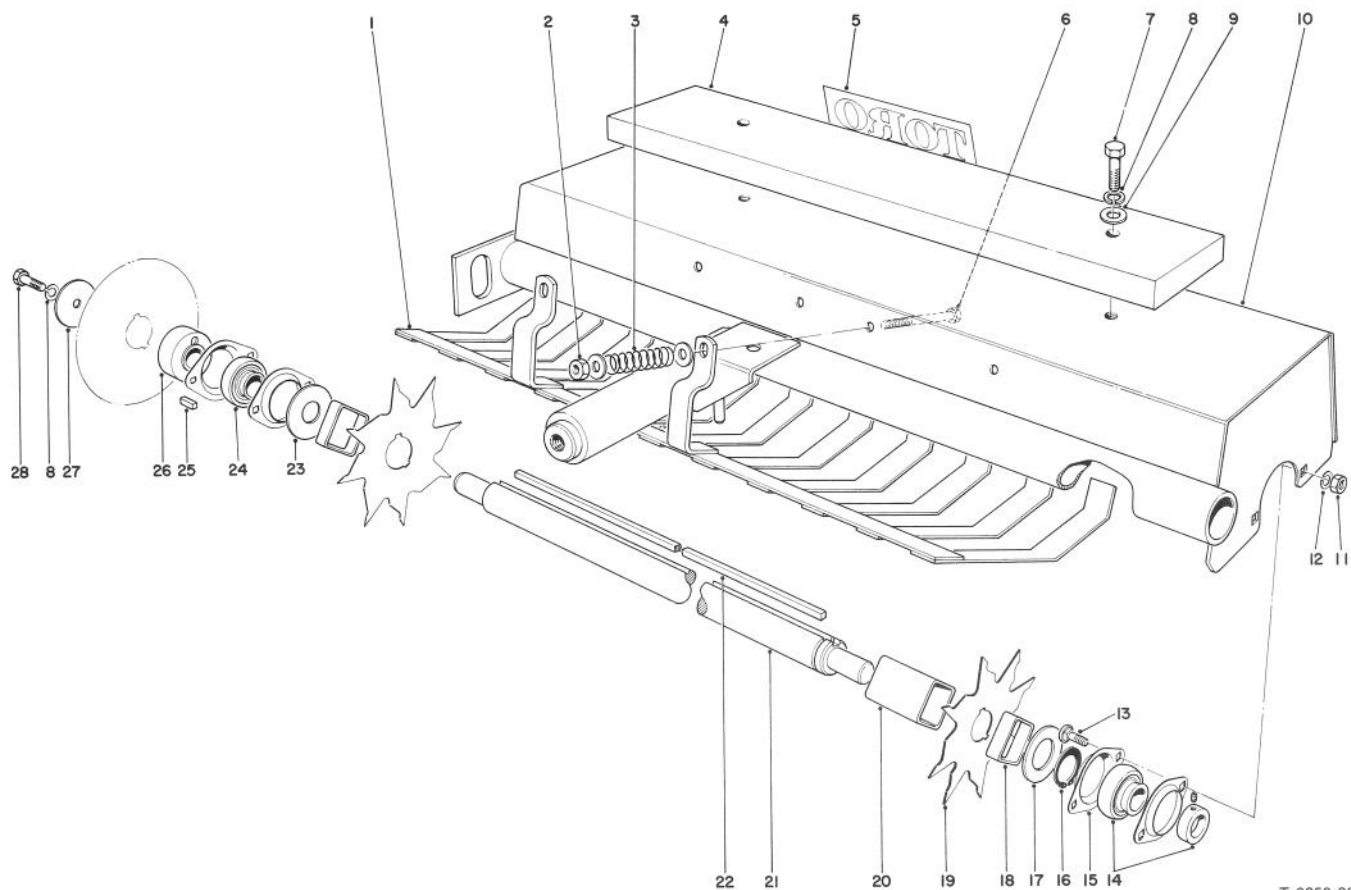 


T-0258-90

SPIKER MODEL NO. 08855 (Optional)

Ref. No.	Part No.	Description	No. Used
1	20-9140	Fork Assembly L.H.	1
*	20-9150	Fork Assembly R.H.	1
2	3296-39	Locknut	4
3	20-9550	Compression Spring	4
4	20-9430	Weight	2
5	18-6900	Decal — Toro	1
6	323-14	Capscrew	4
7	323-10	Capscrew	4
8	3253-21	Lockwasher	6
9	3256-24	Flatwasher	12
10	20-9040	Frame Assembly L.H.	1
*	20-9050	Frame Assembly R.H.	1
11	3217-6	Nut	8
12	3253-4	Lockwasher	8
13	3230-1	Carriage Bolt	8

Ref. No.	Part No.	Description	No. Used
14	251-253	Bearing w/Collar Assembly	2
15	251-255	Flange	8
16	32151-44	Retaining Ring	2
17	20-9490	Washer	2
18	20-7400	End Spacer	4
19	20-7380	Spike Blade	24
20	20-9480	Spacer	20
21	20-9470	Shaft	2
22	20-9460	Key	2
23	20-9500	Washer	2
24	251-254	Bearing	2
25	20-9540	Key	2
26	20-9980	Hub	2
27	20-9530	End Washer	2
28	323-7	Capscrew	2
*	21-6000	Spiker Depth Gauge	1

 *Not Illustrated

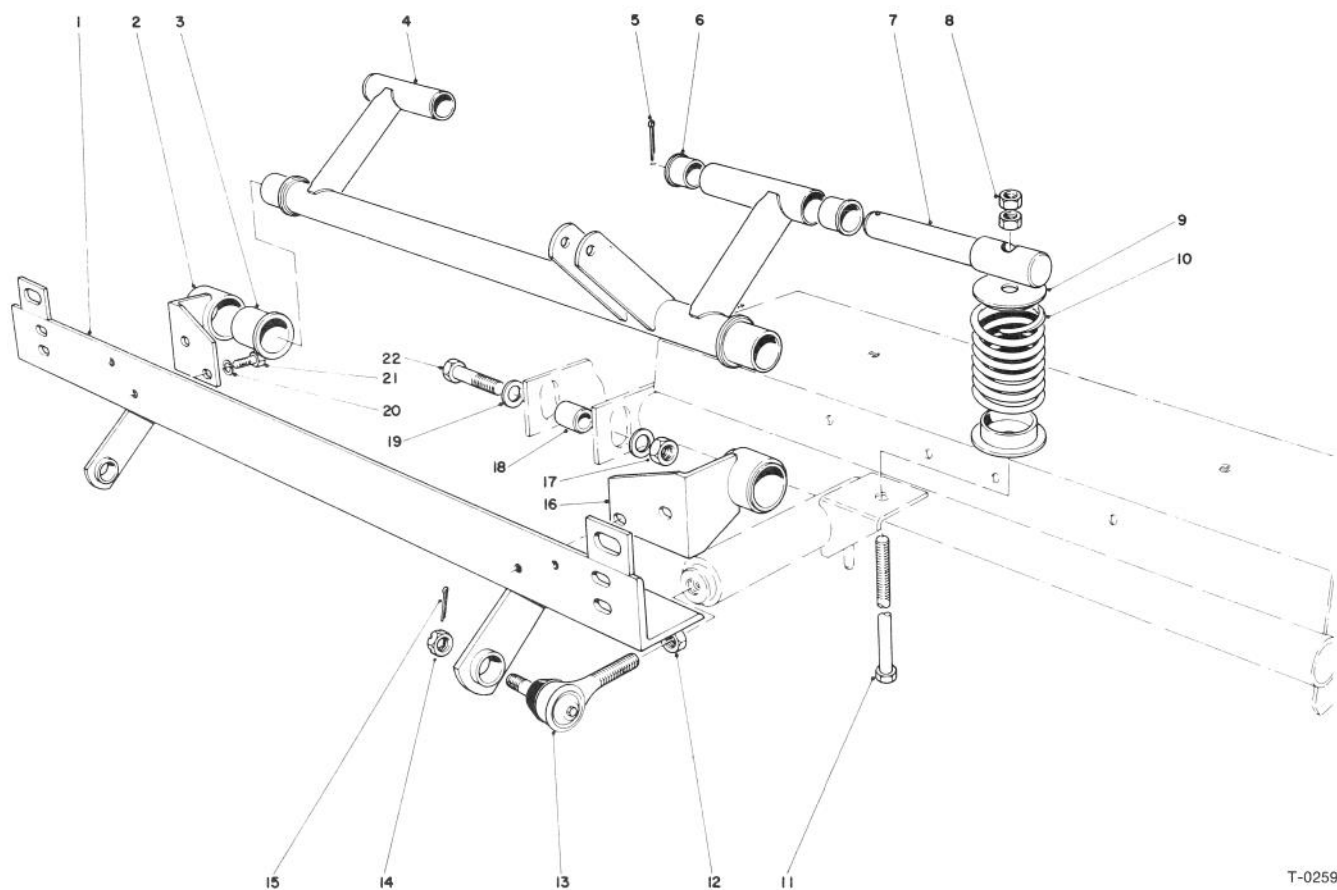


T-0259-90

SPIKER MODEL NO. 08855 (Continued) (Optional)

Ref. No.	Part No.	Description	No. Used
1	20-9310	Mount	1
2	20-9270	Anchor R.H. (Incl. Ref. #3)	1
3	256-245	Bushing	2
4	20-9190	Lift Arm (Incl. Ref. #6)	1
5	3272-13	Cotter Pin	2
6	256-10	Bushing	2
7	20-9400	Actuating Pin	2
8	3217-9	Nut	4
9	20-9350	Spring Mount	4
10	20-9420	Spring	2
11	20-9390	Actuating Rod	2

Ref. No.	Part No.	Description	No. Used
12	20-9990	Nut	2
13	21-4010	Ball Joint (Incl. Ref. #14)	2
14	32136-3	Slotted Nut	2
15	3272-7	Cotter Pin	2
16	20-9260	Anchor L.H. (Incl. Ref. #3)	1
17	3296-25	Locknut	1
18	20-9410	Center Support Tube	1
19	3256-26	Flat Washer	2
20	3253-21	Lockwasher	4
21	323-5	Capscrew	4
22	325-8	Capscrew	1

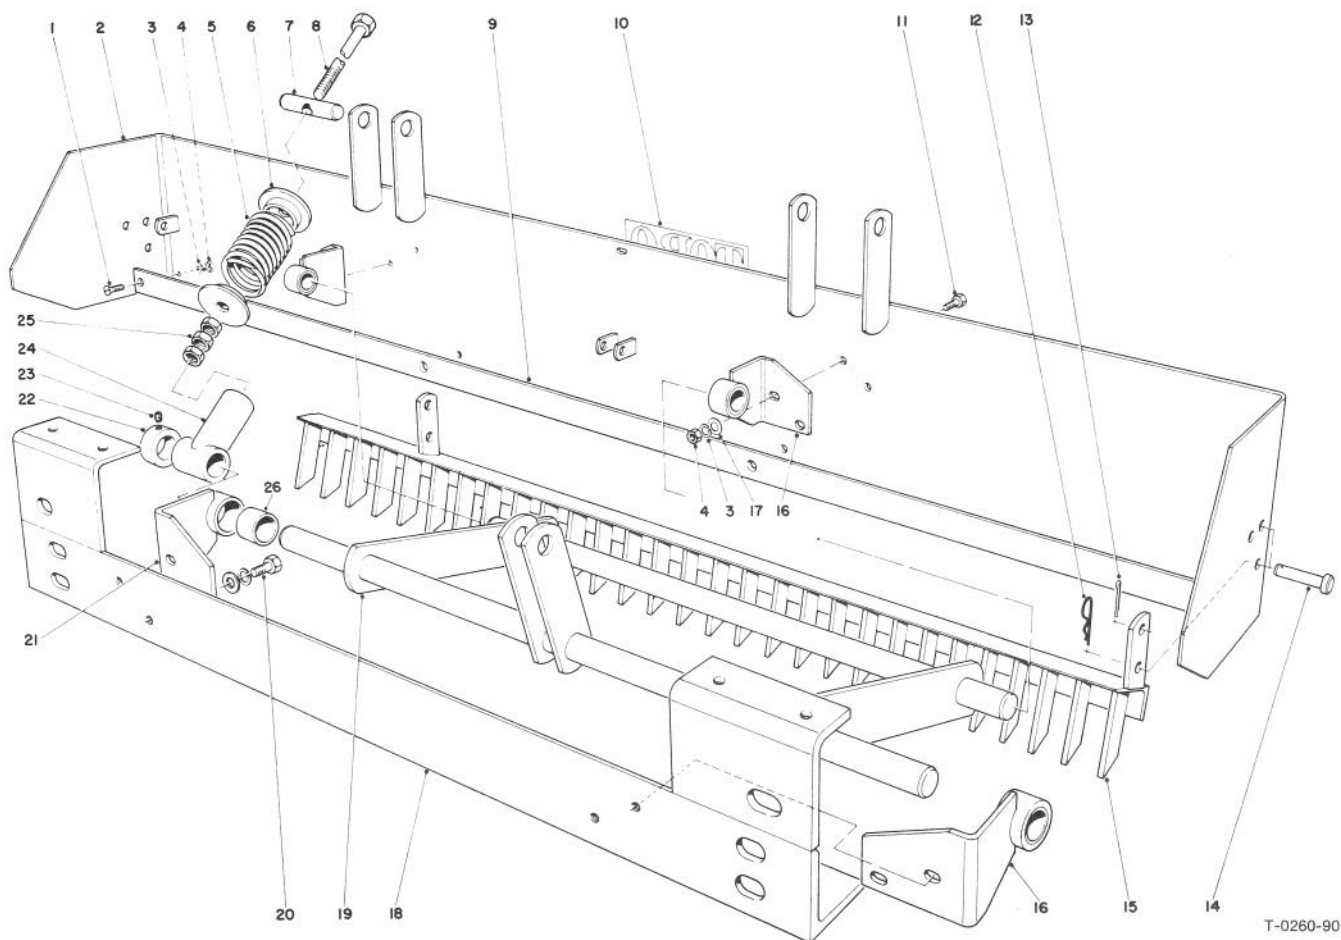 

FINISH GRADER KIT MODEL NO. 08867 (Optional)

Ref. No.	Part No.	Description	No. Used
1	32108-39	Flat Hd. Screw	4
2	23-2780	Plow	1
3	3253-21	Lockwasher	12
4	3217-7	Hex Nut	12
5	20-9420	Compression Spring	2
6	23-2760	Spring Mount	4
7	23-2740	Actuating Pin	2
8	23-2770	Actuating Rod	2
9	23-2790	Blade Scraper	1
10	18-6900	Decal — Toro	1
11	323-7	Capscrew	4
12	3290-355	Hair Pin Cotter	2
13	3272-11	Cotter Pin	3
14	283-40	Clevis Pin	5

Ref. No.	Part No.	Description	No. Used
15	23-2750	Scarifier (43 Fingers)	1
*	23-3010	Scarifier (22 Fingers)	1
16	23-2810	Anchor L.H. (Incl. Ref. #26)	2
17	3256-24	Flat Washer	8
18	23-2710	Mount	1
19	23-2680	Lift Arm	1
20	323-5	Capscrew	4
21	23-2690	Anchor R.H. (Incl. Ref. #26)	2
22	23-2730	Lock Collar	2
23	3246-1	Set Screw	2
24	23-2720	Adjusting Sleeve	2
25	3217-11	Hex Nut	6
26	256-237	Bushing	4


*Not Illustrated

ENGINE KOHLER MODEL NO. K321S SPEC. NO. 60434


GROUP 1



 
GROUP 2

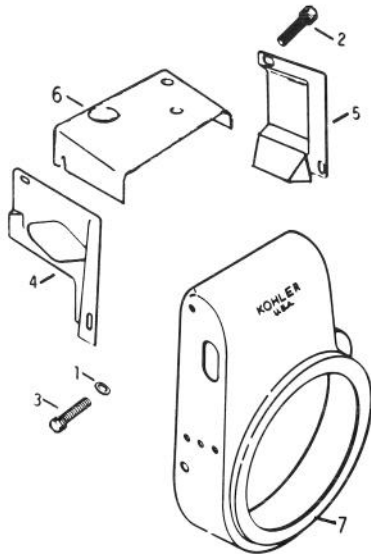


GROUP 5

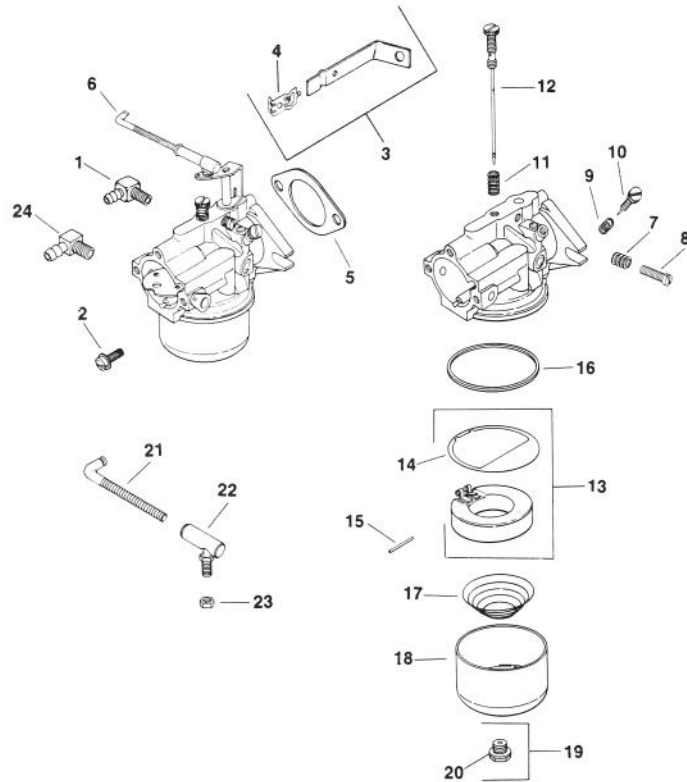 

GROUP 3

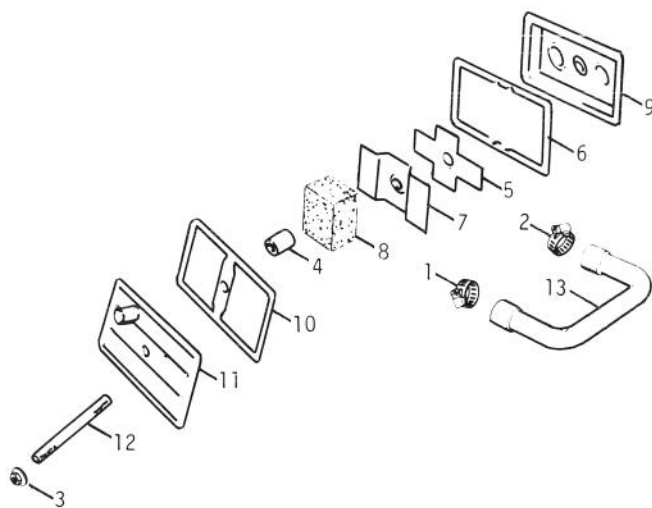 

GROUP 4

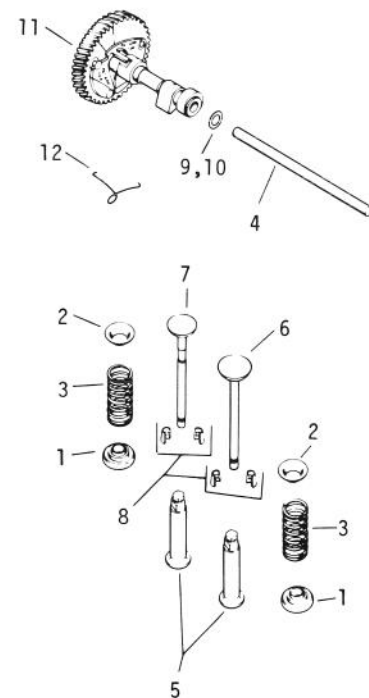 


ENGINE KOHLER MODEL NO. K321S SPEC. NO. 60434

Ref. No.	Part No.	Description	No. Used
		AIR INTAKE — Group 1	
1	4504107	Gasket, Air Horn	1
		BAFFLES & SHROUD — Group 2	
1	X-25-53	Washer, Plain 1/4	1
2	X-132-2	Screw, H.C. 1/4-20x3/4	3
3	X-132-6	Screw, H.C. 1/4-20x1/2	3
4	235652	Baffle, Side Air	1
5	236676	Baffle, Cylinder	1
6	237677	Baffle, Head	1
7	4702718	Housing, Blower	1
		BREATHER & VENT — Group 3	
1	X-426-3	Clamp, Hose	1
2	X426-9	Clamp, Hose	1
3	X-799-1	Palnut, 1/4-20	1
4	231032	Seal, Breather	1
5	235047	Reed, Breather	1
6	235048	Gasket, Breather Plate	1
7	235117	Baffle, Breather	1
8	235118	Filter, Breather	1
9	235631	Plate, Breather	1
10	275144	Gasket, Valve Cover	1
11	275839	Cover, Valve	1
12	275220	Stud, Valve Cover	1
13	4732602	Hose	1
		CAMSHAFT & VALVES — Group 4	
1	5241301	Rotator	2
2	235011	Retainer, Spring Upper	2
3	235168	Spring, Valve	2
4	4738009	Pin, Camshaft	1
5	D-235327	Tappet	2
6	235582	Valve, Intake	1


Ref. No.	Part No.	Description	No. Used
7	237672	Valve, Exhaust	1
8	4175510	Kit, Retainer	2
9	275066	Spacer .005 (A.R.)	1
10	275067	Spacer .010 (A.R.)	1
11	4701009	Camshaft Assembly	1
12	4708901	Spring, Actuating	1
		CARBURETOR — Group 5	
1	2515502	Connector, 90° Hose	1
2	X-770-1	Screw, Slt'd, Hd. 5/16-18x1	2
3	A-236919	Bracket, Choke Assembly	1
4	235603	Clip	1
5	271030	Gasket, Carburetor	1
6	47 053 61	Carburetor Assembly	1
7	232555	Spring, Idle Speed	1
8	232556	Screw, Idle Speed Adj.	1
9	200380	Spring, Idle Fuel	1
10	275231	Needle, Idle Fuel Adj.	1
11	200383	Spring, Main Fuel	1
12	45 103 01	Needle, Main Fuel Adj.	1
13	25 757 03	Kit, Float	1
14	25 041 02	Gasket, Bowl Baffle	1
15	200376	Pin, Float Hinge	1
16	200375	Gasket, Bowl	1
17	237917	Spring, Float	1
18	235448	Bowl, Fuel	1
19	47 100 06	Screw, Bowl Retainer	1
20	200372	Gasket, Bowl Ret. Screw	1
21	235277	Rod, Ball Joint	1
22	45 208 03	Joint, Ball	1
23	X-70-3	Nut, Hex. 10-32	1
24	X-391-10	Connector, 90° Hose	1
	25 757 02	Kit, Carburetor Repair	1
	25 757 05	Kit, Throttle & Choke Shaft	1

ENGINE KOHLER MODEL NO. K321S SPEC. NO. 60434 (Continued)

 GROUP 7

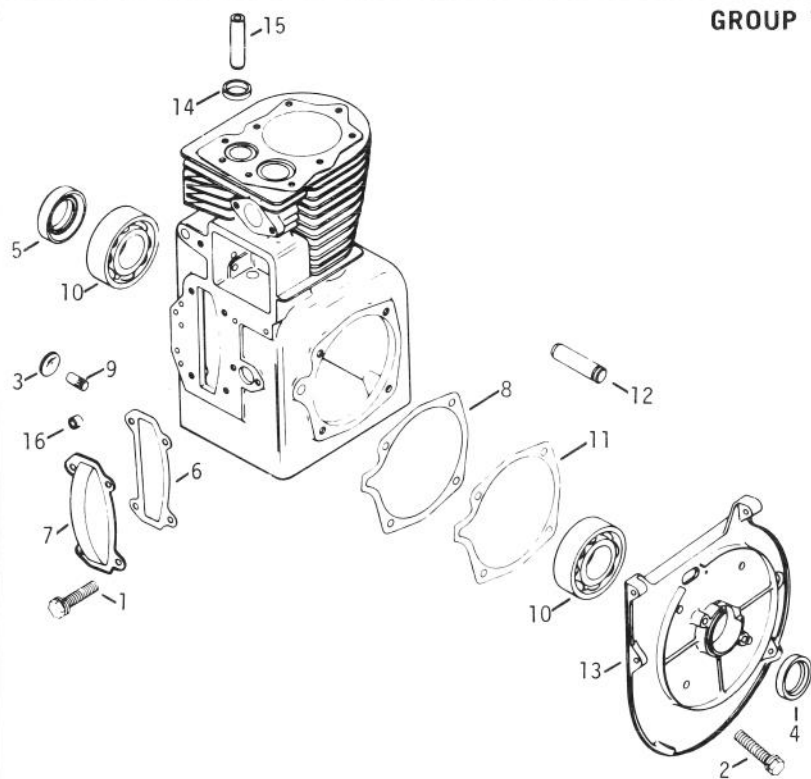


GROUP 10

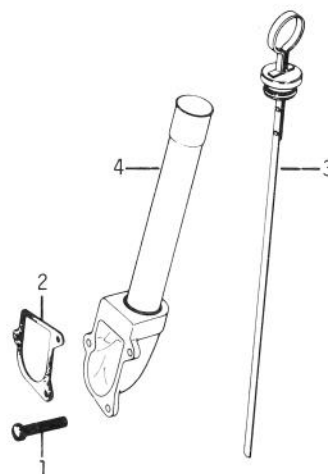 


GROUP 12



 
GROUP 8

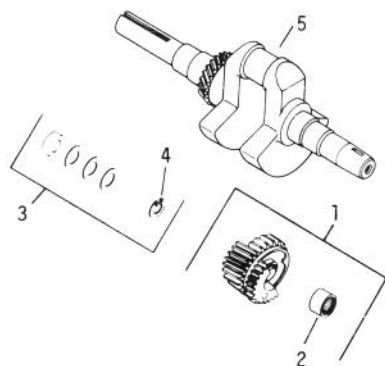


GROUP 9

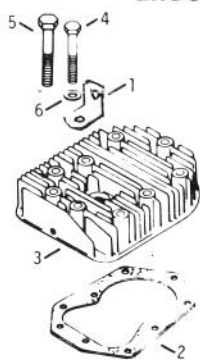 

GROUP 13

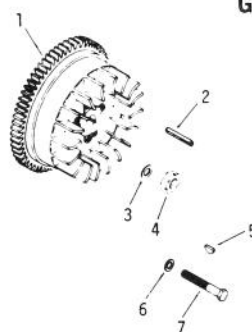 

GROUP 11

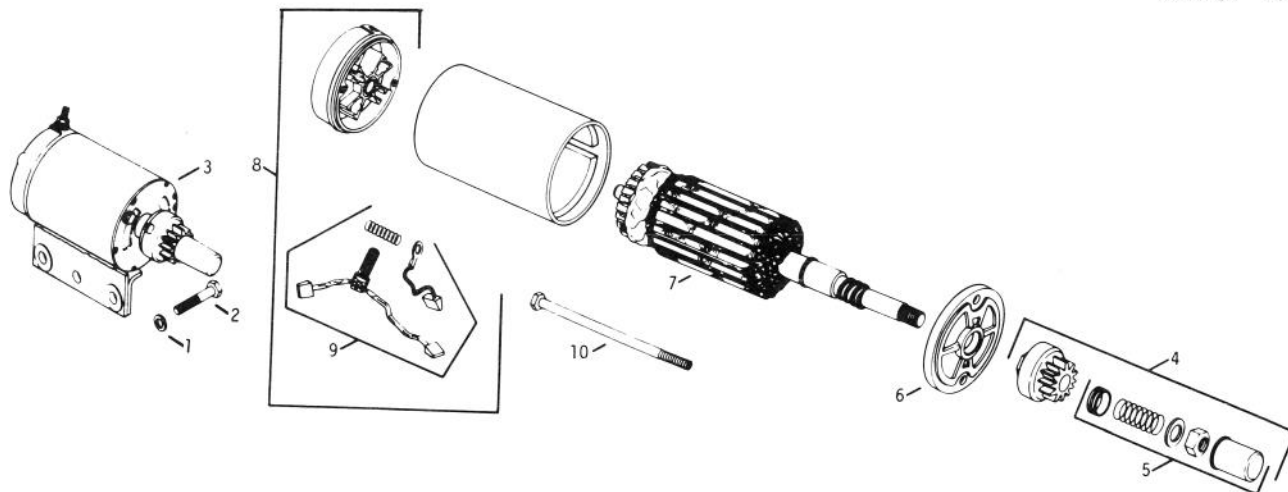 


ENGINE KOHLER MODEL NO. K321S SPEC. NO. 60434 (Continued)

Ref. No.	Part No.	Description	No. Used
		CRANKCASE — Group 7	
1	X-132-6	Screw, H.C. 1/4-20x1/2	4
2	X-159-2	Screw, H.C. 3/8-16x1	4
3	X-230-11	Plug	1
4	4703206	Seal, Front Oil	1
5	4703207	Seal, Rear Oil	1
6	235025	Gasket, Cover	1
7	235026	Cover, Camshaft	1
8	235070	Gasket (A.R.)	1
9	235125-S	Shaft, Governor	1
10	235376	Bearing, Ball	2
11	235757	Gasket, Bearing Plate	1
12	236559	Shaft, Balance Gear Stub	2
13	4515602	Plate, Bearing	
		Block, Cylinder Assembly	
	B-237837	(Use: Miniblock)	1
14	230265	Insert, Intake	2
15	235007-S	Guide, Valve	2
16	234866	Bearing	1
		CRANKSHAFT — Group 8	
1	4504303	Gear Assembly	2
2	4703001	Bearing, Needle	2
3	4775501	Kit, Spacer	1
4	X-269-34	Retainer	1
		(Before Serial No. 15139547 Use:)	
5	4501405	Crankshaft	1
		(After Serial No. 15139546 Use:)	
5	4514236	Kit, Crankshaft (Includes Flywheel Hardware	1
		CYLINDER HEAD — Group 9	
1	4744502	Strap, Lifting	1
2	4704115	Gasket, Head	1
3	237670	Head, Cylinder	1
4	270158	Screw, H.C. 3/8-16x1-1/2	8
5	270721	Screw, H.C. 3/8-16x1-3/4	1


Ref. No.	Part No.	Description	No. Used
6	270889	Washer 3/8	10
		DIPSTICK — Group 10	
1	X-131-2	Screw, R.H. 10-24x1/2	3
2	237064	Gasket	1
3	4703816	Dipstick	1
4	4718004	Tube, Oil Fill	1
		ELECTRIC START — Group 11	
1	X-22-1	Washer Lock 3/8	2
2	234948	Screw, H.C. 3/8-16x1-11/32	2
3	4509807	Starter Assembly	1
4	4775507	Kit, Drive	1
5	4775513	Kit, Drive Parts	1
6	237650	Cap, Drive End	1
7	4517002	Armature	1
8	4822704	Cap, Commutator End	1
9	4875515	Kit, Brush	1
10	237649	Thru Bolt w/Washer	2
	5235701	Lubricant — Starter	1
		EXHAUST — Group 12	
1	4107219	Stud	2
2	235122	Gasket, Exhaust	2
		FLYWHEEL — Group 13	
1	4702528	Flywheel	1
		(Before Serial No. 15139547 Use:)	
2	X-286-17	Key, Square	1
3	X-25-104	Washer — Plain 5/8	1
4	X-119-14	Nut — Lock 5/16-18	1
		(After Serial No. 15139546 Use:)	
5	X-46-3	Key — Woodruff	1
6	5246815	Washer — Plain 1 3/8 O.D.	1
7	2508624	Screw — Hex. Machine 3/8-24x1 1/8	1

ENGINE KOHLER MODEL NO. K321S SPEC. NO. 60434 (Continued)

 
GROUP 14

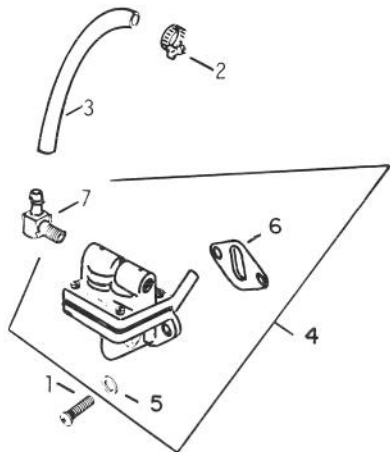


GROUP 21

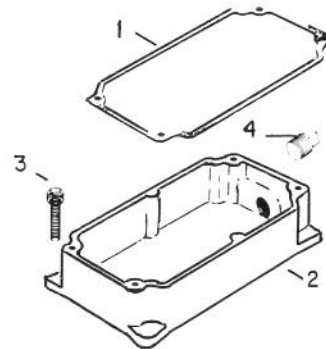 


GROUP 17

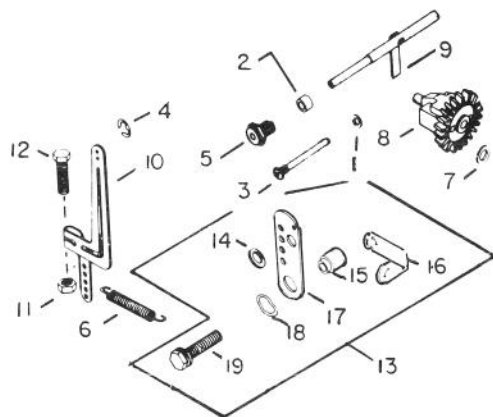 

GROUP 22

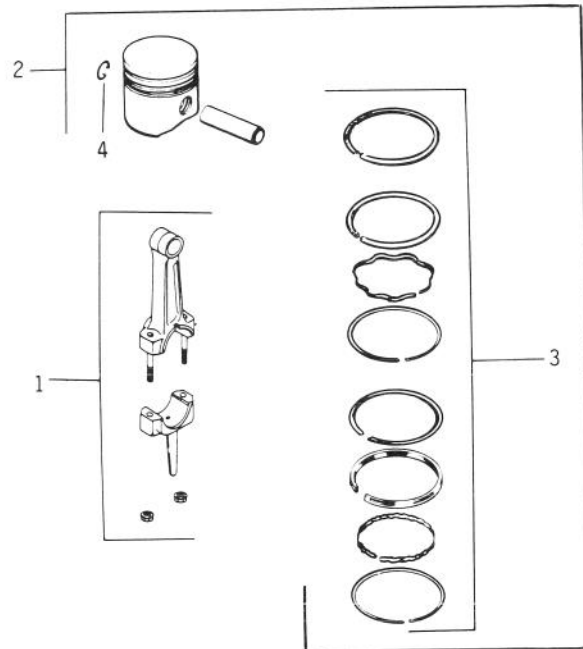 

GROUP 18

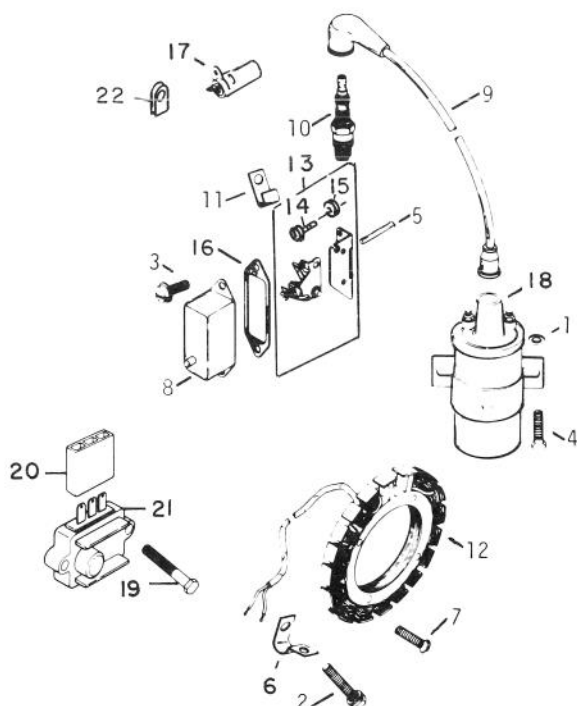 

ENGINE KOHLER MODEL NO. K321S SPEC. NO. 60434 (Continued)

Ref. No.	Part No.	Description	No. Used
		FUEL PUMP — Group 14	
1	X-174-2	Screw, F.H.M. 1/4-20x3/4	2
2	X-426-9	Clamp, Hose	2
3	2535301	Line, Fuel	1
4	4755904	Pump, Fuel Assembly	1
5	X-25-63	Washer, Plain 1/4	2
6	2504105	Gasket, Fuel Pump	1
7	2515502	Connector, 90° Hose	2
		GOVERNOR — Group 17	
1	2546801	Washer, Plain 1/4	1
2	X-400-80	Spacer	1
3	231355	Pin, Governor Stop	1
4	235278	Retainer, Rod	1
5	235476	Bushing	1
6	235496	Spring, Governor	1
7	237022	Washer, Thrust	1
8	A-235743S	Gear, Governor	1
9	A-235256S	Kit — Governor Cross Shaft	1
10	A-237653	Lever, Governor Assy.	1
11	X-799-1	Palnut	1
12	X-776-1	Screw, Sems 1/4-20x1-1/4	1
13	A-236895	Bracket, Control Assy.	1
14	X-25-63	Washer, Plain 1/4	1
15	235085	Spacer	1
16	235084	Bracket	1
17	235086	Bracket	1
18	275690	Washer, Wave	1
19	X-132-9	Screw, H.C. 1/4-20x1-1/4	1
		IGNITION — Group 18	
1	X-25-52	Washer, Plain 1/4	2
2	X-67-59	Screw, Tapping 8-32x3/8	1
3	X-131-1	Screw, F.H.M. 10-24x3/8	4
4	X-132-2	Screw, H.C. 1/4-20x3/4	2
5	4741104	Rod, Breaker Push	1
6	X-728-1	Clip, Hi-Tension	1
7	X-778-1	Screw, Stator Mounting 10-24 x 3/4 (Before Serial No. 1728100015)	4
7	X-67-51	Screw, Stator Mounting 10-24 x 3/4 (After Serial No. 1728100005)	4
8	232535	Cover	1
9	238057	Kit, Hi-Tension Lead	1
10	2513202	Plug, Spark	1
11	275303	Clip, Lead	1
12	237878	Kit, Stator	1
13	4715003	Breaker Assembly	1
14	X-141-5	Screw, R.H.M. 8-32x1/4	2
15	X-25-65	Washer — Plain #8	2
16	5204111	Gasket, Point Cover	1

Ref. No.	Part No.	Description	No. Used
17	230722	Condenser	1
18	231281	Coil, Ignition	1
19	X-132-5	Screw, H.C. 1/4-20 x 5/8	2
20	236602	Connector	1
21	2575503	Kit Rectifier-Regulator	2
22	220297	Grommet	1
	A-231533	Lead, Breaker (17" — Gauge Insulated Barrel Eyelet — Uninsulated Barrel Open Side)	1
		OIL PAN — Group 21	
1	235057	Gasket, Oil Pan	1
2	235147	Base, Oil Pan	1
3	X-159-3	Screw, H.C. 3/8-16x1-1/4	4
4	X-305-4	Plug, Mag. Drain 3/8 Hex Hd.	1
		PISTON & ROD — Group 22	
		Connecting Rod (Std.)	
	4706709	Before Serial No. 1729900013	1
	4506724	After Serial No. 1729900003	1
		Connecting Rod (.010)	
	4706710	Before Serial No. 1729900013	1
	4506725	After Serial No. 1729900003	1
		Piston w/Ring Set (Std.)	
	4787411	Before Serial No. 1822205133	1
	4787421	After Serial No. 1822205123	1
		Piston w/Ring Set (.003)	
	4787412	Before Serial No. 1822205133	1
	4787422	After Serial No. 1822205123	1
		Piston w/Ring Set (.010)	
	4787413	Before Serial No. 1822205133	1
	4787423	After Serial No. 1822205123	1
		Piston w/Ring Set (.020)	
	4787414	Before Serial No. 1822205133	1
	4787424	After Serial No. 1822205123	1
		Piston w/Ring Set (.030)	
	4787415	Before Serial No. 1822205133	1
	4787425	After Serial No. 1822205123	1
		Ring Set (Std. & .003)	
	4810805	Before Serial No. 1822205133	1
	4710805	After Serial No. 1822205123	1
		Ring Set (.010)	
	4810806	Before Serial No. 1822205133	1
	4710806	After Serial No. 1822205123	1
		Ring Set (.020)	
	4810807	Before Serial No. 1822205133	1
	4710807	After Serial No. 1822205123	1
		Ring Set (.030)	
	4810808	Before Serial No. 1822205133	1
	4710808	After Serial No. 1822205123	1
	4701801	Retainer, Piston Pin	2

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor for information and part numbers.

IDENTIFICATION AND ORDERING

Model and Serial Numbers:

The Sand Pro 14 has two identification numbers: a model number and a serial number. The two numbers are stamped on a plate which is located on left hand fender. In any correspondence concerning the Sand Pro supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Distributor, supply the following information:

1. Model and serial numbers of the Sand Pro 14.
2. Part number, description, and quantity of part(s) desired.

Note: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

Keep Your TORO All Toro



Insist on Genuine Toro Parts

INDEX

Description	Page
Frame Assembly	1-2
Engine Assembly	3-4
Pump Assembly No. 53-9360	5
Instrument Panel & Wiring Diagram	6-7
Air Cleaner Assembly No. 11-4659	8
Hydraulic Tank & Systems Diagram	9-11
Hydraulic Drive Motor	
Right Rear No. 75-9840	12
Hydraulic Drive Motor	
Left Rear No. 75-9831	13
Hydraulic Cylinder No. 68-9700	14
Control Valve No. 43-1950	15
Front Steering Fork & Motor Assembly	16

Description	Page
Hydraulic Drive Motor (Front) No. 75-9830	17
Rake Assembly Model No. 08811 (optional)	18
Prong Rake Kit No. 42-3960 (optional)	19
Hitch Kit Model No. 08833 (optional)	20
Drag Mat Kit Model No. 08844 (optional)	21
Edger Kit Model No. 08822 (optional)	22
Spiker Model No. 08855 (optional)	23-24
Finish Grader Kit	
Model No. 08867 (optional)	25
Kohler Engine Model No. K-321S	
Spec. No. 60434	26-31