



ProControl Spray System Multi-Pro® 5600 / 5700-D Turf Sprayer

Model No. 41086 - 230000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Pro Control Assembly	 3	Flow Meter Assembly No. 106-1038	 5
Control Console Assembly No. 104-9086	 4		

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR.	as required	INC.	incorporated
ASM.	assembly	LH.	left hand
BBC.	blade brake clutch	NI.	nylon insert
CARR.	carriage	NPTF.	national pipe thread fine
DEG.	degrees	PFH.	phillips flat head
EXT.	external	PPH.	phillips pan head
FH.	flat head	PPHTF.	phillips pan head thread forming
GA.	gauge		
HF.	hex flange	PRH.	phillips round head
HH.	hex head	PTH.	phillips truss head
HHF.	hex head flange	PTO.	power-take-off
HHFTF.	hex head flange thread forming	RH.	right hand
HJ.	hex jam	ROPS.	roll-over-protection-system
HLH.	hex lag head	SFH.	slotted fillister head
HOC.	height-of-cut	SHH.	slotted hex head
HSBH.	hex socket button head	SHWH.	slotted hex washer head
HSFH.	hex socket flat head	SPH.	slotted pan head
HS.	hex socket head	SQH.	square head
HWH.	hex washer head	SRH.	slotted round head
HWHTF.	hex washer head thread forming	STD.	standard
		TAP.	self tapping
HYD.	hydraulic	TTH.	torx truss head

Footnotes


- ❶ Not illustrated



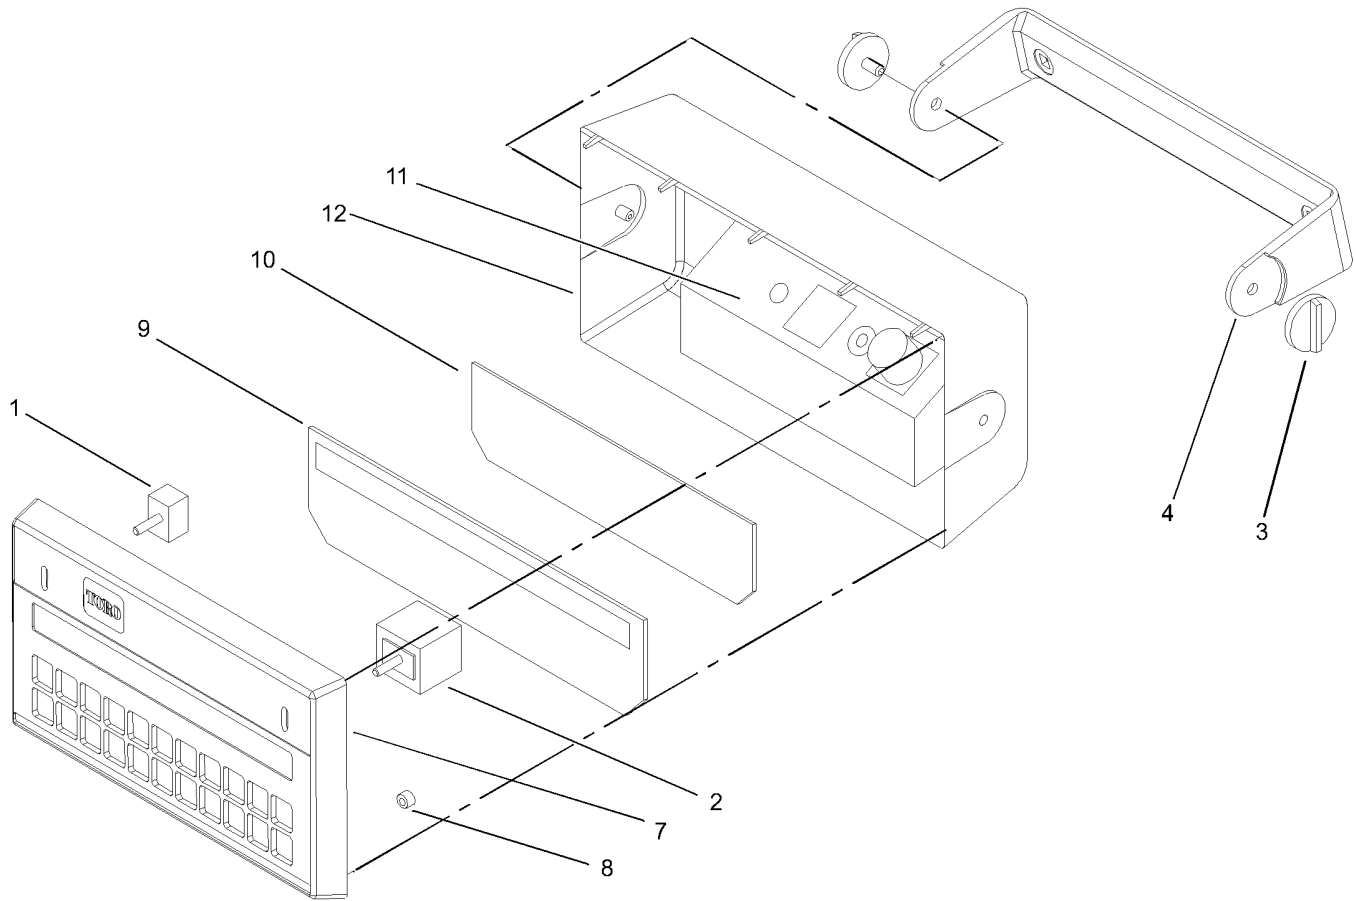

Control Console Assembly No. 104-9086

Ref	Part No.	Qty.	Description				
1	42722	1	Switch-Power				
2	42723	1	Switch-Rate, Manual				
3	41473	2	Knob-Mounting				
4	41474	1	Bracket-Mounting				
❶5	94-8539	1	Cover-Switch				
❶6	93-0908	1	Spacers-Filler, 1 Set				
7	106-1206	1	Console Face Plate ASM				
8	93-0910	1	Spacer-Board, Display				
9	106-1207	1	Display Board ASM				
10	106-1208	1	Board-Processor				
11	106-1209	1	Connector Plate ASM				
12	94-8543	1	Console Back ASM				

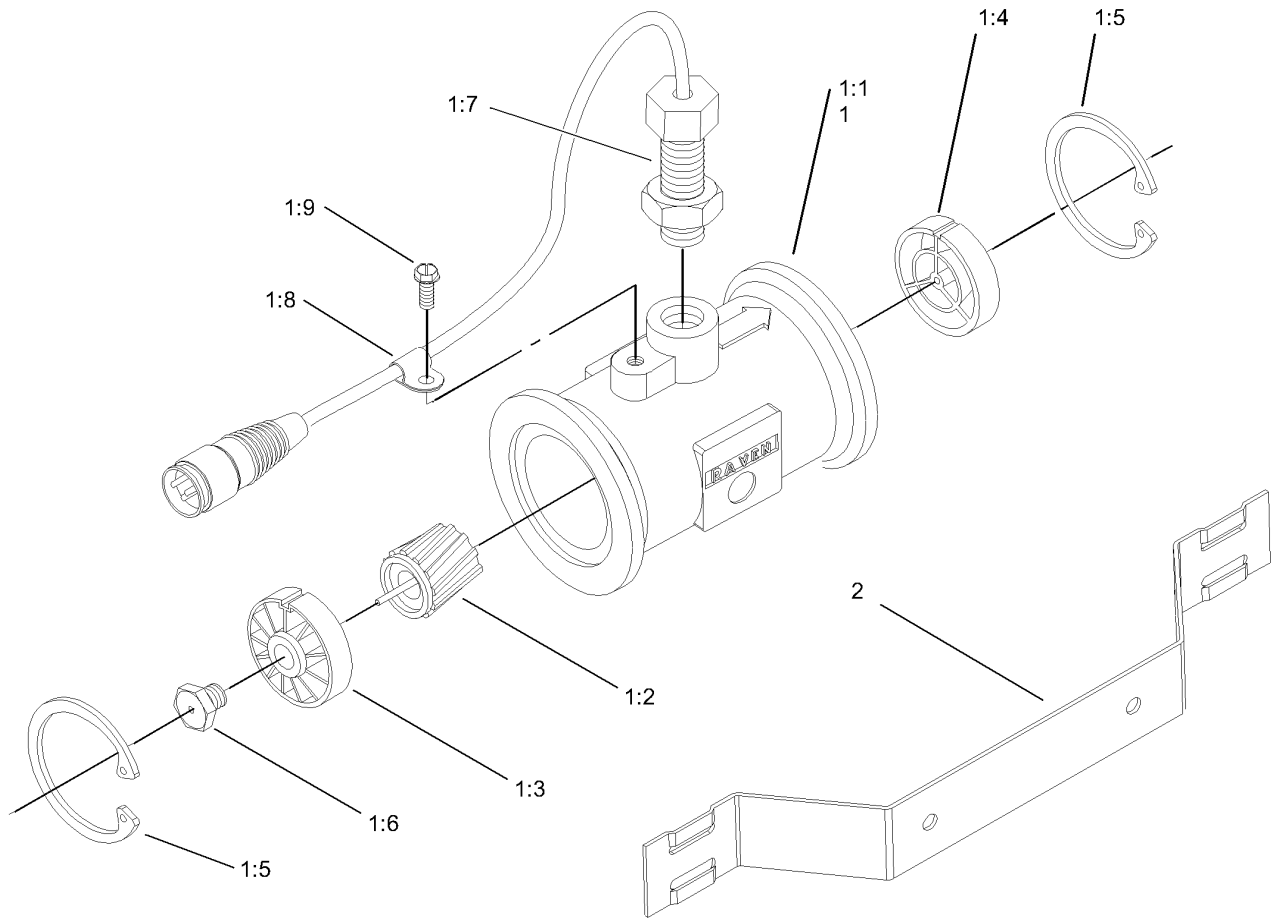

Flow Meter Assembly No. 106-1038

Ref	Part No.	Qty.	Description				
1	106-1038	1	Flow Meter ASM				
1:1	106-1042	1	Mount ASM				
1:2	104-9059	1	Rotor / Magnet ASM				
1:3	104-9060	1	Hub / Bearing ASM, Upstream				
1:4	104-9061	1	Hub ASM, Downstream				
1:5	104-9062	2	Ring-Retaining, Internal				
1:6	42480	1	Stud-Turbine, W/Bearing				
1:7	104-9065	1	Sensor ASM, External				
1:8	104-9063	1	Clamp-Cable				
1:9	104-9064	1	Screw-Thread Forming				
2	41483	1	Bracket-Mounting, Flow Meter				

NOTES

NOTES

