



Greensmaster® 1600

Model No. 04060 - 260001401 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame Assembly	 3	Handle and Control Assembly	 16
Engine Mount and Frame Assembly	 4	Roller and Height-of-Cut Bar Assembly	 17
Reel Drive Assembly	 5	Engine Crankcase Assembly	 18
Reel Assembly	 7	Camshaft and Valve Assembly	 19
Drum Drive Assembly	 8	Ignition Assembly	 20
Drum and Basket Assembly	 10	Governor Assembly	 21
Differential Assembly No. 93-9041	 11	Carburetor Assembly	 22
Inner Crankshaft Assembly	 12	Air Cleaner and Muffler Assembly	 23
Outer Crankshaft Assembly	 13	Fuel Tank Assembly	 24
Engine Assembly	 14	Decal Assembly	 25
Bellcrank Assembly	 15	Attachments and Accessories List	 26

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HS. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes

❶ Not illustrated


❷ Not serviced separately

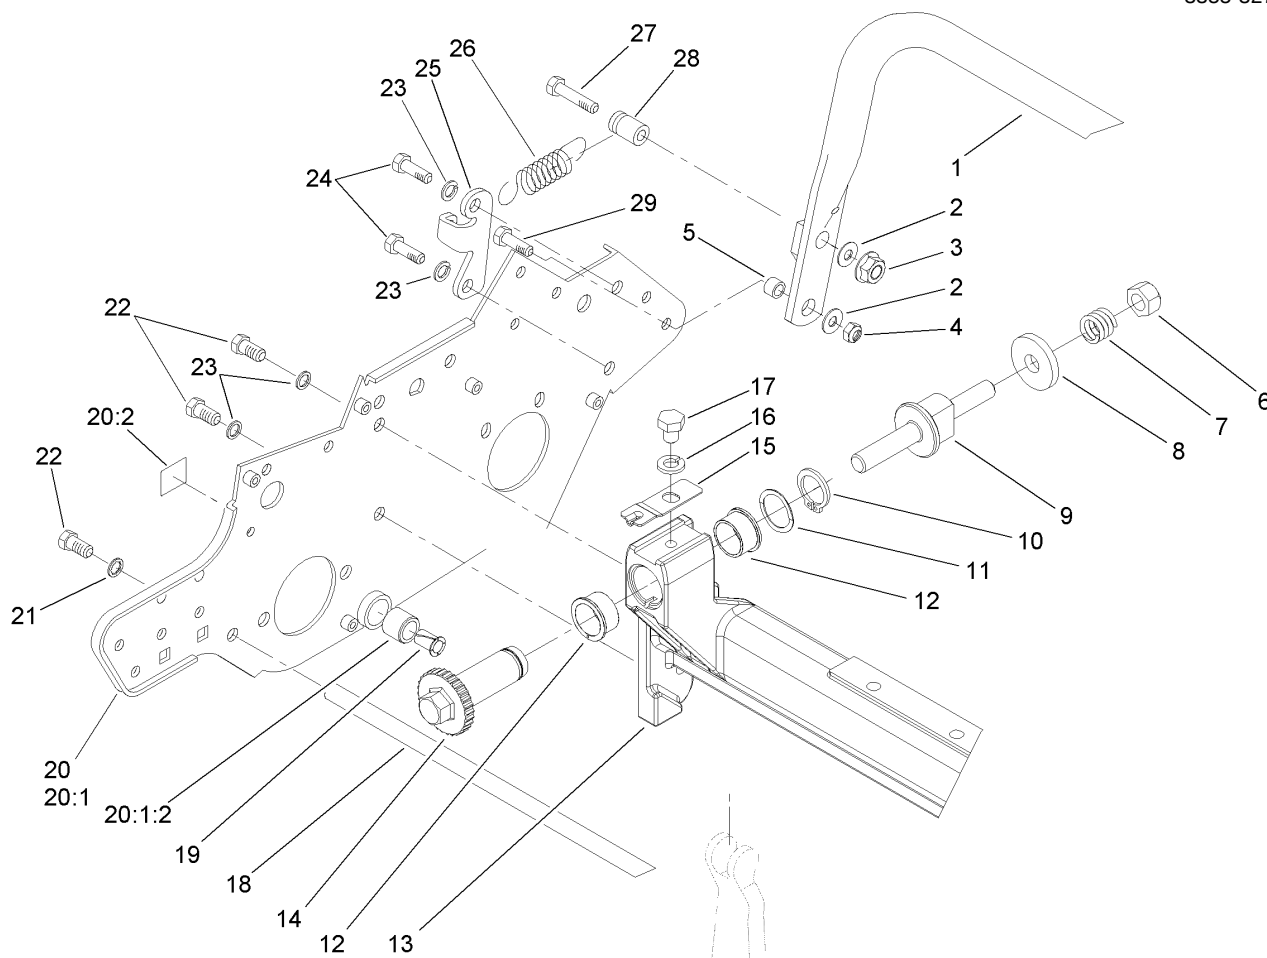

Frame Assembly

Ref	Part No.	Qty.	Description
1	93-9019-03	1	Kickstand ASM
2	3256-2	3	Washer-Flat
3	32128-25	1	Nut-HF
4	3296-29	2	Nut-Lock, NI
5	65-7910	2	Spacer
6	33025-00	2	Nut-Lock
7	99-3755	2	Spring-Compression
8	99-2098	2	Washer
9	99-2096	2	Screw-Adjuster, Bedbar
10	32120-93	2	Ring-Retaining, EXT
11	106-5335	2	Washer-Wave
12	106-5344	4	Bushing-Flange, Keyed
13	108-8649-01	1	Crossmember-Front
14	106-5363	2	Shaft-Adjuster
15	99-2097	2	Detent
16	3253-4	2	Washer-Lock
17	322-26	2	Screw-HH
18	94-5867	1	Rod-Frame
19	52-2890	2	Bushing-Nylon
20	94-9004	1	RH Side Plate ASM
20:1		1	RH Side Plate / Bushing ASM
20:1:2	63-9510	1	Bushing
20:2	93-9356	2	Decal-Warning, Belt
20:2	93-9389	2	Decal-Warning, Belt (Japan)


Ref	Part No.	Qty.	Description
21	3254-6	2	Washer-Lock, Internal
22	323-4	6	Screw-HH
23	3253-21	6	Washer-Lock
24	323-5	2	Screw-HH
25	65-7890	1	Bracket
26	65-7880	1	Spring-Extension
27	322-10	1	Screw-HH
28	65-7900	1	Retainer-Spring
29	322-5	2	Screw-HH

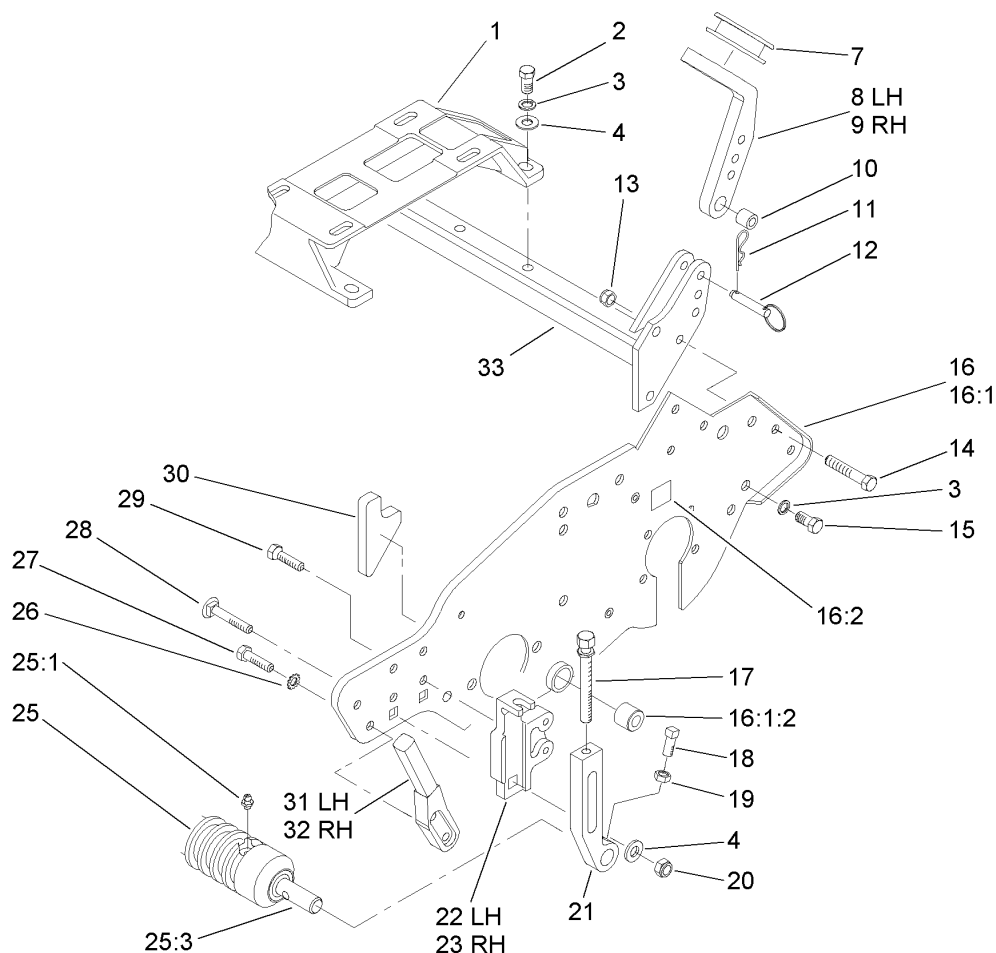

Engine Mount and Frame Assembly

Ref	Part No.	Qty.	Description
1	88-7670	1	Mount-Engine
2	323-5	4	Screw-HH
3	3253-21	8	Washer-Lock
4	3256-24	6	Washer-Flat
7	65-7510	2	Grommet-Handle
8	93-6038	1	Arm-Handle Support, LH
9	93-6037	1	Arm-Handle Support, RH
10	93-6024	2	Bushing-Support, Handle
11	3290-467	2	Pin-Hair
12	93-6029	2	Pin-Clevis, Ring
13	3296-29	2	Nut-Lock, NI
14	322-9	2	Screw-HH
15	323-4	2	Screw-HH
16	94-9005	1	LH Side Plate ASM
16:1		1	LH Side Plate / Bushing ASM
16:1:2	63-9510	1	Bushing
16:2	93-9356	1	Decal-Warning, Belt
16:2	93-9389	1	Decal-Warning, Belt (Japan)
17	93-6051	2	Screw-HOC
18	3242-4	2	Screw-Set, SQH
19	3218-2	2	Nut-Jam
20	32128-21	2	Nut-HF
21	93-6090	2	Arm-HOC
21	99-4286	2	Arm-HOC, Extended

Ref	Part No.	Qty.	Description
22	93-6048	1	Bracket-HOC, RH
23	93-6049	1	Bracket-HOC, LH
25	93-9039	1	Weihle Roller ASM
25:1	302-5	2	Fitting-Grease
25:3	52-3180	2	Bearing-Roller, Front
26	3255-8	4	Washer-Lock
27	322-2	4	Screw-HH
28	3231-5	2	Screw-CARR
29	92-8914	4	Bolt-Face, Tapered
30	93-6064	1	Seal-Catcher, Grass
31	93-9018	1	Rod-Basket, LH
32	93-9017	1	Rod-Basket, RH
33	93-9026-01	1	Frame-Rear

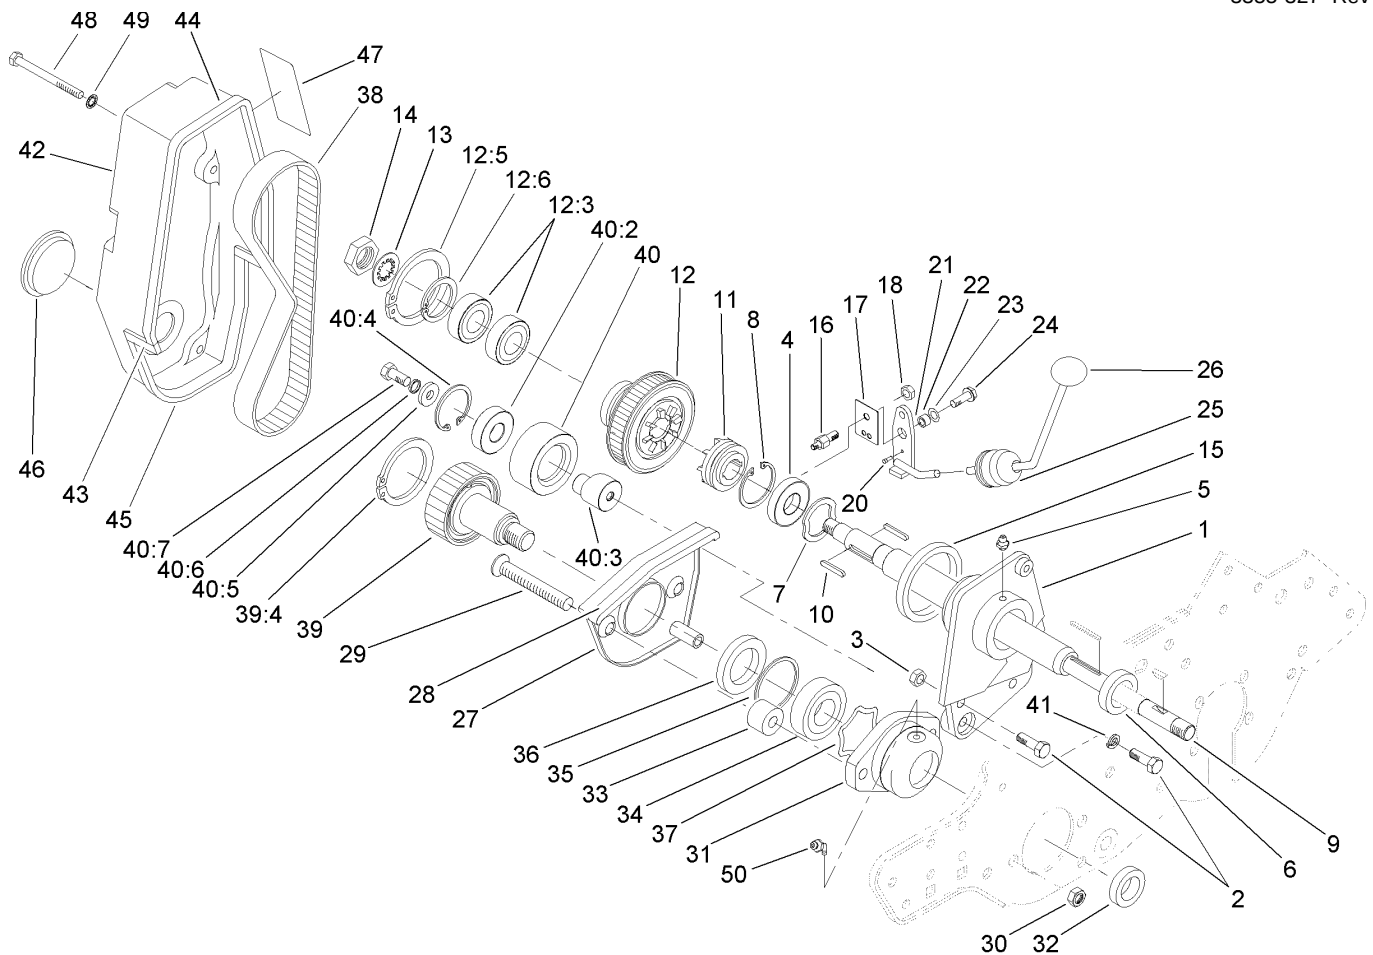


Reel Drive Assembly

Ref	Part No.	Qty.	Description
1	92-8013	1	Housing-Clutch
2	322-5	3	Screw-HH
3	3296-29	2	Nut-Lock, NI
4	251-318	1	Bearing-Ball
5	302-5	1	Fitting-Grease
6	253-118	1	Seal-Oil
7	88-7720	1	Spring-Wave
8	32151-75	1	Ring-Retaining
9	94-5872	1	Shaft-Power
10	88-7150	2	Key
11	65-6940	1	Clutch-Slider, Jaw
12	88-7830	1	Clutch And Pulley ASM
12:3	251-336	2	Bearing-Ball
12:5	32151-95	1	Ring-Retaining
12:6	32151-89	1	Ring-Retaining, Bowed
13	3254-4	1	Washer-Lock/Int
14	3220-5	1	Nut-Jam
15	65-6970	1	Seal-Felt
16	93-9014	1	Pin-Clutch, Actuator
17	65-6290	1	Spring-Detent, Clutch
18	3296-42	1	Nut-Lock, NI
20	95-5731	1	Screw-Drive
21	88-7170	1	Lever-Clutch
22	88-7860	1	Spacer


Ref	Part No.	Qty.	Description
23	3290-414	1	Washer-Belleville
24	80-0700	1	Screw
25	65-8960	1	Boot-Clutch
26	233-69	1	Knob
27	65-7190-01	1	Cover-Arm
28	65-7131	1	Seal-Cover, Strip
29	3289-23	2	Capscrew
30	3296-39	2	Nut-Lock, NI
31	65-8640	1	Housing-Bearing
32	253-96	1	Seal-Oil
33	65-8290	2	Standoff-Cover
34	251-342	1	Bearing-Ball
35	32151-92	1	Ring-Retaining
36	253-163	1	Seal
37	3290-485	1	Washer-Wave
38	65-6200	1	Belt
39	88-7840	1	Pulley And Drive ASM
39:4	32151-95	1	Ring-Retaining
40	88-7850	1	Idler Pulley ASM
40:2	38-7820	1	Bearing-Ball
40:3	88-7190	1	Spacer
40:4	32120-42	1	Ring-Retaining
40:5	88-7200	1	Washer-Flat
40:6	3253-4	1	Washer-Lock



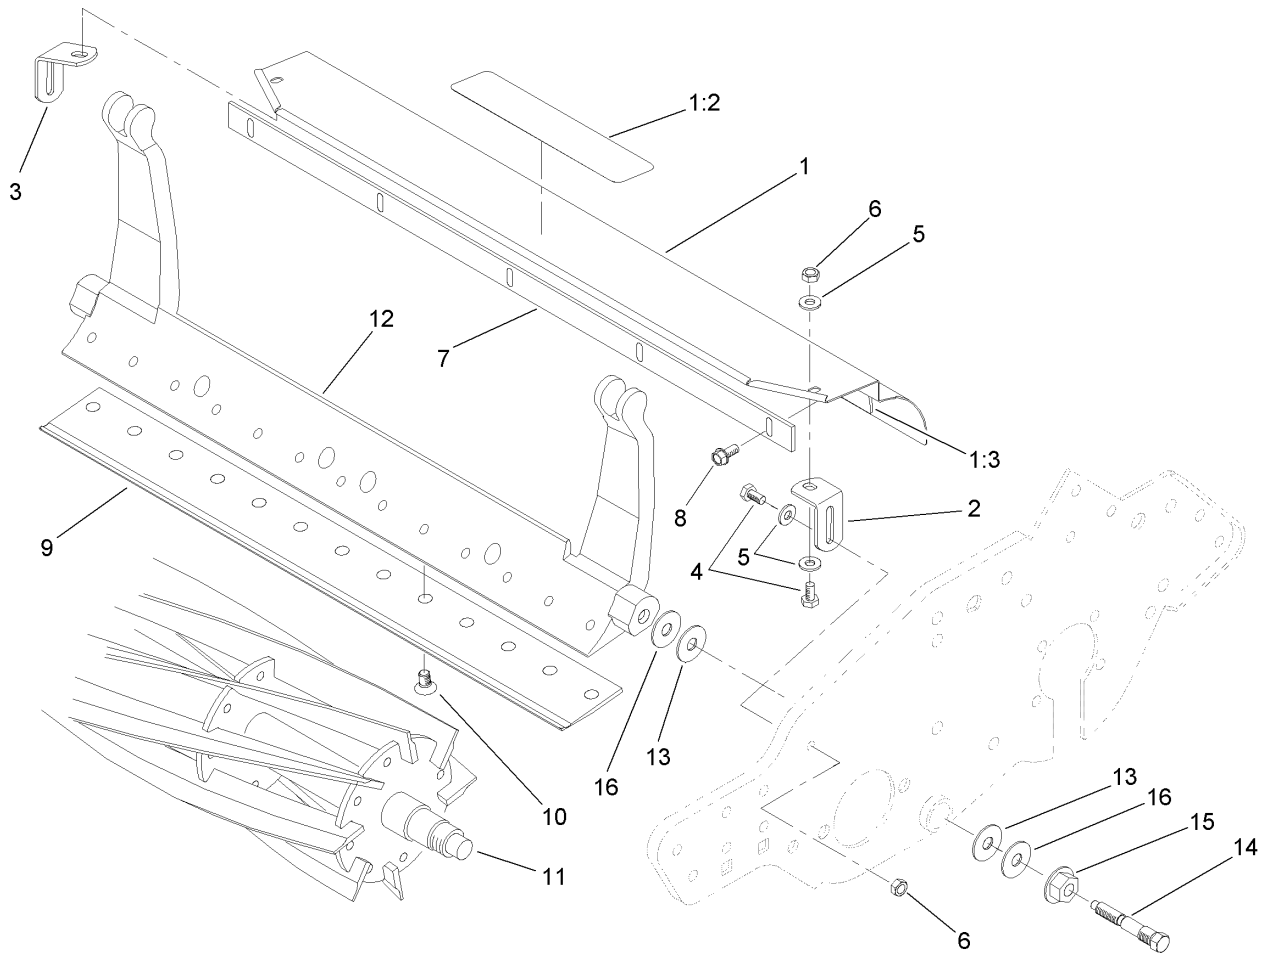

Reel Assembly

Ref	Part No.	Qty.	Description				
1	110-7370	1	Grass Shield ASM				
1:2	84-6560	1	Decal-Warning (Japan)				
1:2	93-8064	1	Decal-Danger, Ce				
1:3	95-1636	1	Strip-Seal				
2	65-6450	1	Bracket-LH				
3	65-6460	1	Bracket-RH				
4	321-3	4	Screw-HH				
5	3256-22	6	Washer-Flat				
6	3296-42	4	Nut-Lock, NI				
7	94-5879	1	Bar-Cut Off				
8	104-2065	6	Screw-HWH				
●9	104-2646	1	Bedknife-Highcut				
9	93-9015	1	Bedknife-Lowcut				
●9	94-5885	1	Bedknife-Tournament Cut				
10	57-4910	16	Screw-Special				
11	95-0900	1	8-Blade Reel ASM				
12	93-9049-01	1	Bedbar-Machine				
13	52-2900	4	Washer-Plastic				
14	65-6270	2	Bolt-Bedbar				
15	32128-48	2	Nut-HHF				
16	52-2860	4	Washer				

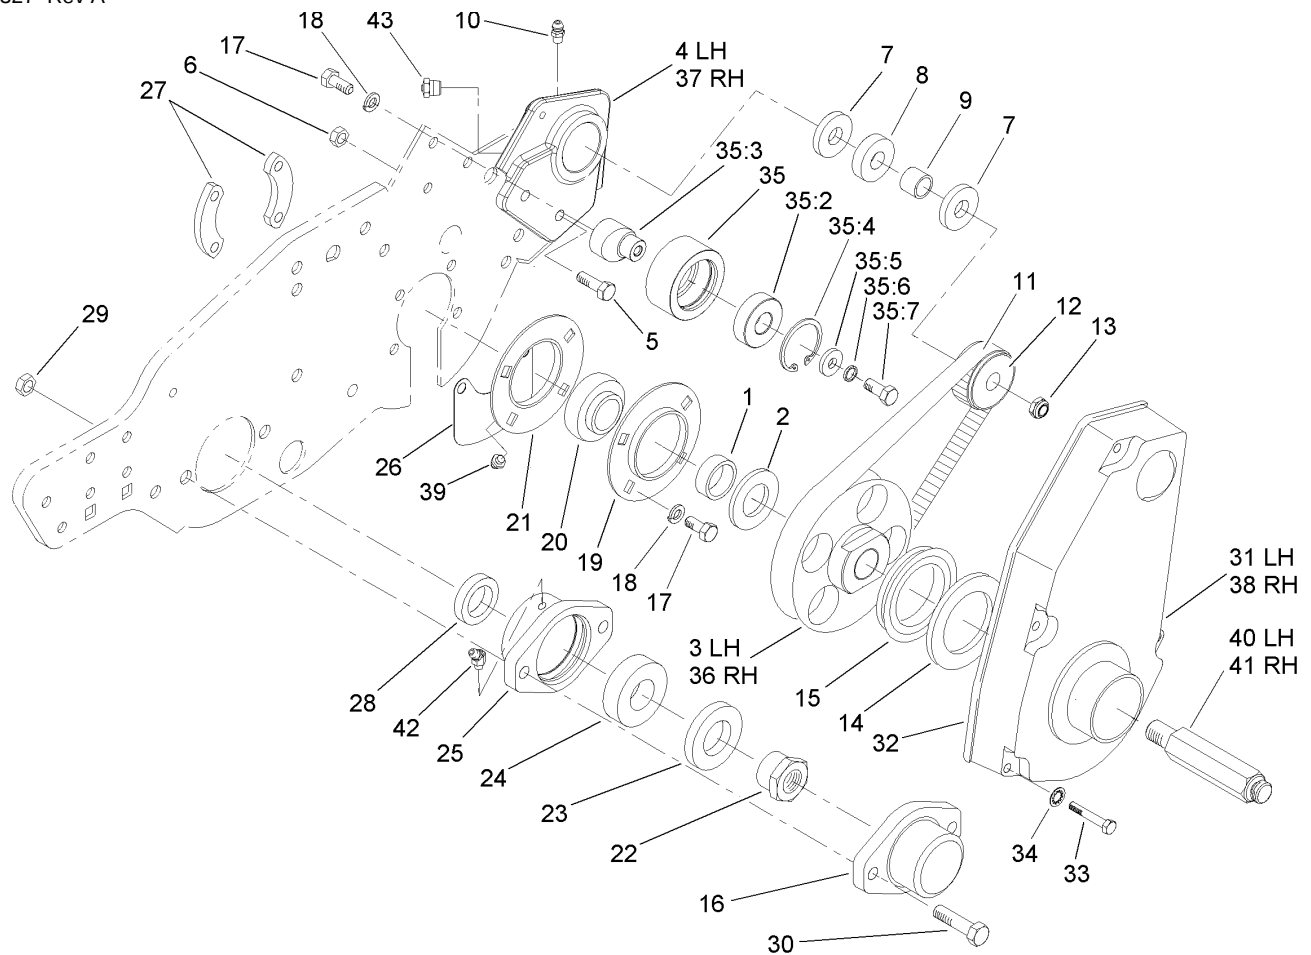


Drum Drive Assembly

Ref	Part No.	Qty.	Description
1	88-7530	2	Spacer
2	88-7540	2	Washer-Backup
3	105-5365	1	Pulley-Drum, LH
4	108-9414	1	Housing-Support, Differential (LH)
5	322-5	4	Screw-HH
6	3296-29	4	Nut-Lock, NI
7	253-160	4	Seal-Grease
8	251-338	2	Bearing-Ball
9	86-7130	2	Spacer-Pulley
10	302-5	2	Fitting-Grease
11	65-6210	2	Belt
12	65-6660	2	Pulley
13	3296-57	2	Nut-Lock, NI
14	94-9018	2	Washer-Plastic
15	253-161	2	Seal-V-Ring
16	65-6220-01	1	Cover-End, Reel
17	322-3	10	Screw-HH
18	3254-2	10	Washer-Lock, Internal
19	65-6590	2	Flangette-Bearing
20	88-7880	2	Bearing
21	95-0923	2	Flangette
22	92-7302	1	Nut-Bearing, Lock
23	253-163	1	Seal
24	251-342	1	Bearing-Ball

Ref	Part No.	Qty.	Description
25	65-8640	1	Housing-Bearing
26	65-8720	2	Closure-Plate, Side
27	65-8730	4	Clamp-Bearing
28	253-96	1	Seal-Oil
29	3296-39	2	Nut-Lock, NI
30	323-7	2	Screw-HH
31	88-7680-01	1	Cover-Belt Drum, LH
32	88-7810	2	Seal-Strip, Drum Cover
33	321-11	8	Screw-HH
34	3254-8	8	Washer-Lock
35	88-7850	2	Idler Pulley ASM
35:2	38-7820	1	Bearing-Ball
35:3	88-7190	1	Spacer
35:4	32120-42	1	Ring-Retaining
35:5	88-7200	1	Washer-Flat
35:6	3253-4	1	Washer-Lock
35:7	322-3	1	Screw-HH
36	105-5364	1	Pulley-Drum, RH
37	108-9416	1	Housing-Support, Differential (RH)
38	88-7690-01	1	Cover-Drum Belt, RH
39	104-1843	2	Fitting-Grease, 90 DEG
40	88-7580	1	Shaft-Wheel, Transport (LH)
41	88-7590	1	Shaft-Wheel, Transport (RH)
42	302-11	1	Fitting-Lube, 45 DEG




Ref	Part No.	Qty.	Description
43	302-34	2	Fitting-Lube

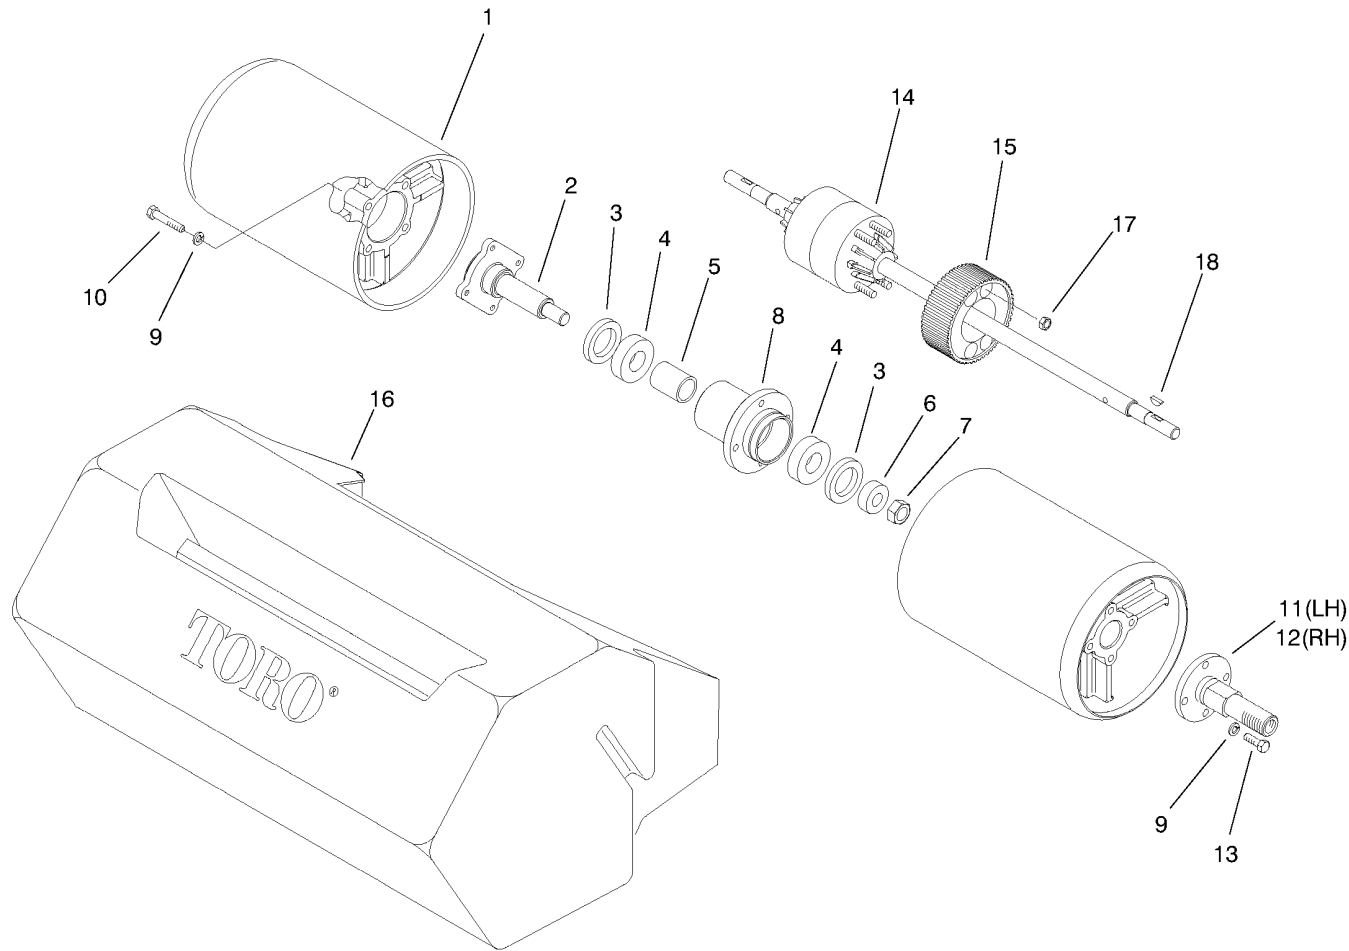


Drum and Basket Assembly

Ref	Part No.	Qty.	Description				
1	93-9042	2	Drum-Long				
2	94-5850	1	Spindle-Drum				
3	253-159	2	Seal				
4	251-82	2	Bearing-Ball				
5	65-6520	1	Spacer				
6	65-6530	1	Spacer				
7	3296-33	1	Nut-Lock, NI				
8	94-5852	1	Hub-Drum				
9	3253-4	16	Washer-Lock				
10	322-9	8	Screw-HH				
11	88-7520	1	Shaft-Extension, Drum				
12	88-7510	1	Shaft-Extension, Drum				
13	322-5	8	Screw-HH				
14	93-9041	1	Differential				
15	65-9120	1	Pulley-Housing, Differential				
16	94-5893	1	Basket ASM				
●16:1	3290-409	9	Rivet				
●16:3	94-5894	1	Channel-Basket				
17	104-8300	4	Nut-Flange, NI				
18	3257-30	2	Key-Woodruff				

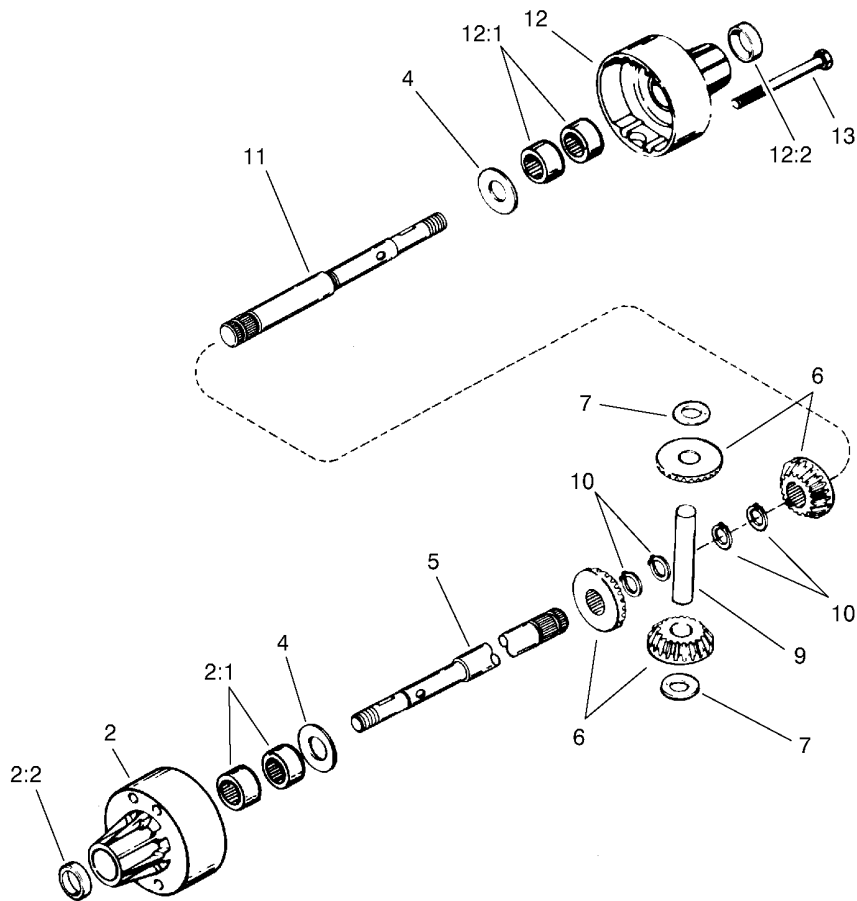

Differential Assembly No. 93-9041


Ref	Part No.	Qty.	Description				
2	95-5741	1	Carrier-Differential				
2:1	95-5738	4	Bearing-Needle				
2:2	95-5737	2	Seal-Oil				
4	95-5745	2	Washer				
5	95-5743	1	Axle-Long				
6	104-0503	1	Gear Set-Differential				
7	95-5744	2	Washer-Flat				
9	95-5747	1	Pin-Drive				
10	95-5746	4	Ring-Retaining				
11	95-5742	1	Axle-Short				
12	95-5740	1	Carrier-Differential				
12:1	95-5738	4	Bearing-Needle				
12:2	95-5737	2	Seal-Oil				
13	95-5739	4	Screw				
● 14	95-5734	1	Grease				

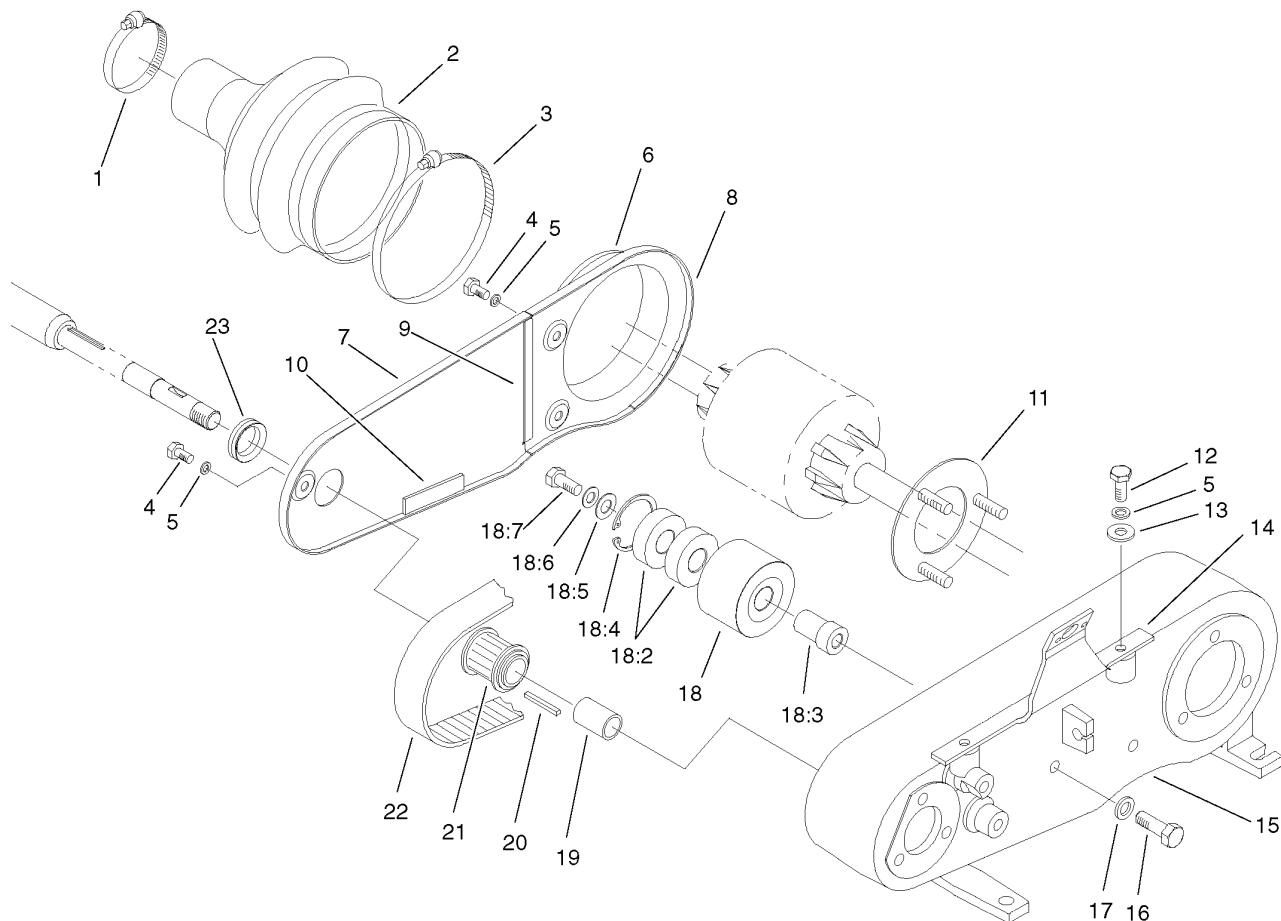

Inner Crankshaft Assembly

Ref	Part No.	Qty.	Description
1	2412-139	1	Clamp-Hose
2	94-5866	1	Boot-Differential
3	2412-140	1	Clamp-Hose
4	321-2	3	Screw-HH
5	3253-3	5	Washer-Lock
6	88-7250-03	1	Cover-Box, Rear
7	88-7240-03	1	Cover-Box, Front
8	65-6902	1	Strip-Seal, Cover
9	65-6903	1	Strip-Seal, Cover
10	65-6901	1	Strip-Seal, Cover
11	65-6720	1	Plate-Screw
12	321-3	2	Screw-HH
13	3256-22	2	Washer-Flat
14	93-1448	1	Bracket Cover ASM
15	88-7230	1	Housing-Shaft, Counter
16	322-5	1	Screw-HH
17	3254-2	1	Washer-Lock, Internal
18	88-7870	1	Idler Pulley ASM
18:2	38-7820	2	Bearing-Ball
18:3	88-7380	1	Spacer-Pulley
18:4	32120-42	1	Ring-Retaining
18:5	88-7200	1	Washer-Flat
18:6	3253-4	1	Washer-Lock
18:7	322-3	1	Screw-HH


Ref	Part No.	Qty.	Description
19	86-7140	1	Spacer
20	65-6850	1	Key-Square
21	65-8910	1	Pulley-Countershaft
22	65-9080	1	Belt
23	88-7710	1	Seal-V-Ring

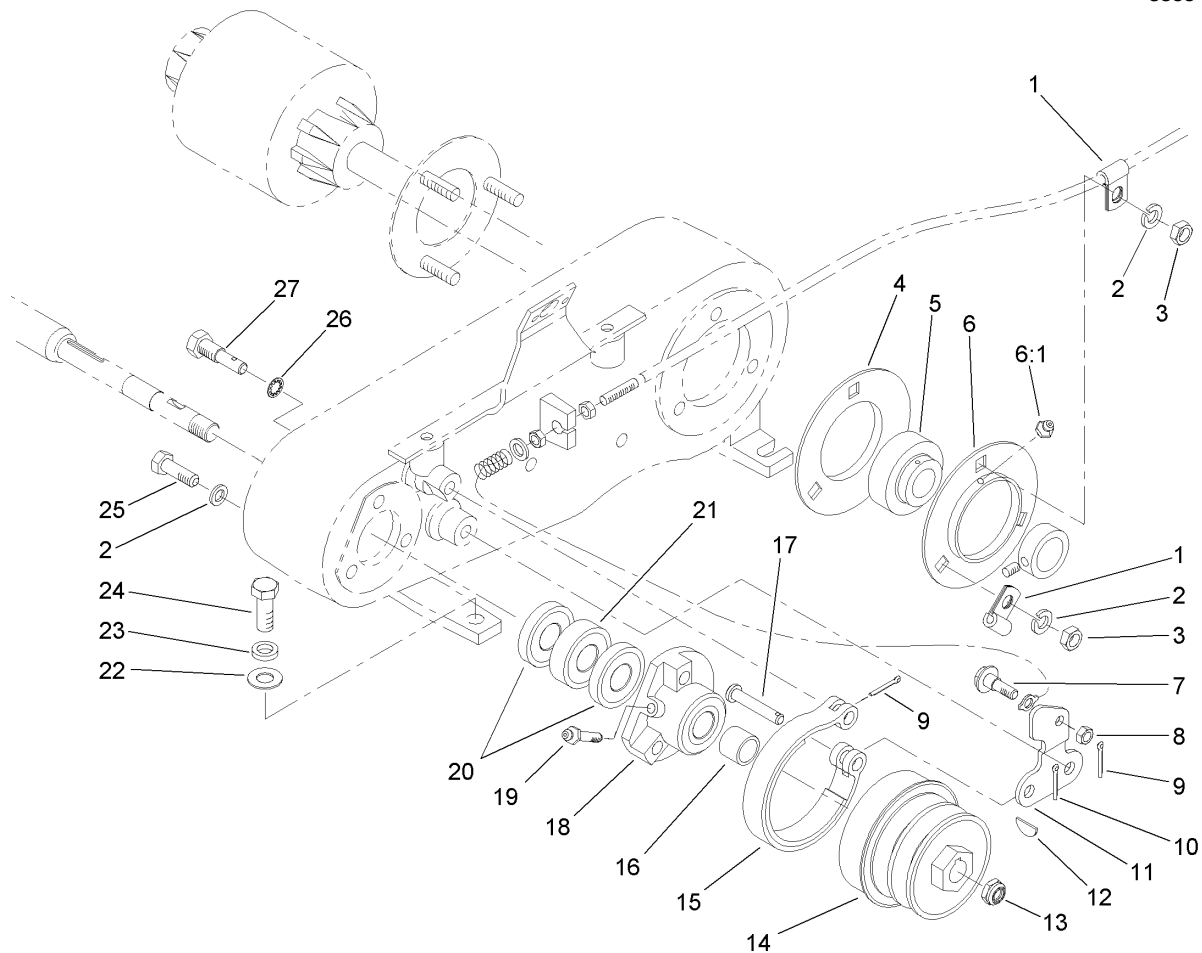

Outer Crankshaft Assembly


Ref	Part No.	Qty.	Description
1	88-7970	2	Clip
2	3253-4	6	Washer-Lock
3	3218-2	3	Nut-Jam
4	65-6710	1	Flangette-Bearing
5	108-7663	1	Bearing-Race, Extended
6	65-6700	1	Flangette-Lube
6:1	302-65	1	Zerk
7	11-9030	1	Screw-Shoulder
8	3296-42	1	Nut-Lock, NI
9	3272-6	2	Pin-Cotter
10	3272-8	1	Pin-Cotter
11	65-8610	1	Lever-Brake
12	3257-30	1	Key-Woodruff
13	3296-57	1	Nut-Lock, NI
14	92-9212	1	Pulley-Shaft, Input
15	65-8700	1	Band-Brake
16	86-7130	1	Spacer-Pulley
17	283-75	1	Pin-Clevis
18	65-6760	1	Housing-Bearing
19	302-64	1	Fitting-Grease
20	253-160	2	Seal-Grease
21	251-338	1	Bearing-Ball
22	3256-24	4	Washer-Flat
23	3253-21	4	Washer-Lock

Ref	Part No.	Qty.	Description
24	323-5	4	Screw-HH
25	322-5	3	Screw-HH
26	3254-6	2	Washer-Lock, Internal
27	65-6810	2	Support-Brake

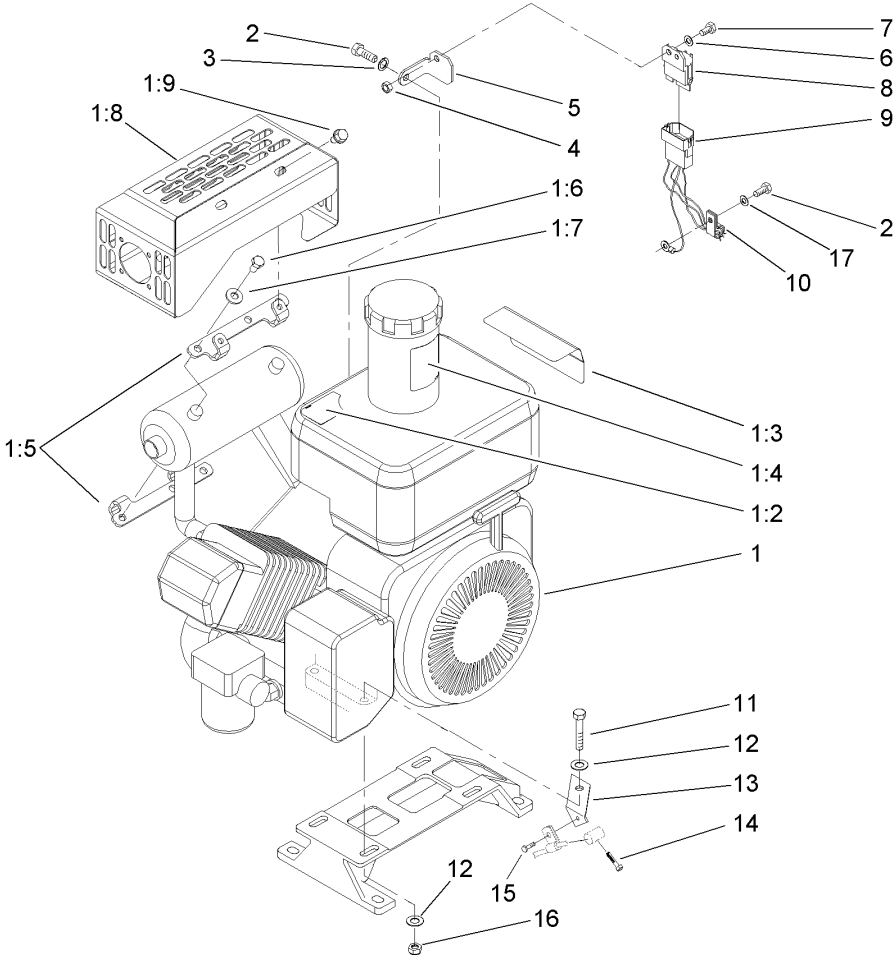


Engine Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	107-7636	1	Engine ASM	15	104-2065	1	Screw-HWH
1:2	105-5309	1	Decal-Surface, Hot (Ce)	16	3296-29	4	Nut-Lock, NI
1:2	83-2560	1	Decal-Surface, Hot	17	33094-00	1	Washer-Plain
1:3	92-4813	1	Decal-Danger (Japan)				
1:3	93-7348	1	Decal-Danger				
1:4	93-9886	1	Decal-Fuel				
1:5	104-9771	2	Bracket-Guard, Muffler				
1:6	33113-012	4	Screw-HH				
1:7	3256-22	4	Washer-Flat				
1:8	104-9784-03	1	Guard-Muffler				
1:9	104-2628	4	Screw-HWH				
2	33114-016	2	Screw-HH				
3	3253-4	1	Washer-Lock				
4	33023-00	1	Nut-Lock				
5	94-5861	1	Bracket-Module				
6	3256-22	1	Washer-Flat				
7	33113-016	1	Screw-HH				
8	1-323430	1	Module-Interlock				
9	105-5351	1	Harness-Wire, Module				
10	2412-93	1	Clamp-R				
11	322-9	4	Screw-HH				
12	3256-56	5	Washer-Flat				
13	88-7960	1	Bracket-Cable, Throttle				
14	94-9015	1	Screw-HH				

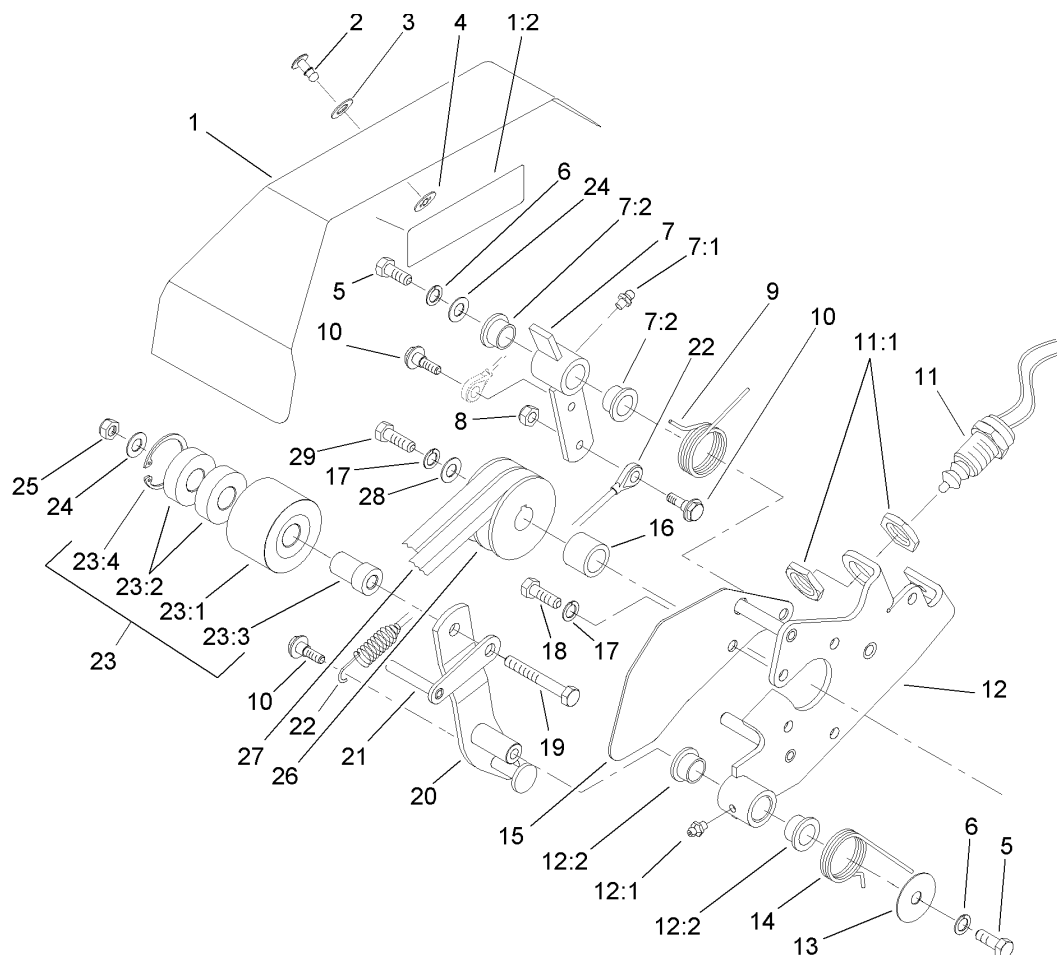


Bellcrank Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	94-9007	1	Bellcrank Cover ASM	18	33114-016	5	Screw-HH
1:2	84-7280	1	Decal-Danger, Japan	19	323-11	1	Screw-HH
1:2	93-7273	1	Decal-Danger	20	93-6003-03	1	Lever-Clutch
2	93-6074	1	Stud	21	95-0922	1	Guide-Belt
3	3256-70	1	Washer-Flat	22	93-9024	1	Cable Link ASM
4	93-6073	1	Retainer	23	98-7296	1	Idler Pulley ASM
5	323-4	2	Screw-HH	23:1	98-7297	1	Pulley-Idler
6	3253-21	2	Washer-Lock	23:2	38-7820	2	Bearing-Ball
7	93-6014	1	Lever ASM	23:3	88-7350	1	Bushing-Pulley
7:1	302-5	1	Fitting-Grease	23:4	32120-42	1	Ring-Retaining
7:2	65-8770	2	Bushing-Bellcrank	24	3256-56	5	Washer-Flat
8	3296-42	3	Nut-Lock, NI	25	3296-39	1	Nut-Lock, NI
9	93-6011	1	Spring-Torsion	26	92-9216	1	Pulley-Drive, Input
10	11-9030	3	Screw-Shoulder	27	92-9218	1	V-Belt (Matched Set)
11	87-5490	1	Switch-Clutch	28	65-8270	1	Washer
11:1	3218-20	2	Nut-Jam	29	33114-025	1	Screw-HH
12	93-6015	1	Clutch Bracket ASM				
12:1	302-5	1	Fitting-Grease				
12:2	65-8770	2	Bushing-Bellcrank				
13	93-6099	1	Washer				
14	93-6012	1	Spring-Torque, Clutch Lever				
15	93-6013-03	1	Shield-Belt				
16	65-8260	1	Spacer-Shaft, Engine				
17	3253-4	6	Washer-Lock				

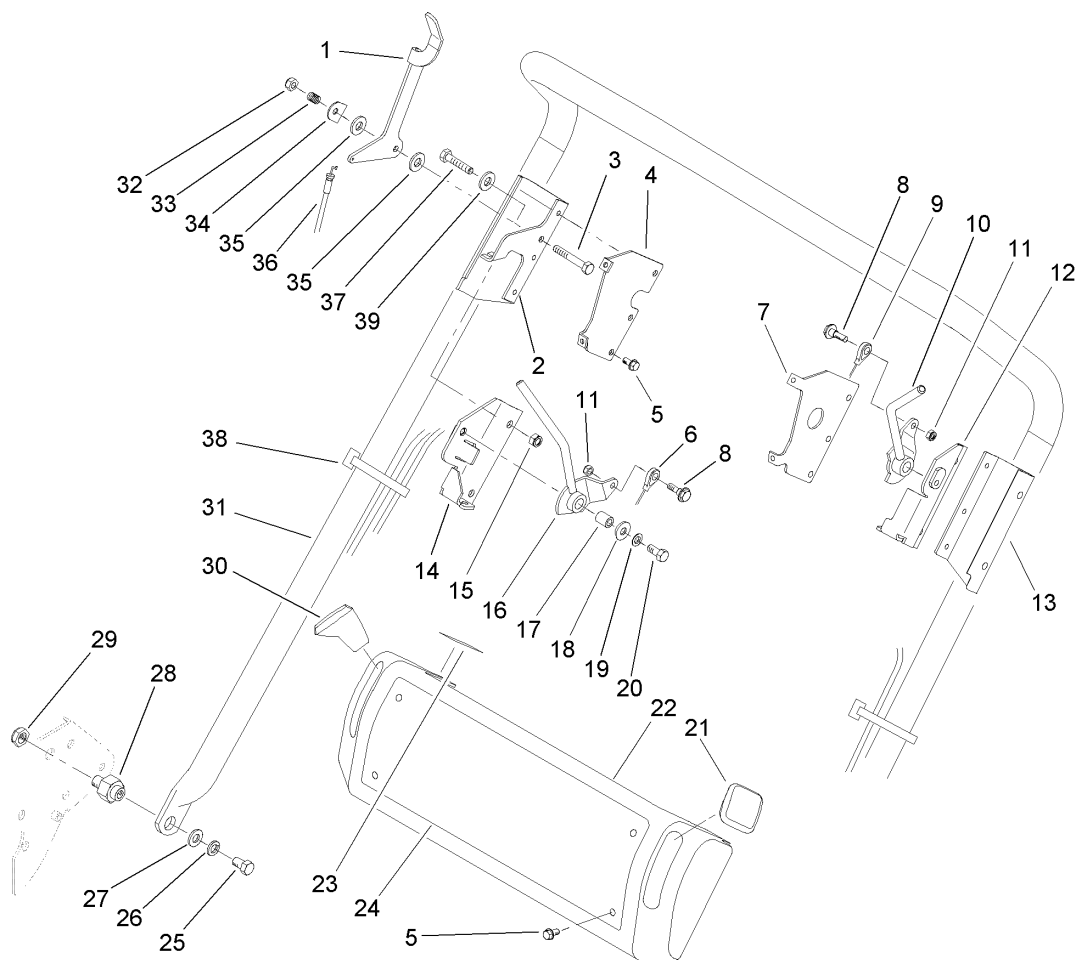


Handle and Control Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	93-6017	1	Lever-Throttle	25	323-34	2	Screw-HH
2	95-0908-03	1	Bracket-Clutch, Skid	26	3253-21	2	Washer-Lock
3	321-8	1	Screw-HH	27	3256-24	2	Washer-Flat
4	93-6046-03	1	Bracket-Console, RH	28	110-7364	2	Pin-Handle, Pivot
5	93-6083	10	Screw-HWH	29	3296-28	2	Nut-Lock, NI
6	94-5870	1	Cable Clutch ASM	30	65-8970	1	Knob-Shift
7	93-6047-03	1	Bracket-Console, LH	31	93-9044	1	Handle
8	11-9030	2	Screw-Shoulder	32	3296-56	1	Nut-Lock, NI
9	94-5871	1	Cable Brake ASM	33	3-5787	1	Spring-Compression
10	106-5348	1	Brake Lever ASM	34	93-6016	1	Washer-Retaining
11	3296-42	2	Nut-Lock, NI	35	66-2921	2	Washer-Friction
12	93-6022	1	Bracket-Brake	36	94-5869	1	Throttle Cable ASM
13	95-0907-03	1	Bracket-Brake, Skid	37	322-9	4	Screw-HH
14	93-6019	1	Bracket	38	3290-378	2	Tie-Cable
15	3296-29	4	Nut-Lock, NI	39	3256-23	4	Washer-Flat
16	106-5347	1	Clutch Lever ASM				
17	47-4701	2	Bushing-Bronze				
18	3256-71	2	Washer-Flat				
19	3254-2	2	Washer-Lock, Internal				
20	3210-7	2	Screw-HH				
21	65-8971	1	Knob-Shift				
22	93-6036	1	Cover-Console				
23	93-6085	1	Decal-Throttle				
24	105-5361	1	Decal-Console				

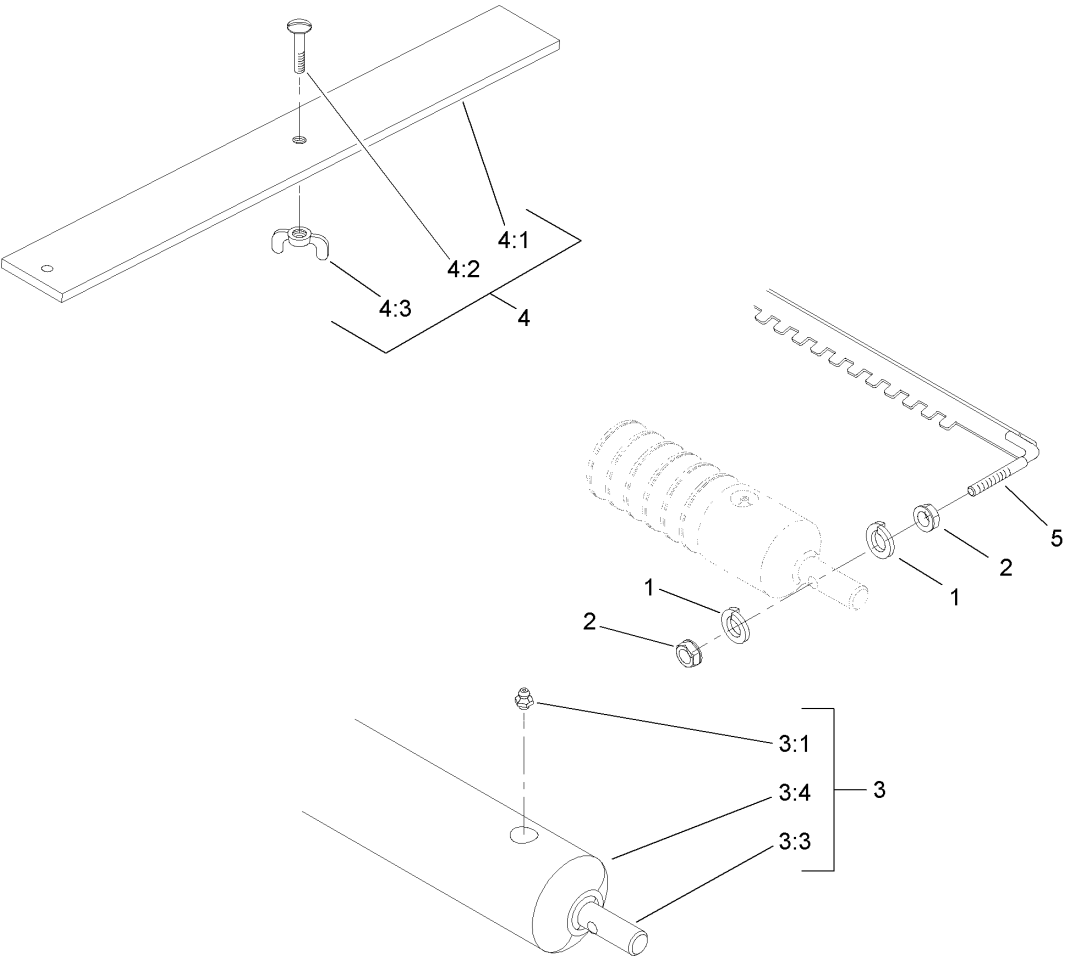

Roller and Height-of-Cut Bar Assembly


Ref	Part No.	Qty.	Description				
1	3254-8	4	Washer-Lock				
2	3219-1	4	Nut-Hex				
3	95-0930	1	Full Roller ASM				
3:1	302-5	2	Fitting-Grease				
3:3	52-3180	2	Bearing-Roller, Front				
3:4	95-0918	1	Roller Tube ASM				
4	94-9010	1	HOC Bar ASM				
4:1	94-9011	1	Bar-HOC				
4:2	32122-36	1	Screw				
4:3	32103-2	1	Nut-Wing				
5	94-9012-01	1	Wiehle Scraper ASM				

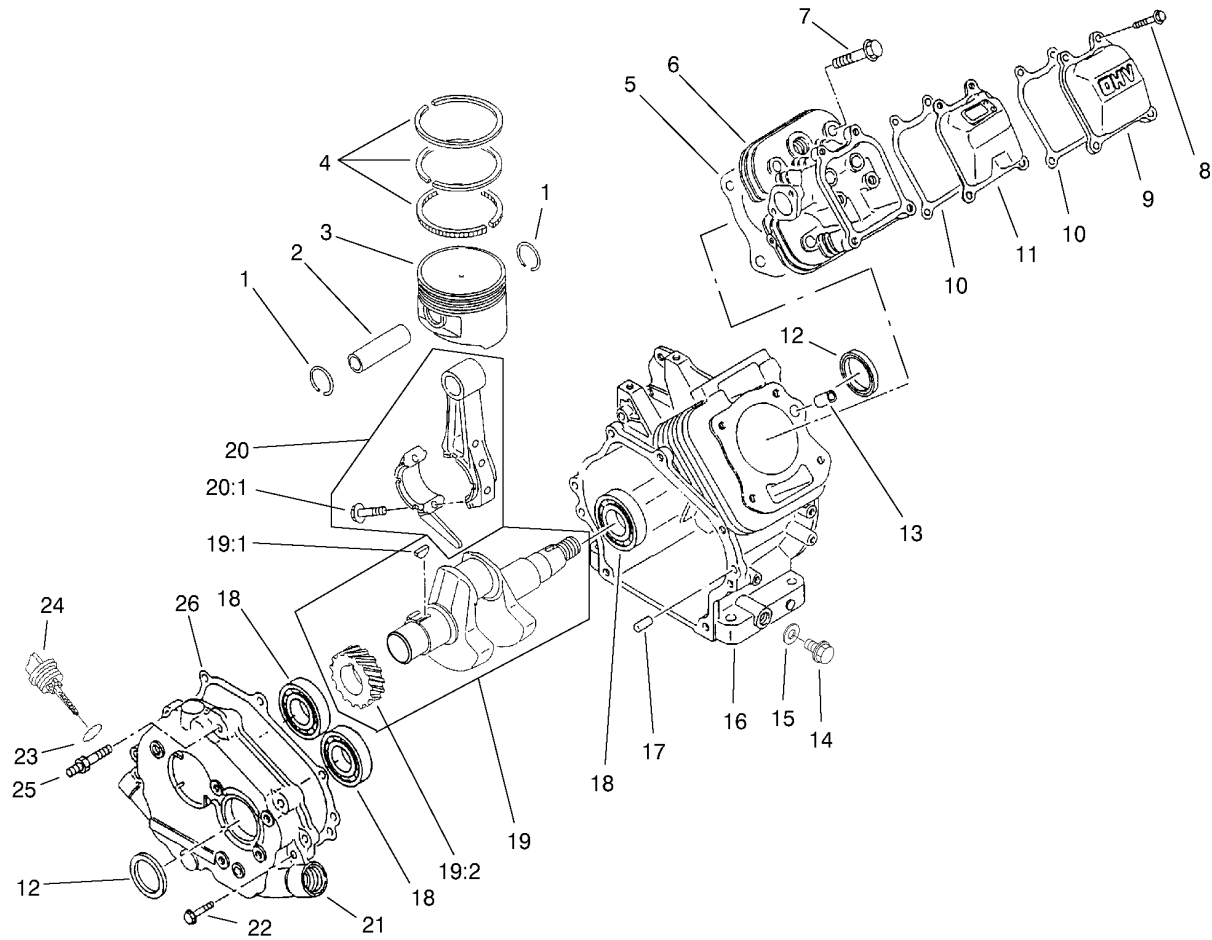

Engine Crankcase Assembly


Ref	Part No.	Qty.	Description
1	93-8500	2	Ring-Retaining
2	93-8501	1	Pin-Piston
3	93-8502	1	Piston
3	94-6836	1	Piston-0.5 O/S
4	93-8503	1	Set-Ring, Piston
4	94-6837	1	Set-Ring, Piston (.05Mm)
5	93-8504	1	Gasket-Head
6	93-8505	1	Head-Cylinder
7	93-8506	4	Bolt-Flanged
8	94-6838	4	Bolt-Flanged
9	93-8508	1	Case-Rocker
10	93-8509	2	Gasket-Rocker
11	93-8510	1	Breather
12	93-8511	2	Seal-Oil
13	93-8512	2	Pin
14	93-8513	2	Plug-Drain
15	93-8514	2	Gasket-Plug, Drain
16	93-8515	1	Crankcase
17	93-8516	2	Pin
18	93-8517	2	Bearing-Ball
19	93-8518	1	Crankshaft ASM
19:1	93-8526	1	Key
19:2	94-9043	1	Gear-Helical
20	93-8528	1	Connecting Rod ASM

Ref	Part No.	Qty.	Description
20:1	93-8527	2	Bolt-Rod
21	93-8520	1	Cover-Crankcase
22	93-8521	7	Bolt-Flanged
23	94-9041	2	O-Ring
24	93-8523	2	Cap-Filter, Oil
25	93-8524	1	Stud
26	93-8525	1	Gasket-Crankcase

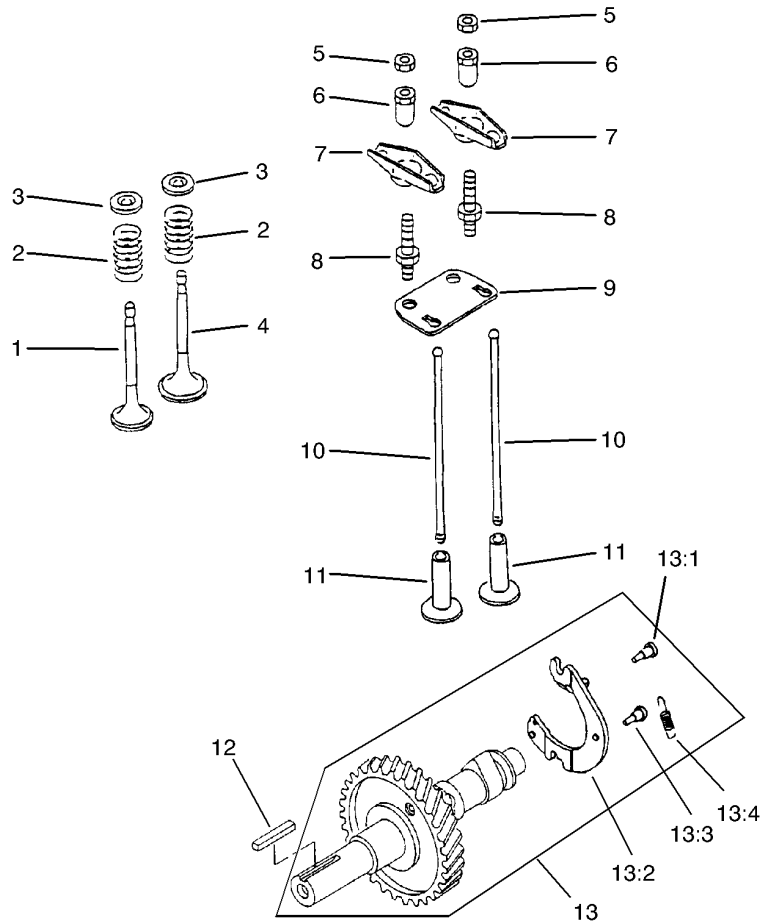

Camshaft and Valve Assembly


Ref	Part No.	Qty.	Description				
1	93-8529	1	Valve-Exhaust				
2	93-8530	2	Spring-Valve				
3	93-8531	2	Retainer-Spring				
4	93-8532	1	Valve-Intake				
5	93-8533	2	Nut				
6	93-8534	2	Nut				
7	93-8535	2	Arm-Rocker				
8	93-8536	2	Bolt				
9	93-8537	1	Guide				
10	93-8538	2	Rod-Push				
11	93-8539	2	Tappet				
12	108-9442	1	Key				
13	93-8544	1	Camshaft ASM				
13:1	93-8540	1	Pin				
13:2	93-8543	1	Decompressor				
13:3	93-8542	1	Pin				
13:4	93-8541	1	Spring				

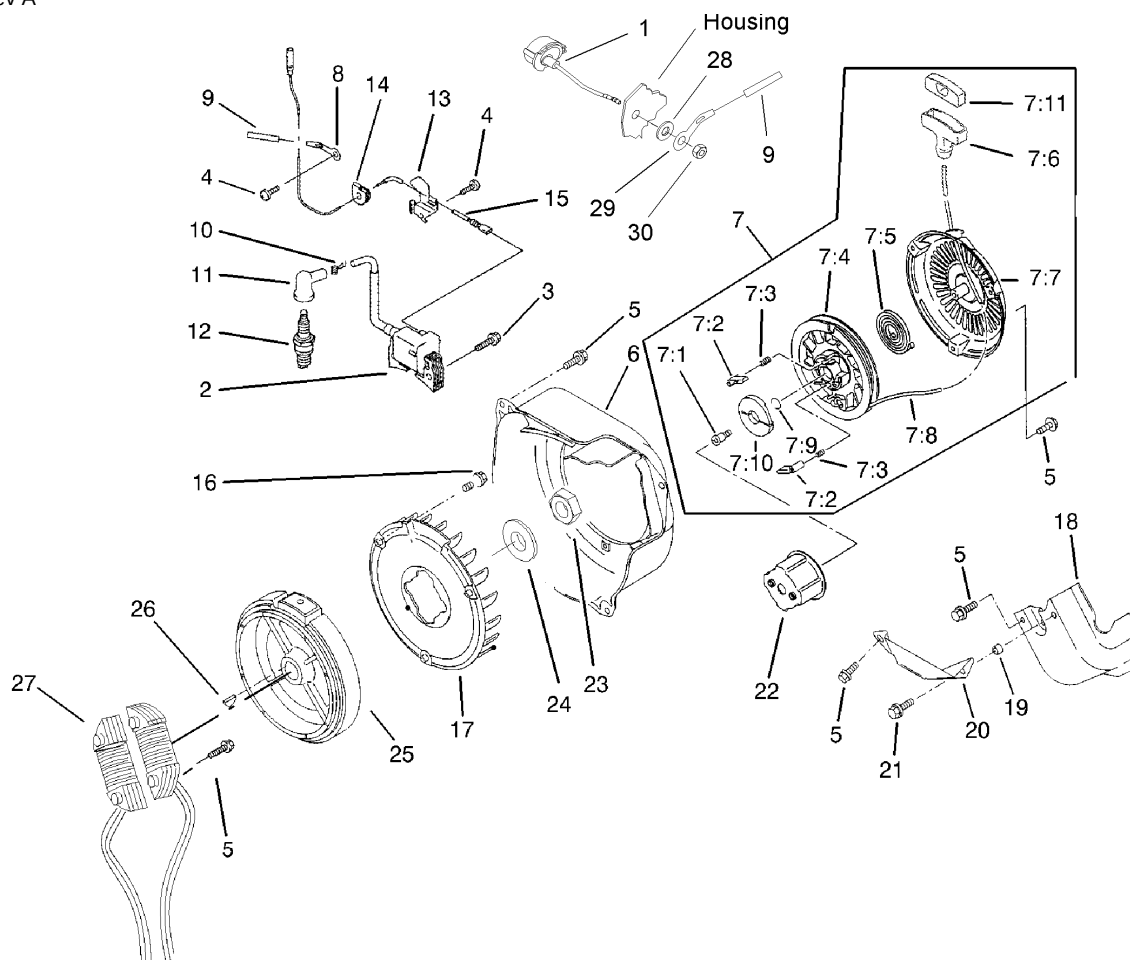

Ignition Assembly


Ref	Part No.	Qty.	Description
1	107-7606	1	Sealed Switch ASM
2	94-9031	1	Ignition Coil ASM
3	93-8548	6	Bolt-Flanged
4	93-8549	2	Screw
5	93-8550	10	Bolt-Flanged
6	107-7607	1	Housing-Fan
7	93-8552	1	Recoil Starter ASM
7:1	93-8553	1	Screw
7:2	93-8554	2	Pawl-Recoil
7:3	93-8555	2	Spring-Return
7:4	93-8556	1	Reel-Recoil
7:5	93-8557	1	Spring
7:6	94-9045	1	Grip-Starter, Recoil
7:7	94-9046	1	Case-Recoil
7:8	93-8560	1	Rope
7:9	93-8561	1	Ring-Retaining
7:10	93-8562	1	Guide-Pawl
7:11	94-9044	1	Cap-Grip
8	94-9039	1	Clamp
9	94-9040	2	Tube
10	94-9049	1	Spring-Terminal
11	93-8585	1	Cap-Plug, Spark
12	93-8584	1	Spark Plug
13	93-8583	1	Clamp

Ref	Part No.	Qty.	Description
14	107-7608	1	Grommet
15	94-9038	1	Wire-Lead
16	94-6840	3	Bolt-Flanged
17	93-8572	1	Fan
18	93-8563	1	Shroud-Engine
19	93-8564	1	Collar
20	93-8565	1	Shroud-Engine
21	93-8566	1	Bolt-Flanged
22	93-8567	1	Pulley-Recoil
23	93-8568	1	Nut
24	93-8569	1	Washer
25	99-6237	1	Flywheel ASM
26	93-8571	1	Key
27	99-4267	1	Coil-Lighting
28	33094-00	1	Washer-Plain
29	107-7609	1	Clamp
30	33014-00	1	Nut-Hex

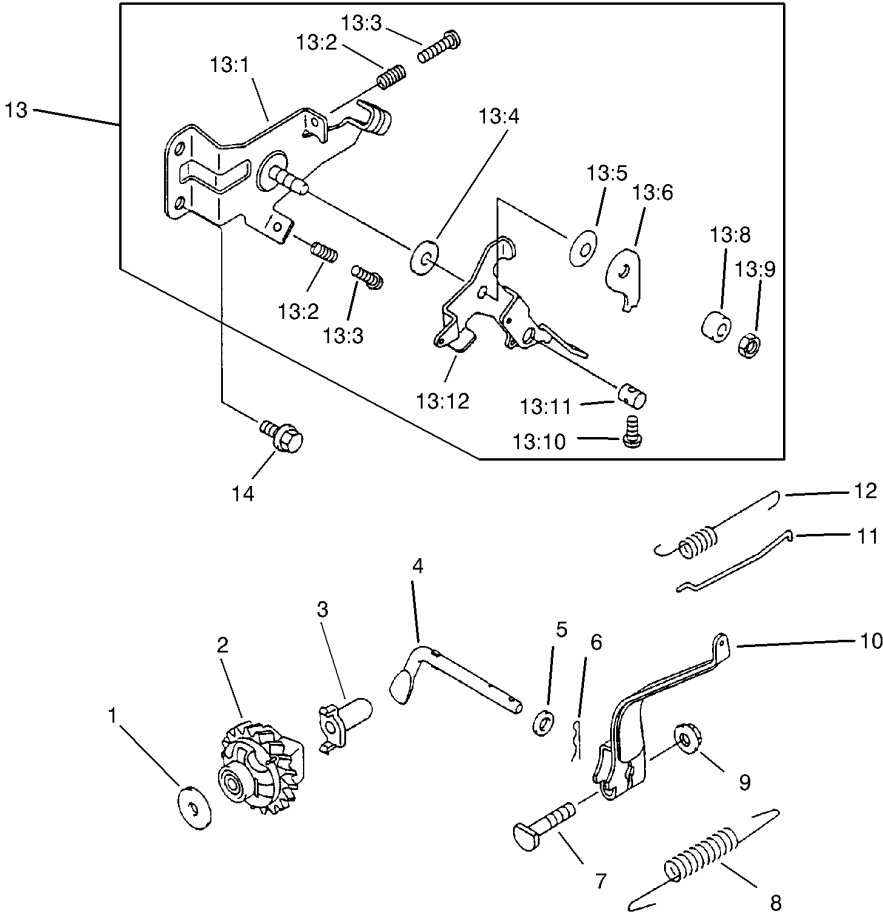

Governor Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	94-6842	1	Washer	14	93-8600	2	Bolt-Flanged
2	94-6841	1	Governor ASM				
3	93-8610	1	Sleeve				
4	93-8609	1	Arm-Pivot				
5	93-8608	1	Washer				
6	93-8607	1	Pin-Snap				
7	93-8606	1	Bolt				
8	94-9030	1	Spring-Governor				
9	93-8631	1	Nut				
10	93-8603	1	Arm-Governor				
11	93-8602	1	Rod-Governor				
12	93-8601	1	Spring				
13	93-8599	1	Control ASM				
13:1	93-8587	1	Bracket				
13:2	93-8588	2	Spring				
13:3	93-8589	2	Bolt				
13:4	93-8590	1	Washer				
13:5	93-8591	1	Spring				
13:6	93-8592	1	Plate				
13:8	93-8594	1	Spacer				
13:9	93-8595	1	Nut				
13:10	93-8596	1	Screw-Head, Pan				
13:11	93-8597	1	Nut				
13:12	93-8598	1	Lever				

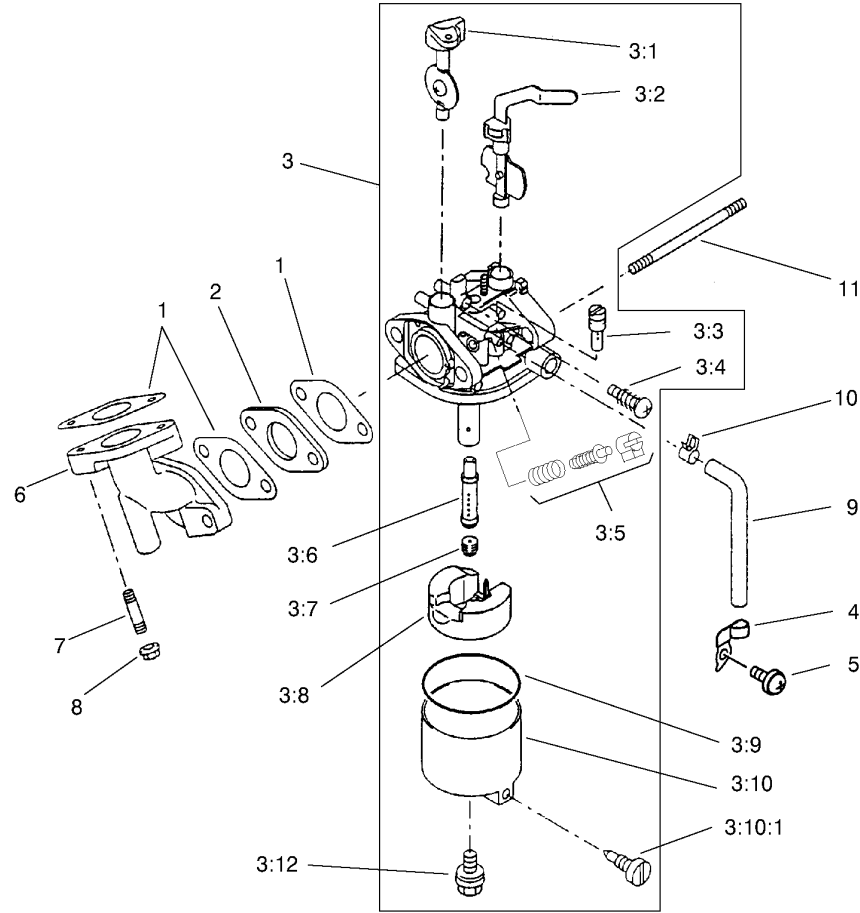

Carburetor Assembly


Ref	Part No.	Qty.	Description
1	93-8613	3	Gasket
2	94-9048	1	Insulator
3	94-9032	1	Carburetor ASM
3:1	94-9033	1	Throttle Valve ASM
3:2	93-8617	1	Valve-Choke
3:3	94-9037	1	Jet-Pilot, #40
3:4	93-8619	1	Screw ASM
3:5	94-9034	1	Limiter
3:6	94-9035	1	Nozzle-Main
3:7	94-9036	1	Jet-Main, #65
3:7	98-8735	1	Jet-Main, #62 High Alt
3:7	98-8736	1	Jet-Main, #60 High Alt
3:8	94-6844	1	Float ASM
3:9	93-8624	1	Gasket
3:10	93-8625	1	Float Chamber ASM
3:10:1	93-8626	1	Screw ASM
3:12	93-8627	1	Bolt
4	94-6846	1	Clamp
5	94-6845	1	Screw
6	93-8633	1	Pipe-Intake
7	93-8632	2	Bolt-Stud
8	93-8631	2	Nut
9	93-8630	1	Tube
10	93-8629	1	Clamp

Ref	Part No.	Qty.	Description
11	93-8628	2	Bolt-Stud

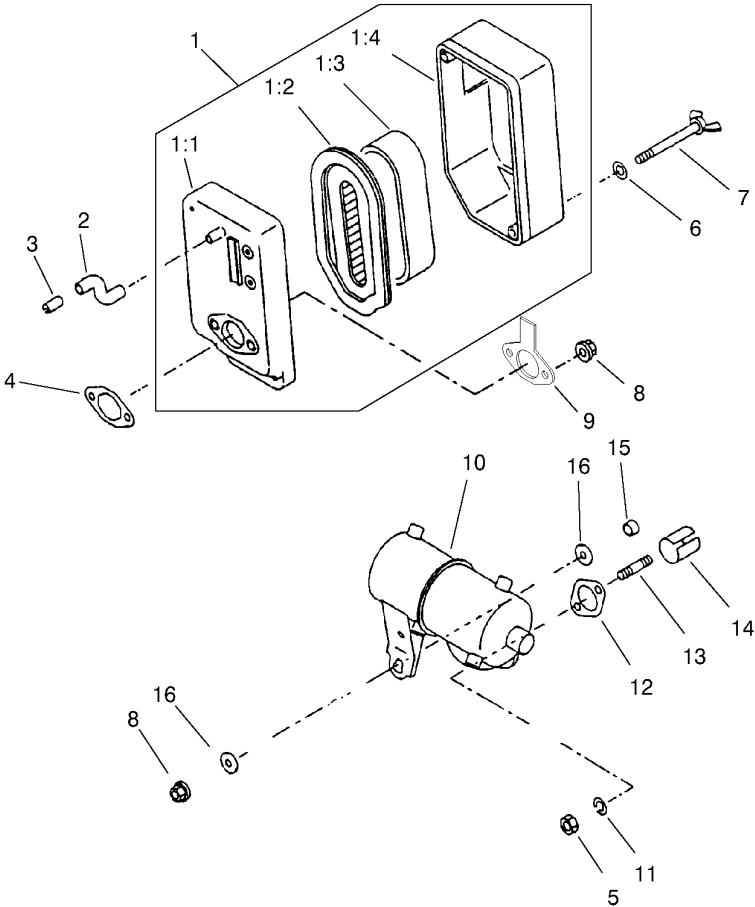

Air Cleaner and Muffler Assembly

Ref	Part No.	Qty.	Description				
1	93-8634	1	Air Filter ASM				
1:1	93-8635	1	Case Filter ASM				
1:2	93-8636	1	Element-Filter, Air				
1:3	93-8637	1	Element-Filter, Air				
1:4	93-8638	1	Cap-Filter, Air				
2	93-8659	1	Tube				
3	93-8658	1	Pipe				
4	93-8657	1	Gasket-Filter, Air				
5	93-8656	2	Nut-Hex				
6	93-8639	2	Washer				
7	93-8640	2	Bolt				
8	93-8631	3	Nut				
9	93-8642	1	Plate-Filter, Air				
10	98-3427	1	Muffler				
11	93-8655	2	Washer-Spring				
12	93-8654	1	Gasket-Muffler				
13	94-6848	2	Bolt-Stud				
14	93-8652	1	Pipe-Exhaust				
15	93-8651	1	Collar				
16	93-8650	2	Washer				

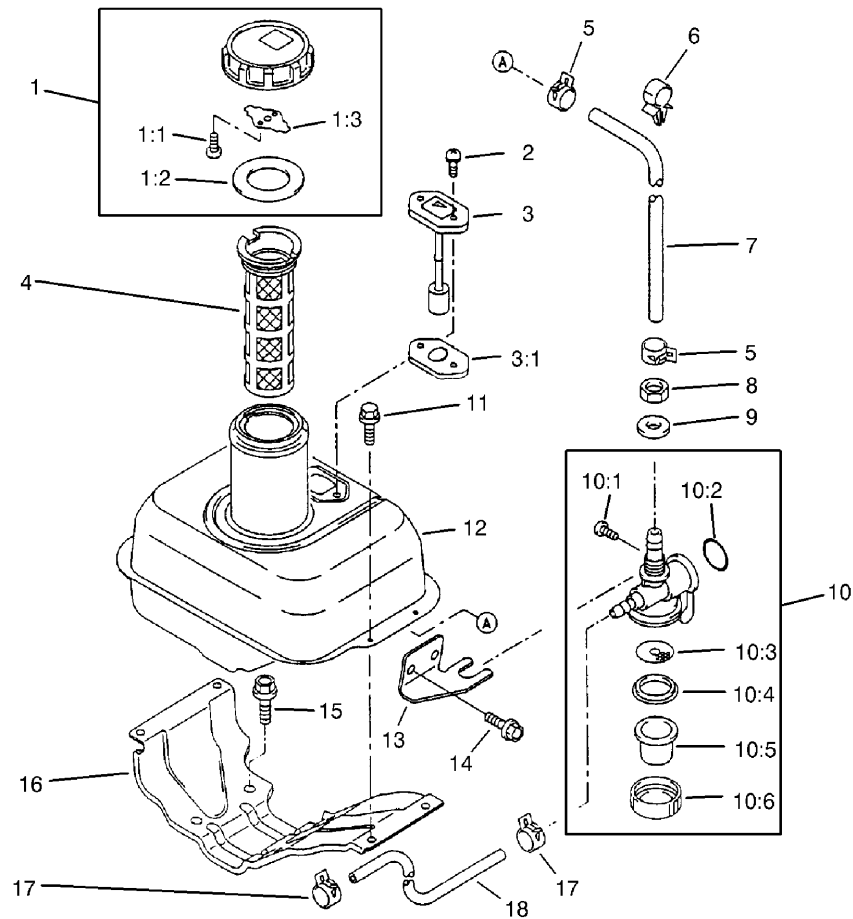

Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	93-8660	1	Fuel Cap ASM
1:1	93-8661	2	Screw
1:2	93-8662	1	Gasket
1:3	93-8663	1	Spring
2	93-8686	2	Screw
3	93-8685	1	Gauge-Fuel
3:1	104-2384	1	Gasket-Gauge, Fuel
4	94-6826	1	Filter-Fuel
5	93-8664	2	Clamp
6	93-8665	1	Clamp
7	93-8666	1	Tube
8	94-9042	1	Nut
9	93-8668	1	Washer
10	93-8669	1	TAP ASM
10:1	93-8670	1	Screw
10:2	93-8671	1	O-Ring
10:3	94-6849	1	Filter-TAP
10:4	93-8673	1	Gasket
10:5	93-8674	1	Cup-TAP
10:6	93-8675	1	Nut
11	94-6838	4	Bolt-Flanged
12	104-2382	1	Tank-Fuel
13	93-8681	1	Bracket
14	93-8680	2	Bolt-Flanged

Ref	Part No.	Qty.	Description
15	94-6825	4	Bolt-Flanged
16	104-2383	1	Bracket-Tank
17	93-8676	2	Clamp
18	93-8677	1	Tube

Attachments and Accessories

For 04060 - Greensmaster 1600

Product Name	Model/Part
Light Kit	04057
Wheel Kit	04123
Groomer Reel Kit	04124
Bedknife-Highcut	104-2646
Hour Meter Kit	105-5350
Operator Presence Kit	105-5363
Knife-Bed, Fairway	107-8181
25 Inch Clip Kit	65-9000
Bedknife-Tournament Cut	94-5885
Decal Kit	94-5895
Height-of-Cut Bar ASM	94-9010
Wiehle Scraper ASM	94-9012-01
Full Roller ASM	95-0930
Spark Arrester Kit	98-3426
Jet-Main, #62 High Altitude	98-8735
Jet-Main, #60 High Altitude	98-8736
Arm-HOC, Extended	99-4286

NOTES

