



53cm Super Recycler[®] Lawnmower

Model No. 20793 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing Assembly 3	Carburetor Assembly Briggs and Stratton	
Housing Assembly No. 108-8115 4	125K02-0194-E1 15
Height-of-Cut and Front Wheel Assembly 5	Air Cleaner Assembly Briggs and Stratton	
Rear Wheel and Gear Case Assembly 6	125K02-0194-E1 16
Gear Case Assembly No. 108-8140 7	Governor Assembly Briggs and Stratton	
Engine Assembly 8	125K02-0194-E1 17
Handle Assembly 9	Muffler and Fuel Tank Assembly Briggs and	
Handle and Cable Assembly 10	Stratton 125K02-0194-E1 18
Rear Bag Assembly 11	Blower Housing Assembly Briggs and Stratton	
Cylinder Assembly Briggs and Stratton		125K02-0194-E1 19
125K02-0194-E1 12	Starter Assembly Briggs and Stratton 125K02-	
Crankshaft Assembly Briggs and Stratton		0194-E1 20
125K02-0194-E1 13	358 Engine Gasket Set Assembly Briggs and	
Crankcase Assembly Briggs and Stratton		Stratton 125K02-0194-E1 21
125K02-0194-E1 14	121 Carburetor Overhaul Kit and 977	
		Carburetor Gasket Set Assemblies Briggs and	
		Stratton 125K02-0194-E1 22
		Attachments and Accessories List 23


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread
GA. gauge	forming
HF. hex flange	PRH. phillips round head
HH. hex head	PTH. phillips truss head
HHF. hex head flange	PTO. power-take-off
HHFTF. hex head flange thread forming	RH. right hand
HJ. hex jam	ROPS. roll-over-protection-system
HLH. hex lag head	SFH. slotted fillister head
HOC. height-of-cut	SHH. slotted hex head
HSBH. hex socket button head	SHWH. slotted hex washer head
HSFH. hex socket flat head	SPH. slotted pan head
HSH. hex socket head	SQH. square head
HWH. hex washer head	SRH. slotted round head
HWHTF. hex washer head thread	STD. standard
forming	TAP. self tapping
HYD. hydraulic	TTH. torx truss head

Footnotes


- | | |
|---|--|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain from your local Briggs & Stratton dealer | ❹ Included in Carburetor Overhaul Kit (Ref. No. 121) |
| ❺ Included in Engine Gasket Set (Ref. No. 358) | ❻ Included in Carburetor Gasket Set (Ref. No. 977) |

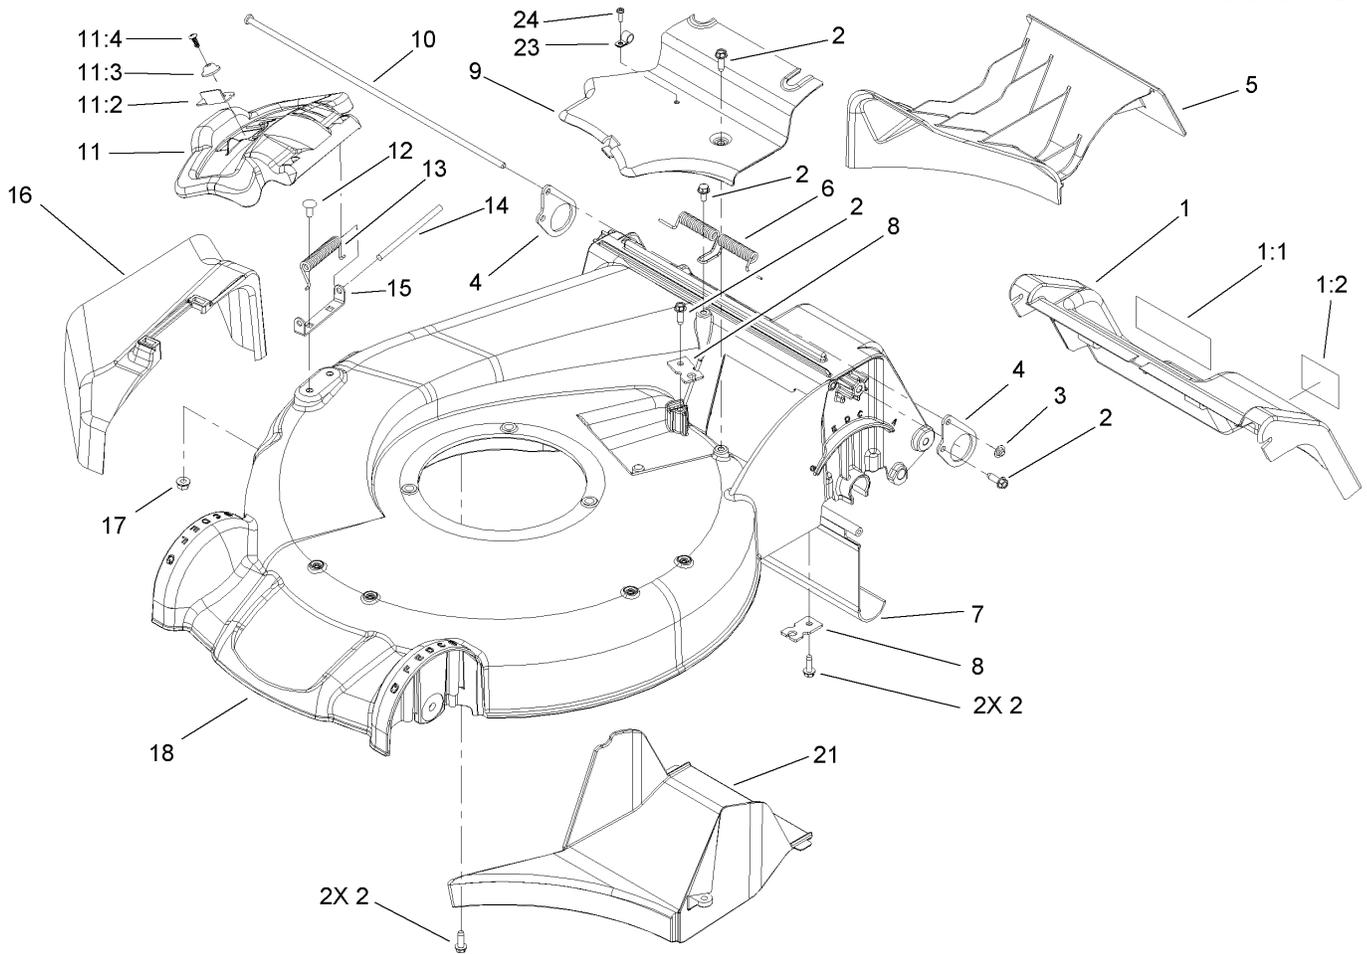

Housing Assembly

Ref	Part No.	Qty.	Description
1	108-8170	1	Door-Service
1:1	104-7909	1	Decal-Warning
1:2	104-7908	1	Decal-Warning
2	49-2040	8	Screw-HWHTF
3	3290-337	1	Nut-Speed
4	107-7493	2	Plate-Support, Door
5	107-7490	1	Plug-Mulch
6	105-3032	1	Spring-Door, Rear
7	107-7496	1	Shield-Trailing
8	107-7497	2	Bracket-Cable, Traction
9	107-7494	1	Cover-Belt
10	107-7499	1	Rod-Support, Door
11	107-3717	1	Discharge Door ASM
11:2	107-0795	1	Latch-Door
11:3	107-7456	1	Cap-Door
11:4	107-7461	1	Screw-Plastite
12	3229-11	2	Screw-CARR
13	99-5293	1	Spring-Torsion
14	99-5291	1	Rod-Cover
15	99-5292	1	Bracket-Cover
16	108-3753	1	Chute-Discharge, Side
17	32128-32	2	Nut-HHF
18	108-8115	1	Housing ASM
21	107-7495	1	Tunnel-Discharge


Ref	Part No.	Qty.	Description
23	98-2256	1	Clamp
24	32144-32	1	Screw

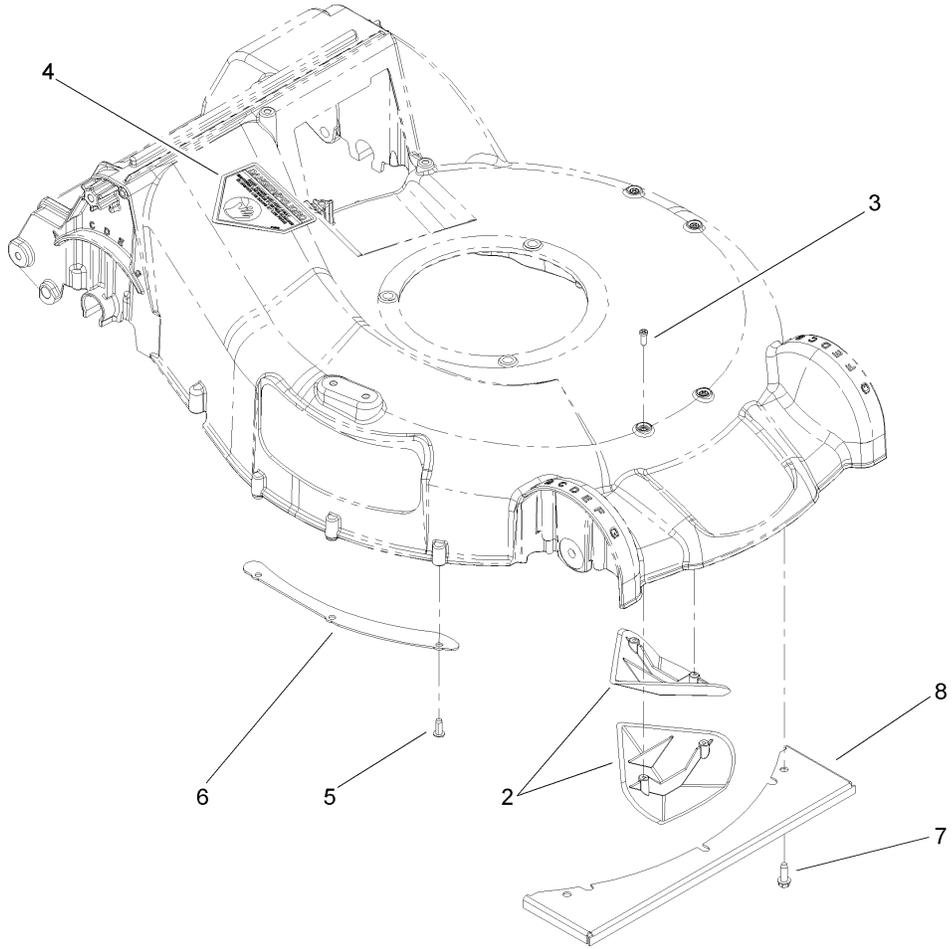

Housing Assembly No. 108-8115

Ref	Part No.	Qty.	Description
2	108-3798	2	Kicker-Housing
3	32144-111	4	Screw-PPH
4	94-8072	1	Decal-Danger
5	63-8590	3	Screw
6	105-1316-03	1	Sheet-Lip
7	49-2040	3	Screw-HWHTF
8	108-3797-03	1	Plate-Cover, Front


--	--	--	--

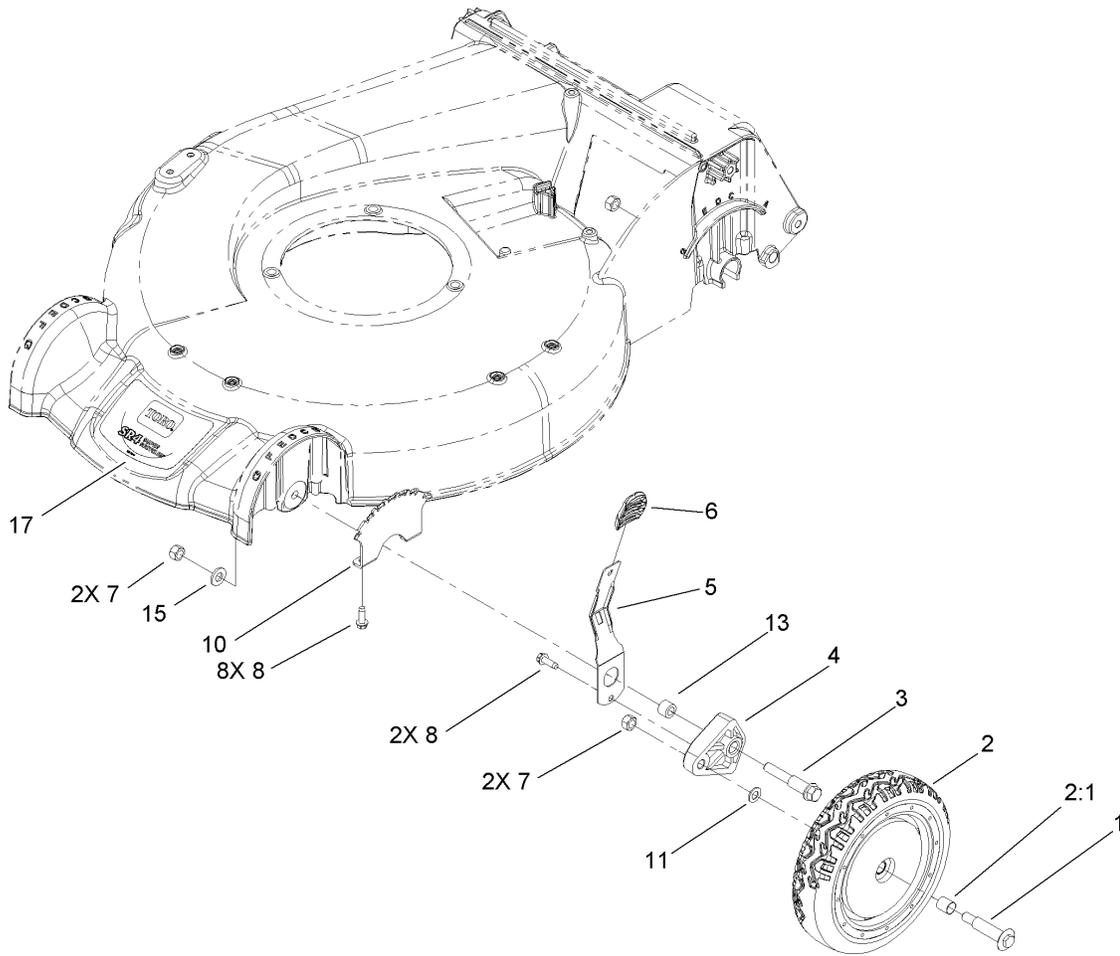

Height-of-Cut and Front Wheel Assembly

Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	107-3706	2	8 Inch Wheel ASM
2:1	27-6250	2	Bushing
3	107-7498	2	Screw-Shoulder, HOC
4	107-7492	2	Arm-Pivot
5	107-7491	2	Spring Arm
6	105-3042	2	Knob-Lever, HOC
7	603773	4	Nut
8	49-2040	13	Screw-HWHTF
10	107-7478	4	Plate-HOC
11	40-1940	2	Washer
13	52-2480	2	Spacer-Wheel
15	3256-24	2	Washer-Flat
17	108-4840	1	Decal


--	--	--	--

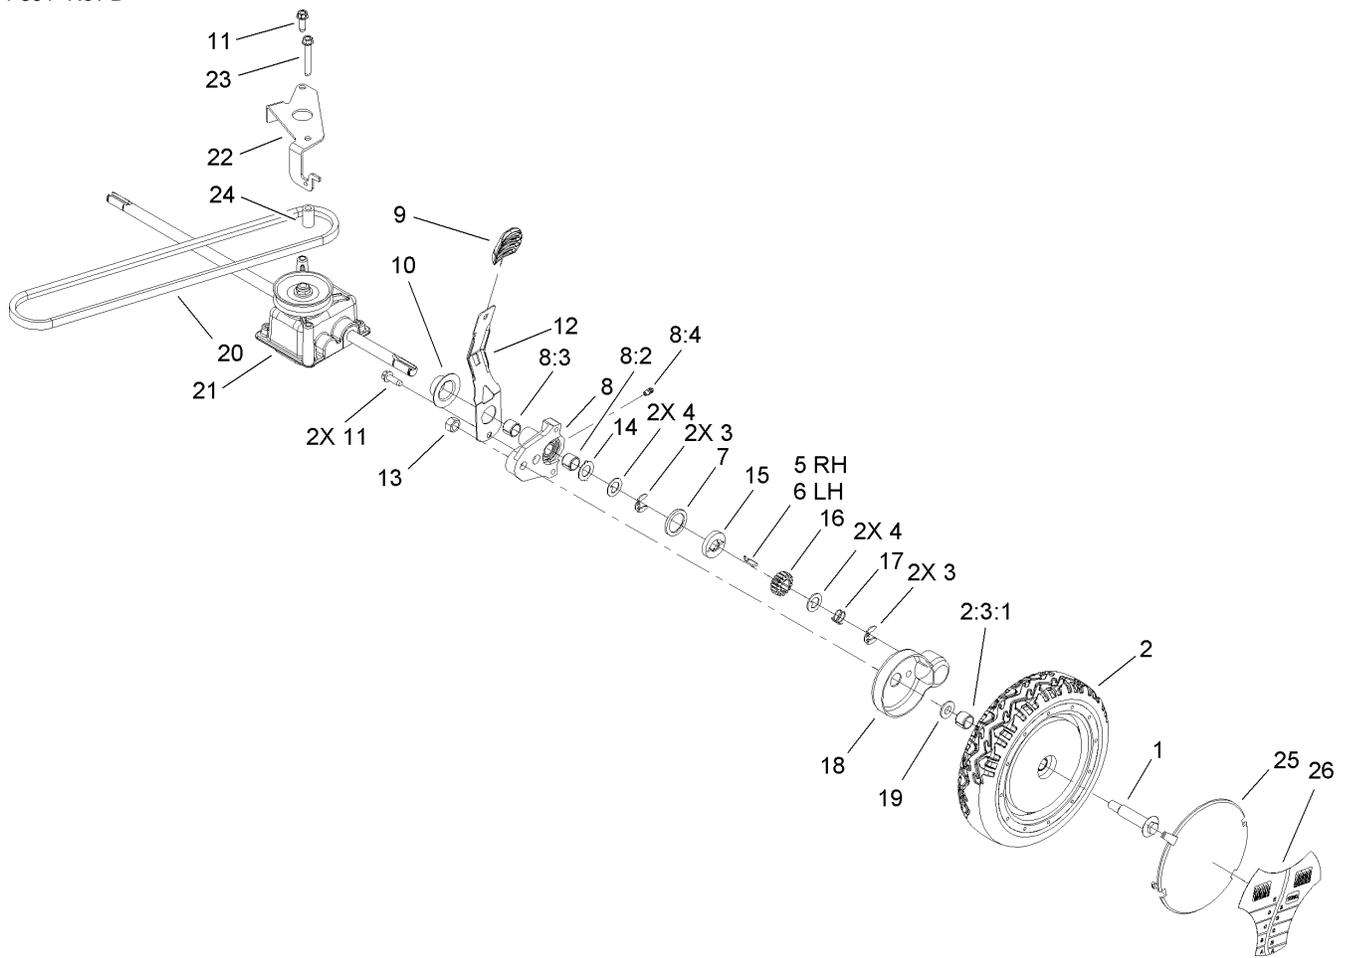

Rear Wheel and Gear Case Assembly

Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	107-3707	2	Wheel Gear ASM
1 2 2:3		1	8 Inch Wheel ASM
2:3:1	27-6250	2	Bushing
3	65-2720	4	Klipring-Locking
4	65-4740	4	Washer-Thrust, Keyed
5	66-6040	1	Key-Rocking, RH
6	66-6050	1	Key-Rocking, LH
7	65-4710	2	Ring-Friction
8	100-8774	2	Pivot Arm ASM
8:2	47-2900	1	Bushing
8:3	70-9760	1	Bushing
8:4	302-56	1	Fitting-Grease
9	105-3042	2	Knob-Lever, HOC
10	42-3520	2	Cap-End
11	49-2040	3	Screw-HWHTF
12	107-7491	2	Spring Arm
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer-Clutch
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	74-1660	2	Cover-Wheel
19	74-1671	2	Spacer-Cover, Wheel


Ref	Part No.	Qty.	Description
20	99-1597	1	V-Belt
21	108-8140	1	Gear Case ASM
22	107-7483-03	1	Bracket-Gearbox
23	92-1616	1	Screw-HWHTF
24	614673	1	Bushing-Plate, Actuator
25	100-6351	1	Cover-Wheel
26	100-1519	1	Label-Wheel, Smart

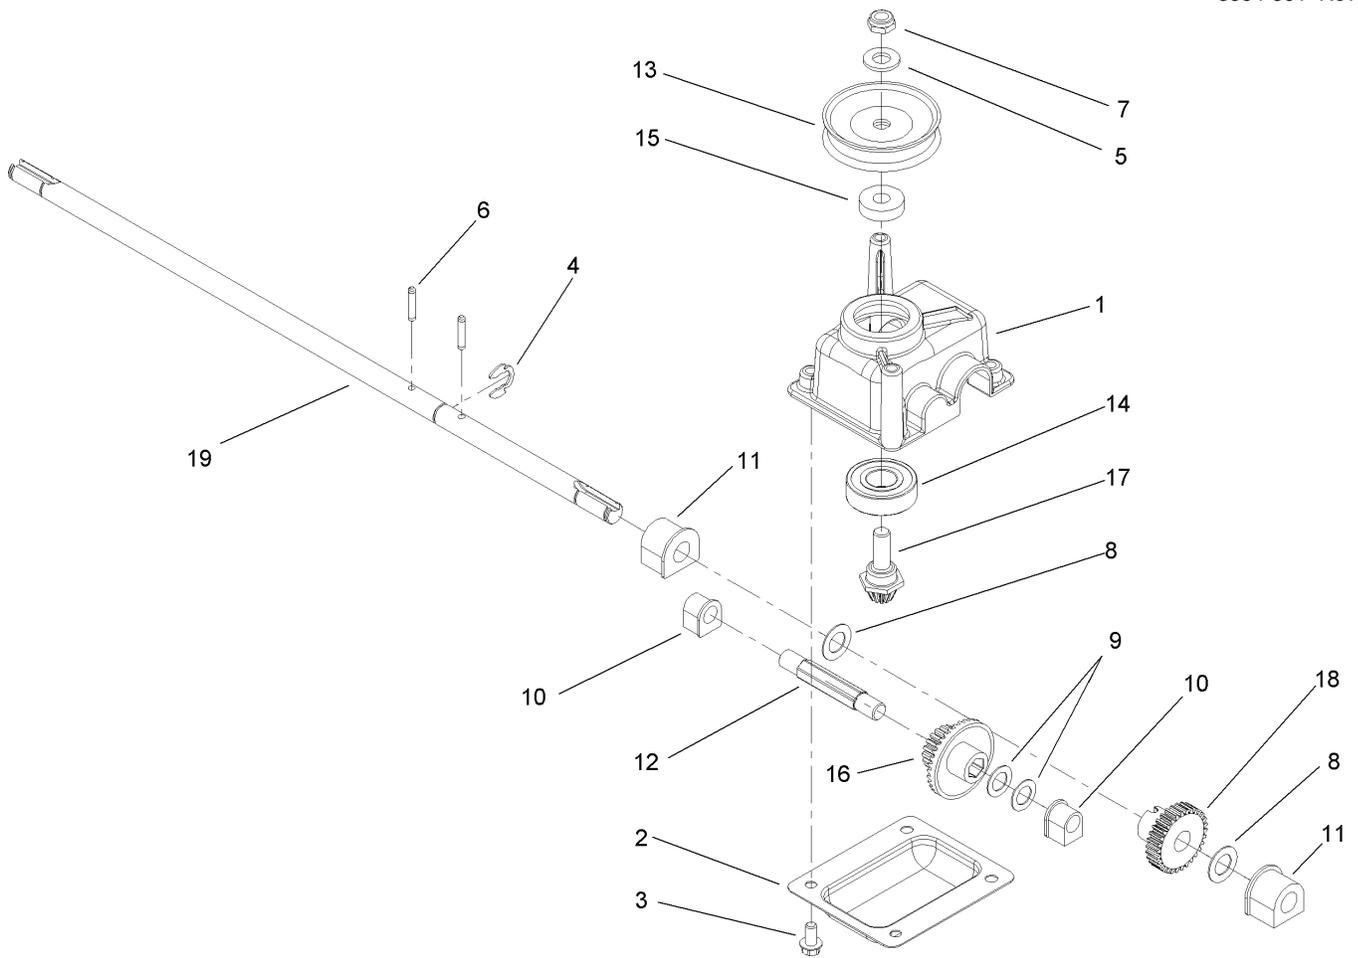

Gear Case Assembly No. 108-8140

Ref	Part No.	Qty.	Description
1	104-7619	1	Case-Gear
2	614668-03	1	Cover-Case, Gear
3	32144-4	4	Screw-HWH
4	32151-68	1	Ring-Retaining
5	3256-24	1	Washer-Flat
6	3285-19	2	Pin-Groove
7	3296-5	1	Nut-Lock
8	36-4780	2	Washer
9	36-4791	2	Washer-Thrust
10	60-8750	2	Bushing
11	60-8850	2	Bushing
12	614696	1	Shaft-Intermediate
13	100-1176	2	Pulley-Half
14	100-1048	1	Bearing-Ball
15	62-6660	1	Spacer
16	104-1005	1	Gear-19T Spur, 37T Bevel
17	104-7667	1	Gear-Pinion, Bevel
18	104-1004	1	Gear-30T
19	108-8141	1	Shaft-Output


--	--	--	--

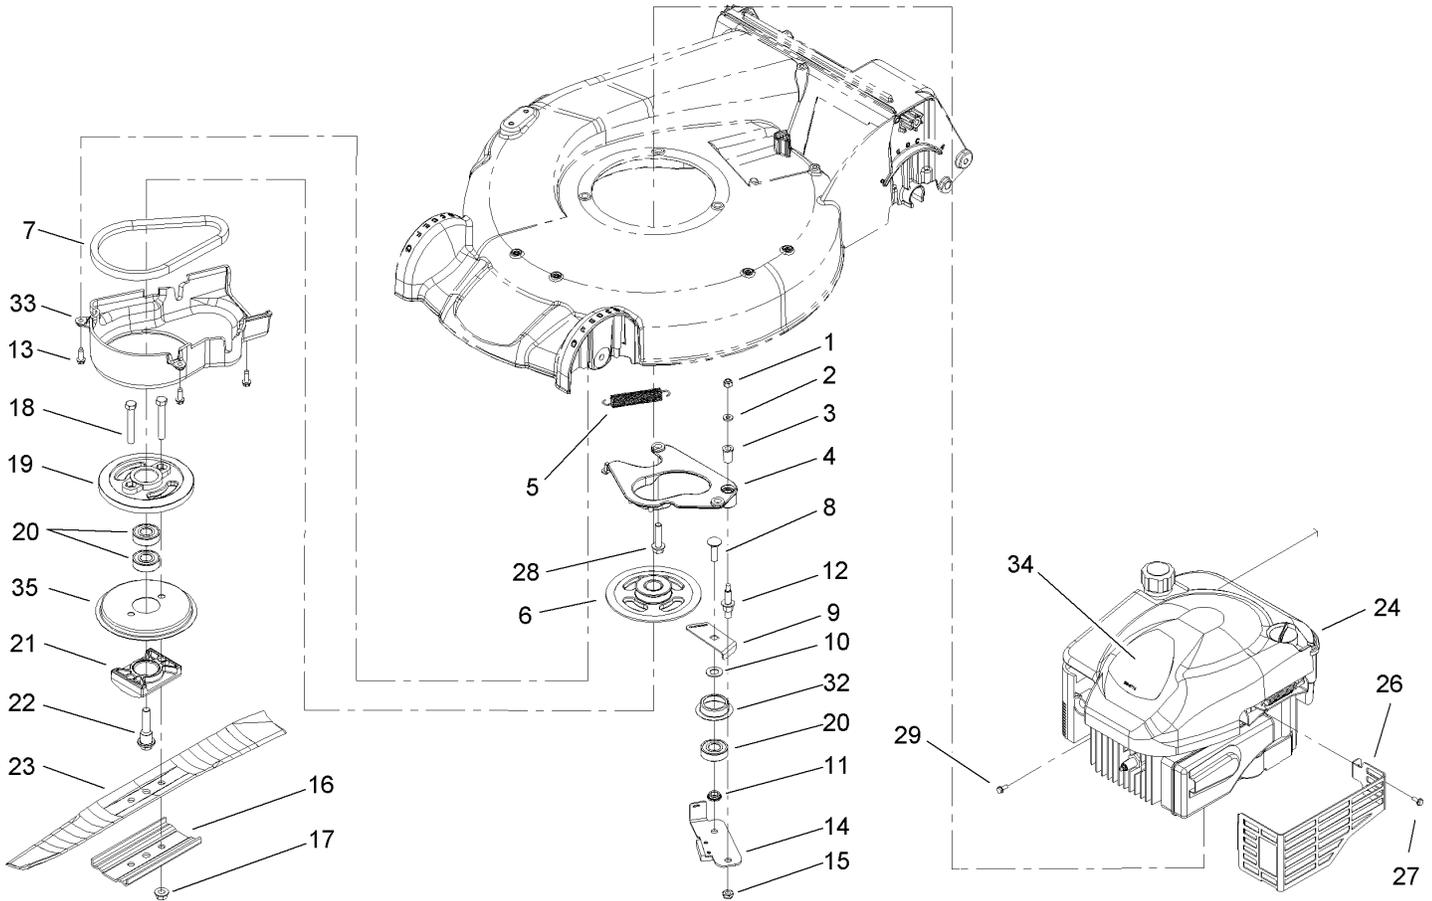

Engine Assembly

Ref	Part No.	Qty.	Description
1	3296-42	1	Nut-Lock, NI
2	3256-16	1	Washer-Flat
3	107-0797	1	Bushing
4	107-0761	1	Plate-Anchor
5	108-3792	1	Spring-Tension, Brake
6	110-7456	1	Pulley-BBC
7	110-1790	1	Belt-BBC
8	3231-25	1	Screw-CARR
9	107-7471	1	Plate-Guide
10	605256	1	Washer
11	107-0758	1	Spacer-Bearing
12	107-0759	1	Bolt-Shoulder
13	49-2040	3	Screw-HWHTF
14	107-7477	1	Brake Arm ASM
15	603773	2	Nut
16	108-3766-03	1	Support-Blade
17	54-9190	2	Nut-Lock
18	3211-42	2	Screw-HH
19	107-0754	1	Drum
20	100-1048	3	Bearing-Ball
21	107-7487	1	Support-Blade
22	107-7486	1	Bolt-Crank
23	108-3762-03	1	Blade-Recycling


Ref	Part No.	Qty.	Description
24		1	Engine-Briggs And Stratton, 125K-0194-E1
26	104-7577-03	1	Shield-Muffler
27	32144-1	3	Screw-TapTite
28	32144-102	3	Screw-HWH
29	32144-112	1	Screw-HWH
32	108-3790	1	Retainer-Belt
33	107-7488	1	Cover
34	110-7486	1	Decal-Recoil
35	108-3787	1	Disc

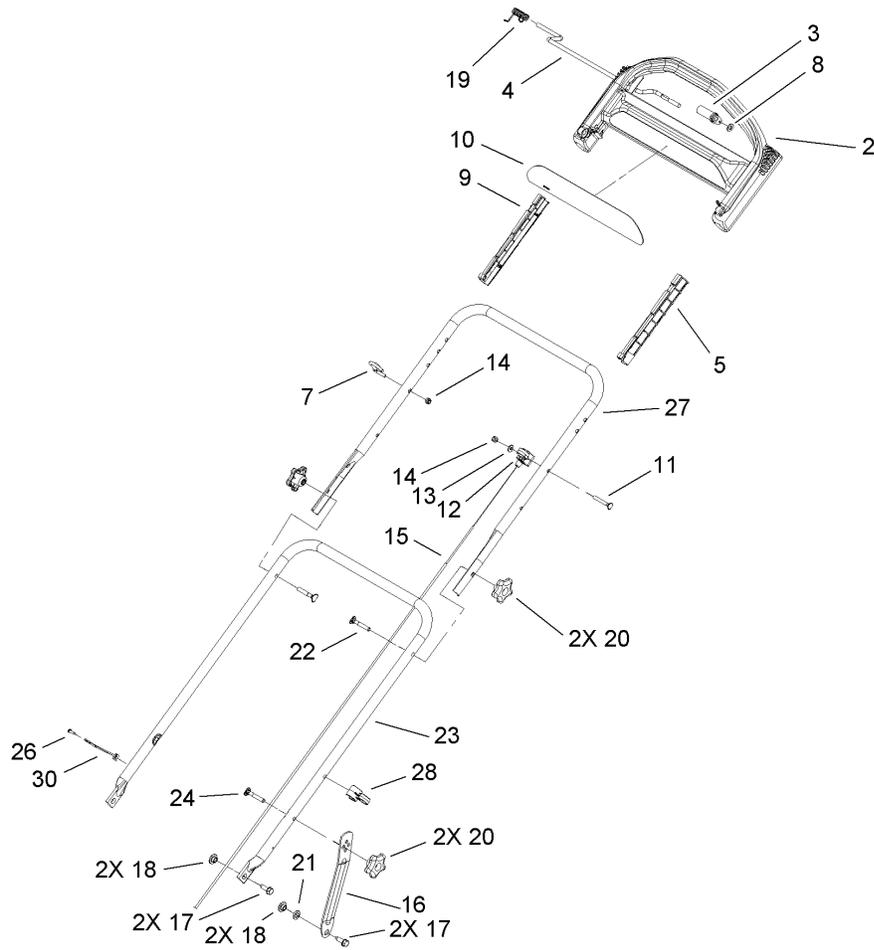

Handle Assembly


Ref	Part No.	Qty.	Description
2	104-8678	1	Handle-Control
3	99-1589	1	Lever-Traction
4	99-1588	1	Bar-Control, Traction
5	105-6842	1	Guide-LH
7	86-9671	1	Guide-Rope
8	3256-23	1	Washer-Flat
9	105-6841	1	Guide-RH
10	108-8136	1	Decal-Handle
11	321-50	1	Screw-HH
12	99-5239	1	Anchor-Cable
13	3256-1	1	Washer-Flat
14	3296-73	2	Nut-Lock, NI
15	108-8158	1	Cable-Traction
16	108-8145-03	2	Support-Handle
17	701243	4	Screw-HWHTF
18	27-6600	4	Spacer-Coupling
19	104-8690	1	Spring-Torsion
20	108-8162	4	Knob-Locking
21	55-9670	2	Washer
22	92-2260	2	Screw-Handle
23	107-7476-05	1	Handle-Lower
24	92-2260	2	Screw-Handle
26	32144-53	1	Screw-SHWH
27	107-3783-05	1	Handle-Upper

Ref	Part No.	Qty.	Description
28	106-6805	1	Guide-Cable
30	108-9452	1	Hook-Rope, Displacement

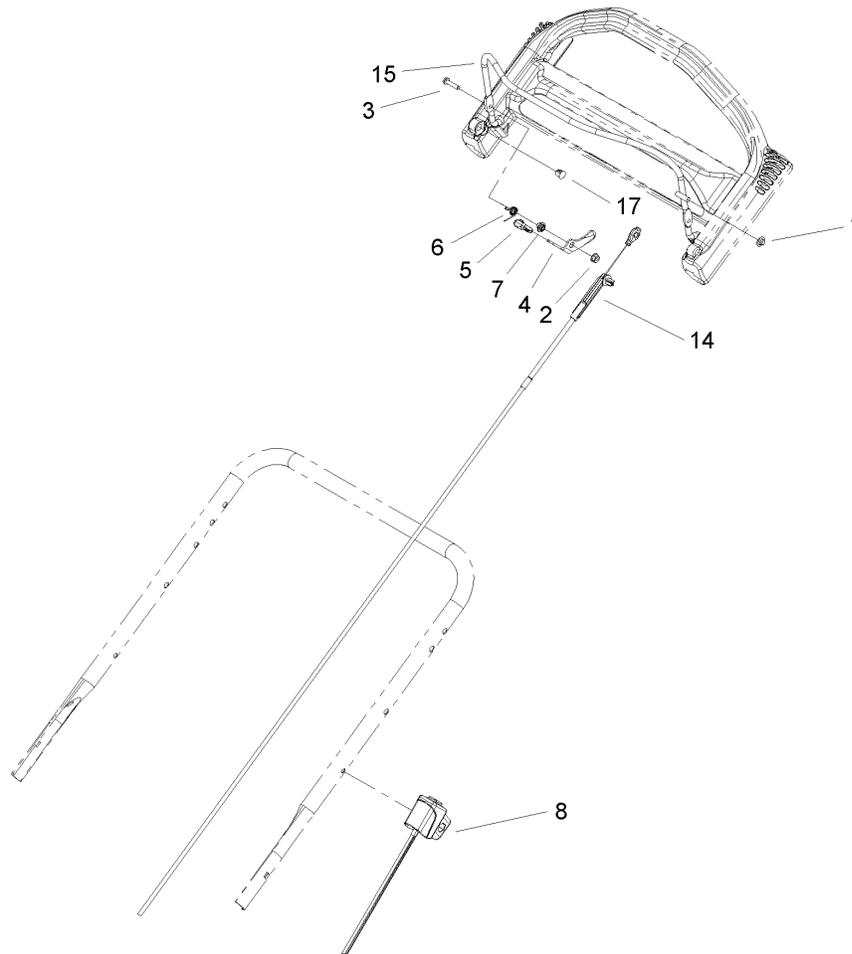

Handle and Cable Assembly





Ref	Part No.	Qty.	Description
1	3290-337	1	Nut-Speed
2	32128-17	1	Nut-Lock, Flange
3	106-9169	1	Screw
4	106-6802	1	Lever
5	106-6803	1	Knob
6	107-7462	1	Spring-Torsion
7	107-7463	1	Spacer
8	108-8161	1	Switch Housing ASM
14	108-8155	1	Cable ASM
15	108-3788-03	1	Bail-Brake
17	104-9368	1	Plug-Dome

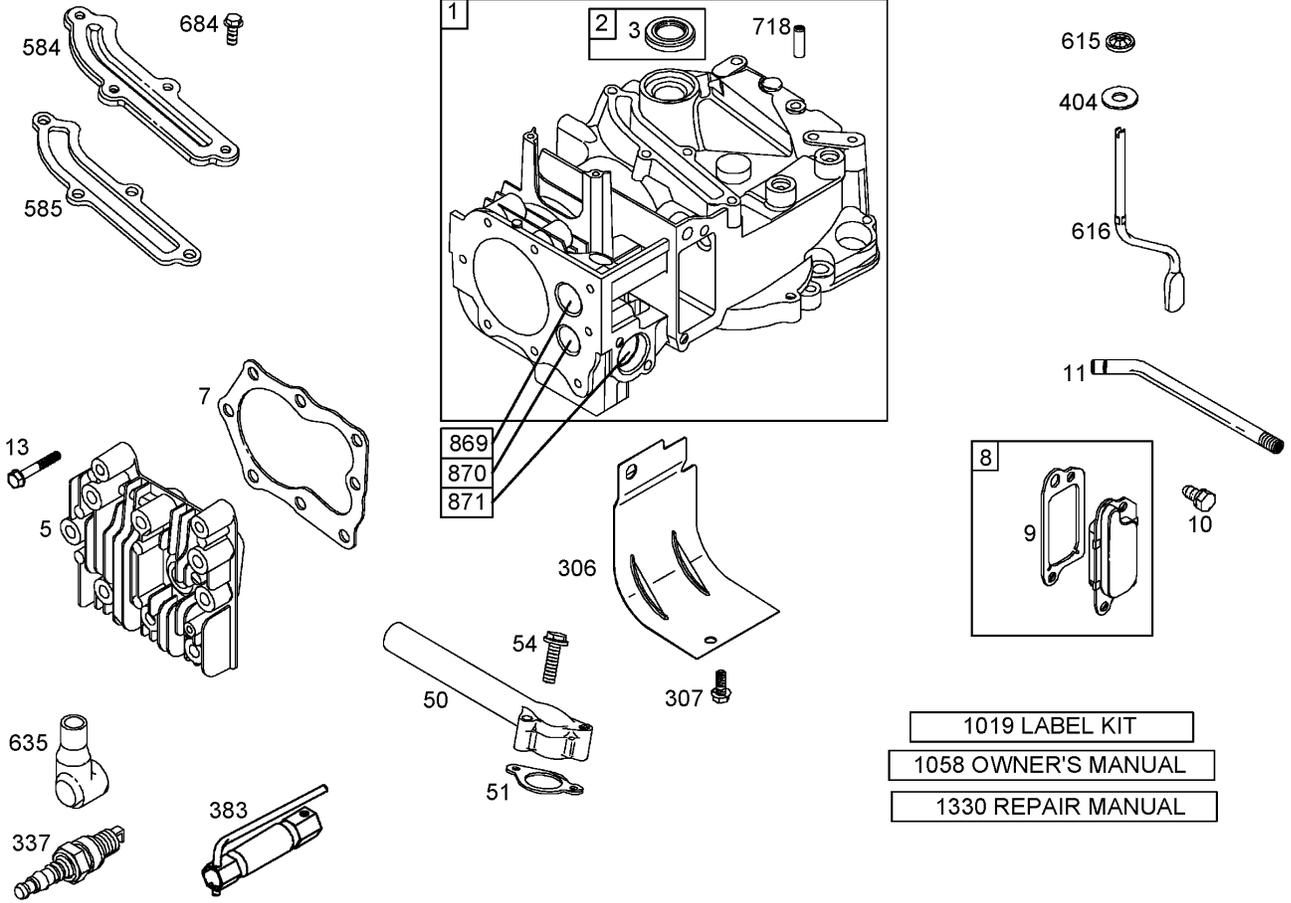

Cylinder Assembly Briggs and Stratton 125K02-0194-E1






Ref	Part No.	Qty.	Description
1	697322	1	Cylinder ASM
2	399269	1	Bushing/Seal Kit
3	299819	1	Seal-Oil
5	691160	1	Head-Cylinder
7	692249	1	Gasket-Head, Cylinder
8	695250	1	Breather ASM
9	699472	1	Gasket-Breather
10	691125	1	Screw
11	691781	1	Tube-Breather
13	690912	1	Screw
50	497465	1	Manifold-Intake
51	272199	1	Gasket-Intake
54	691650	1	Screw
306	690450	1	Shield-Cylinder
307	690345	1	Screw
337	802592	1	Plug-Spark
383	89838	1	Wrench-Plug, Spark
404	690272	1	Washer
584	697734	1	Cover-Passage, Breather
585	691879	1	Gasket-Passage, Breather
615	690340	1	Retainer-Shaft, Governor
616	698801	1	Crank-Governor
635	66538	1	Boot-Plug, Spark
684	690345	1	Screw

Ref	Part No.	Qty.	Description
718	690959	1	Pin-Locating
869	691155	1	Seat-Valve (Intake)
870	690380	1	Seat-Valve (Exhaust)
871	262001	1	Bushing-Guide (Exhaust)
871	63709	1	Bushing-Guide (Intake)
1019	494256	1	Label Kit
1058	275177	1	Manual-Owner's
1330	270962	1	Manual-Repair

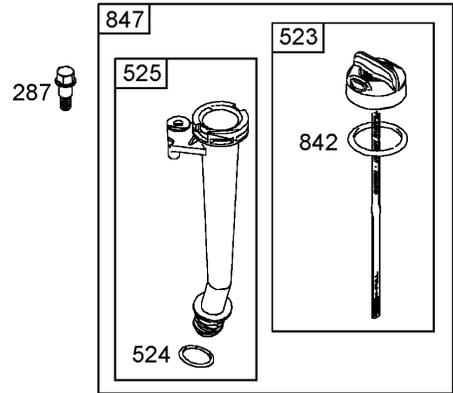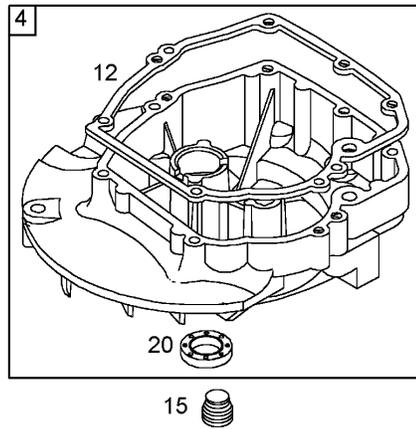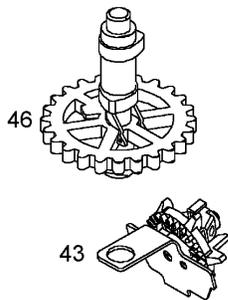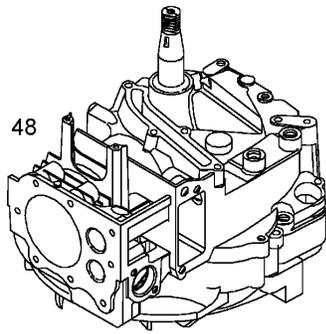

Crankcase Assembly Briggs and Stratton 125K02-0194-E1


Ref	Part No.	Qty.	Description
4	493279	1	Sump-Engine
12	692232	1	Gasket-Crankcase (.015 Thick, Standard)
15	691680	1	Plug-Drain, Oil
20	399781	1	Seal-Oil
22	691092	1	Screw
43	691997	1	Slinger-Governor/Oil
46	691449	1	Camshaft
48	696276	1	Short Block
287	690940	1	Screw
523	499621	1	Dipstick
524	692296	1	Seal-O Ring
525	495265	1	Tube-Dipstick
842	691031	1	Seal-O Ring
847	692047	1	Dipstick/Tube ASM

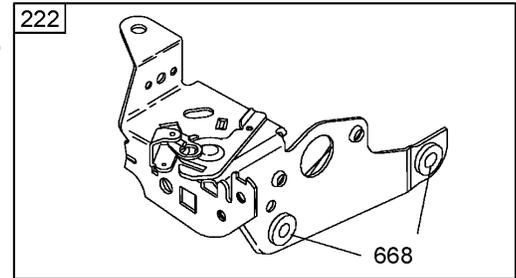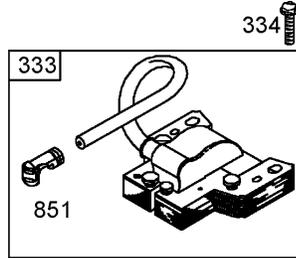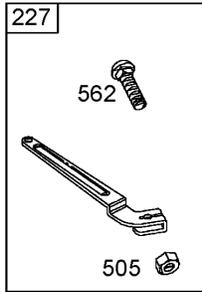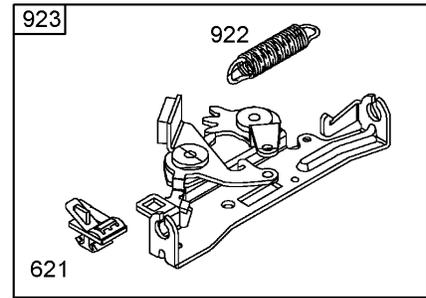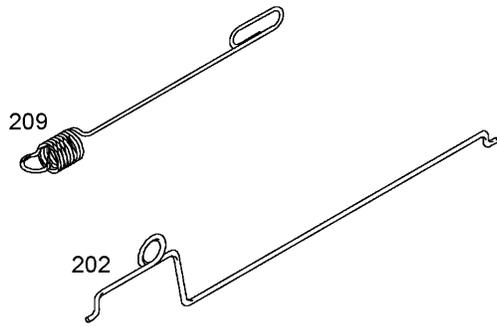

Governor Assembly Briggs and Stratton 125K02-0194-E1


Ref	Part No.	Qty.	Description
188	693399	1	Screw
202	691829	1	Link-Governor, Mechanical
209	691852	1	Spring-Governor
222	791128	1	Bracket-Control
227	690783	1	Lever-Control, Governor
333	802574	1	Armature-Magneto
334	691061	1	Screw
356	690791	1	Wire-Stop
505	691251	1	Nut
562	691119	1	Screw
621	692310	1	Switch-Stop
668	493823	1	Spacer
745	691648	1	Screw
851	493880	1	Terminal-Spark Plug
922	691831	1	Spring-Brake
923	691994	1	Brake ASM

--	--	--	--

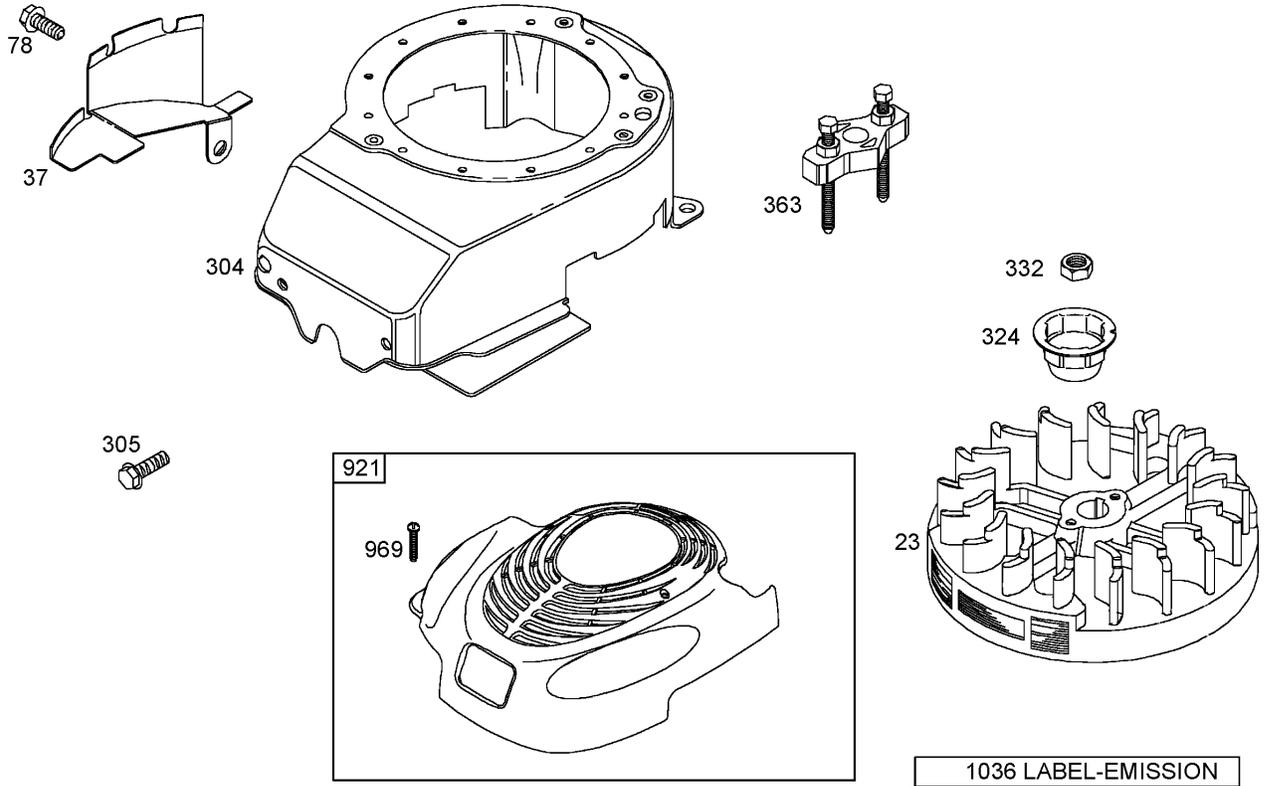

Blower Housing Assembly Briggs and Stratton 125K02-0194-E1

Ref	Part No.	Qty.	Description				
● 23	691992	1	Flywheel				
● 37	694086	1	Guard-Flywheel				
● 78	691108	1	Screw				
● 304	493294	1	Housing-Blower				
● 305	691108	1	Screw (Blower Housing)				
● 324	695161	1	Cup/Screen ASM				
● 332	690662	1	Nut				
● 363	19069	1	Puller-Flywheel				
● 921	790036	1	Cover-Housing, Blower				
● 969	691138	1	Screw				
● 1036	790411	1	Label-Emission				

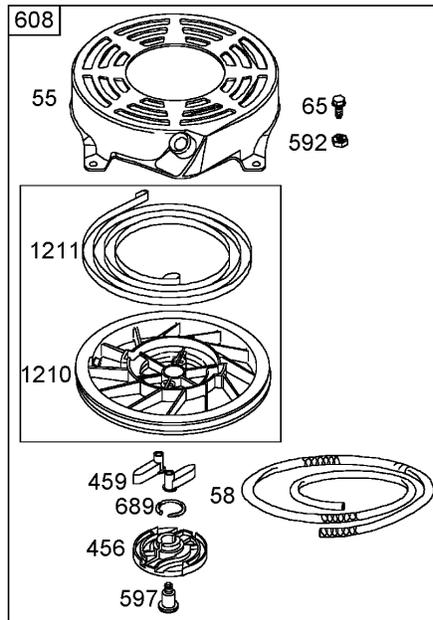

Starter Assembly Briggs and Stratton 125K02-0194-E1

Ref	Part No.	Qty.	Description				
55	691421	1	Housing-Starter, Rewind				
58	791362	1	Rope-Starter (Cut To Required Length)				
65	690837	1	Screw				
456	692299	1	Plate-Friction, Pawl				
459	281505	1	Ratchet-Pawl				
592	690800	1	Nut				
597	691696	1	Screw				
608	791363	1	Starter-Rewind				
689	691855	1	Spring-Friction				
1210	498144	1	Pulley/Spring ASM (Pulley)				
1211	498144	1	Pulley/Spring ASM (Spring)				

Attachments and Accessories

For 20793 - 53cm Super Recycler Lawnmower

Product Name

Model/Part

Traction Assist Handle Kit 108-8120

