



Workman[®] 3200 with Bed

Model No. 07361 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Hood and Bumper Assembly	 4	Transaxle Assembly	 37
Dash Panel Assembly	 5	Case Assembly Transaxle Assembly No. 105-4180	 38
Steering Assembly	 6	Gear Shaft Assembly Transaxle Assembly No. 105-4180	 39
Brake, Accelerator and Clutch Assembly	 8	Countershaft Assembly Transaxle Assembly No. 105-4180	 40
Master Cylinder Assembly No. 104-6782	 9	Shift Fork Assembly Transaxle Assembly No. 105-4180	 41
Hydraulic Brake Assembly	 10	Differential Gear Assembly Transaxle Assembly No. 105-4180	 42
Clutch Linkage Assembly	 11	Hydraulic Filter and Relay Assembly	 43
Shroud and Seat Assembly	 12	Battery Assembly	 44
Left Hand Seat Assembly	 13	Fuel Tank and Air Cleaner Assembly	 45
Right Hand Seat Assembly	 14	Air Cleaner Assembly No. 106-6732	 46
Roll-Over Protection System Assembly	 15	Full Bed and Side Panel Assembly	 47
Front Wheel Assembly	 16	Cylinder Assembly	 48
RH Front Brake Assembly No. 87-9170	 17	Crankshaft Assembly	 49
LH Front Brake Assembly No. 87-9180	 18	Cylinder Head Assembly	 50
Console Assembly	 19	Manifold Assembly	 51
Shift Assembly No. 106-7887	 21	Carburetor Assembly	 52
Front Suspension Assembly	 22	Cam Shaft Assembly	 53
Front Control Arm Assembly	 23	Oil Pan Assembly	 54
Lift Valve and Hydraulic Assembly	 24	Gear Cover Assembly	 55
Hydraulic Valve Assembly No. 43-1950	 26	Gear Housing Assembly	 56
Hydraulic Pump Assembly No. 106-6649	 27	Water Pump Assembly	 57
Rear Frame Assembly	 28	Governor Assembly	 58
Rear Axle Assembly	 29	Alternator Assembly	 59
Rear Brake Assembly No. 93-7125 (Right) and 93-7126 (Left)	 30	Starter Motor Assembly	 60
Driveshaft Assembly No. 98-2918	 31	Ignition Assembly	 61
Radiator and Hydraulic Pump Assembly	 32	Gasket Assembly	 62
Fan and Hydraulic Pump Drive Assembly	 33		
Tail Light and Fender Assembly	 34		
Engine Assembly	 35		
Engine Support Assembly	 36		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	INC.	incorporated
ASM.	assembly	LH.	left hand
BBC.	blade brake clutch	NI.	nylon insert
CARR.	carriage	NPTF.	national pipe thread fine
DEG.	degrees	PFH.	phillips flat head
EXT.	external	PPH.	phillips pan head
FH.	flat head	PPHTF.	phillips pan head thread forming
GA.	gauge	PRH.	phillips round head
HF.	hex flange	PTH.	phillips truss head
HH.	hex head	PTO.	power-take-off
HHF.	hex head flange	RH.	right hand
HHFTF.	hex head flange thread forming	ROPS.	roll-over-protection-system
HJ.	hex jam	SFH.	slotted fillister head
HLH.	hex lag head	SHH.	slotted hex head
HOC.	height-of-cut	SHWH.	slotted hex washer head
HSBH.	hex socket button head	SPH.	slotted pan head
HSFH.	hex socket flat head	SQH.	square head
HSH.	hex socket head	SRH.	slotted round head
HWH.	hex washer head	STD.	standard
HWHTF.	hex washer head thread forming	TAP.	self tapping
HYD.	hydraulic	TTH.	torx truss head


Footnotes

- ❶** Not illustrated
- ❷** Not serviced separately

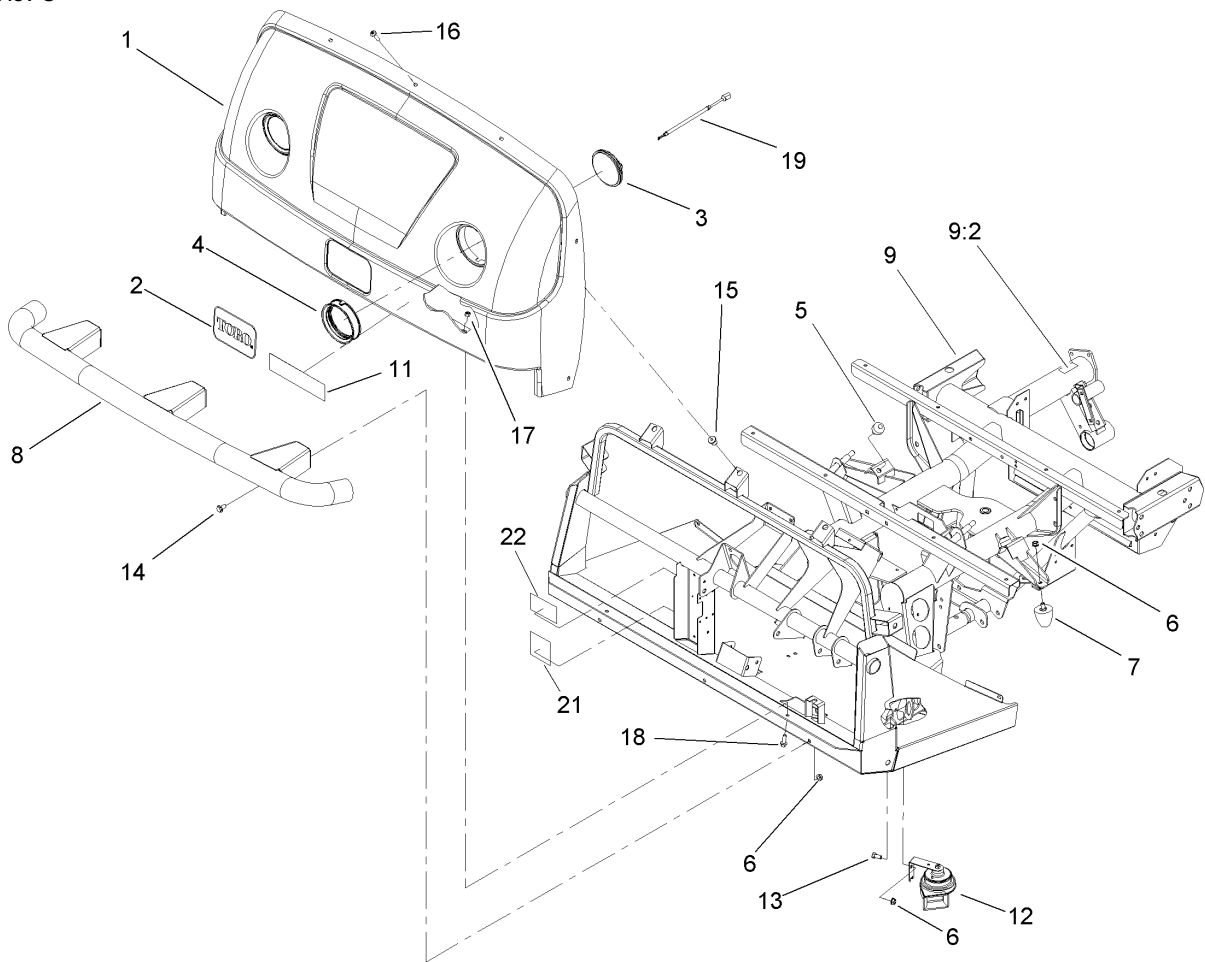

Hood and Bumper Assembly


Ref	Part No.	Qty.	Description				
1	106-2350	1	Hood ASM				
2	62-5550	1	Decal				
3	99-7310	2	Headlight				
4	99-7311	2	Mount-Headlight				
5	87-2440	2	Bumper-Rubber				
6	3290-357	9	Nut-HHF, Whiz				
7	26-0071	2	Snubber-Rubber				
8	106-2369-03	1	Bumper ASM				
9	106-7884	1	Operator Frame ASM				
9:2	93-7814	1	Decal-Danger				
11	106-2394	1	Decal				
12	116749	1	Horn				
13	323-4	1	Screw-HH				
14	3234-1	6	Screw-HHF				
15	106-7883	7	Nut-Well				
16	106-7922	7	Screw-PTH				
17	3296-29	2	Nut-Lock, NI				
18	3234-29	2	Screw-HHF				
19	106-2401	2	Harness-Headlight				
21	106-7894	1	Decal-Block, Fuse				
22	106-7896	1	Decal-Rating, Load				

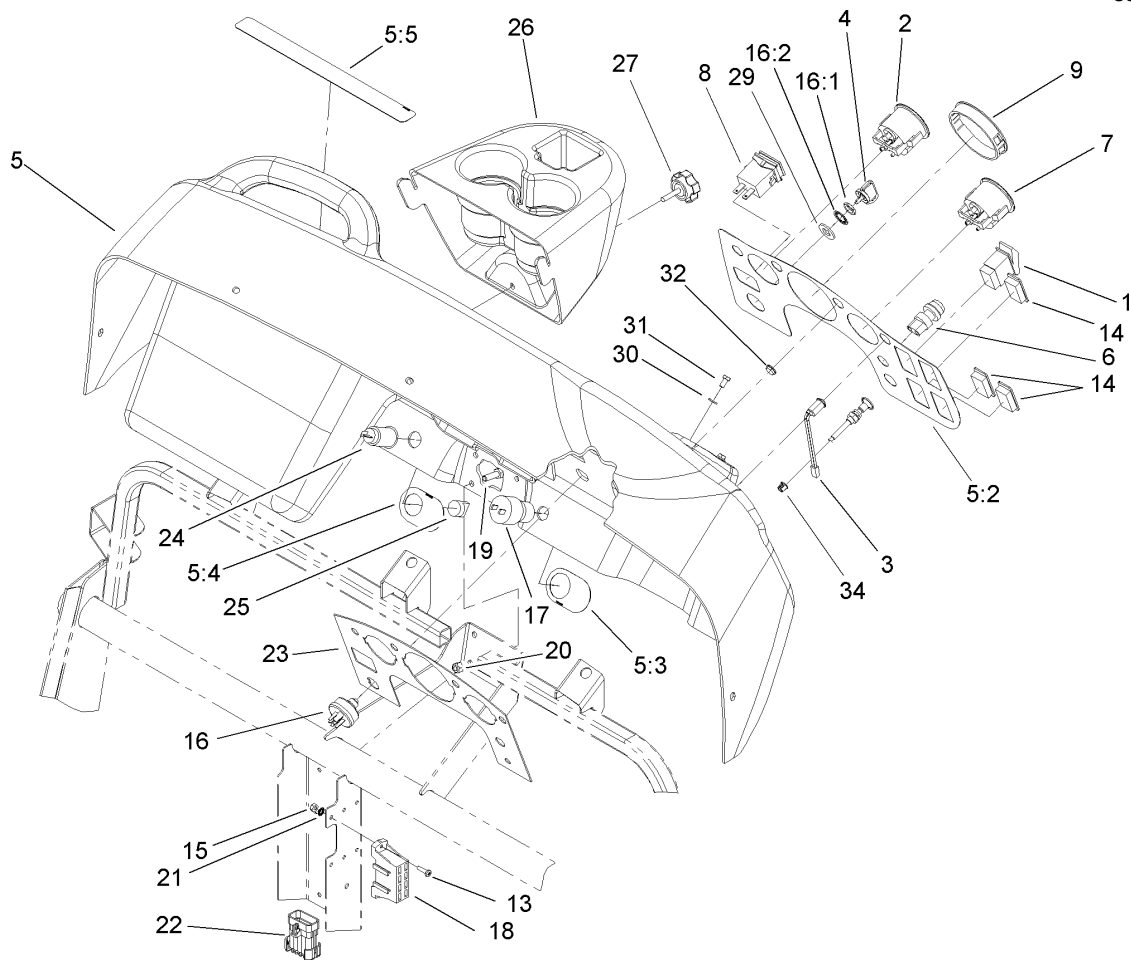 

Dash Panel Assembly

Ref	Part No.	Qty.	Description
1	95-8999	1	Switch
2	106-2406	1	Gauge-Temperature
3	95-7652	3	Light-Indicator
4	63-8360	1	Key-Ignition
5	106-7885	1	Dash ASM
5:2	106-2352	1	Decal-Dash
5:3	106-2355	1	Decal-Switch, Supervisor
5:4	106-2353	1	Decal-Powerpoint
5:5	106-2383	1	Decal-Warning, Dash
6	18-2830	1	Button-Horn
7	106-2405	1	Gauge-Fuel
8	94-4208	1	Hourmeter
9	106-2359	1	Plug-Cap
13	32105-13	2	Screw-SHH
14	99-7420	3	Plug-Hole
15	3296-2	2	Nut-Lock
16	27-2360	1	Switch-Key
16:1	218-446	1	Nut-Hex
16:2	218-447	1	Washer-Lock
17	94-5245	1	Switch-Key
18	106-7910	1	Harness-Wire, Front
18:8	114241	2	Fuse-7.5 Amp
18:9	109355	1	Fuse-15 Amp
19	322-4	4	Screw-HH

Ref	Part No.	Qty.	Description
20	3296-29	4	Nut-Lock, NI
21	3255-10	1	Washer-Lock / EXT
22	106-7908	1	Harness-Wire, Rear
22:8	100-4918	2	Diode
23	106-2360-03	1	Plate-Dash
24	99-7411	1	Point-Power
25	99-7416	1	Cap
26	106-2358	1	Cover-Reservoir
27	106-7017	1	Knob
29	9202624	1	Washer
30	33093-00	2	Washer-Flat
31	33113-012	2	Screw-HH
32	2410-64	1	Plug-Button
34	104-9368	1	Plug-Dome

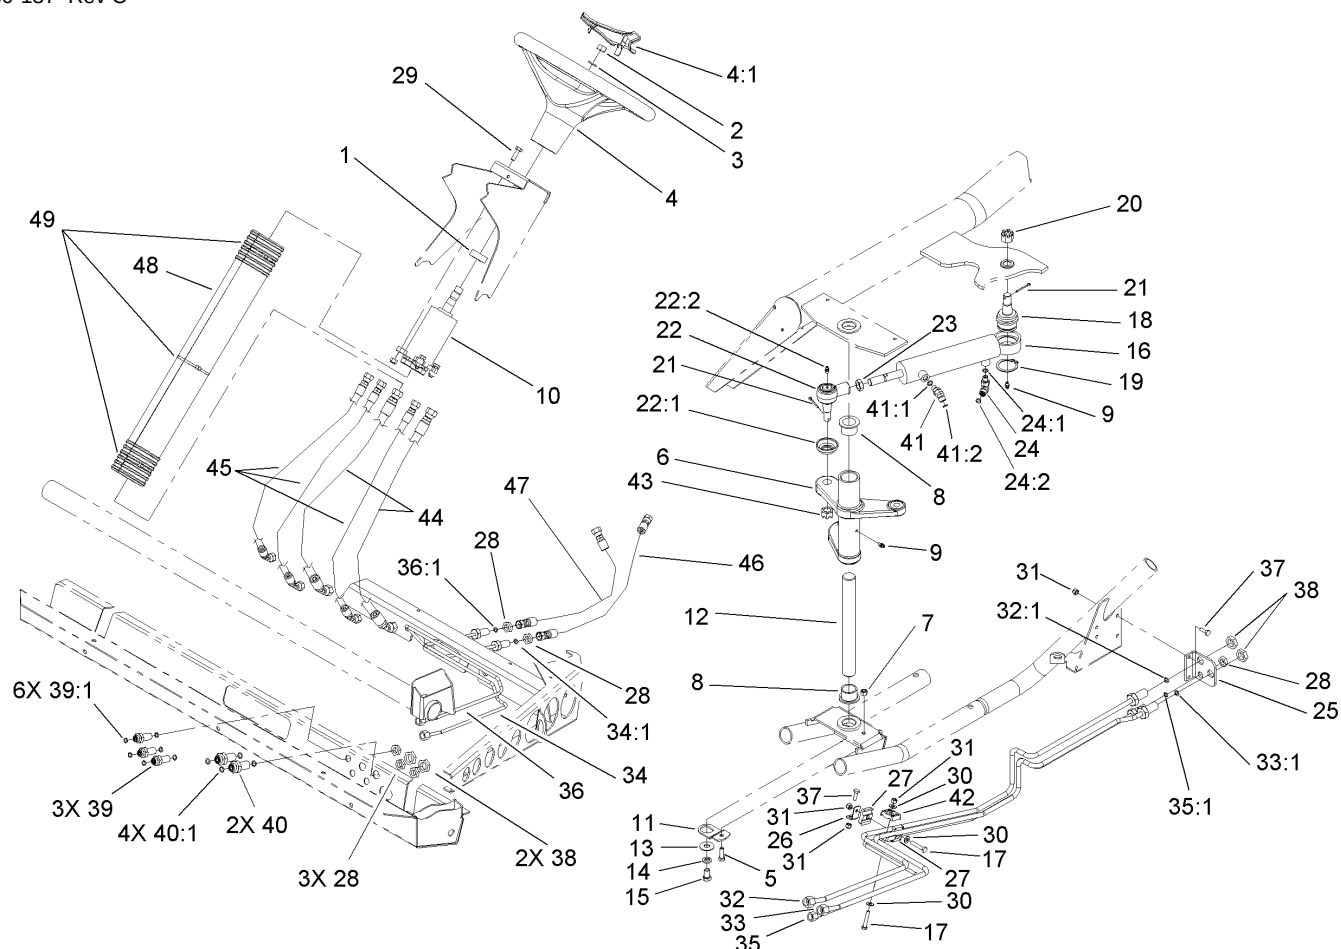 


Steering Assembly

Ref	Part No.	Qty.	Description
1	21-9260	1	Cover-Dust
2	3220-6	1	Nut-Jam
3	3253-8	1	Washer-Lock
4	98-1471	1	Wheel-Steering
4:1	98-1468	1	Cover-Wheel, Steering
5	322-5	1	Screw-HH
6	106-2536	1	Arm-Pitman
7	3296-29	1	Nut-Lock, NI
8	94-1291	2	Bushing
9	302-5	2	Fitting-Grease
10	106-6726	1	Steering Pump ASM
10:1	106-6716	1	Seal Kit
11	106-2287	1	Plate
12	106-2271	1	Shaft-Pivot
13	3256-5	1	Washer-Flat
14	3253-6	1	Washer-Lock
15	324-2	1	Screw-HH
16	106-2262	1	Cylinder-HYD
16:1	106-6712	1	Seal Kit
17	321-9	2	Screw-HH
18	106-6774	1	Joint-Ball
19	32151-104	1	Ring-Retaining, External
20	32136-14	1	Nut-SHH
21	3272-12	2	Pin-Cotter


Ref	Part No.	Qty.	Description
22	106-6898	1	Joint-Ball
22:1	106-6896	1	Seal
22:2	302-5	1	Fitting-Grease
23	3220-11	1	Nut-Jam
24	340-132	1	Fitting-HYD, 90 DEG
24:1	237-78	1	O-Ring
24:2	237-21	1	O-Ring
25	106-7801-03	1	Bracket-Line, Steering
26	106-7807	1	Bracket-Line, Steering
27	106-7839	2	Clamp-Tube
28	340-78	6	Locknut-Bulkhead
29	33114-020	4	Screw-HH
30	3256-22	3	Washer-Flat
31	3296-42	5	Nut-Lock, NI
32	106-7802	1	Tube-HYD
32:1	237-22	1	O-Ring
33	106-7803	1	Tube-HYD
33:1	237-22	1	O-Ring
34	106-7804	1	Tube-HYD
34:1	237-21	1	O-Ring
35	106-7805	1	Tube-HYD
35:1	237-21	1	O-Ring
36	106-7806	1	Tube-HYD
36:1	237-21	1	O-Ring



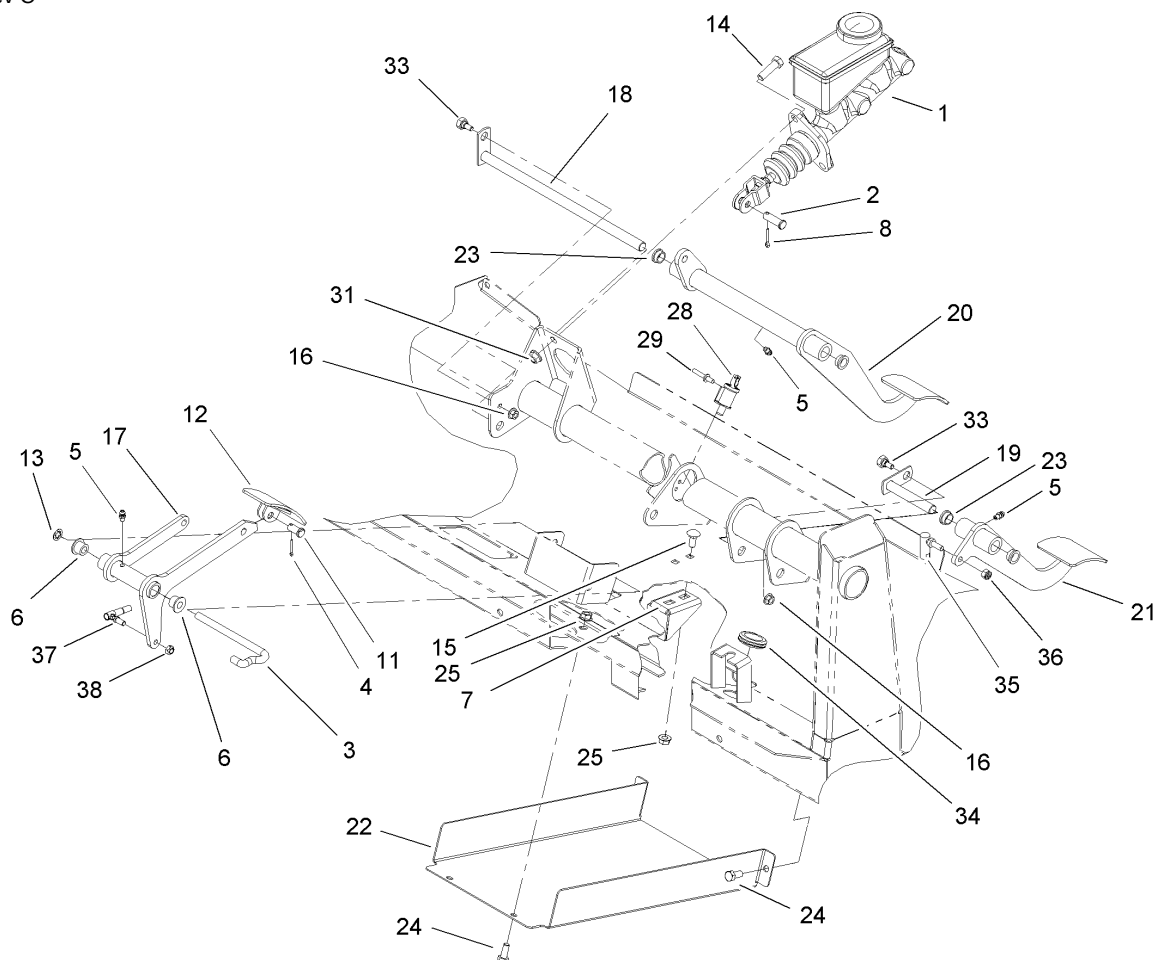 


Brake, Accelerator and Clutch Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	104-6782	1	Cylinder-Master	29	3269-23	2	Rivet-Pop
2	283-2	1	Pin-Clevis	31	3290-357	2	Nut-HHF, Whiz
3	87-2880	1	Shaft-Pedal, Accelerator	33	63-3410	2	Screw-Shoulder
4	3272-6	1	Pin-Cotter	34	240-5	1	Grommet
5	302-5	3	Fitting-Grease	35	2411-34	1	Joint-Ball
6	256-259	2	Bushing-Flange	36	3296-3	1	Nut-Lock
7	106-2421	1	Bracket-Mount, Cable	37	18-1720	1	Governor Ball Joint ASM
8	3272-10	1	Pin-Cotter	38	3296-13	1	Nut-Lock NI
11	283-85	1	Pin-Clevis				
12	93-8969-03	1	Pedal				
13	32151-56	1	Ring-Retaining, External				
14	323-7	2	Screw-HH				
15	3230-1	2	Bolt-CARR				
16	32128-33	2	Nut-HF				
17	106-2471-03	1	Arm-Pedal, Accelerator				
18	106-2475	1	Brake Shaft ASM				
19	106-2476	1	Clutch Shaft ASM				
20	106-2461-03	1	Brake Pedal ASM				
21	106-2457-03	1	Clutch Pedal ASM				
22	106-2427-03	1	Cover				
23	256-156	4	Bushing-Flange				
24	322-3	4	Screw-HH				
25	32128-20	6	Nut-HF				
28	55-7120	1	Switch-Brake, Parking				

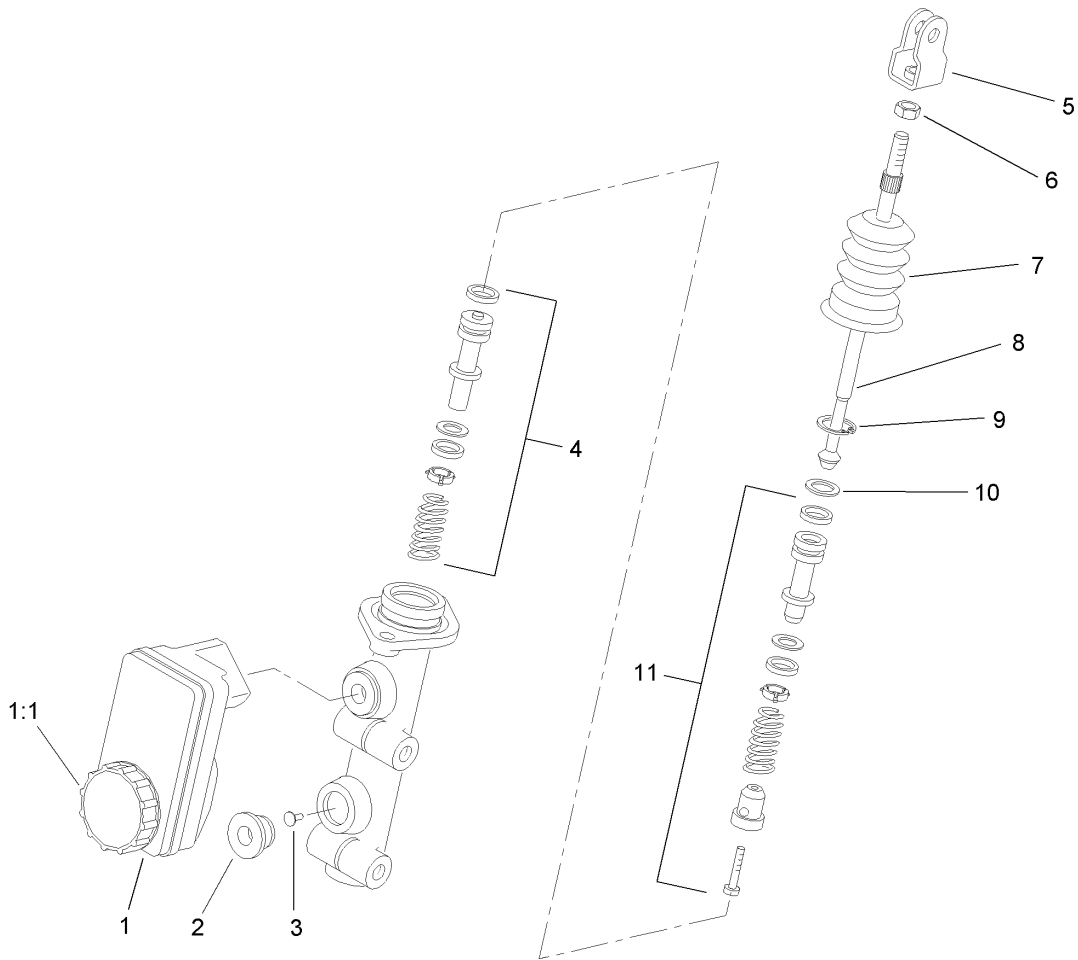 


Master Cylinder Assembly No. 104-6782

Ref	Part No.	Qty.	Description				
1	104-6845	1	Reservoir ASM				
1:1	92-4112	1	Cap ASM				
2	93-8971	2	Seal-Port, Flange				
3	92-4103	1	Pin-Stop				
4	92-4102	1	Secondary Piston ASM				
5	92-4110	1	Clevis				
6	21-0360	1	Nut-Hex				
7	94-5209	1	Cover-Dust				
8	94-5210	1	Rod-Push				
9	92-4109	1	Ring-Snap				
10	92-4108	1	Retainer-Washer				
11	92-4101	1	Primary Piston ASM				

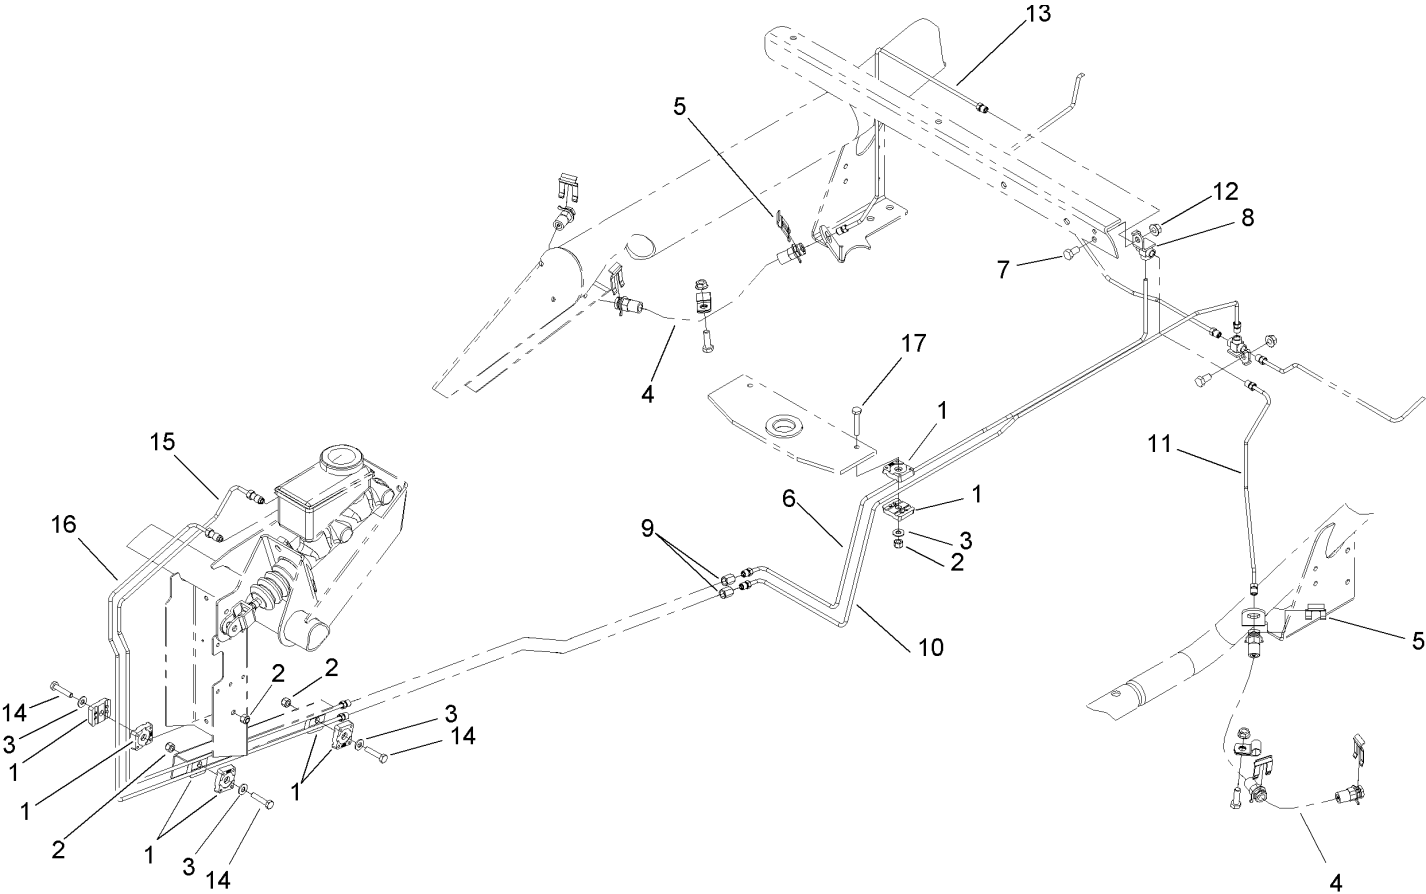 

Hydraulic Brake Assembly


Ref	Part No.	Qty.	Description				
1	87-7660	8	Clamp-Tube				
2	3296-42	4	Nut-Lock, NI				
3	3256-22	4	Washer-Flat				
4	93-7123	2	Front Brake Hose ASM				
5	87-3580	2	Clip-Retainer				
6	106-6686	1	Tube ASM				
7	322-2	1	Screw-HH				
8	87-3560	1	Tee				
9	87-3570	2	Union				
10	106-6687	1	Tube ASM				
11	106-6688	1	Tube ASM				
12	32128-20	1	Nut-HF				
13	106-6689	1	Tube ASM				
14	321-8	3	Screw-HH				
15	106-6683	1	Tube ASM				
16	106-6684	1	Tube ASM				
17	321-9	1	Screw-HH				

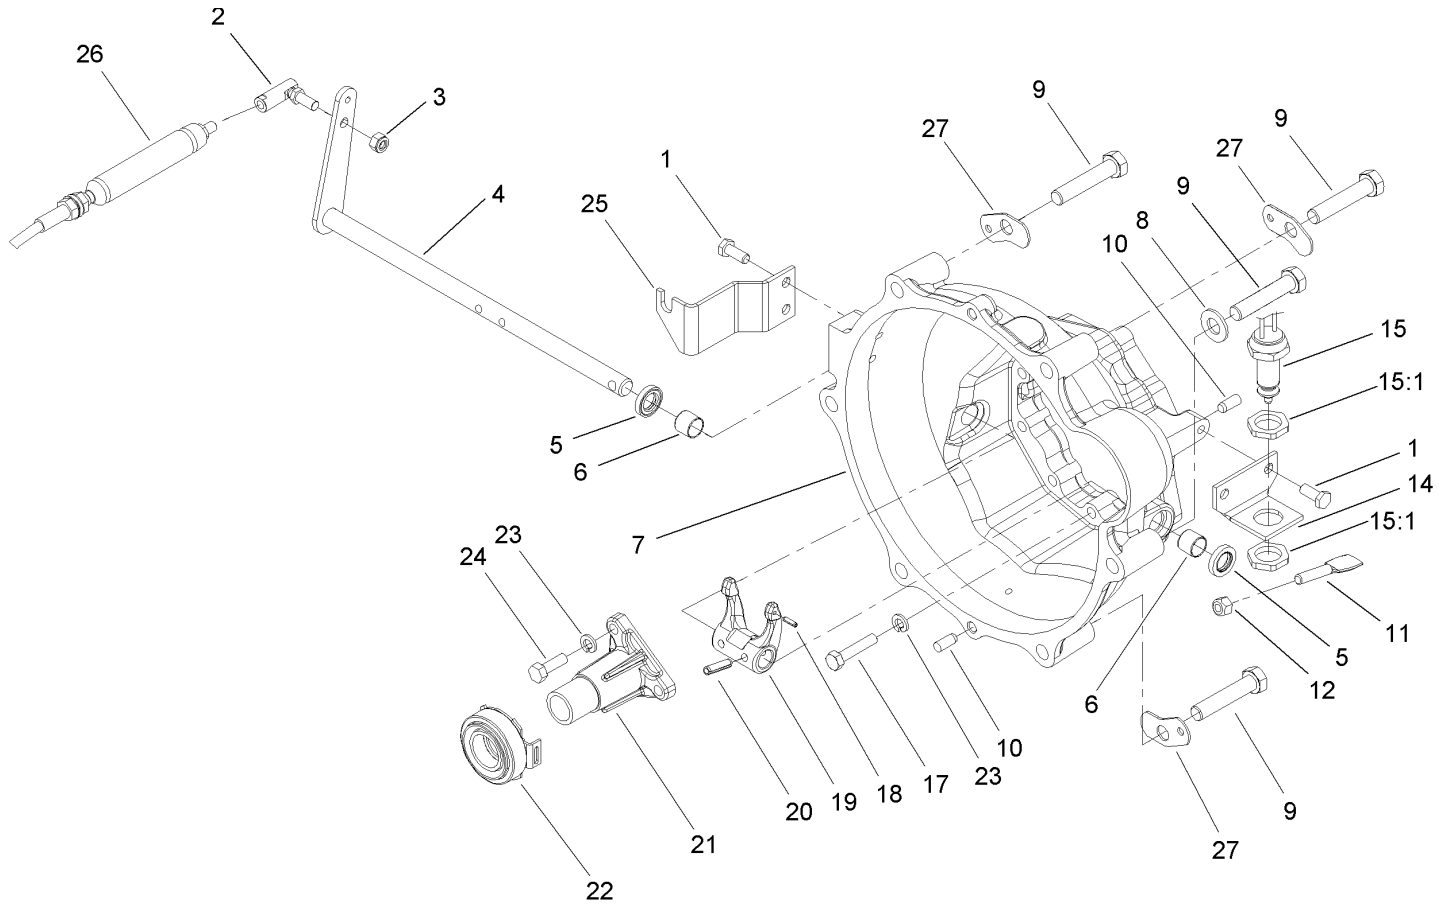 

Clutch Linkage Assembly


Ref	Part No.	Qty.	Description
1	33114-020	4	Screw-HH
2	2411-33	1	Balljoint-RH (W/Grommet)
3	3296-4	1	Nut-Lock
4	105-1702	1	Release Shaft ASM
5	87-1920	2	Seal-Oil
6	87-3770	2	Bushing-Housing, Bell
7	104-9249	1	Housing-Bell
8	3256-26	3	Washer-Flat
9	3215-2	6	Screw-HH
10	87-1910	4	Pin-Dowel
11	87-5360	1	Paddle-Clutch, Switch
12	3296-29	1	Nut-Lock, NI
14	87-5350	1	Bracket-Clutch, Switch
15	87-5490	1	Switch-Clutch
15:1	3218-20	2	Nut-Jam
17	33114-040	9	Screw-HH
18	32121-7	1	Pin-Roll, Slotted
19	87-5300	1	Fork-Clutch
20	32121-24	2	Pin-Spring
21	87-5320	1	Release-Guide
22	87-2100	1	Bearing-Out, Throw
23	3253-4	12	Washer-Lock
24	33114-025	3	Screw-HH
25	106-2523	1	Bracket-Clutch

Ref	Part No.	Qty.	Description
26	106-2450	1	Cable-Clutch
27	87-6410	3	Bracket-Harness

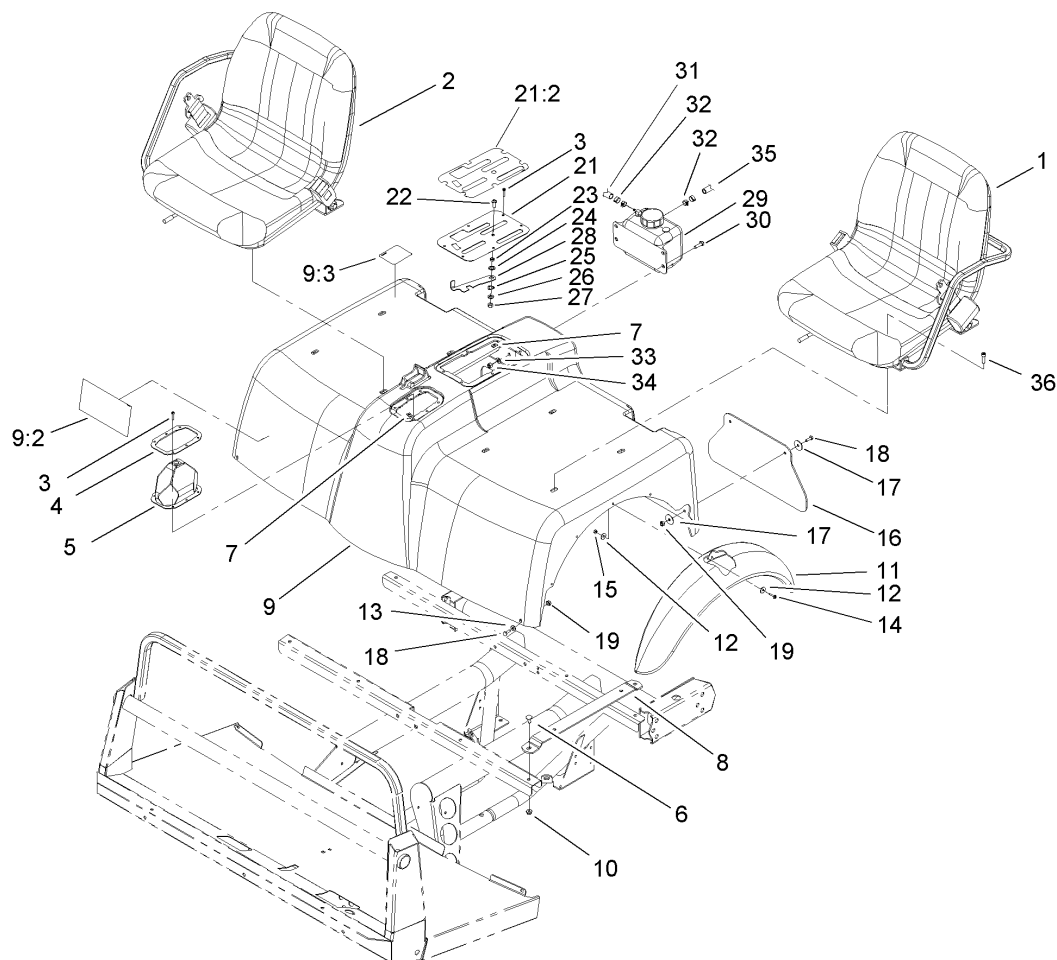 


Shroud and Seat Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
②1		1	LH Seat ASM	23	82-4240	1	Spacer-Bearing
②2		1	RH Seat ASM	24	94-8196	1	Washer-Nylon
3	32144-36	12	Screw-PPH	25	3290-221	1	Washer-Spring
4	87-3760-03	1	Plate-Boot, Shift	26	3256-23	1	Washer-Flat
5	87-8620	1	Shift Boot ASM	27	3296-29	1	Nut-Lock, NI
6	3230-1	8	Bolt-CARR	28	106-7984-03	1	Lever-Detent
7	106-2388	12	Clip-Fastener	29	87-3710	1	Reservoir-Coolant
8	107-7957-03	4	Seat Bracket ASM	30	322-5	4	Screw-HH
9	106-2362	1	Seatbase ASM	31	71-3381	1	Hose-Fuel
9:2	106-2384	1	Decal-Reference, Quick	32	92-2379	2	Clamp-Hose
9:3	93-9448	1	Decal-Fuel	33	3256-23	4	Washer-Flat
10	104-8300	16	Nut-Flange, NI	34	3296-29	4	Nut-Lock, NI
11	106-2375	2	Fender-Front	35	71-3383	1	Hose-Fuel
12	3256-61	20	Washer-Flat	36	3274-22	8	Screw-HSH
13	3256-22	2	Washer-Flat				
14	32105-13	10	Screw-SHH				
15	3296-2	10	Nut-Lock				
16	106-2378	2	Mudflap				
17	3256-55	8	Washer-Flat				
18	321-4	6	Screw-HH				
19	3296-16	6	Nut-Lock, NI				
21	106-7886	1	Control Plate ASM				
21:2	106-2377	1	Decal-Console				
22	3274-55	1	Screw-HSBH				

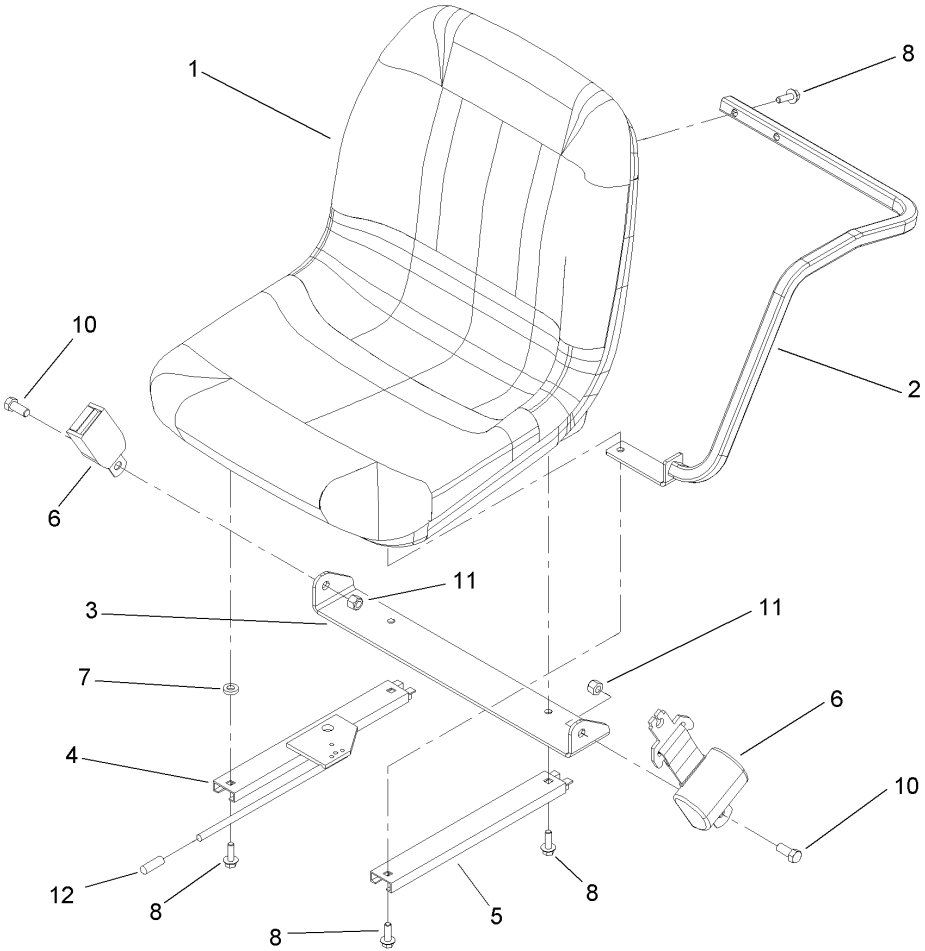 


Left Hand Seat Assembly

Ref	Part No.	Qty.	Description				
1	106-6672	1	Seat				
2	106-7842	1	LH Armrest ASM				
3	106-7845	1	Bracket-Belt, Seat				
4	106-7847	1	Adjuster-Seat, W/Handle				
5	107-7959	1	Adjuster-Slave, 7 Inch				
6	106-7848	1	Seat Belt ASM				
7	80-7730	1	Spacer				
8	3234-29	6	Screw-HHF				
10	3212-4	2	Screw-HH				
11	3296-7	2	Nut-Lock				
12	106-7953	1	Grip-Gray				

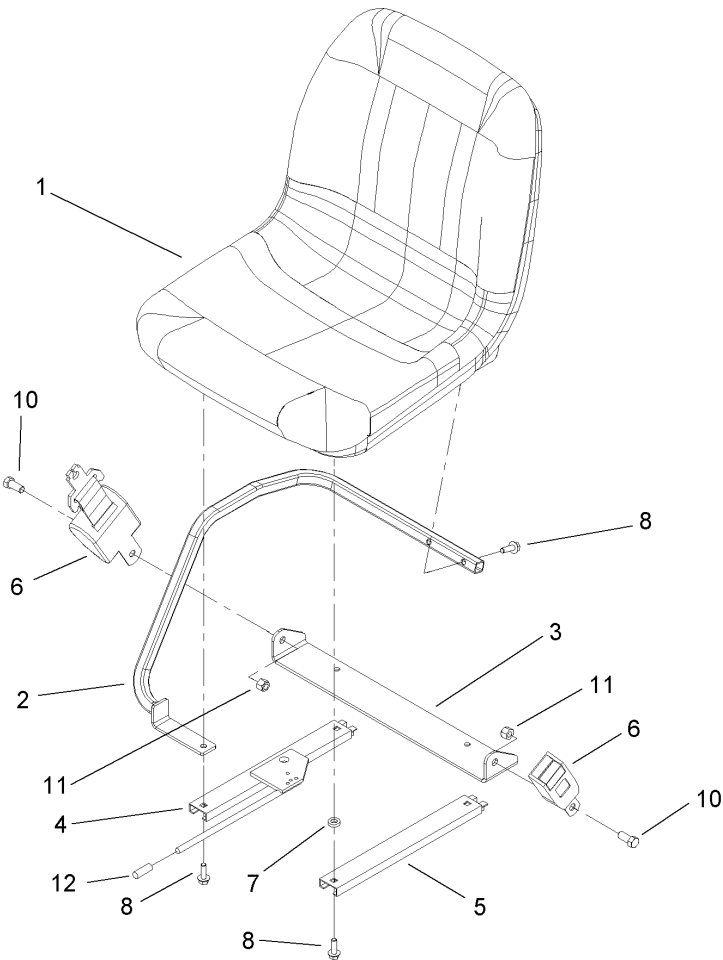 


Right Hand Seat Assembly

Ref	Part No.	Qty.	Description				
1	106-6672	1	Seat				
2	106-7844	1	RH Armrest ASM				
3	106-7845	1	Bracket-Belt, Seat				
4	106-7847	1	Adjuster-Seat, W/Handle				
5	107-7959	1	Adjuster-Slave, 7 Inch				
6	106-7848	1	Seat Belt ASM				
7	80-7730	1	Spacer				
8	3234-29	6	Screw-HHF				
10	3212-4	2	Screw-HH				
11	3296-7	2	Nut-Lock				
12	106-7953	2	Grip-Gray				

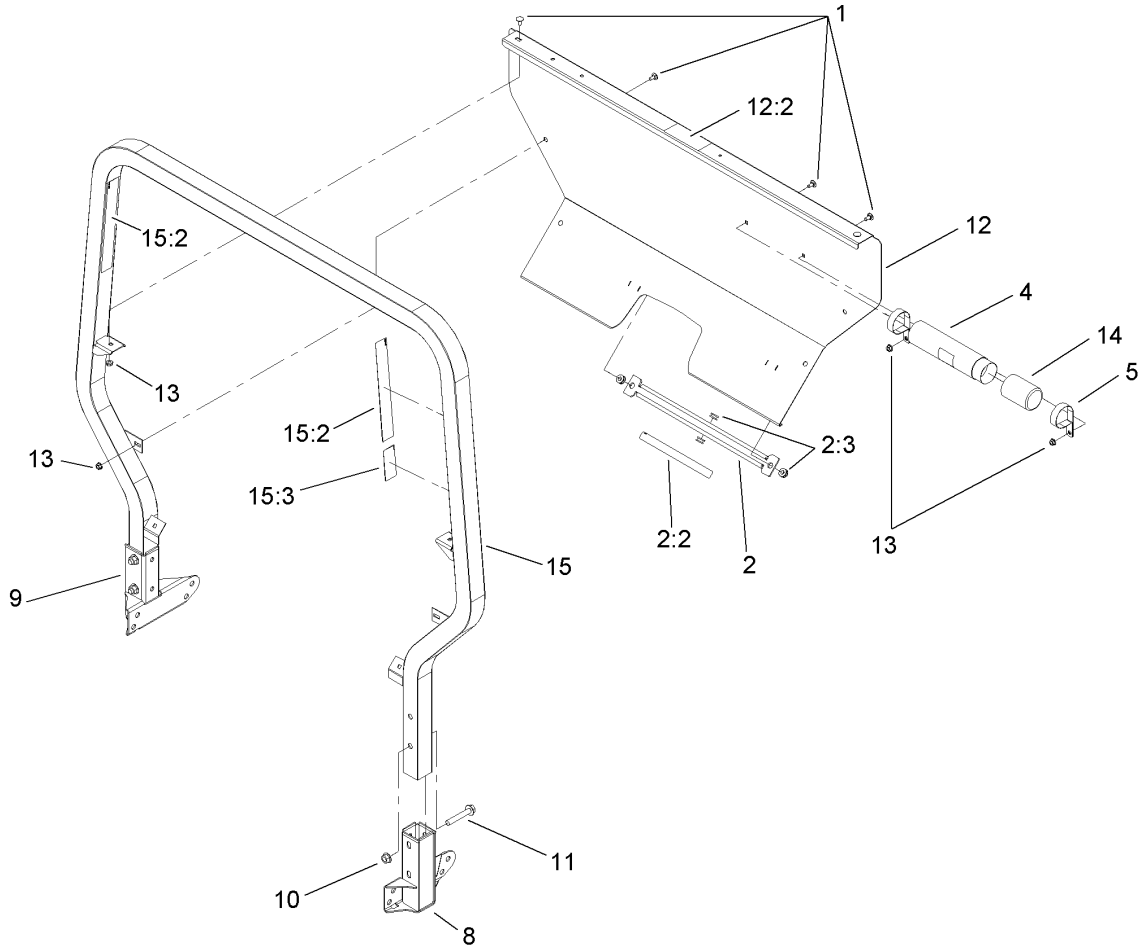 

Roll-Over Protection System Assembly


Ref	Part No.	Qty.	Description				
1	3230-18	8	Screw-CARR				
2	105-7960	1	Bed Support ASM				
2:2	93-9852	1	Decal-Warning				
2:3	92-5972	4	Grommet-Rubber				
4	104-7050	1	Housing-Manual				
5	2412-133	2	R-Clamp				
8	87-6950-03	1	LH Receiver ASM				
9	87-6960-03	1	RH Receiver ASM				
10	32128-23	4	Nut-HF				
11	3234-40	4	Screw-HF				
12	106-2409	1	ROPS Cover ASM				
12:2	105-4215	1	Decal-Caution				
13	32128-20	8	Nut-HF				
14	104-7048	1	Cap-Housing				
15	106-2412	1	ROPS ASM				
15:2	106-7767	2	Decal-ROPS				
15:3	93-9850	1	Decal-Roll Over				

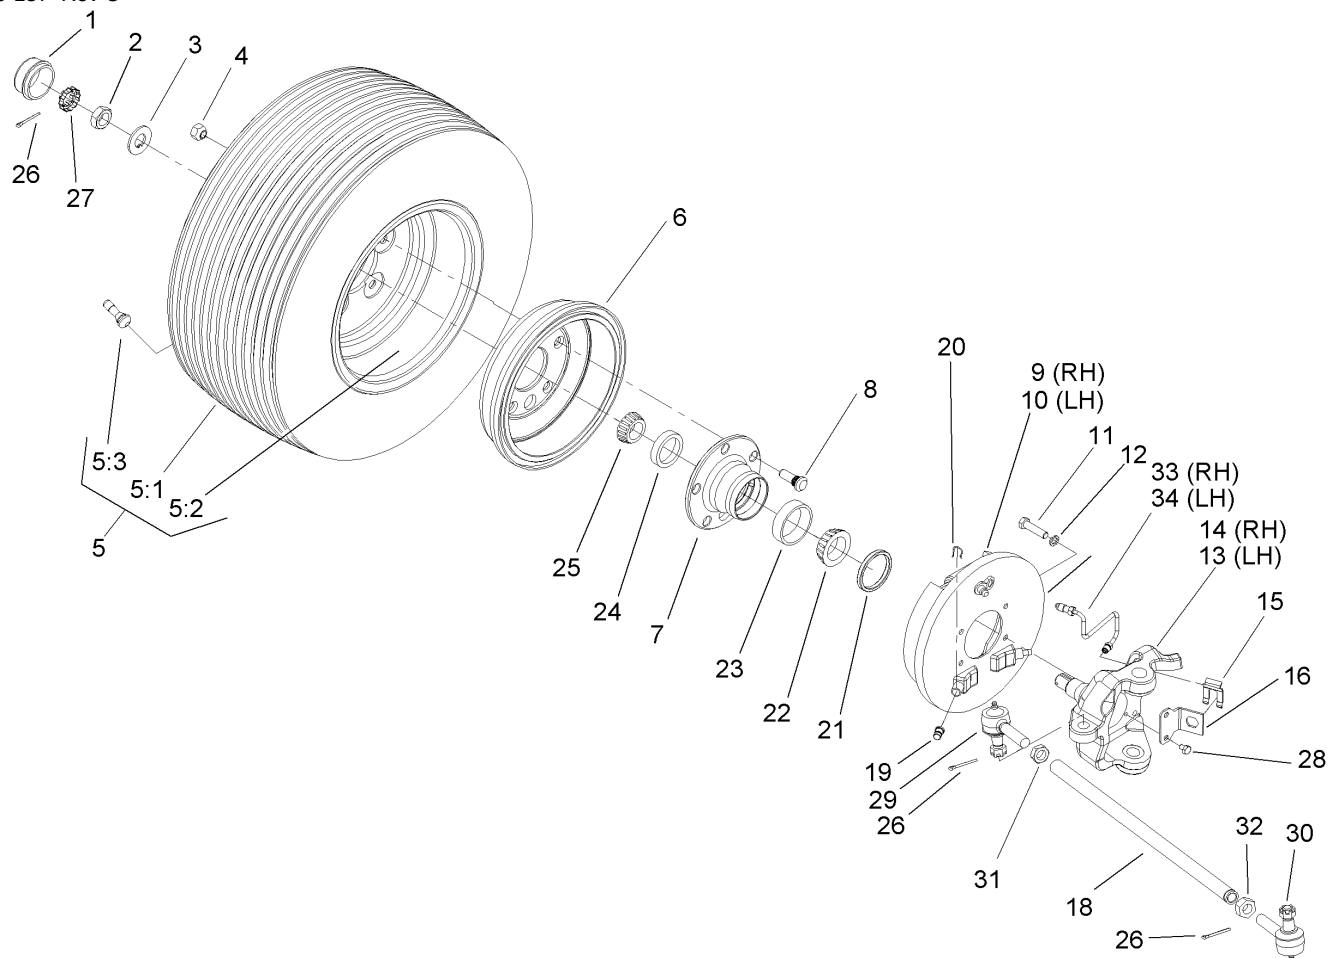 

Front Wheel Assembly


Ref	Part No.	Qty.	Description
1	241-119	2	Cap-Dust
2	3220-7	2	Nut-Jam
3	93-0309	2	Washer-Tab
4	23-7270	10	Nut-Wheel
5		2	Tire And Wheel ASM
5:1	106-7862	1	Tire
5:2	87-5720	1	Front Rim ASM
5:3	232-27	1	Stem-Valve
6	93-7128	2	Drum-Brake
7	87-5560	2	Hub-Front
8	87-8730	10	Stud
9	87-9170	1	RH Front Brake ASM
10	87-9180	1	LH Front Brake ASM
11	323-6	8	Screw-HH
12	3253-21	8	Washer-Lock
13	106-6745	1	Spindle-LH
14	106-6746	1	Spindle-RH
15	87-3580	2	Clip-Retainer
16	106-6747	2	Bracket-Spindle
18	106-2327	2	Tie Rod-Steering
19	87-3450	2	Plug-Plate, Brake (Front)
20	87-3310	2	Clip-Cable, Brake
21	87-3590	2	Seal-Bearing
22	254-106	2	Cone-Bearing, Tapered

Ref	Part No.	Qty.	Description
23	254-107	2	Cup-Bearing, Tapered
24	254-72	2	Bearing-Cup, Tapered
25	254-94	2	Bearing-Cone, Tapered
26	3272-12	2	Pin-Cotter
27	93-0307	2	Nut-Lock, Retainer
28	321-1	4	Screw-HH
29	106-6694	2	Rod End-Tie, RH
30	106-6695	2	Rod End-Tie, LH
31	3220-11	2	Nut-Jam
32	3218-21	2	Nut-Jam
33	106-7970	1	RH Brake Tube ASM
34	106-7971	1	LH Brake Tube ASM

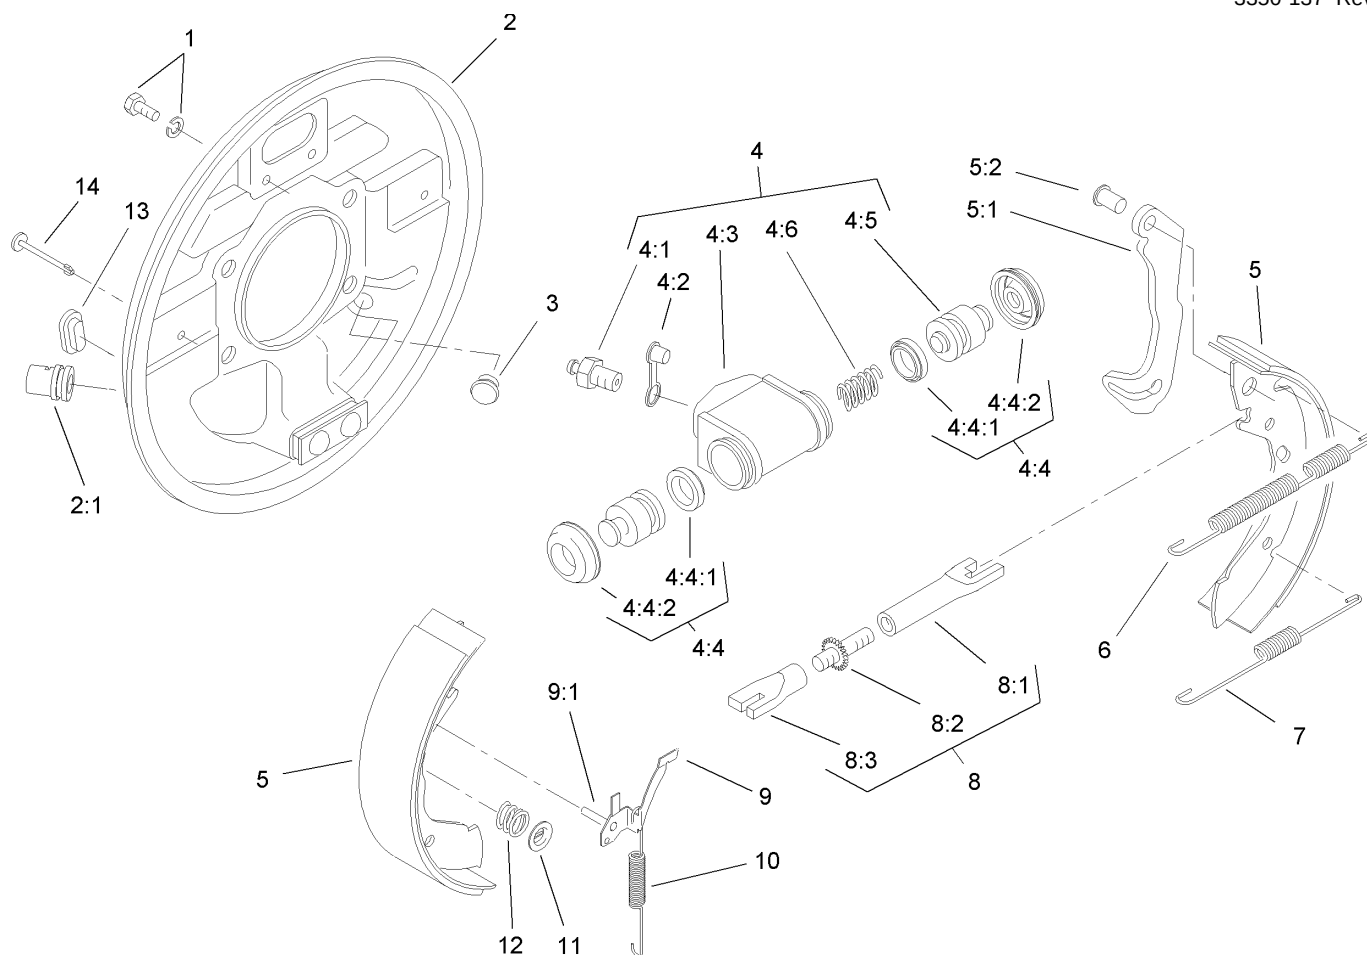 

RH Front Brake Assembly No. 87-9170


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	92-4135	2	Bolt-Set	10	92-4151	1	Spring-Adjuster, RH
2	92-4100	1	RH Backplate ASM	11	92-4131	2	Washer-Hold Down, Shoe
2:1		1	Guide-Pipe	12	92-4152	2	Spring-Hold Down, Shoe
3	92-4146	1	Plunger ASM	13	92-4134	2	Plug-Inspection
4	92-4118	1	Wheel Cylinder ASM	14	92-4133	2	Pin-Hold Down, Shoe
4:1	92-4113	1	Screw-Bleed				
4:2	92-4114	1	Cap-Screw, Bleed				
4:3		1	Body				
4:4	92-4119	1	Seal Kit				
4:4:1		2	Seal-L Type				
4:4:2		2	Cover-Dust				
4:5		2	Piston				
4:6		1	Spring				
5	92-4143	1	Lined Shoe Kit				
5:1		1	Lever-Operating				
5:2		1	Pin				
6	92-4148	1	Spring-Return, Shoe (Upper, RH)				
7	92-4149	1	Spring-Return, Shoe (Lower)				
8	92-4145	1	RH Adjustor ASM				
8:1		1	Pushrod-Female				
8:2		1	Bolt-Adjuster				
8:3		1	Sleeve-Adjuster				
9	92-4124	1	RH Pawl Lever ASM				
9:1		1	Pin-Pawl				

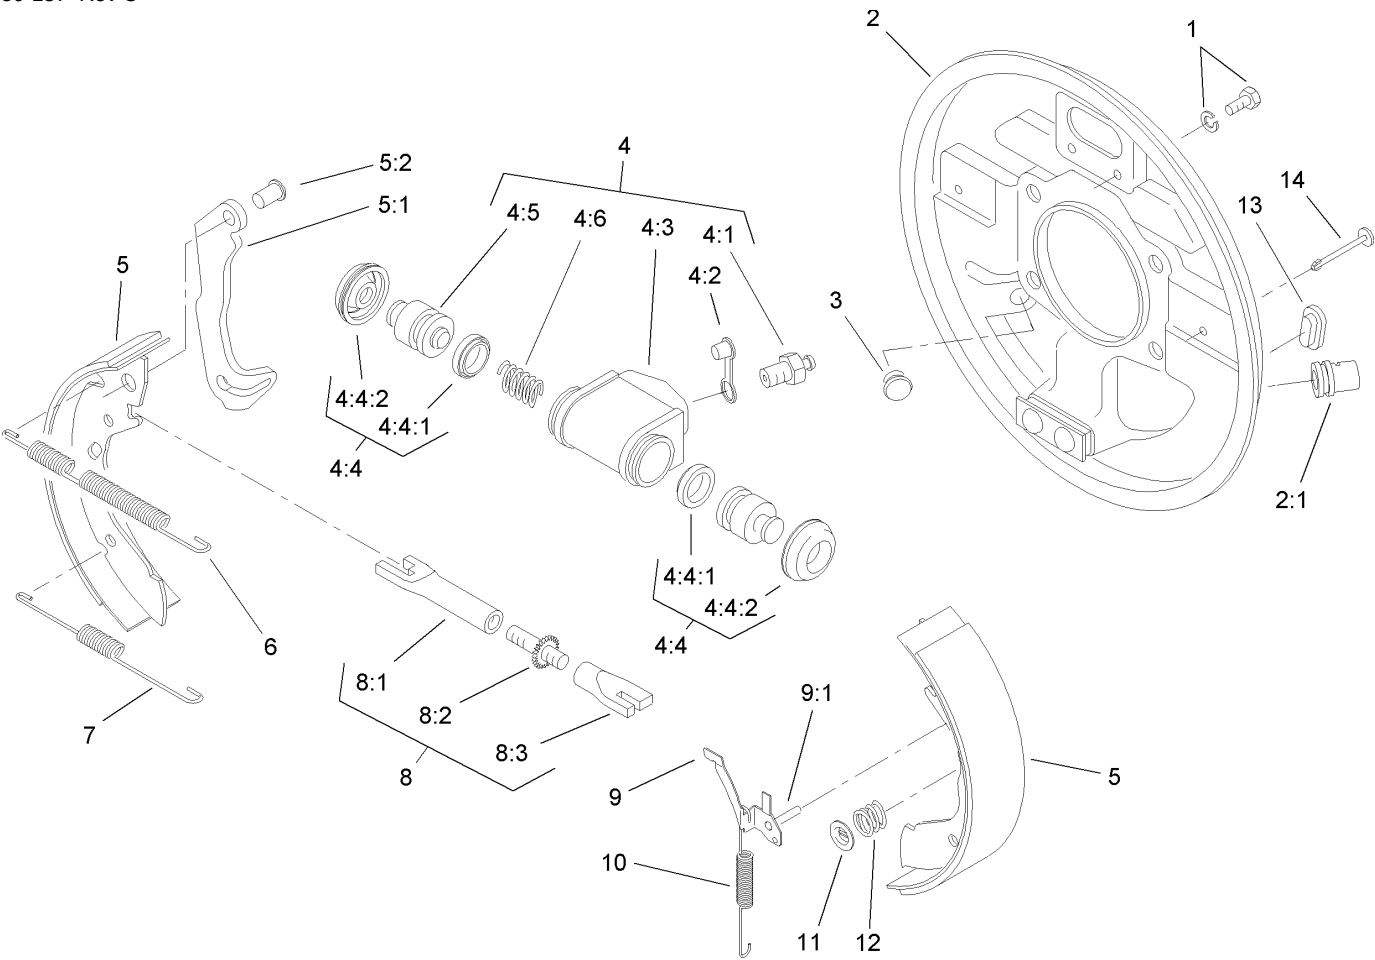 

LH Front Brake Assembly No. 87-9180

Ref	Part No.	Qty.	Description
1	92-4135	2	Bolt-Set
2	92-4136	1	LH Backplate ASM
2:1		1	Guide-Pipe
3	92-4146	1	Plunger ASM
4	92-4117	1	Wheel Cylinder ASM
4:1	92-4113	1	Screw-Bleed
4:2	92-4114	1	Cap-Screw, Bleed
4:3		1	Body
4:4	92-4119	1	Seal Kit
4:4:1		2	Seal-L Type
4:4:2		2	Cover-Dust
4:5		2	Piston
4:6		1	Spring
5	92-4143	1	Lined Shoe Kit
5:1		1	Lever-Operating
5:2		1	Pin
6	92-4147	1	Spring-Return, Shoe (Upper, LH)
7	92-4149	1	Spring-Return, Shoe (Lower)
8	92-4144	1	LH Adjuster ASM
8:1		1	Pushrod-Female
8:2		1	Bolt-Adjuster
8:3		1	Sleeve-Adjuster
9	92-4123	1	LH Pawl Lever ASM
9:1		1	Pin-Pawl


Ref	Part No.	Qty.	Description
10	92-4150	1	Spring-Adjuster, LH
11	92-4131	2	Washer-Hold Down, Shoe
12	92-4152	2	Spring-Hold Down, Shoe
13	92-4134	2	Plug-Inspection
14	92-4133	2	Pin-Hold Down, Shoe

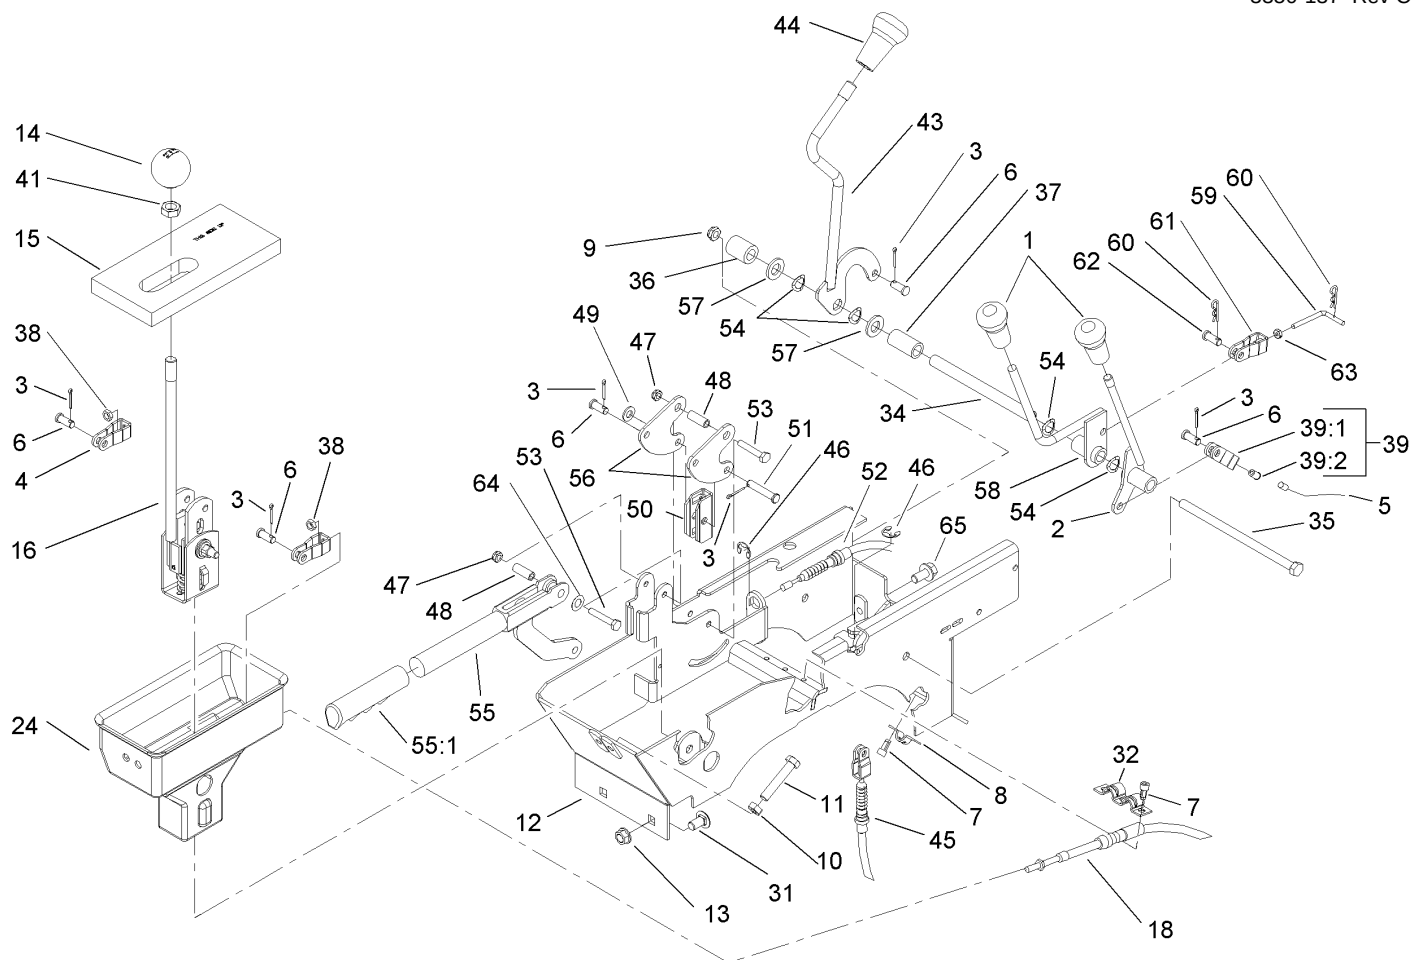 

Console Assembly


Ref	Part No.	Qty.	Description
1	106-7903	2	Knob-Control
2	106-7828	1	Lever ASM
3	3272-6	6	Pin-Cotter
4	87-2310	2	Clevis-Cable
5	106-6698	1	Cable-Hi-Low
6	283-62	5	Pin-Clevis
7	65-5220	5	Screw-Forming, Thread
8	87-4340	1	Clamp-Cable
9	3296-59	1	Nut-Lock, NI
10	3217-7	2	Nut-Hex
11	323-10	2	Screw-HH
12	106-7819-03	1	Lever Support ASM
13	3290-357	2	Nut-HHF, Whiz
14	87-6720	1	Knob-Shift
15	87-6570	1	Seal-Boot, Lower
16	106-7887	1	Shift ASM
18	87-4260	2	Cable-Selector, Gear
24	106-2376	1	Boot-Shift, Lower
31	3231-21	2	Screw-CARR
32	87-4960	1	Clamp-Cable
34	106-7833	1	Spacer
35	323-36	1	Screw-HH
36	66-6501	1	Spacer-Wheel
37	106-7835	1	Spacer

Ref	Part No.	Qty.	Description
38	3220-1	2	Nut-Jam
39	87-7160	1	Cable Clevis ASM
39:1	87-2310	1	Clevis-Cable
39:2	32148-15	1	Nut-Insert
41	3218-18	1	Nut-Jam
43	87-5030	1	Lever-Lock, Differential
44	106-7952	1	Knob
45	87-4460	1	Cable-Lock, Differential
46	32120-47	3	Ring-Retaining, External
47	3296-56	2	Nut-Lock, NI
48	114402	2	Spacer
49	3256-23	1	Washer-Flat
50	87-3480	1	Bracket-Equalizer, Cable
51	94-3829	1	Pin-Clevis
52	106-6691	2	Cable-Brake, Park
53	321-9	2	Screw-HH
54	3290-221	4	Washer-Spring
55	104-6842	1	Lever-Brake, Park
55:1	106-7972	1	Grip-Handle
56	106-7814	2	Bellcrank
57	33096-00	2	Washer-Flat
58	106-7960	1	HYD Lever ASM
59	106-7957	1	Rod-Link
60	3290-307	2	Pin-Hair

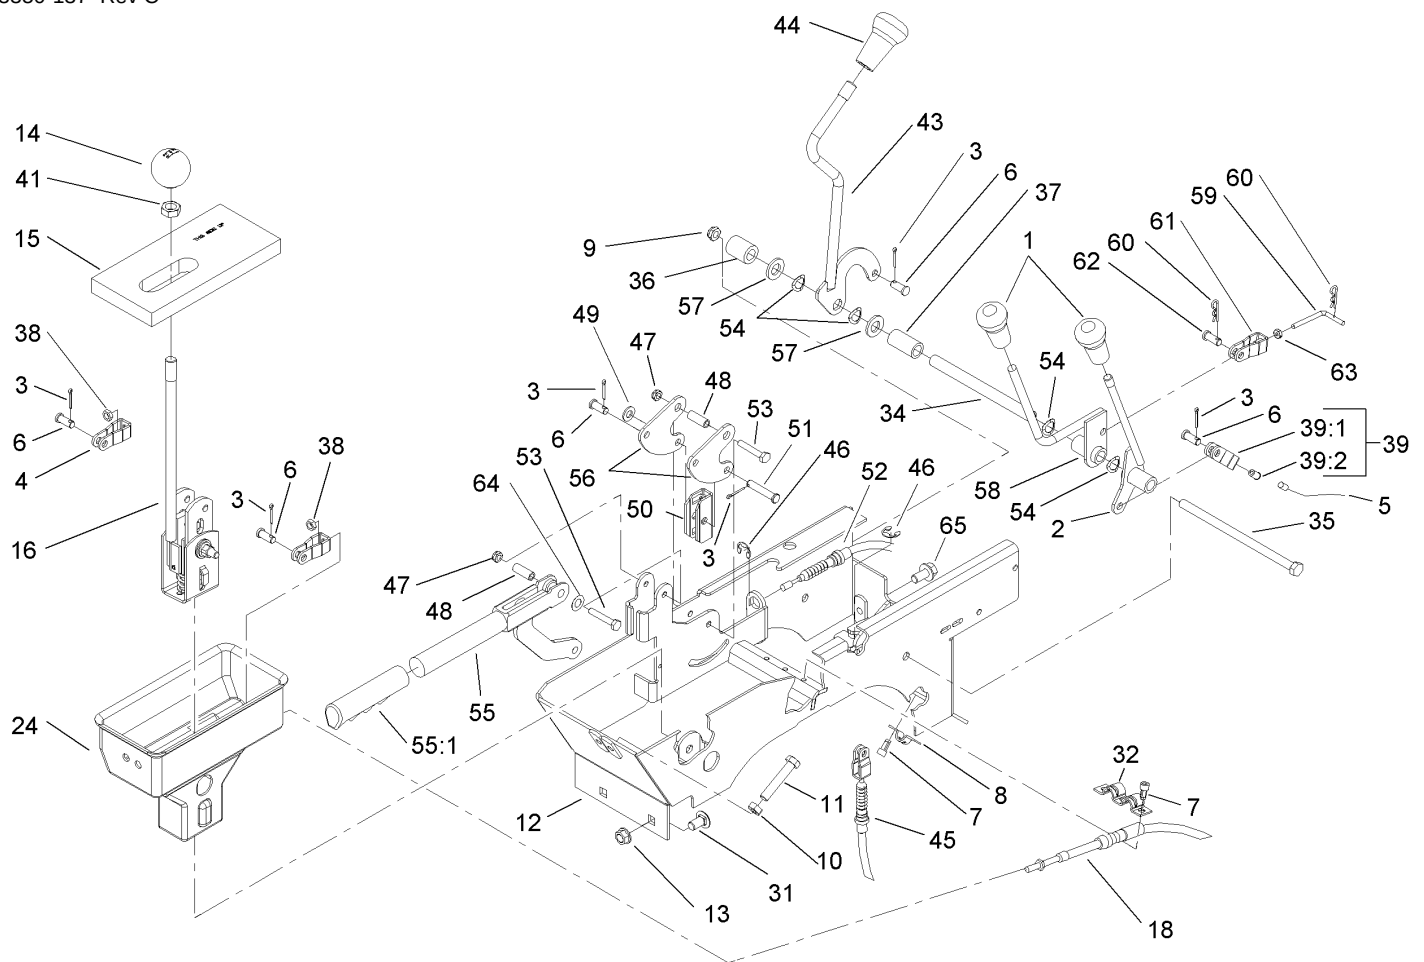 


Console Assembly (continued)

Ref	Part No.	Qty.	Description				
61	107-7966	1	Clevis ASM				
62	283-62	1	Pin-Clevis				
63	3219-14	1	Nut-Hex				
64	3290-477	1	Washer-Curved				
65	3234-12	2	Screw-HHF				

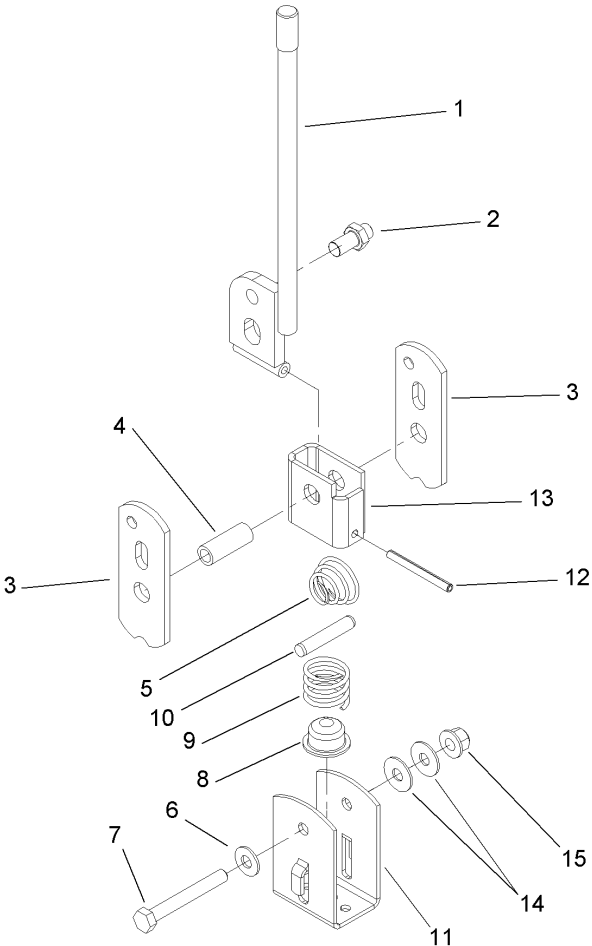 

Shift Assembly No. 106-7887


Ref	Part No.	Qty.	Description				
1	87-2040	1	Shift Lever ASM				
2	87-3650	1	Pin-Shift				
3	87-3540	2	Link-Shift				
4	87-2520	1	Tube-Pivot				
5	87-2900	1	Spring-Compression				
6	87-8640	1	Washer-Flat				
7	322-12	1	Screw-HH				
8	87-3530	1	Button-Shifter				
9	87-3660	1	Spring-Compression				
10	3290-507	1	Pin-Dowel				
11	87-3520	1	Clevis				
12	32121-48	1	Pin-Spring				
13	87-6040	1	Bracket-Shifter				
14	3290-456	2	Washer-Belleville				
15	3296-58	1	Nut-Lock, NI				

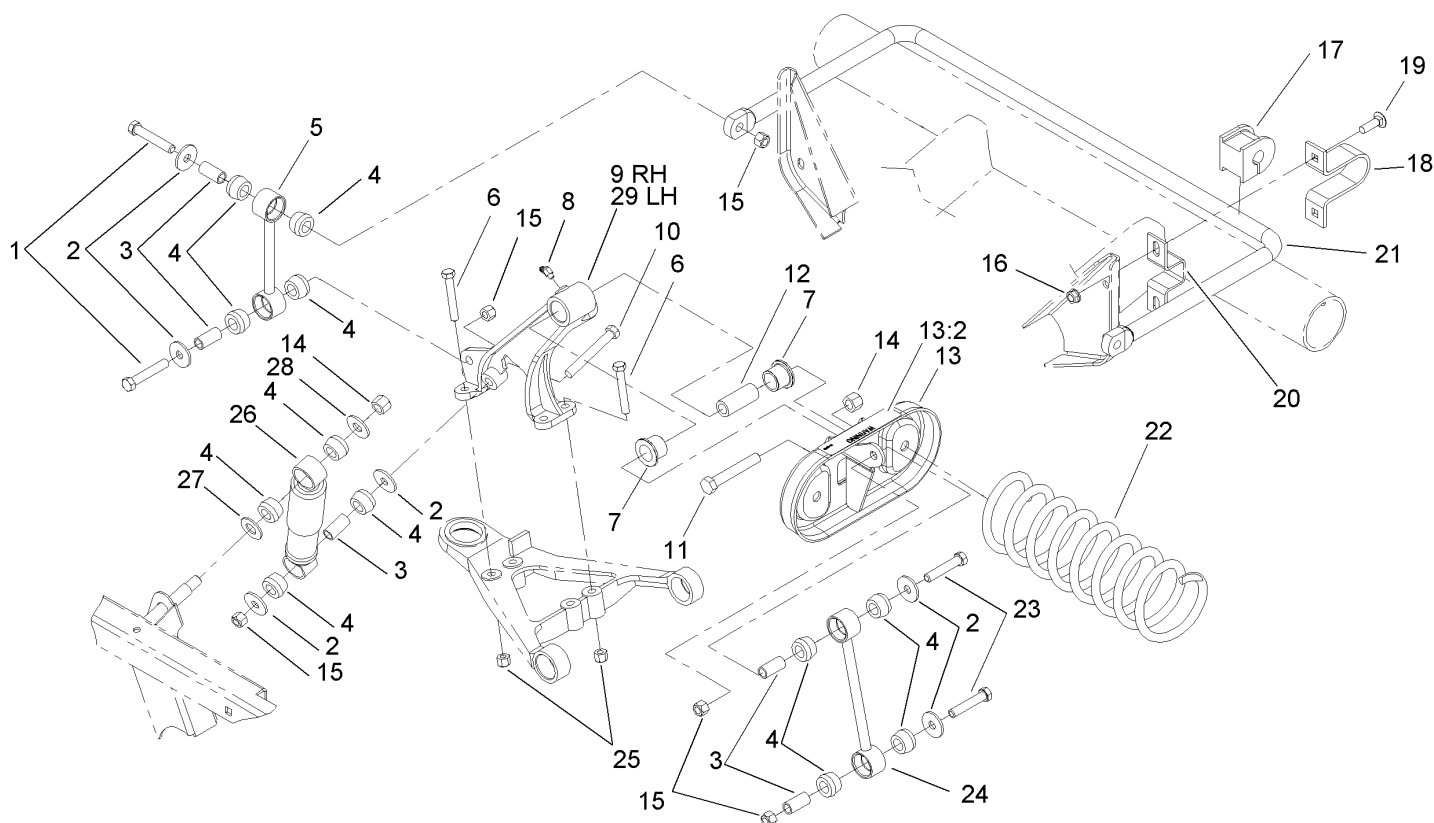 

Front Suspension Assembly


Ref	Part No.	Qty.	Description
1	324-10	4	Screw-HH
2	87-5330	12	Washer
3	87-3600	10	Spacer-Absorber, Shock
4	87-3920	24	Bushing
5	87-3860-03	2	Anti-Sway Bar Link ASM
6	323-12	8	Screw-HH
7	33-3090	4	Bushing
8	302-11	2	Fitting-Lube, 45 DEG
9	87-0150-03	1	Tower-Control Arm, RH
10	324-13	2	Screw-HH
11	325-13	2	Screw-HH
12	87-2500	2	Sleeve-Spring, Pivot
13	105-7958	2	Spring Cradle ASM
13:2	93-9879	1	Decal-Warning
14	3296-23	4	Nut-Lock, NI
15	3296-48	10	Nut-Lock, NI
16	3290-357	4	Nut-HHF, Whiz
17	87-3910	2	Bushing-Rubber
18	87-4010-03	2	Clamp-Bar, Sway
19	3231-25	4	Screw-CARR
20	87-3890-03	2	Bracket-Bar, Sway
21	87-3850-03	1	Bar-Sway, Anti
22	105-4183-01	2	Spring-Compression
23	324-9	4	Screw-HH

Ref	Part No.	Qty.	Description
24	106-2302-03	2	Stabilizer Link ASM
25	3296-39	8	Nut-Lock, NI
26	87-3110	2	Absorber-Shock
27	3256-27	2	Washer-Flat
28	3256-6	2	Washer-Flat
29	87-0160-03	1	Tower-Control Arm, LH

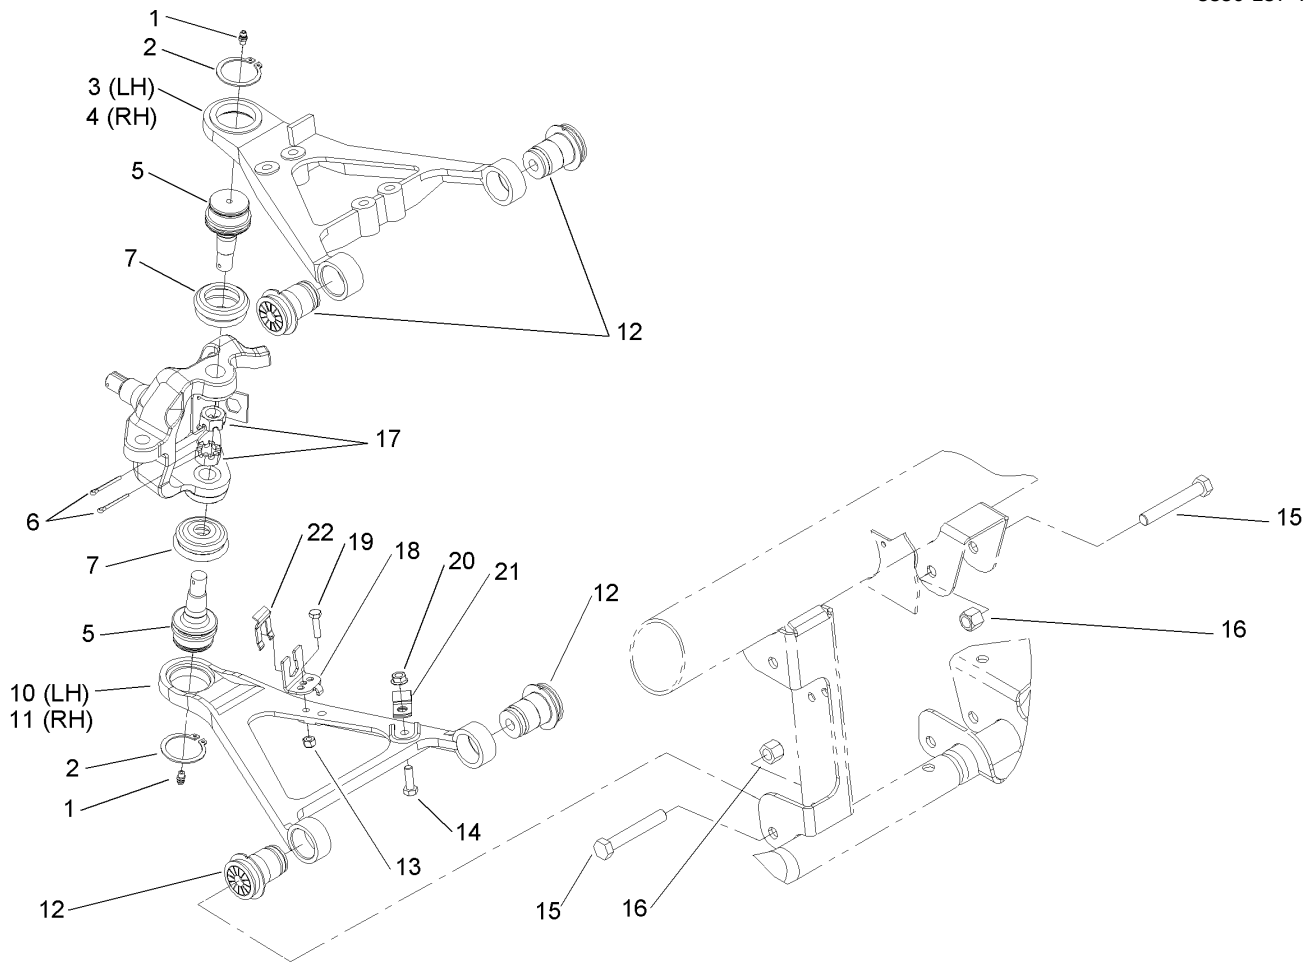 

Front Control Arm Assembly


Ref	Part No.	Qty.	Description				
1	302-5	4	Fitting-Grease				
2	32151-104	4	Ring-Retaining, External				
3	93-7135-03	1	Arm-Control, Top (RH)				
4	93-7133-03	1	Arm-Control, Top (LH)				
5	87-1430	4	Joint-Ball				
6	3272-12	4	Pin-Cotter				
7	87-2420	4	Seal-Joint, Ball				
10	87-0210-03	1	Arm-Control, Lower (RH)				
11	87-0220-03	1	Arm-Control, Lower (LH)				
12	87-1450	8	Bushing-Flange				
13	3296-42	2	Nut-Lock, NI				
14	322-5	2	Screw-HH				
15	325-13	8	Screw-HH				
16	3296-23	8	Nut-Lock, NI				
17	32136-2	4	Nut-SHH				
18	93-7070	2	Bracket-Hose, Brake				
19	321-6	2	Screw-HH				
20	32128-20	2	Nut-HF				
21	2412-10	2	R-Clamp				
22	87-3580	2	Clip-Retainer				

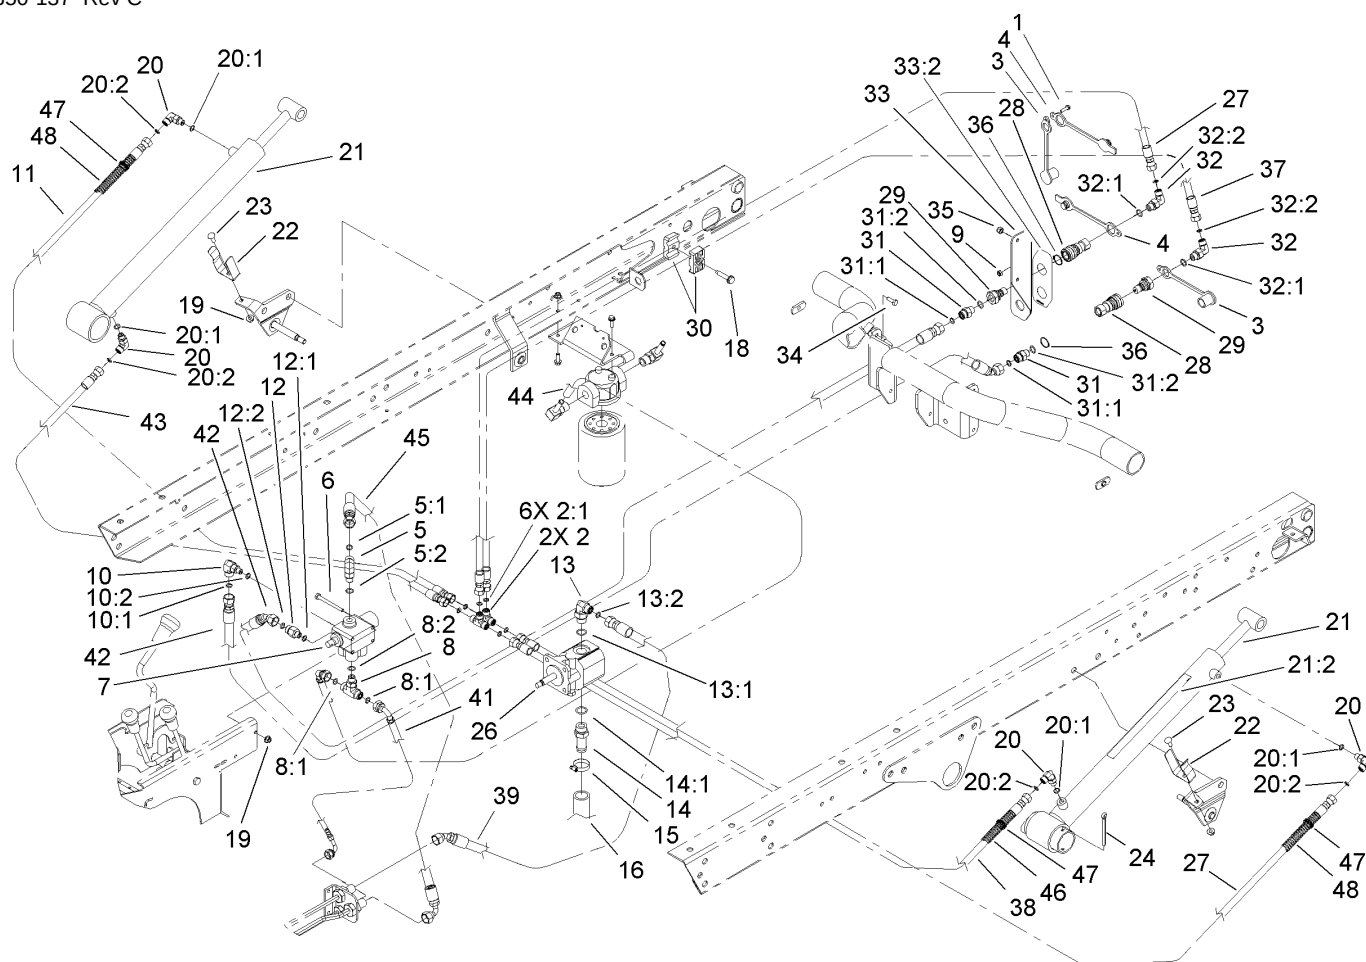 

Lift Valve and Hydraulic Assembly


Ref	Part No.	Qty.	Description
1	32105-13	1	Screw-SHH
2	340-21	2	Fitting
2:1	237-21	3	O-Ring
3	106-7881	2	Cap-Dust, HYD
4	106-7882	2	Plug-Dust, HYD
5	340-77	1	Fitting-HYD, 90 DEG
5:1	237-22	1	O-Ring
5:2	237-42	1	O-Ring
6	321-14	2	Screw-HH
7	43-1950	1	Valve-Control, HYD
8	340-94	1	Adapter
8:1	237-22	2	O-Ring
8:2	237-42	1	O-Ring
9	3296-2	1	Nut-Lock
10	340-97	1	Fitting-HYD, 90 DEG
10:1	237-22	1	O-Ring
10:2	237-78	1	O-Ring
11	92-7564	1	Hose ASM
12	340-88	1	Adapter
12:1	237-22	1	O-Ring
12:2	237-78	1	O-Ring
13	340-18	1	Fitting-HYD, 90 DEG
13:1	237-79	1	O-Ring
13:2	237-22	1	O-Ring

Ref	Part No.	Qty.	Description
14	354-136	1	Fitting-HYD
14:1	237-80	1	O-Ring
15	2412-34	1	Clamp-Hose
16	87-3670	1	Hose-Suction
18	32144-57	1	Screw
19	32128-33	4	Nut-HF
20	340-132	4	Fitting-HYD, 90 DEG
20:1	237-78	1	O-Ring
20:2	237-21	1	O-Ring
21	106-7939	2	HYD Cylinder ASM
21:1:1	106-7941	1	Seal Kit
21:2	93-9852	1	Decal-Warning
22	87-3720	2	Retainer-Cylinder
23	3229-1	2	Screw-CARR
24	3272-37	2	Pin-Cotter
26	106-6649	1	Pump-Gear, HYD
27	104-3716	2	HYD Hose ASM
28	106-7968	2	Coupler-Quick, Female
29	106-7969	2	Coupler-Quick, Male
30	56-7976	2	Clamp-Tube
31	340-2	2	Fitting-Straight, HYD
31:1	237-22	1	O-Ring
31:2	237-42	1	O-Ring
32	340-82	2	Adapter

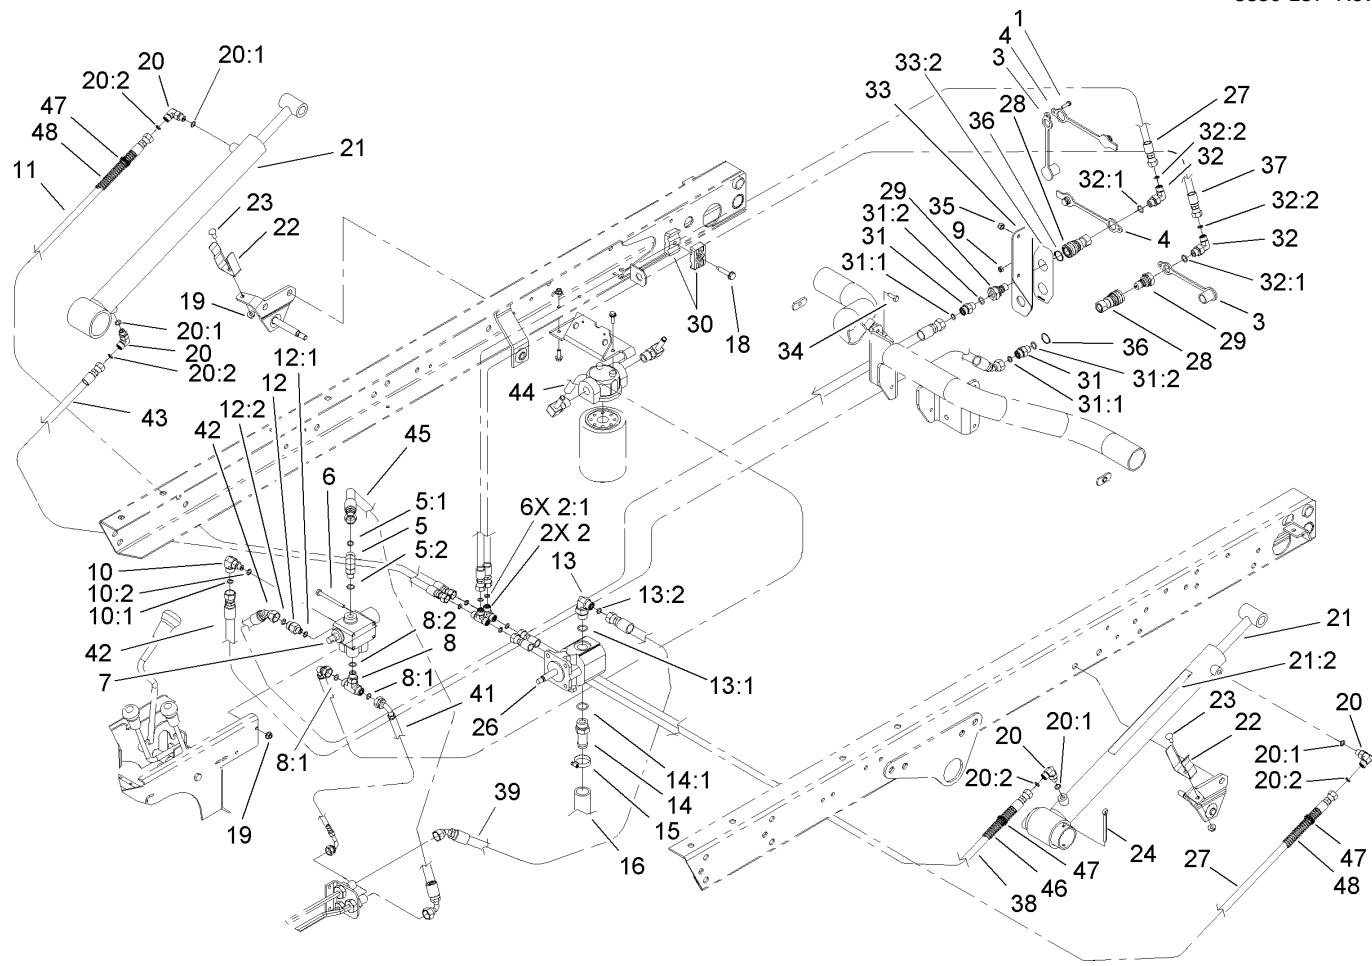 


Lift Valve and Hydraulic Assembly (continued)

Ref	Part No.	Qty.	Description				
32:1	237-42	1	O-Ring				
32:2	237-21	1	O-Ring				
33	106-7923	1	Quick Coupler Bracket ASM				
33:2	106-7888	1	Decal-Couplers, Quick				
34	3234-21	2	Screw-Cap				
35	3296-42	2	Nut-Lock, NI				
36	32151-83	2	Ring-Snap				
37	98-4584	1	HYD Hose ASM				
38	98-4590	1	Hose ASM				
39	95-0965	1	Hose ASM				
41	106-7964	1	Hose-HYD				
42	106-7977	2	Hose-HYD				
43	106-7981	1	Hose-HYD				
44	106-7965	1	Hose-HYD				
45	95-8828	1	Hose-HYD				
46	24-7922	1	Cover-Shaft, Drive				
47	3290-378	6	Tie-Cable				
48	24-7923	2	Cover-Shaft, Drive				

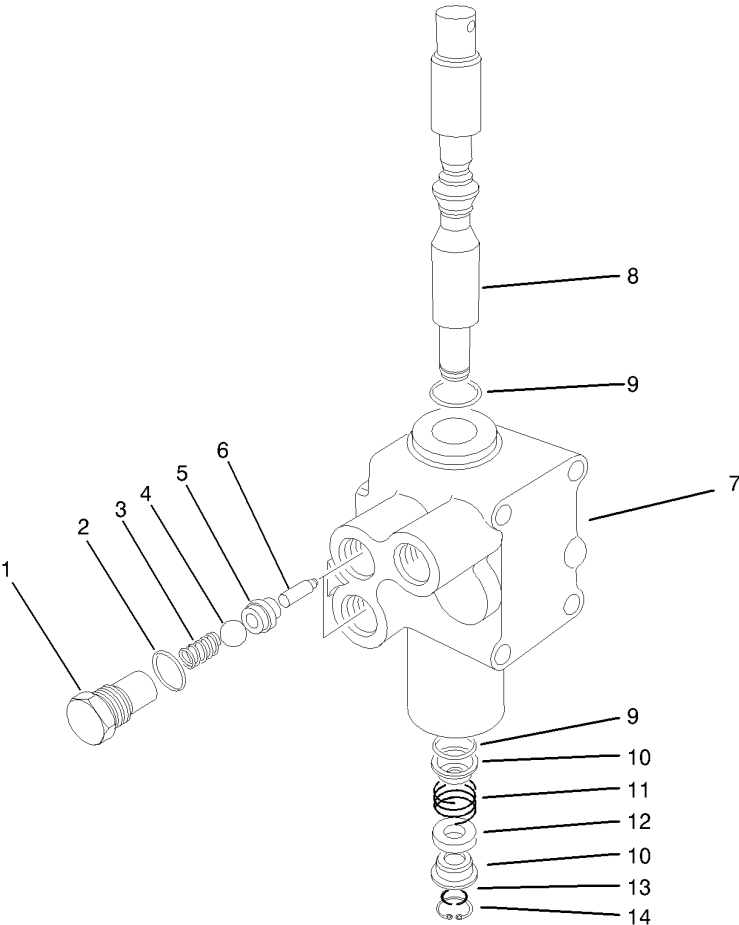 


Hydraulic Valve Assembly No. 43-1950

Ref	Part No.	Qty.	Description				
1	22-8330	2	Plug				
2	237-42	2	O-Ring				
3	22-8340	2	Spring				
4	22-8350	2	Ball				
5	22-8370	2	Seat-Valve				
6	22-8360	2	Pin				
7		1	Body				
8	22-8420	1	Spool				
9	22-8500	2	O-Ring				
10	22-8380	2	Retainer				
11	22-8410	1	Spring				
12	23-3030	1	Spacer				
13	22-8480	1	Ring-Snap				
14	22-8490	1	Ring-Snap				

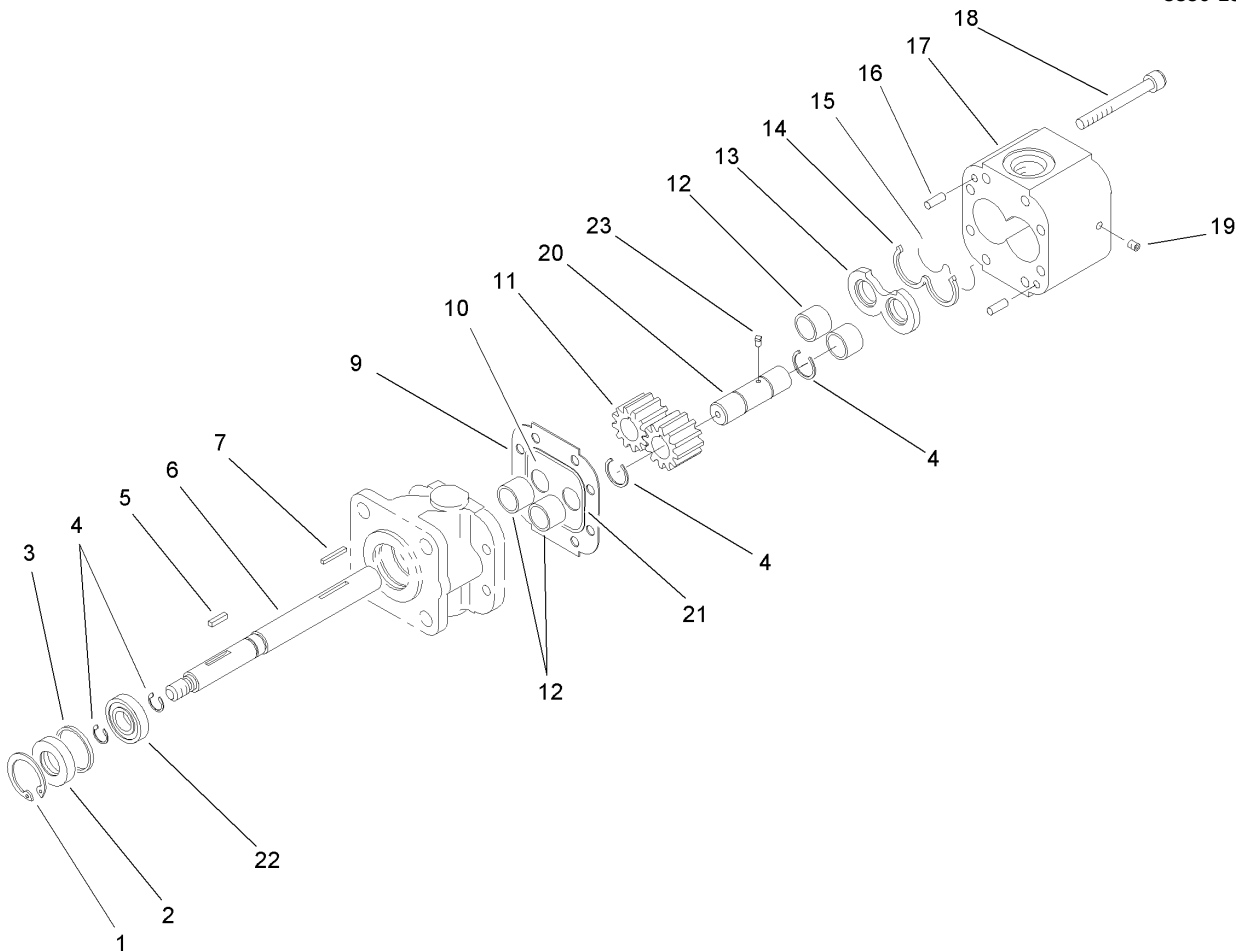 

Hydraulic Pump Assembly No. 106-6649


Ref	Part No.	Qty.	Description				
1	32151-41	1	Ring-Snap				
2	92-2195	1	Seal-Oil				
3	92-2186	1	Spacer				
4	92-2178	4	Ring-Crescent				
5	92-2179	1	Key-Square				
6	92-2189	1	Shaft-Drive				
7	92-2177	1	Pin-Shear				
9	92-2182	1	Plate-Seal				
10	92-2183	1	Plate-Wear				
11	92-2175	2	Gear				
12	92-2192	4	Bearing				
13	92-2181	1	Plate-Pressure				
14	92-2197	1	Seal-Back Up, Pressure Plate				
15	92-2196	1	Seal-Plate, Pressure				
16	92-2176	2	Pin-Shear				
17	92-2187	1	Housing-Gear, End				
18	92-2173	4	Screw				
19	92-2185	1	Plug				
20	92-2190	1	Shaft-Idler				
21	92-2198	1	Seal-Plate, Wear				
22	92-2191	1	Bearing-Ball				
23	92-2199	1	Key-Ball				

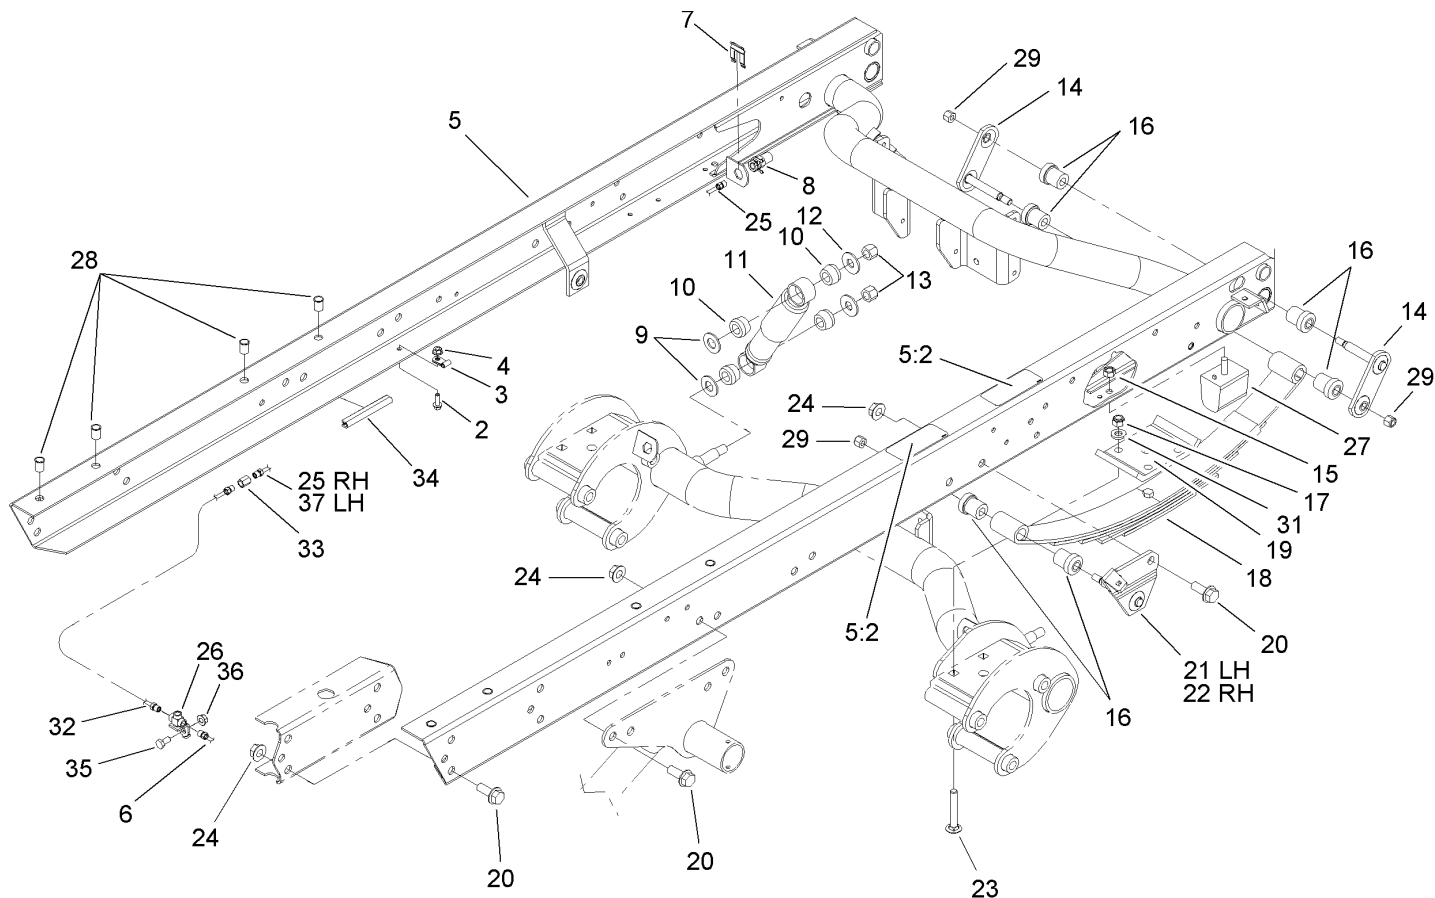 

Rear Frame Assembly

Ref	Part No.	Qty.	Description
2	3234-4	4	Screw-HHF
3	2412-149	4	Clamp-Hose
4	32128-33	4	Nut-HF
5	105-7959	1	Frame Channel ASM
5:2	93-8071	2	Decal-Surface, Hot
6	94-3843	1	LH Rear Brake Tube ASM
7	87-3580	2	Clip-Retainer
8	87-4100	2	Hose-Brake, Rear
9	3256-27	4	Washer-Flat
10	87-3920	8	Bushing
11	87-3110	2	Absorber-Shock
12	3256-6	4	Washer-Flat
13	3296-23	4	Nut-Lock, NI
14	87-3980	4	Shackle ASM
15	48-9520	2	Nut
16	87-4760	12	Bushing-Rubber
17	3296-76	8	Nut-Lock, NI
18	87-1490	2	Spring-Leaf, Rear
19	87-7470-03	2	Plate-Spring, Clamp
20	3234-38	24	Screw-HHF
21	87-3960	1	LH Spring Mount ASM
22	87-3940	1	RH Spring Mount ASM
23	3232-17	8	Screw-CARR
24	32128-23	24	Nut-HF


Ref	Part No.	Qty.	Description
25	94-3846	1	RH Rear Brake Tube ASM
26	87-3560	1	Tee
27	87-3470	2	Bumper-Axle, Rear
28	32148-9	8	Insert-Nut
29	3296-39	6	Nut-Lock, NI
31	87-7480	8	Washer
32	94-3845	1	RH Rear Brake Tube ASM
33	87-3570	2	Union
34	43-4300	1	Trim-Frame, Rear
35	322-2	1	Screw-HH
36	32128-20	1	Nut-HF
37	94-3844	1	LH Rear Brake Tube ASM

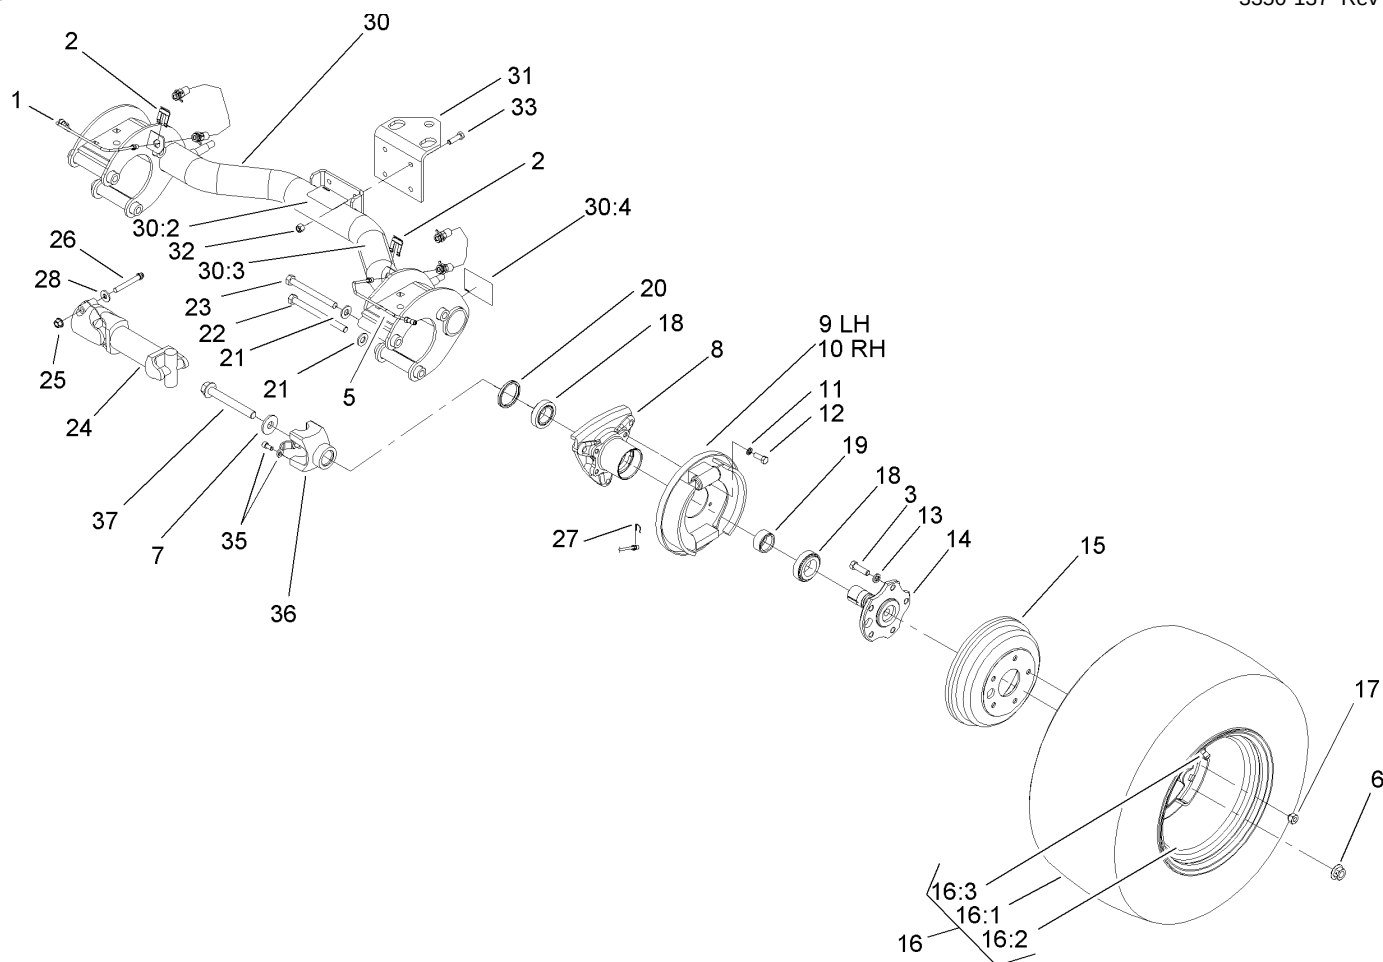 

Rear Axle Assembly

Ref	Part No.	Qty.	Description
1	87-4090	1	RH Rear Brake Tube ASM
2	87-3580	2	Clip-Retainer
3	87-2080	10	Bolt-Hex, TAP
5	87-4080	1	LH Rear Brake Tube ASM
6	105-1764	2	Nut-Flange, Side Lock
7	104-9216	2	Washer-Hardened
8	87-2240	2	Housing-Axle
9	93-7126	1	LH Rear Brake ASM
10	93-7125	1	RH Rear Brake ASM
11	3253-21	8	Washer-Lock
12	323-6	8	Screw-HH
13	3253-6	10	Washer-Lock
14	105-1717-03	2	Axle-Stub
15	93-7128	2	Drum-Brake
16		2	Tire And Wheel ASM
16:1	106-7868	1	Tire
16:2	87-6750	1	Wheel
16:3	232-27	1	Stem-Valve
17	23-7270	10	Nut-Wheel
18	87-1970	2	Bearing
19	87-4060	2	Spacer-Bearing, Wheel
20	87-3590	2	Seal-Bearing
21	87-7270	6	Washer-Thrust
22	325-20	5	Screw-HH


Ref	Part No.	Qty.	Description
23	325-19	1	Screw-HH
24	98-2918	2	Driveshaft ASM
25	32128-36	4	Nut-HF
26	98-2939	4	Screw-Cap
27	87-3310	2	Clip-Cable, Brake
28	80-6990	4	Washer-Hardened
30	105-7961	1	Rear Axle ASM
30:2	93-9442	1	Decal-Atf
30:3	93-9862	1	Decal-Danger
30:4	93-9449	2	Decal-Driveshaft
31	92-5951-03	1	Angle-Hitch
32	3296-39	4	Nut-Lock, NI
33	323-7	4	Screw-HH
35	92-4189	2	Strap Kit
36	92-4190	2	Yoke
37	105-1763	2	Screw-HHF

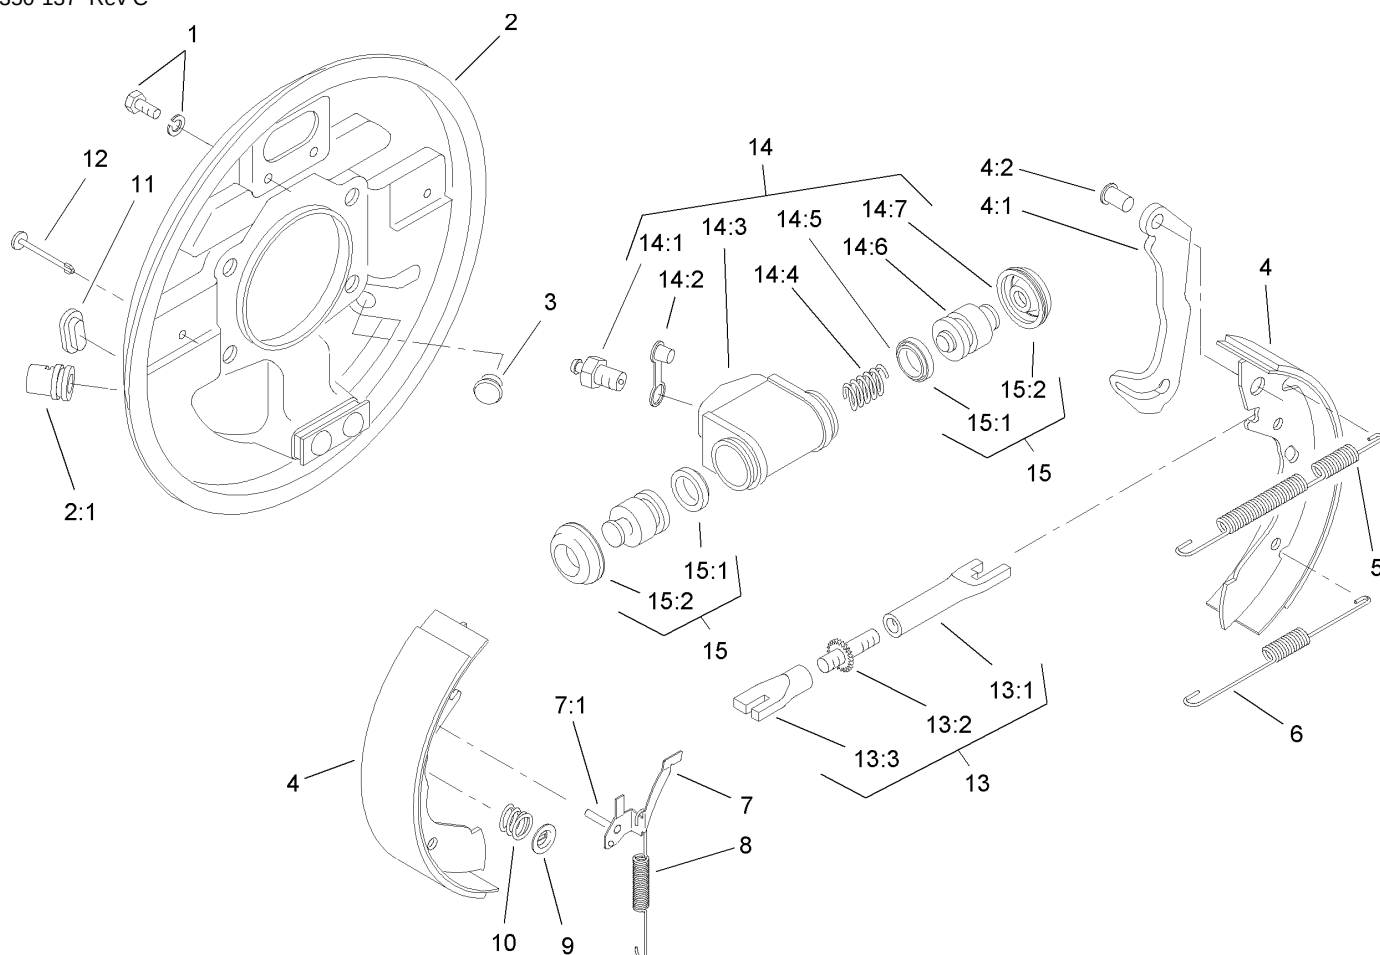 

Rear Brake Assembly No. 93-7125 (Right) and 93-7126 (Left)


Ref	Part No.	Qty.	Description
1	92-4135	2	Bolt-Set
2	92-4100	1	RH Backplate ASM
2	92-4136	1	LH Backplate ASM
2:1		1	Guide-Pipe
3	92-4146	1	Plunger ASM
4	92-4143	1	Lined Shoe Kit
4:1		1	Lever-Operating
4:2		1	Pin
5	92-4147	1	Spring-Return, Shoe (Upper, LH)
5	92-4148	1	Spring-Return, Shoe (Upper, RH)
6	92-4149	1	Spring-Return, Shoe (Lower)
7	92-4124	1	RH Pawl Lever ASM
7	92-4123	1	LH Pawl Lever ASM
7:1		1	Pin-Pawl
8	92-4150	1	Spring-Adjuster, LH
8	92-4151	1	Spring-Adjuster, RH
9	92-4131	2	Washer-Hold Down, Shoe
10	92-4152	2	Spring-Hold Down, Shoe
11	92-4134	1	Plug-Inspection
12	92-4133	2	Pin-Hold Down, Shoe
13	92-4145	1	RH Adjustor ASM
13	92-4144	1	LH Adjustor ASM
13:1		1	Pushrod-Female
13:2		1	Bolt-Adjuster

Ref	Part No.	Qty.	Description
13:3		1	Sleeve-Adjuster
14	92-4141	1	RH Wheel Cylinder ASM
14	92-4140	1	LH Wheel Cylinder ASM
14:1	92-4137	1	Screw-Bleed
14:2	92-4114	1	Cap-Screw, Bleed
14:3		1	Body
14:4		1	Spring
14:5		2	Seal-L Type
14:6		2	Piston
14:7		2	Cover-Dust
15	92-4142	1	Seal Kit
15:1		2	Seal-L Type
15:2		2	Cover-Dust

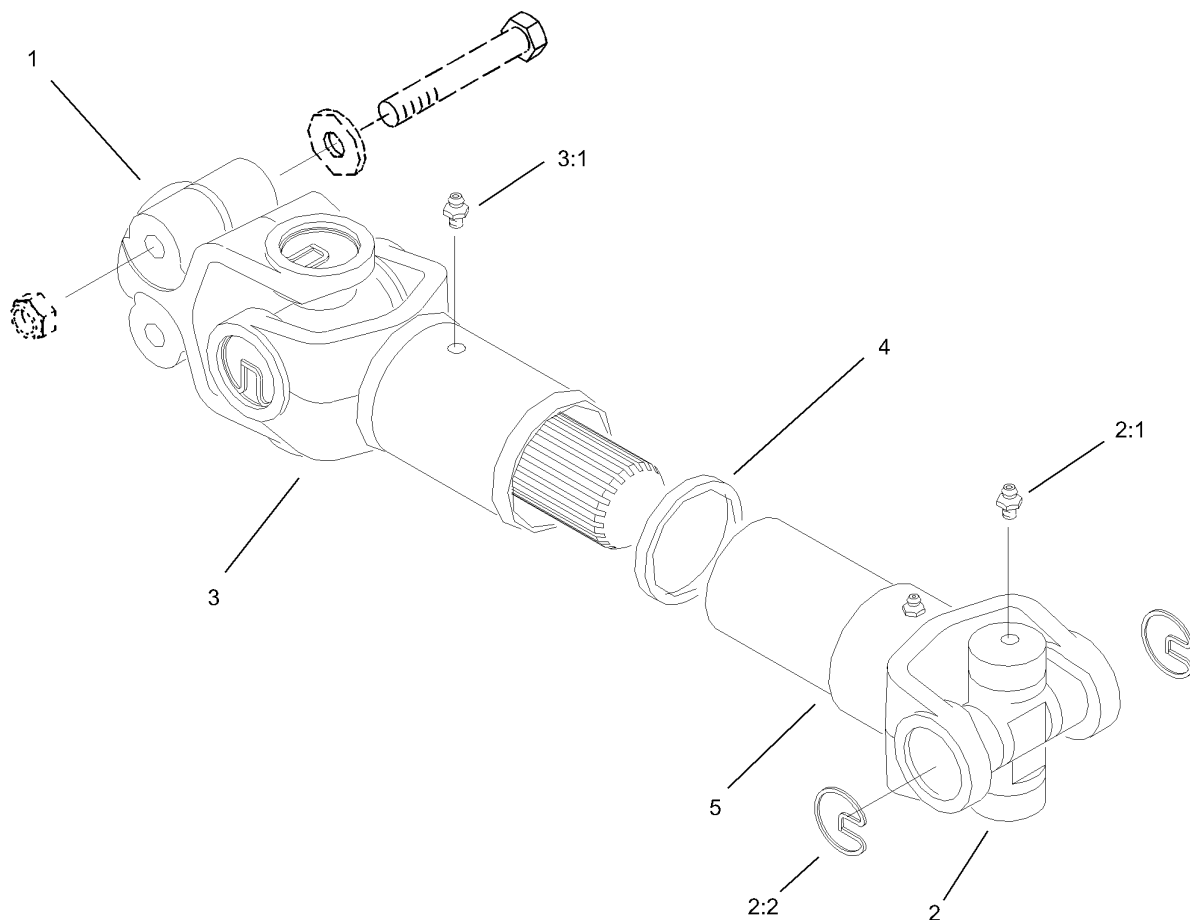 


Driveshaft Assembly No. 98-2918

Ref	Part No.	Qty.	Description
1	98-2940	1	Yoke
2	92-4187	2	Cross And Bearing Kit
2:1	302-58	2	Fitting-Grease
2:2	92-4188	2	Ring-Snap
3	92-4179	1	Yoke-Tube, Shaft And Seal
3:1	302-5	1	Fitting-Grease
4	92-4180	1	Seal
5	92-4182	1	Yoke And Hub

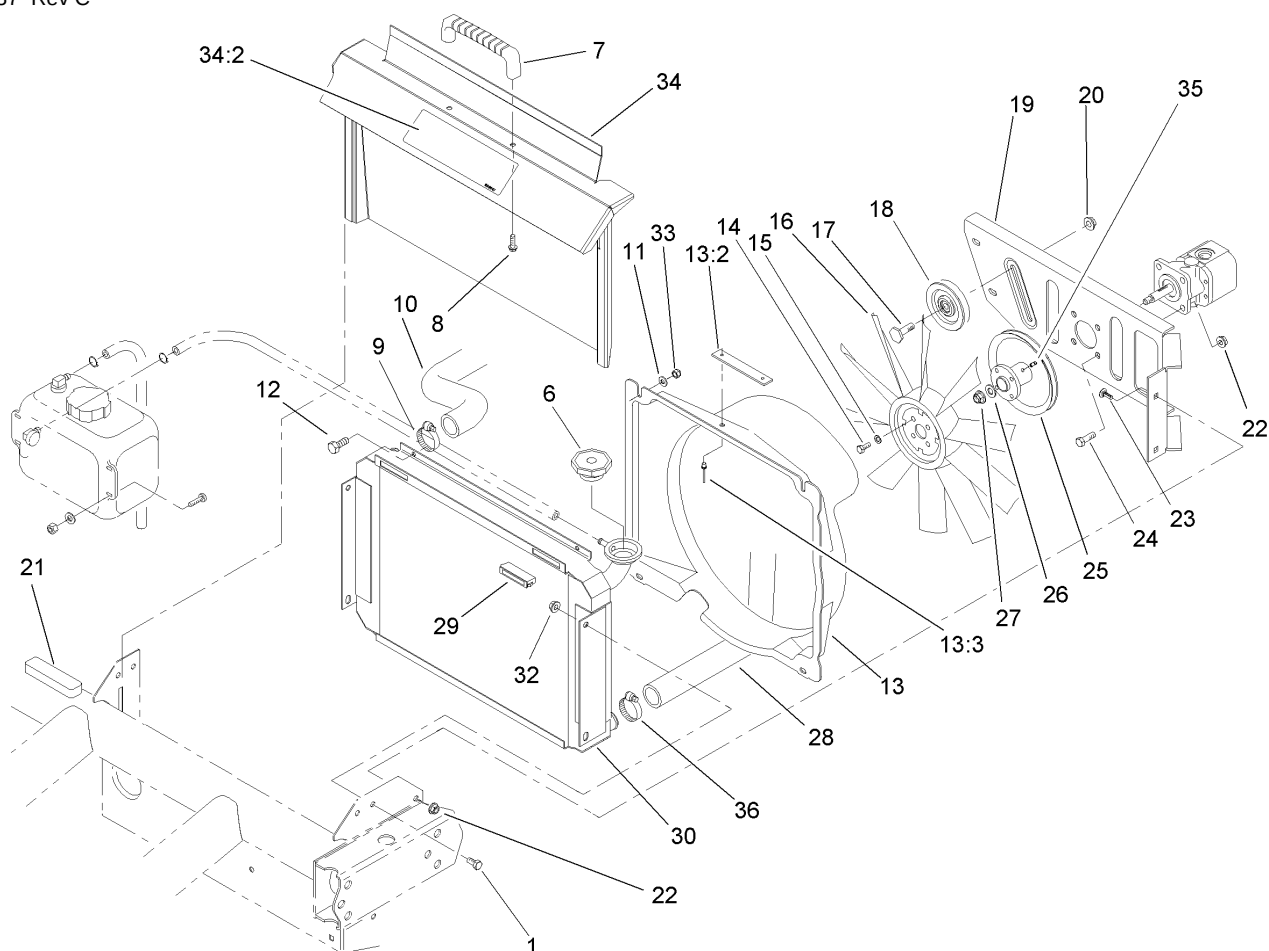 


Radiator and Hydraulic Pump Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	322-2	4	Screw-HH	27	3296-5	1	Nut-Lock
6	66-3240	1	Cap-Radiator	28	105-1725	1	Hose-Radiator, Lower
7	65-5100	1	Handle-Door	29	58-4250	2	Catch-Magnetic
8	46-8091	2	Screw-HWH	30	93-7051	1	Radiator
9	2412-34	1	Clamp-Hose	32	32128-20	4	Nut-HF
10	105-1724	1	Hose-Radiator, Upper	33	3296-42	4	Nut-Lock, NI
11	3256-22	4	Washer-Flat	34	105-4223	1	Radiator Cover ASM
12	321-4	4	Screw-HH	34:2	93-9447	1	Decal-Caution
13	105-7956	1	Fan Shroud ASM	35	3245-31	1	Screw-HSH
13:2	98-9335	1	Plate-Warning, Fan	36	2412-3	1	Clamp-Hose
13:3	3290-271	2	Rivet-Pop				
14	321-3	4	Screw-HH				
15	3253-3	4	Washer-Lock				
16	84-1880	1	Fan				
17	32141-86	1	Screw-Leveler				
18	63-8140	1	Pulley-Idler				
19	93-7088-03	1	Plate-Mount, Pump				
20	3290-357	1	Nut-HHF, Whiz				
21	87-9810	1	Foam-Overflow, Tank				
22	3296-29	8	Nut-Lock, NI				
23	3230-23	4	Screw-CARR				
24	322-5	4	Screw-HH				
25	94-5237	1	Fan Hub ASM				
26	3256-45	1	Washer-Flat				

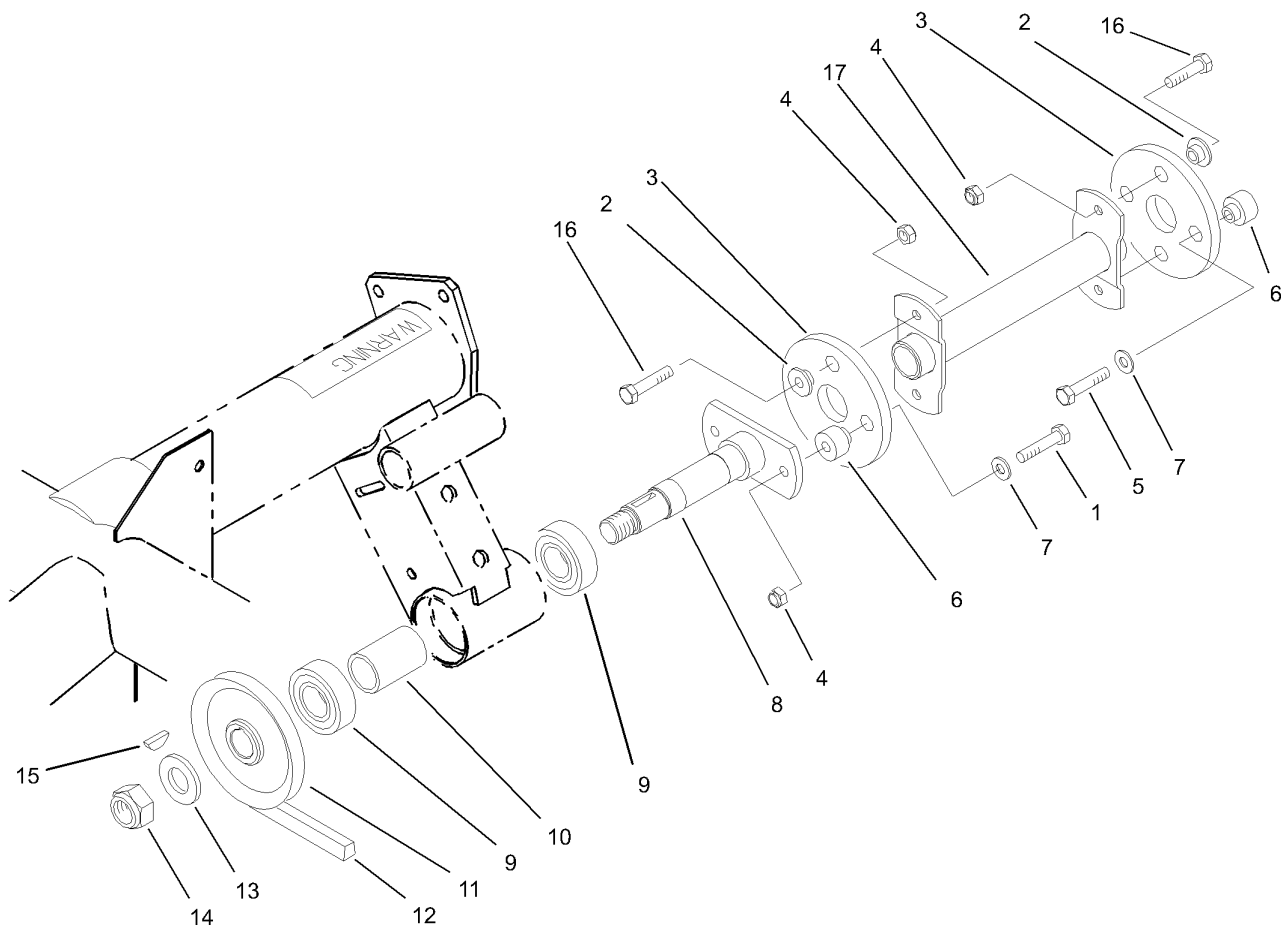 


Fan and Hydraulic Pump Drive Assembly

Ref	Part No.	Qty.	Description				
1	33114-040	2	Screw-HH				
2	27-6600	4	Spacer-Coupling				
3	44-2230	2	Coupling-Rubber				
4	33024-00	6	Nut-Lock				
5	48-7740	2	Screw				
6	27-6590	4	Spacer-Coupling, Rubber				
7	3256-3	4	Washer-Flat				
8	87-2720-03	1	Shaft-Mask				
9	251-82	2	Bearing-Ball				
10	87-2750	1	Spacer-Bearing				
11	87-3370-03	1	Pulley And Hub-Mask				
12	93-7140	1	V-Belt-Pump				
13	3256-28	1	Washer-Flat				
14	3296-15	1	Nut-Lock, NI				
15	3257-7	1	Key-Woodruff				
16	33114-025	4	Screw-HH				
17	87-4440-03	1	Driveshaft ASM				

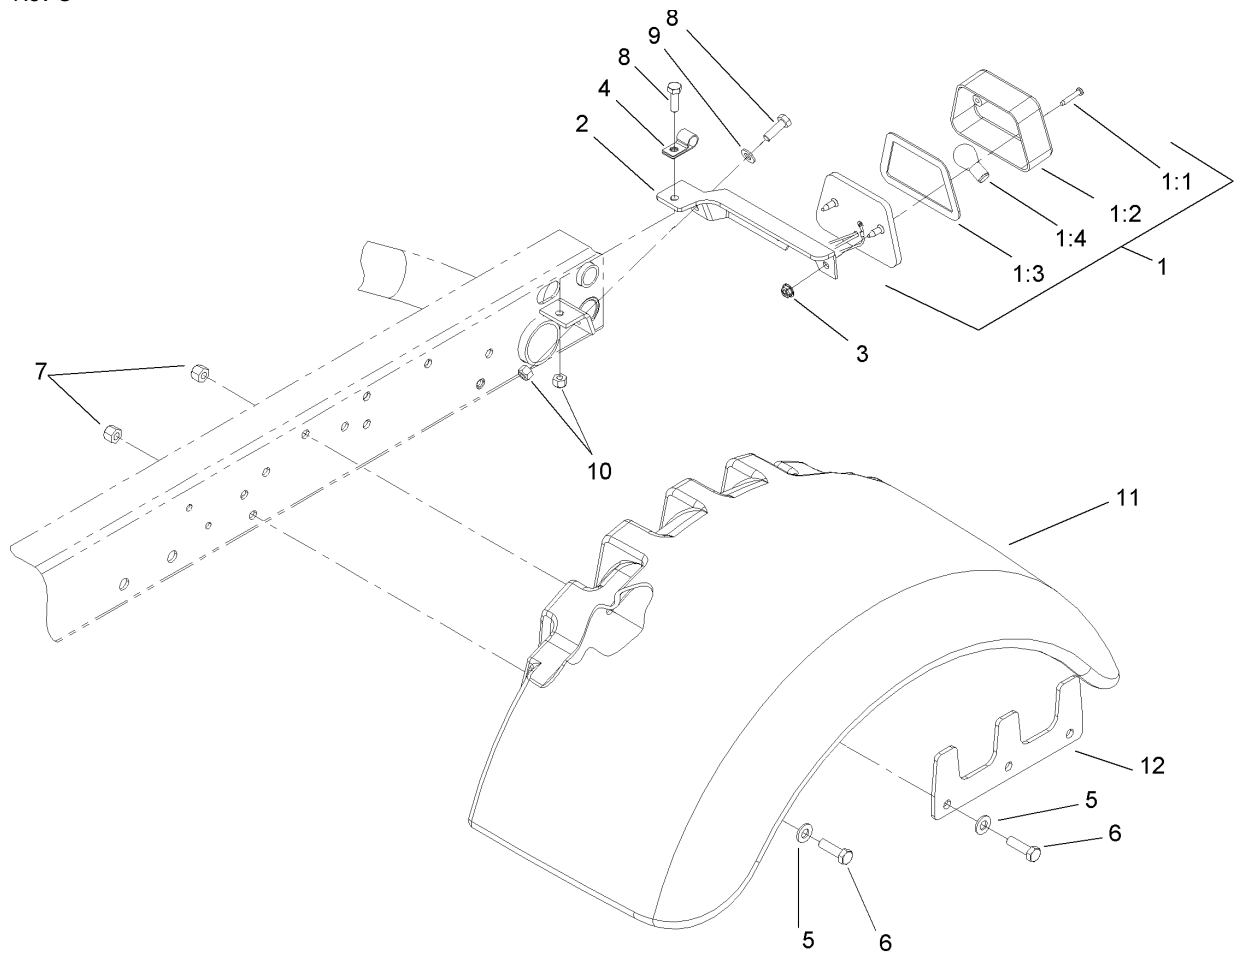 

Tail Light and Fender Assembly


Ref	Part No.	Qty.	Description				
1	87-2110	1	Light-Tail / Brake				
1:1	32144-93	4	Screw-PPHTF				
1:2	87-6300	2	Lens-Light, Tail				
1:3	87-6310	2	Gasket-Light, Tail				
1:4		1	Bulb				
2	106-7872-03	1	LH Tail Light Bracket ASM				
3	3290-506	2	Palnut				
4	2412-93	1	Clamp-R				
5	3256-24	10	Washer-Flat				
6	323-7	10	Screw-HH				
7	3296-39	8	Nut-Lock, NI				
8	322-5	2	Screw-HH				
9	3256-23	1	Washer-Flat				
10	3296-29	2	Nut-Lock, NI				
11	106-2373	2	Fender-Rear				
12	106-7895-03	2	Plate-Support				

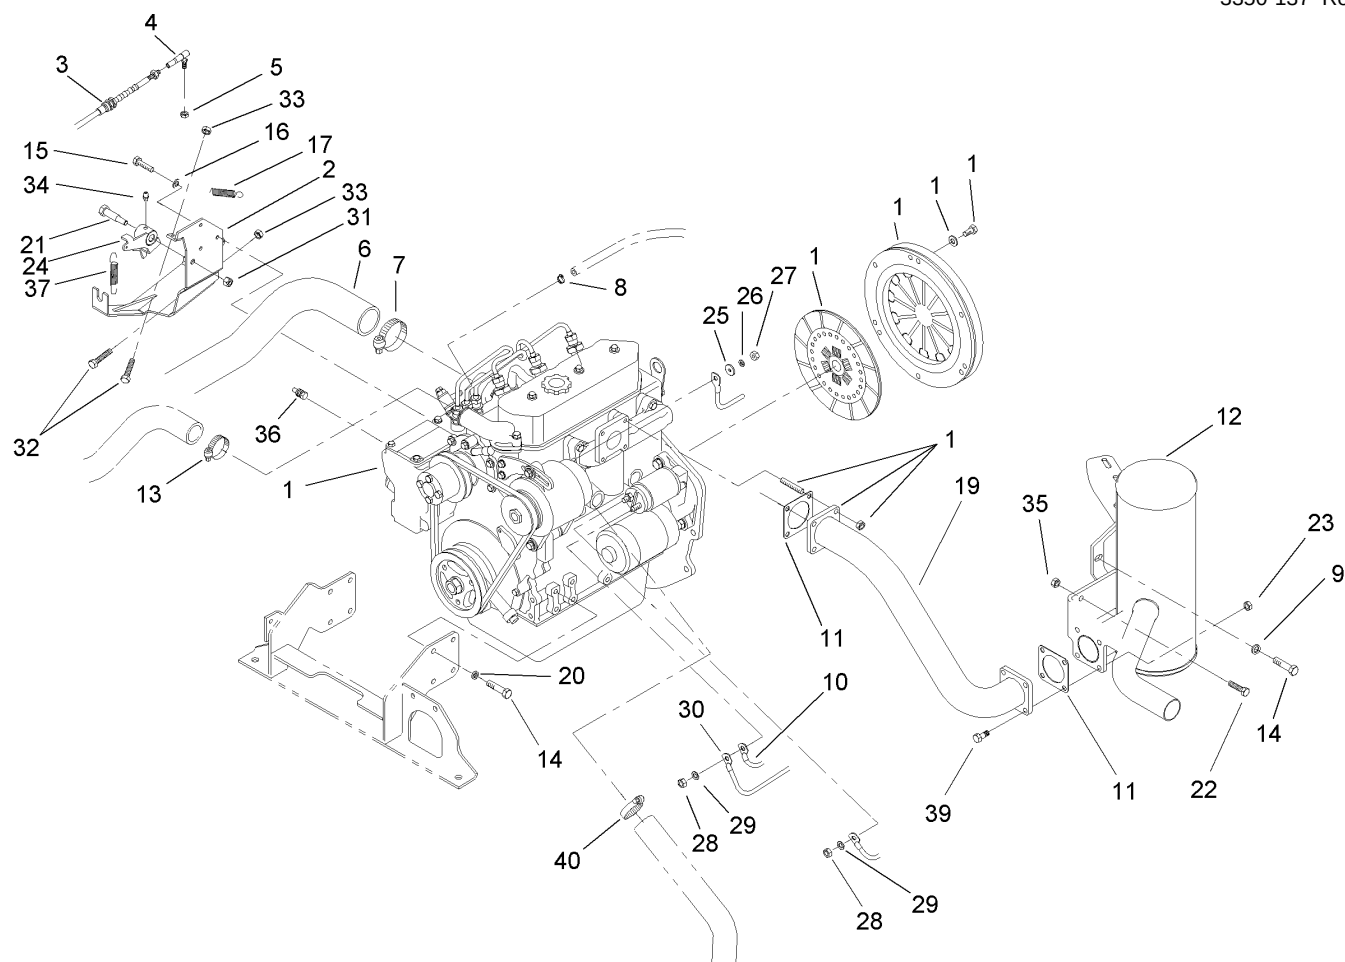 

Engine Assembly


Ref	Part No.	Qty.	Description
1	104-9218	1	Engine ASM
2	106-2445-03	1	Throttle Bracket ASM
3	106-2420	1	Cable-Accelerator
4	18-1720	1	Governor Ball Joint ASM
5	3296-3	1	Nut-Lock
6	107-7961	1	Hose-Intake
7	2412-92	1	Clamp-Hose
8	2412-108	1	Clamp-Worm
9	87-8640	1	Washer-Flat
10	99-3441	1	Harness-Wire, Fusible Link
11	105-4209	2	Gasket-Muffler
12	105-1778	1	Muffler-Exhaust
13	2412-34	1	Clamp-Hose
14	33114-020	9	Screw-HH
15	33103-016	3	Screw-HHF
16	3253-3	3	Washer-Lock
17	87-4020	1	Spring-Extension
19	105-4186	1	Exhaust Tube ASM
20	3253-4	8	Washer-Lock
21	7-0030	1	Bolt-Shoulder
22	322-5	2	Screw-HH
23	32128-25	4	Nut-HF
24	106-7949	1	Bellcrank ASM
25	3256-2	1	Washer-Flat

Ref	Part No.	Qty.	Description
26	43-5920	1	Washer-Lock, Spring
27	48-7880	1	Nut-Hex
28	33014-00	2	Nut-Hex
29	3254-2	2	Washer-Lock, Internal
30	87-3070	1	Cable-Battery, Positive
31	3296-29	1	Nut-Lock, NI
32	321-8	2	Screw-HH
33	3218-1	2	Nut-Jam
34	302-5	1	Fitting-Grease
35	32128-20	2	Nut-HF
36	94-3457	1	Sender-Temperature
37	107-7958	1	Spring-Governor
39	3274-22	4	Screw-HSH
40	2412-3	1	Clamp-Hose

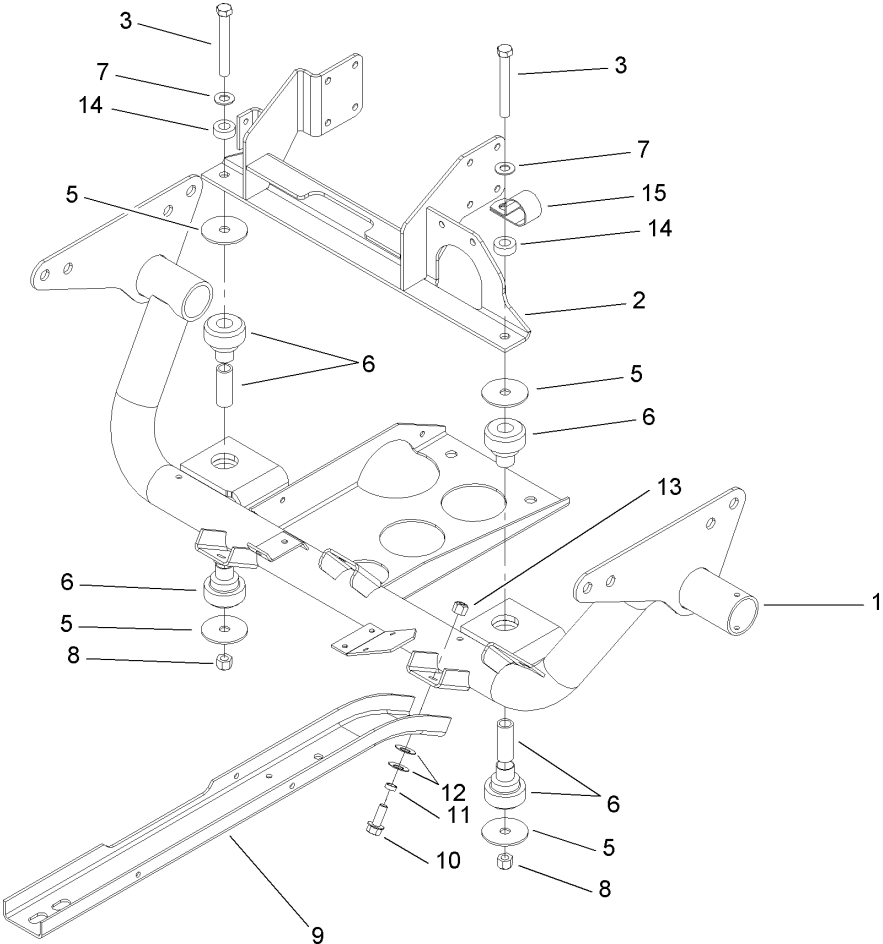 


Engine Support Assembly

Ref	Part No.	Qty.	Description				
1	105-4200-03	1	Engine Support ASM				
2	104-9238-03	1	Engine Mount ASM				
3	324-19	2	Screw-HH				
5	87-5100	4	Washer-Snubbing				
6	106-7865	2	Engine Mount ASM				
7	3256-25	2	Washer-Flat				
8	3296-48	2	Nut-Lock, NI				
9	87-4730-03	2	Guard-Belly				
10	3234-11	6	Screw-HHF				
11	76-9100	6	Spacer-Speed, Reel				
12	3290-413	12	Washer-Belleville				
13	3296-39	6	Nut-Lock, NI				
14	59-2290	2	Spacer				
15	2412-82	1	Clamp				

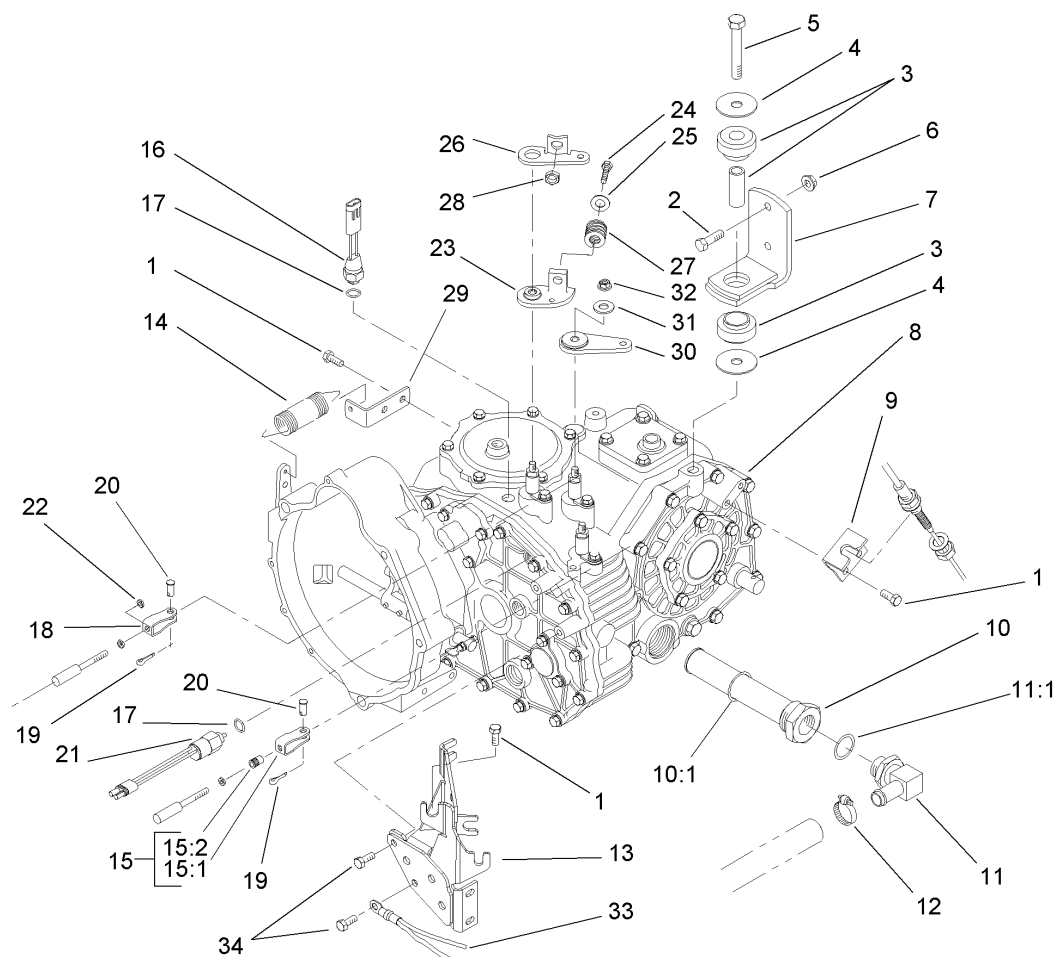 


Transaxle Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	33114-020	5	Screw-HH	21	87-6710	1	Switch-Transmission
2	323-7	4	Screw-HH	22	3220-1	2	Nut-Jam
3	106-7865	2	Engine Mount ASM	23	87-7970	1	Arm-Shift
4	87-5100	4	Washer-Snubbing	24	323-10	1	Screw-HH
5	33116-080	2	Screw-HH	25	3256-4	1	Washer-Flat
6	3296-39	4	Nut-Lock, NI	26	87-8250	1	Plate-Arm, Shift
7	87-5800-03	2	Transaxle Mount ASM	27	87-6910	1	Spring-Compression
8	105-4180	1	2 Wheel Drive Transaxle ASM	28	32128-21	1	Nut-HF
9	87-4470	1	Bracket-Lock, Differential	29	87-7170	1	Bracket-Spring, Clutch
10	87-3990	1	Strainer-Transaxle	30	87-7960	2	Lever-Shift
10:1	237-123	1	O-Ring	31	80-6990	3	Washer-Hardened
11	353-987	1	Fitting-HYD, 90 DEG	32	48-9520	3	Nut
11:1	237-81	1	O-Ring	33	87-3080	1	Cable-Battery, Negative
12	2412-34	1	Clamp-Hose	34	33114-025	2	Screw-HH
13	105-4207-03	1	Cable Mount ASM				
14	68-9950	1	Spring-Traction				
15	87-7160	1	Cable Clevis ASM				
15:1	87-2310	1	Clevis-Cable				
15:2	32148-15	1	Nut-Insert				
16	72-4310	1	Switch-Ball				
17	237-30	2	O-Ring				
18	87-2310	2	Clevis-Cable				
19	3272-6	3	Pin-Cotter				
20	283-62	3	Pin-Clevis				

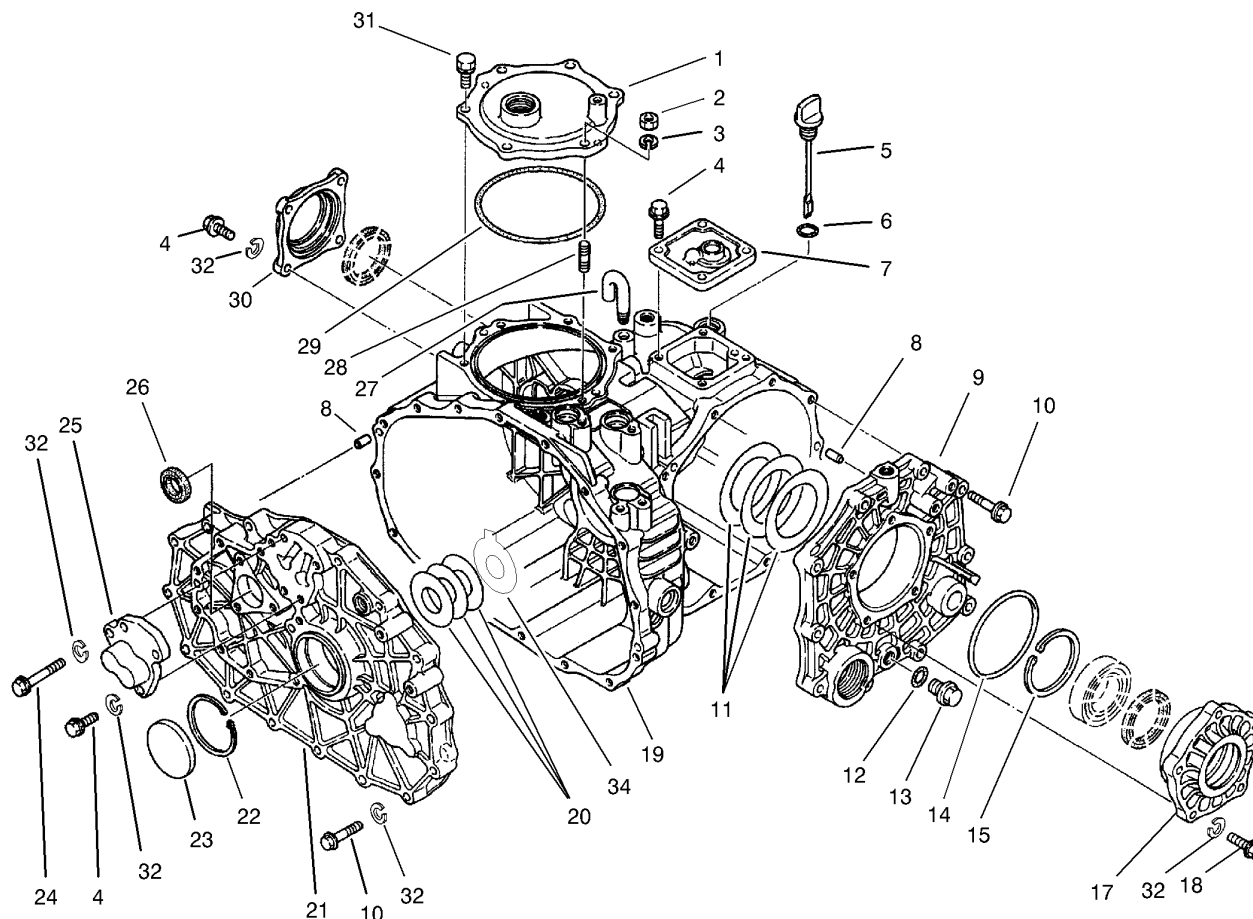 

Case Assembly Transaxle Assembly No. 105-4180


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	92-0656	1	Cover-Upper, PTO	26	92-0791	1	Seal-Oil
2	48-7930	1	Nut	27	92-0743	1	Breather-Air
3	92-0762	1	Washer-Spring	28	92-0804	1	Stud
4	33114-025	11	Screw-HH	29	92-0790	1	O-Ring
5	92-0662	1	Cap-Oil	30	92-0655	1	Cover-Seal, Axle
6	92-0788	1	O-Ring	31	92-0796	5	Bolt
7	92-0652	1	Cover-Upper	32	42-9850	42	Washer-Lock, Spring
8	92-0765	4	Pin-Parallel	34	100-4465	1	Shim (W/Tab)
9	92-0653	1	Cover-Side				
10	42-9530	25	Bolt/Washer				
11	92-0809	1	Set-Shim				
12	92-0787	1	O-Ring				
13	92-0773	1	Plug-Drain				
14	92-0789	1	O-Ring				
15	92-0760	1	Ring-Snap				
17	92-0654	1	Carrier-Differential				
18	48-7730	5	Screw-HH				
19	92-0651	1	Case-Transmission				
20	100-4460	1	Shim Set				
21	100-4461	1	Plate-Center				
22	92-0759	1	Ring-Snap				
23	92-0807	1	Cap-Sealing				
24	48-7560	1	Bolt-HH				
25	92-0706	1	Shaft-Fork				

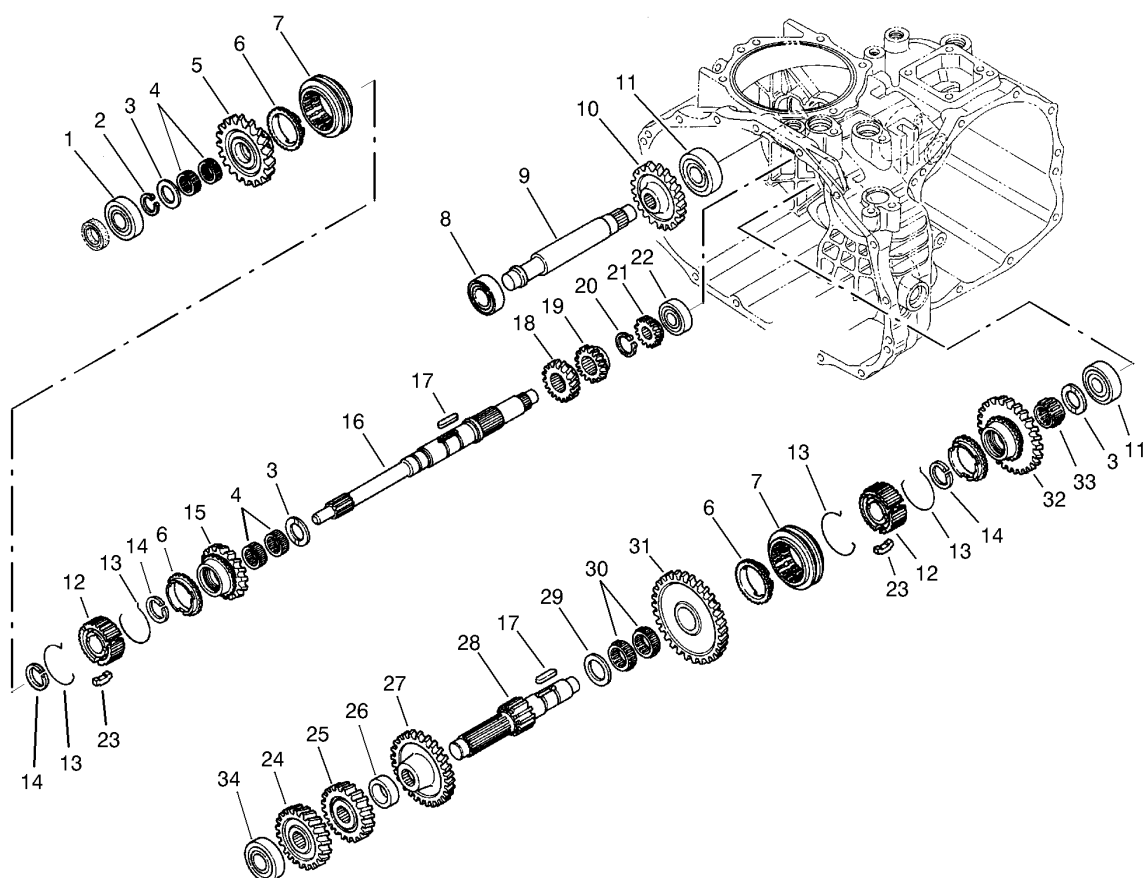 

Gear Shaft Assembly Transaxle Assembly No. 105-4180


Ref	Part No.	Qty.	Description
1	251-8	1	Bearing-Ball
2	92-0753	1	Ring-Snap
3	92-0740	3	Washer-Thrust
4	92-0781	4	Bearing-Needle
5	92-0820	1	Gear-Main, 27 Tooth
6	92-0667	3	Ring-Synchro
7	92-0668	2	Shifter-Synchro
8	251-346	2	Bearing-Ball
9	92-0824	1	Shaft-Idler, Reverse
10	92-0684	1	Gear-Reverse, 33 Tooth
11	92-0778	2	Bearing
12	92-0664	2	Hub-Synchro
13	92-0666	4	Spring-Synchro
14	92-0763	3	Ring-Snap
15	92-0821	1	Gear-Main, 24 Tooth
16	92-0663	1	Shaft-Main
17	92-0772	2	Key
18	92-0687	1	Gear-Main, 16 Tooth
19	92-0672	1	Gear-Main, 18 Tooth
20	92-0754	1	Ring-Snap
21	92-0673	1	Gear-Main, 14 Tooth
22	92-0650	1	Bearing
23	92-0665	6	Key-Synchro
24	92-0822	1	Gear-Reduction, 28 Tooth

Ref	Part No.	Qty.	Description
25	92-0679	1	Gear-Reduction, H23 Tooth
26	92-0680	1	Collar
27	92-0823	1	Gear-Reduction, 43 Tooth
28	92-0674	1	Shaft-Reduction
29	92-0682	1	Washer-Thrust
30	92-0681	2	Bearing-Needle
31	92-0677	1	Gear-Reduction, 49 Tooth
32	92-0819	1	Gear-Reduction, 40 Tooth
33	92-0782	1	Bearing-Needle
34	105-7985	1	Bearing

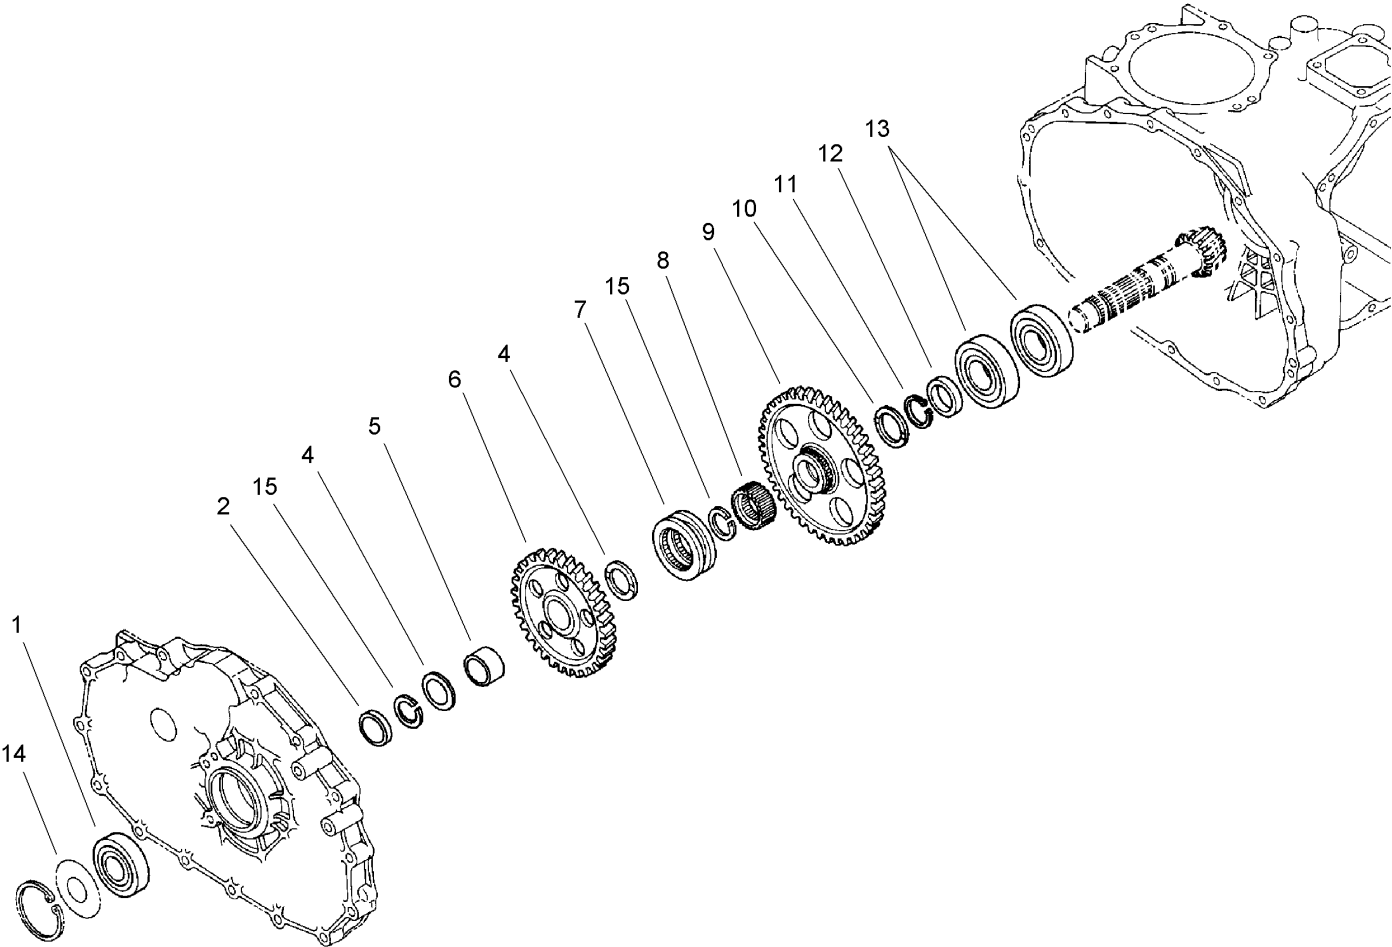 


Countershaft Assembly
Transaxle Assembly No. 105-4180

Ref	Part No.	Qty.	Description				
1	92-0712	1	Bearing-Ball				
2	92-0716	1	Collar				
4	92-0711	2	Washer-Thrust				
5	92-0783	1	Race-Inner				
6	92-0715	1	Gear-Shaft, Counter				
7	92-0718	1	Shifter				
8	105-7986	1	Collar-Spline				
9	92-0717	1	Gear-Shaft, Counter				
10	92-0741	1	Washer-Thrust				
11	92-0755	1	Ring-Snap				
12	92-0713	1	Collar				
13	92-0714	2	Bearing				
14	92-0710	1	Gear-Ring				
15	105-7987	2	Ring-Snap				

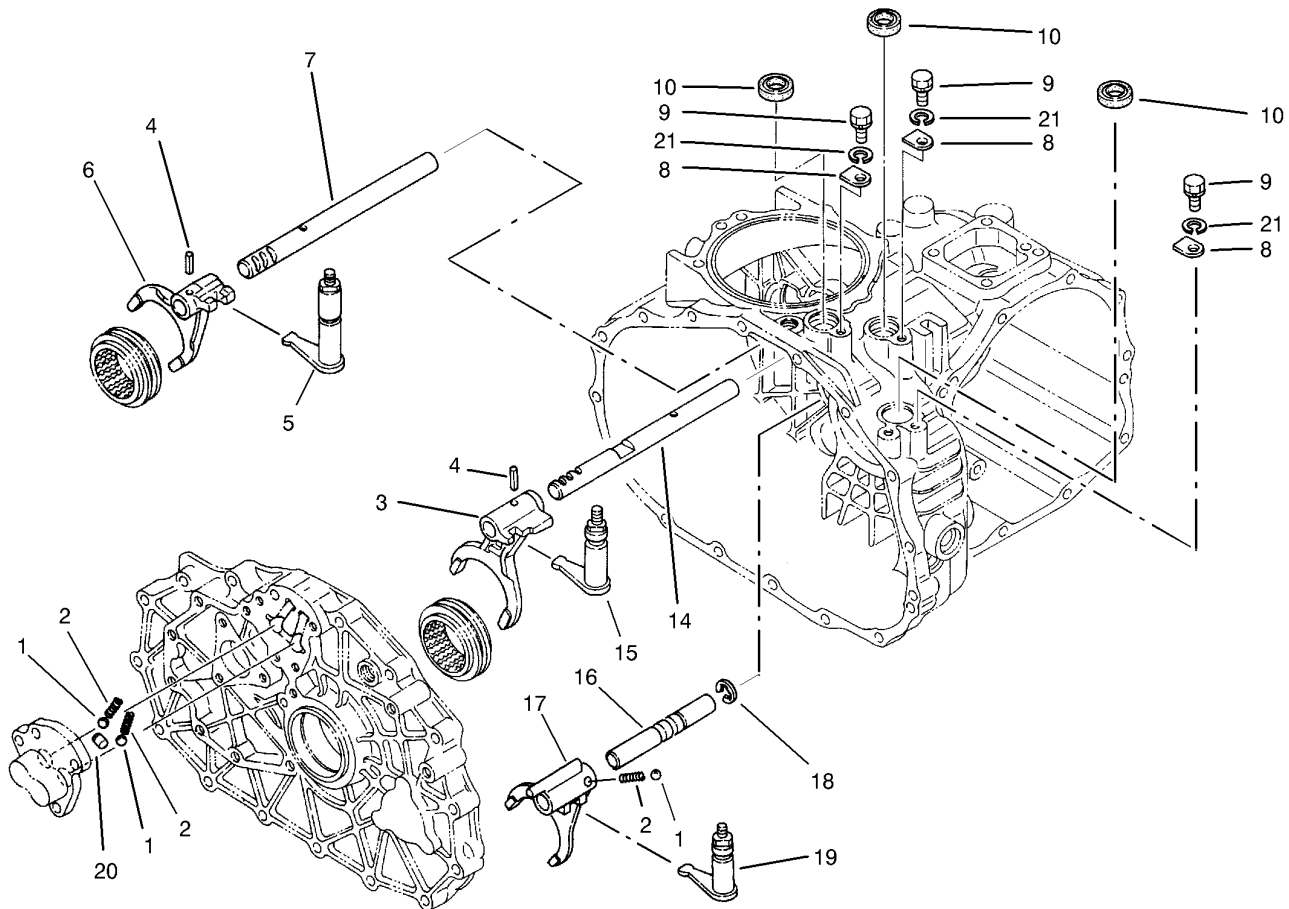 

Shift Fork Assembly
Transaxle Assembly No. 105-4180


Ref	Part No.	Qty.	Description				
1	92-0785	3	Ball-Steel				
2	92-0731	3	Spring				
3	92-0700	1	Fork-Shift				
4	92-0769	2	Pin-Roll				
5	92-0817	1	Arm-Shift				
6	92-0701	1	Fork-Shift				
7	92-0699	1	Shaft-Fork				
8	92-0732	3	Plate-Keeper				
9	48-7700	3	Screw-HH				
10	92-0729	3	Seal-Oil				
14	92-0698	1	Shaft-Fork				
15	92-0816	1	Arm-Shift				
16	92-0708	1	Shaft-Fork				
17	92-0709	1	Fork-Shift				
18	92-0761	1	Ring-E				
19	92-0818	1	Arm-Shift				
20	92-0705	1	Lock-Spindle				
21	42-9850	3	Washer-Lock, Spring				

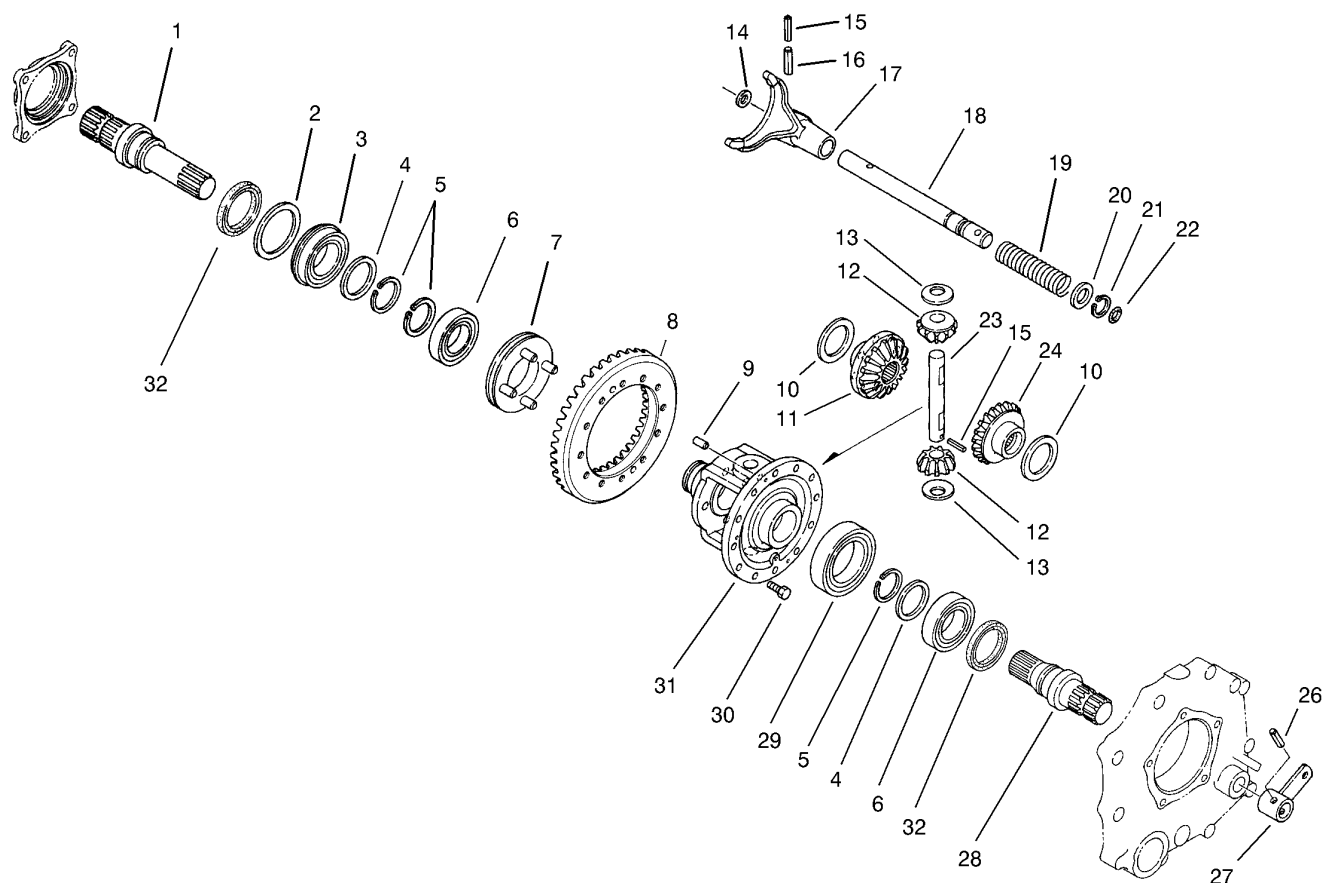 

Differential Gear Assembly Transaxle Assembly No. 105-4180


Ref	Part No.	Qty.	Description
1	92-0726	1	Shaft-Axle, Right
2	92-0728	1	Washer
3	92-0780	1	Bearing
4	92-0727	2	Washer
5	92-0756	3	Ring-Snap
6	92-0775	2	Bearing
7	92-0730	1	Slider-Differential, Lock
8	105-7983	1	Countershaft And Ring Gear
9	92-0765	2	Pin-Parallel
10	92-0747	2	Side-Gear, Left Inner
11	92-0746	1	Gear-Side, RH
12	92-0748	2	Pinion-Differential
13	92-0750	2	Washer
14	92-0744	1	Washer
15	92-0768	2	Pin-Roll, Spring
16	92-0771	1	Pin-Roll, Spring
17	92-0721	1	Fork-Lock, Differential
18	92-0722	1	Shaft-Fork, Lock Differential
19	92-0723	1	Spring-Lock, Differential
20	92-0733	1	Washer
21	92-0753	1	Ring-Snap
22	92-0787	1	O-Ring
23	92-0749	1	Shaft-Pinion
24	92-0745	1	Gear-Side, LH

Ref	Part No.	Qty.	Description
26	92-0770	1	Pin-Roll, Spring
27	92-0724	1	Arm-Lock, Differential
28	92-0725	1	Shaft-Axle, Left
29	92-0776	1	Bearing
30	92-0803	12	Bolt
31	92-0720	1	Case-Differential
32	92-0793	2	Seal-Oil

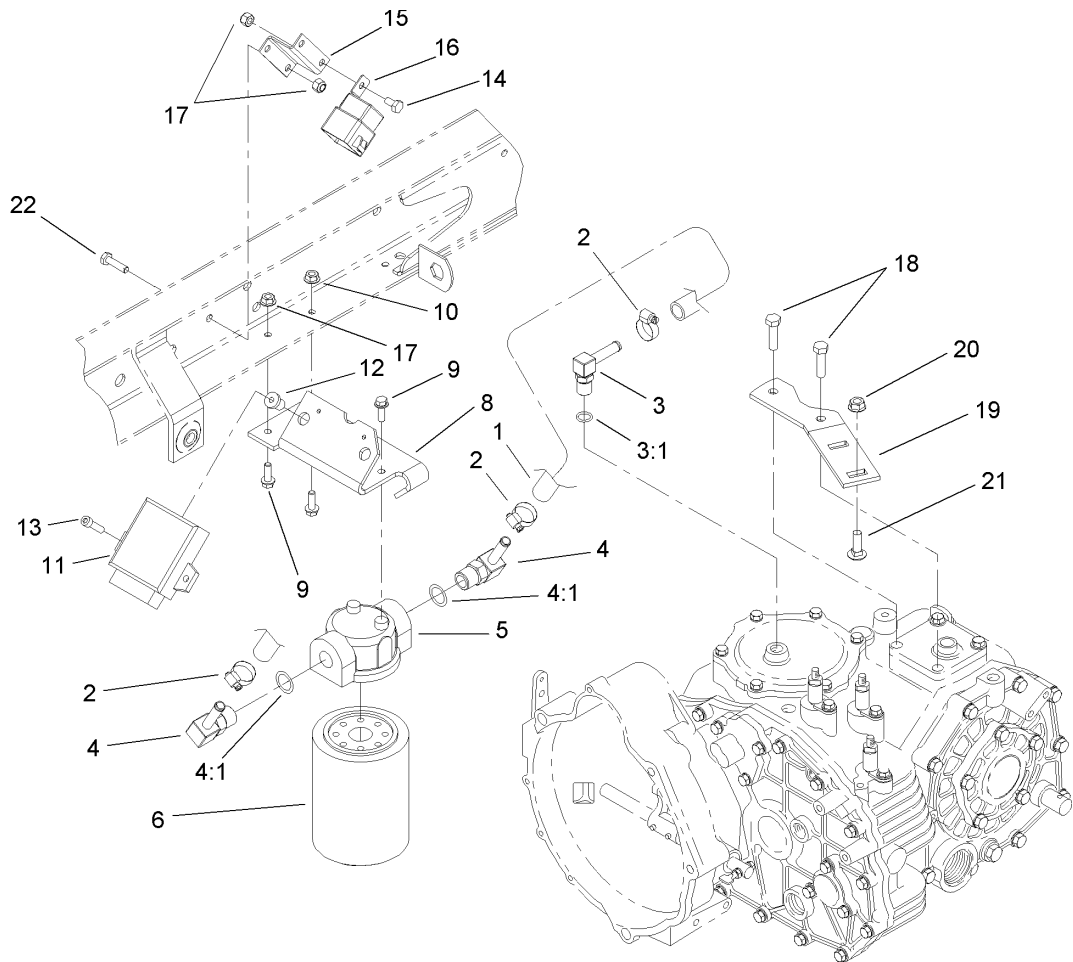 


Hydraulic Filter and Relay Assembly

Ref	Part No.	Qty.	Description				
1	87-5730	1	Hose				
2	2412-36	3	Clamp-Hose				
3	354-135	1	Fitting-HYD, 90 DEG				
3:1	237-42	1	O-Ring				
4	354-134	2	Fitting-HYD, 90 DEG				
4:1	237-79	1	O-Ring				
5	87-8780	1	Head-Filter				
6	54-0110	1	Filter-Oil, Transmission				
8	105-4199	1	Bracket-Mount, Filter				
9	3234-4	3	Screw-HHF				
10	32128-33	1	Nut-HF				
11	105-1768	1	Ecm				
12	32117-1	2	Nut-Insert				
13	3274-9	2	Screw-HSH				
14	321-2	2	Screw-HH				
15	105-1776	1	Bracket-Mount, Relay				
16	99-7430	2	Relay				
17	32128-33	4	Nut-HF				
18	33114-030	2	Screw-HH				
19	105-9472	1	Plate-Mount, Muffler				
20	32128-20	2	Nut-HF				
21	3230-2	2	Bolt-CARR				
22	321-4	2	Screw-HH				

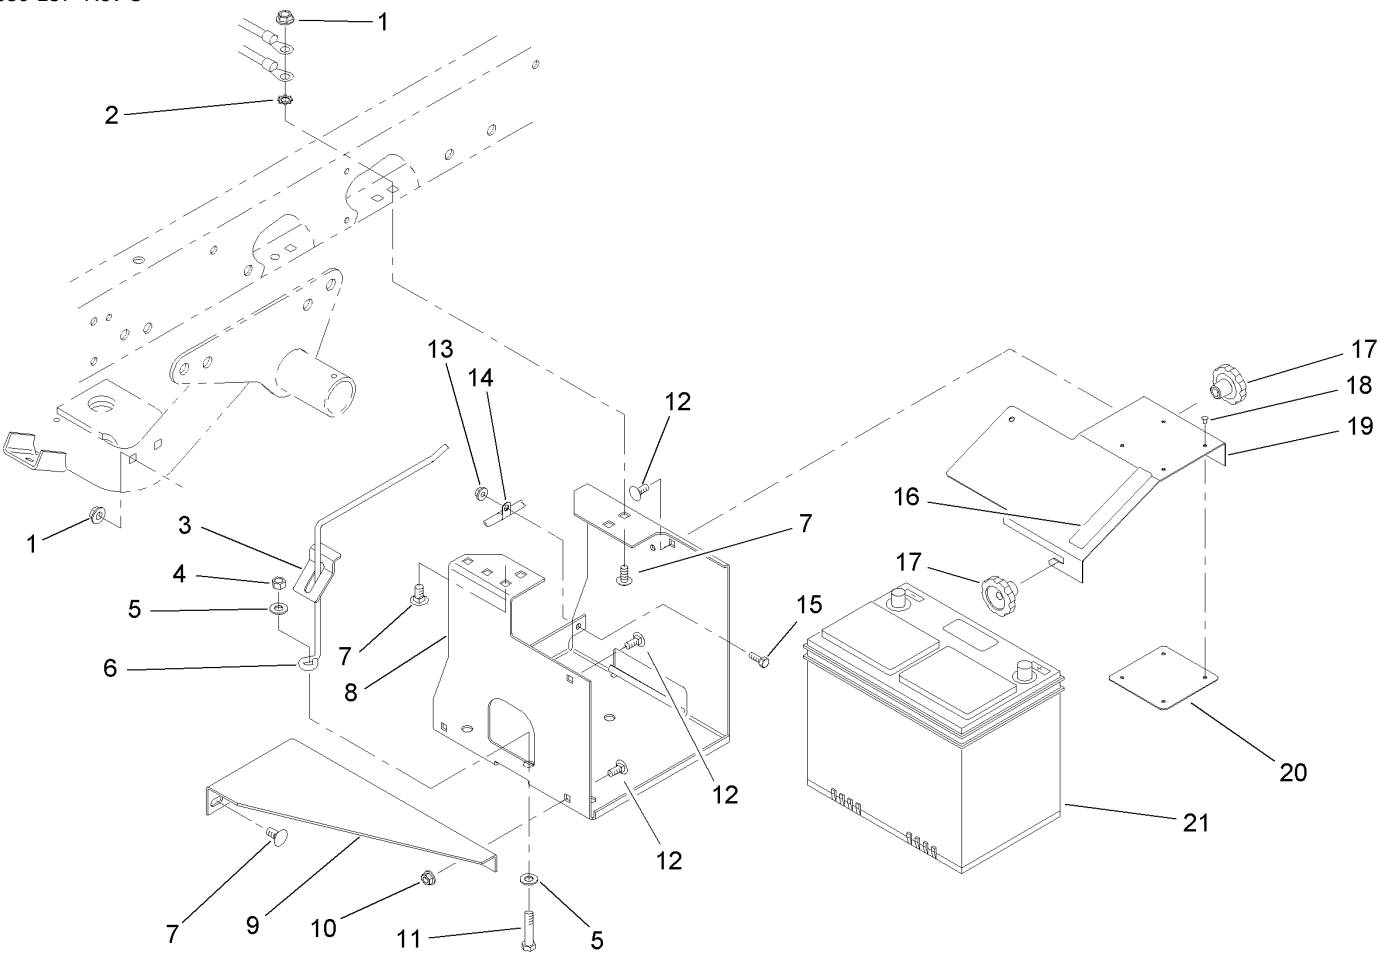 

Battery Assembly


Ref	Part No.	Qty.	Description				
1	3290-357	6	Nut-HHF, Whiz				
2	3255-9	1	Washer-Lock, EXT				
3	87-7610	1	Tab-Support, Battery				
4	3296-39	1	Nut-Lock, NI				
5	3256-24	2	Washer-Flat				
6	87-7600	1	Rod-Support, Battery				
7	3231-21	6	Screw-CARR				
8	87-5120-03	1	Bracket-Holder, Battery				
9	87-5110-03	1	Support-Base, Battery				
10	32128-20	2	Nut-HF				
11	323-9	1	Screw-HH				
12	3230-23	4	Screw-CARR				
13	32128-33	1	Nut-HF				
14	2412-89	1	Clamp				
15	321-4	1	Screw-HH				
16	93-6687	1	Decal-No Step				
17	19-4050	2	Knob				
18	3269-27	4	Rivet-Snap				
19	87-5130-03	1	Cover-Battery				
20	87-7620	1	Shield-Terminal, Battery				
21	106-5190	1	Battery				

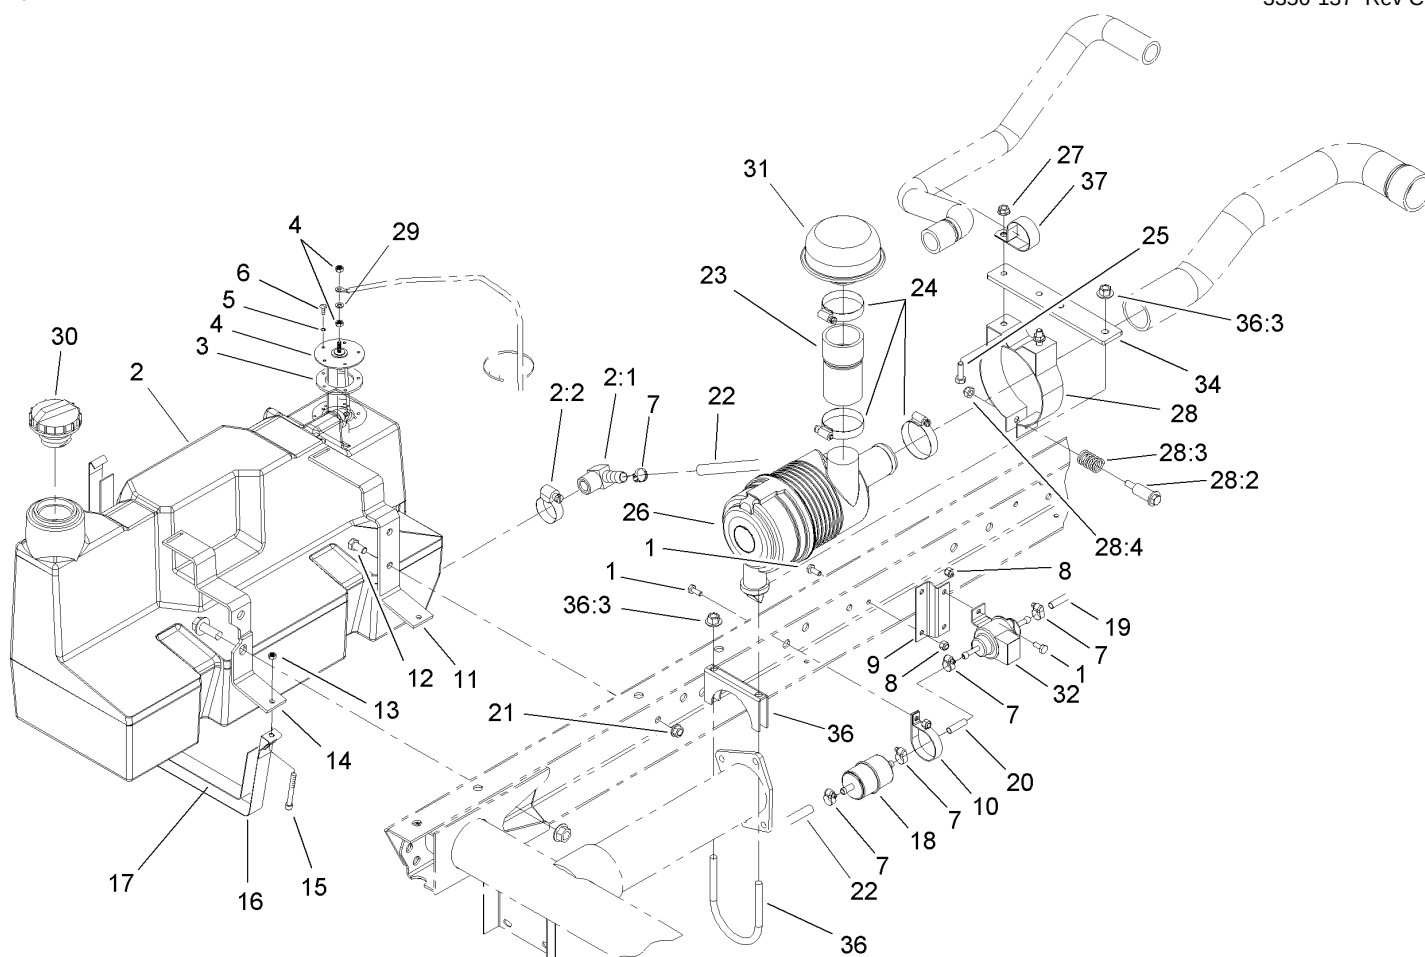 

Fuel Tank and Air Cleaner Assembly


Ref	Part No.	Qty.	Description
1	321-3	5	Screw-HH
2	98-2919	1	Tank-Fuel
2:1	353-781	1	Fitting-Elbow
2:2	2412-36	1	Clamp-Hose
3	62-7650	1	Gasket
4	63-7640	1	Sender-Fuel
5	3253-15	5	Washer-Lock
6	32122-24	5	Screw-PTH
7	2412-108	5	Clamp-Worm
8	32128-33	5	Nut-HF
9	105-1774	1	Bracket-Pump, Fuel
10	2412-148	1	Clamp-R
11	87-3140-03	1	Support-Gas Tank, Rear
12	323-4	2	Screw-HH
13	3296-42	2	Nut-Lock, NI
14	87-3150-03	1	Support-Gas Tank, Front
15	3274-54	2	Screw-HSH
16	87-3160	2	Strap-Tank, Gas
17	87-3170	2	Felt-Strap
18	105-8045	1	Filter-Fuel
19	94-1349	1	Hose-Fuel
20	80-7360	1	Hose-Fuel
21	3290-357	2	Nut-HHF, Whiz
22	63-9640	1	Hose

Ref	Part No.	Qty.	Description
23	107-7962	1	Hose-Cleaner, Air
24	2412-92	3	Clamp-Hose
25	322-5	2	Screw-HH
26	106-6732	1	Air Cleaner ASM
27	32128-20	2	Nut-HF
28	93-2191	1	Band-Mounting, Air Cleaner
28:2	94-3653	1	Bolt
28:3	94-3654	1	Spring
28:4	48-9510	1	Nut
29	5-3637	1	Spacer
30	93-3101	1	Cap-Fuel
31	46-7510	1	Hood-Inlet, Air
32	99-9196	1	Pump-Fuel
34	106-7948-03	1	Bracket-Mount
36	107-7954	1	Clamp-Muffler
36:3	32128-43	2	Nut-Flange
37	2412-147	1	Clamp

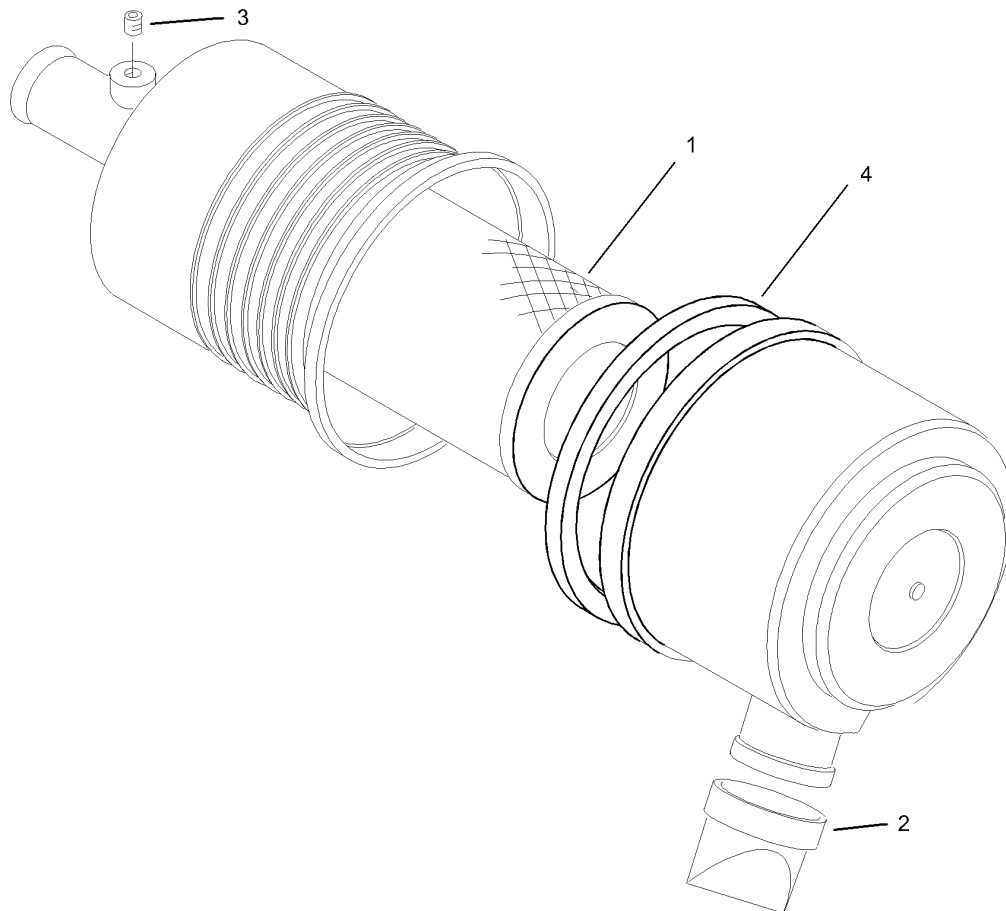 

Air Cleaner Assembly No. 106-6732

Ref	Part No.	Qty.	Description
1	93-2195	1	Filter
2	104-0498	1	Valve-Vacuator
3	285-17	1	Plug-Pipe
4	106-6748	1	Gasket

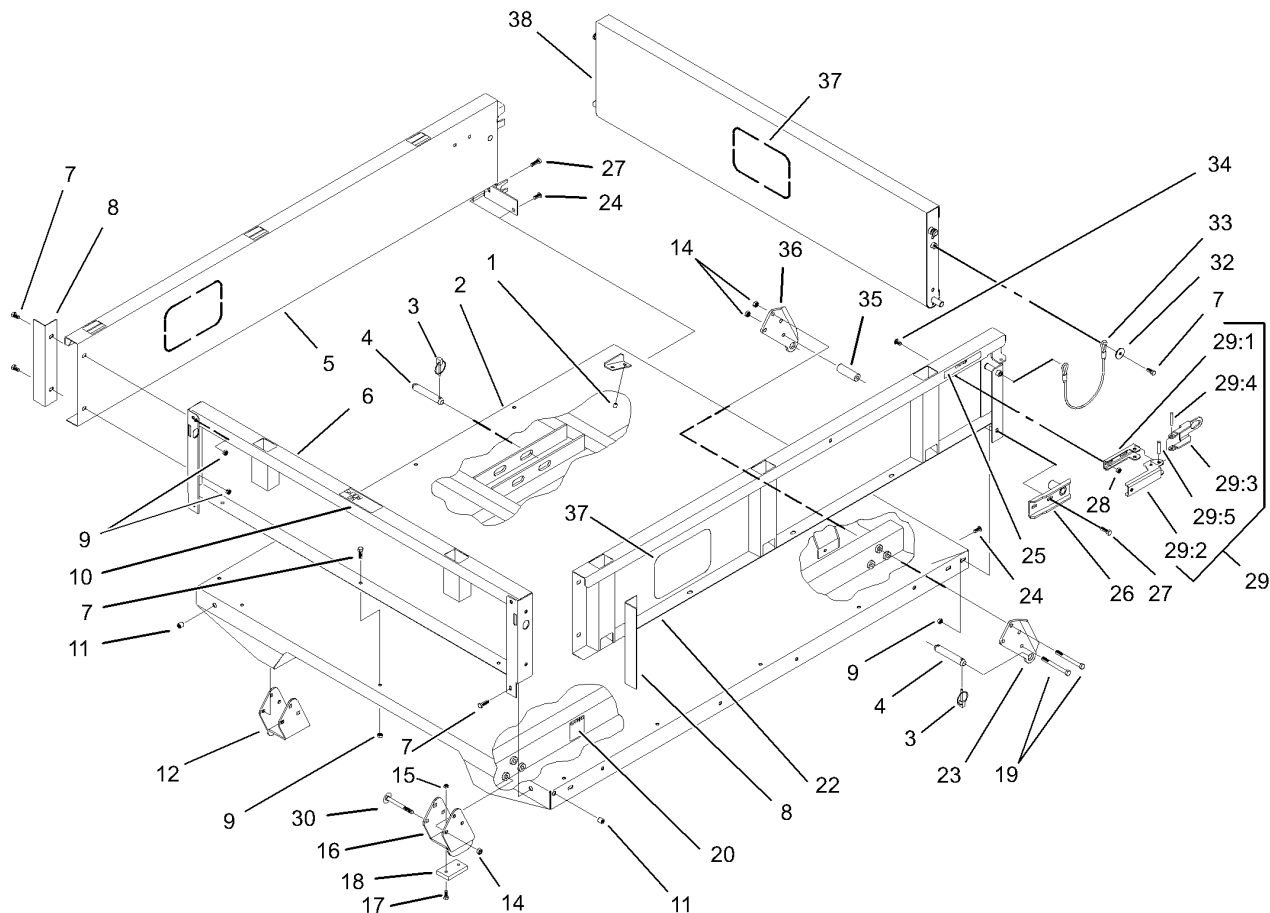 


Full Bed and Side Panel Assembly

Ref	Part No.	Qty.	Description
1	32148-6	4	Insert-Nut
2	93-9724-03	1	Flatbed-Full
3	92-1298	8	Pin-Lynch
4	92-1233	4	Pin-Clevis
5	92-1255-03	1	RH Side Panel ASM
6	92-5974-03	1	Front Panel ASM
7	3234-7	21	Screw-HHF
8	92-1320-03	2	Angle-Side
9	32128-35	23	Nut-HF
10	93-6689	1	Decal-No Riders
11	32148-7	4	Insert-Nut
12	106-2423-03	1	RH Spacer Bracket ASM
14	3296-44	14	Nut-Lock, NI
15	3296-42	4	Nut-Lock, NI
16	106-2422-03	1	LH Spacer Bracket ASM
17	3250-45	4	Screw-SPH
18	93-9719	2	Block-Wear
19	323-42	8	Screw-HH
20	93-9899	2	Decal-Warning
22	92-1248-03	1	LH Side Panel ASM
23	93-9720-03	2	Bracket-Pivot, Long (LH)
24	3230-1	2	Bolt-CARR
25	93-9868	2	Decal-Caution
26	92-1265-03	2	Bracket-Pivot

Ref	Part No.	Qty.	Description
27	3234-29	6	Screw-HHF
28	32128-20	4	Nut-HF
29	99-1123	2	Latch ASM
29:1	92-1271	1	Pivot-Latch
29:2	99-1113	1	Handle-Latch
29:3	99-1112	1	Plate-Retainer
29:4	32121-78	1	Pin-Roll
29:5	32121-25	1	Pin-Roll
30	3231-24	6	Screw-CARR
32	3256-57	4	Washer-Flat
33	93-9595	2	Lanyard (Only On: 07213)
34	3230-15	4	Screw-CARR
35	93-9575	2	Tube-Pivot, Flatbed
36	93-9721-03	2	Bracket-Pivot, Long (RH)
37	105-4222	3	Decal
38	92-1259-03	1	Tailgate-Rear




Ref	Part No.	Qty.	Description				
1	112-2982	1	Cylinder ASM				
20	99-9003	1	Seal-Oil				
127	99-9008	1	Plug-Welch				
228	99-9006	1	Screw-Hex				
318	99-9005	1	Screw-Hex				
415	99-9010	1	Plug-Welch				
493	104-9232	1	Plate-End, Rear				
508	99-9004	1	Screw-Hex				
713	99-9002	1	Bushing				
718	99-9012	1	Pin-Locating				
724	99-9022	1	Retainer-Seal				
818	99-9007	1	Stud-Metric				
1019	110-2595	1	Label Kit				
1027	108-3842	1	Filter-Oil				
1028	105-9337	1	Adapter-Filter, Oil				
1058	99-9019	1	Manual-Owners, Engine				
1069	99-9020	1	Nozzle-Oil				
1080	99-9021	1	Gasket-Retainer				
127A	107-9892	1	Plug-Welch (Cam)				
718A	99-9013	1	Pin-Locating				
718B	99-9014	1	Pin-Locating				

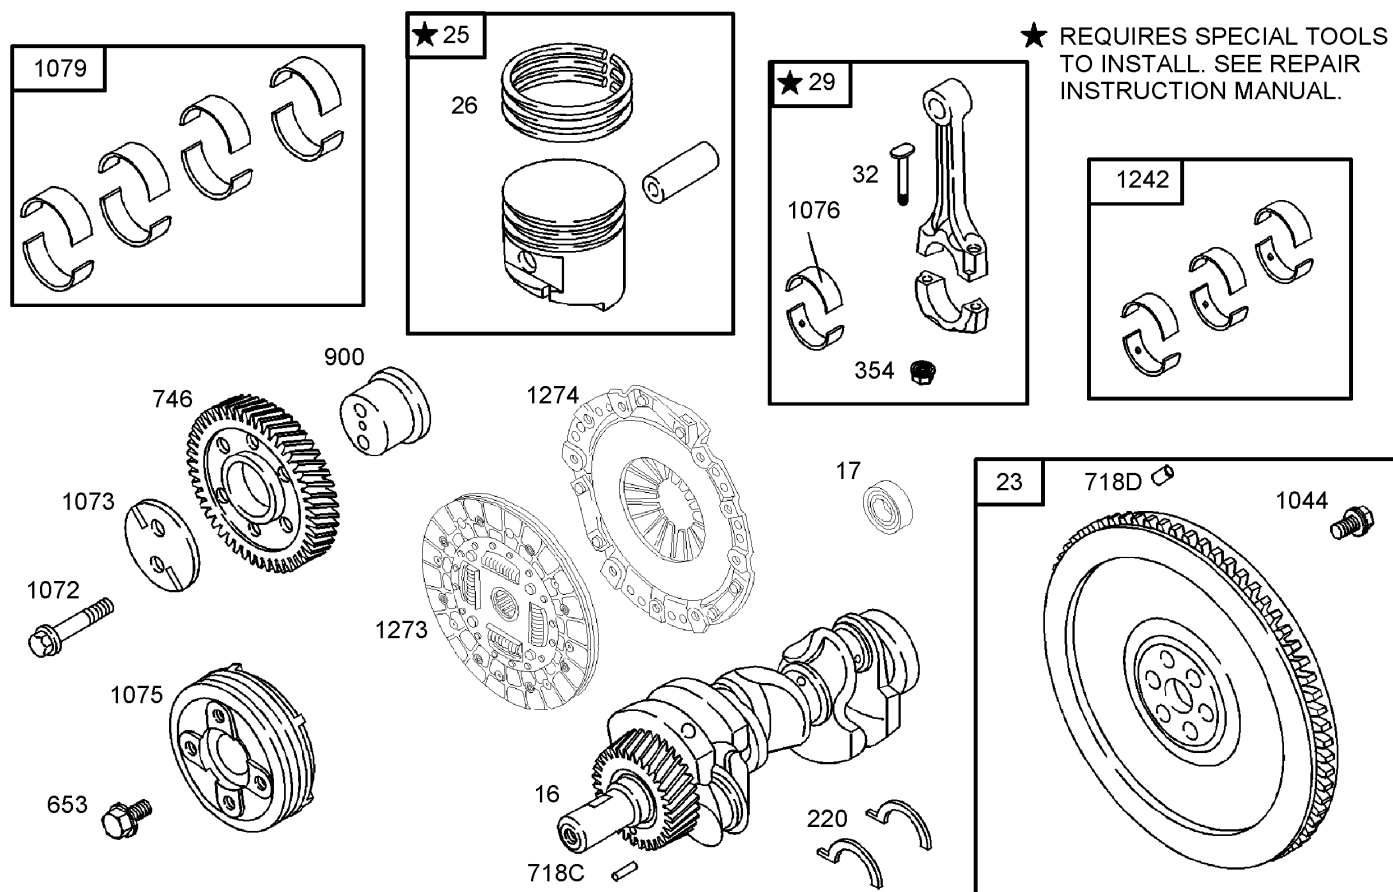 

Assemblies include all parts shown in frames.

Crankshaft Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
16	105-9339	1	Crankshaft	1242	99-9043	1	Set-Bearing, Rod
17	105-9324	1	Bearing-Ball, Radial	1242	99-9044	1	Set-Bearing, Rod (.010 Undersized)
23	105-9323	1	Flywheel ASM	1273	104-9219	1	Disc-Clutch
25	99-9025	1	Piston ASM (Standard)	1274	104-9231	1	Plate-Pressure, Clutch
25	99-9026	1	Piston ASM (.010 Over)	718C	99-9037	1	Pin-Locating
26	99-9027	1	Ring Set (Standard)	718D	106-1852	1	Pin-Locating
26	99-9028	1	Ring Set (.010 Over)				
29	99-9029	1	Rod-Connecting				
32	99-9030	1	Screw-Rod, Connecting				
220	99-9035	1	Washer-Thrust				
220	99-9036	1	Washer-Thrust (.005 In Oversized)				
354	99-9034	1	Nut-Hex				
653	107-9897	1	Screw-Hex				
746	99-9609	1	Gear-Drive				
900	99-9039	1	Shaft-Gear				
1044	99-9031	1	Screw-Hex				
1072	99-9032	1	Screw-Hex				
1073	99-9040	1	Plate-Gear, Idler				
1075	99-9041	1	Pulley-Crankshaft				
1076	99-9042	1	Bearing-Rod				
1079	99-9045	1	Set-Bearing, Main (Set Of 8)				
1079	99-9046	1	Set-Bearing, Main (.010 Undersized)				

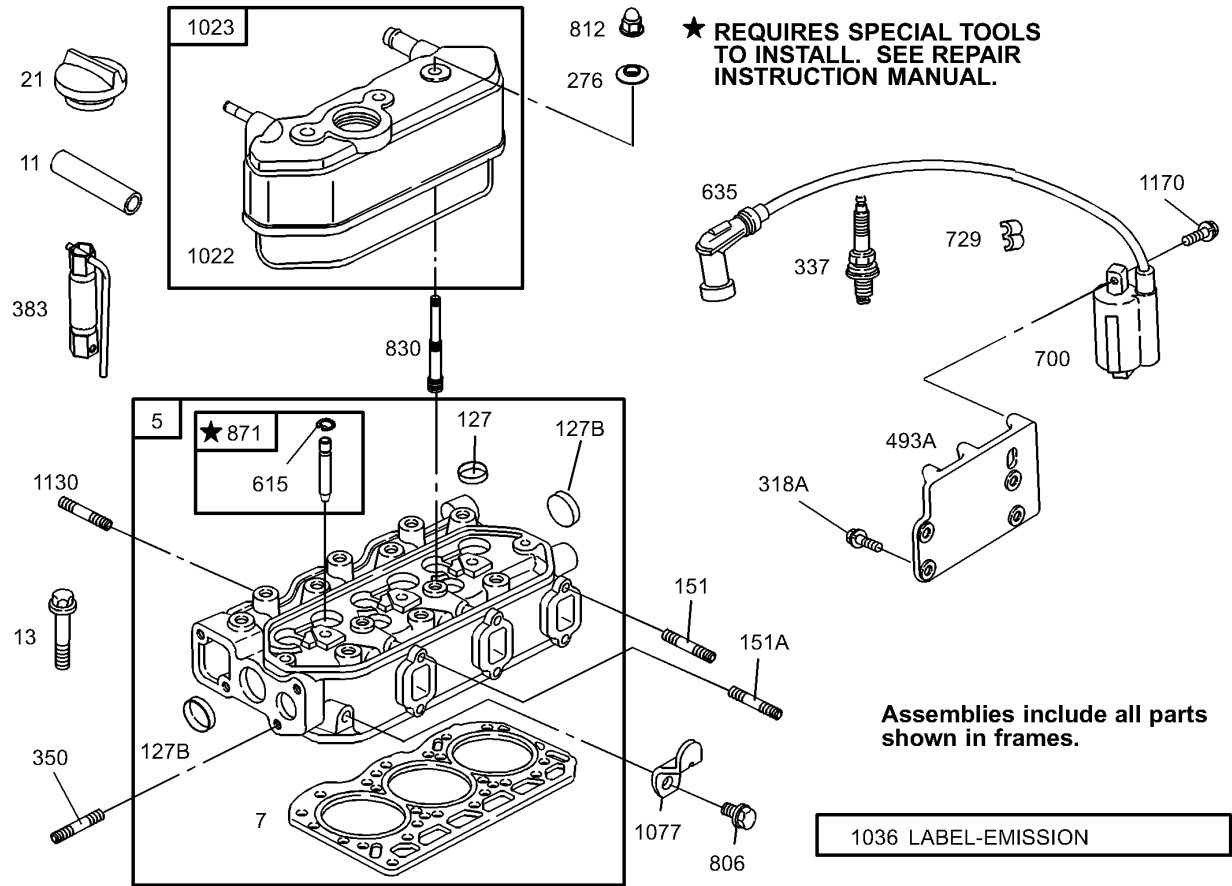 

Cylinder Head Assembly

Ref	Part No.	Qty.	Description
5	106-1853	1	Head-Cylinder
7	99-9254	1	Gasket-Head, Cylinder
11	105-9322	1	Hose-Breather
13	99-9614	1	Screw-Metric
21	99-9052	1	Cap-Fill, Oil
127	99-9060	1	Plug-Welch
151	99-9058	1	Stud-Metric
276	99-9063	1	Washer-Seal
337	108-6945	1	Plug-Spark
350	99-9057	1	Stud-Metric
383	94-1664	1	Wrench-Spark Plug
615	99-9067	1	Retainer
635	99-9068	1	Boot-Plug, Spark
700	99-9069	1	Coil-Ignition
729	99-9066	1	Clip-Wire
806	99-9270	1	Screw-Hex
812	99-9061	1	Nut-Hex, Metric
830	99-9101	1	Stud-Arm, Rocker
871	99-9070	1	Bushing-Guide
1022	99-9073	1	Gasket-Cover, Rocker
1023	99-9074	1	Cover-Rocker
1036	99-9075	1	Emission Label Kit
1077	99-9076	1	Bracket-Lifting
1130	99-9055	1	Stud-Metric


Ref	Part No.	Qty.	Description
1170	99-9056	1	Screw-Hex
127B	99-9008	1	Plug-Welch
151A	99-9059	1	Stud-Metric
318A	99-9202	1	Screw-Hex
493A	99-9065	1	Bracket-Mounting

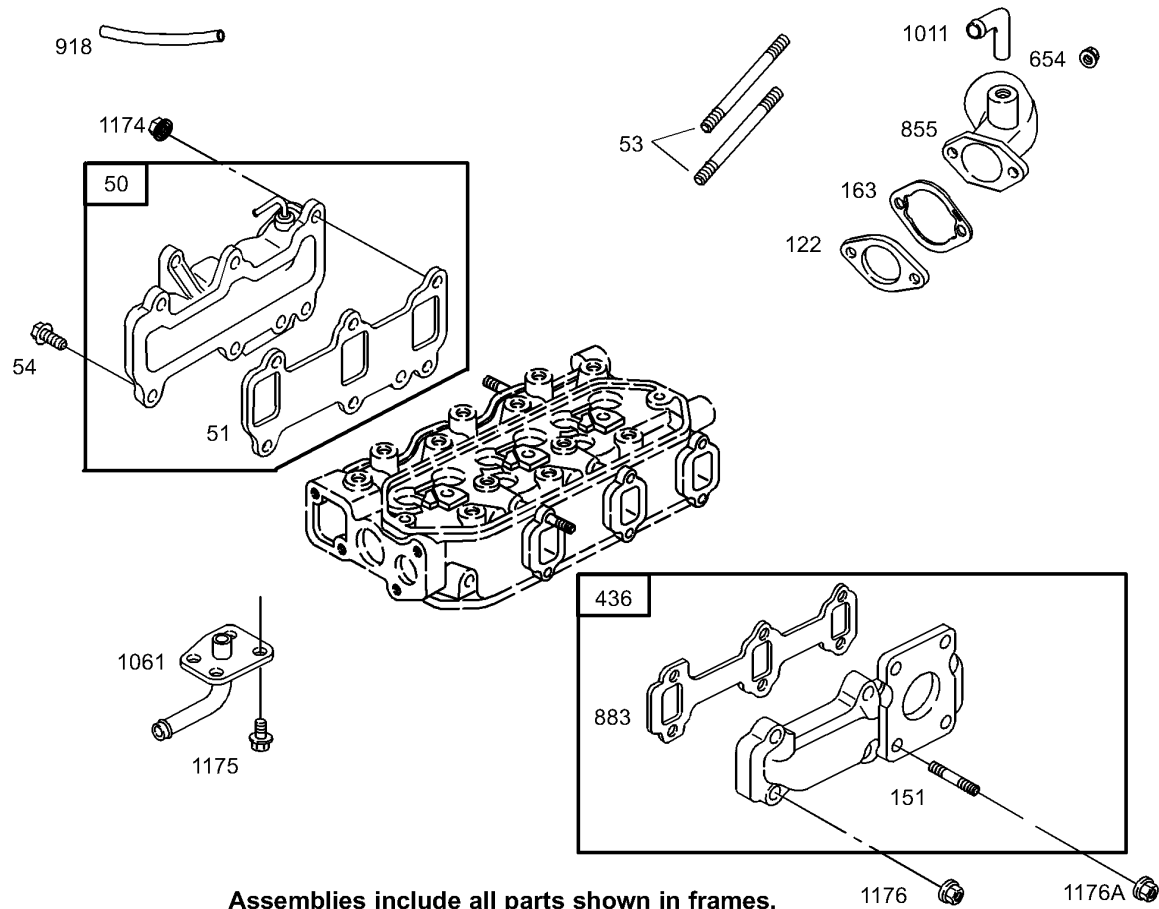 

Assemblies include all parts shown in frames.

Manifold Assembly


Ref	Part No.	Qty.	Description				
50	105-9325	1	Manifold-Intake				
51	99-9173	1	Gasket-Intake				
53	106-1854	1	Stud				
54	99-9004	1	Screw-Hex				
122	99-9184	1	Spacer-Carburator				
151	99-9221	1	Stud-Standard				
163	105-9329	1	Gasket-Funnel, Air				
436	99-9177	1	Manifold-Exhaust				
654	99-9186	1	Nut-Hex, Metric				
855	105-9328	1	Funnel-Air				
883	106-1855	1	Gasket-Exhaust				
918	105-9330	1	Hose-Vacuum				
1011	99-9198	1	Tube-Vent				
1061	99-9180	1	Cover-Outlet				
1174	99-9114	1	Nut-Hex, Metric				
1175	99-9004	1	Screw-Hex				
1176	99-9175	1	Nut-Hex, Metric				
1176A	99-9176	1	Nut-Hex				

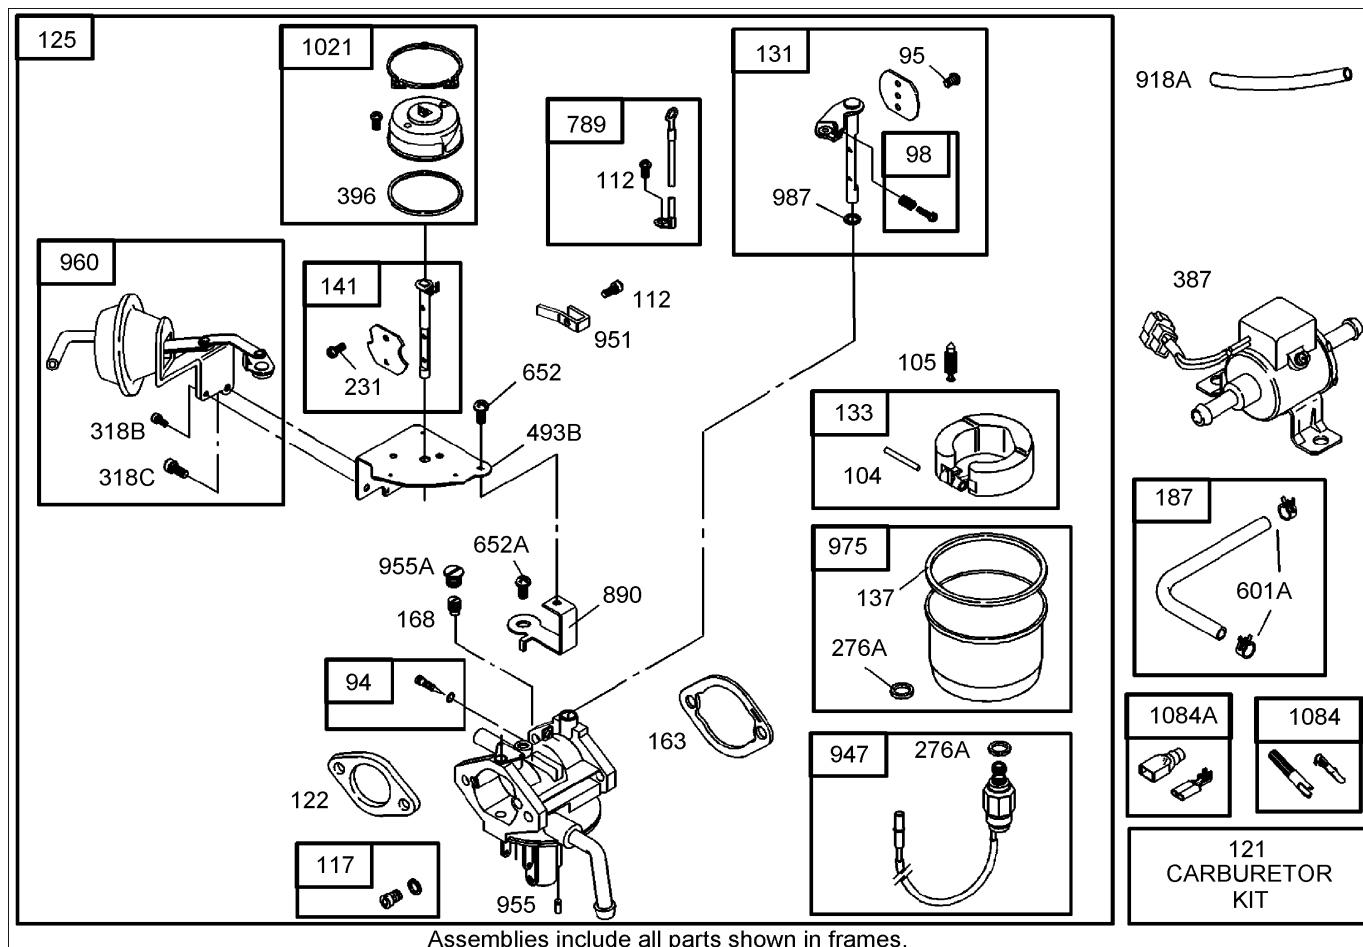 

Carburetor Assembly

Ref	Part No.	Qty.	Description
94	106-1856	1	Idle Mixture Kit
95	106-1857	1	Screw
98	106-1858	1	Idle Speed Kit
104	106-1859	1	Pin-Hinge, Float
105	106-1860	1	Valve-Needle, Float
112	105-2063	2	Screw-Mtg., Valve
117	110-2564	1	Jet-Main
121	110-2565	1	Carburetor Kit
122	99-9184	1	Spacer-Carburetor
125	110-2563	1	Carburetor Assembly
131	110-2566	1	Throttle Shaft Kit
133	106-1864	1	Float-Carburetor
137	106-1865	1	Gasket-Bowl, Float
141	106-1866	1	Choke Shaft Kit
163	105-9329	1	Gasket-Funnel, Air
168	106-1953	1	Jet-Circuit, Idle
187	99-9238	1	Line-Fuel
231	106-1857	1	Screw
387	99-9196	1	Pump-Fuel
396	106-1871	1	Gasket-Cover, Choke
652	106-1869	1	Screw
789	106-1875	1	Harness-Wiring
890	106-1876	1	Bracket-Support
947	110-2511	1	Solenoid-Valve

Ref	Part No.	Qty.	Description
951	106-1878	1	Lever-Choke
955	106-1879	1	Plug-Carburetor
960	106-1881	1	Break-Choke, Vacuum
975	106-1882	1	Bowl-Float
987	106-1883	1	Seal-Shaft, Throttle
1021	106-1883	1	Activator-Choke
1084	99-9245	1	Connector
276A	106-1868	1	Washer-Sealing
318B	106-1869	1	Screw
318C	106-1870	1	Screw
493B	106-1872	1	Bracket-Mounting
601A	99-9242	1	Clamp-Hose
652A	106-1874	1	Screw
918A	105-9330	1	Hose-Vacuum
955A	106-1880	1	Plug-Carburetor
1084A	99-9098	1	Connector

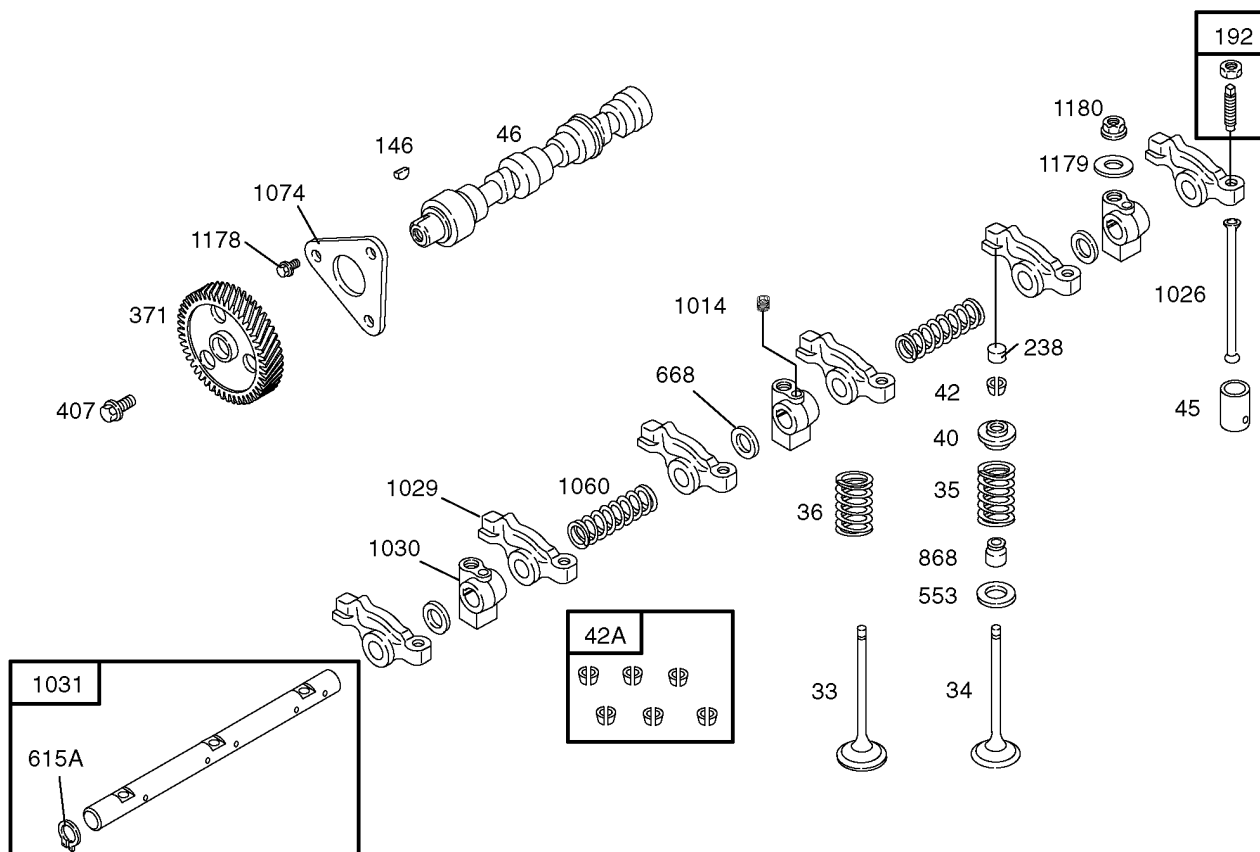 


Assemblies include all parts shown in frames.

Cam Shaft Assembly

Ref	Part No.	Qty.	Description
33	99-9080	1	Valve-Exhaust
34	99-9081	1	Valve-Intake
35	99-9082	1	Spring-Valve
36	99-9082	1	Spring-Valve
40	99-9084	1	Retainer-Valve
42	99-9086	1	Keeper-Valve
45	99-9088	1	Tappet-Valve
46	99-9097	1	Shaft-Cam
146	99-9095	1	Key-Woodruff
192	99-9092	1	Adjuster-Arm, Rocker (Use Before Engine Serial #04090100)
192	112-2978	1	Adjuster-Arm, Rocker (Use Before Engine Serial #04083100)
238	99-9094	1	Cap-Valve (Use Before Engine Serial #04090100)
238	112-2979	1	Cap-Valve (Use Before Engine Serial #04083100)
371	99-9641	1	Gear-Cam
407	99-9085	1	Screw-Metric
42A	99-9087	1	Keeper-Valve (Set Of 6)
553	99-9096	1	Seat-Spring, Valve
668	99-9093	1	Washer-Spacer
868	99-9102	1	Seal-Valve
1014	99-9090	1	Screw-Metric


Ref	Part No.	Qty.	Description
1026	99-9103	1	Rod-Push (Use Before Engine Serial #04090100)
1026	112-2980	1	Rod-Push (Use Before Engine Serial #04083100)
1029	99-9104	1	Arm-Rocker
1030	99-9107	1	Support-Arm, Rocker
1031	99-9106	1	Shaft-Arm, Rocker
1060	99-9108	1	Spring-Shaft, Rocker
1074	99-9109	1	Retainer-Camshaft
1178	99-9083	1	Screw-Hex
1179	99-9079	1	Washer-Flat
1180	99-9091	1	Nut-Hex, Metric
615A	99-9099	1	Retainer

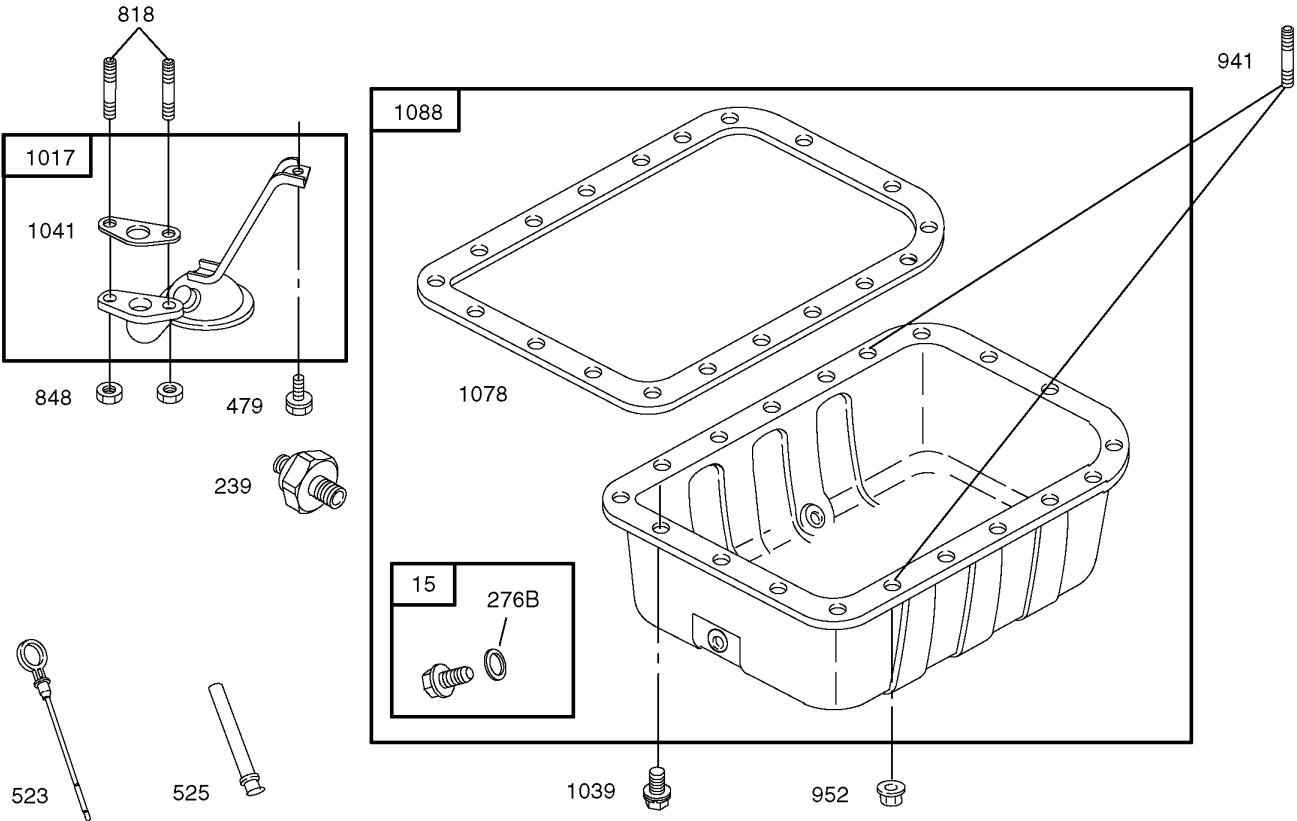 

Assemblies include all parts shown in frames.

Oil Pan Assembly


Ref	Part No.	Qty.	Description				
239	107-9908	1	Switch-Pressure, Oil				
15	99-9247	1	Plug-Drain, Oil				
479	99-9111	1	Screw-Hex				
523	110-2597	1	Dipstick				
525	99-9118	1	Tube-Dipstick				
818	99-9007	1	Stud-Metric				
848	99-9114	1	Nut-Hex, Metric				
941	99-9112	1	Stud-Metric				
952	99-9113	1	Nut-Hex, Metric				
1017	99-9116	1	Screen-Pump, Oil				
1039	99-9111	1	Screw-Hex				
1041	99-9120	1	Gasket-Strainer, Oil				
1078	99-9121	1	Gasket-Pan, Oil				
1088	99-9241	1	Pan-Oil				
276B	99-9249	1	Washer-Seal				

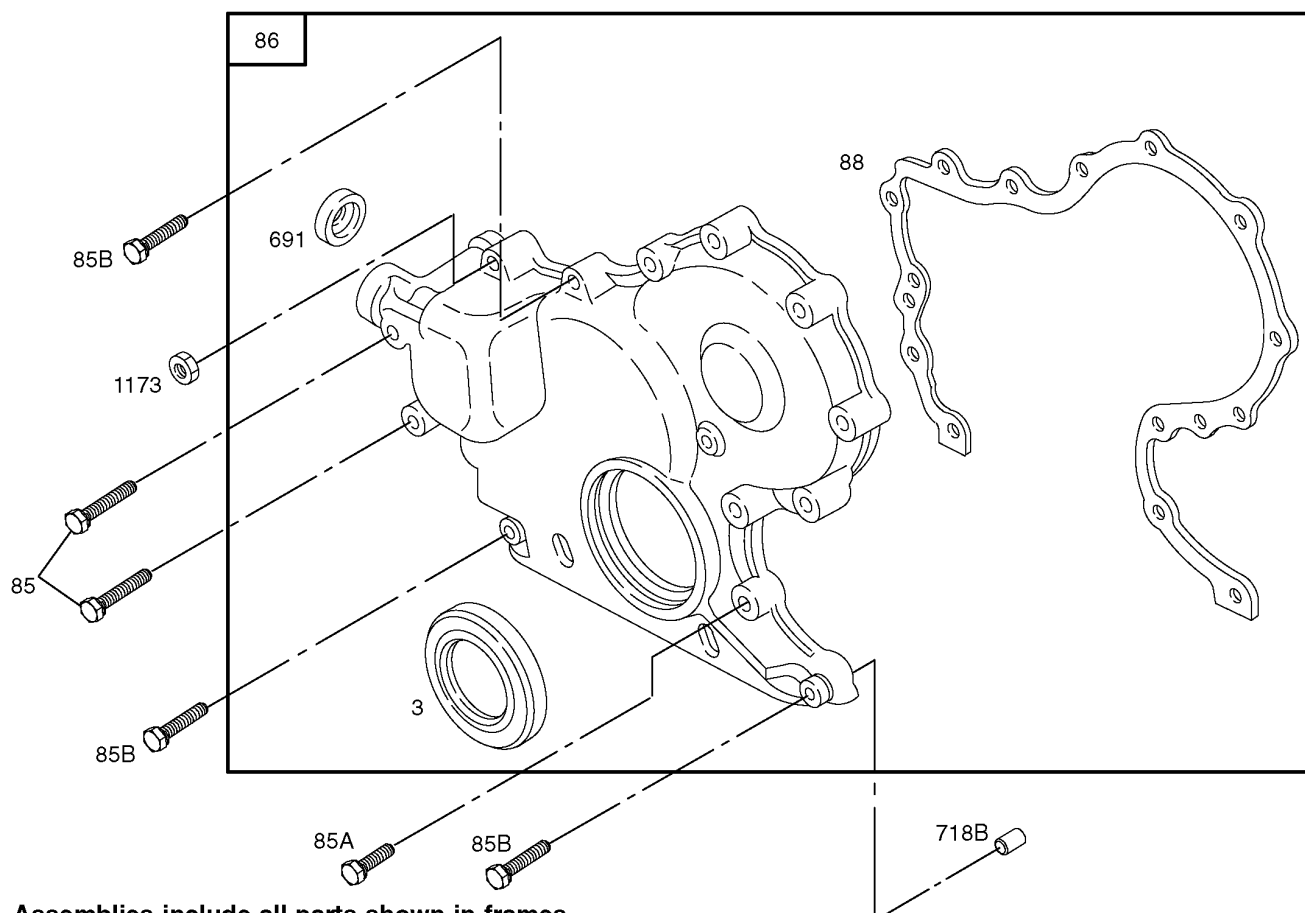 

Assemblies include all parts shown in frames.

Gear Cover Assembly


Ref	Part No.	Qty.	Description				
3	107-9900	1	Seal-Oil				
85	99-9127	1	Screw-Hex				
86	99-9130	1	Gear Cover ASM				
88	99-9132	1	Gasket-Cover				
691	99-9131	1	Seal-Shaft, Governor				
85A	99-9128	1	Screw-Hex				
85B	99-9129	1	Screw-Hex				
1173	99-9114	1	Nut-Hex, Metric				
718B	99-9014	1	Pin-Locating				

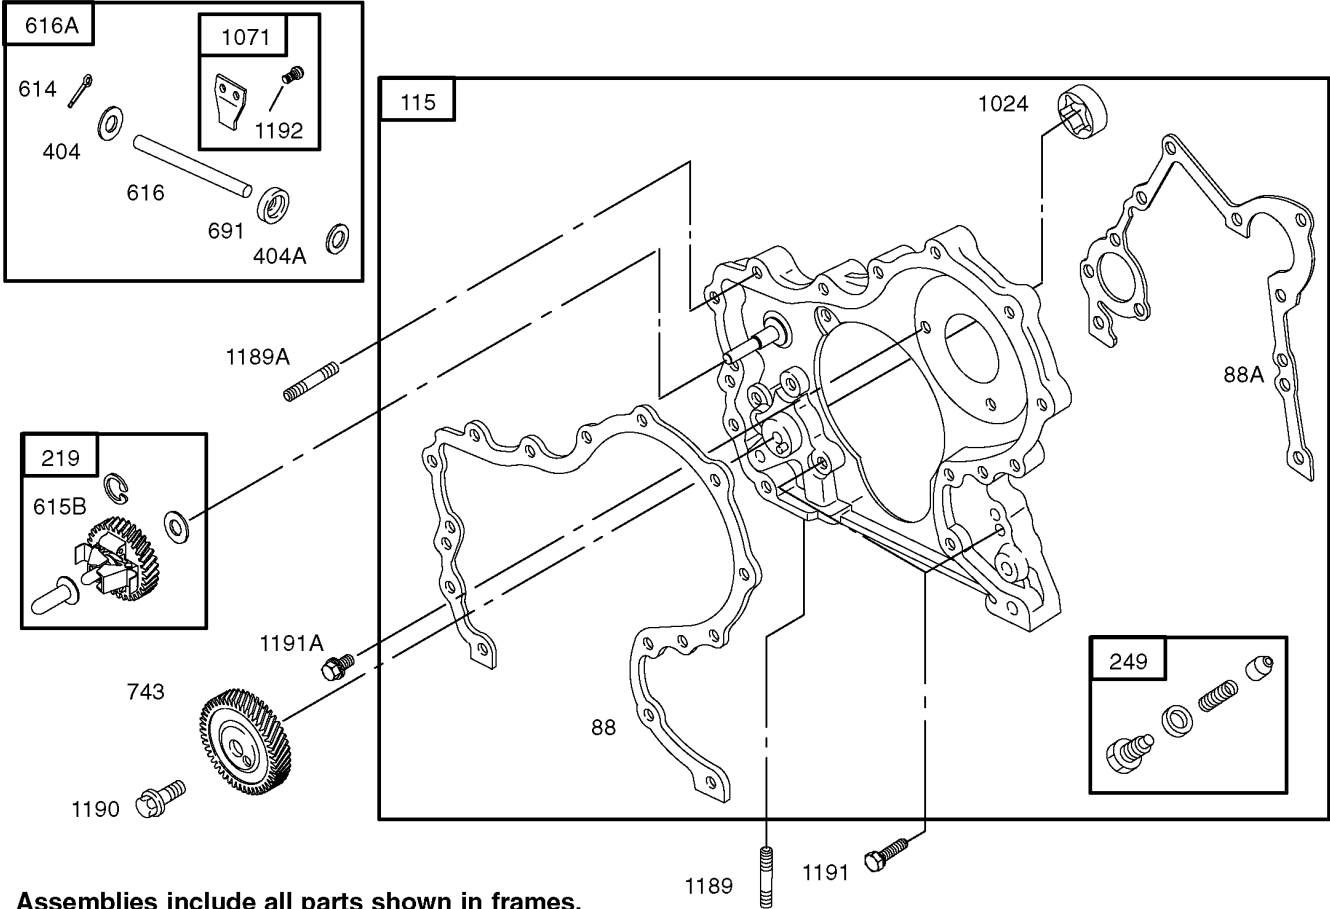 

Assemblies include all parts shown in frames.


Gear Housing Assembly

Ref	Part No.	Qty.	Description				
②1024		1	Pump-Oil				
1071	99-9149	1	Paddle-Governor				
115	99-9138	1	Housing-Gear				
1189	99-9007	1	Stud-Metric				
1189A	99-9137	1	Stud-Metric				
1190	99-9135	1	Screw-Hex				
1191	99-9133	1	Screw-Hex				
1191A	99-9134	1	Screw-Hex				
1192	99-9143	1	Screw-Hex, Torx				
219	99-9261	1	Gear-Governor				
249	99-9142	1	Valve-Relief, Oil				
404	99-9140	1	Washer-Spacer				
404A	99-9141	1	Washer-Spacer				
614	99-9053	1	Pin-Cotter				
615B	99-9145	1	Retainer				
616	99-9146	1	Crank-Governor				
616A	99-9147	1	Crank-Governor				
691	99-9131	1	Seal-Shaft, Governor				
743	99-9656	1	Gear-Drive				
88	99-9132	1	Gasket-Cover				
88A	99-9136	1	Gasket-Cover, Gear				

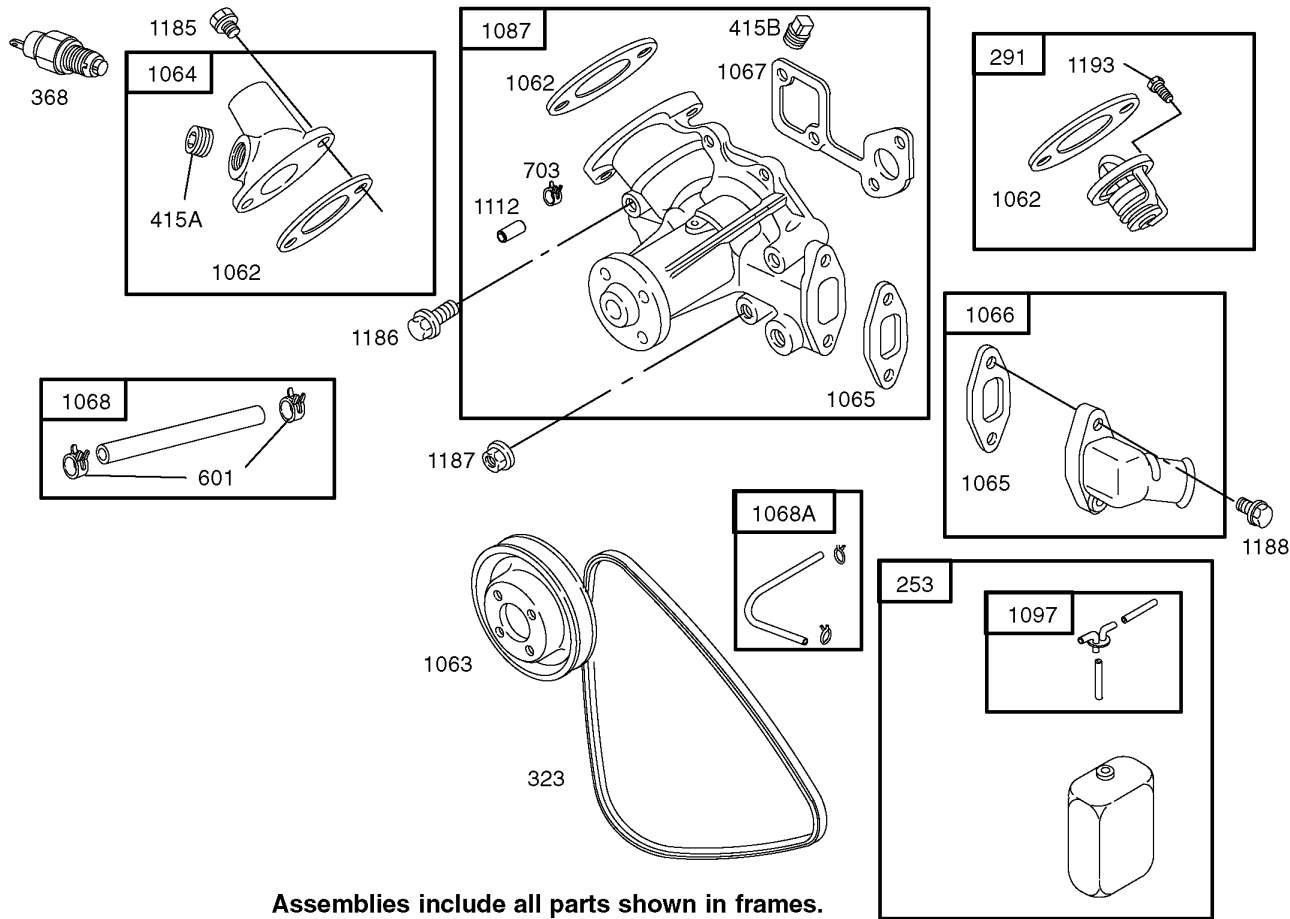 


Water Pump Assembly

Ref	Part No.	Qty.	Description				
1062	99-9163	1	Gasket-Outlet				
1063	99-9164	1	Pulley-Pump				
1064	99-9165	1	Housing-Outlet				
1065	99-9166	1	Gasket-Housing, Inlet				
1066	99-9167	1	Housing-Inlet				
1067	99-9168	1	Gasket-Pump, Water				
1068	106-1886	1	Hose / Clamp ASM				
1068A	99-9072	1	Hose-Tank, Reserve				
1087	106-1887	1	Pump-Water				
1097	99-9071	1	Hose-Tank, Reserve				
1112	106-1888	1	Tube-Vent				
1185	99-9004	1	Screw-Hex				
1186	99-9151	1	Screw-Hex				
1187	99-9153	1	Nut-Hex, Metric				
1188	99-9004	1	Screw-Hex				
1193	99-9152	1	Screw-Metric				
253	106-1884	1	Tank-Reserve				
291	99-9155	1	Thermostat				
323	99-9156	1	Belt-V				
368	99-9157	1	Switch-Temperature, Water				
415A	99-9158	1	Plug				
415B	99-9159	1	Plug				
601	99-9160	1	Clamp-Hose				
703	106-1885	1	Clip				

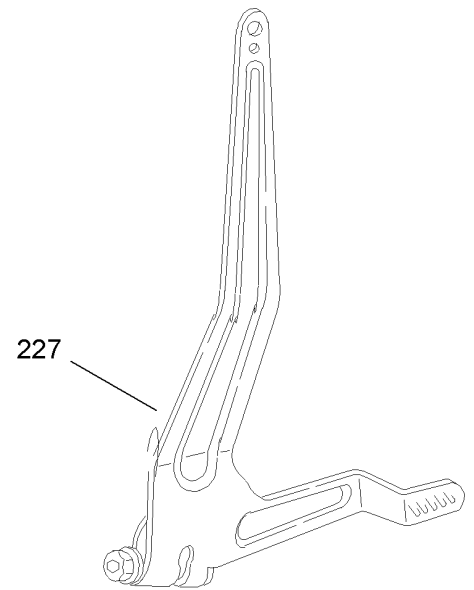 

Governor Assembly


Ref	Part No.	Qty.	Description
202	99-9187	1	Link-Governor, Mech.
209	106-1889	1	Spring-Governor
227	99-9191	1	Lever-Governor
232	99-9192	1	Spring-Link

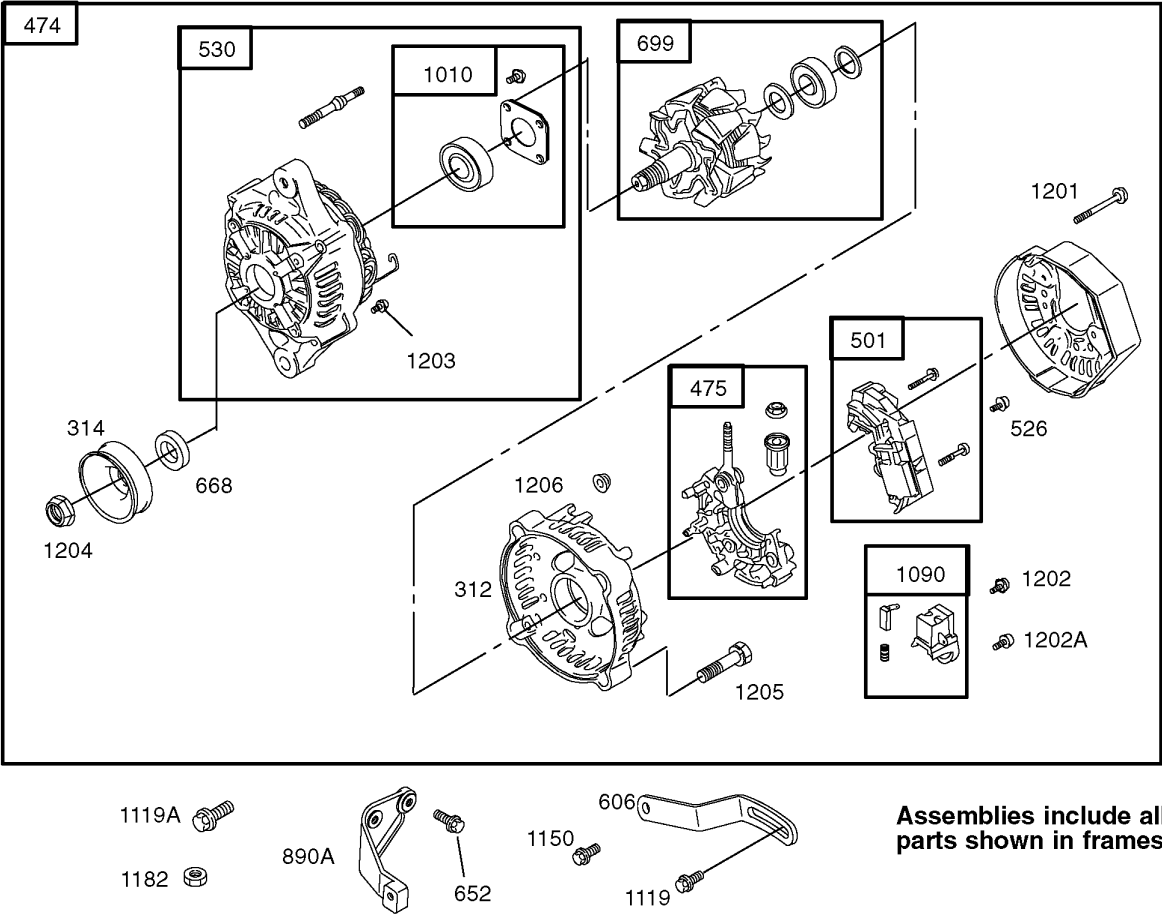 

Alternator Assembly

Ref	Part No.	Qty.	Description
1010	106-1898	1	Retainer-Bearing
1090	106-1899	1	Retainer-Brush
1119	99-9663	1	Screw-Hex, Metric
1119A	99-9205	1	Screw-Hex, Metric
1150	99-9202	1	Screw-Hex
1182	99-9114	1	Nut-Hex, Metric
1201	106-1950	1	Screw
1202	106-1951	1	Screw
1202A	106-1894	1	Screw
1203	106-1894	1	Screw
1204	106-1954	1	Nut
1205	106-1955	1	Screw
1206	106-1956	1	Nut
312	106-1890	1	Housing-End, Brush
314	106-1891	1	Pulley-Alternator
474	99-9209	1	Alternator
475	106-1892	1	Rectifier
501	106-1893	1	Regulator
526	106-1894	1	Screw
530	106-1895	1	Housing-End, Drive
606	106-1952	1	Strap-Adjusting
652	99-9202	1	Screw-Hex
668	106-1896	1	Spacer
699	106-1897	1	Rotor


Ref	Part No.	Qty.	Description
890A	99-9211	1	Bracket-Support

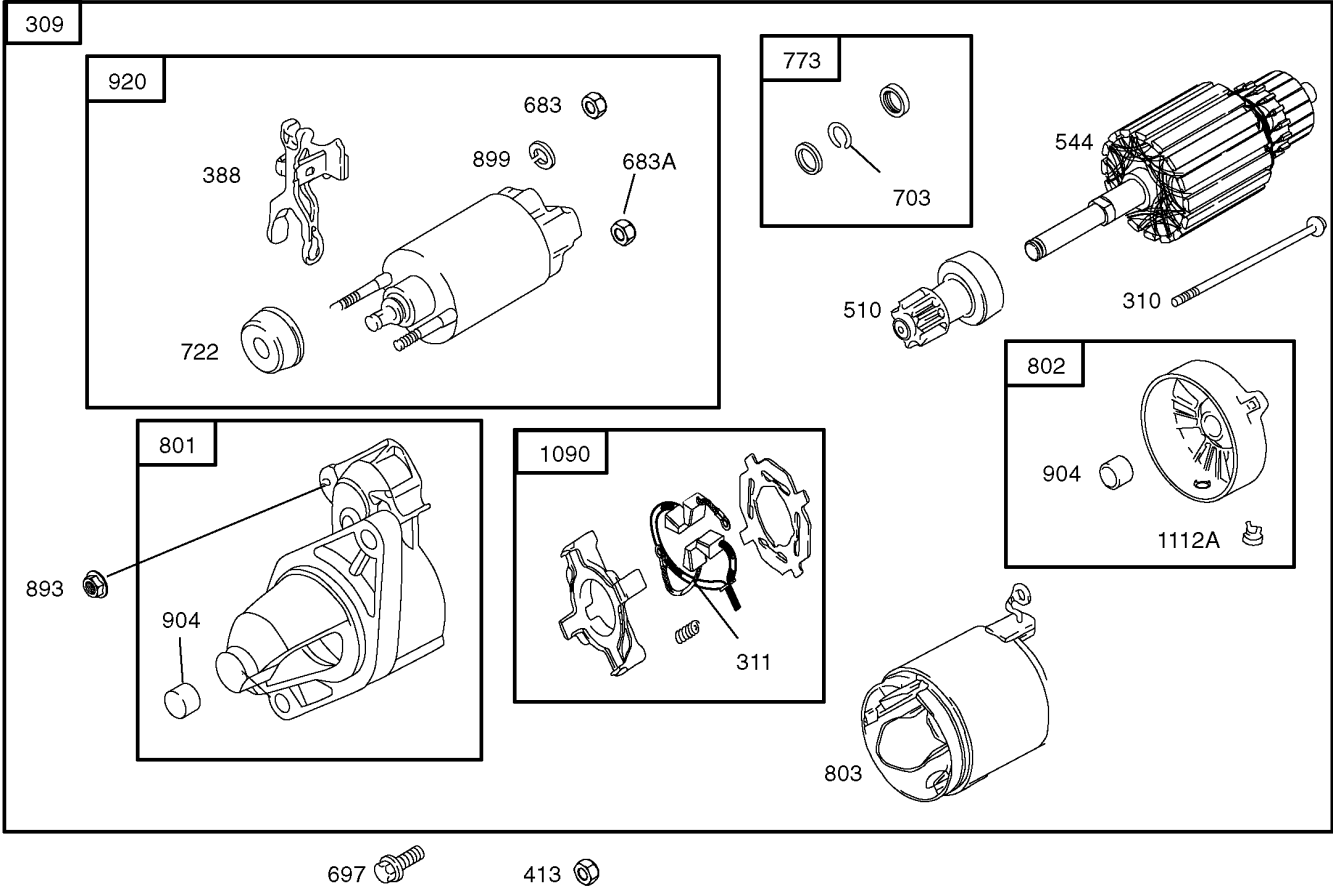 

Assemblies include all parts shown in frames.


Starter Motor Assembly

Ref	Part No.	Qty.	Description				
1090	106-1974	1	Retainer-Brush				
1112A	106-1975	1	Plug-Vent				
309	100-9837	1	Motor-Starter				
310	106-1957	1	Bolt				
311	106-1958	1	Brush Set				
388	106-1959	1	Lever-Drive, Pinion				
413	99-9206	1	Nut-Hex, Metric				
510	106-1960	1	Drive-Starter				
544	106-1961	1	Armature-Starter				
683	106-1962	1	Nut				
683A	106-1963	1	Nut				
697	99-9201	1	Screw-Hex				
703	106-1964	1	Clip				
722	106-1965	1	Seal-Plunger				
773	106-1966	1	Retainer				
801	106-1967	1	Cap-Drive				
802	106-1968	1	Cap-End				
803	106-1969	1	Housing-Starter				
893	106-1970	1	Nut				
899	106-1971	1	Washer				
904	106-1972	1	Bearing-Needle				
920	106-1973	1	Solenoid-Starter				

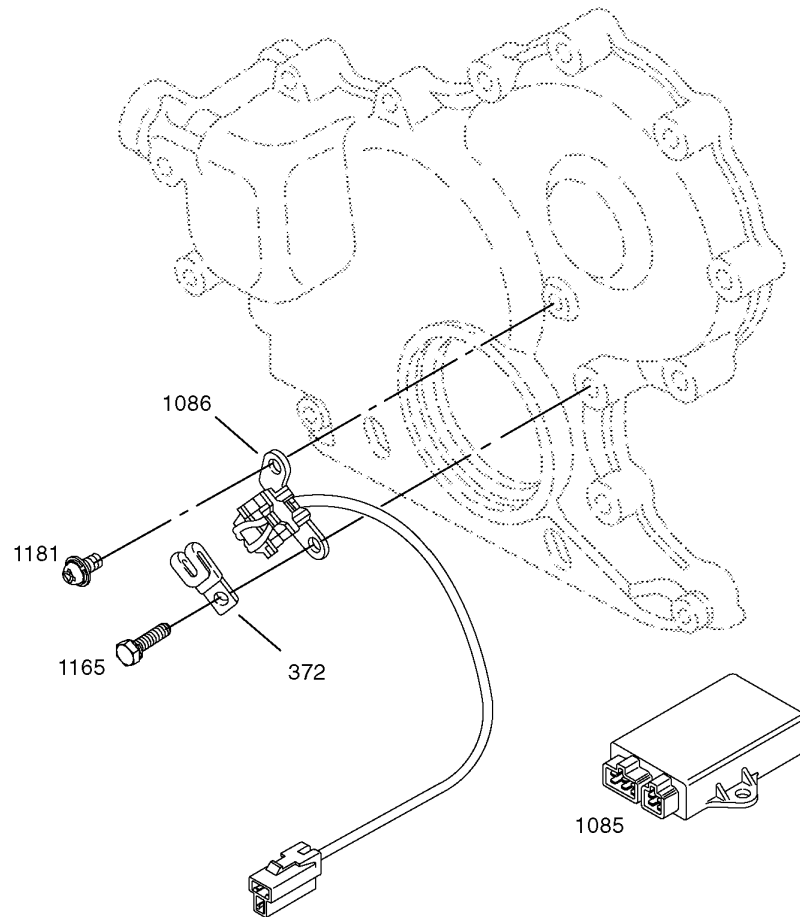 

Ignition Assembly

Ref	Part No.	Qty.	Description
1085	105-1768	1	Ecm
1086	99-9217	1	Trigger-Ignition
1165	99-9128	1	Screw-Hex
1181	99-9210	1	Screw-Phillips
372	99-9208	1	Clamp

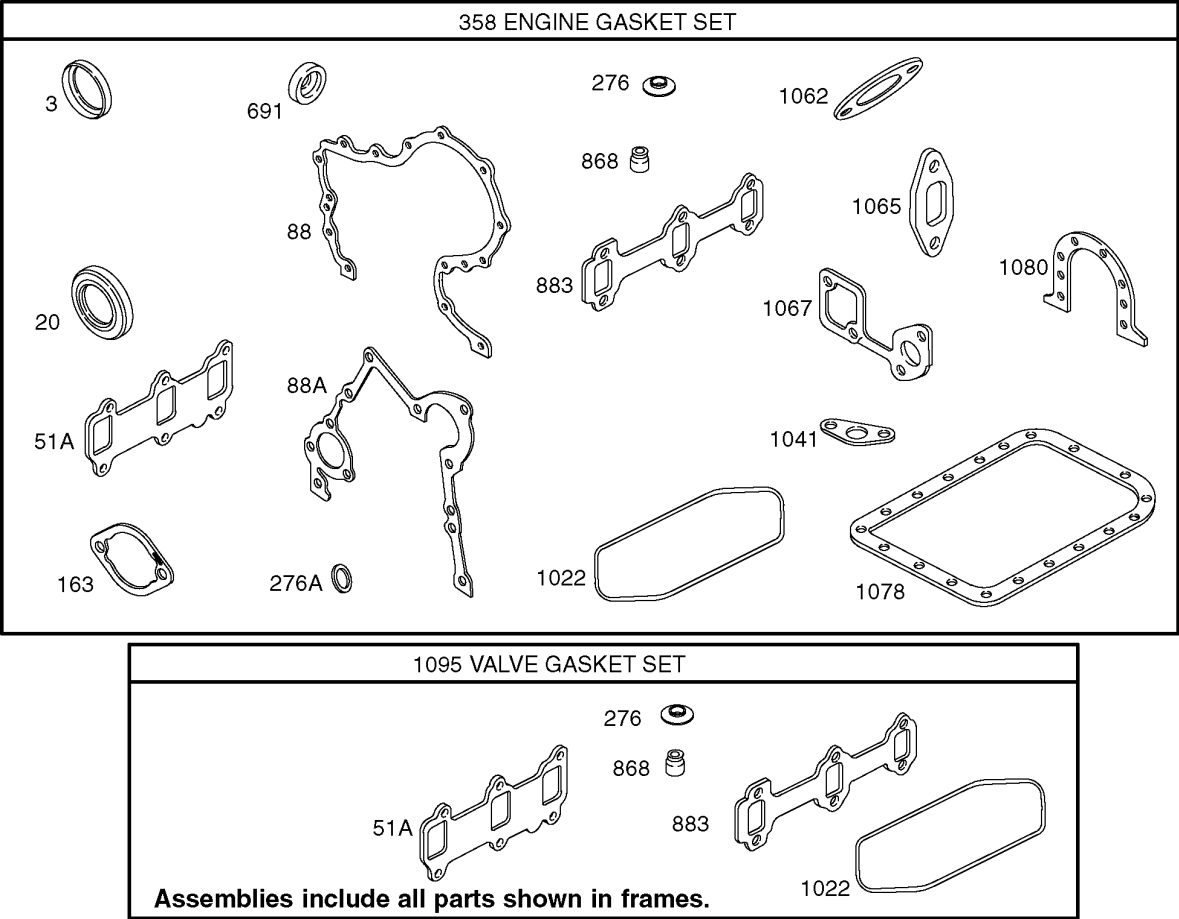 

Gasket Assembly

Ref	Part No.	Qty.	Description				
3	107-9900	1	Seal-Oil				
20	99-9003	1	Seal-Oil				
88	99-9132	1	Gasket-Cover				
163	105-9329	1	Gasket-Funnel, Air				
276	99-9063	1	Washer-Seal				
358	106-1976	1	Engine Gasket Set				
51A	99-9173	1	Gasket-Intake				
691	99-9131	1	Seal-Shaft, Governor				
868	99-9102	1	Seal-Valve				
883	106-1855	1	Gasket-Exhaust				
88A	99-9136	1	Gasket-Cover, Gear				
1022	99-9073	1	Gasket-Cover, Rocker				
1041	99-9120	1	Gasket-Strainer, Oil				
1062	99-9163	1	Gasket-Outlet				
1065	99-9166	1	Gasket-Housing, Inlet				
1067	99-9168	1	Gasket-Pump, Water				
1078	99-9121	1	Gasket-Pan, Oil				
1080	99-9021	1	Gasket-Retainer				
1095	106-1977	1	Valve Gasket Set				
276A	99-9249	1	Washer-Seal				

NOTES

