



Tru Trak[®] Sulky Fixed-Deck Mid-Size Mowers

Model No. 30109 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers


Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

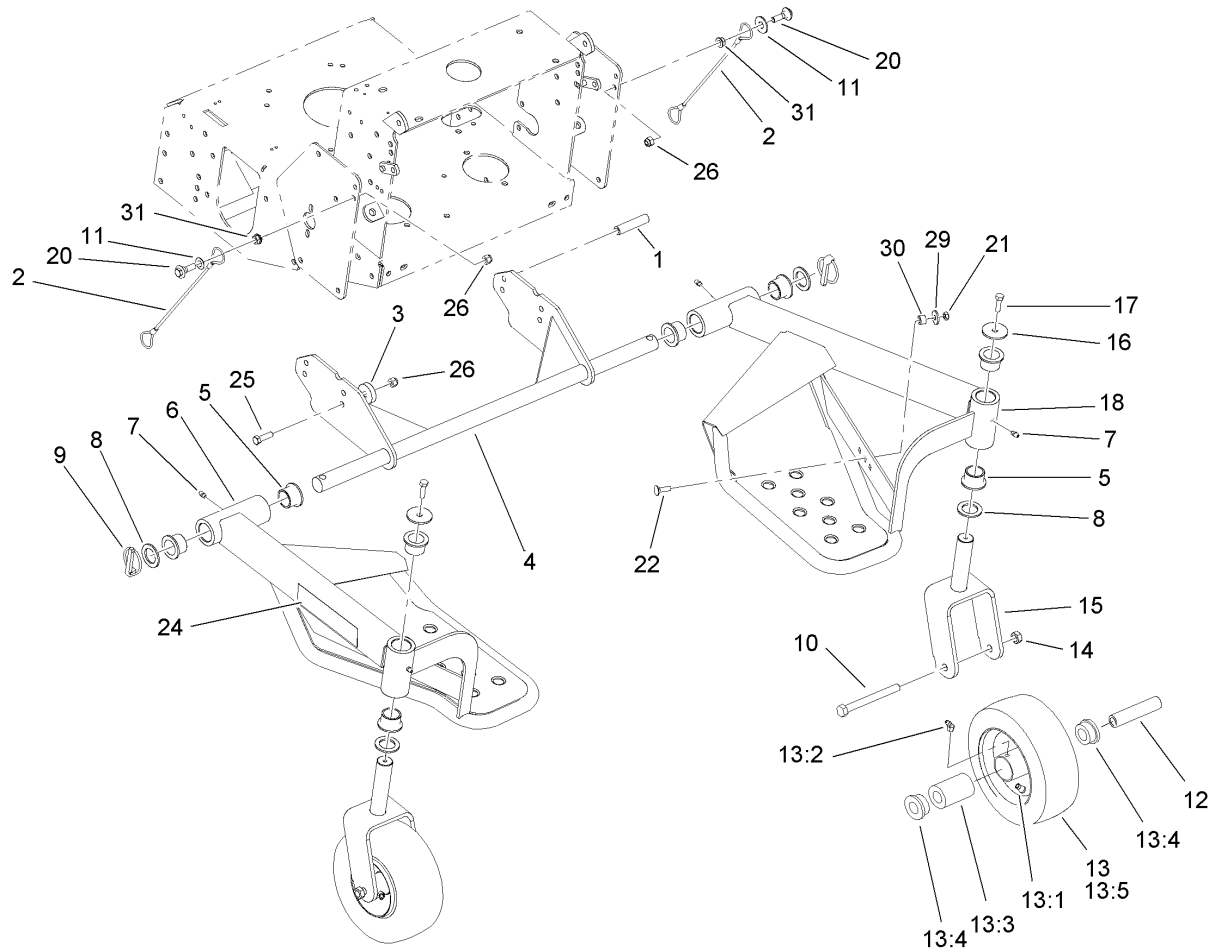

Sulky Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-0877	4	Spacer-Shield	21	3296-47	2	Nut-Lock, NI
2	110-4896	2	Lanyard	22	3230-2	2	Bolt-CARR
3	106-0861	4	Spacer	24	104-8477	2	Decal
4	106-0866-01	1	Axle-Sulky	25	323-7	4	Screw-HH
5	94-1291	8	Bushing	26	3296-39	6	Nut-Lock, NI
6	104-8407-01	1	LH Floor Plate ASM	29	1-603716	2	Washer-Friction
7	302-5	4	Fitting-Grease	30	98-4695	2	Spacer
8	3-6781	4	Washer-Thrust	31	3290-357	2	Nut-HHF, Whiz
9	283-71	2	Pin-Lynch				
10	325-19	2	Screw-HH				
11	3256-6	2	Washer-Flat				
12	100-6453	2	Bushing-Spanner				
13	100-6451	2	Caster Wheel ASM				
13:1	232-27	1	Stem-Valve				
13:2	302-11	1	Fitting-Lube, 45 DEG				
13:3	83-4740	1	Bearing				
13:4	62-5580	2	Bearing-Outside				
13:5	100-6452	1	Tire-Tubeless				
14	32153-5	2	Nut-Lock, Side				
15	104-8402-01	2	Castor ASM				
16	63-7400	2	Washer-Rebound				
17	322-16	2	Screw-HH				
18	104-2743-01	1	RH Floor Plate ASM				
20	614672	2	Bolt-Shoulder				