

TORO

MODEL NO. 47-5390

**INSTALLATION
INSTRUCTIONS****GRASS DISPERSION SHIELD KIT**

(FOR REELMASTER™ 11 BLADE MOWER)

Since this instruction sheet covers only a minimal amount of information necessary to maintain and operate your machine, we suggest that you keep this material with your Operator's Manual so that both may be referred to for instructions concerning safe operation and proper maintenance procedures.

LOOSE PARTS
as required per cutting unit

Description	Quantity
Grass Shield	2
Pivot Tube	2
3/8-16 x 1-3/4" Lg. Capscrew	2
3/8-16 x 2" Lg. Capscrew	2
3/8-16 Locknut	4

1. Assemble grass shield to pivot tube with 3/8-16 x 2" long capscrew and locknut supplied with kit. Leave capscrew and locknut loose (Fig. 1).

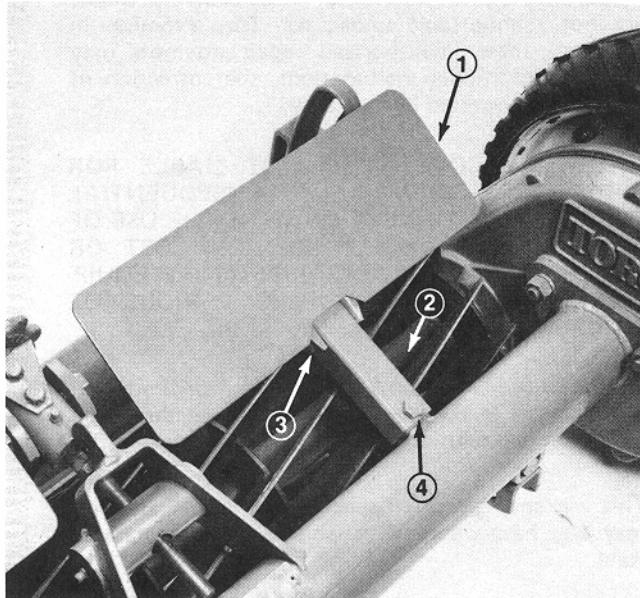


Figure 1

1. Grass shield
2. Pivot tube
3. 3/8-16 x 2" capscrew & locknut
4. 3/8-16 x 1-3/4" capscrew & locknut

2. Install pivot tube onto square tab on Reelmaster frame (Fig. 2) with flat side of grass shield facing

upward. Secure pivot tube to Reelmaster frame with 3/8-16 x 1-3/4" long capscrew and locknut supplied with kit. Repeat steps 1 & 2 for second grass shield (Fig. 1).

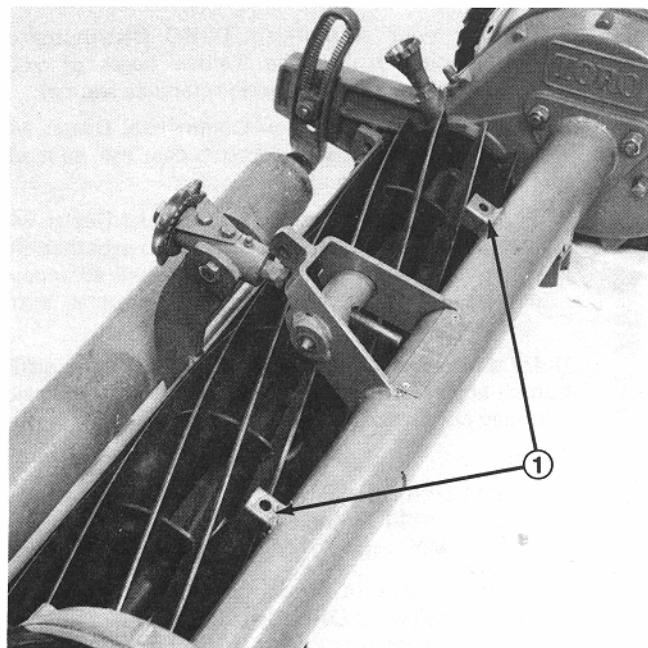


Figure 2

1. Tab on Reelmaster frame

3. Adjust shields on pivot tubes for desired arch of grass dispersion and tighten capscrews and locknuts.

4. With Reelmaster cutting units attached to transport frame, slowly raise #1, 2 & 3 cutting units while watching for interference between shields and frame. If interference occurs, immediately lower cutting units. Readjust shields and check for interference again.

Note: Grass shields may be installed with flat side facing downward for greater clearance.



The Toro Industrial Products Warranty

A One-Year Limited Warranty

Conditions and Products Covered

The Toro Company and its affiliate, Toro Warranty Company, pursuant to an agreement between them, jointly warrant your Toro Industrial Product ("Product") to be free from defects in materials or workmanship for one year or 1500 operational hours*, whichever occurs first. Where a warrantable condition exists, we will repair the Product at no cost to you including diagnosis, labor, parts, and transportation. This warranty begins on the date the Product is delivered to the original retail purchaser.

* Product equipped with hour meter

Instructions for Obtaining Warranty Service

You are responsible for notifying the Industrial Products Distributor or Authorized Industrial Products Dealer from whom you purchased the Product as soon as you believe a warrantable condition exists.

If you need help locating an Industrial Products Distributor or Authorized Dealer, or if you have questions regarding your warranty rights or responsibilities, you may contact us at:

Toro Commercial Products Service Department
Toro Warranty Company
8111 Lyndale Avenue South
Bloomington, MN 55420-1196
952-888-8801 or 800-982-2740
E-mail: commercial.service@toro.com

Owner Responsibilities

As the Product owner, you are responsible for required maintenance and adjustments stated in your operator's manual. Failure to perform required maintenance and adjustments can be grounds for disallowing a warranty claim.

Items and Conditions Not Covered

Not all product failures or malfunctions that occur during the warranty period are defects in materials or workmanship. This express warranty does not cover the following:

- Product failures which result from the use of non-Toro replacement parts, or from installation and use of add-on, modified, or unapproved accessories
- Product failures which result from failure to perform required maintenance and/or adjustments
- Product failures which result from operating the Product in an abusive, negligent or reckless manner
- Parts subject to consumption through use unless found to be defective. Examples of parts which are consumed, or used up, during normal Product operation include, but are not limited to, tines, spark plugs, castor wheels, tires, filters, belts, etc.

Countries Other than the United States or Canada

Customers who have purchased Toro products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province, or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the Toro importer. If all other remedies fail, you may contact us at Toro Warranty Company.

- Failures caused by outside influence. Items considered to be outside influence include, but are not limited to, weather, storage practices, contamination, use of unapproved coolants, lubricants, additives, or chemicals, etc.
- Normal "wear and tear" items. Normal "wear and tear" includes, but is not limited to, damage to seats due to wear and abrasion, worn painted surfaces, scratched decals or windows, etc.

Parts

Parts scheduled for replacement as required maintenance are warranted for the period of time up to the scheduled replacement time for that part.

Parts replaced under this warranty become the property of Toro. Toro will make the final decision whether to repair any existing part or assembly or replace it. Toro may use factory remanufactured parts rather than new parts for some warranty repairs.

General Conditions

Repair by an Authorized Toro Distributor or Dealer is your sole remedy under this warranty.

Neither The Toro Company nor Toro Warranty Company is liable for indirect, incidental or consequential damages in connection with the use of the Toro Products covered by this warranty, including any cost or expense of providing substitute equipment or service during reasonable periods of malfunction or non-use pending completion of repairs under this warranty. Except for the Emissions warranty referenced below, if applicable, there is no other express warranty. All implied warranties of merchantability and fitness for use are limited to the duration of this express warranty.

Some states do not allow exclusions of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Note regarding engine warranty: The Emissions Control System on your Product may be covered by a separate warranty meeting requirements established by the U.S. Environmental Protection Agency (EPA) and/or the California Air Resources Board (CARB). The hour limitations set forth above do not apply to the Emissions Control System Warranty. Refer to the Engine Emission Control Warranty Statement printed in your operator's manual or contained in the engine manufacturer's documentation for details.