



CCR[™] 2450 GTS[®] Snowthrower

Model No. 38516 - 270010001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Rotor Housing and Scraper Assembly	 3	Handle Assembly	 10
Impeller Drive Assembly	 4	Cylinder, Piston and Connecting Rod Assembly Briggs and Stratton 084133-0196-E8	 11
Chute Assembly	 5	Muffler, Carburetor and Intake Manifold Assembly Briggs and Stratton 084133-0196-E8	 12
Rotor Assembly	 6	Flywheel, Blower Housing and Starter Assembly Briggs and Stratton 084133-0196-E8	 14
Engine, Gas Tank and Frame Assembly	 7	Attachments and Accessories List	 15
Shroud and Control Panel Assembly	 8		
Upper Shroud Assembly No. 110-3400	 9		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|--|--|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain from your local Briggs & Stratton dealer | ❹ Included in Carburetor Overhaul Kit (Ref. No. 121) |
| ❺ Included in Carburetor Gasket Set (Ref. No. 977) | |

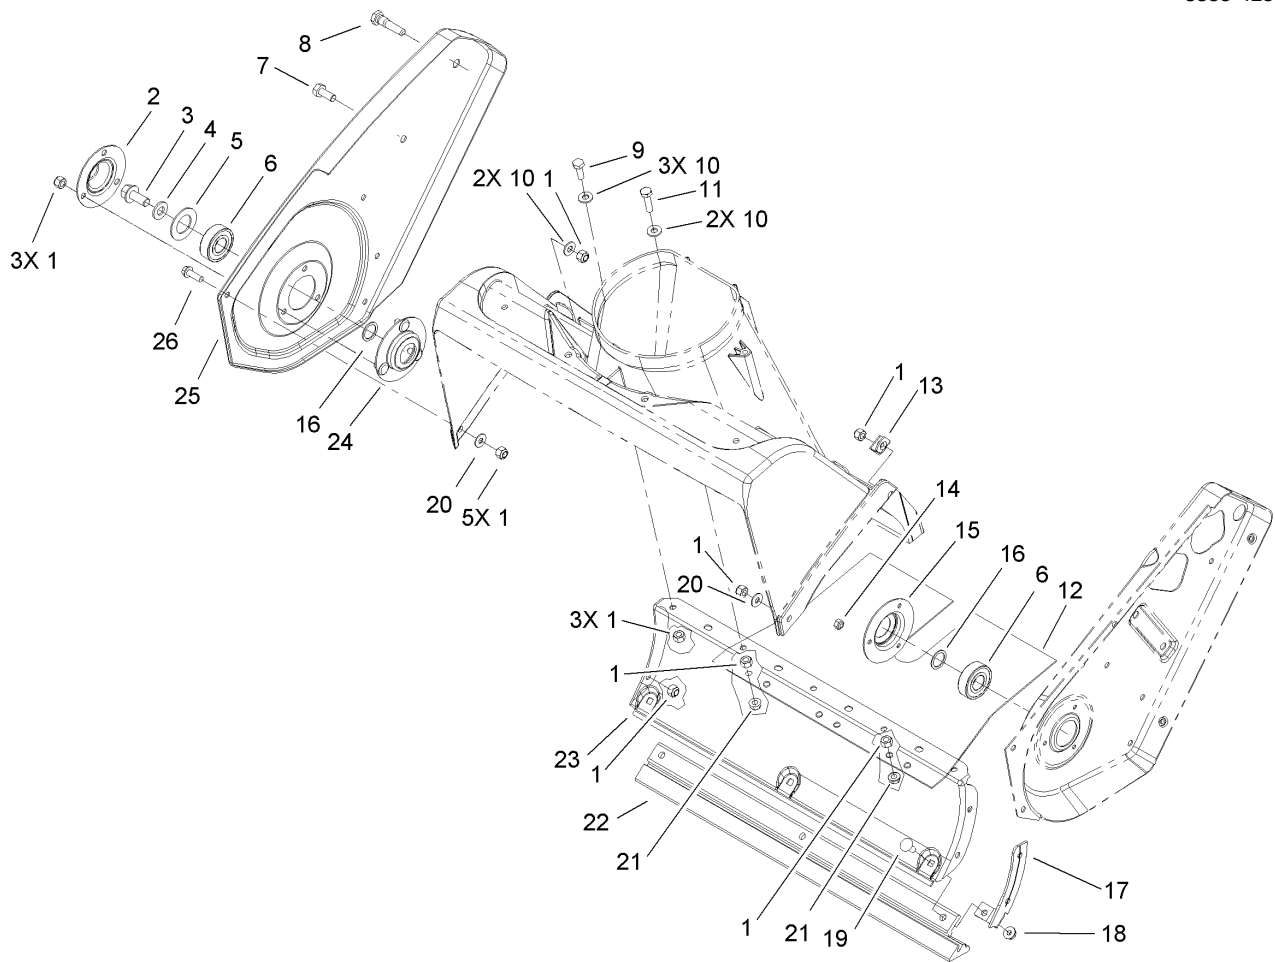

Rotor Housing and Scraper Assembly


Ref	Part No.	Qty.	Description
1	3296-42	17	Nut-Lock, NI
2	52-7290-03	1	Retainer-Bearing
3	3234-25	1	Screw-HHF
4	3256-24	1	Washer-Flat
5	52-7270	1	Washer-Rubber
6	100-1048	2	Bearing-Ball
7	322-43	1	Screw-HH
8	38-8211	1	Pin-Rotor
9	321-4	3	Screw-HH
10	3256-22	7	Washer-Flat
11	321-6	2	Screw-HH
12	55-9512	1	Cover-Bottom
13	55-9430	1	Bracket-Housing
14	3296-2	3	Nut-Lock
15	38-8620	1	Flange-Bearing
16	52-7280	2	Washer-Thrust
17	56-2610	1	Bracket-Housing, Lower
18	32149-2	3	Nut-Keps
19	3229-11	3	Screw-CARR
20	3256-1	2	Washer-Flat
21	32128-10	2	Nut-Lock, HHF
22	55-8760	1	Scraper
23	105-1967-03	1	Housing-Lower
24	52-9110	1	Flange-Bearing

Ref	Part No.	Qty.	Description
25	105-1952-03	1	Sideplate-Right
26	32105-15	5	Screw

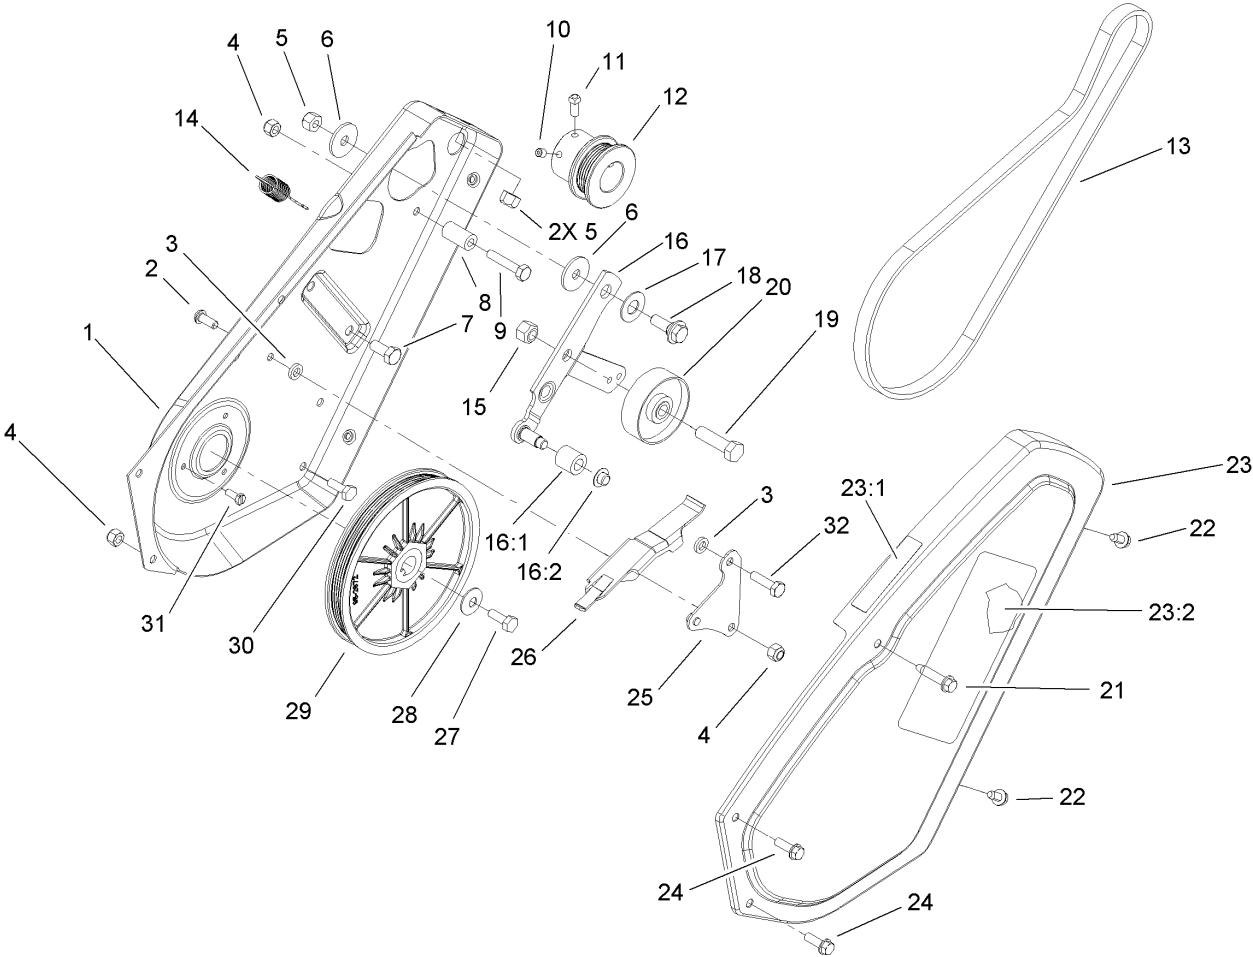


Impeller Drive Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	55-8851-03	1	Plate-Side, LH	23	105-1997	1	Cover-Drive
2	3274-31	1	Screw-HSBH	23:1	104-2767	1	Decal-Warning
3	55-9620	2	Spacer-Plate, Pivot	23:2	60-9480	1	Decal
4	3296-42	3	Nut-Lock, NI	24	32105-15	2	Screw
5	3296-29	3	Nut-Lock, NI	25	55-9570	1	Pivot Plate ASM
6	5-4460	2	Washer-Pivot	26	55-9550	1	Brake-Arm
7	322-3	2	Screw-HH	27	321-30	1	Screw-HH
8	55-9530	1	Sleeve-Guide, Belt	28	3290-456	1	Washer-Belleville
9	321-13	1	Screw-HH	29	95-2672	1	Pulley Rotor ASM
10	3245-32	1	Screw-HSH	30	321-4	2	Screw-HH
11	3241-7	1	Screw-SQH	31	32105-8	3	Screw-SHH
12	95-2673	1	Pulley-Engine	32	321-6	1	Screw-HH
13	95-6151	1	Belt-Drive				
14	55-9280	1	Spring-Extension				
15	32152-2	1	Nut-Lock, Cone				
16	105-3542	1	Idler Arm ASM				
16:1	55-9520	1	Roller-Brake				
16:2	32112-11	1	Nut-Push				
17	25-5641	1	Washer				
18	27-0410	1	Screw-Shoulder				
19	323-29	1	Screw-HH				
20	55-9290	1	Pulley-Idler				
21	32144-110	1	Screw-HWH				
22	12-3270	2	Screw				

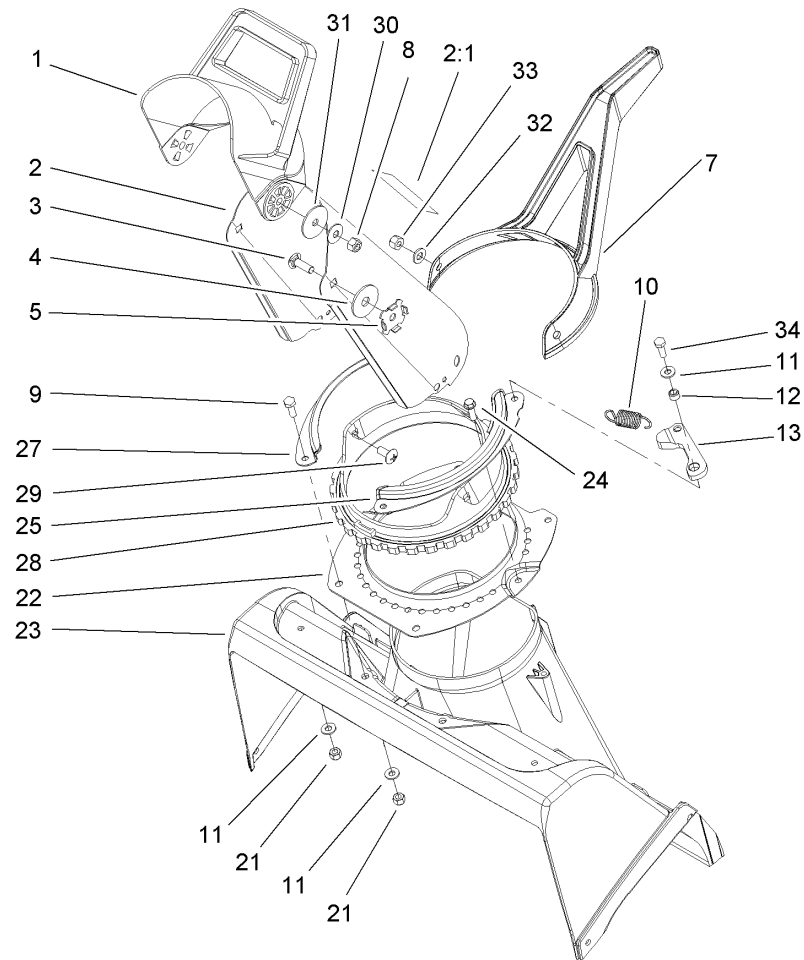


Chute Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	56-2680	1	Chute-Deflector	33	3296-47	3	Nut-Lock, NI
2	104-4115	1	Chute ASM	34	321-6	1	Screw-HH
2:1	104-4135	1	Decal-Danger				
3	3230-22	2	Screw-CARR				
4	20-4320	2	Washer-Rubber				
5	55-8950	2	Plate-Friction				
7	94-9914	1	Handle-Control, Chute				
8	3296-29	2	Nut-Lock, NI				
9	321-4	3	Screw-HH				
10	80-4600	1	Spring-Extension				
11	3256-22	5	Washer-Flat				
12	55-9370	1	Spacer-Blade, Rotor				
13	80-4610	1	Detent				
21	3296-42	6	Nut-Lock, NI				
22	55-8921-03	1	Ring-Support, Chute				
23	105-1950	1	Housing-Rotor, Upper				
24	46-8091	2	Screw-HWH				
25	71-4980-03	1	Retainer-Chute, LH				
27	71-4990-03	1	Retainer-Chute, RH				
28	104-2763	1	Ring-Chute				
29	100-5487	3	Screw-PTH				
30	3290-456	2	Washer-Belleville				
31	3256-68	2	Washer-Flat				
32	3256-70	3	Washer-Flat				

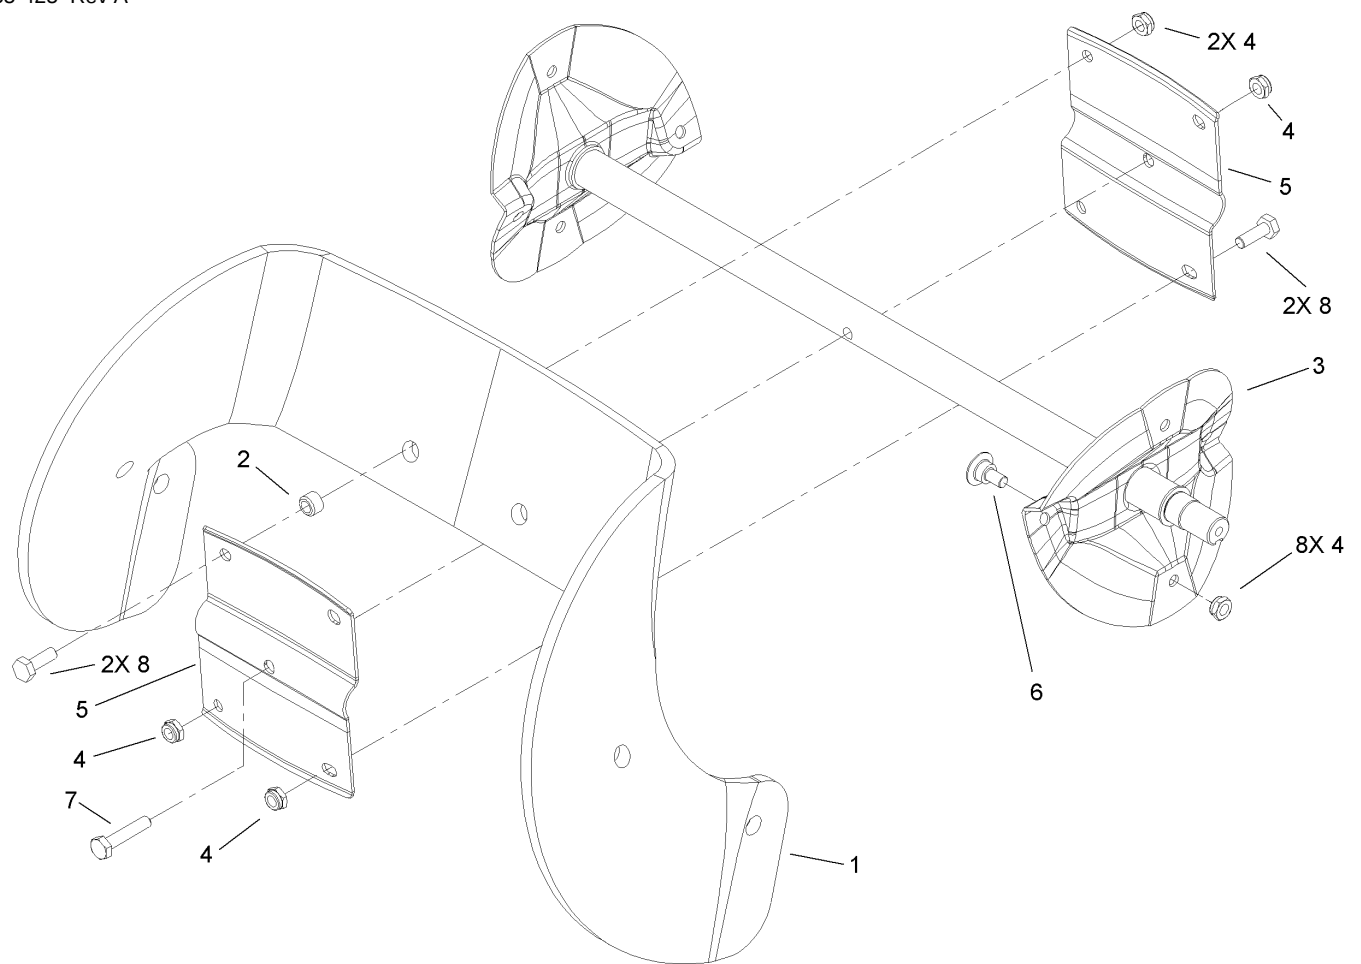


Rotor Assembly

Ref	Part No.	Qty.	Description				
1	99-9313	2	Blade-Rotor				
2	55-9370	4	Spacer-Blade, Rotor				
3	100-5478-03	1	Rotor ASM				
4	3296-56	13	Nut-Lock, NI				
5	66-6600-03	2	Half-Rotor				
6	84-1971	8	Screw				
7	321-8	1	Screw-HH				
8	321-4	4	Screw-HH				

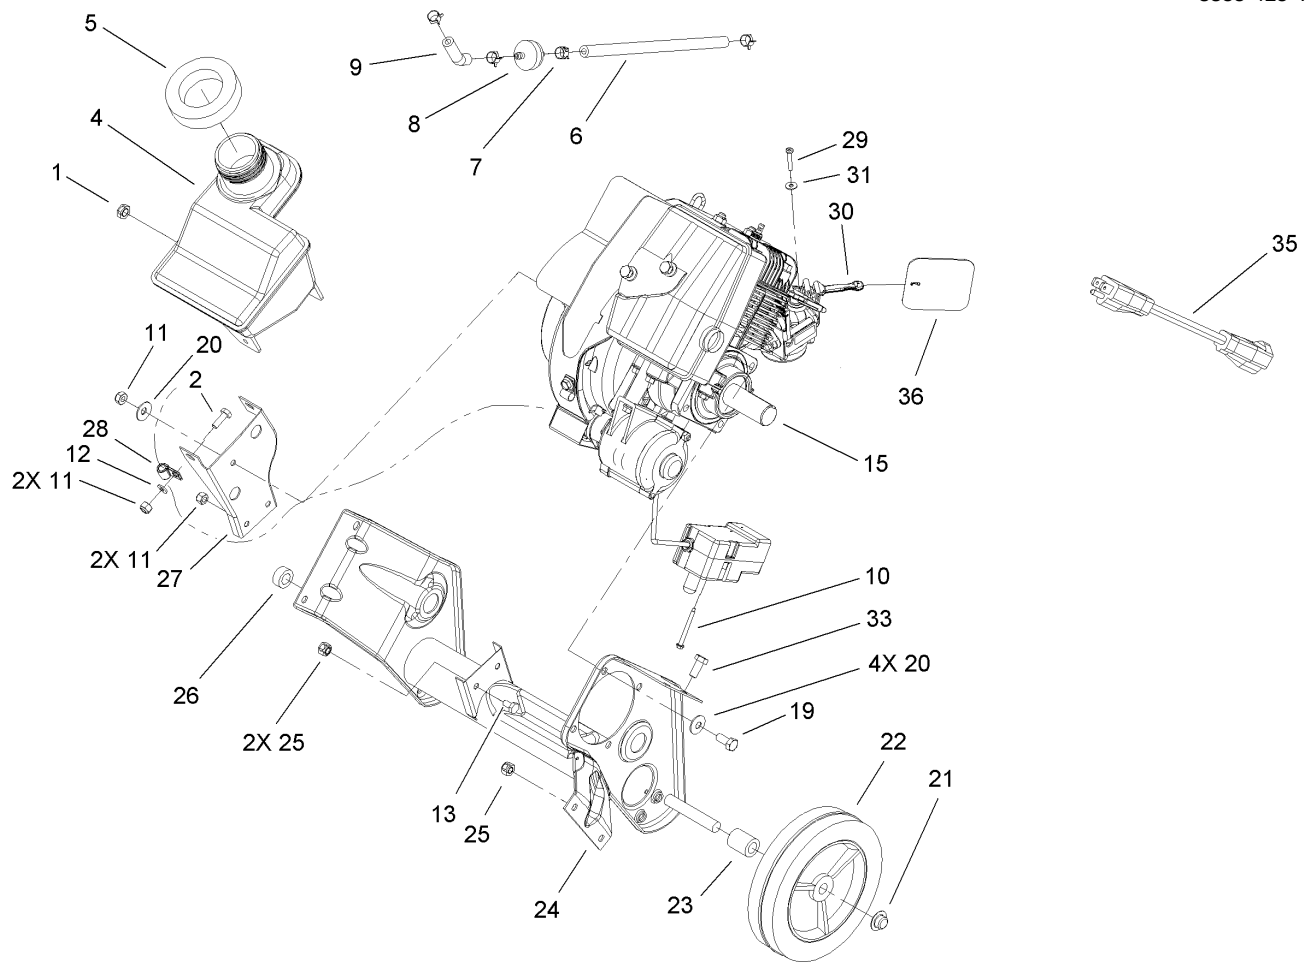


Engine, Gas Tank and Frame Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	32152-8	1	Nut-Lock, Cone	29	32144-97	1	Screw-PPH, Plastite
2	321-4	2	Screw-HH	30	104-0878	1	Lever-Choke
4	105-8952	1	Tank-Gas	31	3256-14	1	Washer-Flat
5	55-9310	1	Seal-Foam	33	322-43	2	Screw-HH
6	110-4894	1	Hose-Fuel	35	99-9300	1	Cord-Extension
7	2412-98	4	Clamp	36	110-3444	1	Shield-Choke Hole
8	56-6360	1	Filter-Fuel				
9	109-0304	1	Hose-Fuel				
10	32144-27	3	Screw-Plastite				
11	3296-42	5	Nut-Lock, NI				
12	3256-22	2	Washer-Flat				
13	321-2	2	Screw-HH				
15		1	Engine-Briggs And Stratton, 084133-0196-E8				
19	322-3	4	Screw-HH				
20	3290-456	5	Washer-Belleville				
21	32112-14	2	Nut-Push				
22	66-6510	2	Wheel				
23	66-6501	1	Spacer-Wheel				
24	105-1965-03	1	Frame				
25	3296-29	3	Nut-Lock, NI				
26	66-6500	1	Spacer-Wheel				
27	105-1968-03	1	Bracket-Support, Recoil				
28	2412-91	1	Clamp				

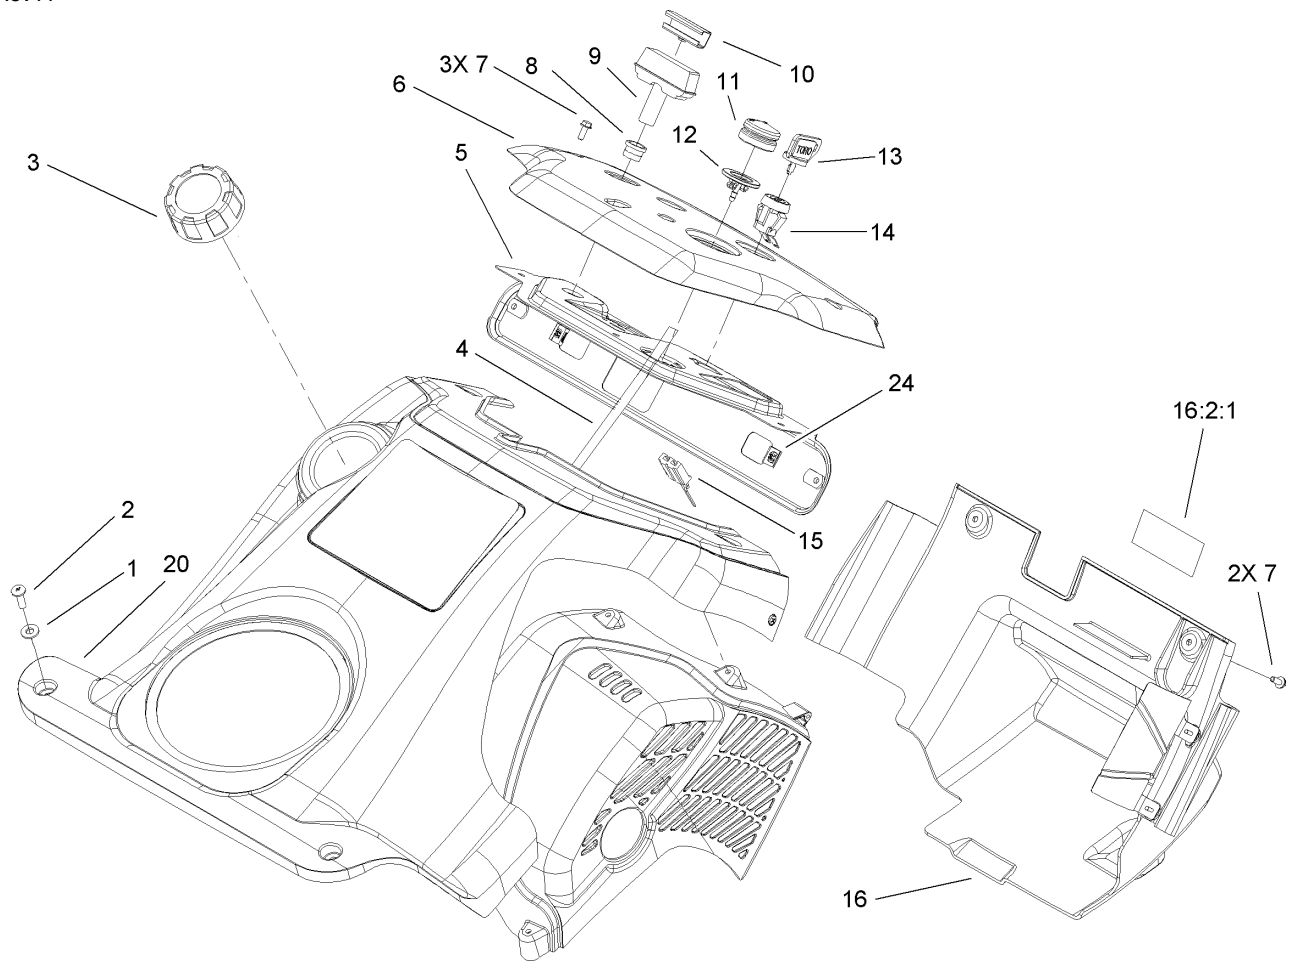


Shroud and Control Panel Assembly

Ref	Part No.	Qty.	Description				
1	3256-22	2	Washer-Flat				
2	3250-32	2	Screw-PPH				
3	104-4133	1	Gas Cap ASM				
4	98-1372	1	Hose-Primer				
5	105-1999-03	1	Panel-Support, Control				
6	105-3523	1	Panel-Control				
7	32144-112	5	Screw-HWH				
8	55-9410	1	Guide-Rope, Starter				
9	612825	1	Handle-Start				
10	612824	1	Clip-Starter				
11	66-7460	1	Bulb-Primer				
12	44-2750	1	Body-Primer				
13	63-8360	1	Key-Ignition				
14	40-5940	1	Switch				
15	218-532	1	Connector-Body				
16	108-7339	1	Lower Shroud And Baffle ASM				
16:2		1	Shroud-Lower				
16:2:1	61-4790	1	Decal				
20	110-3400	1	Upper Shroud ASM				
24	100-9889	2	Nut-Speed				

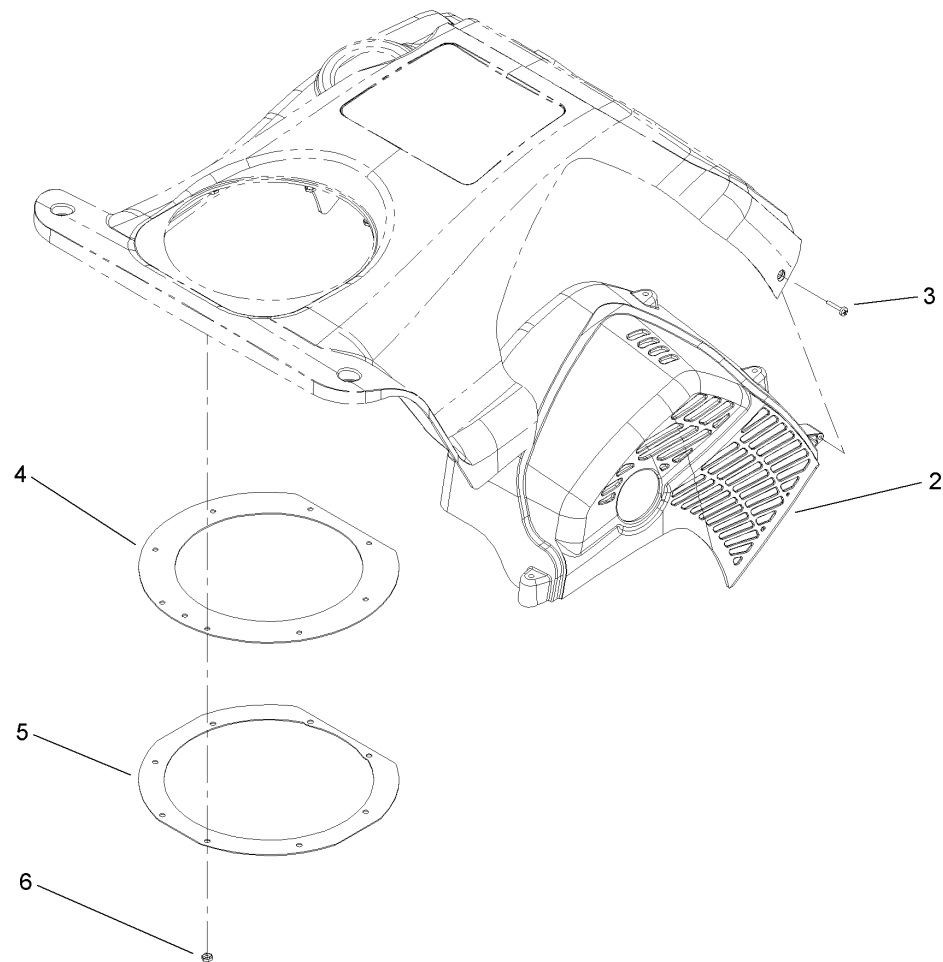

Upper Shroud Assembly No. 110-3400


Ref	Part No.	Qty.	Description				
2	108-7333	1	Shield-Heat				
3	94-4496	5	Screw-PPH				
4	105-3543	1	Seal-Chute				
5	55-9540-03	1	Retainer-Seal, Chute				
6	3290-474	8	Palnut				

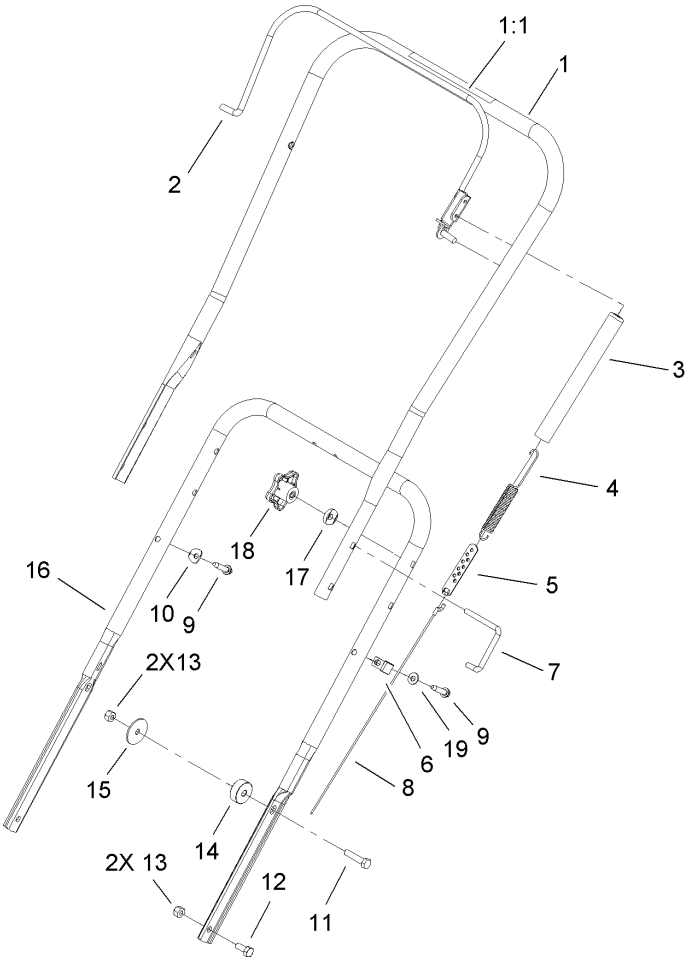

Handle Assembly

Ref	Part No.	Qty.	Description				
1	95-2667	1	Handle-Upper				
1:1	104-2775	1	Decal-Drive, Rotor				
2	71-5120-03	1	Bail ASM				
3	71-5530	1	Cover-Spring				
4	71-5480	1	Spring-Clutch				
5	71-5330	1	Adjuster-Cable, Clutch				
6	2412-91	1	Clamp				
7	98-2266	2	Lock-Handle				
8	110-3437	1	Cable-Clutch				
9	32144-110	2	Screw-HWH				
10	3-7501	1	Washer				
11	322-6	2	Screw-HH				
12	322-3	2	Screw-HH				
13	3296-29	4	Nut-Lock, NI				
14	105-1961	2	Spacer				
15	3256-68	2	Washer-Flat				
16	55-9121-03	1	Handle-Lower				
17	107-3844	2	Washer				
18	106-4161	2	Knob-Handle				
19	3256-22	1	Washer-Flat				

1036 EMISSIONS LABEL

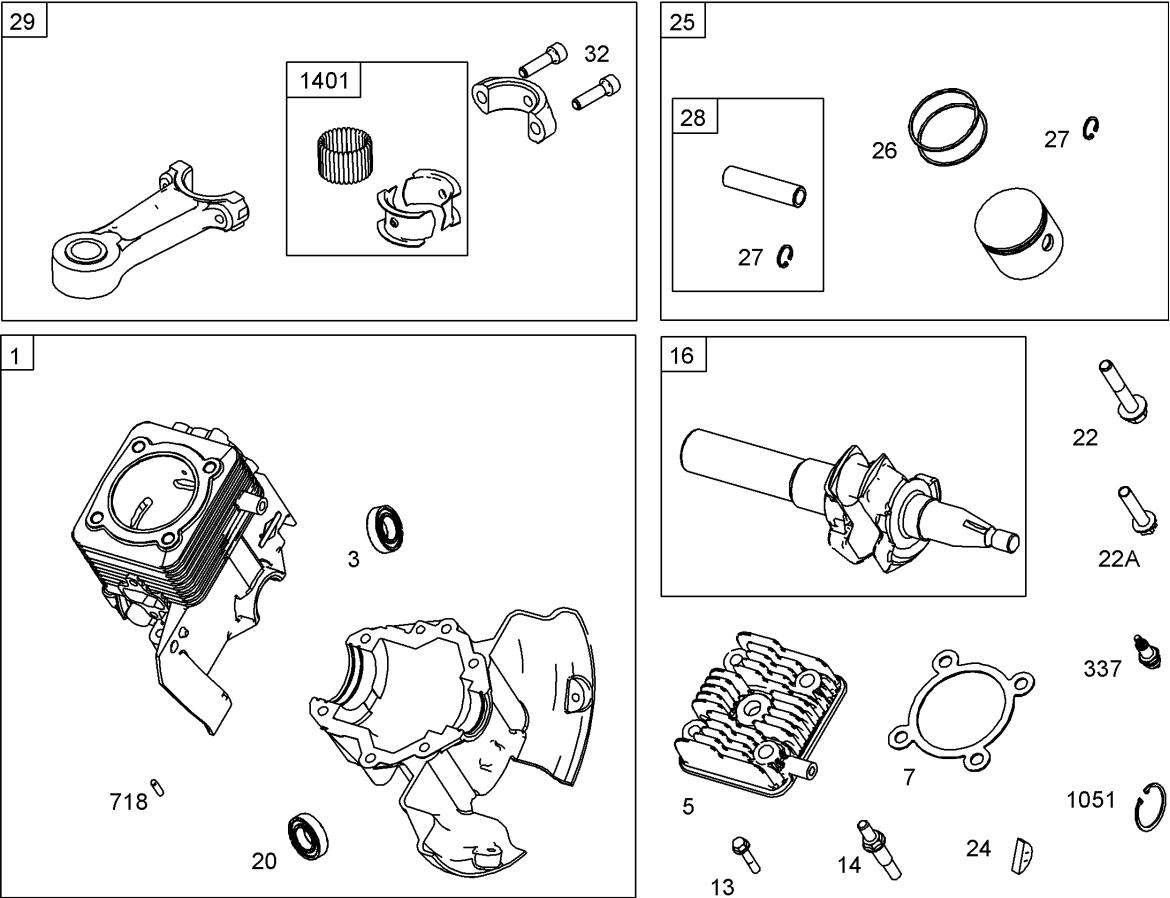


Cylinder, Piston and Connecting Rod Assembly
Briggs and Stratton 084133-0196-E8

Ref	Part No.	Qty.	Description				
❸1	801322	1	Cylinder ASM (Non Boost, Electric Start)				
❸3	801262	1	Seal-Oil (Magneto Side)				
❸5	801283	1	Head-Cylinder				
❸7	801263	1	Gasket-Head, Cylinder				
❸13	801264	1	Screw (Cylinder Head)				
❸14	801265	1	Stud (Cylinder Head)				
❸16	801220	1	Crankshaft				
❸20	801261	1	Seal-Oil (PTO Side)				
❸22	801266	1	Screw (Crankcase Cover/ Sump)				
❸22A	801271	1	Screw (Crankcase Cover/ Sump)				
❸24	801234	1	Key-Flywheel				
❸25	801279	1	Piston ASM				
❸26	801280	1	Ring Set				
❸27	801275	1	Lock-Pin, Piston				
❸28	801276	1	Pin-Piston				
❸29	801277	1	Rod-Connecting				
❸32	801278	1	Screw (Connecting Rod)				
❸337	801254	1	Plug-Spark				
❸718	690959	1	Pin-Locating				
❸1051	801274	1	Ring-Retaining				
❸1036		1	Label-Emissions (Available From An Authorized Briggs And Stratton Service Dealer)				
❸1401	801290	1	Roller-Strip				

Muffler, Carburetor and Intake Manifold Assembly


Briggs and Stratton 084133-0196-E8

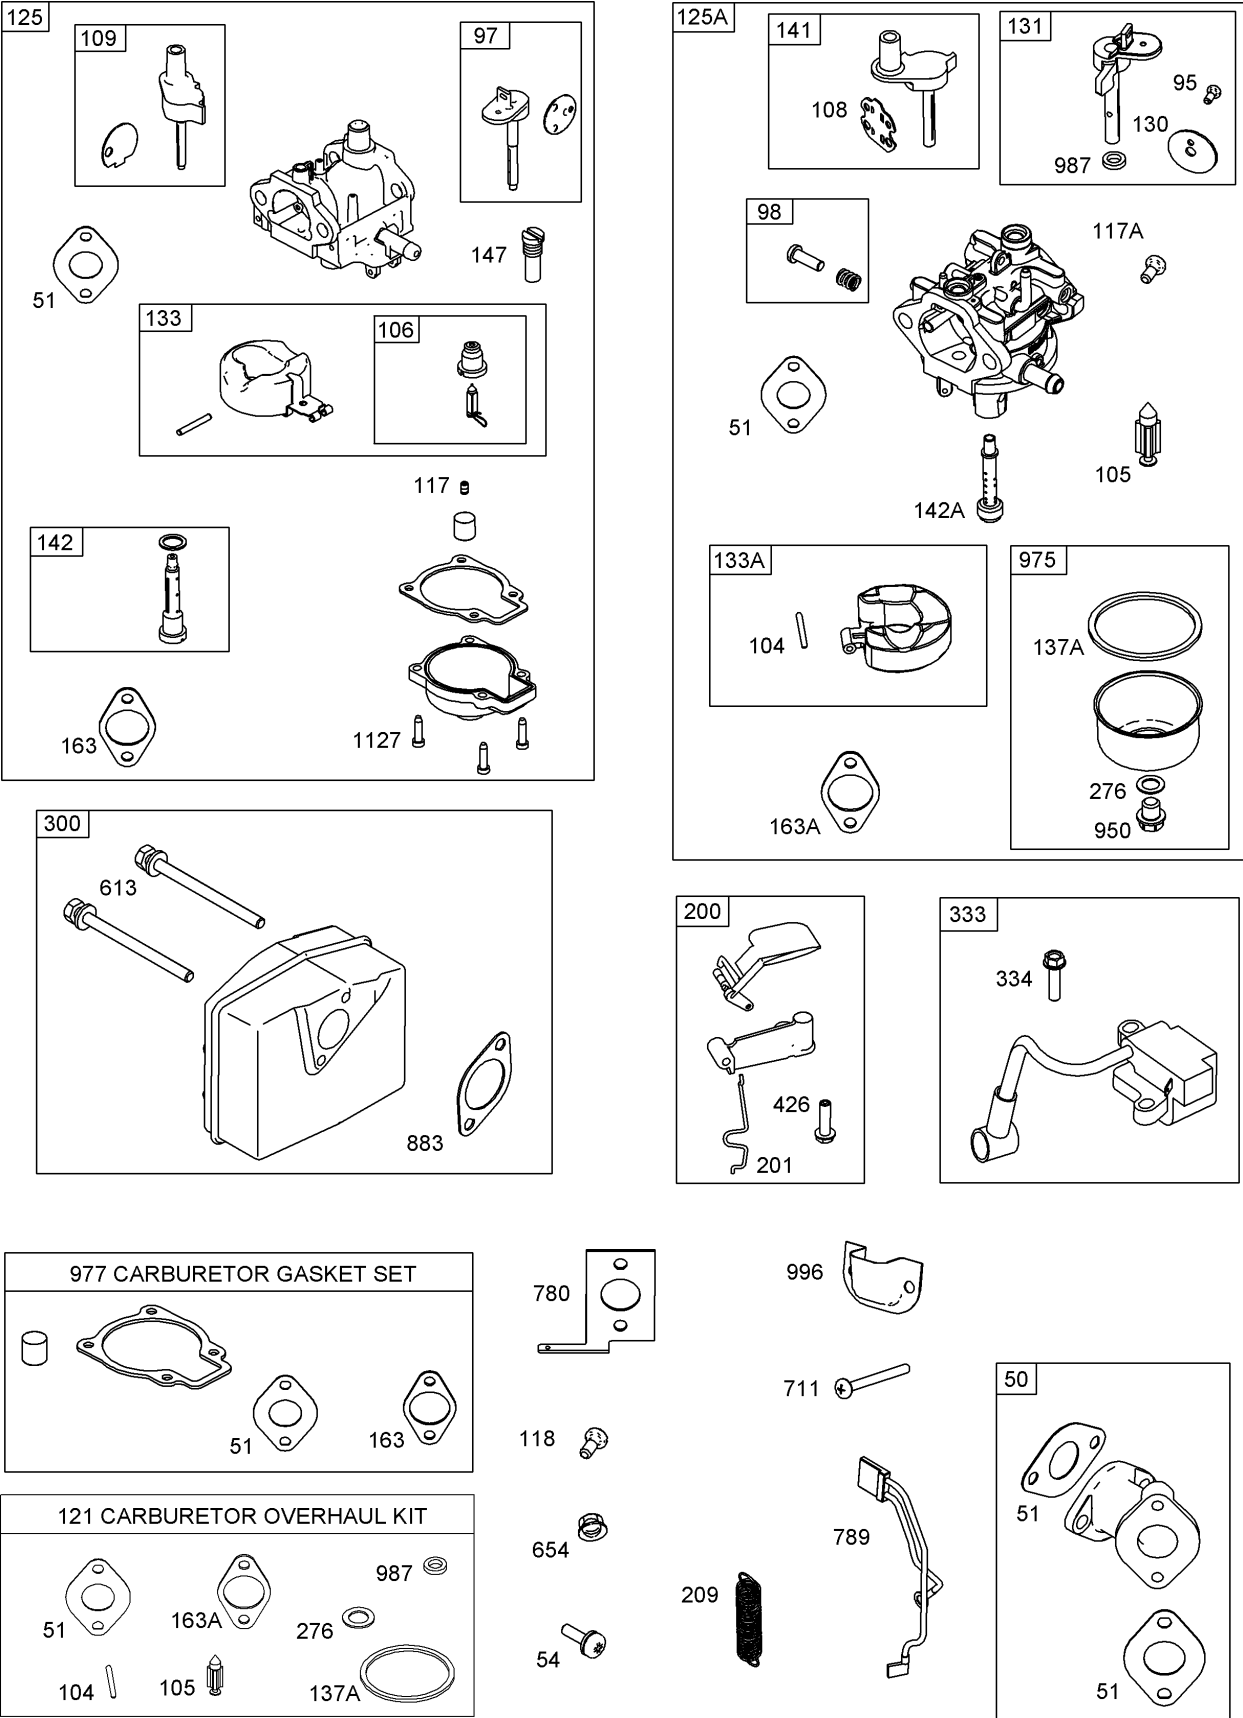

Muffler, Carburetor and Intake Manifold Assembly

Briggs and Stratton 084133-0196-E8

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
⑤50	801232	1	Manifold-Intake	⑤333	801268	1	Armature-Magneto
⑤④51	801224	1	Gasket-Intake	⑤334	801267	1	Screw (Magneto Armature)
⑤				⑤426	801231	1	Screw (Governor Blade)
⑤54	801230	1	Screw (Intake Manifold)	⑤613	801251	1	Screw (Muffler)
⑤95	801415	1	Screw (Throttle Valve) (Used After Code Date 06060600)	⑤654	801324	1	Nut (Intake Manifold) (Used Before Code Date 05042600)
⑤97	801306	1	Shaft-Throttle (Used Before Code Date 06060700)	⑤711	801229	1	Screw (Carburetor Shield)
⑤98	801419	1	Idle Speed Kit (Used After Code Date 06060600)	⑤780	801228	1	Anchor-Spring
⑤④104	691242	1	Pin-Hinge, Float (Used After Code Date 06060600)	⑤789	801253	1	Wire ASM
⑤④105	801423	1	Valve-Needle, Float (Used After Code Date 06060600)	⑤883	801252	1	Gasket-Exhaust
⑤106	801317	1	Seat-Inlet (Used Before Code Date 06060700)	⑤950	801421	1	Screw-Bowl, Float (Used After Code Date 06060600)
⑤108	801413	1	Valve-Choke (Used After Code Date 06060600)	⑤975	801420	1	Bowl-Float (Used After Code Date 06060600)
⑤109	801307	1	Shaft-Choke (Used Before Code Date 06060700)	⑤977	801312	1	Gasket Set-Carburetor (Used Before Code Date 06060700)
⑤117	801310	1	Jet-Main (Standard) (Used Before Code Date 06060700)	⑤④987	801416	1	Seal-Shaft, Throttle (Used After Code Date 06060600)
⑤117A	801425	1	Jet-Main (Used After Code Date 06060600)	⑤996	801226	1	Shield-Carburetor
⑤118	801426	1	Jet-Main (Used After Code Date 06060600)	⑤1127	801318	1	Screw (Float Bowl) (Used Before Code Date 06060700)
⑤121	801427	1	Carburetor Overhaul Kit (Used After Code Date 06060600)				
⑤125	801233	1	Carburetor (Used Before Code Date 06060700)				
⑤125A	801396	1	Carburetor (Used After Code Date 06060600)				
⑤130	801414	1	Valve-Throttle (Used After Code Date 06060600)				
⑤131	801417	1	Throttle Shaft Kit (Used After Code Date 06060600)				
⑤133	801316	1	Float-Carburetor (Used Before Code Date 06060700)				
⑤133A	801422	1	Float-Carburetor (Used After Code Date 06060700)				
⑤④137A	693981	1	Gasket-Bowl, Float (Used After Code Date 06060600)				
⑤141	801418	1	Choke Shaft Kit (Used After Code Date 06060600)				
⑤142	801313	1	Nozzle-Carburetor (Used Before Code Date 06060700)				
⑤142A	801424	1	Nozzle-Carburetor (Used After Code Date 06060600)				
⑤147	801308	1	Jet-Pilot (Used Before Code Date 06060700)				
⑤⑤163	801227	1	Gasket-Cleaner, Air (Used Before Code Date 06060700)				
⑤④163A	801397	1	Gasket-Cleaner, Air (Used After Code Date 06060600)				
⑤200	801289	1	Blade-Governor				
⑤201	801225	1	Link-Vane, Air				
⑤209	801223	1	Spring-Governor				
⑤④276	692255	1	Washer-Sealing (Used After Code Date 06060600)				
⑤300	801250	1	Muffler				

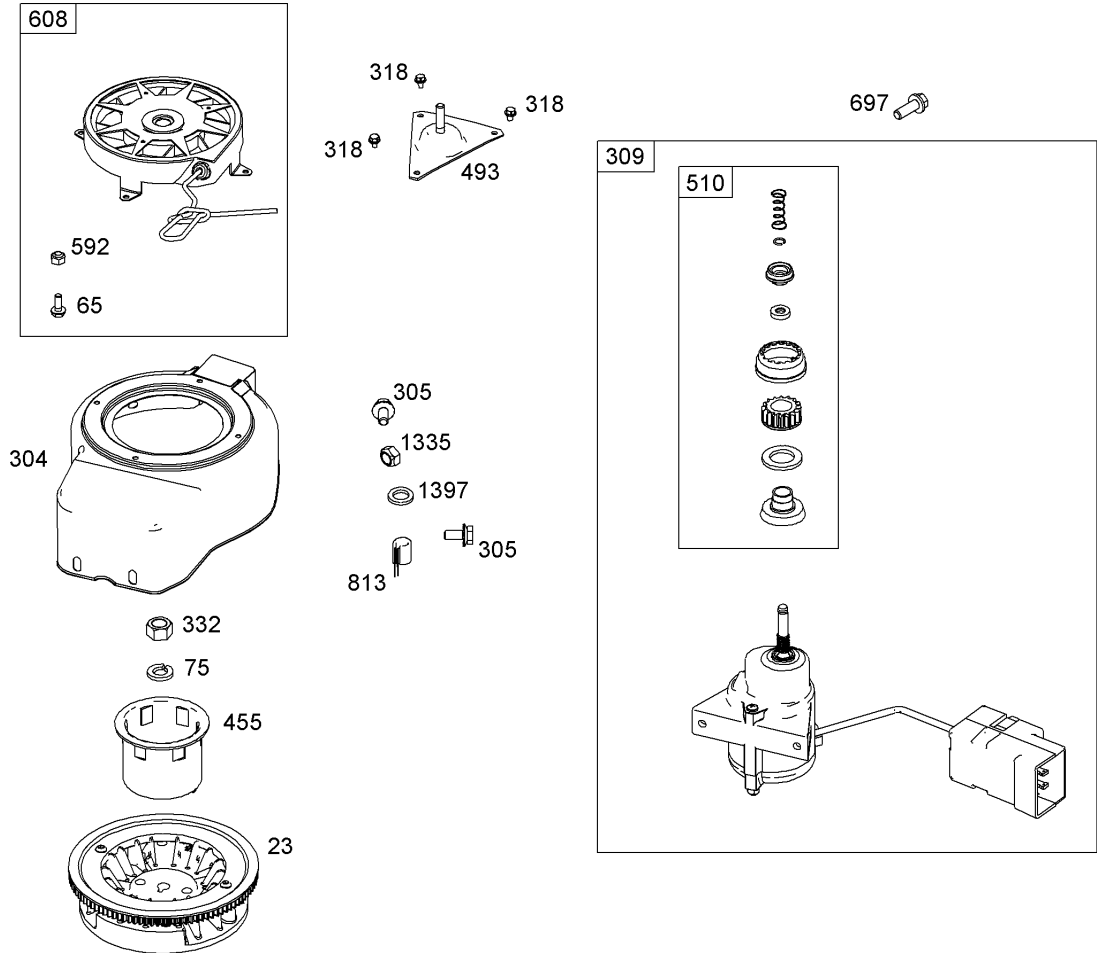

Flywheel, Blower Housing and Starter Assembly

Briggs and Stratton 084133-0196-E8

Ref	Part No.	Qty.	Description				
❶23	801246	1	Flywheel				
❷65	801243	1	Screw (Rewind Starter)				
❸75	801237	1	Washer (Flywheel)				
❹304	801236	1	Housing-Blower				
❺305	801239	1	Screw (Blower Housing)				
❻309	801247	1	Motor-Starter				
❼318	801241	1	Screw (Mounting Bracket)				
❽332	801238	1	Nut (Flywheel)				
❾455	801235	1	Cup-Flywheel				
❿493	801240	1	Bracket-Mounting				
⓫510	801293	1	Drive-Starter				
⓬592	801244	1	Nut (Rewind Starter)				
⓭608	801242	1	Starter-Rewind				
⓮697	801248	1	Screw (Starter Motor)				
⓯813	801249	1	Clamp				
⓰1335	801269	1	Nut (Blower Housing)				
⓱1397	801270	1	Washer (Blower Housing)				

Attachments and Accessories

For 38516 - CCR 2450 GTS Snowthrower

Product Name	Model/Part
Lower Shroud Replacement Kit	108-7338
Snow Cab	88-0600

