



## CCR<sup>™</sup> 2450 GTS<sup>®</sup> Snowthrower

Model No. 38516 - 270010001 and up.

## Parts Catalog

### Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

### Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

## Contents

| Description                         | Page    | Description                                                                         | Page     |
|-------------------------------------|---------|-------------------------------------------------------------------------------------|----------|
| Rotor Housing and Scraper Assembly  | ..... 3 | Handle Assembly                                                                     | ..... 10 |
| Impeller Drive Assembly             | ..... 4 | Cylinder, Piston and Connecting Rod Assembly Briggs and Stratton 084133-0196-E8     | ..... 11 |
| Chute Assembly                      | ..... 5 | Muffler, Carburetor and Intake Manifold Assembly Briggs and Stratton 084133-0196-E8 | ..... 12 |
| Rotor Assembly                      | ..... 6 | Flywheel, Blower Housing and Starter Assembly Briggs and Stratton 084133-0196-E8    | ..... 14 |
| Engine, Gas Tank and Frame Assembly | ..... 7 | Attachments and Accessories List                                                    | ..... 15 |
| Shroud and Control Panel Assembly   | ..... 8 |                                                                                     |          |
| Upper Shroud Assembly No. 110-3400  | ..... 9 |                                                                                     |          |


## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

|                                            |                                              |
|--------------------------------------------|----------------------------------------------|
| AR. .... as required                       | HYD. .... hydraulic                          |
| ASM. .... assembly                         | LH. .... left hand                           |
| BBC. .... blade brake clutch               | NI. .... nylon insert                        |
| CARR. .... carriage                        | NPTF. .... national pipe thread fine         |
| DEG. .... degrees                          | PFH. .... phillips flat head                 |
| EXT. .... external                         | PPH. .... phillips pan head                  |
| FH. .... flat head                         | PPHTF. .... phillips pan head thread forming |
| GA. .... gauge                             | PRH. .... phillips round head                |
| HD. .... heavy-duty                        | PTH. .... phillips truss head                |
| HF. .... hex flange                        | PTO. .... power-take-off                     |
| HH. .... hex head                          | RH. .... right hand                          |
| HHF. .... hex head flange                  | ROPS. .... roll-over protection system       |
| HHFTF. .... hex head flange thread forming | SFH. .... slotted fillister head             |
| HJ. .... hex jam                           | SHH. .... slotted hex head                   |
| HLH. .... hex lag head                     | SHWH. .... slotted hex washer head           |
| HOC. .... height-of-cut                    | SPH. .... slotted pan head                   |
| HSBH. .... hex socket button head          | SQH. .... square head                        |
| HSFH. .... hex socket flat head            | SRH. .... slotted round head                 |
| HSH. .... hex socket head                  | STD. .... standard                           |
| HWH. .... hex washer head                  | TAP. .... self tapping                       |
| HWHTF. .... hex washer head thread forming | TTH. .... torx truss head                    |

## Footnotes


- |                                                    |                                                      |
|----------------------------------------------------|------------------------------------------------------|
| ❶ Not illustrated                                  | ❷ Not serviced separately                            |
| ❸ Obtain from your local Briggs & Stratton dealer  | ❹ Included in Carburetor Overhaul Kit (Ref. No. 121) |
| ❺ Included in Carburetor Gasket Set (Ref. No. 977) |                                                      |

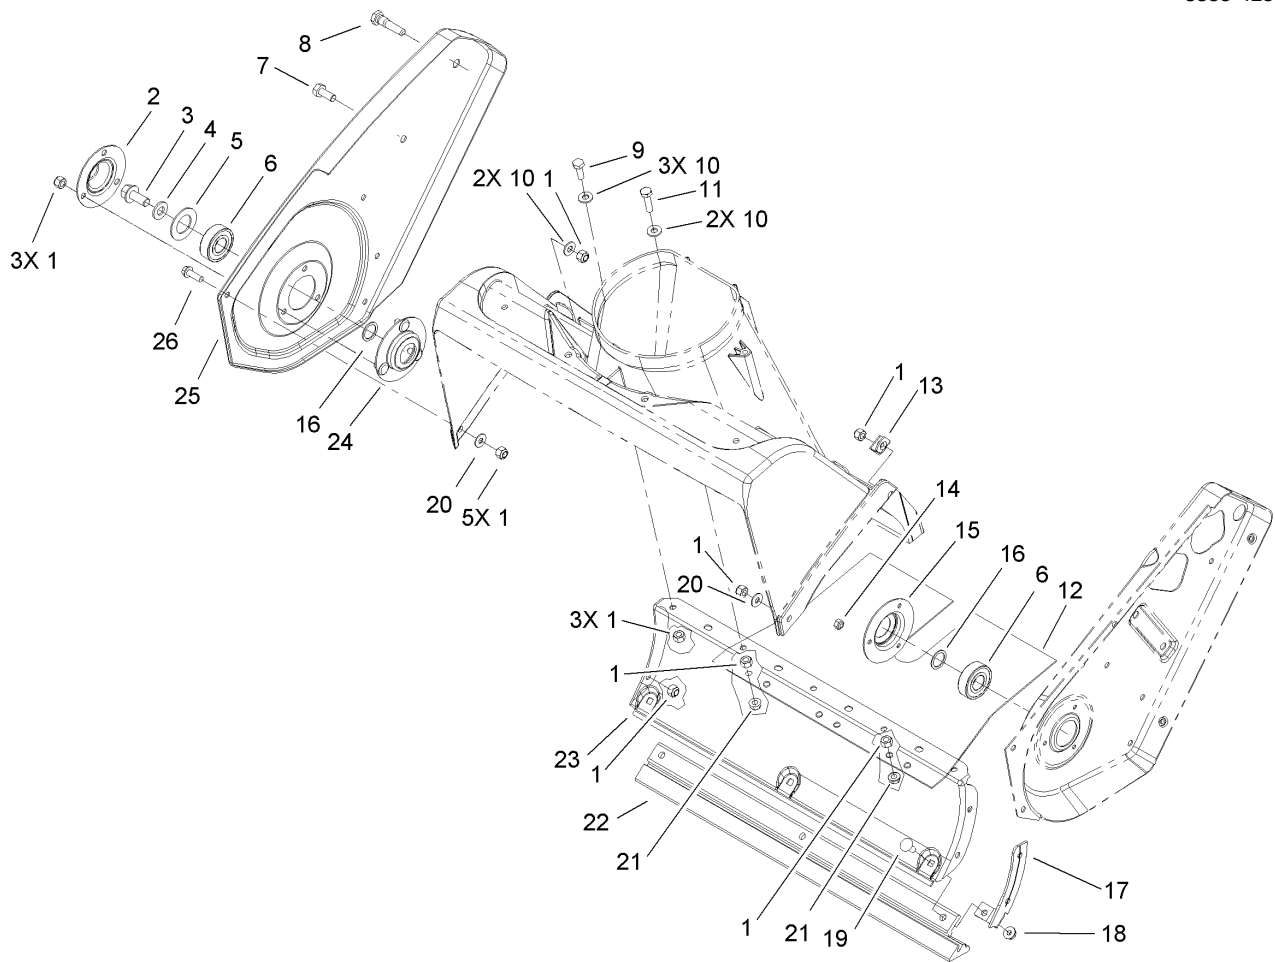

## Rotor Housing and Scraper Assembly

| Ref | Part No.    | Qty. | Description            |
|-----|-------------|------|------------------------|
| 1   | 3296-42     | 17   | Nut-Lock, NI           |
| 2   | 52-7290-03  | 1    | Retainer-Bearing       |
| 3   | 3234-25     | 1    | Screw-HHF              |
| 4   | 3256-24     | 1    | Washer-Flat            |
| 5   | 52-7270     | 1    | Washer-Rubber          |
| 6   | 100-1048    | 2    | Bearing-Ball           |
| 7   | 322-43      | 1    | Screw-HH               |
| 8   | 38-8211     | 1    | Pin-Rotor              |
| 9   | 321-4       | 3    | Screw-HH               |
| 10  | 3256-22     | 7    | Washer-Flat            |
| 11  | 321-6       | 2    | Screw-HH               |
| 12  | 55-9512     | 1    | Cover-Bottom           |
| 13  | 55-9430     | 1    | Bracket-Housing        |
| 14  | 3296-2      | 3    | Nut-Lock               |
| 15  | 38-8620     | 1    | Flange-Bearing         |
| 16  | 52-7280     | 2    | Washer-Thrust          |
| 17  | 56-2610     | 1    | Bracket-Housing, Lower |
| 18  | 32149-2     | 3    | Nut-Keps               |
| 19  | 3229-11     | 3    | Screw-CARR             |
| 20  | 3256-1      | 2    | Washer-Flat            |
| 21  | 32128-10    | 2    | Nut-Lock, HHF          |
| 22  | 55-8760     | 1    | Scraper                |
| 23  | 105-1967-03 | 1    | Housing-Lower          |
| 24  | 52-9110     | 1    | Flange-Bearing         |

 
| Ref | Part No.    | Qty. | Description     |
|-----|-------------|------|-----------------|
| 25  | 105-1952-03 | 1    | Sideplate-Right |
| 26  | 32105-15    | 5    | Screw           |

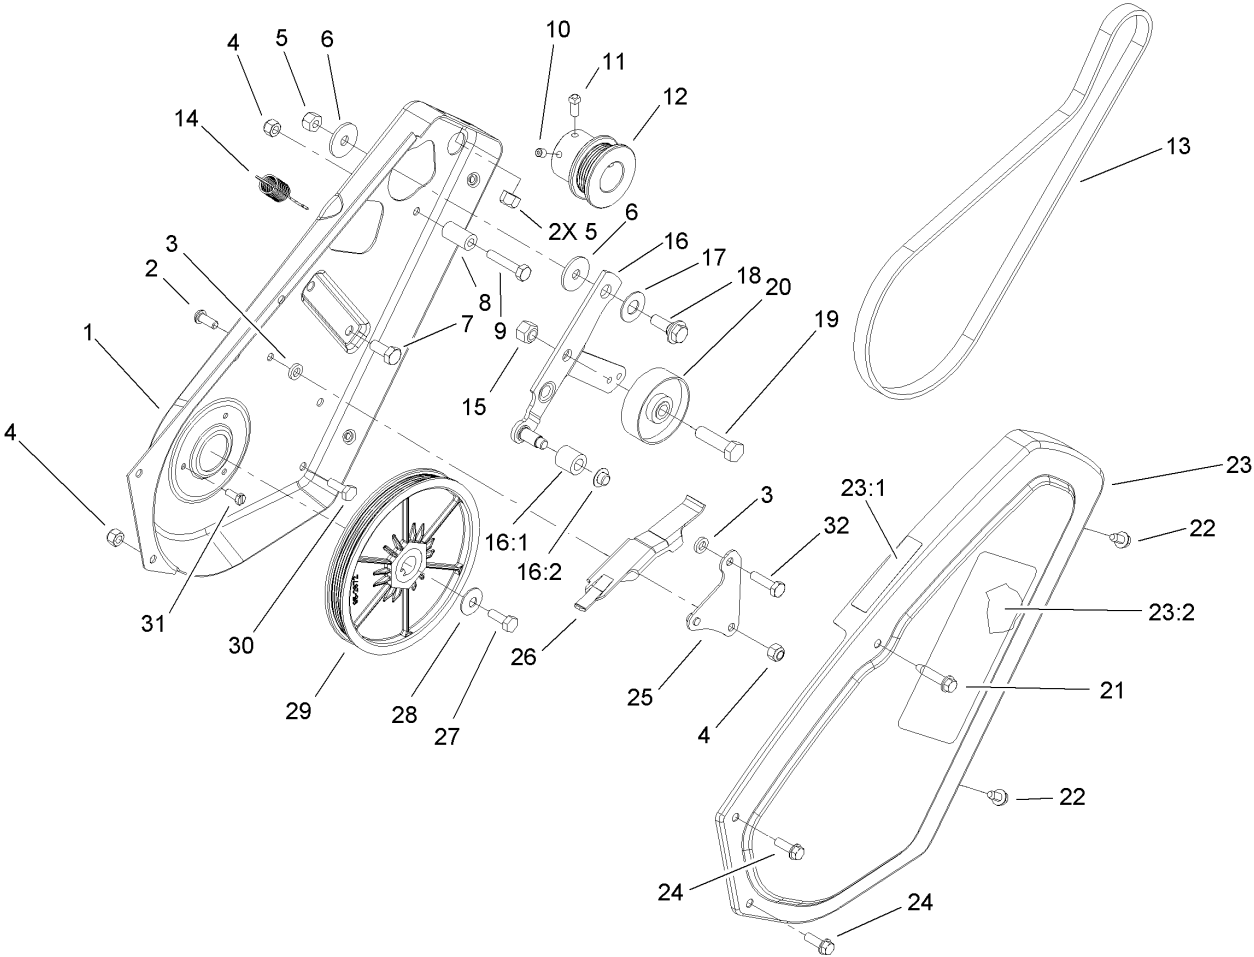

Impeller Drive Assembly


| Ref  | Part No.   | Qty. | Description         |
|------|------------|------|---------------------|
| 1    | 55-8851-03 | 1    | Plate-Side, LH      |
| 2    | 3274-31    | 1    | Screw-HSBH          |
| 3    | 55-9620    | 2    | Spacer-Plate, Pivot |
| 4    | 3296-42    | 3    | Nut-Lock, NI        |
| 5    | 3296-29    | 3    | Nut-Lock, NI        |
| 6    | 5-4460     | 2    | Washer-Pivot        |
| 7    | 322-3      | 2    | Screw-HH            |
| 8    | 55-9530    | 1    | Sleeve-Guide, Belt  |
| 9    | 321-13     | 1    | Screw-HH            |
| 10   | 3245-32    | 1    | Screw-HSH           |
| 11   | 3241-7     | 1    | Screw-SQH           |
| 12   | 95-2673    | 1    | Pulley-Engine       |
| 13   | 95-6151    | 1    | Belt-Drive          |
| 14   | 55-9280    | 1    | Spring-Extension    |
| 15   | 32152-2    | 1    | Nut-Lock, Cone      |
| 16   | 105-3542   | 1    | Idler Arm ASM       |
| 16:1 | 55-9520    | 1    | Roller-Brake        |
| 16:2 | 32112-11   | 1    | Nut-Push            |
| 17   | 25-5641    | 1    | Washer              |
| 18   | 27-0410    | 1    | Screw-Shoulder      |
| 19   | 323-29     | 1    | Screw-HH            |
| 20   | 55-9290    | 1    | Pulley-Idler        |
| 21   | 32144-110  | 1    | Screw-HWH           |
| 22   | 12-3270    | 2    | Screw               |

| Ref  | Part No. | Qty. | Description       |
|------|----------|------|-------------------|
| 23   | 105-1997 | 1    | Cover-Drive       |
| 23:1 | 104-2767 | 1    | Decal-Warning     |
| 23:2 | 60-9480  | 1    | Decal             |
| 24   | 32105-15 | 2    | Screw             |
| 25   | 55-9570  | 1    | Pivot Plate ASM   |
| 26   | 55-9550  | 1    | Brake-Arm         |
| 27   | 321-30   | 1    | Screw-HH          |
| 28   | 3290-456 | 1    | Washer-Belleville |
| 29   | 95-2672  | 1    | Pulley Rotor ASM  |
| 30   | 321-4    | 2    | Screw-HH          |
| 31   | 32105-8  | 3    | Screw-SHH         |
| 32   | 321-6    | 1    | Screw-HH          |

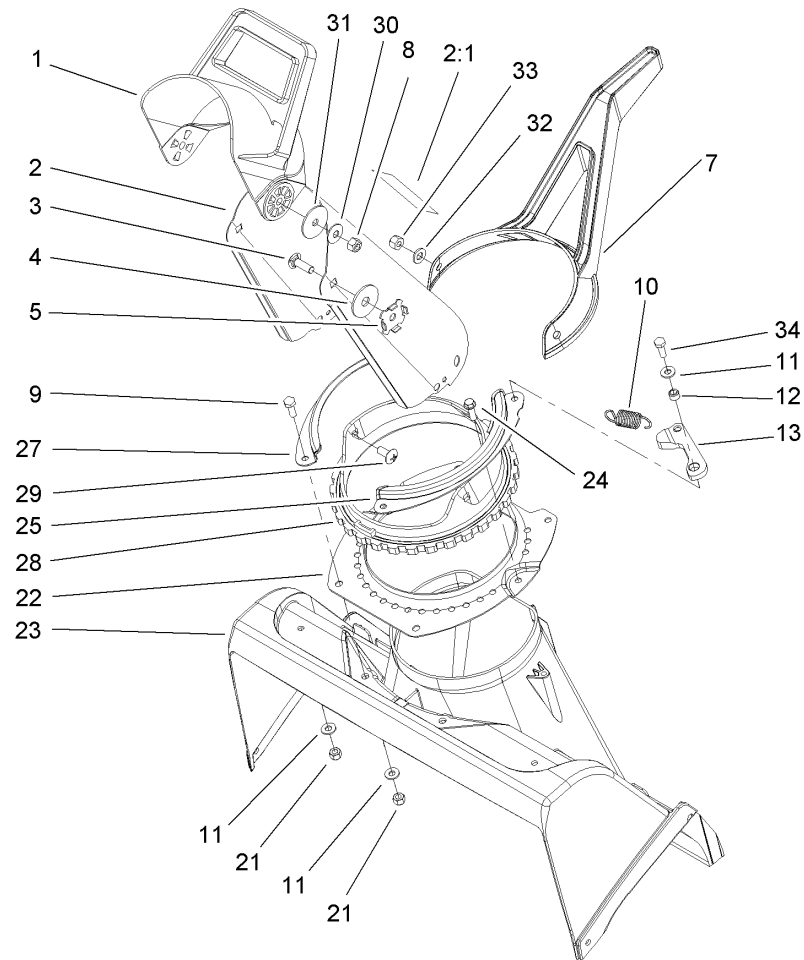


## Chute Assembly
 
| Ref | Part No.   | Qty. | Description           | Ref | Part No. | Qty. | Description  |
|-----|------------|------|-----------------------|-----|----------|------|--------------|
| 1   | 56-2680    | 1    | Chute-Deflector       | 33  | 3296-47  | 3    | Nut-Lock, NI |
| 2   | 104-4115   | 1    | Chute ASM             | 34  | 321-6    | 1    | Screw-HH     |
| 2:1 | 104-4135   | 1    | Decal-Danger          |     |          |      |              |
| 3   | 3230-22    | 2    | Screw-CARR            |     |          |      |              |
| 4   | 20-4320    | 2    | Washer-Rubber         |     |          |      |              |
| 5   | 55-8950    | 2    | Plate-Friction        |     |          |      |              |
| 7   | 94-9914    | 1    | Handle-Control, Chute |     |          |      |              |
| 8   | 3296-29    | 2    | Nut-Lock, NI          |     |          |      |              |
| 9   | 321-4      | 3    | Screw-HH              |     |          |      |              |
| 10  | 80-4600    | 1    | Spring-Extension      |     |          |      |              |
| 11  | 3256-22    | 5    | Washer-Flat           |     |          |      |              |
| 12  | 55-9370    | 1    | Spacer-Blade, Rotor   |     |          |      |              |
| 13  | 80-4610    | 1    | Detent                |     |          |      |              |
| 21  | 3296-42    | 6    | Nut-Lock, NI          |     |          |      |              |
| 22  | 55-8921-03 | 1    | Ring-Support, Chute   |     |          |      |              |
| 23  | 105-1950   | 1    | Housing-Rotor, Upper  |     |          |      |              |
| 24  | 46-8091    | 2    | Screw-HWH             |     |          |      |              |
| 25  | 71-4980-03 | 1    | Retainer-Chute, LH    |     |          |      |              |
| 27  | 71-4990-03 | 1    | Retainer-Chute, RH    |     |          |      |              |
| 28  | 104-2763   | 1    | Ring-Chute            |     |          |      |              |
| 29  | 100-5487   | 3    | Screw-PTH             |     |          |      |              |
| 30  | 3290-456   | 2    | Washer-Belleville     |     |          |      |              |
| 31  | 3256-68    | 2    | Washer-Flat           |     |          |      |              |
| 32  | 3256-70    | 3    | Washer-Flat           |     |          |      |              |

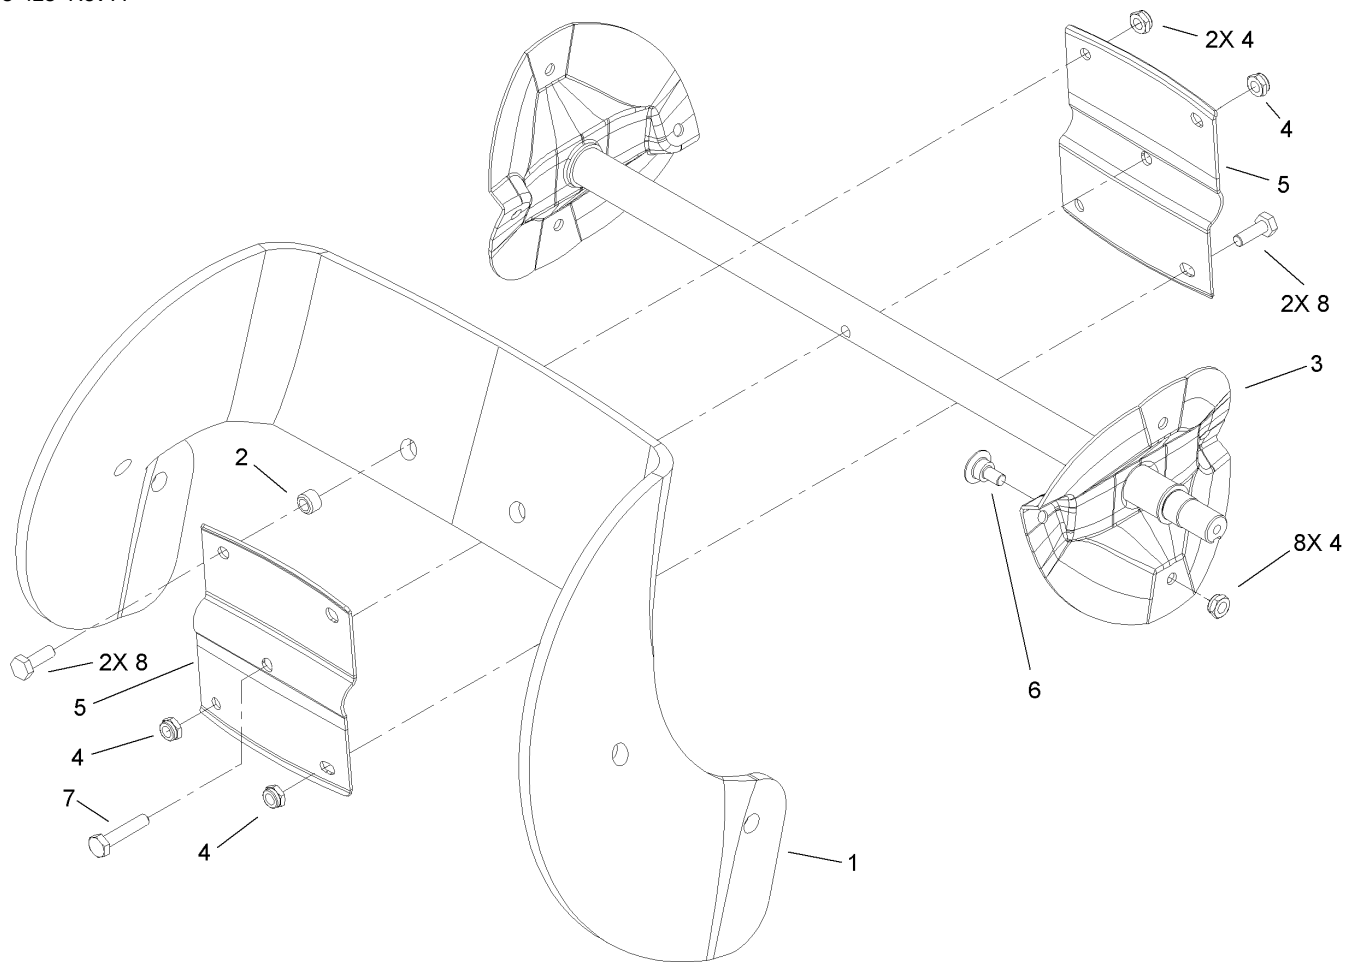


Rotor Assembly

| Ref | Part No.    | Qty. | Description         |  |  |  |  |
|-----|-------------|------|---------------------|--|--|--|--|
| 1   | 99-9313     | 2    | Blade-Rotor         |  |  |  |  |
| 2   | 55-9370     | 4    | Spacer-Blade, Rotor |  |  |  |  |
| 3   | 100-5478-03 | 1    | Rotor ASM           |  |  |  |  |
| 4   | 3296-56     | 13   | Nut-Lock, NI        |  |  |  |  |
| 5   | 66-6600-03  | 2    | Half-Rotor          |  |  |  |  |
| 6   | 84-1971     | 8    | Screw               |  |  |  |  |
| 7   | 321-8       | 1    | Screw-HH            |  |  |  |  |
| 8   | 321-4       | 4    | Screw-HH            |  |  |  |  |

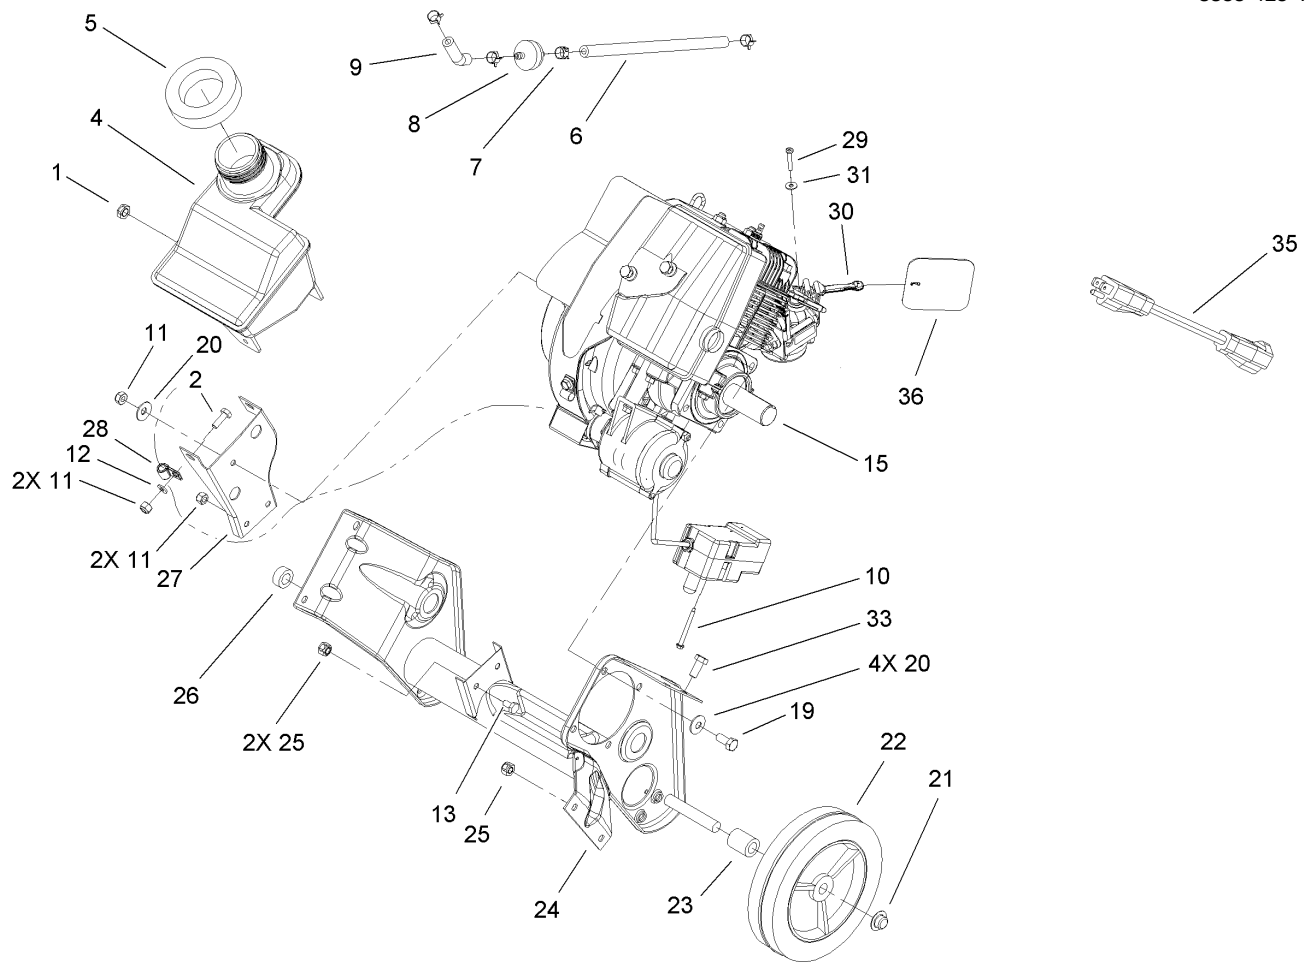

## Engine, Gas Tank and Frame Assembly


| Ref | Part No.    | Qty. | Description                                   | Ref | Part No. | Qty. | Description         |
|-----|-------------|------|-----------------------------------------------|-----|----------|------|---------------------|
| 1   | 32152-8     | 1    | Nut-Lock, Cone                                | 29  | 32144-97 | 1    | Screw-PPH, Plastite |
| 2   | 321-4       | 2    | Screw-HH                                      | 30  | 104-0878 | 1    | Lever-Choke         |
| 4   | 105-8952    | 1    | Tank-Gas                                      | 31  | 3256-14  | 1    | Washer-Flat         |
| 5   | 55-9310     | 1    | Seal-Foam                                     | 33  | 322-43   | 2    | Screw-HH            |
| 6   | 110-4894    | 1    | Hose-Fuel                                     | 35  | 99-9300  | 1    | Cord-Extension      |
| 7   | 2412-98     | 4    | Clamp                                         | 36  | 110-3444 | 1    | Shield-Choke Hole   |
| 8   | 56-6360     | 1    | Filter-Fuel                                   |     |          |      |                     |
| 9   | 109-0304    | 1    | Hose-Fuel                                     |     |          |      |                     |
| 10  | 32144-27    | 3    | Screw-Plastite                                |     |          |      |                     |
| 11  | 3296-42     | 5    | Nut-Lock, NI                                  |     |          |      |                     |
| 12  | 3256-22     | 2    | Washer-Flat                                   |     |          |      |                     |
| 13  | 321-2       | 2    | Screw-HH                                      |     |          |      |                     |
| 15  |             | 1    | Engine-Briggs And Stratton,<br>084133-0196-E8 |     |          |      |                     |
| 19  | 322-3       | 4    | Screw-HH                                      |     |          |      |                     |
| 20  | 3290-456    | 5    | Washer-Belleville                             |     |          |      |                     |
| 21  | 32112-14    | 2    | Nut-Push                                      |     |          |      |                     |
| 22  | 66-6510     | 2    | Wheel                                         |     |          |      |                     |
| 23  | 66-6501     | 1    | Spacer-Wheel                                  |     |          |      |                     |
| 24  | 105-1965-03 | 1    | Frame                                         |     |          |      |                     |
| 25  | 3296-29     | 3    | Nut-Lock, NI                                  |     |          |      |                     |
| 26  | 66-6500     | 1    | Spacer-Wheel                                  |     |          |      |                     |
| 27  | 105-1968-03 | 1    | Bracket-Support, Recoil                       |     |          |      |                     |
| 28  | 2412-91     | 1    | Clamp                                         |     |          |      |                     |

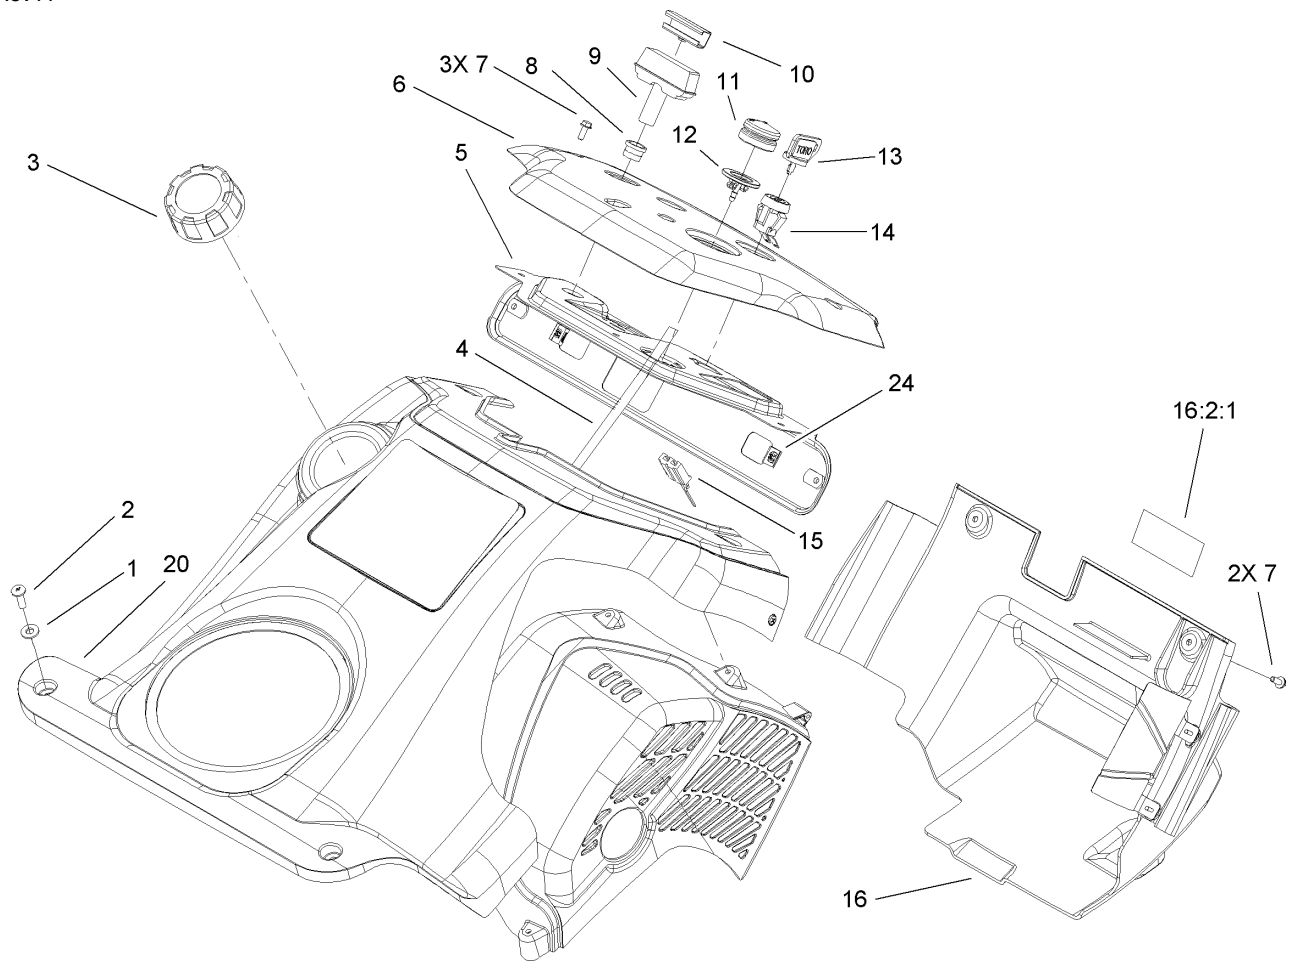

# Shroud and Control Panel Assembly

| Ref    | Part No.    | Qty. | Description                 |  |  |  |  |
|--------|-------------|------|-----------------------------|--|--|--|--|
| 1      | 3256-22     | 2    | Washer-Flat                 |  |  |  |  |
| 2      | 3250-32     | 2    | Screw-PPH                   |  |  |  |  |
| 3      | 104-4133    | 1    | Gas Cap ASM                 |  |  |  |  |
| 4      | 98-1372     | 1    | Hose-Primer                 |  |  |  |  |
| 5      | 105-1999-03 | 1    | Panel-Support, Control      |  |  |  |  |
| 6      | 105-3523    | 1    | Panel-Control               |  |  |  |  |
| 7      | 32144-112   | 5    | Screw-HWH                   |  |  |  |  |
| 8      | 55-9410     | 1    | Guide-Rope, Starter         |  |  |  |  |
| 9      | 612825      | 1    | Handle-Start                |  |  |  |  |
| 10     | 612824      | 1    | Clip-Starter                |  |  |  |  |
| 11     | 66-7460     | 1    | Bulb-Primer                 |  |  |  |  |
| 12     | 44-2750     | 1    | Body-Primer                 |  |  |  |  |
| 13     | 63-8360     | 1    | Key-Ignition                |  |  |  |  |
| 14     | 40-5940     | 1    | Switch                      |  |  |  |  |
| 15     | 218-532     | 1    | Connector-Body              |  |  |  |  |
| 16     | 108-7339    | 1    | Lower Shroud And Baffle ASM |  |  |  |  |
| 16:2   |             | 1    | Shroud-Lower                |  |  |  |  |
| 16:2:1 | 61-4790     | 1    | Decal                       |  |  |  |  |
| 20     | 110-3400    | 1    | Upper Shroud ASM            |  |  |  |  |
| 24     | 100-9889    | 2    | Nut-Speed                   |  |  |  |  |




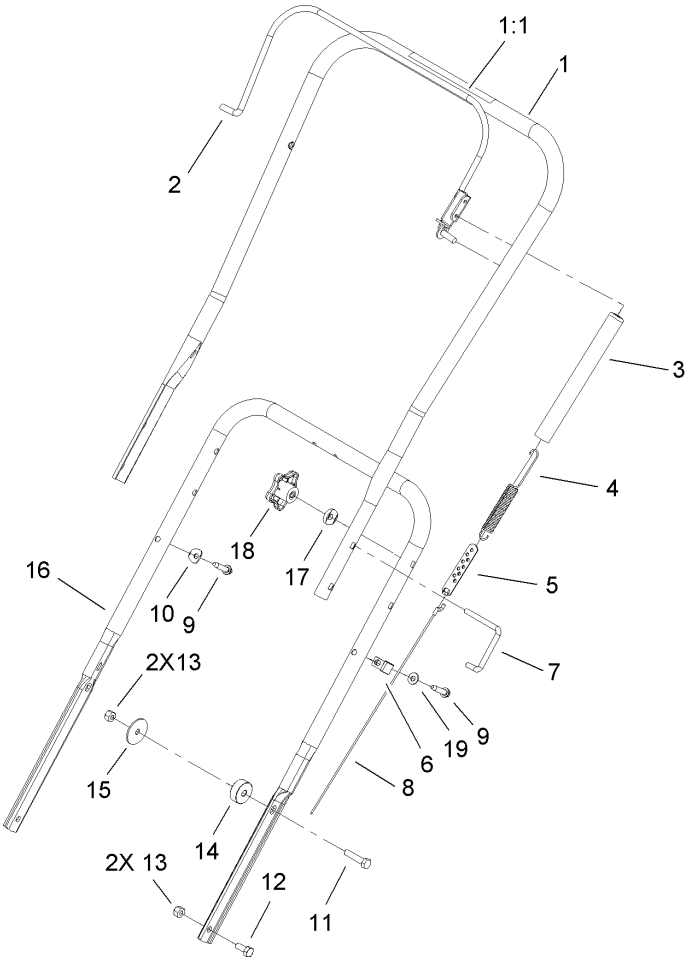

Handle Assembly

| Ref | Part No.   | Qty. | Description            |  |  |  |  |
|-----|------------|------|------------------------|--|--|--|--|
| 1   | 95-2667    | 1    | Handle-Upper           |  |  |  |  |
| 1:1 | 104-2775   | 1    | Decal-Drive, Rotor     |  |  |  |  |
| 2   | 71-5120-03 | 1    | Bail ASM               |  |  |  |  |
| 3   | 71-5530    | 1    | Cover-Spring           |  |  |  |  |
| 4   | 71-5480    | 1    | Spring-Clutch          |  |  |  |  |
| 5   | 71-5330    | 1    | Adjuster-Cable, Clutch |  |  |  |  |
| 6   | 2412-91    | 1    | Clamp                  |  |  |  |  |
| 7   | 98-2266    | 2    | Lock-Handle            |  |  |  |  |
| 8   | 110-3437   | 1    | Cable-Clutch           |  |  |  |  |
| 9   | 32144-110  | 2    | Screw-HWH              |  |  |  |  |
| 10  | 3-7501     | 1    | Washer                 |  |  |  |  |
| 11  | 322-6      | 2    | Screw-HH               |  |  |  |  |
| 12  | 322-3      | 2    | Screw-HH               |  |  |  |  |
| 13  | 3296-29    | 4    | Nut-Lock, NI           |  |  |  |  |
| 14  | 105-1961   | 2    | Spacer                 |  |  |  |  |
| 15  | 3256-68    | 2    | Washer-Flat            |  |  |  |  |
| 16  | 55-9121-03 | 1    | Handle-Lower           |  |  |  |  |
| 17  | 107-3844   | 2    | Washer                 |  |  |  |  |
| 18  | 106-4161   | 2    | Knob-Handle            |  |  |  |  |
| 19  | 3256-22    | 1    | Washer-Flat            |  |  |  |  |

## 1036 EMISSIONS LABEL











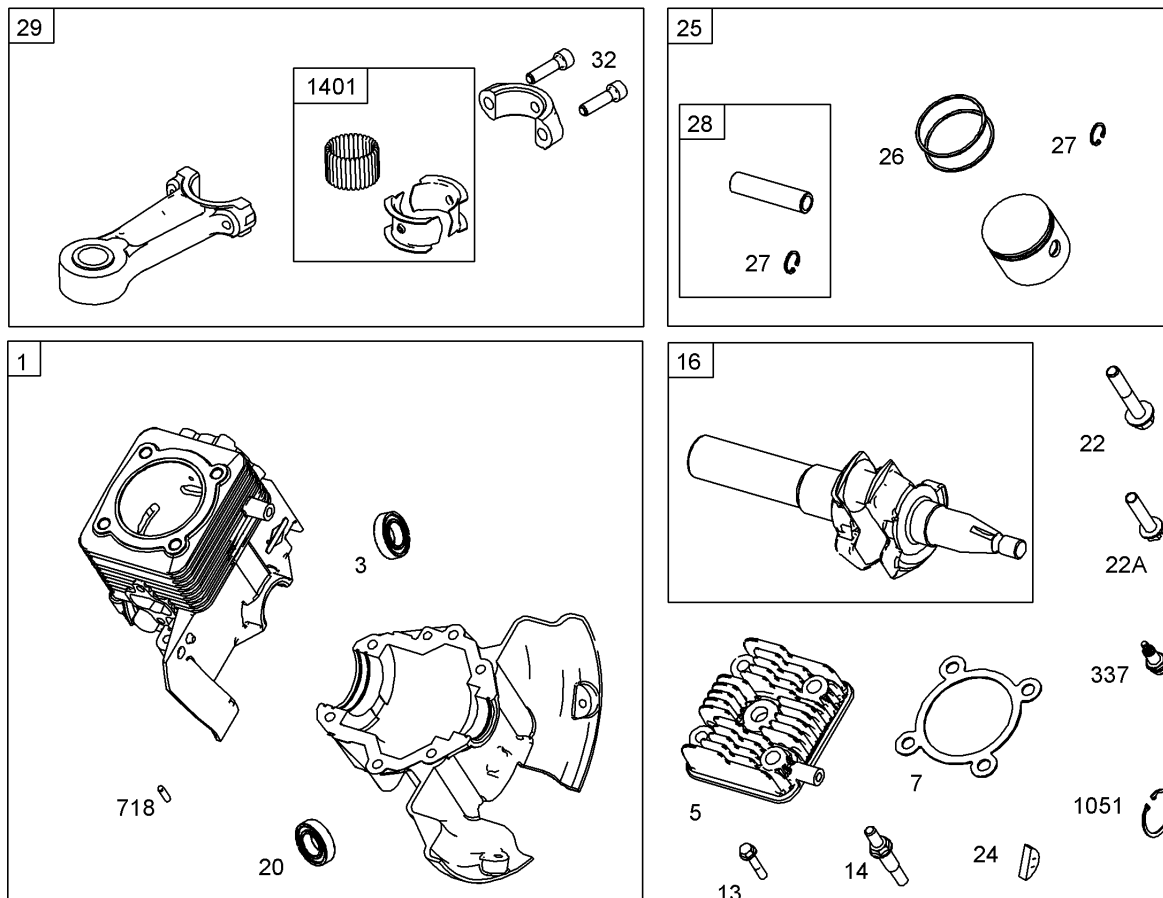 


## Cylinder, Piston and Connecting Rod Assembly Briggs and Stratton 084133-0196-E8

| Ref   | Part No. | Qty. | Description                                                                       |  |  |  |  |
|-------|----------|------|-----------------------------------------------------------------------------------|--|--|--|--|
| ❸1    | 801322   | 1    | Cylinder ASM (Non Boost, Electric Start)                                          |  |  |  |  |
| ❸3    | 801262   | 1    | Seal-Oil (Magneto Side)                                                           |  |  |  |  |
| ❸5    | 801283   | 1    | Head-Cylinder                                                                     |  |  |  |  |
| ❸7    | 801263   | 1    | Gasket-Head, Cylinder                                                             |  |  |  |  |
| ❸13   | 801264   | 1    | Screw (Cylinder Head)                                                             |  |  |  |  |
| ❸14   | 801265   | 1    | Stud (Cylinder Head)                                                              |  |  |  |  |
| ❸16   | 801220   | 1    | Crankshaft                                                                        |  |  |  |  |
| ❸20   | 801261   | 1    | Seal-Oil (PTO Side)                                                               |  |  |  |  |
| ❸22   | 801266   | 1    | Screw (Crankcase Cover/ Sump)                                                     |  |  |  |  |
| ❸22A  | 801271   | 1    | Screw (Crankcase Cover/ Sump)                                                     |  |  |  |  |
| ❸24   | 801234   | 1    | Key-Flywheel                                                                      |  |  |  |  |
| ❸25   | 801279   | 1    | Piston ASM                                                                        |  |  |  |  |
| ❸26   | 801280   | 1    | Ring Set                                                                          |  |  |  |  |
| ❸27   | 801275   | 1    | Lock-Pin, Piston                                                                  |  |  |  |  |
| ❸28   | 801276   | 1    | Pin-Piston                                                                        |  |  |  |  |
| ❸29   | 801277   | 1    | Rod-Connecting                                                                    |  |  |  |  |
| ❸32   | 801278   | 1    | Screw (Connecting Rod)                                                            |  |  |  |  |
| ❸337  | 801254   | 1    | Plug-Spark                                                                        |  |  |  |  |
| ❸718  | 690959   | 1    | Pin-Locating                                                                      |  |  |  |  |
| ❸1051 | 801274   | 1    | Ring-Retaining                                                                    |  |  |  |  |
| ❸1036 |          | 1    | Label-Emissions (Available From An Authorized Briggs And Stratton Service Dealer) |  |  |  |  |
| ❸1401 | 801290   | 1    | Roller-Strip                                                                      |  |  |  |  |

# Muffler, Carburetor and Intake Manifold Assembly

           
## Briggs and Stratton 084133-0196-E8

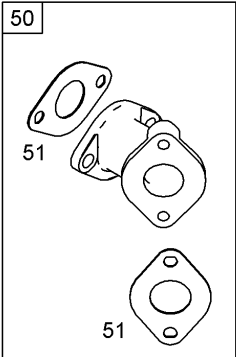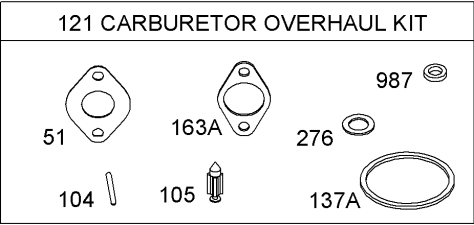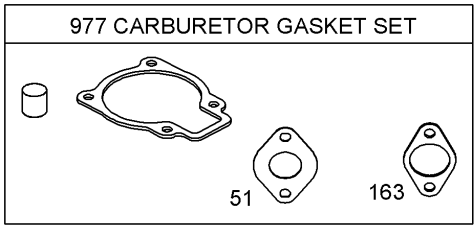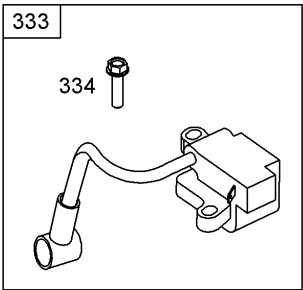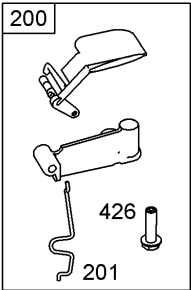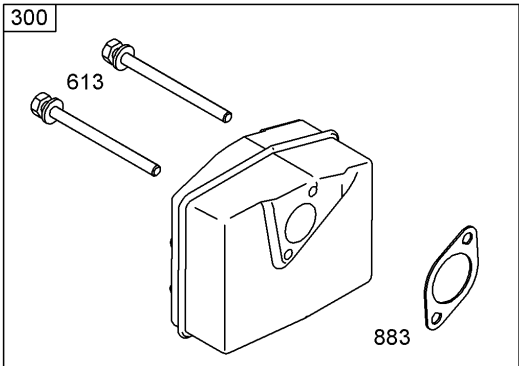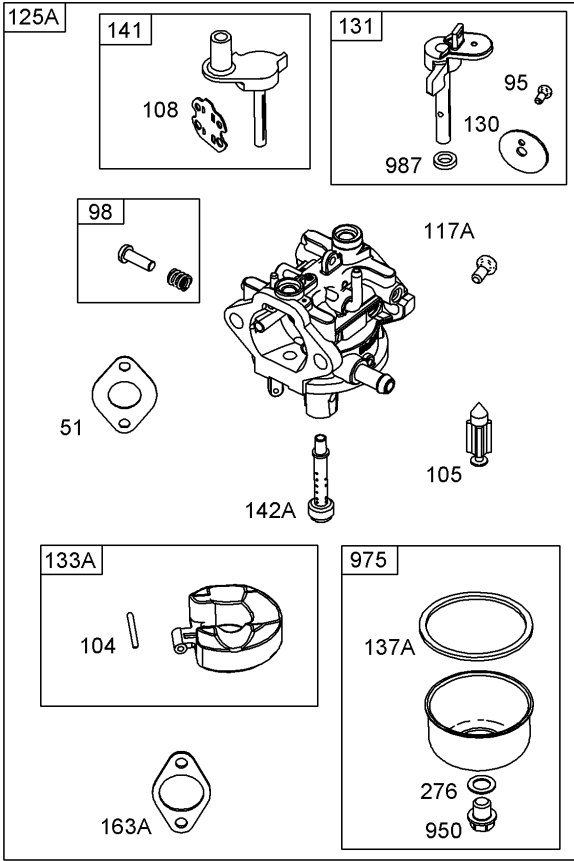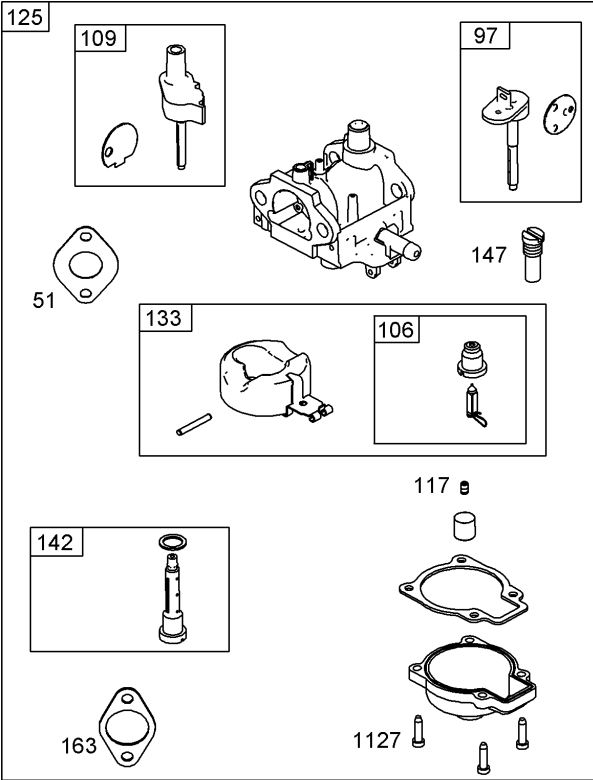

# Muffler, Carburetor and Intake Manifold Assembly

## Briggs and Stratton 084133-0196-E8
 
| Ref    | Part No. | Qty. | Description                                             | Ref   | Part No. | Qty. | Description                                            |
|--------|----------|------|---------------------------------------------------------|-------|----------|------|--------------------------------------------------------|
| ⑤50    | 801232   | 1    | Manifold-Intake                                         | ⑤333  | 801268   | 1    | Armature-Magneto                                       |
| ⑤④51   | 801224   | 1    | Gasket-Intake                                           | ⑤334  | 801267   | 1    | Screw (Magneto Armature)                               |
| ⑤      |          |      |                                                         | ⑤426  | 801231   | 1    | Screw (Governor Blade)                                 |
| ⑤54    | 801230   | 1    | Screw (Intake Manifold)                                 | ⑤613  | 801251   | 1    | Screw (Muffler)                                        |
| ⑤95    | 801415   | 1    | Screw (Throttle Valve) (Used After Code Date 06060600)  | ⑤654  | 801324   | 1    | Nut (Intake Manifold) (Used Before Code Date 05042600) |
| ⑤97    | 801306   | 1    | Shaft-Throttle (Used Before Code Date 06060700)         | ⑤711  | 801229   | 1    | Screw (Carburetor Shield)                              |
| ⑤98    | 801419   | 1    | Idle Speed Kit (Used After Code Date 06060600)          | ⑤780  | 801228   | 1    | Anchor-Spring                                          |
| ⑤④104  | 691242   | 1    | Pin-Hinge, Float (Used After Code Date 06060600)        | ⑤789  | 801253   | 1    | Wire ASM                                               |
| ⑤④105  | 801423   | 1    | Valve-Needle, Float (Used After Code Date 06060600)     | ⑤883  | 801252   | 1    | Gasket-Exhaust                                         |
| ⑤106   | 801317   | 1    | Seat-Inlet (Used Before Code Date 06060700)             | ⑤950  | 801421   | 1    | Screw-Bowl, Float (Used After Code Date 06060600)      |
| ⑤108   | 801413   | 1    | Valve-Choke (Used After Code Date 06060600)             | ⑤975  | 801420   | 1    | Bowl-Float (Used After Code Date 06060600)             |
| ⑤109   | 801307   | 1    | Shaft-Choke (Used Before Code Date 06060700)            | ⑤977  | 801312   | 1    | Gasket Set-Carburetor (Used Before Code Date 06060700) |
| ⑤117   | 801310   | 1    | Jet-Main (Standard) (Used Before Code Date 06060700)    | ⑤④987 | 801416   | 1    | Seal-Shaft, Throttle (Used After Code Date 06060600)   |
| ⑤117A  | 801425   | 1    | Jet-Main (Used After Code Date 06060600)                | ⑤996  | 801226   | 1    | Shield-Carburetor                                      |
| ⑤118   | 801426   | 1    | Jet-Main (Used After Code Date 06060600)                | ⑤1127 | 801318   | 1    | Screw (Float Bowl) (Used Before Code Date 06060700)    |
| ⑤121   | 801427   | 1    | Carburetor Overhaul Kit (Used After Code Date 06060600) |       |          |      |                                                        |
| ⑤125   | 801233   | 1    | Carburetor (Used Before Code Date 06060700)             |       |          |      |                                                        |
| ⑤125A  | 801396   | 1    | Carburetor (Used After Code Date 06060600)              |       |          |      |                                                        |
| ⑤130   | 801414   | 1    | Valve-Throttle (Used After Code Date 06060600)          |       |          |      |                                                        |
| ⑤131   | 801417   | 1    | Throttle Shaft Kit (Used After Code Date 06060600)      |       |          |      |                                                        |
| ⑤133   | 801316   | 1    | Float-Carburetor (Used Before Code Date 06060700)       |       |          |      |                                                        |
| ⑤133A  | 801422   | 1    | Float-Carburetor (Used After Code Date 06060700)        |       |          |      |                                                        |
| ⑤④137A | 693981   | 1    | Gasket-Bowl, Float (Used After Code Date 06060600)      |       |          |      |                                                        |
| ⑤141   | 801418   | 1    | Choke Shaft Kit (Used After Code Date 06060600)         |       |          |      |                                                        |
| ⑤142   | 801313   | 1    | Nozzle-Carburetor (Used Before Code Date 06060700)      |       |          |      |                                                        |
| ⑤142A  | 801424   | 1    | Nozzle-Carburetor (Used After Code Date 06060600)       |       |          |      |                                                        |
| ⑤147   | 801308   | 1    | Jet-Pilot (Used Before Code Date 06060700)              |       |          |      |                                                        |
| ⑤⑤163  | 801227   | 1    | Gasket-Cleaner, Air (Used Before Code Date 06060700)    |       |          |      |                                                        |
| ⑤④163A | 801397   | 1    | Gasket-Cleaner, Air (Used After Code Date 06060600)     |       |          |      |                                                        |
| ⑤200   | 801289   | 1    | Blade-Governor                                          |       |          |      |                                                        |
| ⑤201   | 801225   | 1    | Link-Vane, Air                                          |       |          |      |                                                        |
| ⑤209   | 801223   | 1    | Spring-Governor                                         |       |          |      |                                                        |
| ⑤④276  | 692255   | 1    | Washer-Sealing (Used After Code Date 06060600)          |       |          |      |                                                        |
| ⑤300   | 801250   | 1    | Muffler                                                 |       |          |      |                                                        |

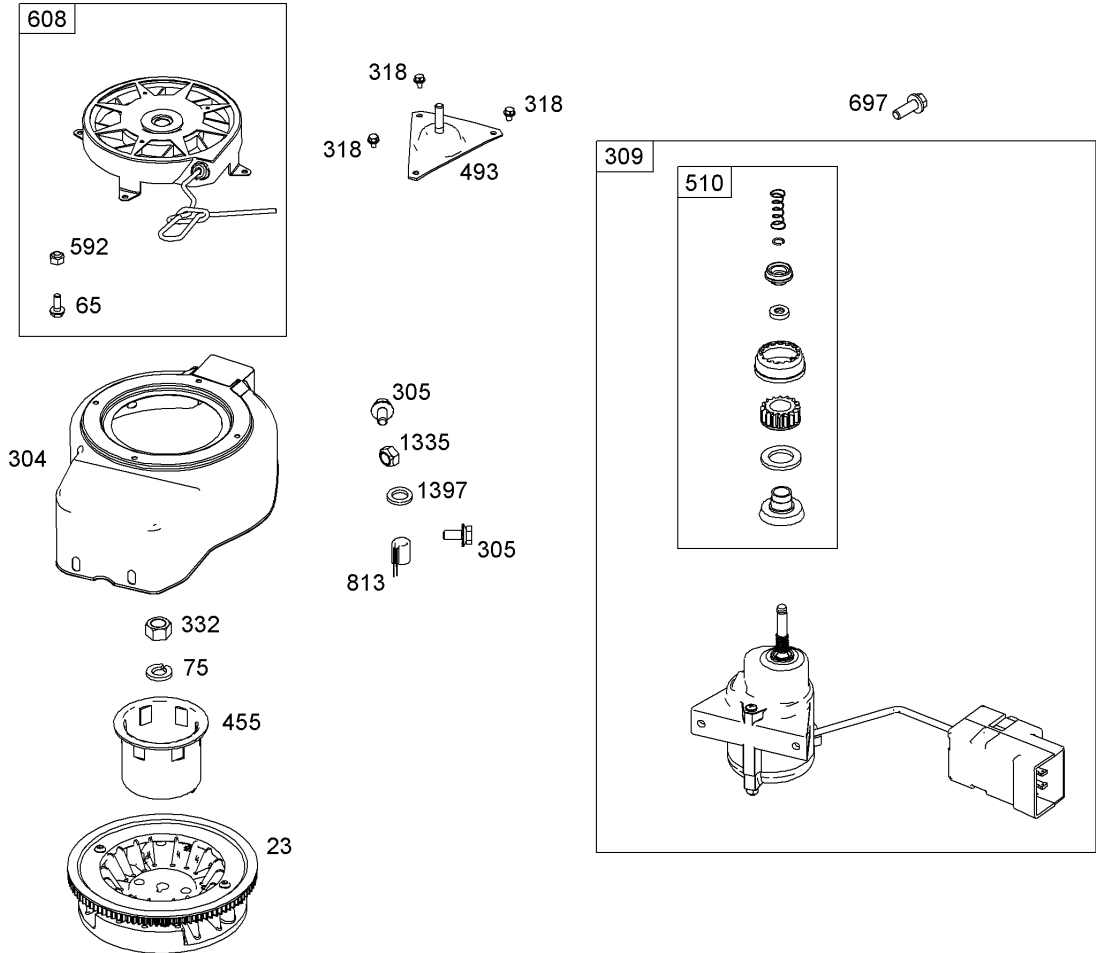

# Flywheel, Blower Housing and Starter Assembly

## Briggs and Stratton 084133-0196-E8

| Ref   | Part No. | Qty. | Description              |  |  |  |  |
|-------|----------|------|--------------------------|--|--|--|--|
| ❶23   | 801246   | 1    | Flywheel                 |  |  |  |  |
| ❷65   | 801243   | 1    | Screw (Rewind Starter)   |  |  |  |  |
| ❸75   | 801237   | 1    | Washer (Flywheel)        |  |  |  |  |
| ❹304  | 801236   | 1    | Housing-Blower           |  |  |  |  |
| ❺305  | 801239   | 1    | Screw (Blower Housing)   |  |  |  |  |
| ❻309  | 801247   | 1    | Motor-Starter            |  |  |  |  |
| ❼318  | 801241   | 1    | Screw (Mounting Bracket) |  |  |  |  |
| ❽332  | 801238   | 1    | Nut (Flywheel)           |  |  |  |  |
| ❾455  | 801235   | 1    | Cup-Flywheel             |  |  |  |  |
| ❿493  | 801240   | 1    | Bracket-Mounting         |  |  |  |  |
| ⓫510  | 801293   | 1    | Drive-Starter            |  |  |  |  |
| ⓬592  | 801244   | 1    | Nut (Rewind Starter)     |  |  |  |  |
| ⓭608  | 801242   | 1    | Starter-Rewind           |  |  |  |  |
| ⓮697  | 801248   | 1    | Screw (Starter Motor)    |  |  |  |  |
| ⓯813  | 801249   | 1    | Clamp                    |  |  |  |  |
| ⓰1335 | 801269   | 1    | Nut (Blower Housing)     |  |  |  |  |
| ⓱1397 | 801270   | 1    | Washer (Blower Housing)  |  |  |  |  |

**Attachments and Accessories**

**For 38516 - CCR 2450 GTS Snowthrower**

| Product Name                       | Model/Part |
|------------------------------------|------------|
| Lower Shroud Replacement Kit ..... | 108-7338   |
| Snow Cab .....                     | 88-0600    |

