



CCR[™] 3650 GTS[®] Snowthrower

Model No. 38517 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Rotor Housing and Scraper Assembly	 3	Handle Assembly	 10
Impeller Drive Assembly	 4	Cylinder, Piston, and Connecting Rod	
Chute Assembly	 5	Assemblies Briggs and Stratton 084232-0121- E1	 11
Rotor Assembly	 6	Muffler, Carburetor, and Intake Manifold	
Engine, Gas Tank and Frame Assembly	 7	Assemblies Briggs and Stratton 084232-0121- E1	 12
Shroud and Control Panel Assembly	 8	Flywheel, Blower Housing and Starter	
Upper Shroud Assembly No. 110-2188	 9	Assemblies Briggs and Stratton 084232-0121- E1	 13
		Attachments and Accessories List	 14


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- ❶ Not serviced separately
- ❷ Obtain from your local Briggs & Stratton dealer

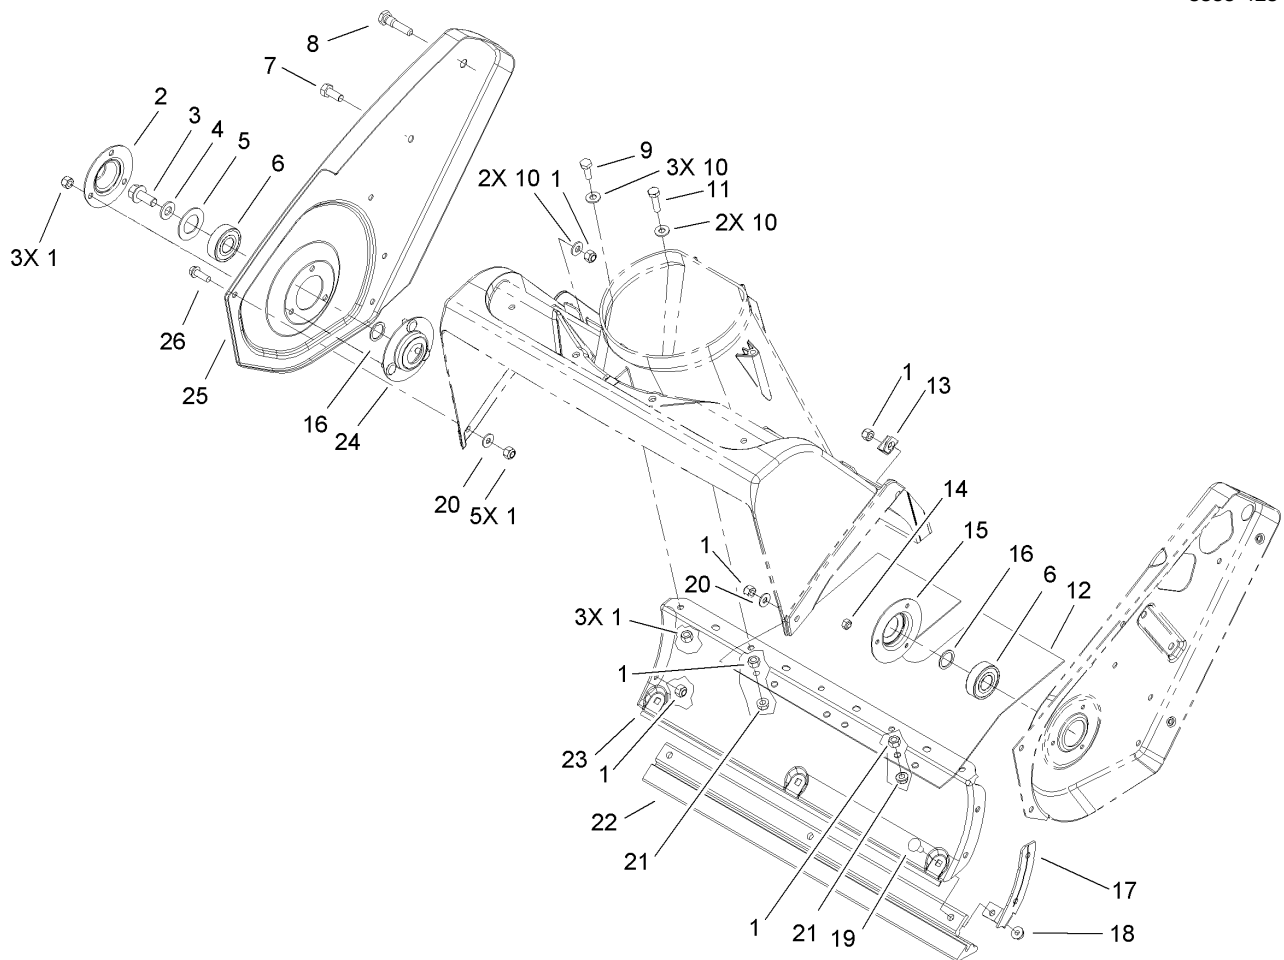

Rotor Housing and Scraper Assembly

Ref	Part No.	Qty.	Description
1	3296-42	17	Nut-Lock, NI
2	52-7290-03	1	Retainer-Bearing
3	3234-25	1	Screw-HHF
4	3256-24	1	Washer-Flat
5	52-7270	1	Washer-Rubber
6	100-1048	2	Bearing-Ball
7	322-43	1	Screw-HH
8	38-8211	1	Pin-Rotor
9	321-4	3	Screw-HH
10	3256-22	7	Washer-Flat
11	321-6	2	Screw-HH
12	55-9512	1	Cover-Bottom
13	55-9430	1	Bracket-Housing
14	3296-2	3	Nut-Lock
15	38-8620	1	Flange-Bearing
16	52-7280	2	Washer-Thrust
17	56-2610	1	Bracket-Housing, Lower
18	32149-2	3	Nut-Keps
19	3229-11	3	Screw-CARR
20	3256-1	2	Washer-Flat
21	32128-10	2	Nut-Lock, HHF
22	55-8760	1	Scraper
23	105-1967-03	1	Housing-Lower
24	52-9110	1	Flange-Bearing


Ref	Part No.	Qty.	Description
25	105-1952-03	1	Sideplate-Right
26	32105-15	5	Screw

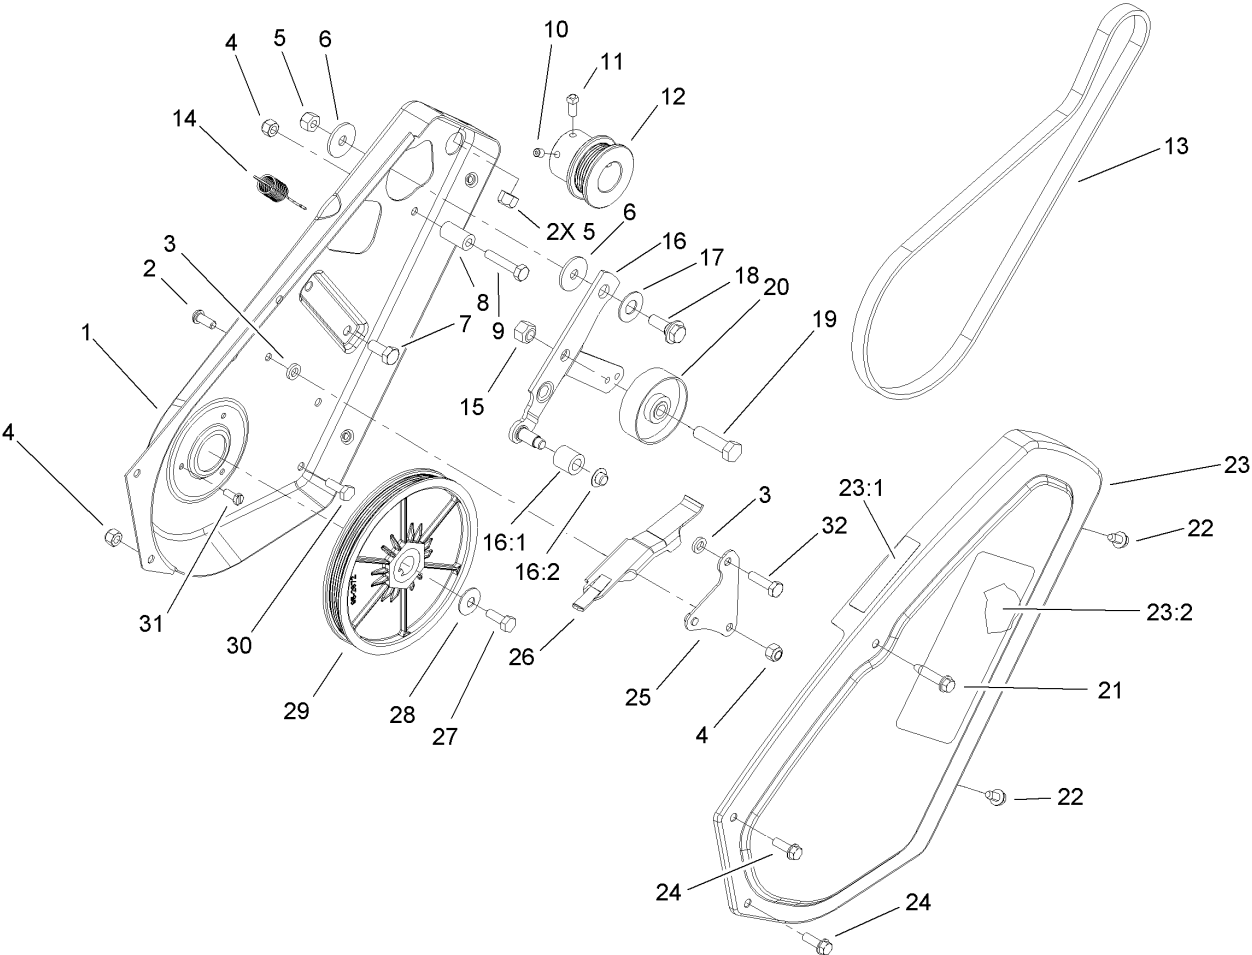

Impeller Drive Assembly

Ref	Part No.	Qty.	Description
1	55-8851-03	1	Plate-Side, LH
2	3274-31	1	Screw-HSBH
3	55-9620	2	Spacer-Plate, Pivot
4	3296-42	3	Nut-Lock, NI
5	3296-29	3	Nut-Lock, NI
6	5-4460	2	Washer-Pivot
7	322-3	2	Screw-HH
8	55-9530	1	Sleeve-Guide, Belt
9	321-13	1	Screw-HH
10	3245-32	1	Screw-HSH
11	3241-7	1	Screw-SQH
12	95-2673	1	Pulley-Engine
13	95-6151	1	Belt-Drive
14	55-9280	1	Spring-Extension
15	32152-2	1	Nut-Lock, Cone
16	105-3542	1	Idler Arm ASM
16:1	55-9520	1	Roller-Brake
16:2	32112-11	1	Nut-Push
17	25-5641	1	Washer
18	27-0410	1	Screw-Shoulder
19	323-29	1	Screw-HH
20	55-9290	1	Pulley-Idler
21	32144-110	1	Screw-HWH
22	12-3270	2	Screw


Ref	Part No.	Qty.	Description
23	105-1997	1	Cover-Drive
23:1	104-2767	1	Decal-Warning
23:2	60-9480	1	Decal
24	32105-15	2	Screw
25	55-9570	1	Pivot Plate ASM
26	55-9550	1	Brake-Arm
27	321-30	1	Screw-HH
28	3290-456	1	Washer-Belleville
29	95-2672	1	Pulley Rotor ASM
30	321-4	2	Screw-HH
31	32105-8	3	Screw-SHH
32	321-6	1	Screw-HH

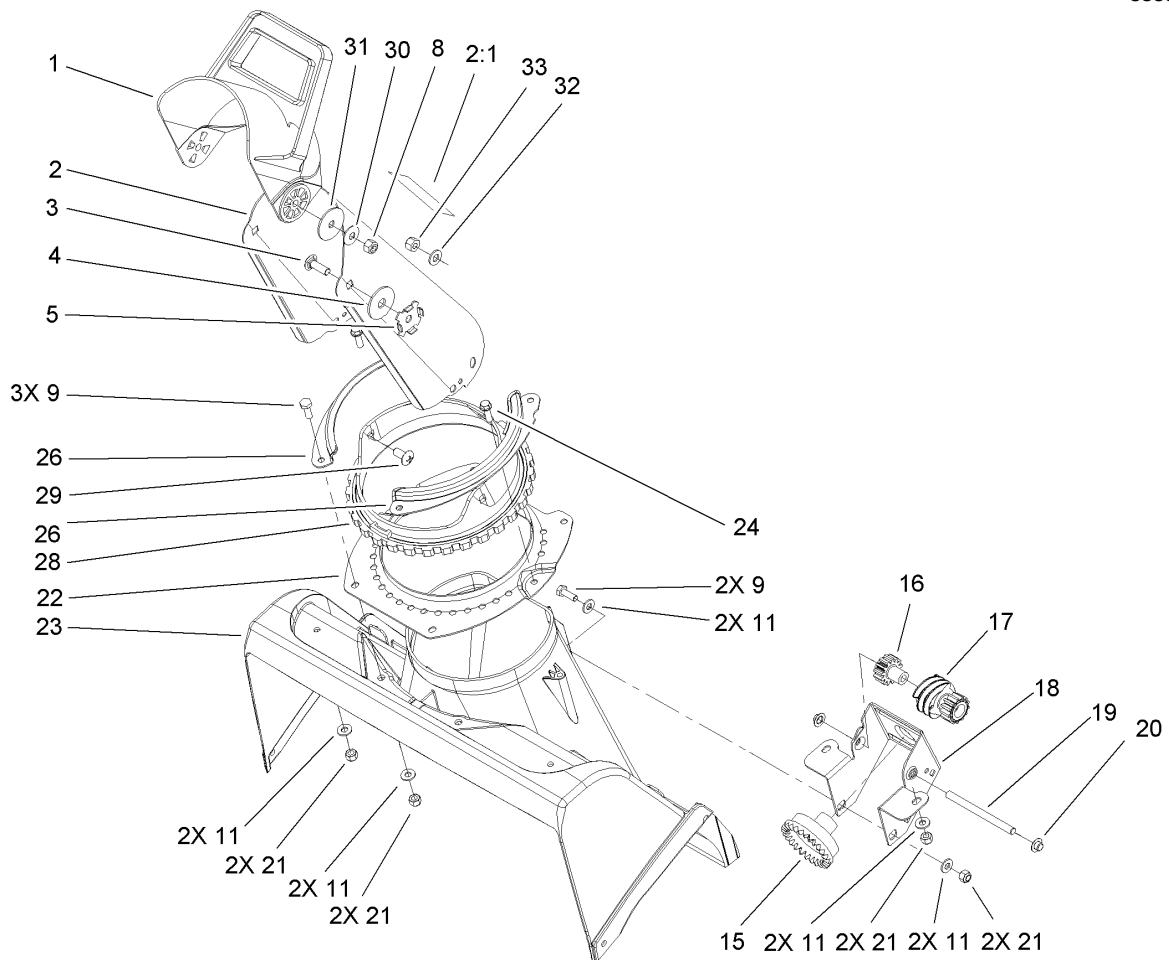

Chute Assembly


Ref	Part No.	Qty.	Description
1	56-2680	1	Chute-Deflector
2	104-4115	1	Chute ASM
2:1	104-4135	1	Decal-Danger
3	3230-22	2	Screw-CARR
4	20-4320	2	Washer-Rubber
5	55-8950	2	Plate-Friction
8	3296-29	2	Nut-Lock, NI
9	321-4	5	Screw-HH
11	3256-22	10	Washer-Flat
15	55-8740	1	Gear-Face
16	55-8750	1	Gear-Spur, Spacer
17	105-3512	1	Gear-Spur/Worm
18	105-3513	1	Bracket-Gear, Chute
19	55-9150	1	Shaft-Gear, Worm
20	32112-11	2	Nut-Push
21	3296-42	8	Nut-Lock, NI
22	55-8921-03	1	Ring-Support, Chute
23	105-1950	1	Housing-Rotor, Upper
24	46-8091	2	Screw-HWH
26	55-8910-03	2	Ring-Retainer, Chute
28	55-8720	1	Ring-Gear, Chute
29	100-5486	3	Screw-Truss HD, Phillips
30	3290-456	2	Washer-Belleville
31	3256-68	2	Washer-Flat

Ref	Part No.	Qty.	Description
32	3256-70	3	Washer-Flat
33	3296-47	3	Nut-Lock, NI

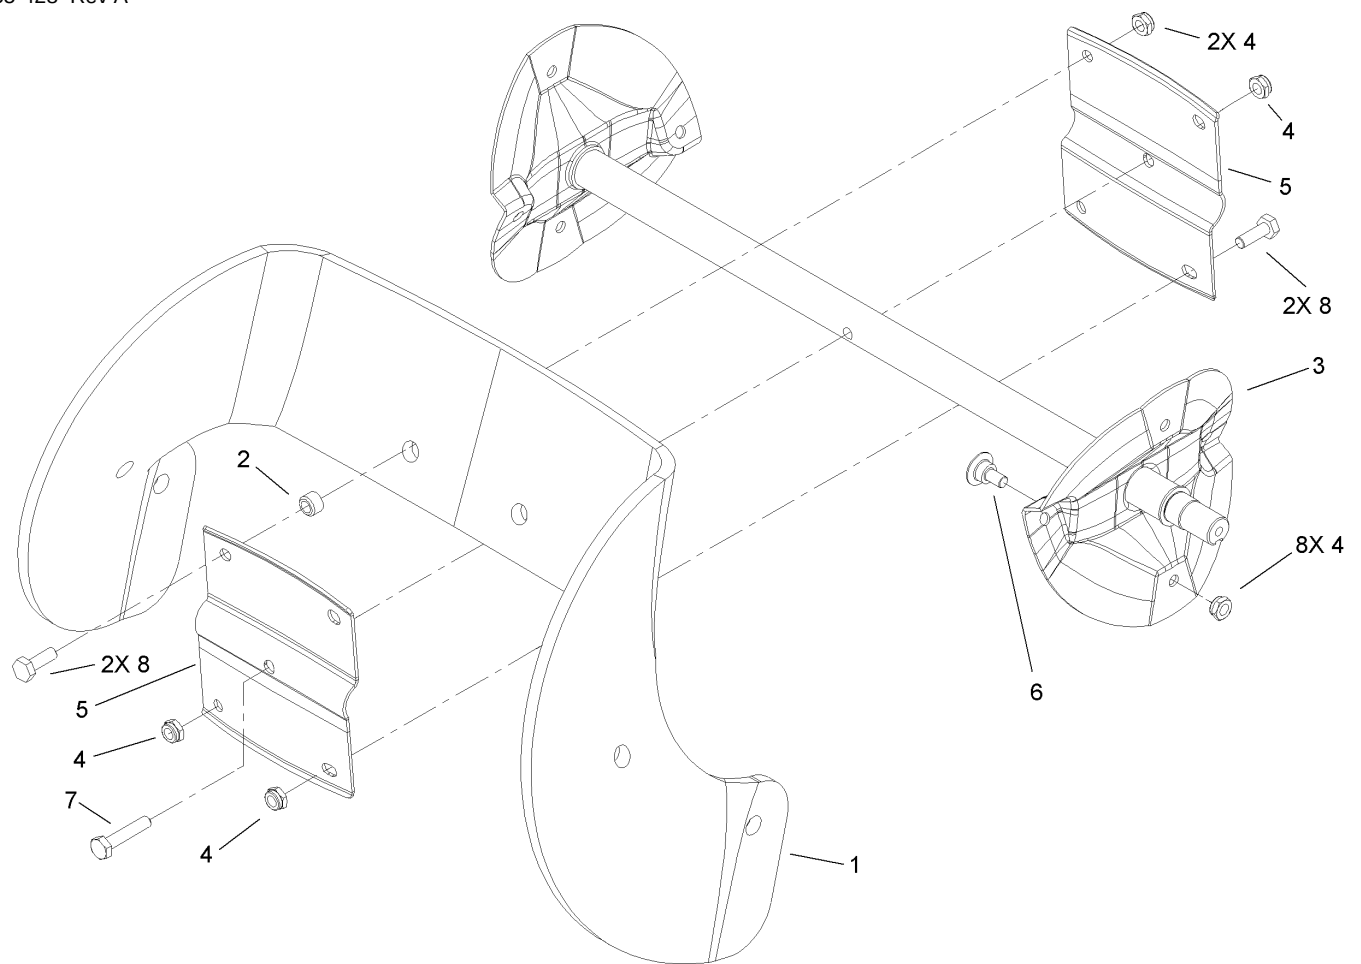


Rotor Assembly

Ref	Part No.	Qty.	Description				
1	99-9313	2	Blade-Rotor				
2	55-9370	4	Spacer-Blade, Rotor				
3	100-5478-03	1	Rotor ASM				
4	3296-56	13	Nut-Lock, NI				
5	66-6600-03	2	Half-Rotor				
6	84-1971	8	Screw				
7	321-8	1	Screw-HH				
8	321-4	4	Screw-HH				

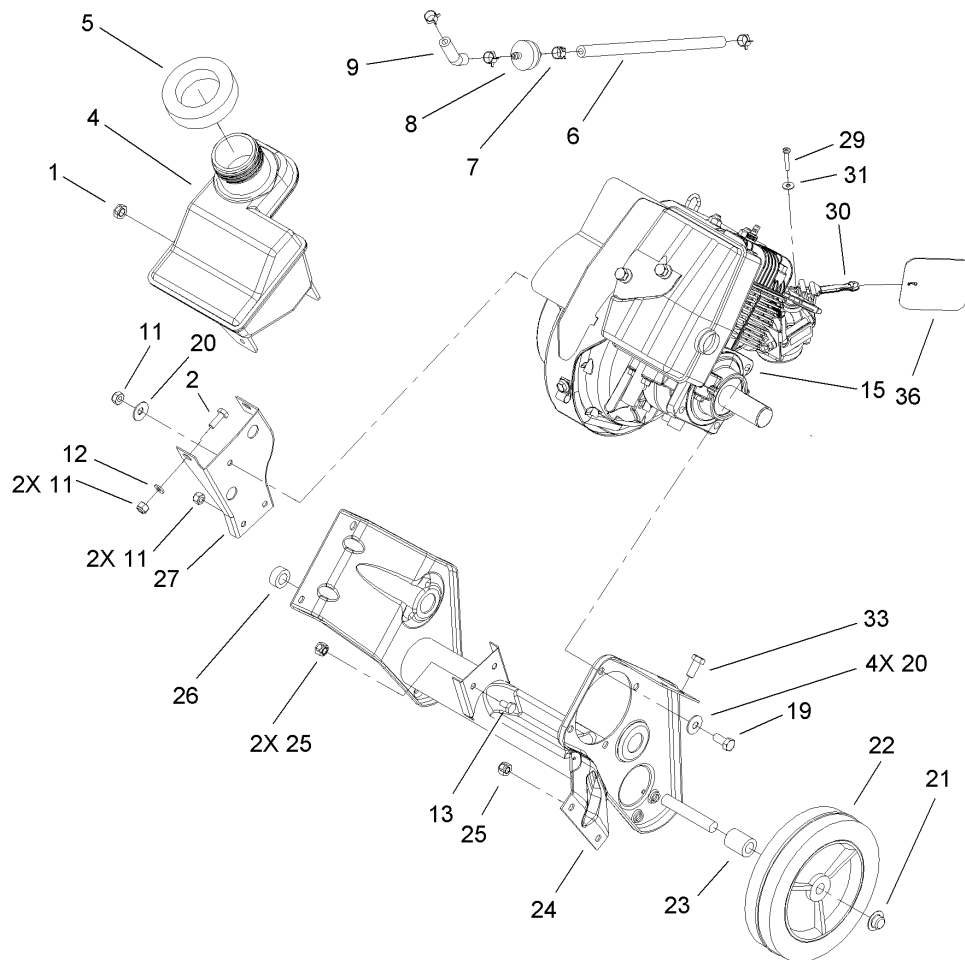


Engine, Gas Tank and Frame Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	32152-8	1	Nut-Lock, Cone	31	3256-14	1	Washer-Flat
2	321-4	2	Screw-HH	33	322-43	2	Screw-HH
4	105-8952	1	Tank-Gas	36	110-3444	1	Shield-Choke Hole
5	55-9310	1	Seal-Foam				
6	110-4894	1	Hose-Fuel				
7	2412-98	4	Clamp				
8	56-6360	1	Filter-Fuel				
9	109-0304	1	Hose-Fuel				
11	3296-42	5	Nut-Lock, NI				
12	3256-22	2	Washer-Flat				
13	321-2	2	Screw-HH				
15		1	Engine -Briggs And Stratton, 084232-0121-E1				
19	322-3	4	Screw-HH				
20	3290-456	5	Washer-Belleville				
21	32112-14	2	Nut-Push				
22	66-6510	2	Wheel				
23	66-6501	1	Spacer-Wheel				
24	105-1965-03	1	Frame				
25	3296-29	3	Nut-Lock, NI				
26	66-6500	1	Spacer-Wheel				
27	105-1968-03	1	Bracket-Support, Recoil				
29	32144-97	1	Screw-PPH, Plastite				
30	104-0878	1	Lever-Choke				

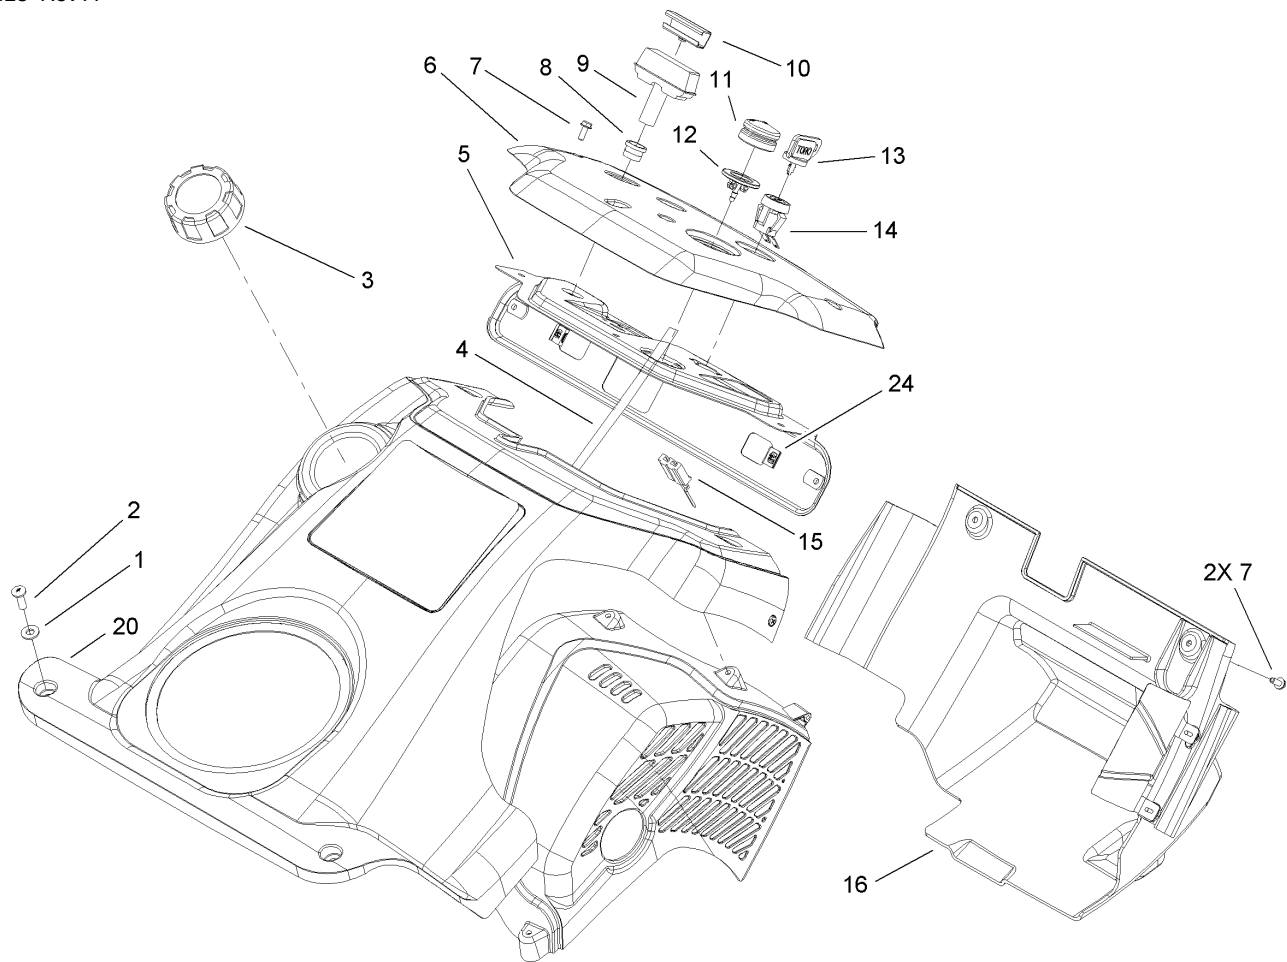


Shroud and Control Panel Assembly

Ref	Part No.	Qty.	Description				
1	3256-22	2	Washer-Flat				
2	3250-32	2	Screw-PPH				
3	104-4133	1	Gas Cap ASM				
4	98-1372	1	Hose-Primer				
5	105-1999-03	1	Panel-Support, Control				
6	105-1955	1	Panel-Control				
7	32144-112	5	Screw-HWH				
8	55-9410	1	Guide-Rope, Starter				
9	612825	1	Handle-Start				
10	612824	1	Clip-Starter				
11	66-7460	1	Bulb-Primer				
12	44-2750	1	Body-Primer				
13	63-8360	1	Key-Ignition				
14	40-5940	1	Switch				
15	218-532	1	Connector-Body				
16	108-7335	1	Lower Shroud/Baffle ASM				
20	110-2188	1	Upper Shroud ASM				
24	100-9889	2	Nut-Speed				

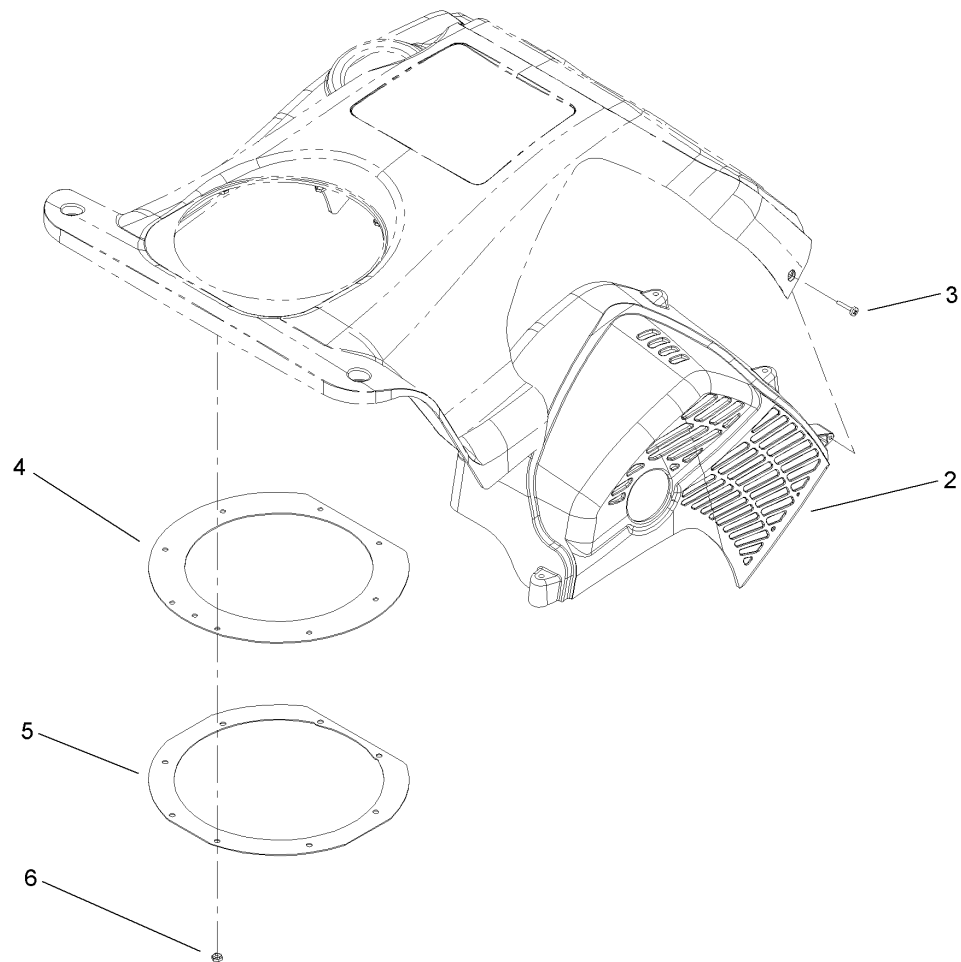

Upper Shroud Assembly No. 110-2188


Ref	Part No.	Qty.	Description				
2	108-7333	1	Shield-Heat				
3	94-4496	5	Screw-PPH				
4	105-3543	1	Seal-Chute				
5	55-9540-03	1	Retainer-Seal, Chute				
6	3290-474	8	Palnut				

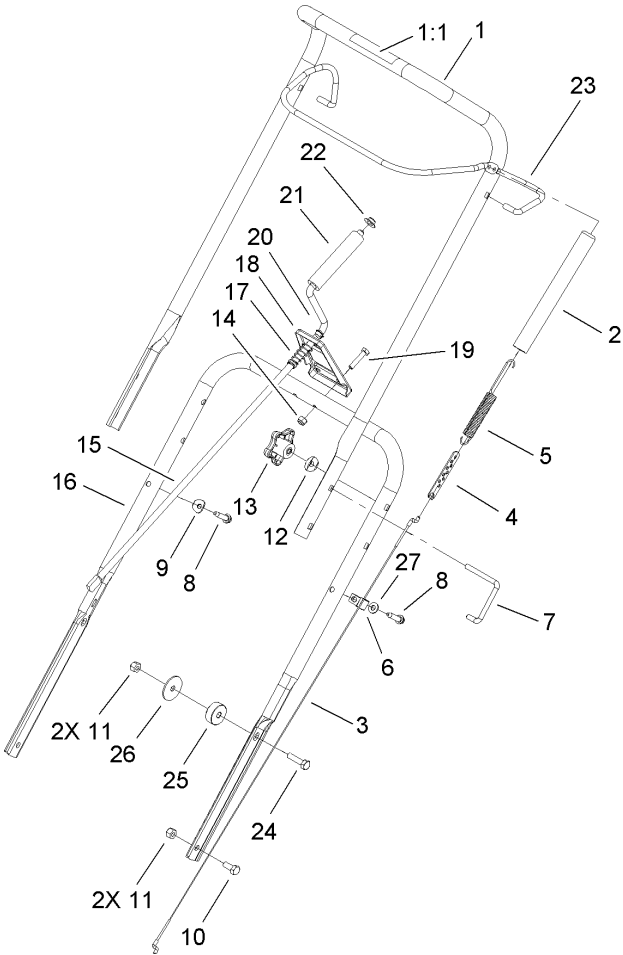

Handle Assembly


Ref	Part No.	Qty.	Description
1	95-2669	1	Handle-Upper W/Decal ASM
1:1	104-2775	1	Decal-Drive, Rotor
2	71-5530	1	Cover-Spring
3	110-2182	1	Cable-Clutch
4	71-5330	1	Adjuster-Cable, Clutch
5	110-2181	1	Spring-Extension
6	2412-91	1	Clamp
7	98-2266	2	Lock-Handle
8	32144-110	2	Screw-HWH
9	3-7501	1	Washer
10	322-3	2	Screw-HH
11	3296-29	4	Nut-Lock, NI
12	107-3844	2	Washer
13	106-4161	2	Knob-Handle
14	3296-42	2	Nut-Lock, NI
15	55-9140	1	Rod-Crank, Chute
16	55-9121-03	1	Handle-Lower
17	104-8664	1	Spring-Compression
18	55-9090-03	1	Support-Crank, Chute
19	321-8	2	Screw-HH
20	256-249	1	Bushing
21	40-8230	1	Grip-Chute Control
22	3290-320	1	Retainer-Push On
23	100-5473-03	1	Bail-Control

Ref	Part No.	Qty.	Description
24	322-6	2	Screw-HH
25	105-1961	2	Spacer
26	3256-68	2	Washer-Flat
27	3256-22	1	Washer-Flat

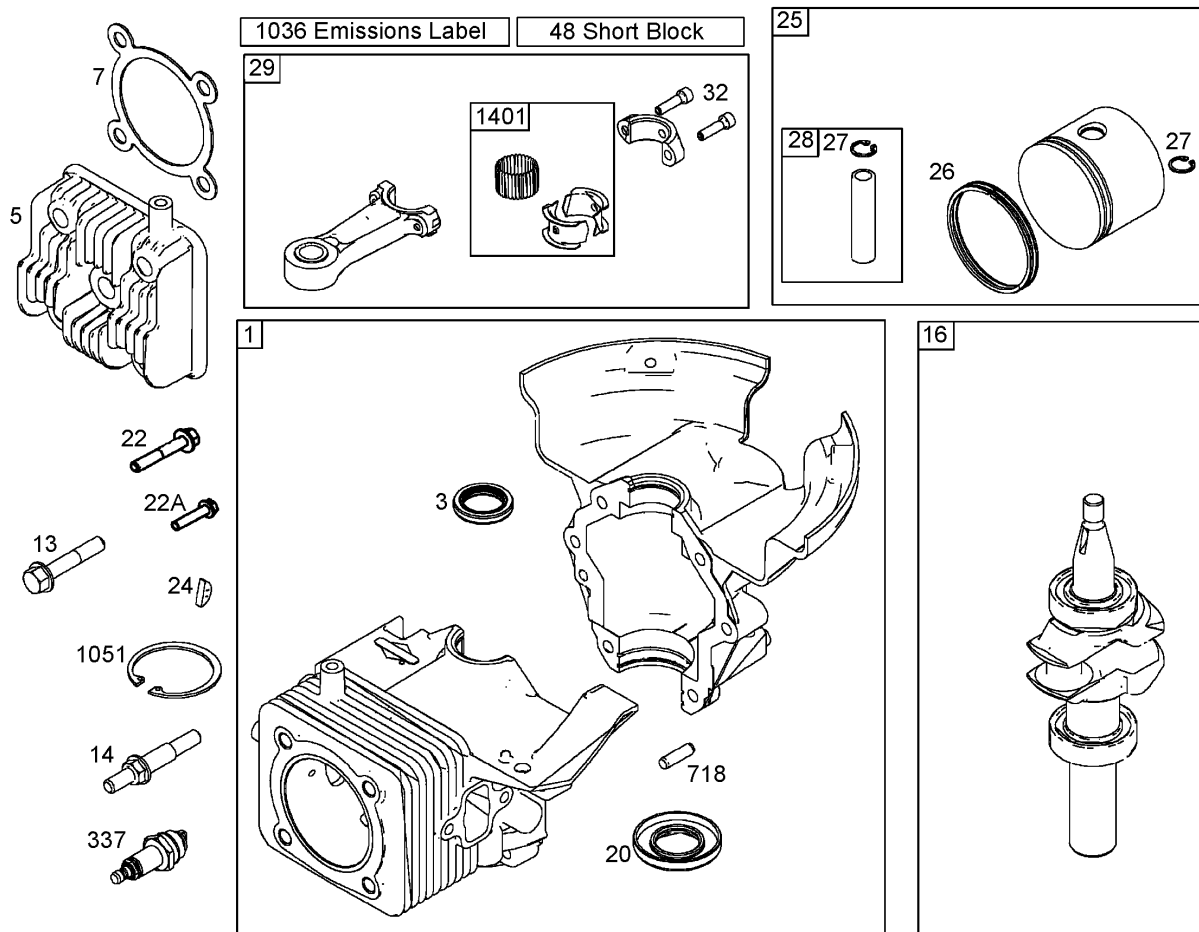

Cylinder, Piston, and Connecting Rod Assemblies Briggs and Stratton 084232-0121-E1


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
②1	801260	1	Cylinder ASM	②1401	801290	1	Roller-Strip
②3	801262	1	Seal-Oil				
②5	801283	1	Head-Cylinder				
②7	801263	1	Gasket-Head, Cylinder				
②13	801264	1	Screw (Cylinder Head)				
②14	801265	1	Stud (Cylinder Head)				
②16	801220	1	Crankshaft				
②20	801261	1	Seal-Oil				
②22	801266	1	Screw (Crankcase Cover And Sump)				
②22A	801271	1	Screw (Crankcase Cover And Sump)				
②24	801234	1	Key-Flywheel				
②25	801279	1	Piston ASM				
②26	801280	1	Ring Set				
②27	801275	1	Lock-Pin, Piston				
②28	801276	1	Pin-Piston				
②29	801277	1	Rod-Connecting				
②32	801278	1	Screw				
②48	801284	1	Short Block				
②337	801254	1	Plug-Spark				
②718	690959	1	Pin-Locating				
②1036	801294	1	Label-Emissions				
②1051	801274	1	Ring-Retaining				

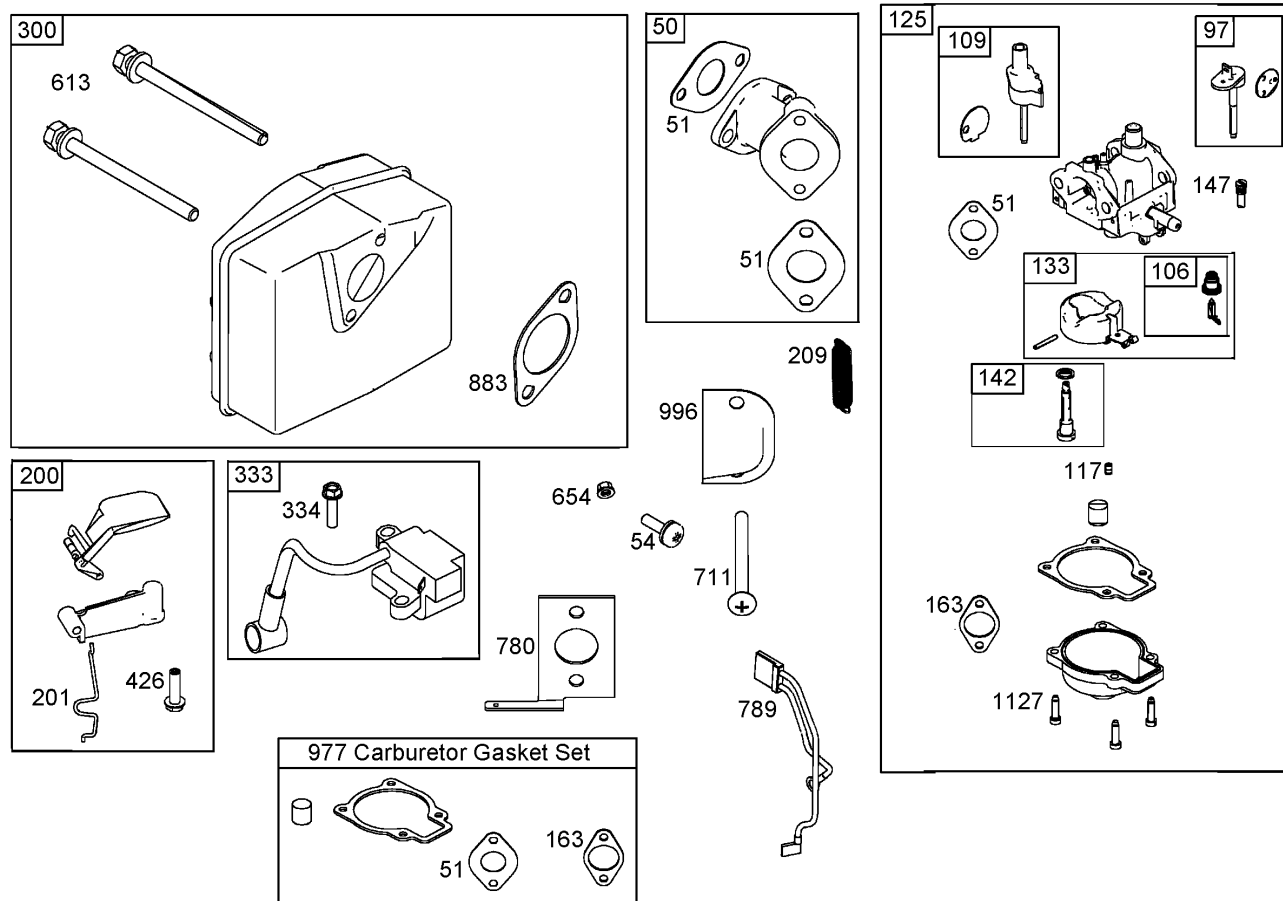

Muffler, Carburetor, and Intake Manifold Assemblies Briggs and Stratton 084232-0121-E1

Ref	Part No.	Qty.	Description
250	801232	1	Manifold-Intake
251	801224	1	Gasket-Intake
254	801230	1	Screw (Intake Manifold)
297	801306	1	Shaft-Throttle
2106	801317	1	Seat-Inlet
2109	801307	1	Shaft-Choke
2117	801310	1	Jet-Main
2125	801233	1	Carburetor
2133	801316	1	Float-Carburetor
2142	801313	1	Nozzle-Carburetor
2147	801308	1	Jet-Pilot
2163	801227	1	Gasket-Cleaner, Air
2200	801289	1	Blade-Governor
2201	801225	1	Link-Vane, Air
2209	801223	1	Spring-Governor
2300	801250	1	Muffler
2333	801268	1	Armature-Magneto
2334	801267	1	Screw
2426	801231	1	Screw
2613	801251	1	Screw
2654	801324	1	Nut (Intake Manifold) (Used Before Engine Code Date 05042600)
2711	801229	1	Screw

Ref	Part No.	Qty.	Description
2780	801228	1	Anchor-Spring
2789	801253	1	Wire ASM
2883	801252	1	Gasket-Exhaust
2977	801312	1	Gasket Set-Carburetor
2996	801226	1	Shield-Carburetor
21127	801318	1	Screw

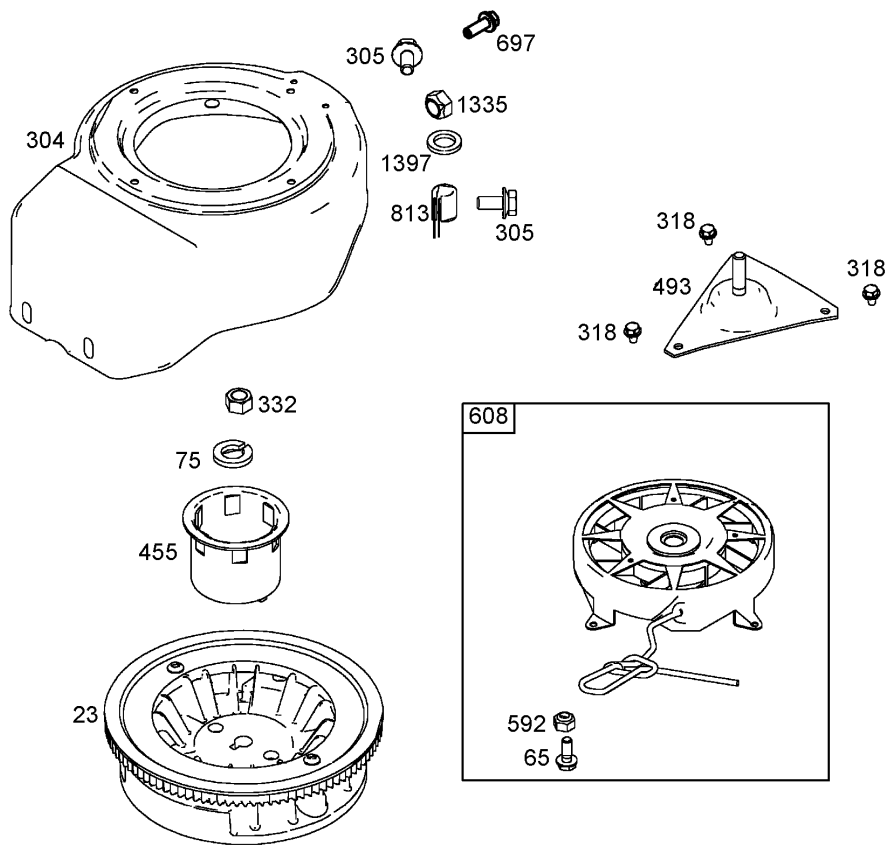

Flywheel, Blower Housing and Starter Assemblies
Briggs and Stratton 084232-0121-E1

Ref	Part No.	Qty.	Description				
23	801246	1	Flywheel				
65	801243	1	Screw				
75	801237	1	Washer				
304	801257	1	Housing-Blower				
305	801239	1	Screw (Blower Housing)				
318	801241	1	Screw				
332	801238	1	Nut				
455	801235	1	Cup-Flywheel				
493	801240	1	Bracket-Mounting				
592	801244	1	Nut				
608	801242	1	Starter-Rewind				
697	801248	1	Screw (Strater Motor)				
813	801249	1	Clamp				
1335	801269	1	Nut (Blower Housing)				
1397	801270	1	Washer				

Attachments and Accessories

For 38517 - CCR 3650 GTS Snowthrower

Product Name	Model/Part
Lower Shroud Replacement Kit	108-7338
Snow Cab	88-0600

NOTES

