 




MODEL NO. 07073-10001 Thru
20001 & UP (ENGINE)
MODEL NO. 07174-10001 Thru
20001 & UP (P.T.O.)

PARTS CATALOG

66" RAKE-O-VAC® SWEEPER

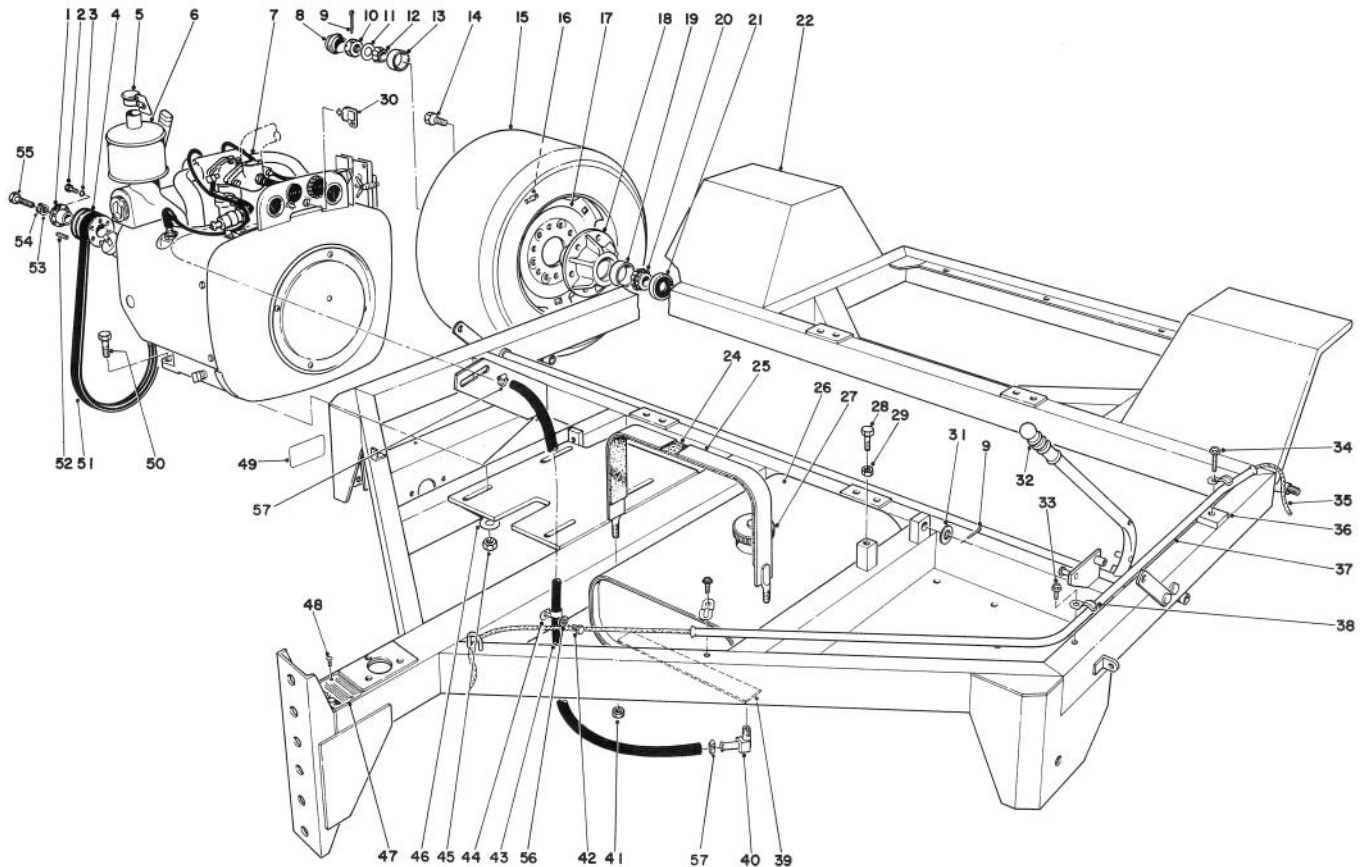


T-0006

ENGINE AND FRAME ASSEMBLY (Model No. 07073)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	13-3330	Bushing (Incl. Ref. #2 & 3)	1	17	62-3220	Wheel Assembly	2
2	321-6	Screw - Cap, Hex. Hd.	3	18	242-54	Hub (Incl. Ref. #13 & 19)	2
3	3253-3	Washer - Lock	3	19	254-66	Cup - Bearing	2
4	13-3320	Pulley	1	20	254-65	Cone - Bearing	2
5	13-6710	Cap - Weather, Muffler	1	21	253-127	Seal	2
6	13-6720	Muffler	1	22	13-5000	Main Frame	1
7	67-9420	Engine	1	24	13-3970	Felt Strip	2
8	242-55	Cap - Hub	2	25	13-3960	Strap Assy. (Incl. Ref. #24)	2
9	3272-17	Pin - Cotter	3	26	13-3930	Tank - Gas	1
10	32136-1	Nut - Slotted	2	27	222-8	Cap - Gas	1
11	3256-29	Washer - Flat	2	28	323-8	Screw - Cap, Hex. Hd.	1
12	254-62	Cone - Bearing	2	29	3218-3	Nut - Jam	1
13	254-61	Cup - Bearing	2	30	63-8360	Key	2
14	217-103	Bolt - Wheel	12	31	3256-28	Washer - Flat	1
15	231-118	Tire	2	32	235-15	Grip - Handle	1
16	232-24	Stem - Valve	2				

 TPS

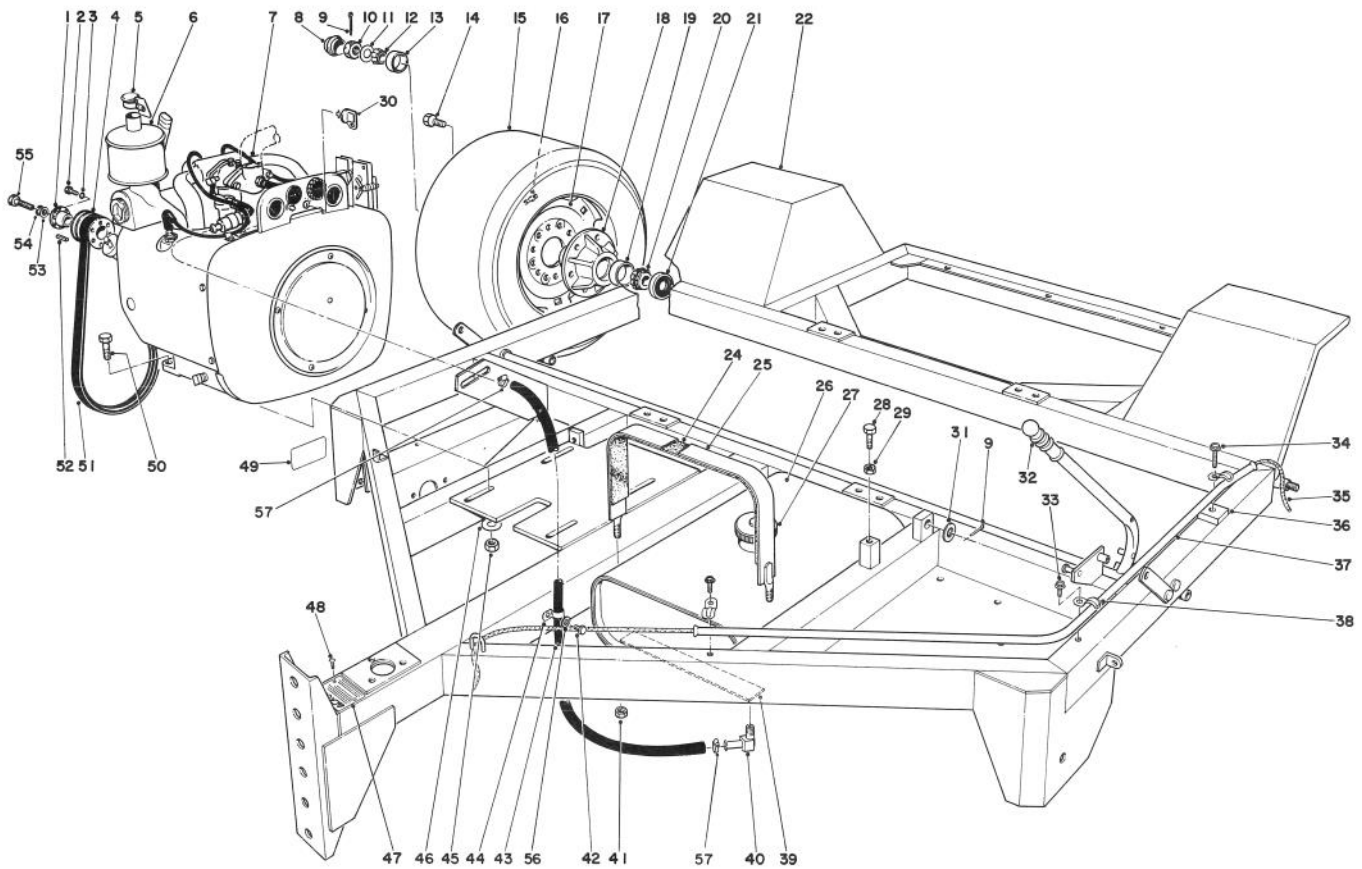


T-0006

ENGINE AND FRAME ASSEMBLY (Model No. 07073) (Continued)

Ref. No.	Part No.	Description	No. Used
33	32104-95	Screw - Self Tapping	2
34	32104-96	Screw - Self Tapping	1
35	20-9580	Rope	1
36	13-6910	Spacer - Guide , Rope	1
37	13-6890	Guide - Rope	1
38	2412-40	Clamp - Conduit	3
39	13-3970	Strip - Felt	2
40	304-75	Fitting - Tube	1
41	32153-3	Nut - Lock	4
42	32104-109	Screw	1
43	63-7721	Hose - Fuel Line	1
44	2412-93	Clamp	1
45	3296-23	Nut - Lock	4

Ref. No.	Part No.	Description	No. Used
46	3256-26	Washer - Flat	4
47	13-7460	Plate - Plate	1
48	3290-55	Rivet - Pop	4
49	67-5360	Decal	1
50	325-7	Screw - Cap, Hex. Hd.	4
51	13-2650	V-Belt	1
52	3-9155	Key - Square	1
53	4-1920	Washer	1
54	3253-21	Washer - Lock	1
55	323-10	Screw - Cap, Hex. Hd.	1
56	3256-22	Washer - Flat	1
57	2412-108	Clamp - Hose	2

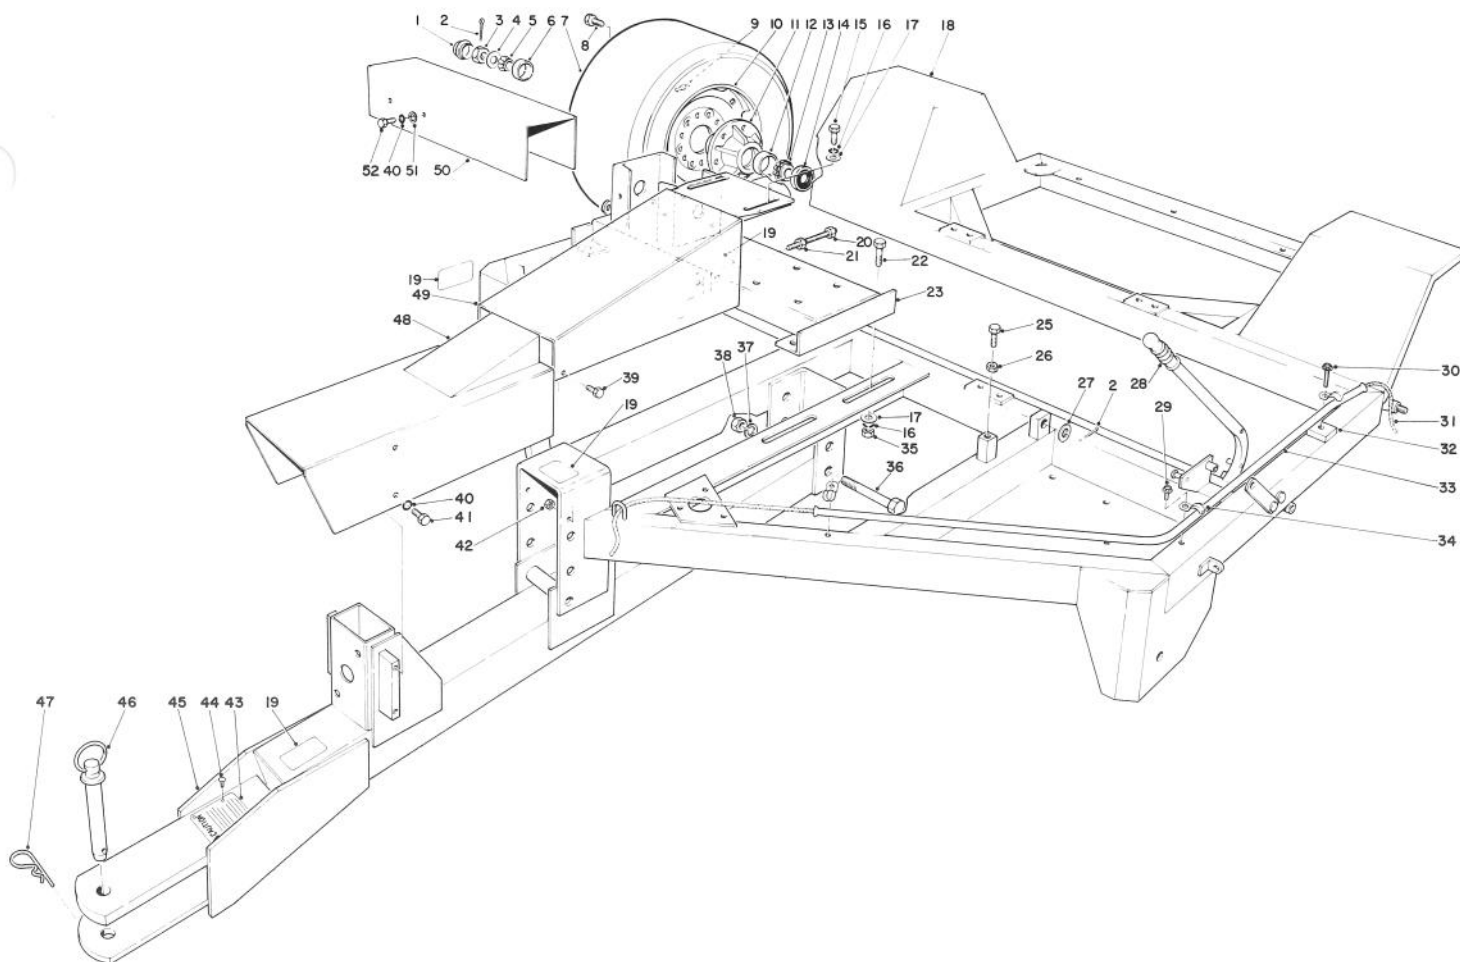 


T-0009

FRAME ASSEMBLY (Model No. 07174)

Ref. No.	Part No.	Description	No. Used
1	242-55	Cap - Hub	2
2	3272-17	Pin - Cotter	3
3	32136-1	Nut - Slotted	2
4	3256-29	Washer - Flat	2
5	254-62	Cone - Bearing	2
6	254-61	Cup - Bearing	2
7	231-118	Tire	2
8	217-103	Bolt - Wheel	12
9	232-24	Stem - Valve	2
10	62-3220	Wheel Assembly	2
11	242-54	Wheel - Hub (Incl. Ref. #6 & 12)	2
12	254-66	Cup - Bearing	2
13	254-65	Cone - Bearing	2
14	253-127	Seal	2
15	325-3	Screw - Cap, Hex. Hd.	2
16	3253-7	Washer - Lock	6
17	3256-26	Washer - Flat	6
18	13-6120	Frame	1
19	67-5360	Decal - Caution	4
20	13-6240	Rod - Adjustment	1
21	3218-6	Nut - Jam	1
22	325-5	Screw - Cap, Hex. Hd.	4
23	13-6000	Base - Box, Gear	1
25	323-8	Screw - Cap, Hex. Hd.	1
26	3218-3	Nut - Jam	1
27	3256-28	Washer - Flat	1

Ref. No.	Part No.	Description	No. Used
28	235-15	Grip - Handle	1
29	32104-95	Screw - Self-Tapping	2
30	32104-96	Screw - Self-Tapping	1
31	20-9580	Rope	1
32	13-6910	Spacer - Guide, Rope	1
33	13-6890	Guide - Rope	1
34	2412-40	Clamp - Conduit	3
35	3217-9	Nut - Hex	4
36	328-23	Bolt - Hex. Hd.	2
37	3253-9	Washer - Lock	2
38	3217-12	Nut - Hex	2
39	323-2	Screw - Cap, Hex. Hd.	2
40	3253-21	Washer - Lock	6
41	323-2	Screw - Cap, Hex. Hd.	4
42	32153-2	Nut - Lock	2
43	13-7460	Plate - Caution	1
44	3259-15	Screw - Drive	4
45	13-4310	Tongue	1
46	13-6200	Pin - Hitch (Incl. Ref. #47)	1
47	3290-343	Pin - Hair, Cotter	1
48	13-5870	Shield - Front	1
49	13-5880	Shield - Shaft, Drop	1
50	13-5790	Shield - Shaft	1
51	3256-24	Washer - Flat	4
52	325-5	Screw - Cap, Hex. Hd.	4

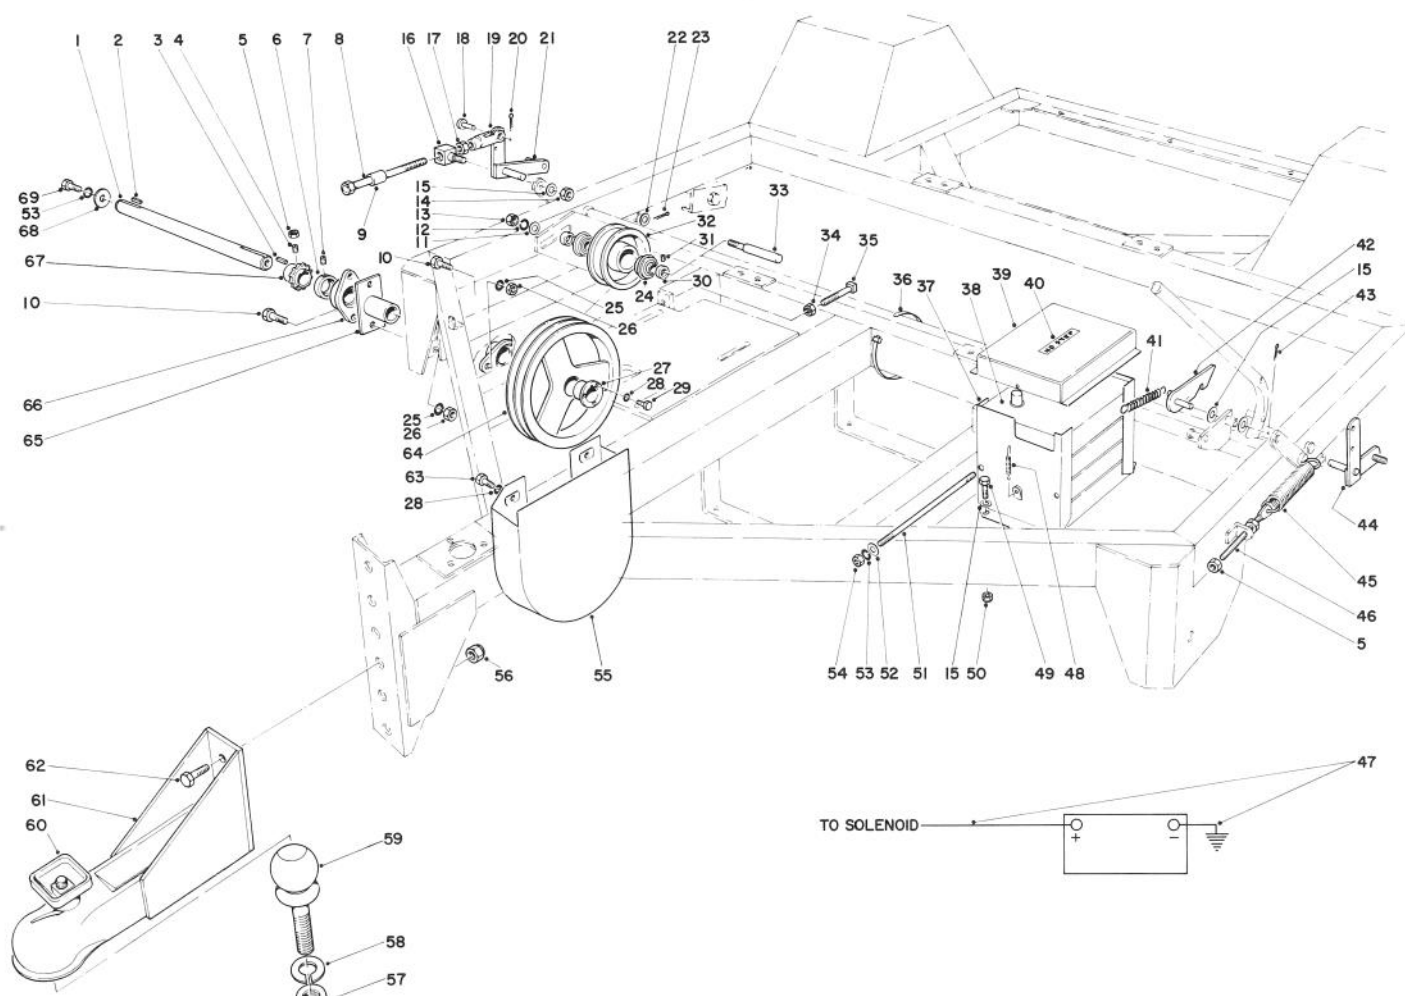 


T-0010

JACKSHAFT AND LIFTING MECHANISM (Model No. 07073)

Ref. No.	Part No.	Description	No. Used
1	13-3740	Shaft - Jack	1
2	13-2840	Key - Square	1
3	13-6330	Key - Square	1
4	3247-3	Screw - Set	2
5	3218-3	Nut - Jam	6
6		Collar - Locking	2
7		Screw - Set	2
8	13-6260	Screw - Adjustment	2
9	13-5520	Spacer	2
10	324-7	Screw - Cap, Hex. Hd.	4
11	3256-26	Washer - Flat	1
12	3253-7	Washer - Lock	1
13	3217-9	Nut - Hex	1
14	32153-2	Nut - Lock	2
15	3256-24	Washer - Flat	7
16	13-0100	Block - Pivot	2
17	3219-3	Nut - Hex	2
18	283-2	Pin - Clevis	2
19	282-22	Clevis	2
20	3272-10	Pin - Cotter	2
21	13-5490	Bell Crank - Lift, R.H.	1
22	3256-28	Washer - Flat	2
23	3272-22	Pin - Cotter	2
24	56-6210	Bearing	
		(Incl. Ref. #30 & 31)	2
25	3253-6	Washer - Lock	4

Ref. No.	Part No.	Description	No. Used
26	3217-8	Nut - Lock	4
27	13-2680	Bushing	
		(Incl. Ref. #28 & 29)	1
28	3253-4	Washer - Lock	5
29	322-7	Screw - Cap, Hex. Hd.	3
30		Collar - Locking	2
31		Screw - Set	2
32	13-0600	Pulley - Idler	
		(Incl. Ref. #24)	1
33	13-0510	Pin - Idler	1
34	3218-5	Nut - Hex.	1
35	3244-21	Screw - Set	1
36	250-5	Strap - Locking	2
37	3-5967	Support - Battery	2
38	55-7290	Battery	1
39	3-3175	Cover - Battery	1
40	61-5950	Decal	1
41	13-0480	Spring	1
42	13-3990	Handle - Trip	1
43	3272-10	Pin - Cotter	1
44	13-5500	Bell Crank - Lift, L.H.	1
45	13-0050	Spring	2
46	13-5530	Rod - Adjustment, Spring	2
47	13-6790	Cable - Battery	2
48	3-8135	Spring	2
49	323-5	Screw - Cap, Hex. Hd.	4

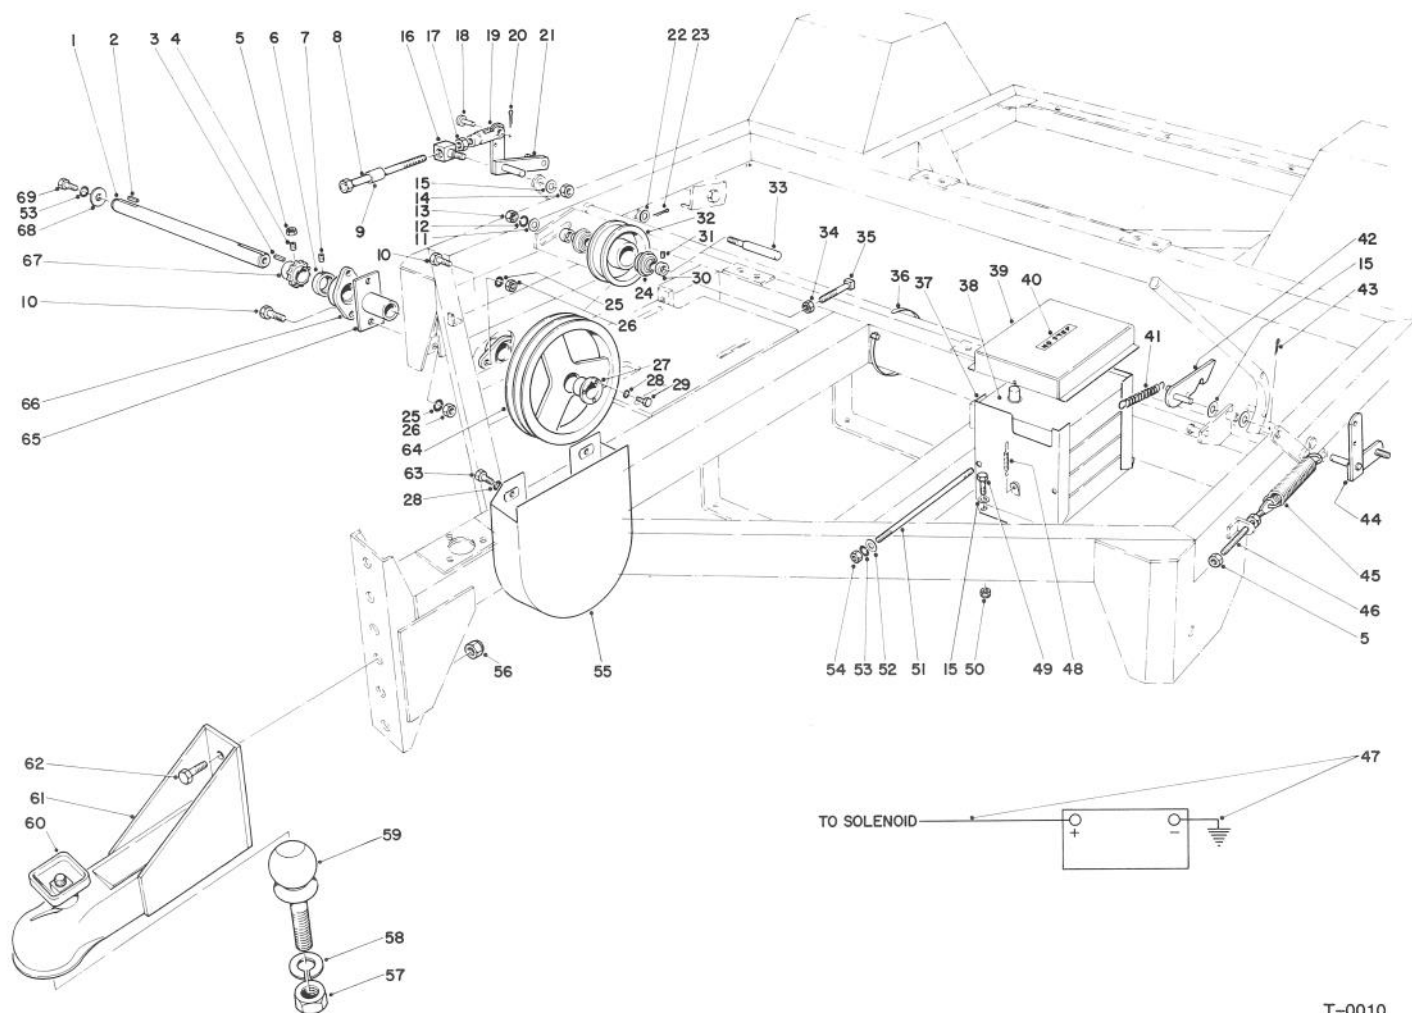 


T-0010

JACKSHAFT AND LIFTING MECHANISM (Model No. 07073) (Continued)

Ref. No.	Part No.	Description	No. Used
50	3296-39	Nut - Lock	4
51	5-0678	Rod - Clamp, Battery	2
52	3256-22	Washer - Flat	4
53	3253-3	Washer - Lock	5
54	3217-5	Nut - Hex.	4
55	13-4490	Guard - Sheave	1
56	3296-53	Nut - Lock	2
57	3217-12	Nut - Hex.	1
58	3253-9	Washer - Lock	1
59	49-4260	Ball	1
†60	13-3080	Kit - Coupler, Ball	1

Ref. No.	Part No.	Description	No. Used
61	13-0060	Yoke - Hitch (Incl. Ref. #57 & 58)	1
62	327-6	Screw - Cap, Hex. Hd.	2
63	322-7	Screw - Cap, Hex. Hd.	2
64	13-2670	Sheave	1
65	63-5210	Spindle - Driveside	1
66	56-6230	Bearing (Incl. Ref. #6 & 7)	2
67	13-4340	Sprocket	1
68	13-3710	Washer	1
69	321-4	Screw - Cap, Hex. Hd.	1

 †Service Replacement Part

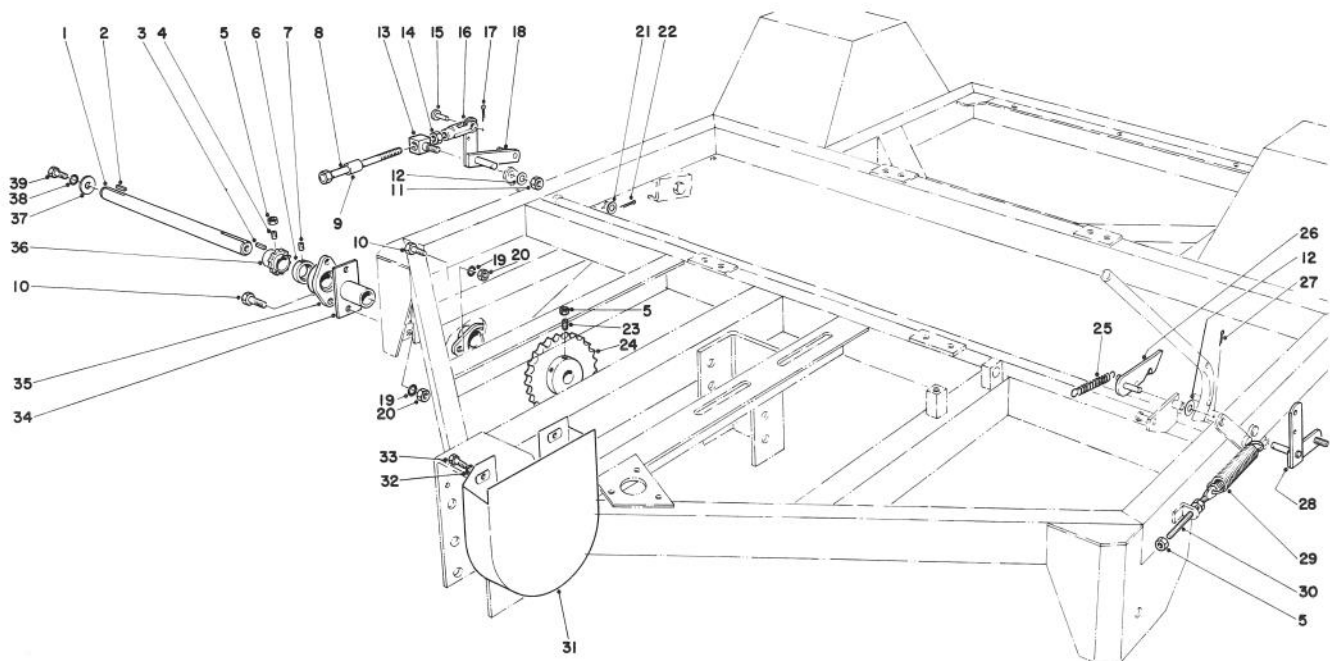


T-0011A

JACKSHAFT AND LIFTING MECHANISM (Model No. 07174)

Ref. No.	Part No.	Description	No. Used
1	13-3740	Shaft - Jack	1
2	13-2840	Key - Square	1
3	5-1718	Key - Square	1
4	3247-3	Screw - Set	2
5	3218-3	Nut - Jam	8
6		Collar - Lock	2
7		Screw - Set	2
8	13-6260	Bolt - Adjustment	2
9	13-5520	Spacer	2
10	324-7	Screw - Cap, Hex. Hd.	4
11	32153-2	Nut	2
12	3256-24	Washer - Flat	2
13	13-0100	Block - Pivot	2
14	3219-3	Nut - Hex.	2
15	283-2	Pin - Clevis	2
16	282-22	Clevis	2
17	3272-10	Pin - Cotter	2
18	13-5490	Bell Crank - Lift, R.H.	1
19	3253-6	Washer - Lock	4
20	3217-8	Nut - Hex.	4

Ref. No.	Part No.	Description	No. Used
21	3256-28	Washer - Flat	2
22	3272-22	Pin - Cotter	2
23	3247-6	Screw - Set	2
24	13-4880	Sprocket	1
25	13-0480	Spring	1
26	13-3990	Handle - Trip	1
27	3272-10	Pin - Cotter	1
28	13-5500	Bell Crank - Lift, L.H.	1
29	13-0050	Spring	2
30	13-5530	Rod - Adjustment, Spring	2
31	13-4490	Guard - Sheave	1
32	3253-4	Washer - Lock	2
33	322-7	Screw - Cap, Hex. Hd.	2
34	63-5210	Spindle - Driveside	1
35	56-6230	Bearing (Incl. Ref. #6 & 7)	2
36	13-4340	Sprocket	1
37	13-3710	Washer - Special	1
38	3253-3	Washer - Lock	1
39	321-4	Screw - Cap, Hex. Hd.	1

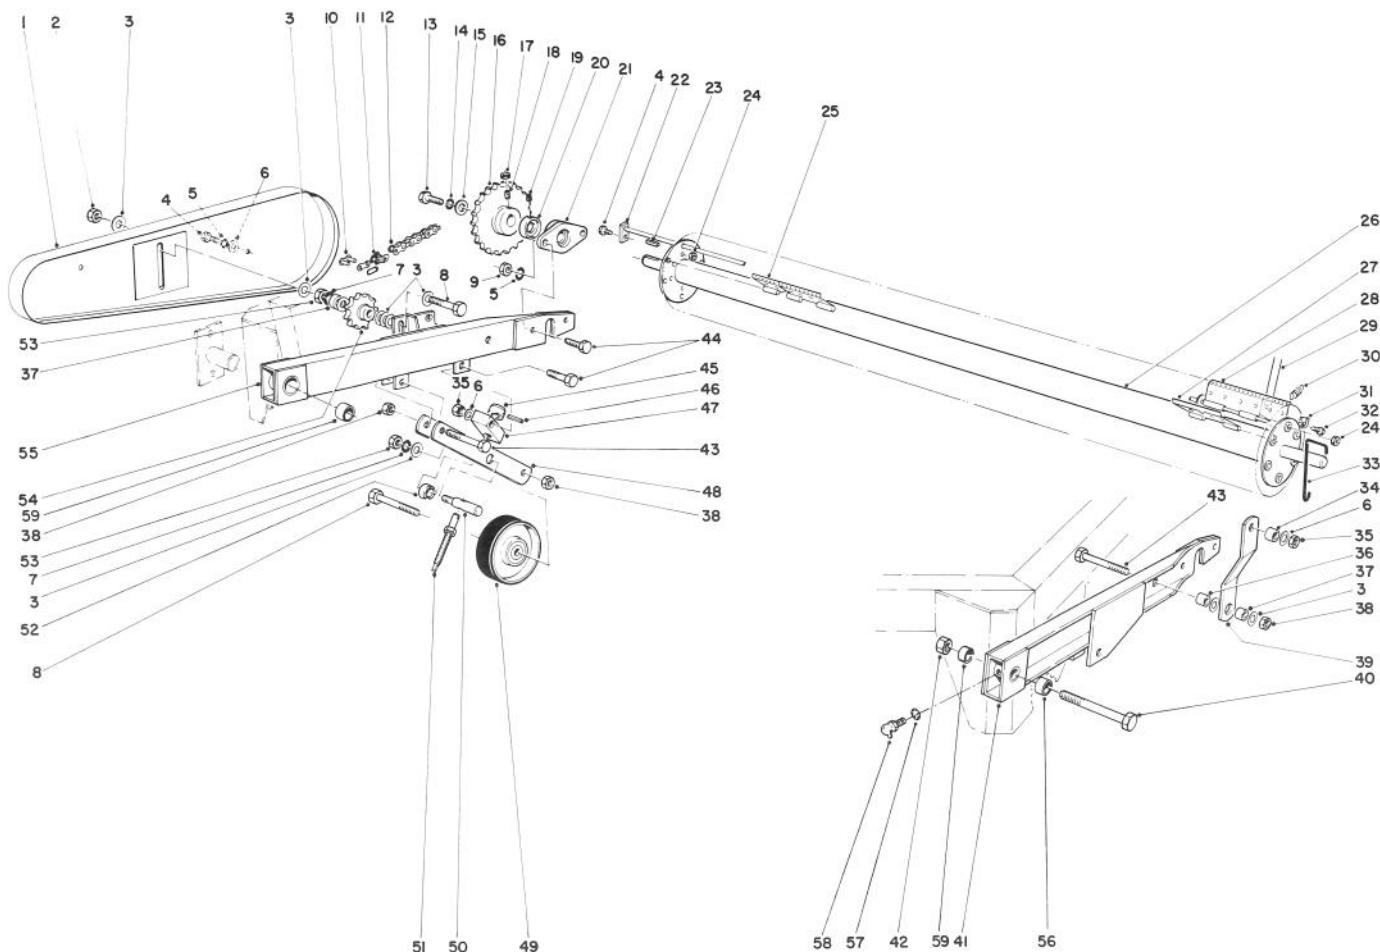 


T-0012

GAUGE WHEEL AND TRAILING ARM

Ref. No.	Part No.	Description	No. Used
1	13-5620	Guard - Chain	1
2	3296-45	Nut - Lock	1
3	3256-26	Washer - Flat	10
4	323-4	Screw - Cap, Hex. Hd.	7
5	3253-21	Washer - Lock	5
6	3256-24	Washer - Flat	5
7	3253-7	Washer - Lock	3
8	325-14	Screw - Cap, Hex. Hd.	3
9	3217-7	Nut - Hex.	4
10	2710-11	Link - Connecting	1
11	2710-15	Link - Offset	1
12	13-4070	Chain	1
13	321-4	Screw - Cap, Hex. Hd.	1
14	3253-3	Washer - Lock	1
15	13-3710	Washer - Special	1
16	13-4890	Sprocket	1
17	3218-3	Nut - Jam	2
18	3247-6	Screw - Set	2
19		Screw - Set	2
20		Collar - Locking	2
21	56-6230	Bearing (Incl. Ref. #19 & 20)	2
22	13-4960	Shaft - Plate, Finger	6
23	13-2840	Key - Square	1
24	32152-2	Nut - Lock	12
25	13-4930	Plate - Finger	3

Ref. No.	Part No.	Description	No. Used
26	13-5250	Rake - Reel	1
27	13-2451	Plate - Finger	60
28	13-4940	Plate - Finger	3
29	13-6700	Finger - Nylon	276
30	13-3090	Spring	66
31	13-2480	Clamp - Finger	276
32	32140-94	Screw - Cap, Hex. Hd.	276
33	13-5700	Hook - Transport	2
34	13-0560	Spacer	2
35	32153-2	Nut	4
36	13-0360	Spacer	2
37	13-3070	Spacer	3
38	32153-5	Nut	6
39	13-5540	Link - Lift	2
40	328-10	Bolt - Hex. Hd.	1
41	63-5300	Trailing Arm-L.H. (Incl. Ref. #59)	1
42	32153-6	Nut	1
43	325-9	Screw - Cap, Hex. Hd.	4
44	323-9	Screw - Cap, Hex. Hd.	6
45	13-0320	Collar - Lock	2
46	32121-45	Pin - Roll	2
47	13-0330	Block - Pivot	2
48	13-5550	Arm - Gauge Wheel	2
49	13-2870	Wheel - Gauge	2
50	13-5570	Stud - Pivot	2

 *Not Illustrated

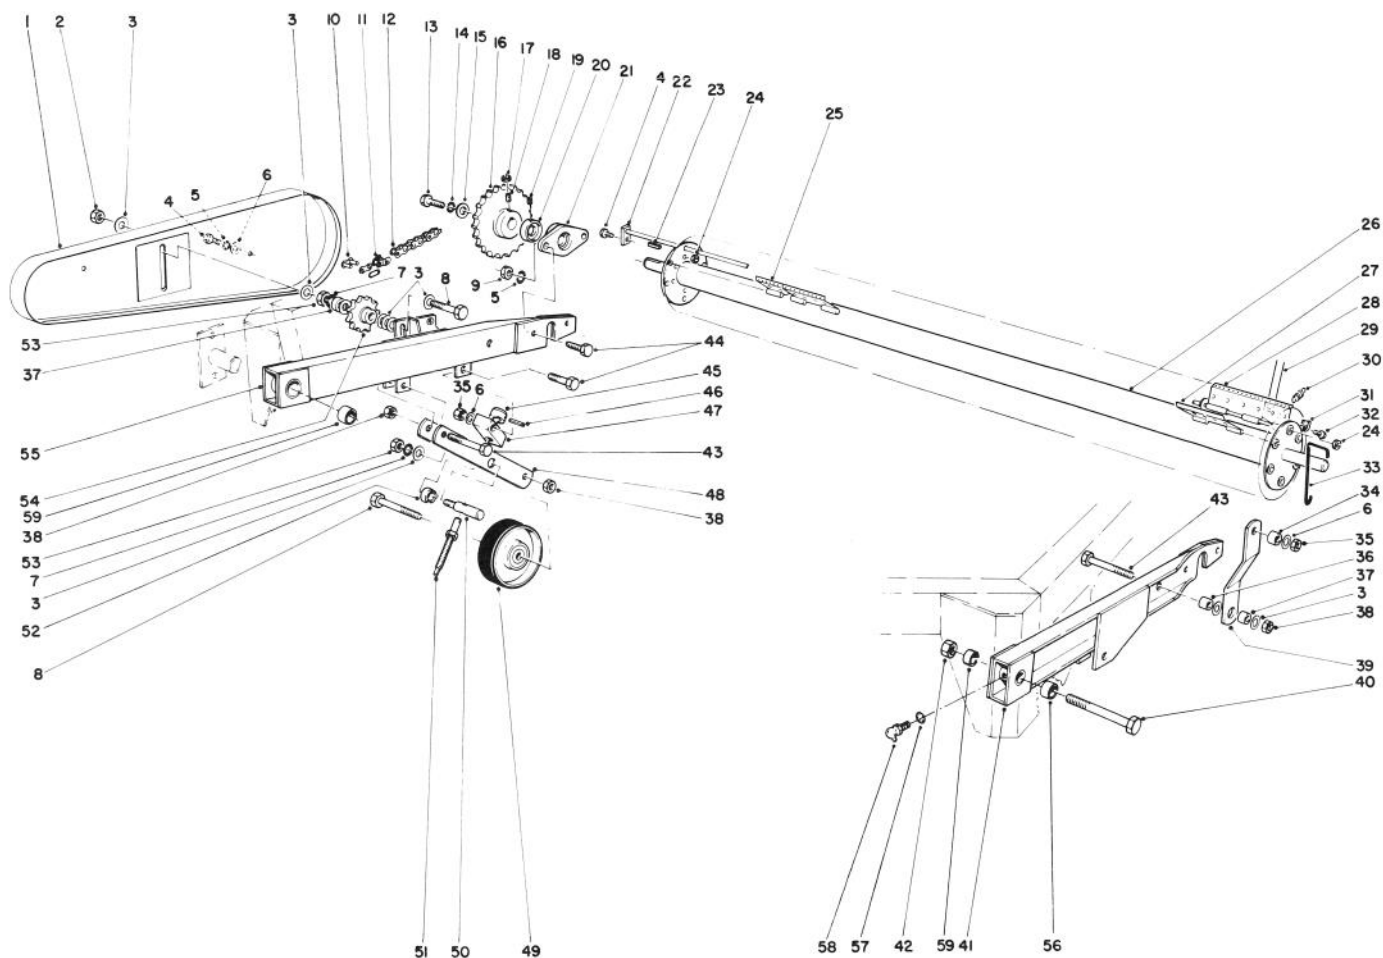


T-0012

GAUGE WHEEL AND TRAILING ARM (Continued)

Ref. No.	Part No.	Description	No. Used
51	13-5590	Rod - Adjustment	2
52	13-5670	Spacer - Locking	2
53	3217-9	Nut - Hex.	3
54	13-3020	Sprocket	1
55	63-5200	Trailing Arm-R.H. (Incl. Ref. #59)	1

Ref. No.	Part No.	Description	No. Used
56	63-5250	Spacer	1
57	3254-8	Washer - Lock, Int. Tooth	2
58	302-60	Fitting - Grease	2
59	256-298	Bushing	2
	13-5370	Flex Tip Reel Assembly (Inc. Ref. #13-33)	1

 *Not Illustrated

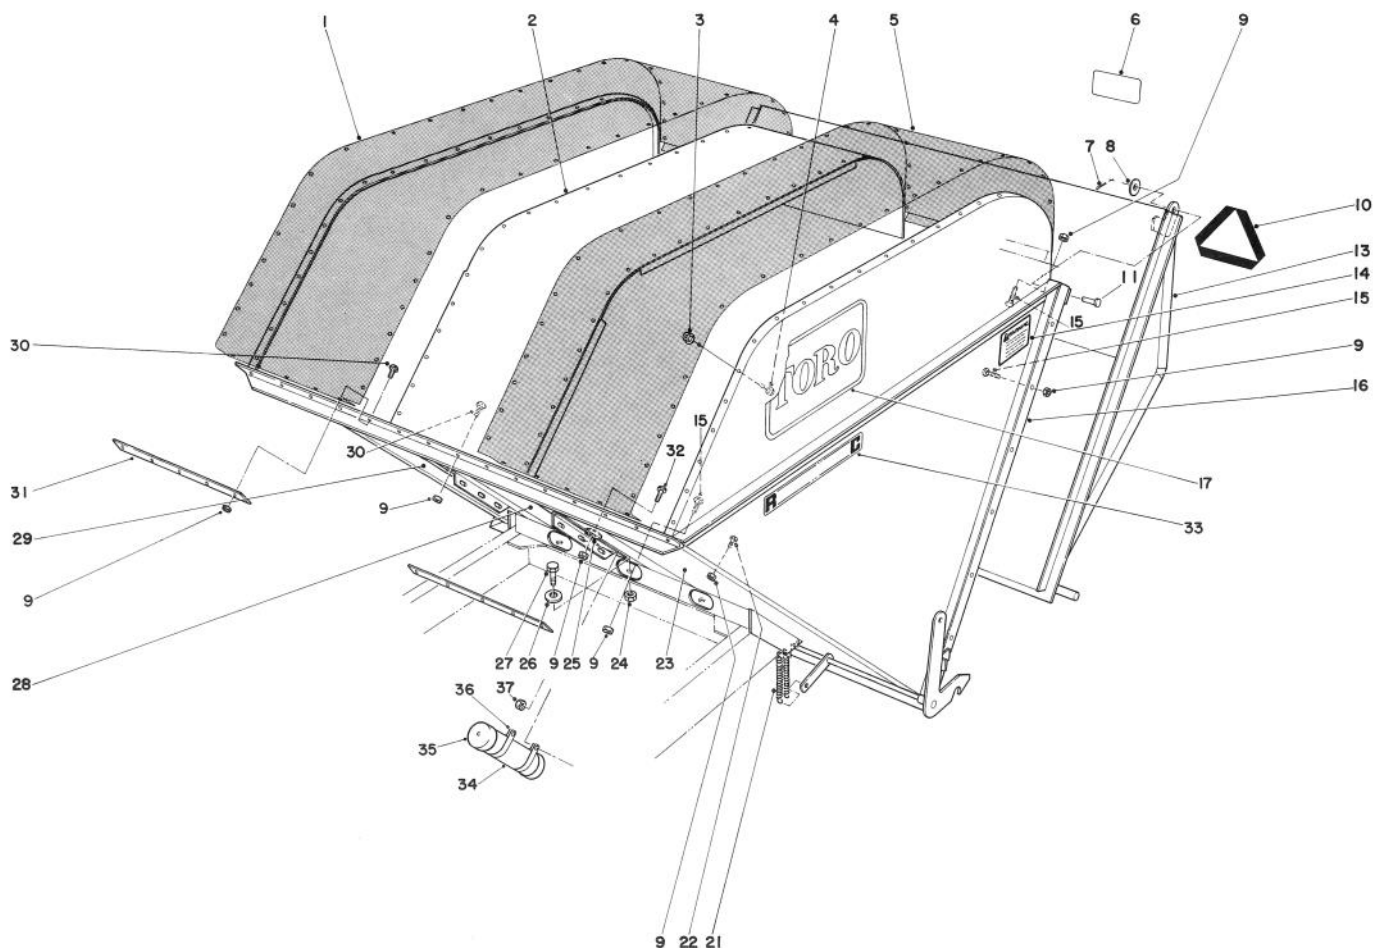


T-0007A

CAGE AND REAR TAILGATE

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	13-7380	Screen - Top, R.H.	1	23	13-7360	Panel - Bottom, L.H.	1
2	13-7140	Panel - Top	1	24	3296-23	Nut - Lock	3
3	32128-17	Nut - Lock, Flange Hd.	104	25	13-3710	Washer - Flat	2
4	3290-144	Screw - Hex. Flange Hd.	104	26	3256-26	Washer - Flat	3
5	13-7390	Screen - Top, L.H.	1	27	325-6	Screw - Cap, Hex. Hd.	3
6	13-6760	Decal - Caution	1	28	13-7370	Panel - Bottom, (Middle)	1
7	3272-12	Pin - Cotter	3	29	13-7350	Panel - Bottom, (R.H.)	1
8	3256-27	Washer - Flat	A/R	30	3250-32	Screw - Cap, Hex. Hd.	15
9	32128-32	Nut - Lock	103	31	42-9930	Strap - Hopper	2
10	13-2930	Decal - Slow Moving Vehicle	1	32	3258-165	Screw - Rd. Hd.	2
11	283-39	Pin - Clevis	3	33	67-9770	Decal - Hopper	2
13	13-7180	Gate	1	34	65-5871	Tube - Manual	1
14	13-7430	Decal -Warning	1	35	65-5890	Cap - Tube	2
15	3229-7	Bolt - Carriage	50	36	2412-102	R-Clamp	2
16	13-7400	Hinge - Bracket	3	37	32153-2	Nut - Lock	2
17	67-7920	Decal - Toro	2	*	13-6800	Cage Assembly (Incl. Ref. #1-33)	1
21	12-8810	Spring	2				
22	32122-42	Screw - Machine	36				

 *Not Illustrated

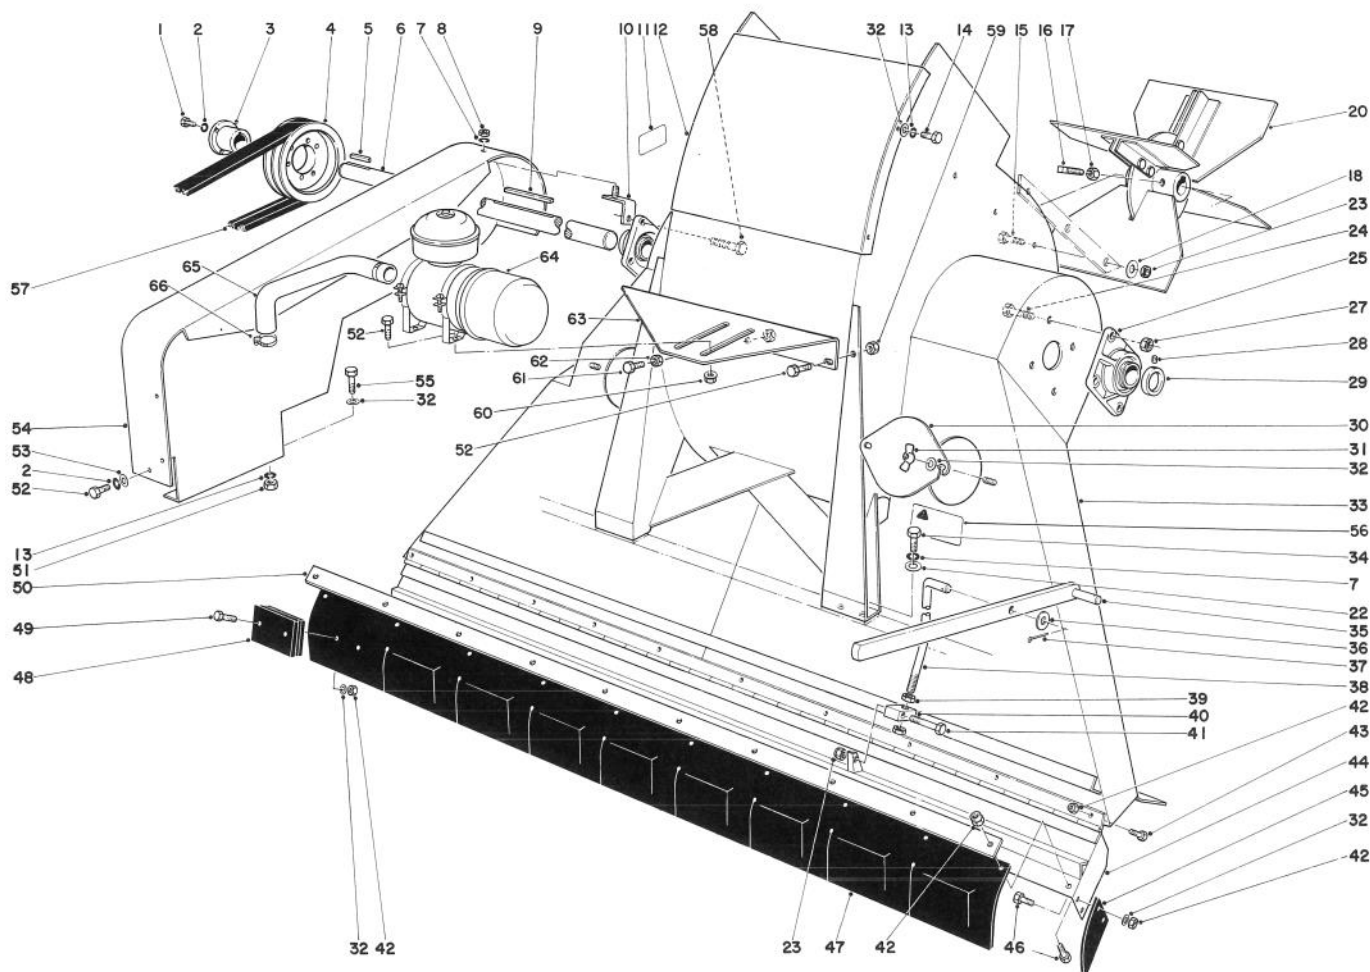


T-0005A

BLOWER AND THROAT ASSEMBLY (Model No. 07073)

Ref. No.	Part No.	Description	No. Used
1	322-7	Screw - Cap, Hex. Hd.	3
2	3253-4	Washer - Lock	4
3	13-2970	Bushing (Incl. Ref. #1 & 2)	1
4	13-2800	Pulley	1
5	13-2240	Key - Square	1
6	13-3790	Shaft - Fan	1
7	3253-21	Washer - Lock	9
8	3217-7	Nut - Hex.	1
9	13-2810	Key - Square	1
10	13-3350	Support - Shield	1
11	67-5360	Decal	1
12	13-3850	Plate - Blower Access	1
13	3253-3	Washer - Lock	6
14	321-4	Screw - Cap, Hex. Hd.	4
15	323-7	Screw - Cap, Hex. Hd.	6
16	3244-14	Screw - Set, - Sq. Hd.	4
17	3218-5	Nut - Jam	4
18	3256-3	Washer - Flat	6
20	13-3420	Fan Assembly	1
22	3256-24	Washer - Flat	8
23	3296-39	Nut - Lock	7
24	325-6	Screw - Cap, Hex. Hd.	7
25	56-6220	Bearing (Incl. Ref. #28 & 29)	2
27	32153-5	Nut - Lock	8


Ref. No.	Part No.	Description	No. Used
28		Screw - Set	2
29		Collar - Locking	2
30	13-1420	Cover - Inspection	2
31	32103-12	Nut - Wing	4
32	3256-22	Washer - Flat	32
33	13-6280	Blower (Incl. Ref. #12-14 & 30-32)	1
34	323-6	Screw - Cap, Hex. Hd.	8
35	13-6390	Handle - Flap	1
36	3256-27	Washer - Flat	1
37	3272-12	Pin - Cotter	1
38	13-6360	Rod - Lift	1
39	3218-6	Nut - Jam	2
40	13-0330	Block - Pivot	1
41	323-9	Screw - Cap, Hex. Hd.	1
42	3296-42	Nut - Lock	42
43	321-3	Screw - Cap, Hex. Hd.	10
44	13-4760	Flap - Lower	1
45	13-3130	Flap - End	2
46	321-5	Screw - Cap, Hex. Hd.	14
47	13-4700	Flap (Incl. Ref. #23, 42, 48-49)	1
48	13-4560	Weight - Flap	18
49	321-8	Screw - Cap, Hex. Hd.	18
50	13-1390	Retainer - Flap	1
51	3217-5	Nut - Hex.	2

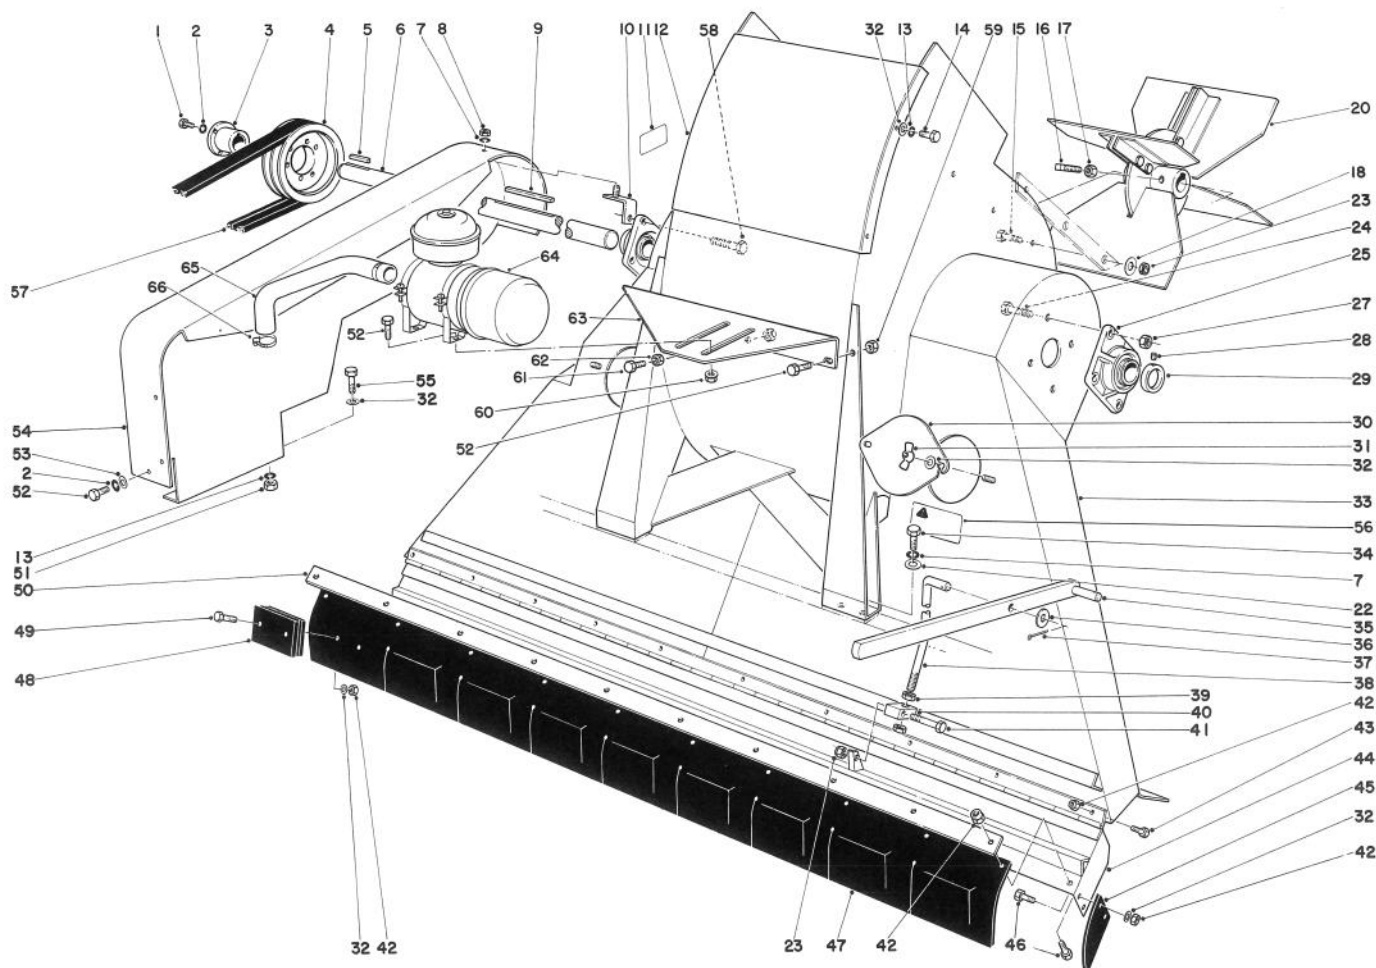 

T-0005A

BLOWER AND THROAT ASSEMBLY (Model No. 07073) (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
52	322-1	Screw - Cap, Hex. Hd.	7	60	32128-25	Nut - Lock, Flange	4
53	3256-23	Washer - Flat	1	61	322-5	Screw - Cap, Hex. Hd.	1
54	13-4800	Guard - Belt	1	62	3218-2	Nut - Jam	2
55	321-4	Screw - Cap, Hex. Hd.	2	63	67-9730	Bracket - Air Cleaner	1
56	13-6410	Decal	1	64	8-2329	Air Cleaner Assembly	1
57	13-2640	Belt	1	65	53-8591	Hose - Air Cleaner	1
58	325-7	Screw - Cap, Hex. Hd.	1	66	2412-42	Clamp	2
59	32153-3	Nut - Lock	2				

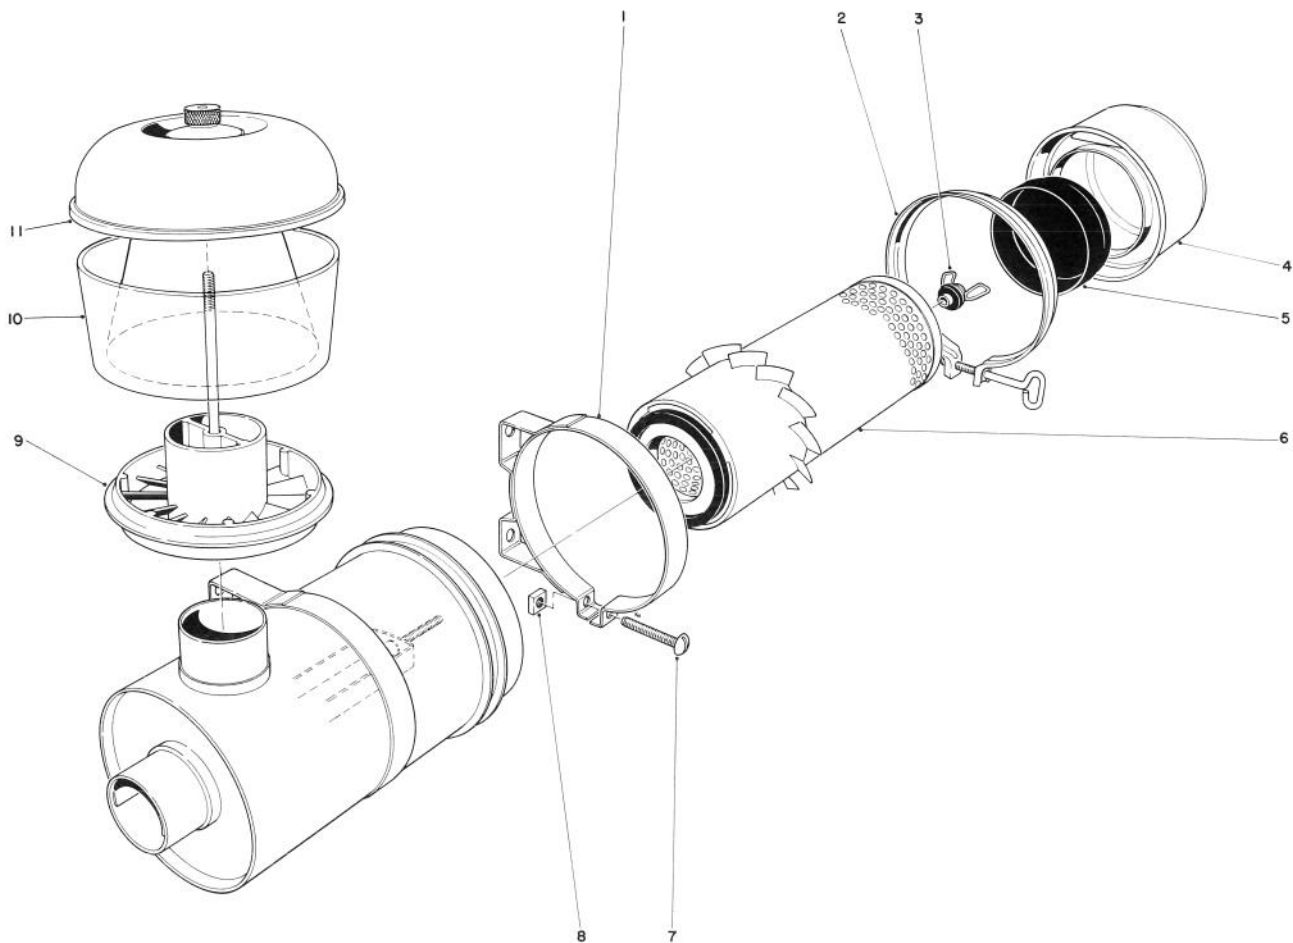 


T-0019

AIR CLEANER ASSEMBLY NO. 8-2329

Ref. No.	Part No.	Description	No. Used
1	33-1350	Assembly - Band, Mounting	2
2	33-1340	Assembly - Clamp	1
3	33-1330	Assembly - Nut	1
4	33-1320	Assembly - Cup	1
5	33-1310	Baffle	1
6	33-1300	Assembly - Element	1
7	3258-19	Screw - Machine	2

Ref. No.	Part No.	Description	No. Used
8	32107-11	Nut - Square	2
9	33-1280	Assembly - Sleeve	1
10	33-1270	Bowl - Clear	1
11	33-1260	Assembly - Cover	1
*	27-7220	Detergent - Cleaning, Air Filter Element (4 lb. box)	A/R

 *Not Illustrated

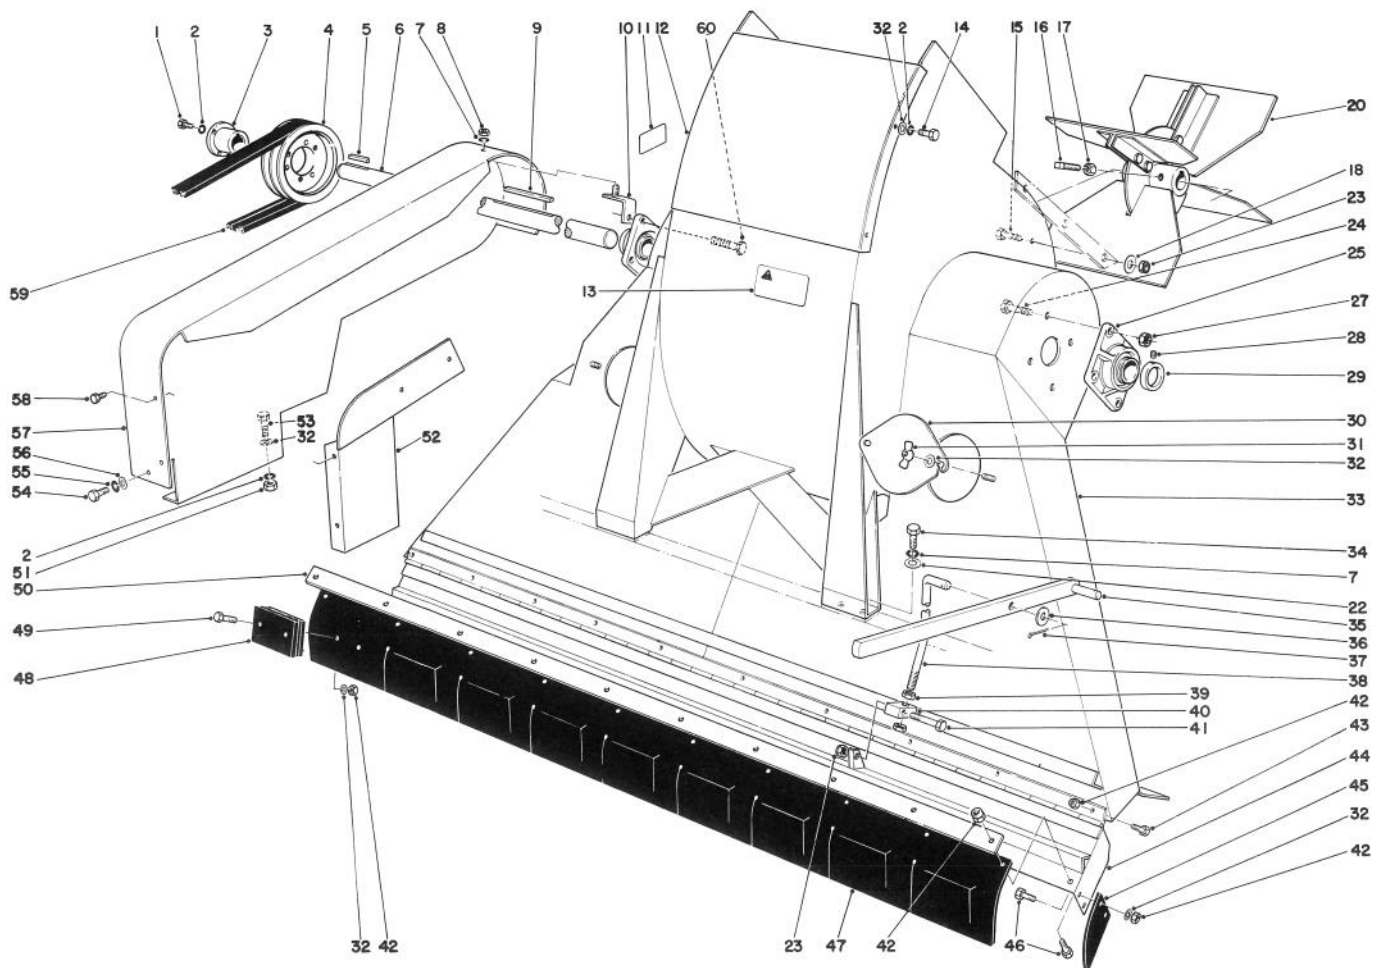


T-0013A

BLOWER AND THROAT ASSEMBLY (Model No. 07174)

Ref. No.	Part No.	Description	No. Used
1	321-13	Screw - Cap, Hex. Hd.	3
2	3253-3	Washer - Lock	9
3	13-6070	Bushing (Incl. Ref. #1 & 2)	1
4	13-6030	Pulley	1
5	13-2240	Key - Square	1
6	13-3790	Shaft - Fan	1
7	3253-21	Washer - Lock	9
8	3217-7	Nut - Hex	1
9	13-2810	Key - Square	1
10	13-3350	Bracket - Mounting	1
11	67-5360	Decal	1
12	13-3850	Plate - Blower Access	1
13	13-6410	Decal	1
14	321-4	Screw - Cap, Hex. Hd.	4
15	323-7	Screw - Cap, Hex. Hd.	6
16	3244-14	Screw - Set, Square Hd.	4
17	3218-5	Nut - Hex.	4
18	3256-3	Washer - Flat	6
20	13-3420	Assembly - Fan	1
22	3256-24	Washer - Flat	8
23	3296-39	Nut - Lock	7
24	325-6	Screw - Cap, Hex. Hd.	7
25	56-6220	Bearing (Incl. Ref. #28 & 29)	2
27	32153-5	Nut - Lock	8
28		Screw - Set	2

Ref. No.	Part No.	Description	No. Used
29		Collar - Locking	2
30		Cover - Inspection	2
31	32103-12	Nut - Wing	4
32	3256-22	Washer - Flat	32
33	13-6280	Blower and Throat (Incl. Ref. #2,12,14, & 30-32)	1
34	323-6	Screw - Cap, Hex. Hd.	8
35	13-6390	Handle - Flap	1
36	3256-27	Washer - Flat	1
37	3272-12	Pin - Cotter	1
38	13-6360	Rod - Lift	1
39	3218-6	Nut - Jam	2
40	13-0330	Block - Pivot	1
41	323-8	Screw - Cap, Hex. Hd.	1
42	3296-42	Nut - Lock	42
43	321-3	Screw - Cap, Hex. Hd.	10
44	13-4760	Flap - Lower	1
45	13-3130	Flap - End	2
46	321-5	Screw - Cap, Hex. Hd.	14
47	13-4700	Flap - Rubber (Incl. Ref. #32, 42, 48 & 49)	1
48	13-4560	Weight - Flap	18
49	321-8	Screw - Cap, Hex. Hd.	18
50	13-1390	Retainer - Flap	1
51	3217-5	Nut - Hex.	2
52	13-6090	Cover - Guard, Side	1

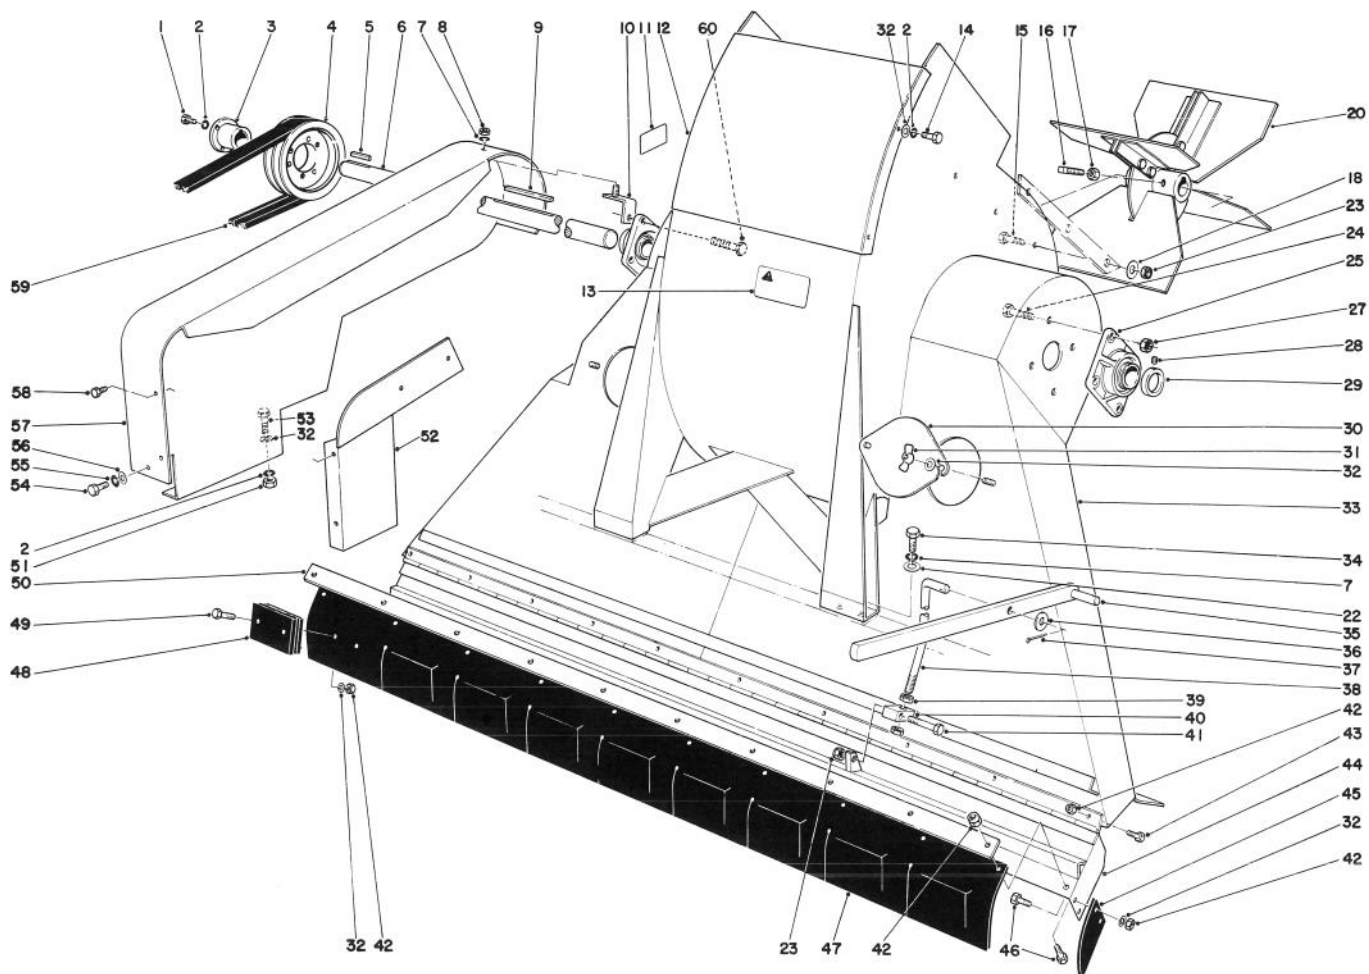 


T-0013A

BLOWER AND THROAT ASSEMBLY (Model No. 07174) (Continued)

Ref. No.	Part No.	Description	No. Used
53	321-4	Screw - Cap, Hex. Hd.	2
54	322-1	Screw - Cap, Hex. Hd.	1
55	3253-4	Washer - Lock	1
56	3256-23	Washer - Flat	1

Ref. No.	Part No.	Description	No. Used
57	13-4800	Guard - Belt	1
58	32104-109	Screw - Cap, Hex. Hd.	4
59	13-2640	Belt	1
60	325-7	Screw - Cap, Hex. Hd.	1

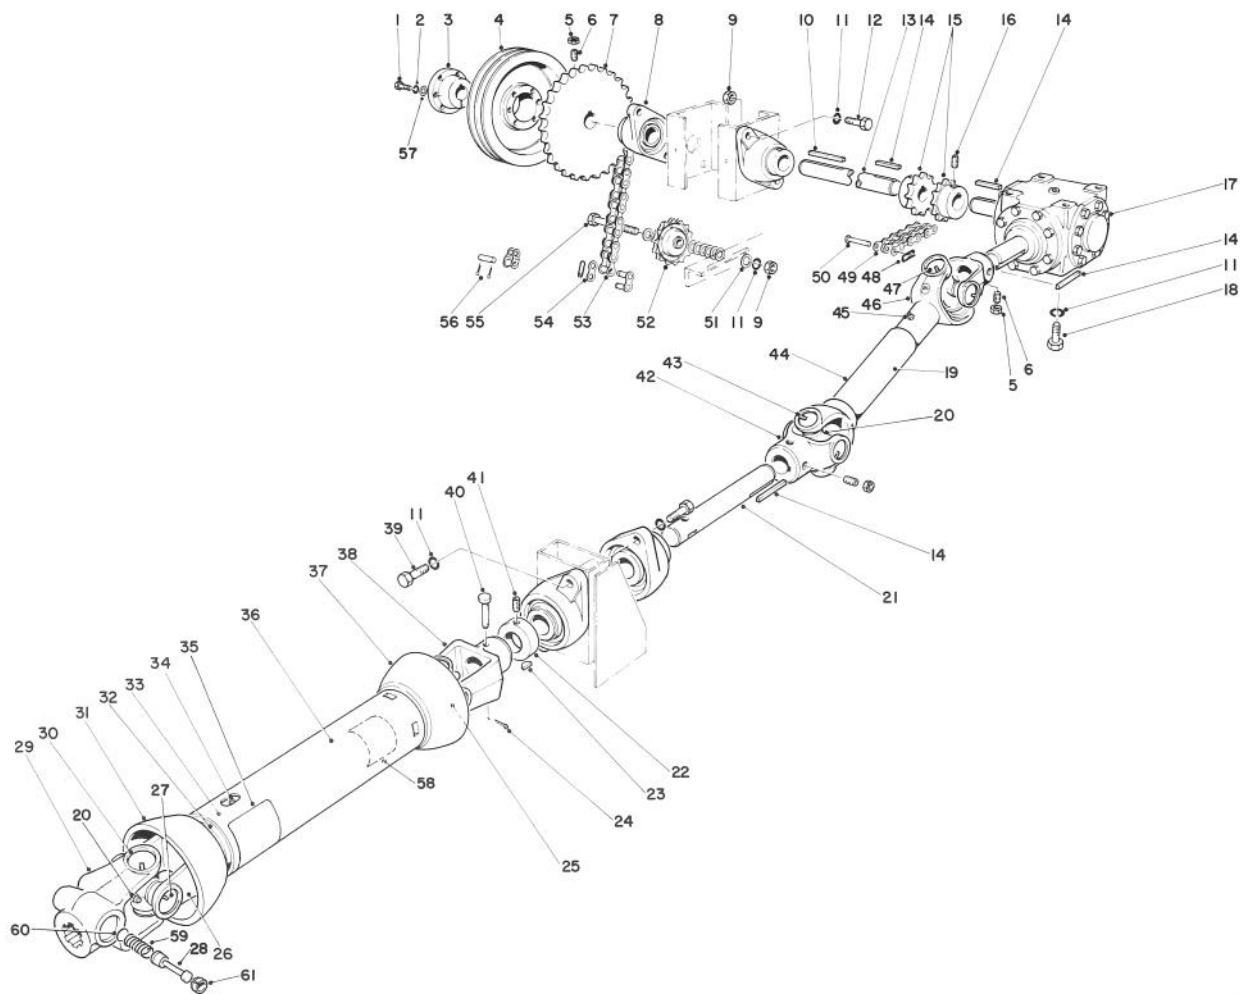 


T-0008

DRIVE MECHANISM (Model No. 07174)

Ref. No.	Part No.	Description	No. Used
1	322-7	Screw - Cap, Hex. Hd.	3
2	3253-4	Washer - Lock	3
3	13-6050	Bushing (Incl. Ref. #1 & 2)	1
4	13-6020	Sheave	1
5	3218-3	Nut - Jam	6
6	3247-6	Screw - Set	6
7	13-6110	Sprocket	1
8	56-6250	Bearing (Incl. Ref. #22 & 41)	4
9	3217-9	Nut - Hex.	5
10	13-3720	Key - Square	1
11	3253-7	Washer - Lock	13
12	325-6	Screw - Cap, Hex. Hd.	4
13	13-5910	Shaft - Drive, Side	1
14	5-0738	Key - Square	4
15	13-6690	Coupling Half	2
16	3247-3	Screw - Set	4
17	70-2350	Gear Box - Complete	1
18	325-4	Screw - Cap, Hex. Hd.	4
19	13-6010	Shaft - Universal, Rear (Incl. Ref. #20 & 42-47)	1
20	2115-80	Fitting - Fitting	4
21	13-5900	Shaft - Drive, Front	1
22		Collar - Locking, Eccentric	4
23	3257-8	Key - Woodruff	1

Ref. No.	Part No.	Description	No. Used
24	3272-10	Pin - Cotter	1
25	76-0720	Yoke & Tube Sub-Assembly (Incl. Ref. #34 & 58)	1
26	76-0660	Yoke and Shaft	1
27	76-0650	Ring - Lock	8
28		Pin - Quick Detach	1
29	76-0580	Yoke - Front (Incl. Ref. #28 & 59-61)	1
30	76-0640	Bearing & Cross Kit (Incl. Ref. #20 & 27)	2
31	76-0680	Shield - Outer (Incl. Ref. #35)	1
32	76-0670	Bearing - Shield	2
33	76-0700	Bearing - Shield Support	1
34	2115-85	Fitting - Grease	1
35	76-0690	Decal	1
36	13-6040	Shaft - Universal, Front (Incl. Ref. #20, 25-35, 37, 38, & 58-62)	1
37	76-0710	Shield - Inner	1
38	76-0740	Yoke - Rear	1
39	325-5	Screw - Cap, Hex. Hd.	4
40	283-33	Pin - Clevis	1
41		Screw - Set	8
42	2115-81	Yoke	2
43	2115-76	Kit - Center Parts	2

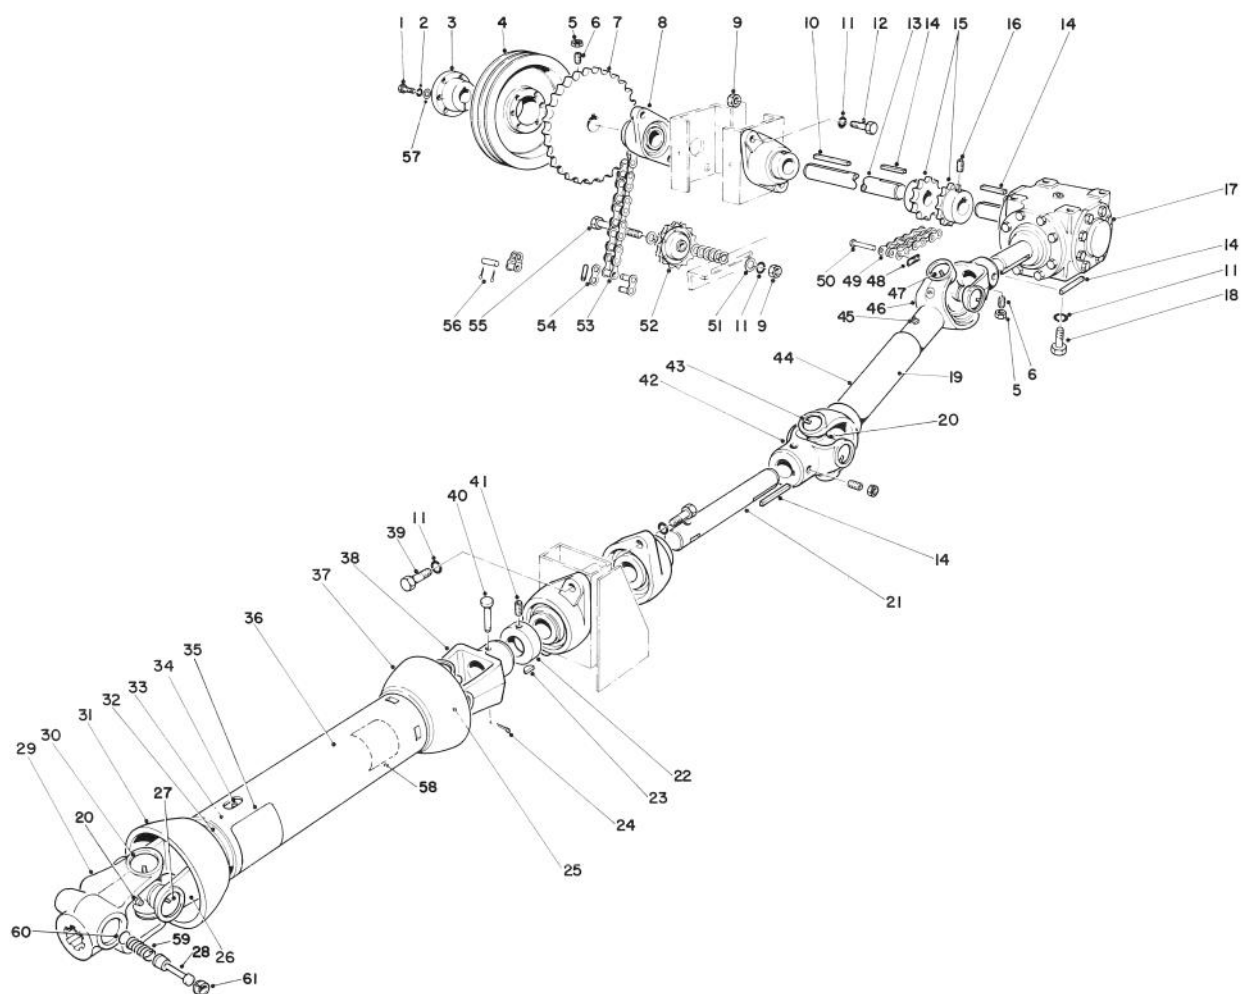 


T-0008

DRIVE MECHANISM (Model No. 07174) (Continued)

Ref. No.	Part No.	Description	No. Used
44	2115-83	Yoke and Shaft	1
45	302-2	Fitting - Grease	1
46	2115-82	Yoke and Shaft	1
47	2115-78	Ring - Lock	8
48		Clip - Pin, Connector	1
49	13-6680	Chain	1
50	13-6670	Pin - Connector (Incl. Ref.#48)	1
51	3256-26	Washer - Flat	8
52	13-4570	Sprocket - Idler	1
53	13-4590	Chain	1

Ref. No.	Part No.	Description	No. Used
54	2710-30	Link - Connecting	1
55	325-12	Screw - Cap, Hex. Hd.	1
56	2710-29	Link - Offset	1
57	3256-23	Washer - Flat	3
58	76-0730	Decal	1
59		Spring	1
60		Slug	1
61		Bushing	1
*	76-0590	Kit - Quick Disconnect (Incl. Ref. # 28, & 59-61)	1

 *Not Illustrated

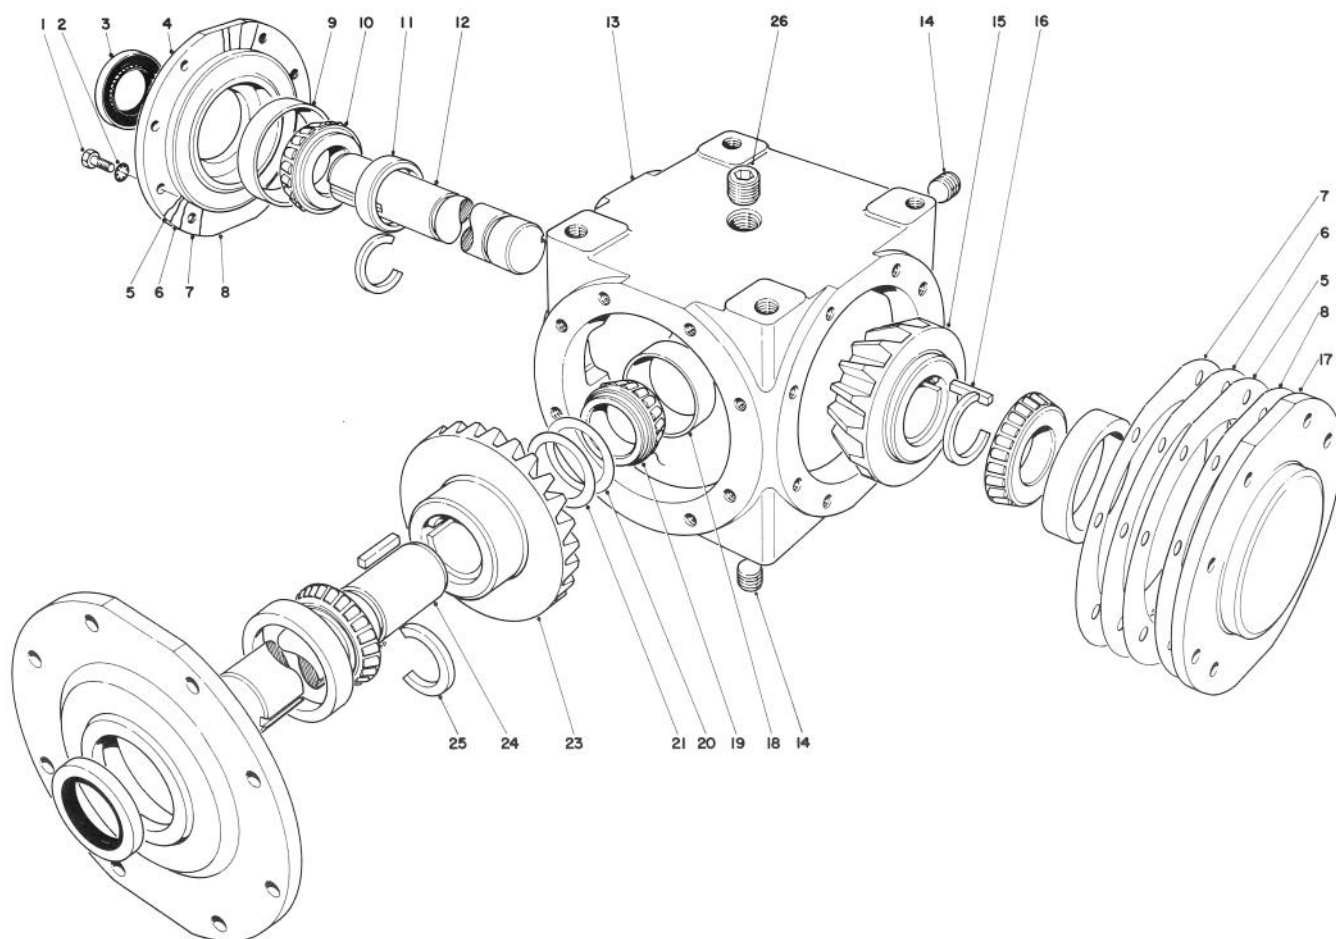


T-0014

GEAR BOX ASSEMBLY (Model No. 07174)

Ref. No.	Part No.	Description	No. Used
1	322-5	Screw - Cap, Hex. Hd.	24
2	3254-2	Washer - Lock	24
3	13-6520	Seal	2
4	70-2420	Cap	2
5	13-6490	Gasket - .002 Thk.	A/R
6	13-6610	Gasket - .003 Thk.	A/R
7	13-6600	Gasket - .005 Thk.	A/R
8	13-6590	Gasket - .015 Thk.	A/R
9	254-57	Cup - Bearing	3
10	254-58	Cone - Bearing	3
11	70-2440	Collar - Thrust	1
12	70-2430	Shaft	1
13	13-6650	Housing	1

Ref. No.	Part No.	Description	No. Used
14	285-12	Plug - Pipe	2
15	70-2450	Gear - 17 Tooth	1
16	70-2380	Key - Tapered	2
17	70-2360	Cap	1
18	254-61	Cup - Bearing	1
19	254-62	Cone - Bearing	1
20	13-6540	Shim - .010 Thk.	A/R
21	13-6630	Shim - .005 Thk.	A/R
22	70-2370	Gear - 23 Tooth	1
23	70-2390	Shaft	1
24	70-2410	Ring - Retaining	3
25	59-1460	Plug - Vent	1

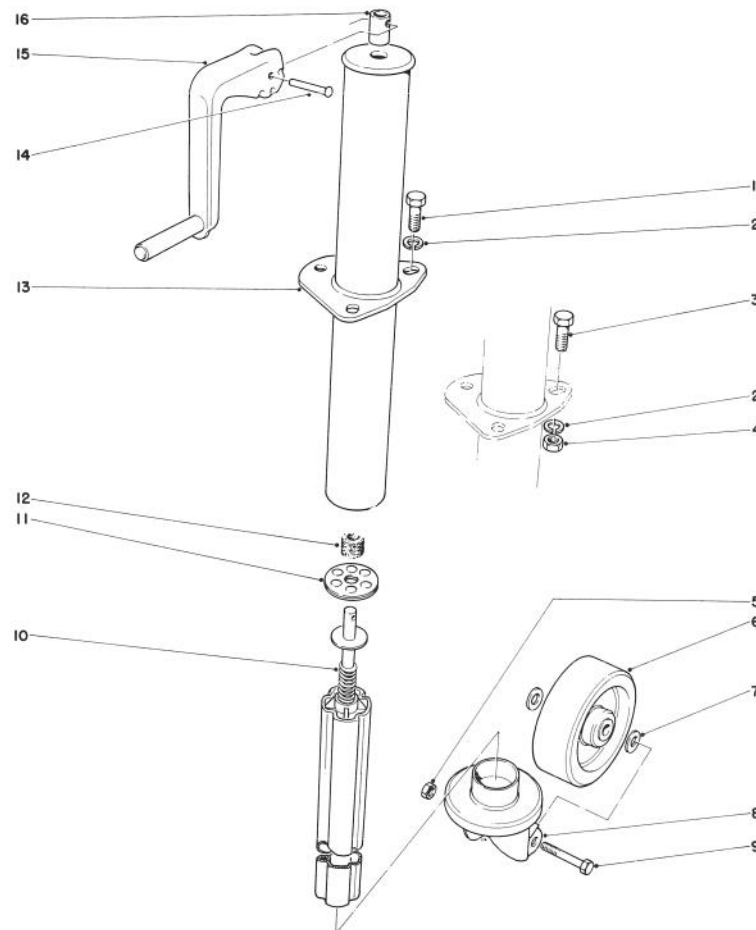 


T-0015

JACK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323-4	Screw - Cap, Hex. Hd. (Model 07073 only)	3
2	3253-21	Washer - Lock	3
3	323-5	Screw - Cap, Hex. Hd. (Model 07174 only)	3
4	3217-7	Nut - hex. (Model 07174 only)	3
5	3296-23	Nut - Lock	1
6	13-6440	Wheel	1
7	3256-26	Washer - Flat	2

Ref. No.	Part No.	Description	No. Used
8	13-6450	Bracket - Wheel, Caster	1
9	325-13	Screw - Cap, Hex. Hd.	1
10	13-6750	Ram	1
11	13-3510	Bearing - Thrust	1
12	13-3610	Sleeve - Felt	1
13	13-5680	Assembly - Jack (Incl. Ref. #10-16)	1
14	13-6730	Rivet	1
15	13-6740	Handle	1
16	13-3490	Sleeve	1

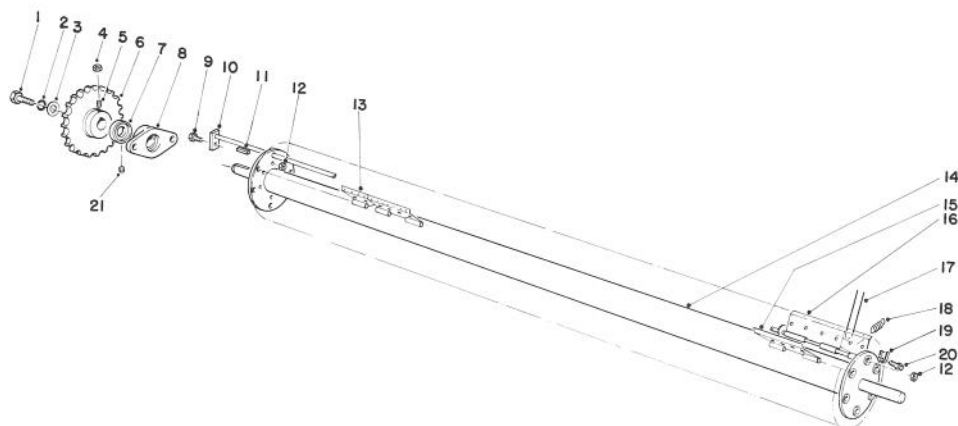 


T-0016

FLEX TIP REEL ASSEMBLY MODEL NO. 07079 (Optional)

Ref. No.	Part No.	Description	No. Used
1	321-4	Screw - Cap, Hex. Hd.	1
2	3253-3	Washer - Lock	1
3	13-3710	Washer - Special	1
4	3218-3	Nut - Jam	2
5	3247-6	Screw - Set	2
6	13-4890	Sprocket	1
7		Collar - Locking	2
8	56-6230	Bearing (Incl. Ref. #7 & 21)	2
9	323-4	Screw - Cap, Hex. Hd.	6
10	13-4960	Shaft - Plate, Finger	6

Ref. No.	Part No.	Description	No. Used
11	13-2840	Key - Square	1
12	32152-2	Nut - Lock	12
13	13-4930	Plate - Finger	3
14	13-5250	Rake - Reel	1
15	13-2451	Plate - Finger	60
16	13-4940	Plate - Finger	3
17	13-6700	Finger - Nylon	276
18	13-3090	Spring	66
19	13-2480	Clamp - Finger	276
20	32140-94	Screw - Cap, Hex. Hd.	276
21		Screw - Set	2

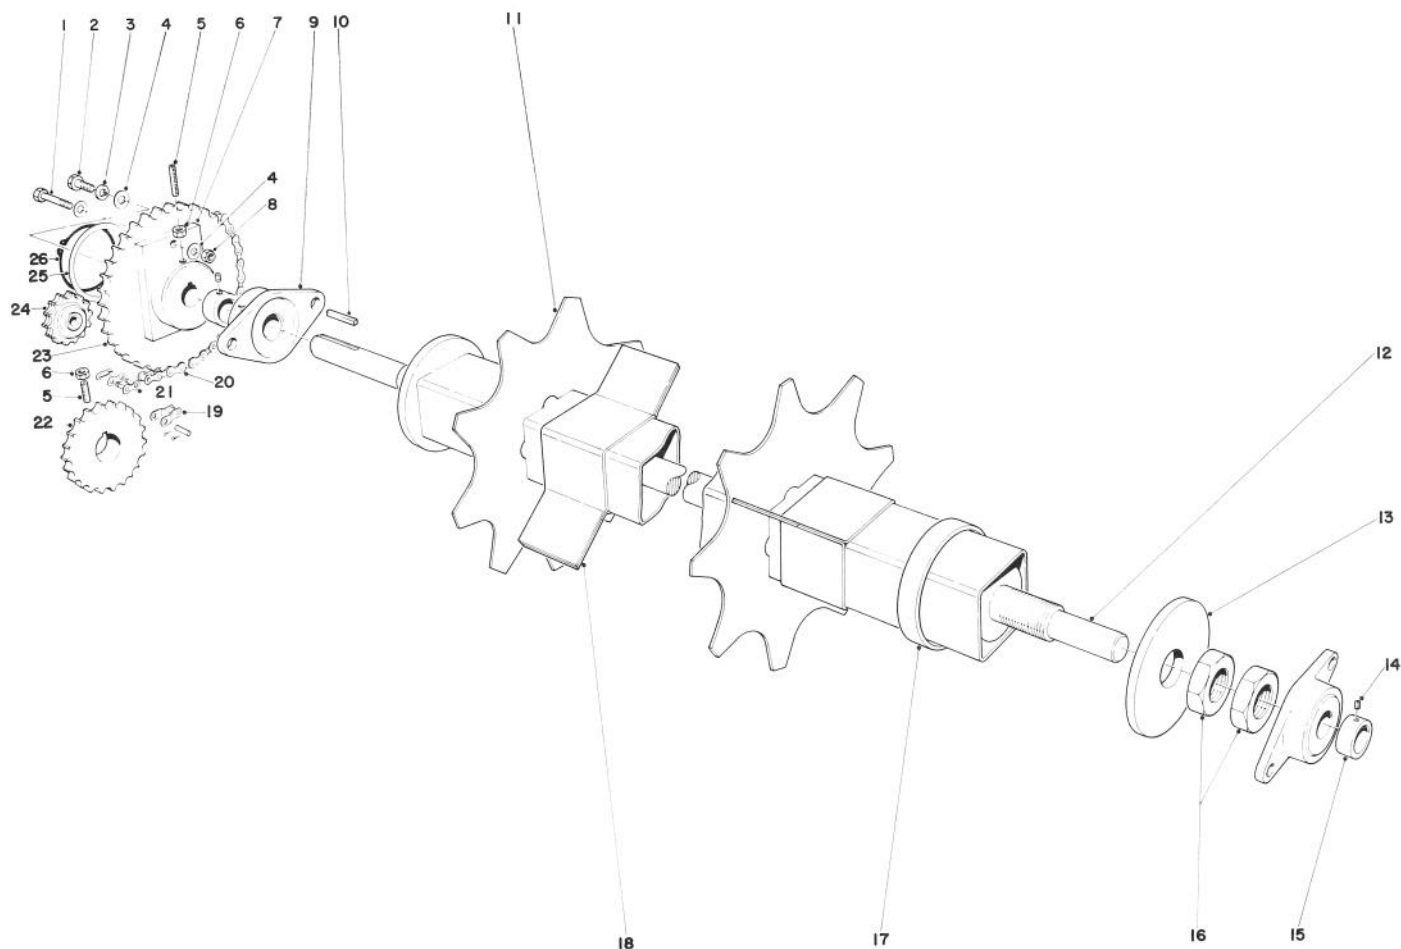 


T-0017

66" THATCHING ATTACHMENT MODEL NO. 07178 (Optional)

Ref. No.	Part No.	Description	No. Used
1	321-10	Screw - Cap, Hex. Hd.	1
2	321-4	Screw - Cap, Hex. Hd.	1
3	3253-3	Washer - Lock	1
4	13-3710	Washer - Flat	3
5	3247-8	Screw - Set	4
6	3218-3	Nut - Jam	4
7	13-7700	Hub - Torque Limiting	1
8	3296-8	Nut - Lock	1
9	56-6230	Bearing (Incl. Ref. #14 & 15)	2
10	13-2840	Key - Square	1
11	13-7540	Blade - 9 Tooth	16
12	13-7560	Shaft	1
13	13-7520	Plate - End	1

Ref. No.	Part No.	Description	No. Used
14		Screw - Set	2
15		Collar - Locking	2
16	3218-17	Nut - Jam	2
17	13-7530	Spacer - End	1
18	13-7550	Spacer	15
19	2710-29	Link - Offset	1
20	13-4580	Chain	1
21	2710-30	Link - Connecting	1
22	13-7440	Sprocket - Drive (18 Tooth)	1
23	13-7740	Sprocket (36 Tooth)	1
24	13-4570	Sprocket - Idler	1
25	13-7640	Washer	1
26	32151-16	Ring - Retaining	1

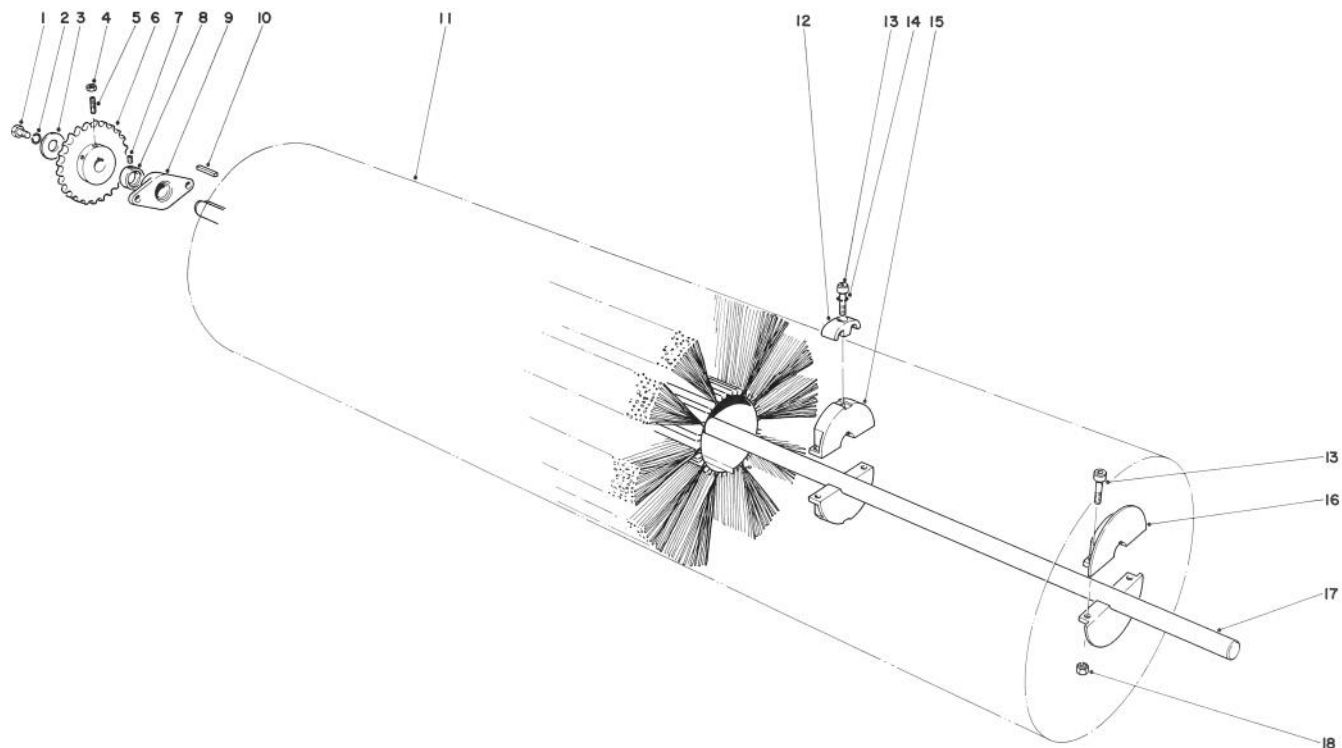 


T-0018

66" STREET BROOM ATTACHMENT MODEL NO. 07076 (Optional)


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	321-4	Screw - Cap, Hex. Hd.	1	11	13-3210	Brush Half	2
2	3253-3	Washer - Lock	1	12	13-3180	Clamp - Brush	6
3	13-3710	Washer	1	13	3274-1	Screw - Cap, Hex. Soc. Hd.	12
4	3218-3	Nut - Jam	2	14	13-3360	Washer - Lock, Special	6
5	3247-8	Screw - Set	2	15	13-3190	Support - Center (Incl. Ref. #12-14 & 18)	1
6	13-4890	Sprocket	1	16	13-3200	Support -End (Incl. Ref. #12-14 & 18)	2
7		Screw - Set	2	17	13-4990	Shaft - Brush	1
8		Collar - Locking	2	18	3217-7	Nut - Hex.	6
9	56-6230	Bearing (Incl. Ref. #7 & 8)	2				
10	13-2840	Key - Square	1				

ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

 
GROUP 4

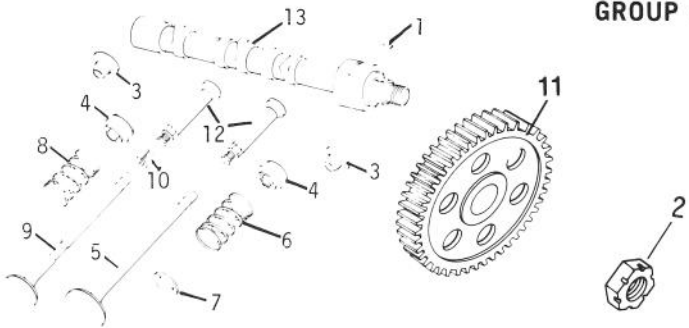


GROUP 5

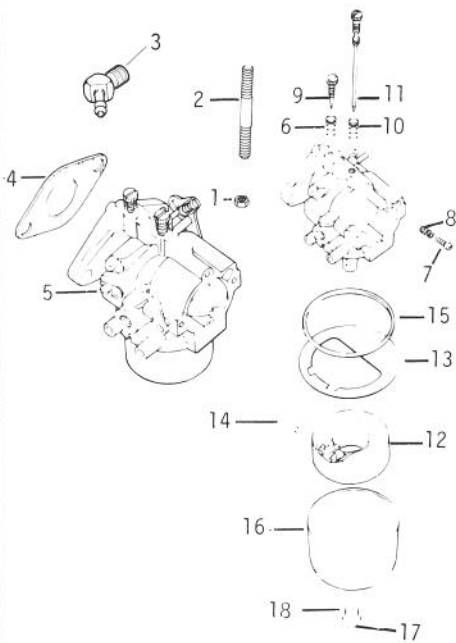 



GROUP 2

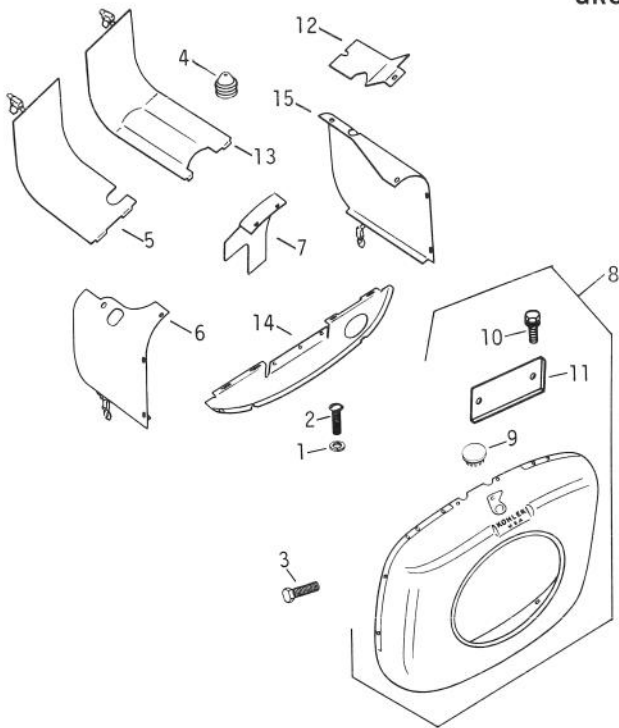 

GROUP 7

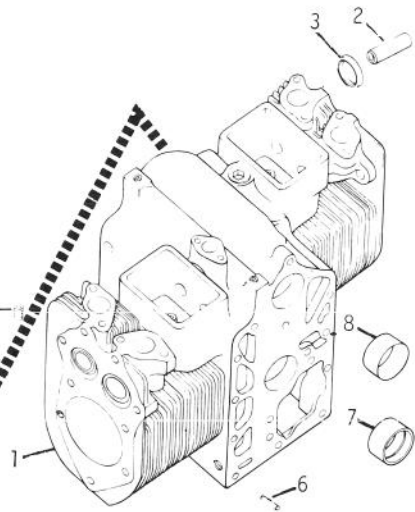 

GROUP 3

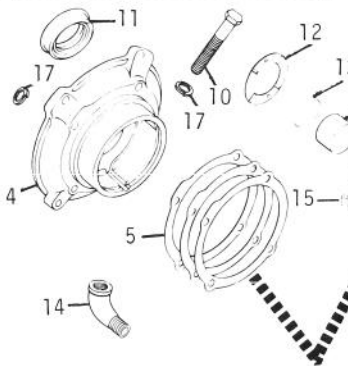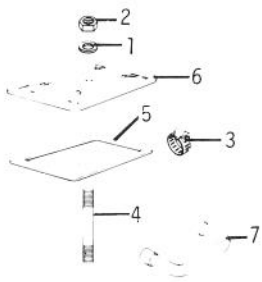  


ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

Ref. No.	Part No.	Description	No. Used
		BAFFLES & SHROUD GROUP 2	
1	X-20-1	Washer - Lock	2
2	X-73-1	Screw - Mach. Rd. Hd.	2
3	X-133-2	Screw - H.C.	8
3	X-132-5	Screw - H.C.	1
4	243035	Grommet	1
5	277048	Baffle - #1 Barrel	1
6	277051	Baffle - #1 Cylinder Head	1
7	277054	Baffle - #1 Upper Cylinder	1
8	4802711	Blower Housing Assembly	1
9	X-301-8	Plug - Button	1
10	X-132-6	Screw - Hex. Hd.	2
11	4109623	Cover - Knock-Out	1
12	4806301	Baffle	1
13	277168	Baffle - #2 Barrel	1
14	277230	Baffle - Housing Support	1
15	4812404	Baffle - #2 Cylinder Head	1
		BREATHER & VENT GROUP 3	
1	X-25-12	Washer - Plain	2
2	X-81-1	Nut - Hex.	2
3	X-426-3	Clamp - Hose	2
4	220368	Stud - Valve Cover	2
5	270034	Gasket - Valve Cover	2
6	270036	Cover - Valve	2
7	277392	Hose - Breather	1
		CAMSHAFT & VALVES GROUP 4	
1	X-43-1	Key - Woodruff	1
2	4810004	Nut - Jam	1
3	230011	Retainer - Valve Spring	2
4	5241301	Rotator - Exhaust Valve	2
5	235008	Valve - Intake	2
6	235010	Spring - Valve	2
7	235011	Retainer - Valve Spring	4
8	235168	Spring - 'Exhaust Valve	2
9	237672	Valve - Exhaust	2
10	4175510	Kit - Retainer	4
11	4875534	Kit - Camshaft Gear	1
12	D-277031	Tappet	4
13	4801201	Camshaft	1


Ref. No.	Part No.	Description	No. Used
		CARBURETOR GROUP 5	
1	X-82-5	Nut - Hex.	2
2	X-352-10	Stud	2
3	4715512	Connector	1
4	271030	Gasket - Carburetor	1
5	4805306	Carburetor Assembly	1
6	200380	Spring - Idle Speed	1
7	234945	Screw - Idle Fuel Adj.	1
8	200380	Spring - Idle Fuel	1
9	277210	Needle - Idle Adj.	1
10	200383	Spring - Main Fuel	1
11	4810301	Needle - Main Fuel Adj.	1
12	2575703	Kit - Float	1
13	2504102	Gasket - Bowl Baffle	1
14	200376	Pin - Float Hinge	1
15	200375	Gasket - Bowl	1
16	235448	Bowl - Fuel	1
17	4710006	Screw - Bowl Retainer	1
18	200372	Gasket - Bowl Screw	1
19	2575702	Kit - Carburetor Repair	1
		CRANKCASE GROUP 7	
1	4800503	Crankcase Assembly	1
2	235007-S	Guide - Valve	4
3	230265	Insert - Exhaust Valve	2
4	277199	Plate - Rear Closure	1
5	277087	Gasket - Closure Plate	1
5	277103	Gasket - Closure Plate	A/R
5	277115	Gasket - Closure Plate	A/R
6	277134	Pin - Drive Lock	4
7	4803006	Bearing	2
8	4815803	Bushing - Camshaft	1
9	277039	Bushing	1
10	270956	Screw - Cylinder Head	4
11	277065	Seal - Rear Oil	1
12	277121	Washer - Thrust	2
13	160037	Plug - Welch	1
14	4828303	Elbow - Street	1
15	4713901	Plug - Pipe	1
16	X-75-23	Plug - Pipe	4
17	X-22-1	Washer - Lock	4

ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

 
GROUP 6

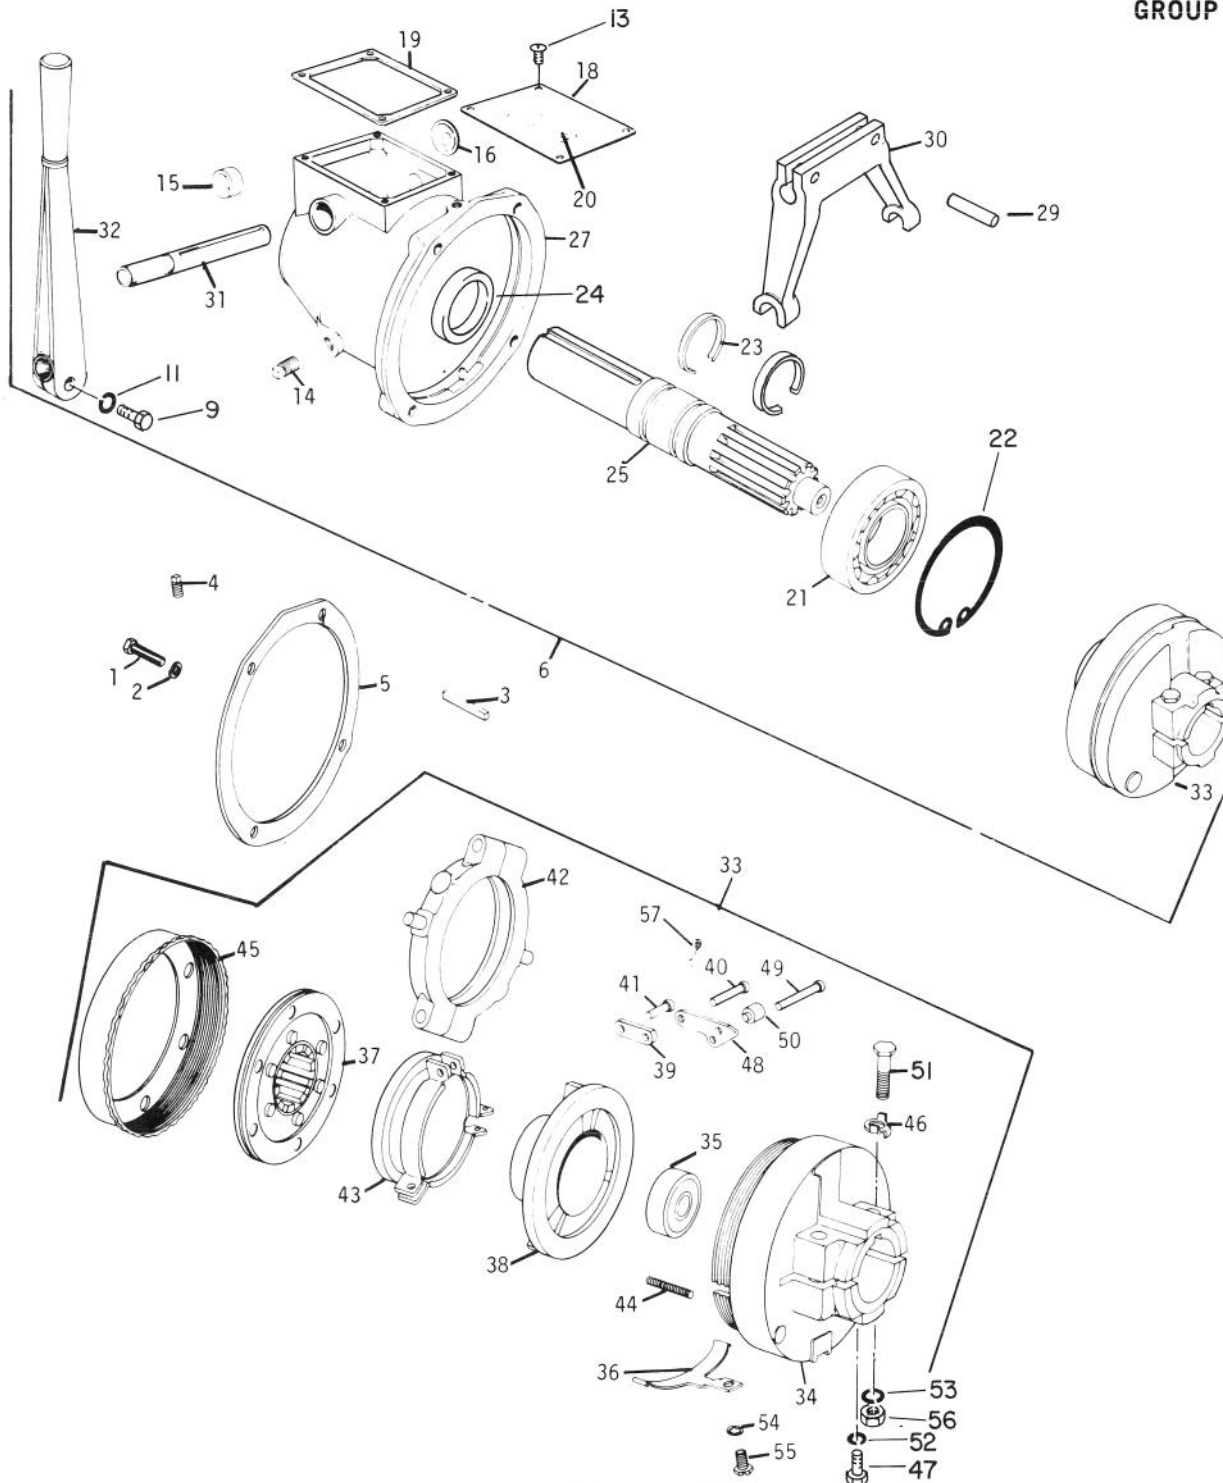


GROUP 8

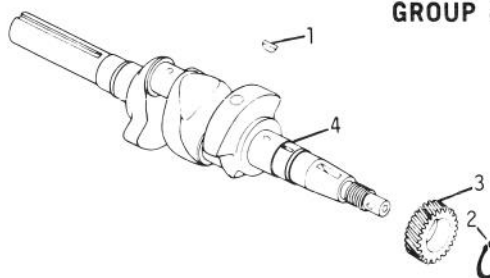 

GROUP 9

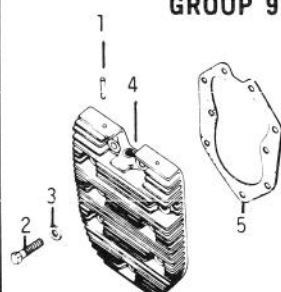 


GROUP 10

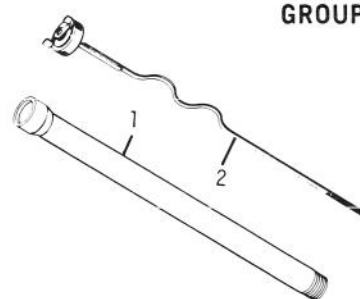 

ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
		CLUTCH GROUP 6					
1	X-8-20	Screw - H.C.	4	41	234052	Pin - Link (short)	3
2	X-23-1	Washer - Lock	4	42	A-234053	Bearing - Release	1
3	X-286-8	Key	1	43	234054	Sleeve - Release	1
4	270219	Plug - Vent	1	44	234055	Sleeve - Return	3
5	274042	Gasket - Clutch	1	45	234056	Ring - Adjusting	1
6	4823902	Clutch Assembly	1	46	234057	Lock - Screw	2
9	X-7-2	Screw - H.C.	1	47	234073	Screw - H.C.	1
11	X-22-1	Washer - Lock	1	48	234046	Lever - Pressure Plate	6
13	X-50-13	Screw - R.H.	4	49	234047	Pin - Lever	3
14	X-75-2	Plug - Pipe	2	50	234048	Roller	3
15	X-271-19	Seal - Oil	1	51	X-7-29	Screw - H.C.	2
16	X-230-20	Plug - Welch	1	52	X-21-1	Washer - Lock	1
18	234032	Cover	1	53	X-22-1	Washer - Lock	2
19	234033	Gasket - Clutch Cover	1	54	X-22-11	Washer - I.T.	1
20	234089	Plate - Instruction	1	55	X-52-22	Screw - Fil. Hd.	1
21	234035	Bearing - Ball	1	56	X-83-4	Nut - Hex	2
22	4814102	Snap Ring	1	57	X-36-4	Pin - Cotter	9
23	234037	Ring - Snap	2			CRANKSHAFT GROUP 8	
24	234038	Seal - Oil	1	1	X-42-15	Key - Woodruff	1
25	234039	Shaft - Drive	1	2	X-269-32	Ring - Retaining	1
27	4808103	Housing - Power Take Off	1	3	277009	Gear - Crankshaft	1
29	274101	Pin - Roll	2	4	4801402	Crankshaft	1
30	A-234027	Yoke - Clutch	1			CYLINDER HEAD GROUP 9	
31	274117	Shaft - Yoke	1	1	4813303	Pin - Roll	2
32	A-234026	Lever - Shifting	1	2	270158	Screw - H.C.	18
33	A-234075	Clutch Assembly	1	3	270889	Washer	18
34	234041	Housing - Clutch	1	4	4801502	Head - Cylinder	2
35	234042	Bearing	1	5	4805201	Gasket - Cylinder Head	2
36	234043	Lock - Adjusting	1			DIPSTICK GROUP 10	
37	A-234044	Member - Driven	1	1	271829	Tube - Dipstick	1
38	A-234045	Plate - Pressure	1	2	277357	Dipstick	1
39	234050	Link Connecting	6				
40	234051	Pin - Link (Long)	3				

 ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

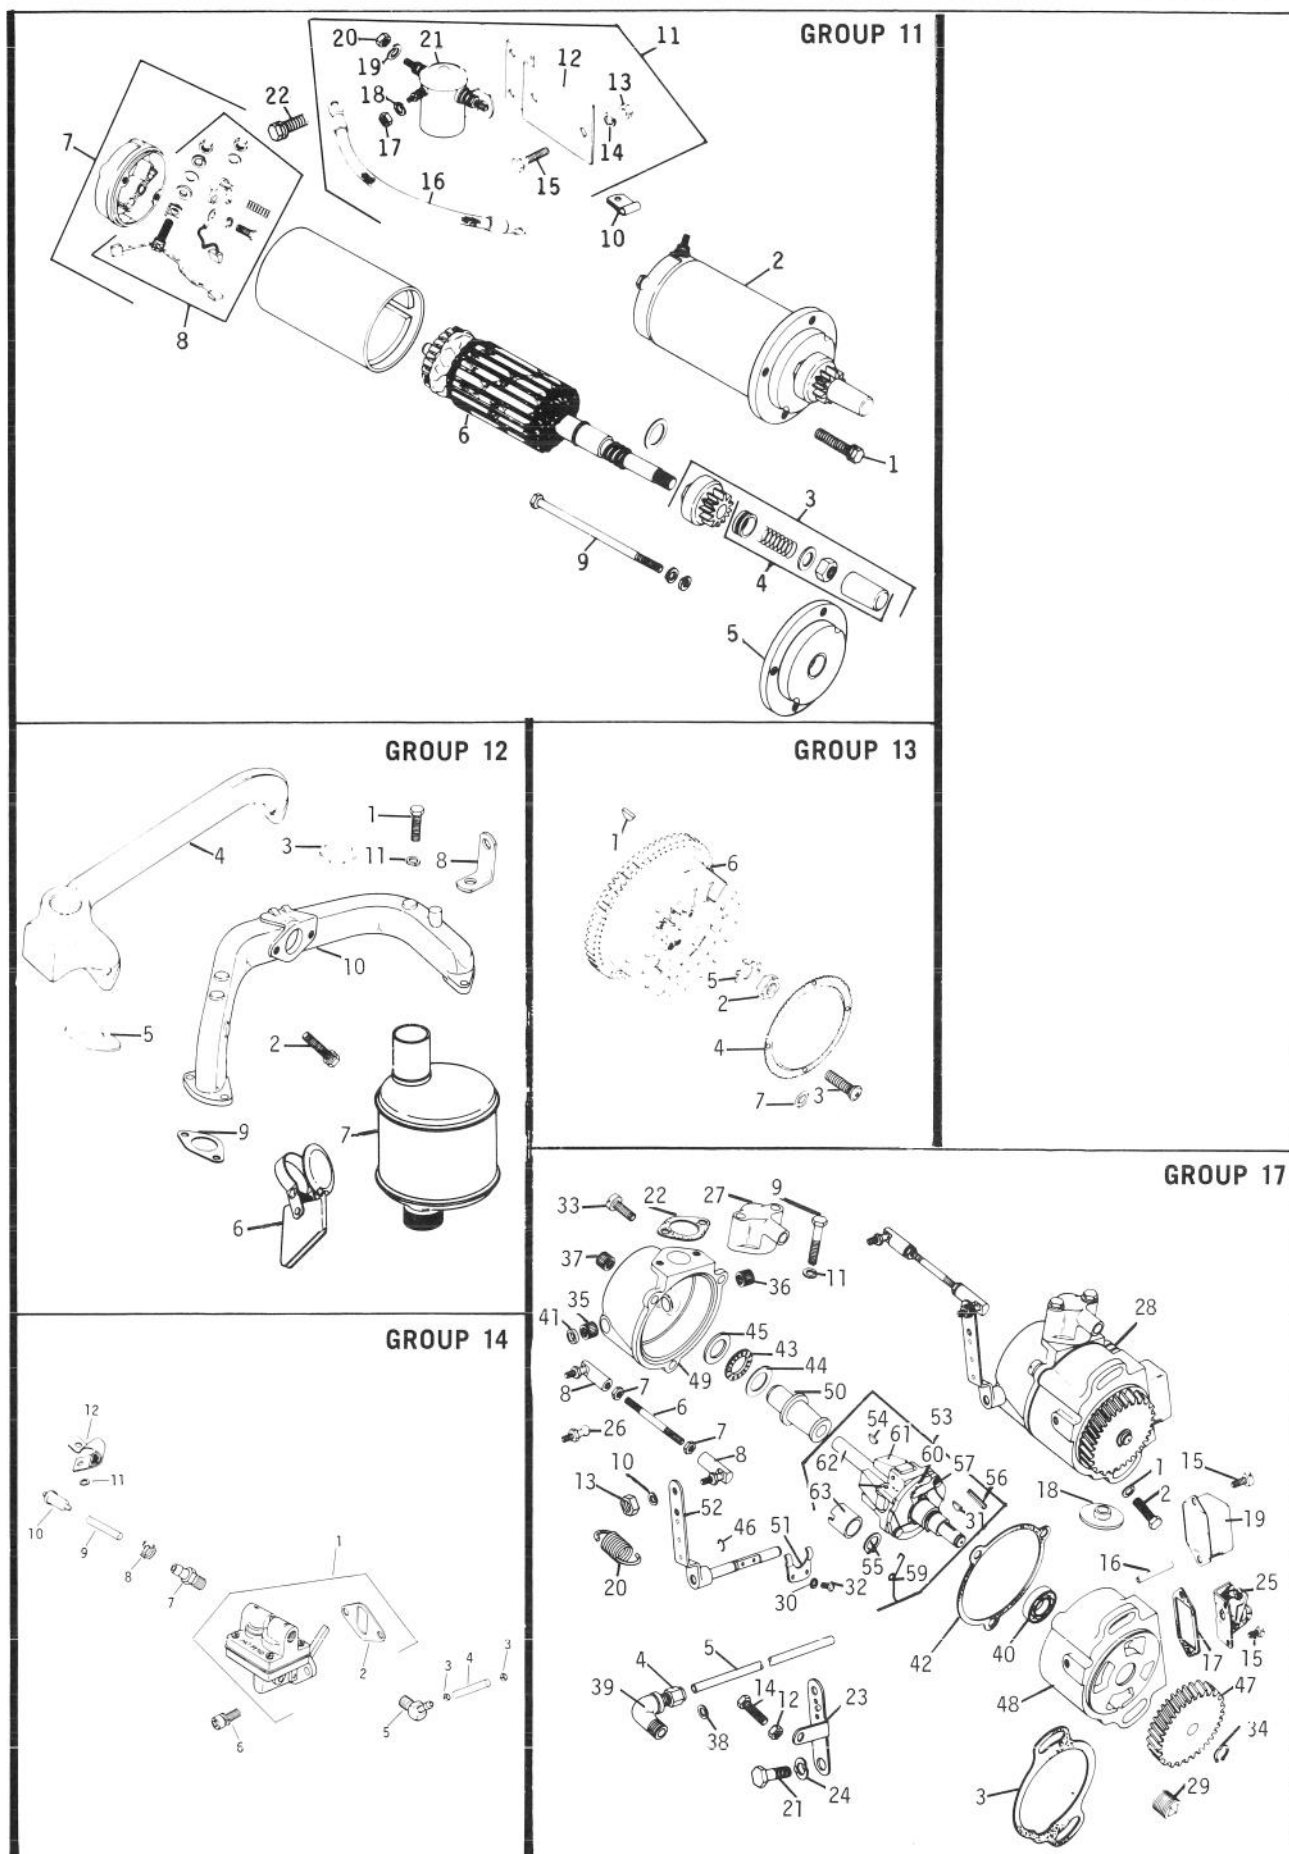


ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

Ref. No.	Part No.	Description	No. Used
		ELECTRIC START GROUP 11	
1	X-154-1	Screw - H.C.	3
2	4809802	Starter Assembly	1
3	4875502	Kit - Drive	1
4	4875513	Kit - Drive Parts	1
5	4822703	Cap - Drive End	1
6	277605	Armature	1
7	4822704	Cap - Commutator End	1
8	4875515	Kit - Brush	1
9	4821101	Thru Bolt	2
10	270154	Clip - Cable	2
11	4821704	Solenoid Assembly	1
12	4812615	Bracket - Solenoid	1
13	X-81-1	Nut - Hex.	2
14	X-20-1	Washer - Lock	2
15	X-5-13	Screw - H.C.	2
*15	X-25-53	Washer - Plain	2
16	4851812	Lead 6" (Solenoid to Start.)	1
17	X-72-4	Nut - Hex	1
18	X-18-2	Washer - Lock	1
19	X-21-1	Washer - Lock	2
20	X-77-2	Nut - Hex.	2
21	4840403	Solenoid	1
22	X-132-6	Screw - Hex. Hd.	2
		EXHAUST-GROUP 12	
1	X-55-15	Screw - H.C.	4
2	X-154-4	Screw - H.C.	4
3	156153	Nut - Lock	1
4	277013	Manifold - Exhaust	1
5	277091	Gasket - Manifold	2
6	277363	Cap - Muffler	1
7	277364	Muffler	1
8	4744502	Strap - Lifting	2
9	4805202	Gasket - Intake	2
10	4816402	Manifold - Intake	1
11	X-21-1	Washer - Lock	4
		FLYWHEEL-GROUP 13	
1	X-45-3	Key - Woodruff	1
2	X-80-1	Nut - Hex.	1
3	4708608	Screw - T.H.	4
4	277470	Screen - Grass	1
5	277595	Nut - Lock	1
6	4802514	Flywheel	1
7	X-25-52	Washer - Plain	4
		FUEL PUMP-GROUP 14	
1	4855902	Pump - Fuel Assembly	1
2	2504105	Gasket - Fuel Pump	1
3	2523701	Clamp - Hose	2
4	4835307	Hose - Fuel	1
5	47155 12	Fitting - Fuel	1
6	4708608	Screw - T.H.	2
7	X-380-1	Connector - Straight	1
8	X-426-9	Clamp - Hose	2
9	2535302	Hose - Fuel	1
10	4505001	Filter - Fuel	1
11	X-25-68	Washer - Plain 1/4	1
12	2515401	Clamp - Filter	1
		GOVERNOR-GROUP 17	
1	X-25-20	Washer - Plain	2


Ref. No.	Part No.	Description	No. Used
2	X-154-3	Screw - H.C.	2
3	277078	Gasket - Governor Housing	1
4	X-343	Connector	1
5	4835305	Line - Oil	1
6	271151	Rod - Throttle	1
7	X-70-3	Nut - Hex.	2
8	4520803	Joint - Ball	1
9	X-5-26	Screw - H.C.	1
10	X-19-1	Washer - Lock	1
11	X-20-1	Washer - Lock	2
12	X-70-2	Nut - Hex.	1
13	X-70-3	Nut - Hex.	1
14	X-97-4	Screw - H.H.M.	1
15	X131-1	Screw	4
16	X-489-8	Rod - Breaker Push	1
17	5204111	Gasket - Breaker Cover	1
18	220074	Diaphragm	1
19	232535	Cover - Breaker	1
20	271547	Spring Governor	1
21	275691	Screw Shoulder	1
22	277073	Gasket	1
23	277080	Lever - Throttle	1
24	277341	Washer - Tension	1
25	4815003	Breaker	1
26	4819401	Ball	1
27	A-277905	Cover	1
28	4831028	Kit - Governor	1
29	X-75-23	Plug - Pipe	1
30	X-18-1	Washer - Lock	2
31	X-42-2	Key - Woodruff	1
32	X-49-1	Screw - R.H.M.	2
33	X-174-2	Screw - F.H.	3
34	X-269-15	Ring - Retainer	1
35	X-293-3	Bearing - Needle	1
36	X-293-2	Bearing - Needle	1
37	4803002	Bearing - Needle	1
38	237022	Washer	1
39	X-324-7	Elbow	1
40	240202	Bearing - Ball	1
41	275055	Seal - Oil	1
42	277099	Gasket - Governor Cover	1
43	277100	Bearing - Roller Thrust	1
44	277101	Race - Thrust Bearing	1
45	277102	Race - Thrust Bearing	1
46	277104	Ring - Retaining	1
47	4804311	Gear - Governor	1
48	4808102	Housing	1
49	4809605	Cover - Governor	1
50	4875501	Kit - Sleeve	1
51	4847102	Yoke - Governor	1
52	4808703	Lever - Governor	1
53	4842008	Shaft - Governor Assy.	1
54	X-42-8	Key - Woodruff	1
55	X-269-4	Ring - Retaining	1
56	X-280-8	Pin - Roll	1
57	230080	Pin - Flyweight	1
59	4808901	Spring	2
60	277114	Flyweight	2
61	277117	Weight - Governor	4
62	277007	Shaft - Governor	1
63	4814904	Breaker - Cam	1

ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

 
GROUP 18

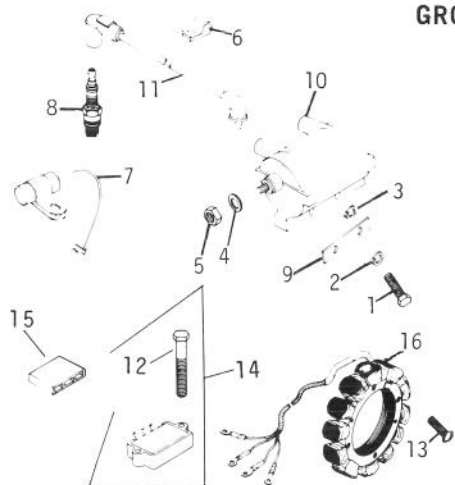


GROUP 22

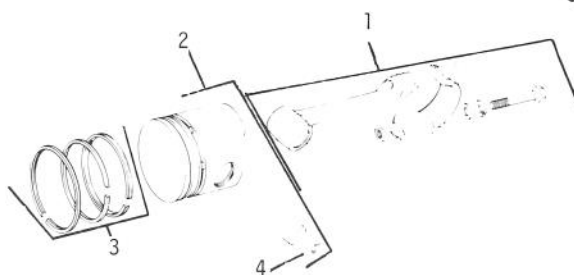 


GROUP 25

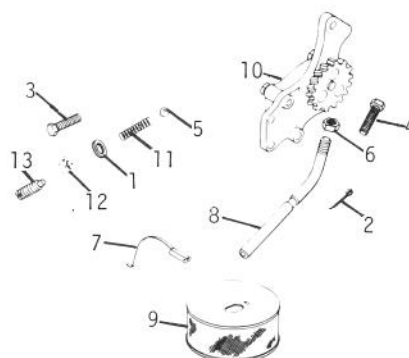 


GROUP 19

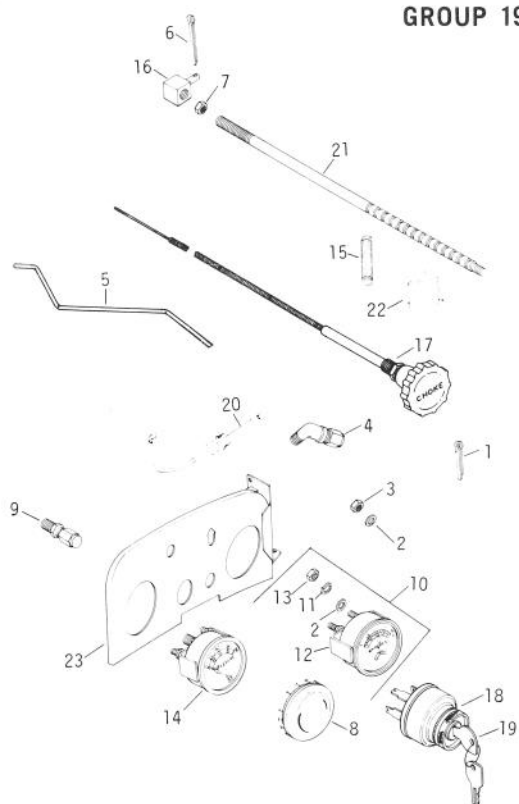 


GROUP 26

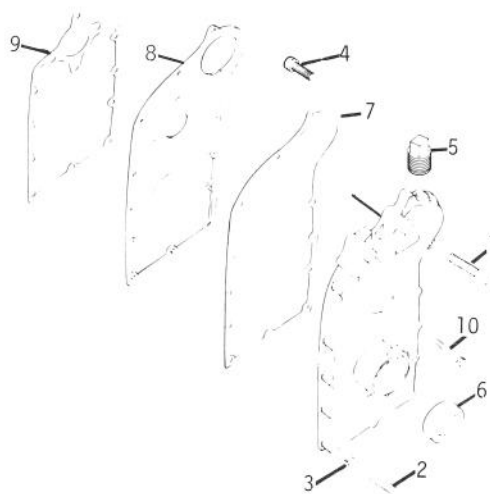 

GROUP 21

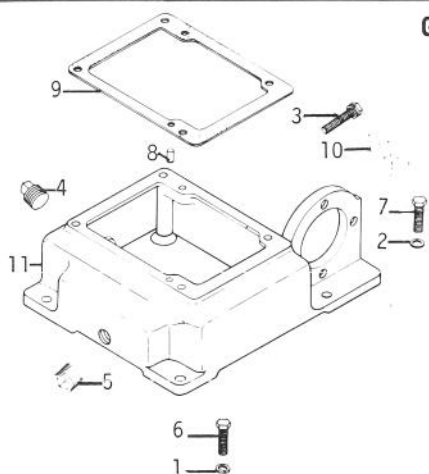 


GROUP 29

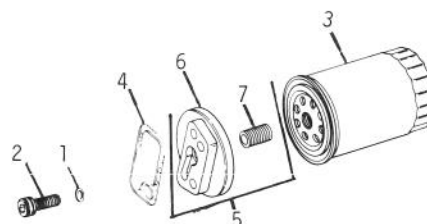 

ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

Ref. No.	Part No.	Description	No. Used
		IGNITION-GROUP 18	
1	X-5-26	Screw - H.C.	2
2	X-19-1	Washer - Lock	2
3	X-20-1	Washer - Lock	2
4	X-25-63	Washer - Plain	1
5	X-70-3	Nut - Hex	2
6	210281	Clip - Cable	2
7	230722	Condenser	1
8	235041-5	Plug - Spark	2
9	271694	Plate - Coil Mounting	2
10	277375	Coil	1
11	4834804	Lead - High Tension	2
12	X-132-5	Screw - H.C.	2
13	X-67-51	Screw - R.H.M.	4
14	2575503	Kit Regulator (Incl. Ref. #12)	1
15	236602	Connector	1
16	237878	Stator	1
	4851809	Lead - Switch to solenoid 2 wire - 14 ga. - 33" insulated barrel eyelet and uninsulated push on tab terminals - 14 ga. - 27" - insulated barrel eyelet terminals.	1
		INSTR. PANEL-GROUP 19	
1	X-36-4	Pin - Cotter	1
2	X-25-7	Washer - Plain	6
3	X-70-8	Nut - Hex.	1
4	X-324-7	Elbow 1/8 N.P.T.F.	1
5	277534	Line - Oil Gauge	1
6	X-36-1	Pin - Cotter	1
7	X-82-5	Nut - Hex.	1
8	X-301-8	Button - Plug	1
9	X-721-1	Connector - Female	1
10	4875518	Kit - Ammeter	1
11	X-19-1	Washer - Lock	4
12	4812609	Bracket - Ammeter	1
13	X-70-8	Nut - Hex.	3
14	270231	Gauge - Oil Pressure	1
15	270409	Spring	1
16	270410	Block - Swivel	1
17	277148	Cable - Choke	1
18	4809901	Switch - Key	1
19	4834001	Key	1
20	4832302	Holder - Fuse (Incl. 4130401 Fuse)	1
21	4842003	Shaft - Governor Control	1
22	4815501	Connector	1
23	277173	Panel - Instrument	1
	2551811	Lead - 14 ga. - 18" uninsulated push on tab - insulated barrel eyelet terminals	1
	4751840	Lead - 14 ga. - 14" uninsulated push on tab terminals	1
	4130401	Fuse	1
		OIL PAN-GROUP 21	
1	X-22-1	Washer - Lock	4

Ref. No.	Part No.	Description	No. Used
2	X-25-44	Washer - Plain	1
3	X-67-62	Screw - Tapping	1
4	X-75-6	Plug - Pipe	1
5	X-75-42	Plug - Pipe	1
6	X-129-11	Screw - H.C.	4
7	X-154-6	Screw - H.C.	1
8	230125-5	Shaft - Governor	2
9	277014	Gasket - Oil Pan	1
10	4812608	Bracket - Starter Support	1
11	4875517	Kit - Oil Pan	1
		PISTON & ROD-GROUP 22	
1	4806716	Rod - Conn. Assy. (Std.)	2
	4806717	Rod - Conn. Assy. (.010)	2
2	4887421	Piston w/Ring Set (Std.)	2
	4887422	Piston w/Ring Set (.003)	2
	4887423	Piston w/Ring Set (.010)	2
	4887424	Piston w/Ring Set (.020)	2
	4887425	Piston w/Ring Set (.030)	2
3	4710805	Ring Set (Std. & .003)	2
	4710806	Ring Set (.010)	2
	4710807	Ring Set (.020)	2
	4710808	Ring set (.030)	2
4	4701801	Retainer	4
		OIL PUMP-GROUP 25	
1	X-25-94	Washer - Plain	1
2	X-36-6	Pin - Cotter	1
3	X-1 54-2	Screw - H.C.	1
4	X-1 54-5	Screw - H.C.	1
5	X-21 2-3	Ball - Steel	1
6	X-629-1	Palnut	1
7	270085	Clip - Oil Tube	1
8	277201	Tube - Oil Inlet	1
9	277202	Strainer - Oil	1
10	4839323	Pump - Oil	1
11	4808903	Spring Relief Valve	1
12	X-101 -6	Nut - Elastic Stop	1
13	277694	Screw - Socket Set	1
		GEAR COVER-GROUP 26	
1	X-6-11	Screw - H.C.	4
2	X-6-22	Screw - H.C.	7
3	X-21-1	Washer - Lock	14
4	X-55-6	Screw - H.C.	1
5	X-75-2	Plug - Pipe	1
6	5203208	Seal - Front Oil	1
7	277020	Gasket - Gear Cover	1
8	277021	Plate - Gear Cover	1
9	277022	Gasket - Gear Cover Plate	1
10	277086	Screw - H.C.	2
11	277493	Cover - Gear	1
		OIL FILTER-GROUP 29	
1	X-25-44	Washer - Plain	2
2	X-55-9	Screw - H.C.	2
3	277233	Filter - Oil	1
4	48041 03	Gasket	1
5	48 18003	Adapter - Filter Assembly	1
6	4802902	Adapter - Oil Filter	1
7	277234	Nipple	1
	4852233	Short Block	1
	4875533	Gasket Set w/Seals	1
	4800402	Gasket Set w/o Seals	1

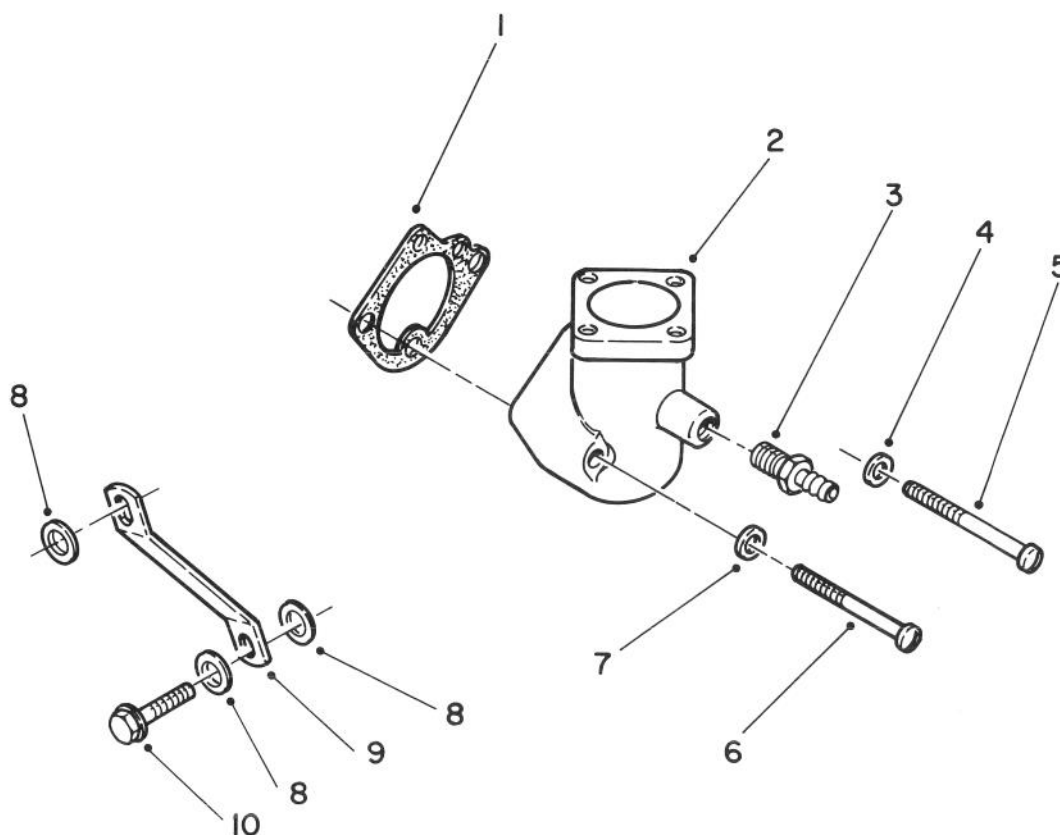 

ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

Ref. No.	Part No.	Description	No. Used
1	25041 06	Gasket - Elbow	1
2	4875402	Kit - Elbow (Incl. Ref. #1 & 3)	1
3	4815504	Connector	1
4	X-22-9	Washer - Lock, Int. Tooth	2
5	X-50-57	Screw - Mach. Rd. Hd.	2

Ref. No.	Part No.	Description	No. Used
6	X-50-37	Screw - Mach. Rd. Hd.	1
7	X-25-79	Washer - Flat	1
8	X-25-53	Washer - Flat	3
9	277116	Brace - Elbow	1
10	X-132-5	Screw - Hex. Flange Hd.	2

[illegible]

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible – minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit – which is not reflected in your manual – see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Rake-O-Vac has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the left side of the frame behind the hitch. In any correspondence concerning the Rake-O-Vac – supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer – supply the following information:

1. Model and serial number of the Rake-O-Vac.
2. Part number – description – and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

INDEX

Description	Page	Description	Page
Engine And Frame Assembly (Model 07073)	1-2	Blower And Throat Assembly (Model 07174)	13-14
Frame Assembly (Model 07174)	3	Drive Mechanism (Model 07174)	15-16
Jackshaft And Lifting Mechanism (Model 07073)	4-5	Gear Box Assembly (Model 07174)	17
Jackshaft And Lifting Mechanism (Model 07174)	6	Jack Assembly (Models 07073 & 07174)	18
Gauge Wheel And Trailing Arm (Model 07073 & 07174)	7-8	Flex Tip Reel Assembly Model No. 07079 (Optional)	19
Cage And Rear Tailgate (Model 07073 & 07174)	9	66" Thatching Attachment Model No. 07178 (Optional)	20
Blower And Throat Assembly (Model 07073)	10-11	66" Street Broom Attachment Model No. 07076 (Optional)	21
Air Cleaner Assembly No. 8-2329	12	Engine Kohler Model No. K582CS Type No. 36366	22-30