



## Rake and Vac™ Blower

Model No. 51573 - 250000001 and up.

### Parts Catalog

---

#### **Ordering Replacement Parts**

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

#### **Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### **Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

#### **Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

| Description                  | Page    | Description                      | Page    |
|------------------------------|---------|----------------------------------|---------|
| Blower/Vacuum Assembly       | ..... 3 | Attachments and Accessories List | ..... 5 |
| Vacuum Tube and Bag Assembly | ..... 4 |                                  |         |


## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

|             |                                |             |                                  |
|-------------|--------------------------------|-------------|----------------------------------|
| AR. ....    | as required                    | INC. ....   | incorporated                     |
| ASM. ....   | assembly                       | LH. ....    | left hand                        |
| BBC. ....   | blade brake clutch             | NI. ....    | nylon insert                     |
| CARR. ....  | carriage                       | NPTF. ....  | national pipe thread fine        |
| DEG. ....   | degrees                        | PFH. ....   | phillips flat head               |
| EXT. ....   | external                       | PPH. ....   | phillips pan head                |
| FH. ....    | flat head                      | PPHTF. .... | phillips pan head thread forming |
| GA. ....    | gauge                          | PRH. ....   | phillips round head              |
| HF. ....    | hex flange                     | PTH. ....   | phillips truss head              |
| HH. ....    | hex head                       | PTO. ....   | power-take-off                   |
| HHF. ....   | hex head flange                | RH. ....    | right hand                       |
| HHFTF. .... | hex head flange thread forming | ROPS. ....  | roll-over-protection-system      |
| HJ. ....    | hex jam                        | SFH. ....   | slotted fillister head           |
| HLH. ....   | hex lag head                   | SHH. ....   | slotted hex head                 |
| HOC. ....   | height-of-cut                  | SHWH. ....  | slotted hex washer head          |
| HSBH. ....  | hex socket button head         | SPH. ....   | slotted pan head                 |
| HSFH. ....  | hex socket flat head           | SQH. ....   | square head                      |
| HSH. ....   | hex socket head                | SRH. ....   | slotted round head               |
| HWH. ....   | hex washer head                | STD. ....   | standard                         |
| HWHTF. .... | hex washer head thread forming | TAP. ....   | self tapping                     |
| HYD. ....   | hydraulic                      | TTH. ....   | torx truss head                  |

## Footnotes


- Not serviced separately

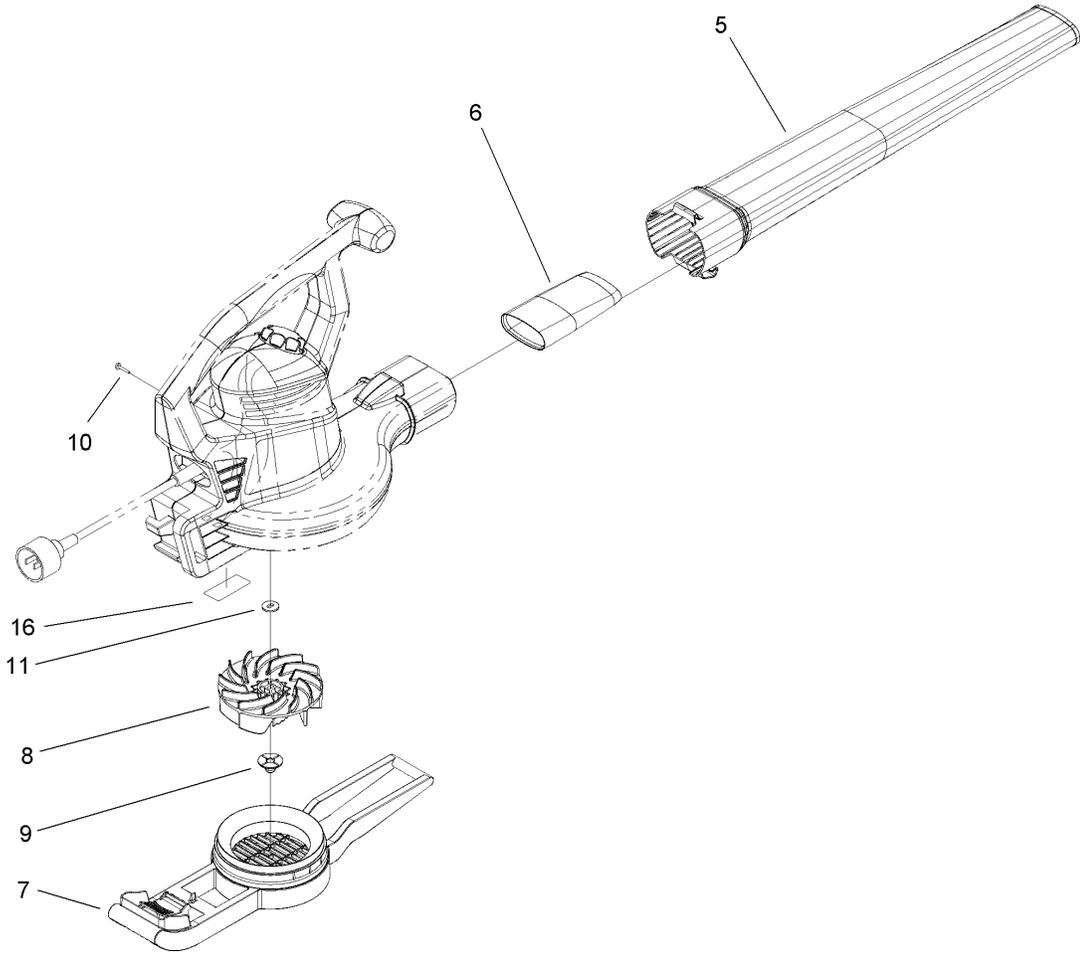

## Blower/Vacuum Assembly

| Ref | Part No. | Qty. | Description     |
|-----|----------|------|-----------------|
| 5   | 100-9072 | 1    | Tube-Blower     |
| 6   | 104-3843 | 1    | Tube-Insert     |
| 7   | 100-9067 | 1    | Cover-Inlet     |
| 8   | 100-9068 | 1    | Impeller-Blower |
| 9   | 100-9075 | 1    | Nut-Impeller    |
| 10  | 94-4496  | 9    | Screw-PPH       |
| 11  | 93-0585  | 1    | Washer          |
| 16  | 110-3108 | 1    | Decal-Caution   |

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|--|--|--|--|

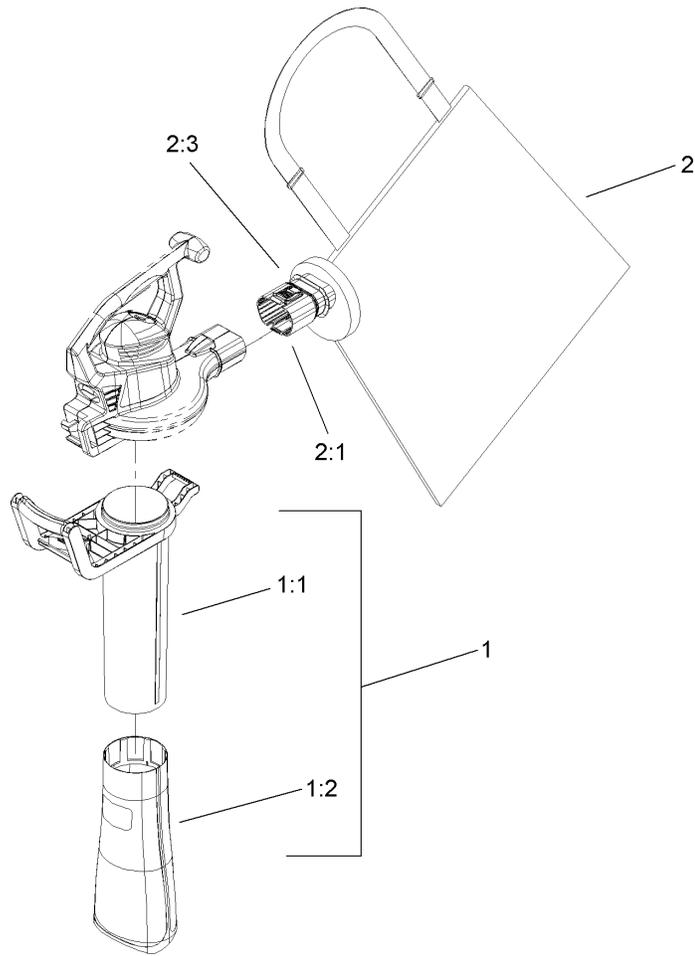

## Vacuum Tube and Bag Assembly

| Ref | Part No. | Qty. | Description     |  |  |  |  |
|-----|----------|------|-----------------|--|--|--|--|
| 1   |          | 1    | Vac Tube ASM    |  |  |  |  |
| 1:1 | 100-9066 | 1    | Tube-Vac, Upper |  |  |  |  |
| 1:2 | 100-9074 | 1    | Tube-Vac, Lower |  |  |  |  |
| 2   | 104-3809 | 1    | Bag ASM         |  |  |  |  |
| 2:1 | 100-9065 | 1    | Collar-Bag      |  |  |  |  |
| 2:3 | 100-9064 | 1    | Tie-Cable       |  |  |  |  |

# Attachments and Accessories

For 51573 - Rake and Vac Blower

Product Name

Model/Part

Blower/Vacuum Replacement Bag ..... 51601

# NOTES

# NOTES

