 




MODEL NO. 22580-0000001 & UP

PARTS CATALOG

21" H.P. MD SIDE DISCHARGE

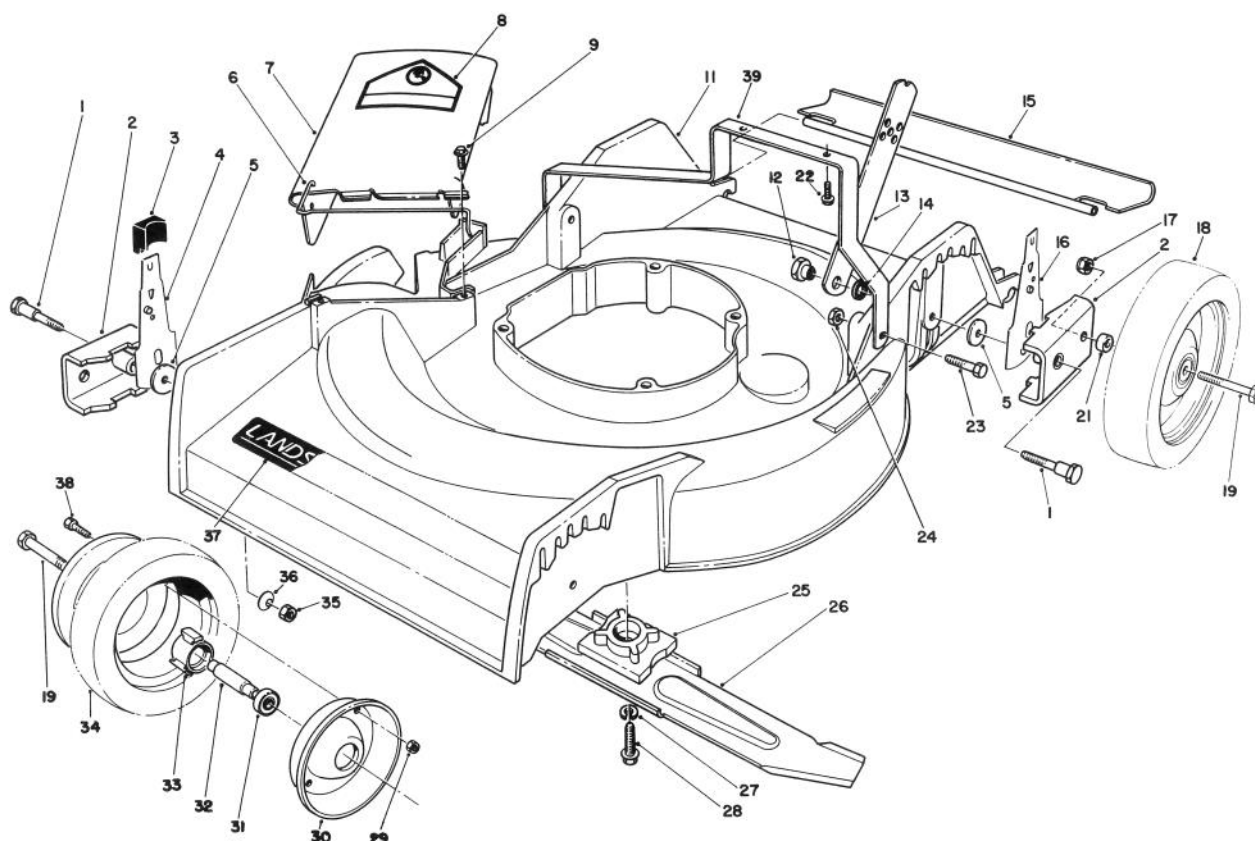


C-0529

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	44-5271	Screw - Pivot	4	*	66-9250	Spring Arm - Rear R.H.	1
2	47-2940	Pivot Arm Assembly	4	17	3296-39	Nut - Lock	4
3	25-7740	Knob - Spring Arm	4	18	53-7720	Wheel & Tire Assembly (Incl. Ref. #29-35 & 39)	4
4	66-9270	Spring - Arm, Front - R.H.	1	19	323-12	Bolt - Wheel	4
*	66-9280	Spring - Arm, Front - L.H.	1	21	52-2480	Spacer - Bolt, Wheel	4
5	33-0390	Washer - Pivot	4	22	46-8091	Screw - Hex Washer Hd.	2
6	20-2640	Hinge - Spring	1	23	322-10	Screw - Cap, Hex Hd.	2
7	13-4049	Deflector Assembly (Incl. Ref. #6 & 8)	1	24	3217-6	Nut	2
8	39-5770	Decal - Danger	1	25	49-7900	Retainer - Blade	1
9	46-6811	Screw/Washer Assembly	2	26	20-2720	Blade	1
11	13-2439	Housing	1	27	3253-22	Washer - Lock	1
12	27-6520	Nut - Shoulder	2	28	26-0671	Screw - Blade	1
13	27-7081	Latch - Handle	2	29	3296-56	Nut - Lock	16
14	3-3287	Spacer - Latch, Handle	2	30	53-7780	Plate - Wheel Half	8
15	66-5990	Shield - Rear	1	31	52-2450	Bearing - Wheel	8
16	66-9260	Spring Arm - Rear L.H.	1	32	52-2440	Spacer - Bearing	4

 *Not Illustrated

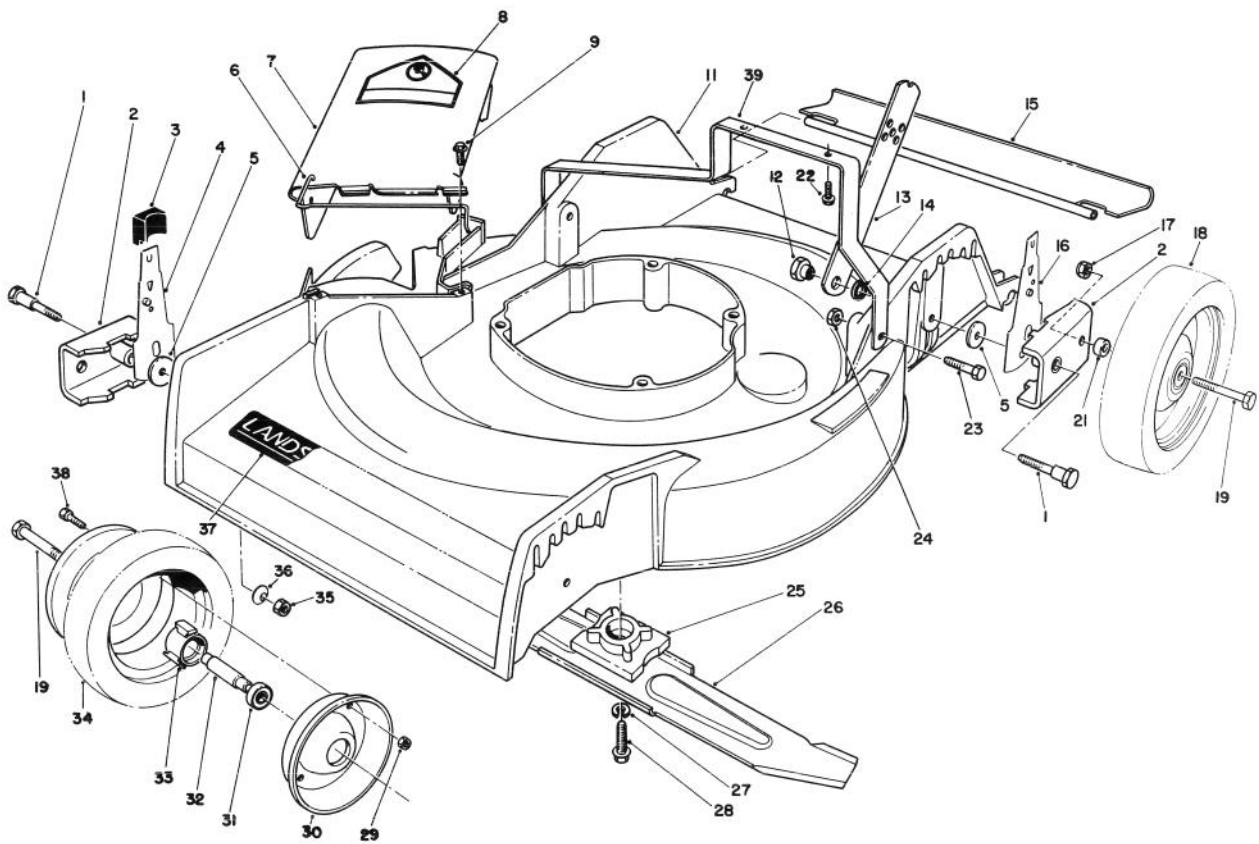


C-0529

HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
33	52-2410	Hub - Support, Bearing	4
34	53-7740	Tire	4
35	3296-29	Nut - Lock	2
36	3290-456	Washer - Belleville	2

Ref. No.	Part No.	Description	No. Used
37	74-2050	Decal - Deck	1
38	321-2	Screw - Cap, Hex. Hd.	16
39	74-2030	Base - Tank	1

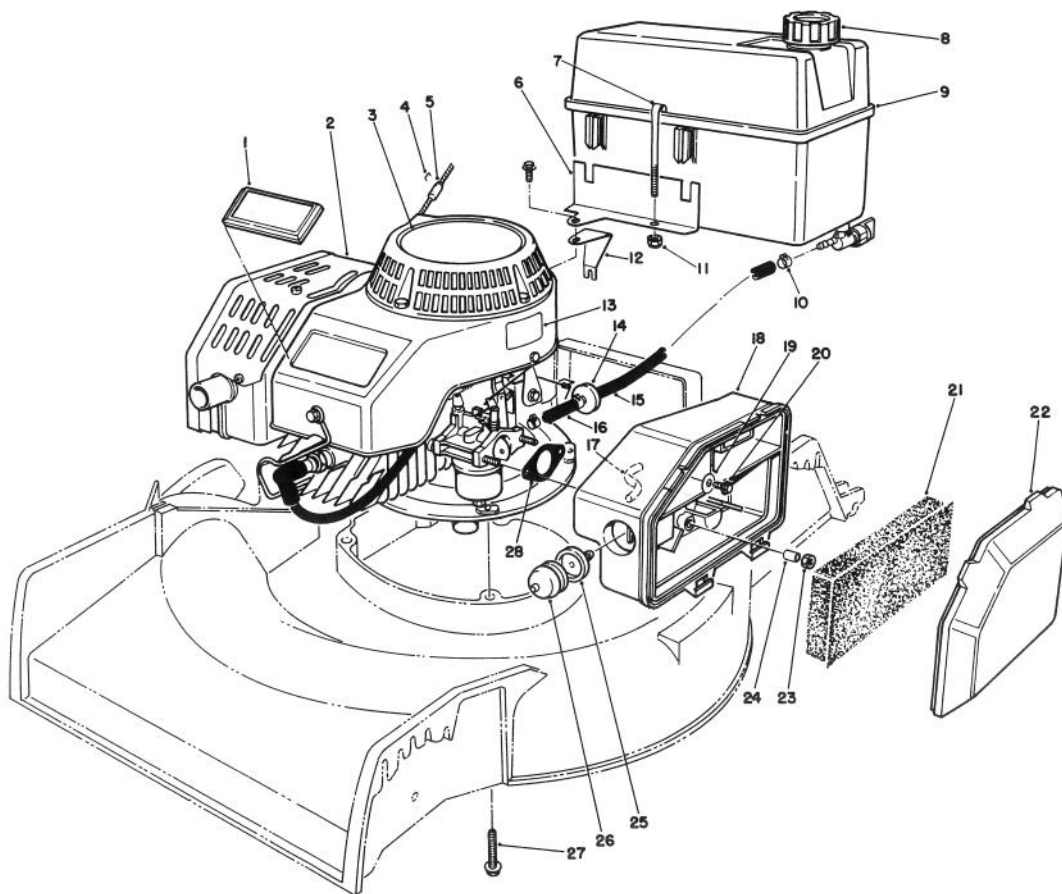 


C-0530

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	46-8290	Plate - Logo, Toro	1	15	51-3214	Line - Fuel	1
2	61-8061	Engine Assy. Complete	1	16	52-3211	Line - Fuel	1
3	77-0040	Decal - Recoil	1	17	44-3172	Hose - Primer	1
4†		Staple	1	18	63-9330	Air Cleaner	1
5	81-3980	Stop - Rope	1	19	3256-16	Washer - Flat	1
6	74-2110	Bracket - Tank	1	20	51-2690	Screw - Hex Washer Hd.	1
7	77-2840	Retainer - Fuel Tank	1	21	63-9380	Element - Foam	1
8	55-3575	Gas Cap Assembly	1	22	63-9340	Cover - Air Cleaner	1
9	71-9010	Fuel Tank Assembly	1	23	50-7180	Nut - Lock	2
10	2412-95	Clamp - Fuel Line	4	24	62-3980	Sleeve	2
11	3296-42	Nut	1	25	44-2750	Body - Primer	1
12	77-0520	Support - Bracket	1	26	66-7460	Bulb - Primer	1
13	62-7600	Decal - Fuel Mix	1	27	66-9302	Screw - Hex Washer Hd.	3
14	56-6360	Filter - Fuel	1	28	81-0090	Gasket	1

 †Obtain Locally

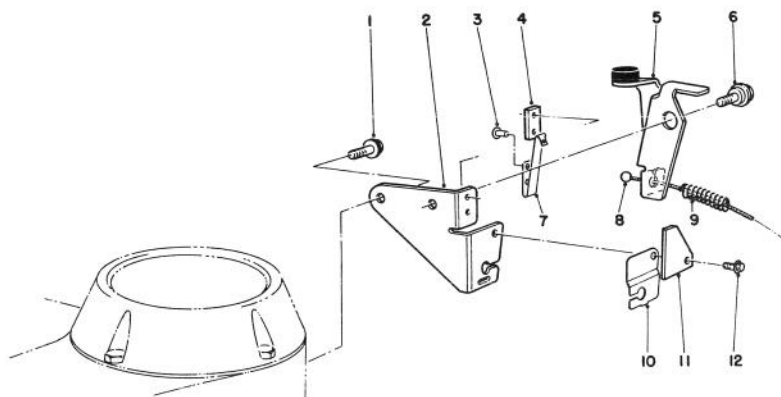


C-0531

BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46-0790	Screw - Self Tapping	
2	53-4620	Plate - Mounting	1
3	3290-459	Rivet	2
4	60-9020	Strap - Insulation	1
5	66-5380	Brake Plate Assembly	1
6	56-6190	Screw - Shoulder, Metric	1
7	60-9010	Strap - Ground	1

Ref. No.	Part No.	Description	No. Used
8	74-1940	Cable - Brake	1
9	66-5370	Spring - Compression	1
10	53-4610	Clamp - Cable	1
11	53-4690	Stop - Strap, Ground	1
12	12-5450	Screw - Self Tapping	1
*	12-4599	Mounting Plate Assembly (Incl. Ref. #2-4 & 7)	1

 *Not Illustrated

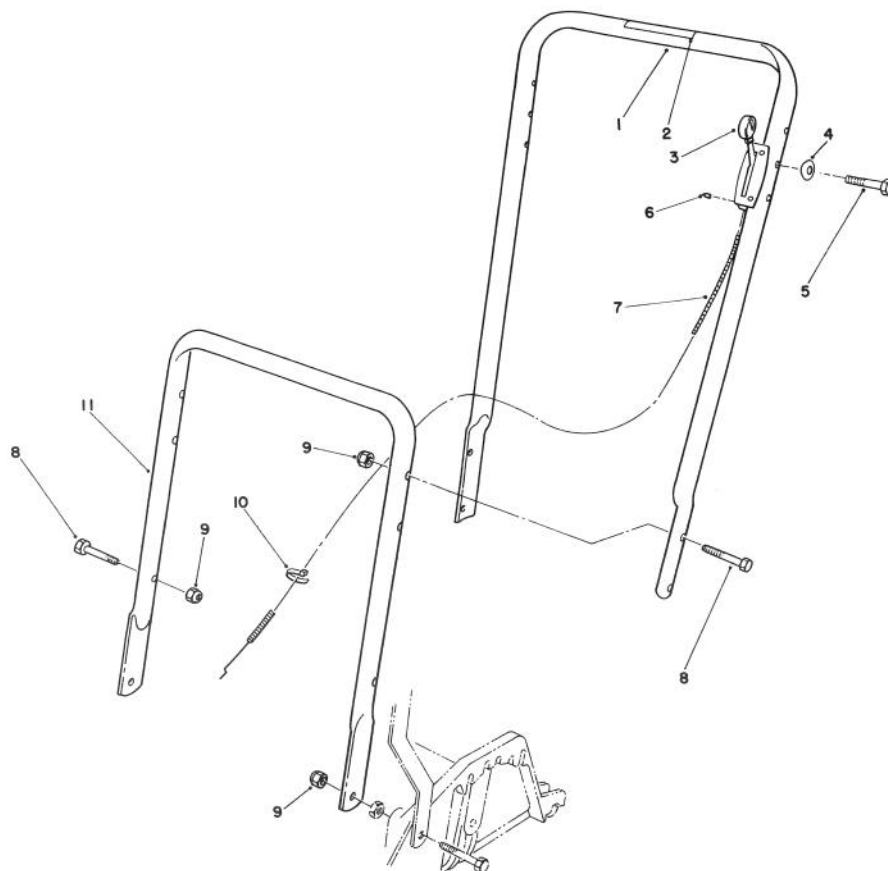


C-0532

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	13-9729	Handle - Upper (Incl. Ref. #2)	1
2	56-6280	Decal - Warning	1
3	70-1051	Bracket - Throttle	1
4	3-7501	Washer - Curved	2
5	321-13	Screw - Cap, Hex Hd.	2
6	32151-86	Ring - Retaining	3

Ref. No.	Part No.	Description	No. Used
7	70-1062	Cable - Throttle	1
8	322-7	Screw - Cap, Hex Hd.	6
9	3296-29	Nut - Lock	8
10	3290-378	Tie - Cable	1
11	52-2370	Handle - Lower	1

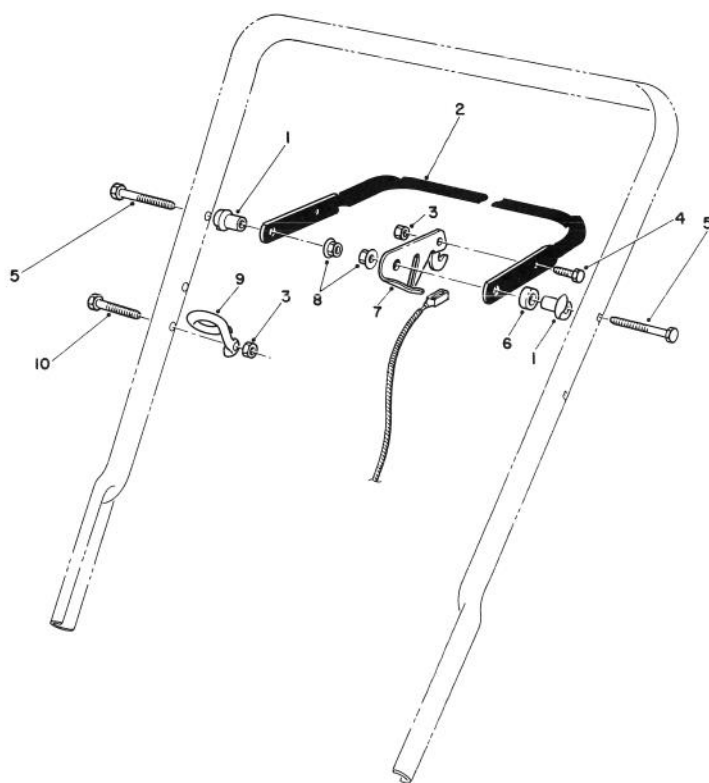 


C-0533

CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	49-1630	Support - Spacer	2
2	61-8270	Bar - Control	1
3	3296-42	Nut - Lock	2
4	321-4	Screw - Cap, Hex Hd.	1
5	322-10	Screw - Handle	2

Ref. No.	Part No.	Description	No. Used
6	256-276	Spacer - Nylon	1
7	66-5350	Lever - Control	1
8	3296-58	Nut - Lock, Flange	2
9	46-8081	Guide - Rope	1
10	321-13	Screw - Cap, Hex Hd.	1

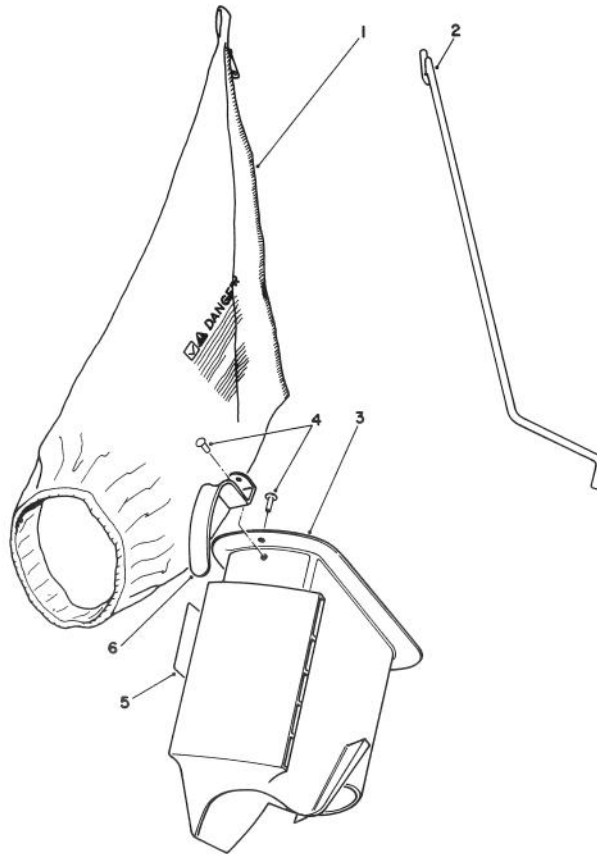 


C-0187

BAGGING KIT NO. 47-6510

Ref. No.	Part No.	Description	No. Used
1	6-0929	Bag - Grass	1
2	47-5830	Rod - Bag	1
3	6-1089	Chute - Grass (Incl. Ref. #4 & 6)	1

Ref. No.	Part No.	Description	No. Used
4	3295-26	Rivet	2
5	36-5230	Decal - Chute, Bag	1
6	20-4650	Handle - Chute	1

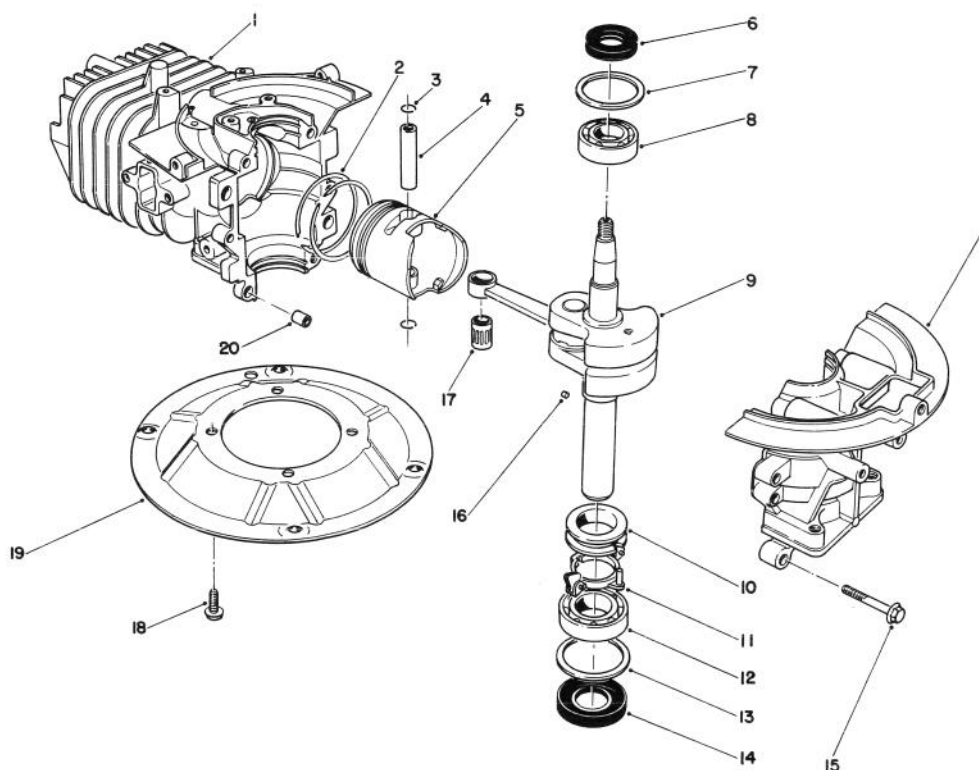 


T-0663

CRANKSHAFT ASSEMBLY (Model No. 47PK9-3)

Ref. No.	Part No.	Description	No. Used
1	81-2800	Crankcase/Cylinder Assy.	1
2	81-0590	Ring Set	1
3	81-0620	Circlip	2
4	81-0600	Pin - Wrist	1
5	81-2140	Piston (58 mm)	1
6	81-0720	Oil Seal - Upper	1
7	81-0710	Thrust Washer - Upper	1
8	81-0690	Bearing - Upper (20 mm)	1
9	81-4680	Crankshaft/Connecting Rod Assembly	1
10	81-0770	Collar - Governor	1
11	81-0750	Bracket - Governor Arm	1

Ref. No.	Part No.	Description	No. Used
12	81-0700	Bearing - Lower (25 mm)	1
13	81-0730	Thrust Washer - Lower	1
14	81-0740	Oil Seal - Lower	1
15	81-0540	Bolt 30mm Lg.	6
16	81-0760	Pin - Crankshaft	1
17	81-0610	Bearing - Wrist Pin	1
18	81-0570	Bolt (20 mm Lg.)	4
19	81-0560	Plate - Mounting	1
20	81-0520	Pin - Crankcase	2
*	12-8099	Short Block Assembly	1

 * Not Illustrated

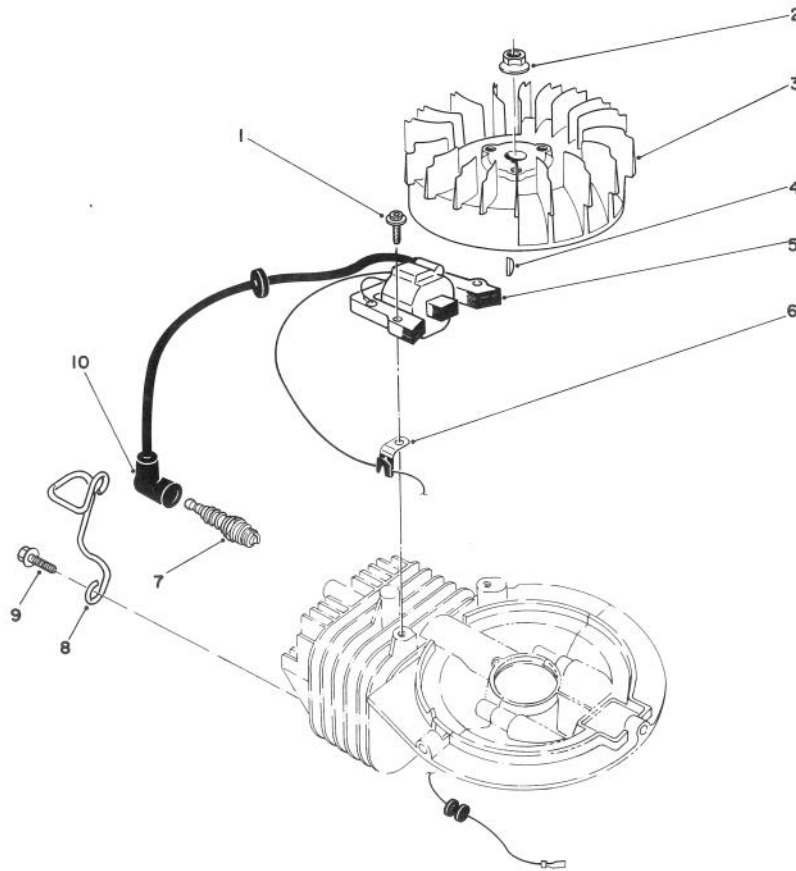


T-0664

IGNITION ASSEMBLY (Model No. 47PK9-3)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	81-5680	Screw - Cap, Hex Hd.	2	7	81-0181	Spark Plug	1
2	81-1330	Nut	1	8	81-2120	Guard - Spark Plug	1
3	81-2810	Flywheel - Magneto	1	9	81-2350	Bolt - Self Tapping (20mm Lg.)	2
4	81-2370	Key - Flywheel	1	10	81-1500	Cover - Spark Plug	1
5	81-2820	Coil/Ignition Assembly	1	*	41-7650	Puller - Flywheel	1
6	81-1480	Clamp	1				

 *Not Illustrated

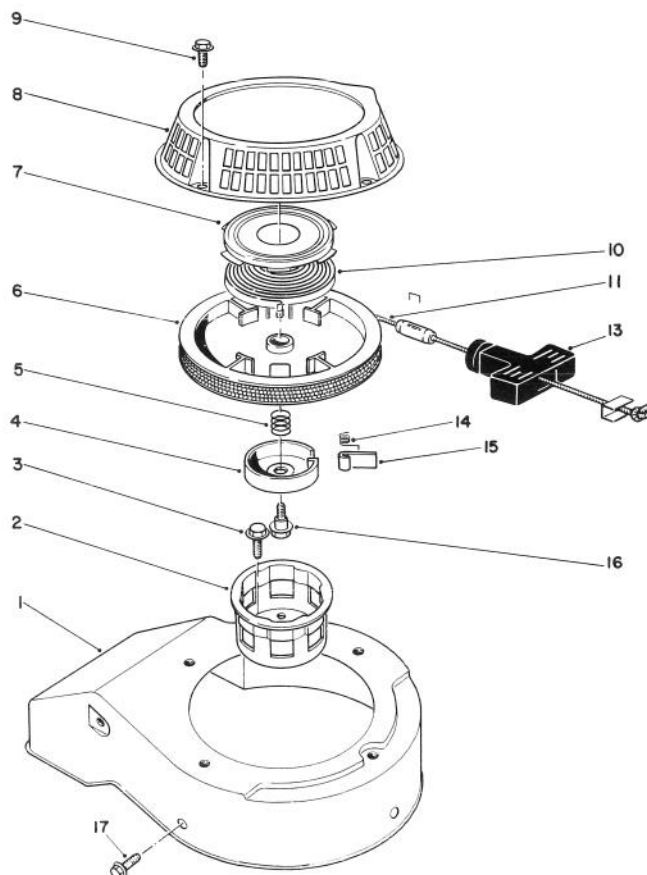


C-0547

RECOIL ASSEMBLY (Model No. 47PK9-3)

Ref. No.	Part No.	Description	No. Used
1	81-2080	Cover - Cooling Fan	1
2	81-2170	Pulley - Starter Cup	1
3	81-1300	Bolt (16 mm Lg.)	3
4	81-1250	Retainer - Dog	1
5	81-1240	Spring - Compression	1
6	81-1210	Reel - Rope Pulley	1
7	81-1640	Retainer - Spring, Recoil	1
8	81-2100	Case - Recoil	1
9	81-1280	Bolt	4
10	81-1200	Spring - Recoil	1
11	81-1270	Rope	1

Ref. No.	Part No.	Description	No. Used
13	81-1630	Handle - Recoil	1
14	81-1220	Spring - Dog	1
15	81-1230	Dog	1
16	81-1260	Bolt - Shoulder	1
17	81-1170	Bolt - Self Tapping (15 mm Lg.)	3
*	81-2030	Starter Assembly (Incl. Ref. #4-16)	1
*	81-2300	Spring & Retainer (Incl. Ref. #7 & 10)	1

 *Not Illustrated

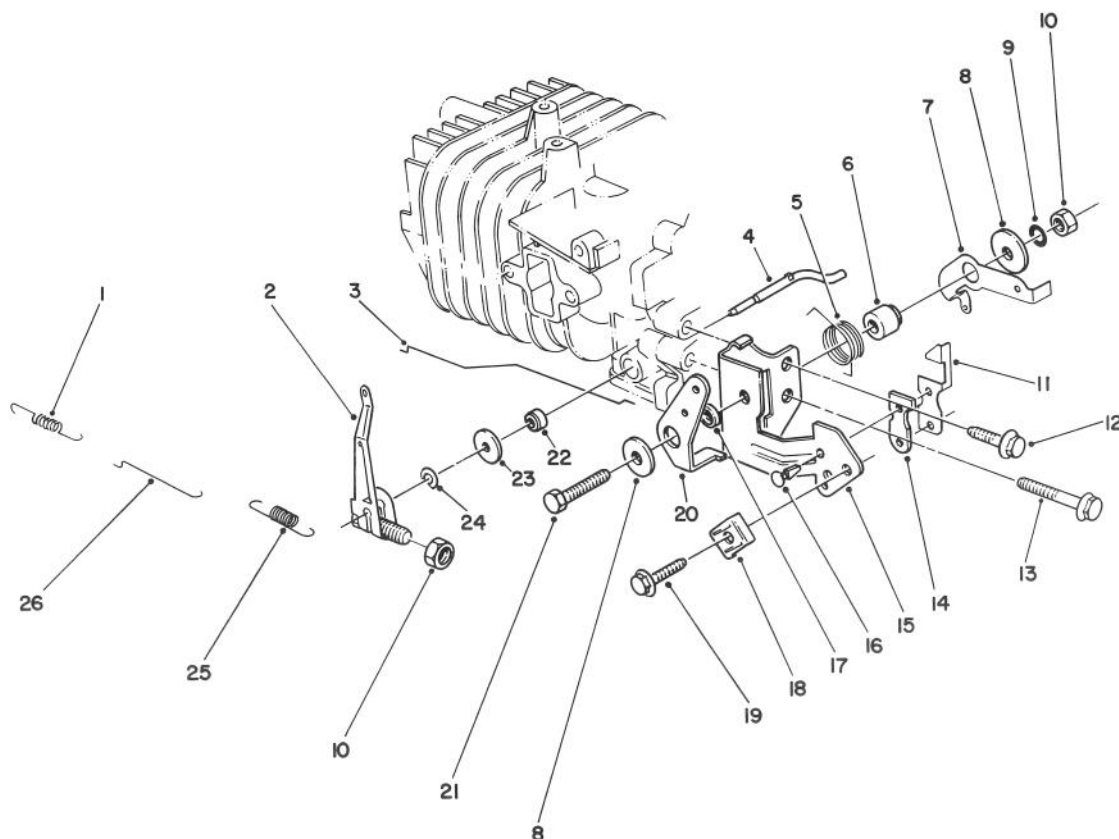


T-0666

GOVERNOR ASSEMBLY (Model No. 47PK9-3)

Ref. No.	Part No.	Description	No. Used
1	81-0920	Spring - Carburetor Rod	1
2	81-2840	Governor Arm/Bolt Assy.	1
3	81-1720	Rod - Choke	1
4	81-0840	Shaft - Governor	1
5	81-2460	Spring - Lever, Choke	1
6	81-1770	Spacer - Lever, Spring	1
7	81-2850	Lever - Spring, Governor	1
8	81-1750	Washer - Lever, Choke	2
9	81-1450	Washer - Lock	1
10	81-0900	Nut	2
11	81-1840	Terminal - Kill Switch	1
12	81-1170	Bolt - Self Tapping (15 mm Lg.)	1
13	81-0540	Bolt	1

Ref. No.	Part No.	Description	No. Used
14	81-1830	Insulator - Kill Switch	1
15	81-2420	Bracket - Throttle Control	1
16	81-4530	Rivet - Kill Switch	2
17	81-2470	Spacer - Lever, Choke	1
18	81-2430	Clamp - Cable	1
19	50-0130	Bolt - Clamp, Cable	1
20	81-1710	Lever - Control, Choke	1
21	81-1730	Bolt - Control, Throttle	1
22	81-0850	Seal - Shaft, Governor	1
23	81-0860	Washer	1
24	81-0870	Ring - Retaining	1
25	81-2830	Spring - Governor	1
26	81-0910	Rod - Carburetor	1

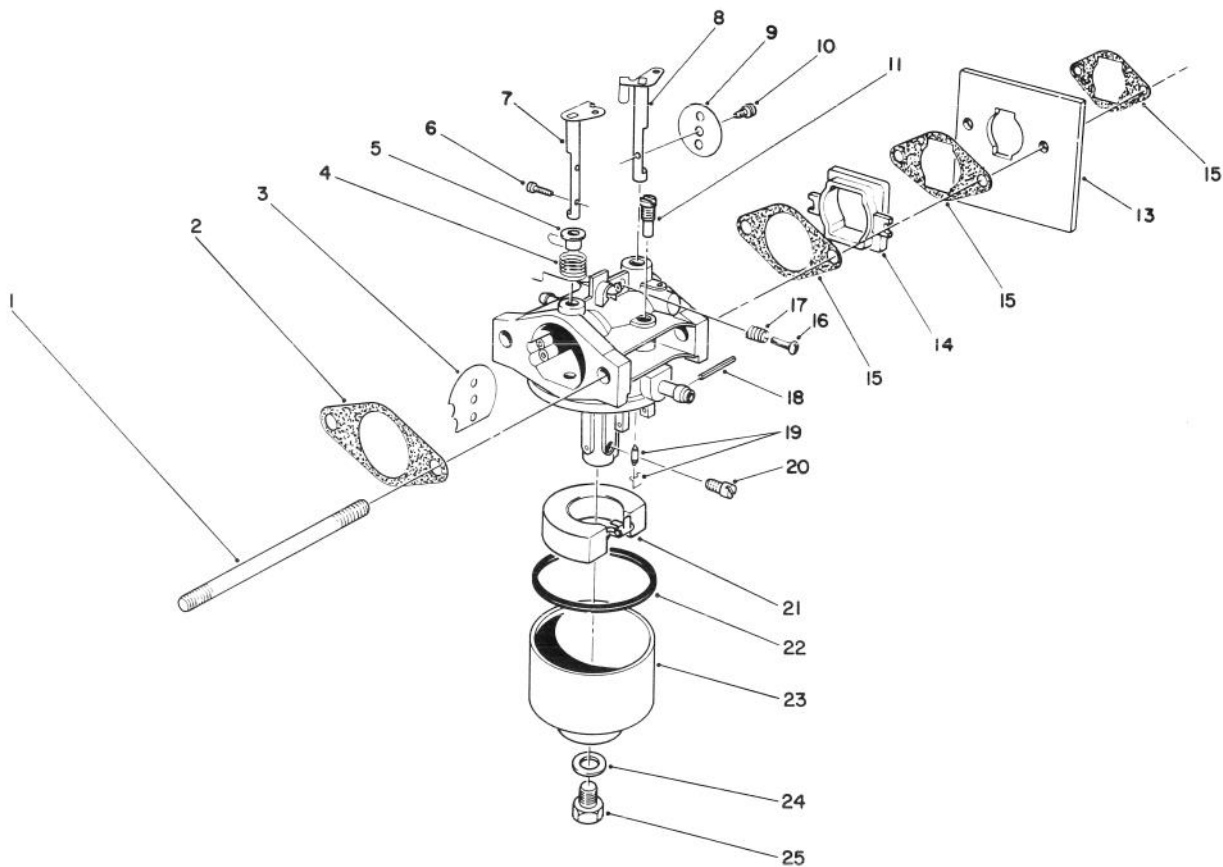 


C-0541

CARBURETOR ASSEMBLY (Model No. 47PK9-3)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	81-2240	Stud Bolt - Carburetor	2	17	81-2580	Spring - Idle Stop	1
2	81-0090	Gasket	1	18	81-5600	Pin - Float	1
3	81-4950	Valve - Choke	1	19	81-4910	Needle Valve/Spring Wire	1
4	81-0230	Spring - Choke	1	20	81-1940	Jet - Main #76.3	1
5	81-0220	Bushing - Valve, Choke	1	*	81-2340	Jet - Main #72.5 High Alt. Above 6,000 Ft. (Opt.)	A/R
6	81-2160	Screw	2	21	81-0970	Float	1
7	81-1950	Shaft - Choke	1	22	81-5720	Gasket - Bowl, Float	1
8	81-0250	Shaft - Throttle	1	23	81-5660	Bowl - Float	1
9	81-0260	Valve - Throttle	1	24	81-1020	Gasket - Bowl, Float	1
10	81-0270	Screw - Valve, Throttle	1	25	81-5670	Screw - Bowl	1
11	81-1030	Jet - Pilot #40	1	*	12-6379	Carburetor Kit (Incl. Ref. #2 15, 19, 22 & 24)	1
13	81-2320	Shield - Carburetor	1	*	81-5750	Carburetor - Complete	1
14	81-2190	Insulator - Carburetor	1				
15	81-0780	Gasket	3				
16	50-0250	Screw - Idle Stop	1				

 *Not Illustrated

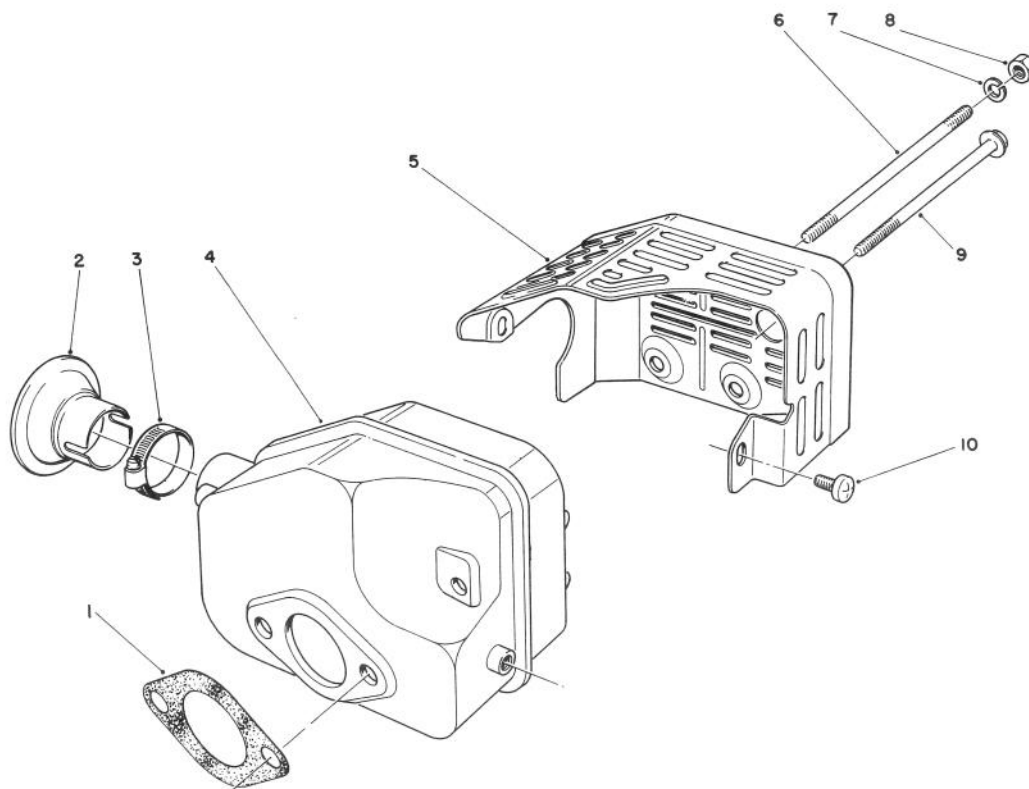

T-0667

MUFFLER ASSEMBLY (Model No. 47PK9-3)

Ref. No.	Part No.	Description	No. Used
1	81-1080	Gasket - Muffler	1
2*	81-0200	Spark Arrester	1
3†		Clamp	1
4	81-5690	Muffler	1
5	81-2450	Cover - Muffler	1

Ref. No.	Part No.	Description	No. Used
6	81-1100	Bolt	2
7	81-1120	Washer - Lock	2
8	81-1110	Nut	2
9	81-1150	Bolt - Self Tapping	1
10	81-1140	Screw - Phillips Hd.	2

*Optional Equipment

†Obtain Locally

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Lawnmower has two identification numbers; a model number and a serial number. The two numbers are stamped on a decal which is located on the rear of the housing. In any correspondence concerning the lawnmower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the lawnmower.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Lawnmower has two identification numbers; a model number and a serial number. The two numbers are stamped on a decal which is located on the rear of the housing. In any correspondence concerning the lawnmower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the lawnmower.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Lawnmower has two identification numbers; a model number and a serial number. The two numbers are stamped on a decal which is located on the rear of the housing. In any correspondence concerning the lawnmower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the lawnmower.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Lawnmower has two identification numbers; a model number and a serial number. The two numbers are stamped on a decal which is located on the rear of the housing. In any correspondence concerning the lawnmower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the lawnmower.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

- ## IDENTIFICATION AND ORDERING
- ### MODEL AND SERIAL NUMBERS
- The Lawnmower has two identification numbers; a model number and a serial number. The two numbers are stamped on a decal which is located on the rear of the housing. In any correspondence concerning the lawnmower, supply model and serial numbers to assure that correct information and replacement parts are obtained.
- To order replacement parts from an Authorized TORO Service Dealer, supply the following information:
1. Model and serial number of the lawnmower.
 2. Part number, description, and the quantity of part(s) desired.
- NOTE:** Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Lawnmower has two identification numbers; a model number and a serial number. The two numbers are stamped on a decal which is located on the rear of the housing. In any correspondence concerning the lawnmower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the lawnmower.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

[illegible][illegible]

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

LTS-912226

Litho in U.S.A.