


MODEL NO. 03770-00001 & UP	PARTS CATALOG
450D CRUISE CONTROL KIT (FOR MODEL NO. 03700 & 03701-00001 & UP)	

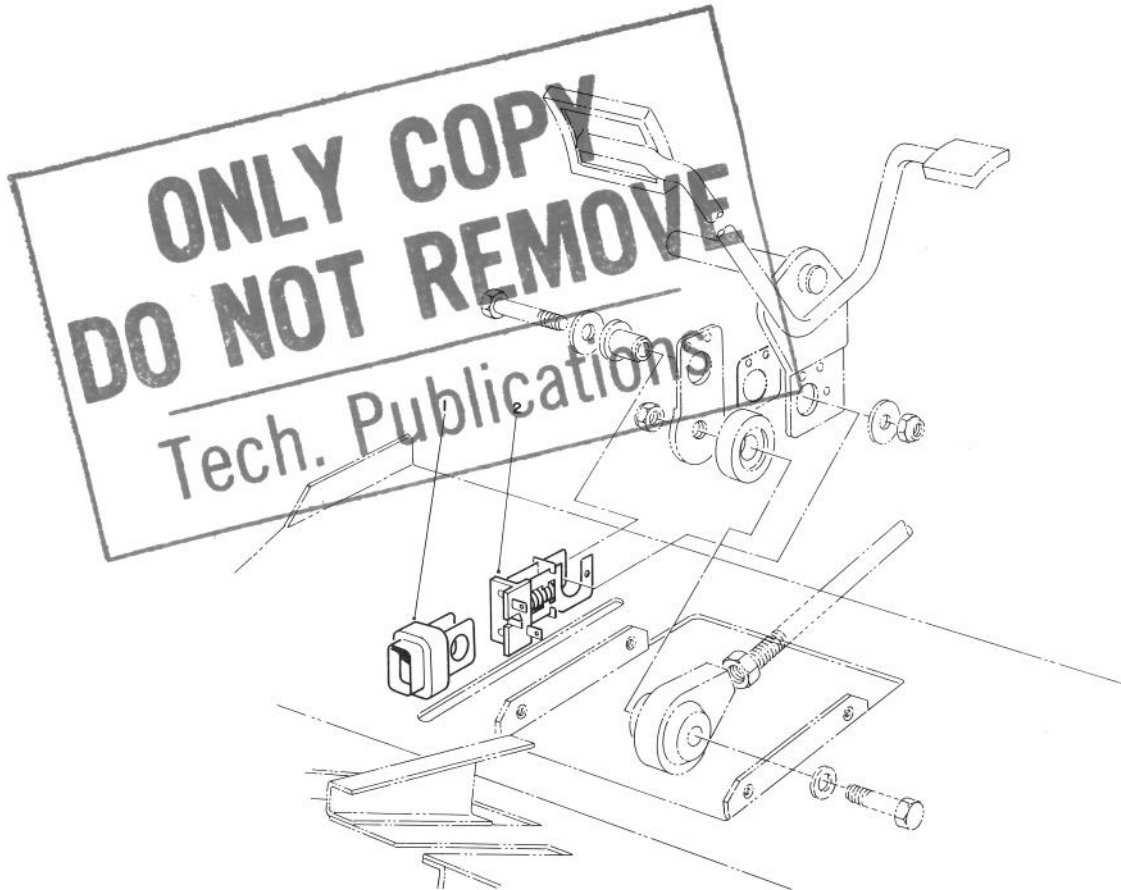


T-1158-90

TRACTION PEDAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-3310	Boot - Switch	1

Ref. No.	Part No.	Description	No. Used
2	76-3480	Switch	1

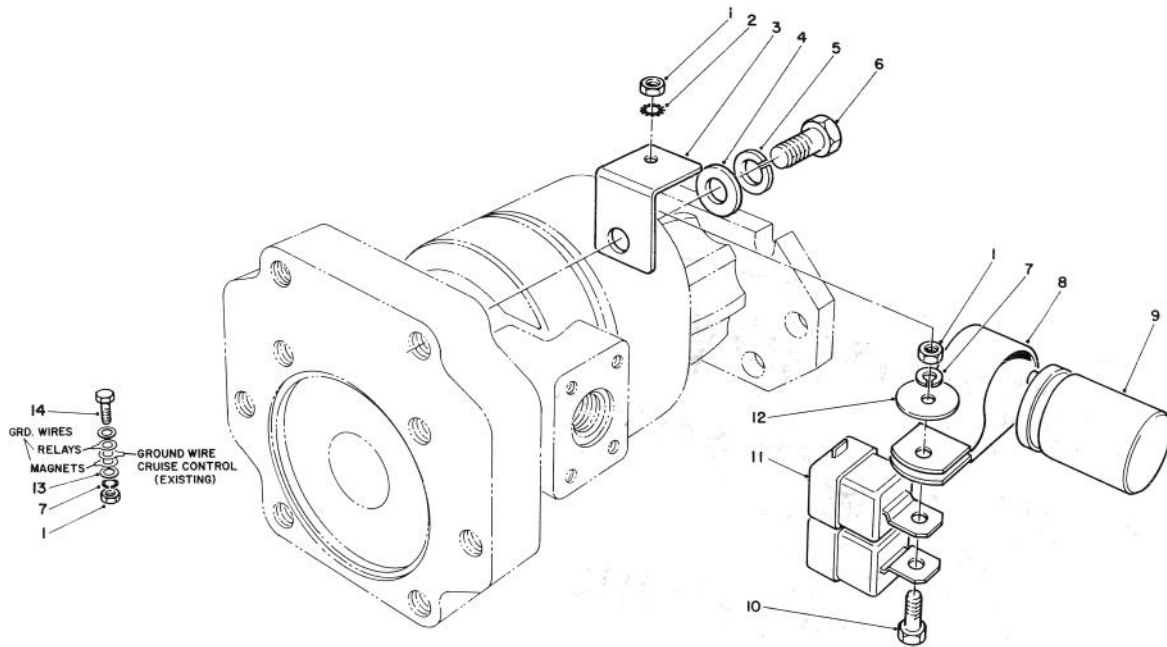


T-1156-90

ELECTRICAL COMPONENTS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3217-5	Nut - Hex	3
2	3255-7	Washer - Lock, Int. Tooth	1
3	76-3320	Bracket	1
4	3256-26	Washer - Flat	1
5	3253-7	Washer - Lock	1
6	325-4	Screw - Cap, Hex. Hd.	1
7	3253-3	Washer - Lock	2
8	2412-74	Clamp - R	1
9	37-2690	Capacitor	1
10	321-6	Screw - Cap, Hex. Hd.	1
11	63-7590	Relay	2
12	3256-58	Washer - Flat	1

Ref. No.	Part No.	Description	No. Used
13	3256-1	Washer - Flat	2
14	321-4	Screw - Cap, Hex. Hd.	1
*	76-3400	Switch (Instrument panel)	1
*	77-4380	Wire - Jumper (Between switch)	1
*	77-4390	Wire - Switch (To power)	1
*	77-4400	Wire - Ground (Indicator light)	1
*	44-2210	Light - Indicator (Instrument panel)	1
*	77-4370	Wiring Harness (Main)	1

*Not Illustrated

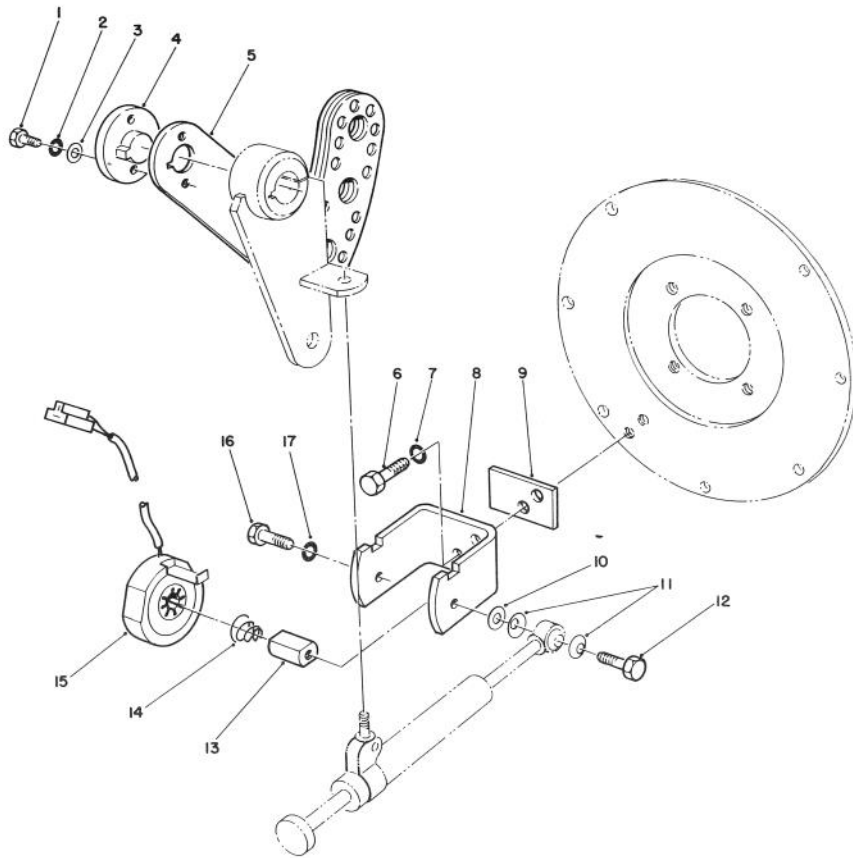

T-1157-90

MAGNET HARDWARE INSTALLATION

Ref. No.	Part No.	Description	No. Used
1	48-7640	Screw - Cap, Hex. Hd.	2
2	3253-3	Washer - Lock	2
3	3256-16	Washer - Flat	2
4	76-3380	Collar	1
5	76-3270	Arm Assembly	1
6	3213-1	Screw - Cap, Hex. Hd.	2
7	3253-7	Washer - Lock	2
8	76-3360	Bracket	1
9†	76-3490	Plate	1

Ref. No.	Part No.	Description	No. Used
10	48-8030	Washer - Flat	1
11	3290-482	Washer - Belleville	2
12	57-6370	Screw - Cap, Hex. Hd.	1
13	76-3390	Pivot	2
14	76-3420	Spring - Compression	2
15	76-3410	Magnet	2
16	48-7730	Screw - Cap, Hex. Hd.	1
17	3253-4	Washer - Lock	1

†Not Used On International Model No. 03701

