



## Groundsmaster® 328-D

Model No. 30626 - 260000001 and up.

## Parts Catalog

### Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

| <b>Description</b>                                             | <b>Page</b> | <b>Description</b>                                              | <b>Page</b> |
|----------------------------------------------------------------|-------------|-----------------------------------------------------------------|-------------|
| Frame Assembly                                                 | ..... 4     | Rear Axle Assembly                                              | ..... 37    |
| Frame Assembly No. 98-3879                                     | ..... 5     | Hydraulic Cylinder Assembly No. 92-7828                         | ..... 39    |
| Control Panel and Battery Assembly                             | ..... 6     | Crankcase Assembly                                              | ..... 40    |
| Brake Pedal Assembly                                           | ..... 8     | Oil Pan Assembly                                                | ..... 41    |
| Traction Pedal Assembly                                        | ..... 9     | Cylinder Head Assembly                                          | ..... 42    |
| Power Steering Assembly                                        | ..... 10    | Gear Case Assembly                                              | ..... 43    |
| Steer Valve and Column Assembly No. 108-6557                   | ..... 11    | Head Cover Assembly                                             | ..... 44    |
| Engine Installation Assembly                                   | ..... 12    | Dipstick and Guide Assembly                                     | ..... 45    |
| Engine Mounting and Component Assembly                         | ..... 13    | Main Bearing Case Assembly                                      | ..... 46    |
| Engine Pulley System Assembly                                  | ..... 15    | Camshaft and Idle Gear Shaft Assembly                           | ..... 47    |
| Fan Support Assembly No. 106-4399                              | ..... 16    | Piston and Crankshaft Assembly                                  | ..... 48    |
| Power-Take-Off and Shaft Assembly                              | ..... 17    | Flywheel Assembly                                               | ..... 49    |
| Power-Take-Off Assembly                                        | ..... 18    | Fuel Camshaft and Governor Shaft Assembly                       | ..... 50    |
| Valve and Cylinder Assembly                                    | ..... 19    | Idle Apparatus Assembly                                         | ..... 51    |
| Hydraulic Cylinder Assembly No. 100-6586 (2-1/2in Bore)        | ..... 20    | Injection Pump Assembly                                         | ..... 52    |
| Hydraulic Cylinder Assembly No. 100-6591 (3in Bore) (Optional) | ..... 21    | Governor Assembly                                               | ..... 53    |
| Valve Assembly No. 106-8071-01                                 | ..... 22    | Speed Control Plate Assembly                                    | ..... 54    |
| Radiator and Hood Assembly                                     | ..... 23    | Nozzle Holder and Glow Plug Assembly                            | ..... 55    |
| Transmission Assembly                                          | ..... 25    | Nozzle Holder Assembly                                          | ..... 56    |
| Transmission Assembly No. 92-8947                              | ..... 26    | Alternator and Pulley Assembly                                  | ..... 57    |
| Neutral Centering Device Assembly                              | ..... 28    | Alternator (Component Part) Assembly                            | ..... 58    |
| Push Arm and Roll-Over Protection System Assembly              | ..... 29    | Starter Assembly                                                | ..... 59    |
| Water and Fuel Filter Assembly                                 | ..... 31    | Starter Assembly No. 98-9705                                    | ..... 60    |
| Water and Fuel Filter Assembly No. 98-9305                     | ..... 32    | Water Flange and Thermostat Assembly                            | ..... 61    |
| Fuel Tank and Front Axle Assembly                              | ..... 33    | Water Pump and Pipe Assembly                                    | ..... 62    |
| Front Axle Assembly No. 86-9600-03                             | ..... 34    | Valve and Rocker Arm Assembly                                   | ..... 63    |
| Front Axle Brake Assembly                                      | ..... 36    | Inlet Manifold Assembly                                         | ..... 64    |
|                                                                |             | Fuel Filter and Pump, Muffler Gasket and Engine Operator Manual | ..... 65    |
|                                                                |             | Gasket Kit Assembly                                             | ..... 66    |
|                                                                |             | Attachments and Accessories List                                | ..... 67    |

# Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

|             |                                |             |                                  |
|-------------|--------------------------------|-------------|----------------------------------|
| AR. ....    | as required                    | HYD. ....   | hydraulic                        |
| ASM. ....   | assembly                       | LH. ....    | left hand                        |
| BBC. ....   | blade brake clutch             | NI. ....    | nylon insert                     |
| CARR. ....  | carriage                       | NPTF. ....  | national pipe thread fine        |
| DEG. ....   | degrees                        | PFH. ....   | phillips flat head               |
| EXT. ....   | external                       | PPH. ....   | phillips pan head                |
| FH. ....    | flat head                      | PPHTF. .... | phillips pan head thread forming |
| GA. ....    | gauge                          | PRH. ....   | phillips round head              |
| HD. ....    | heavy-duty                     | PTH. ....   | phillips truss head              |
| HF. ....    | hex flange                     | PTO. ....   | power-take-off                   |
| HH. ....    | hex head                       | RH. ....    | right hand                       |
| HHF. ....   | hex head flange                | ROPS. ....  | roll-over protection system      |
| HHFTF. .... | hex head flange thread forming | SFH. ....   | slotted fillister head           |
| HJ. ....    | hex jam                        | SHH. ....   | slotted hex head                 |
| HLH. ....   | hex lag head                   | SHWH. ....  | slotted hex washer head          |
| HOC. ....   | height-of-cut                  | SPH. ....   | slotted pan head                 |
| HSBH. ....  | hex socket button head         | SQH. ....   | square head                      |
| HSFH. ....  | hex socket flat head           | SRH. ....   | slotted round head               |
| HSH. ....   | hex socket head                | STD. ....   | standard                         |
| HWH. ....   | hex washer head                | TAP. ....   | self tapping                     |
| HWHTF. .... | hex washer head thread forming | TTH. ....   | torx truss head                  |

 
## Footnotes

- ❶

Not illustrated
- ❷


Not serviced separately
- ❸

Optional Equipment

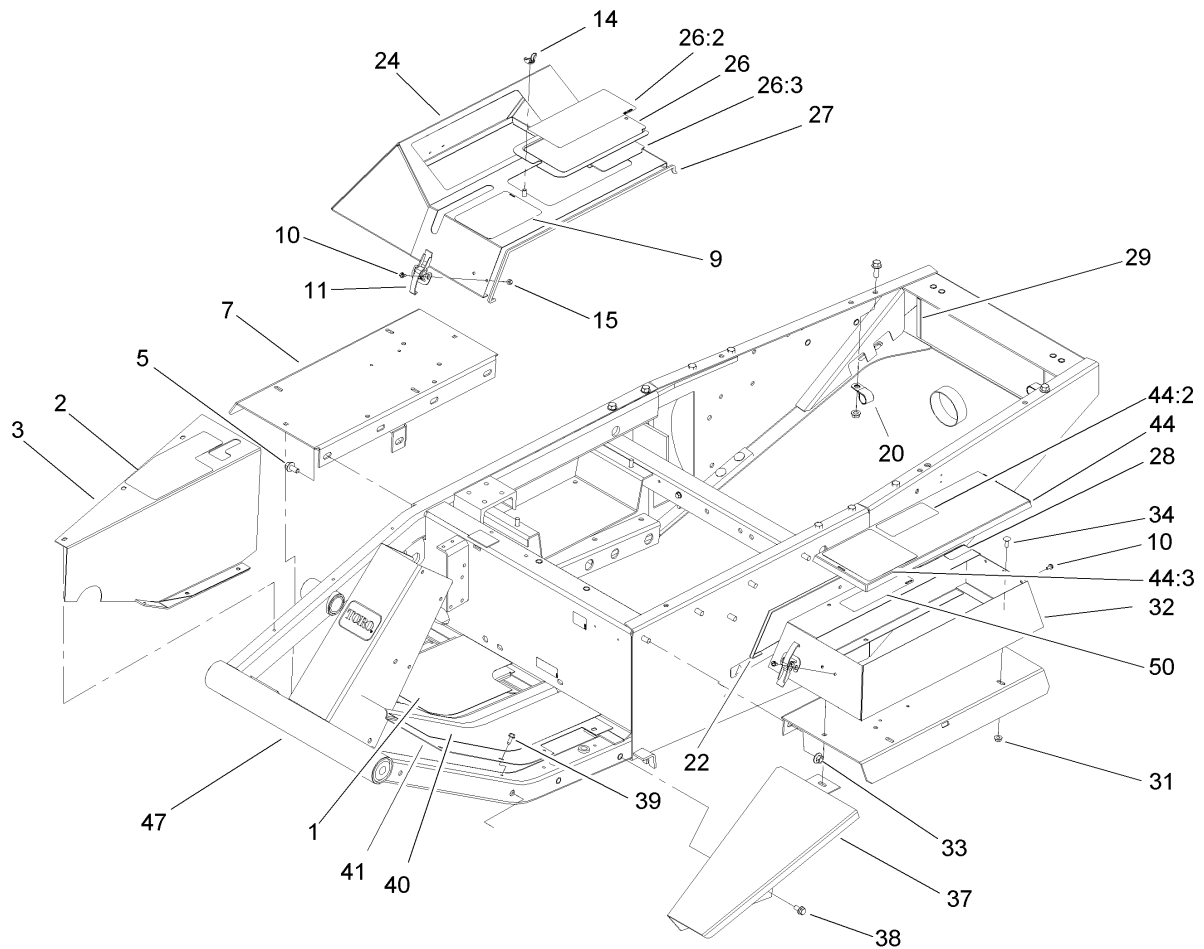


## Frame Assembly
 
| Ref  | Part No.    | Qty. | Description                  | Ref  | Part No.   | Qty. | Description         |
|------|-------------|------|------------------------------|------|------------|------|---------------------|
| 1    | 21-2770     | 1    | Pad-Floor Plate, RH          | 38   | 3234-14    | 2    | Screw-HHF           |
| 2    | 105-7822    | 1    | Decal-Caution                | 39   | 32144-10   | 11   | Screw-HWH           |
| 3    | 21-2660-01  | 1    | Plate-Side                   | 40   | 21-2760    | 1    | Pad-Plate Floor, LH |
| 5    | 3234-12     | 4    | Screw-HHF                    | 41   | 88-0070-01 | 1    | Plate-Floor         |
| 7    | 105-2596-01 | 2    | Fender ASM                   | 44   | 93-3185    | 1    | Cover ASM           |
| 9    | 27-7290     | 1    | Decal-PTO                    | 44:2 | 27-7310    | 1    | Decal-Refueling     |
| 10   | 3290-144    | 9    | Screw-SHWH                   | 44:3 | 72-3700    | 1    | Decal-Danger        |
| 11   | 249-21      | 3    | Clamp-Slotted                | 47   | 98-3879    | 1    | Frame ASM           |
| 14   | 32103-2     | 1    | Nut-Wing                     | 50   | 67-1710    | 1    | Decal-Warning       |
| 15   | 3296-2      | 9    | Nut-Lock                     |      |            |      |                     |
| 20   | 2412-39     | 2    | R-Clamp                      |      |            |      |                     |
| 22   | 37-9650     | 1    | Trim-Box, Tool               |      |            |      |                     |
| 24   | 38-4550-03  | 1    | Cover-Instruments            |      |            |      |                     |
| 26   | 105-2564    | 1    | Battery Cover ASM            |      |            |      |                     |
| 26:2 | 105-2531    | 1    | Decal-Instructions, Starting |      |            |      |                     |
| 26:3 | 92-7801     | 1    | Shield-Cover, Battery        |      |            |      |                     |
| 27   | 39-8020     | 1    | Trim-Cover, Instrument       |      |            |      |                     |
| 28   | 52-1321     | 1    | Decal-Fuel, Diesel           |      |            |      |                     |
| 29   | 43-4300     | 2    | Trim-Frame, Rear             |      |            |      |                     |
| 31   | 32128-33    | 5    | Nut-HF                       |      |            |      |                     |
| 32   | 93-3182-03  | 1    | Box-Tool                     |      |            |      |                     |
| 33   | 3290-357    | 6    | Nut-HHF, Whiz                |      |            |      |                     |
| 34   | 3229-1      | 5    | Screw-CARR                   |      |            |      |                     |
| 37   | 68-8610-01  | 1    | Extension-Fender             |      |            |      |                     |

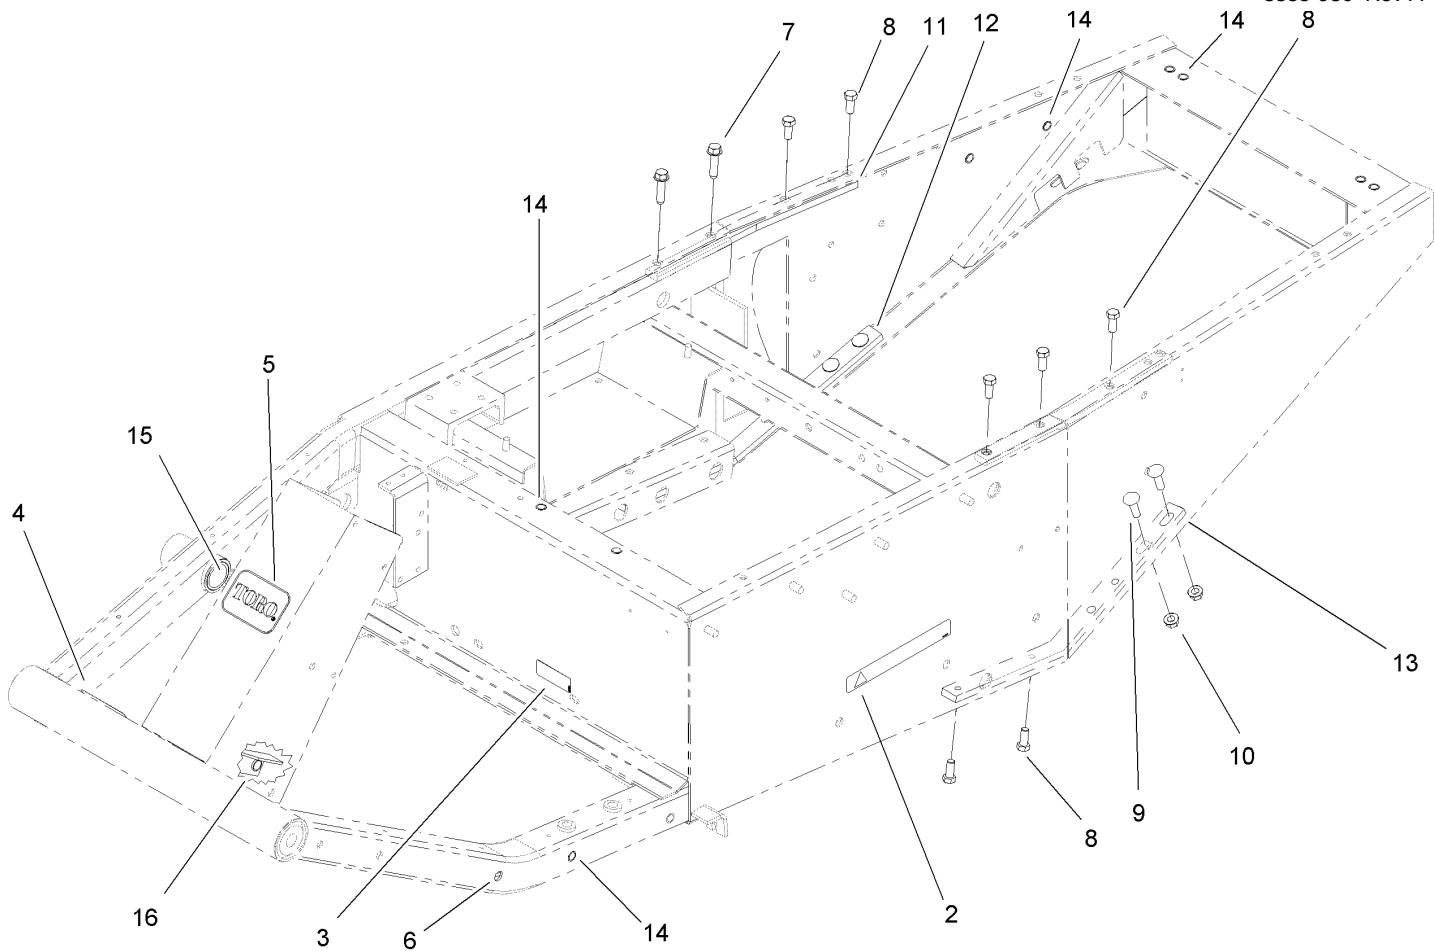

Frame Assembly No. 98-3879

| Ref | Part No.   | Qty. | Description           |  |  |  |  |
|-----|------------|------|-----------------------|--|--|--|--|
| 2   | 93-7830    | 2    | Decal-Torque          |  |  |  |  |
| 3   | 93-6686    | 1    | Decal-Oil, HYD        |  |  |  |  |
| 4   | 93-7836    | 1    | Decal-Pedal, Traction |  |  |  |  |
| 5   | 70-2200    | 1    | Decal                 |  |  |  |  |
| 6   | 32148-9    | 1    | Insert-Nut            |  |  |  |  |
| 7   | 11-0590    | 2    | Screw-HWHTF           |  |  |  |  |
| 8   | 3234-25    | 9    | Screw-HHF             |  |  |  |  |
| 9   | 3231-25    | 4    | Screw-CARR            |  |  |  |  |
| 10  | 32128-21   | 4    | Nut-HF                |  |  |  |  |
| 11  | 98-3866-01 | 2    | Brace-Upper           |  |  |  |  |
| 12  | 98-3865-01 | 1    | Brace-Right, Lower    |  |  |  |  |
| 13  | 98-3864-01 | 1    | Brace-Left, Lower     |  |  |  |  |
| 14  | 3290-472   | 10   | Insert-Threaded       |  |  |  |  |
| 15  | 256-126    | 2    | Bushing               |  |  |  |  |
| 16  | 256-156    | 1    | Bushing-Flange        |  |  |  |  |

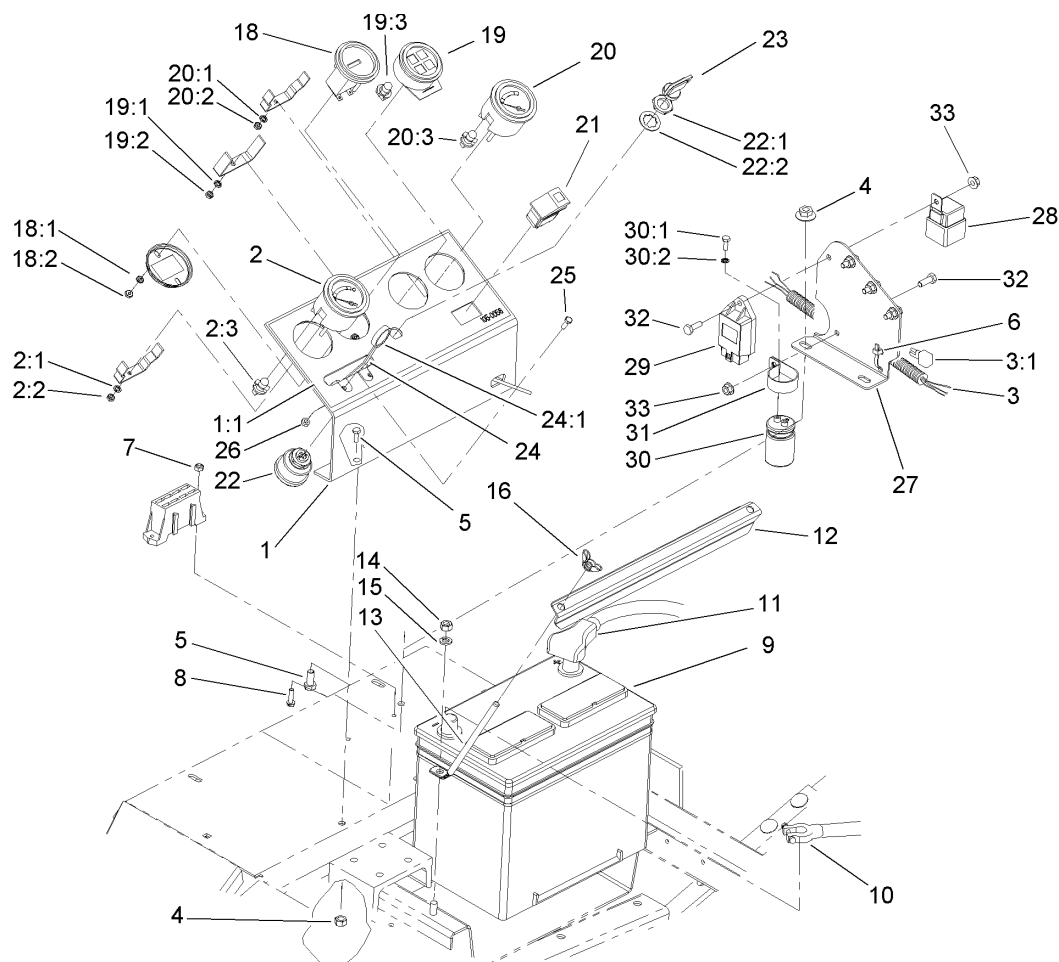 


## Control Panel and Battery Assembly

| Ref  | Part No.   | Qty. | Description             |
|------|------------|------|-------------------------|
| 1    | 105-2917   | 1    | Instrument Panel ASM    |
| 1:1  | 105-0056   | 1    | Decal-Panel, Instrument |
| 2    | 98-9339    | 1    | Gauge-Fuel              |
| 2:1  | 3254-1     | 3    | Washer-Lock, Int        |
| 2:2  | 3217-27    | 3    | Nut-Hex                 |
| 2:3  | 105-9265   | 1    | Bulb And Lamp ASM       |
| 3    | 104-4065   | 1    | Harness-Wire, Main      |
| 3:1  | 100-4918   | 2    | Diode                   |
| 4    | 32128-30   | 4    | Nut                     |
| 5    | 322-3      | 4    | Screw-HH                |
| 6    | 3290-379   | 2    | Tie-Cable               |
| 7    | 3296-2     | 2    | Nut-Lock                |
| 8    | 32105-13   | 2    | Screw-SHH               |
| 9    | 106-5190   | 1    | Battery                 |
| 10   | 104-9497   | 1    | Cable-Battery, Negative |
| 11   | 95-8853    | 1    | Cable-Battery, Positive |
| 12   | 24-6420-03 | 1    | Holddown-Battery        |
| 13   | 24-6390    | 2    | Stud-Holddown, Battery  |
| 14   | 3217-6     | 2    | Nut-Hex                 |
| 15   | 3253-4     | 2    | Washer-Lock             |
| 16   | 32103-2    | 2    | Nut-Wing                |
| 18   | 66-2950    | 1    | Gauge-Hourmeter         |
| 18:1 | 3255-20    | 2    | Washer-Lock             |
| 18:2 | 3217-25    | 2    | Nut-Hex                 |

| Ref  | Part No.    | Qty. | Description       |
|------|-------------|------|-------------------|
| 19   | 98-9306     | 1    | Light-Warning     |
| 19:1 | 3254-1      | 1    | Washer-Lock, Int  |
| 19:2 | 3217-27     | 1    | Nut-Hex           |
| 19:3 | 105-9264    | 4    | Bulb And Lamp ASM |
| 20   | 98-9308     | 1    | Gauge-Temperature |
| 20:1 | 3254-1      | 3    | Washer-Lock, Int  |
| 20:2 | 3217-27     | 3    | Nut-Hex           |
| 20:3 | 105-9265    | 1    | Bulb And Lamp ASM |
| 21   | 100-8072    | 1    | Switch            |
| 22   | 104-2541    | 1    | Switch-Key        |
| 22:1 | 218-461     | 1    | Nut-HH            |
| 22:2 | 3254-5      | 1    | Washer-Tooth      |
| 23   | 63-8360     | 1    | Key-Ignition      |
| 24   | 43-3990     | 1    | Control-Throttle  |
| 24:1 | 233-35      | 1    | Knob              |
| 25   | 3290-134    | 2    | Screw             |
| 26   | 3296-12     | 2    | Nut-Lock          |
| 27   | 105-0002-01 | 1    | Bracket-Relay     |
| 28   | 70-1480     | 4    | Relay             |
| 29   | 98-7611     | 1    | Controller-Glow   |
| 30   | 37-2690     | 1    | Capacitor         |
| 30:1 | 3252-18     | 2    | Screw             |
| 30:2 | 3254-1      | 2    | Washer-Lock, Int  |
| 31   | 2412-74     | 1    | R-Clamp           |

 
7

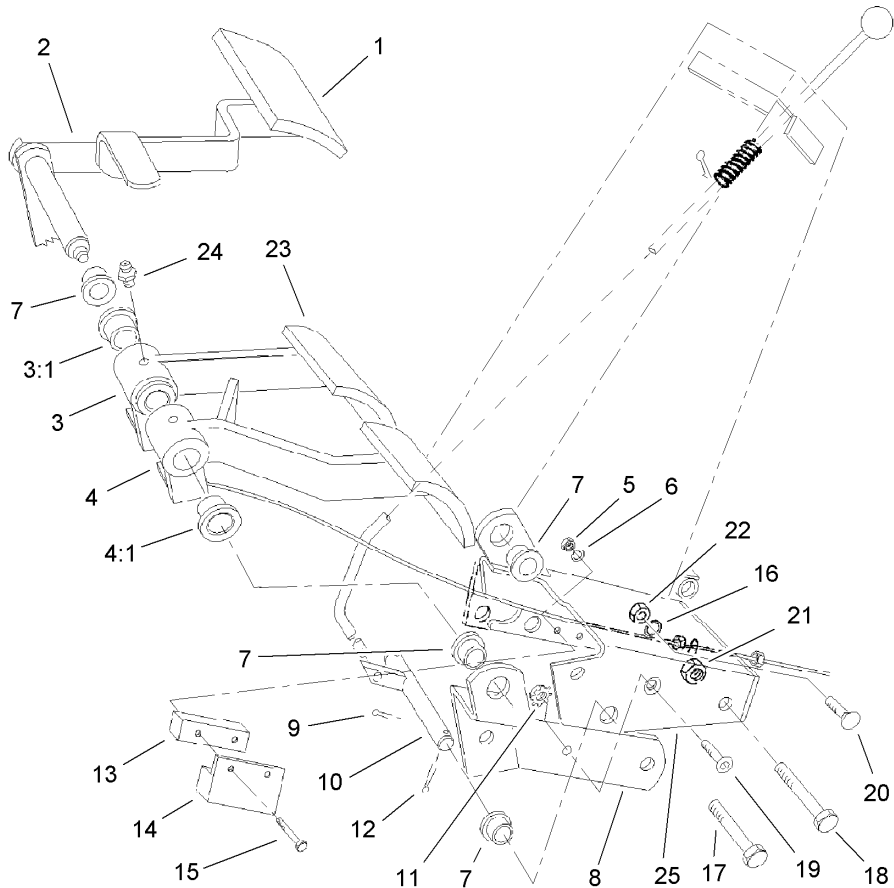

Brake Pedal Assembly

| Ref | Part No.   | Qty. | Description             |
|-----|------------|------|-------------------------|
| 1   | 93-8742    | 1    | Footpad-Brake           |
| 2   | 27-8550-01 | 1    | Parking Brake Pedal ASM |
| 3   | 27-7510    | 1    | RH Brake Pedal ASM      |
| 3:1 | 256-10     | 2    | Bushing-Flange          |
| 4   | 27-7490    | 1    | LH Brake Pedal ASM      |
| 4:1 | 256-10     | 2    | Bushing-Flange          |
| 5   | 3296-2     | 2    | Nut-Lock                |
| 6   | 3256-51    | 4    | Washer-Flat             |
| 7   | 256-156    | 4    | Bushing-Flange          |
| 8   | 27-9270-01 | 1    | Mount-Brake             |
| 9   | 3272-5     | 2    | Pin-Cotter              |
| 10  | 105-0065   | 1    | Parking Brake Shaft ASM |
| 11  | 32149-2    | 1    | Nut-Keps                |
| 12  | 3272-6     | 2    | Pin-Cotter              |
| 13  | 105-0064   | 1    | Spacer-Switch           |
| 14  | 100-1270   | 1    | Switch-Proximity        |
| 15  | 3290-360   | 2    | Screw-HH                |
| 16  | 3253-21    | 2    | Washer-Lock             |
| 17  | 323-13     | 1    | Screw-HH                |
| 18  | 323-14     | 1    | Screw-HH                |
| 19  | 3274-47    | 1    | Screw-HSFH              |
| 20  | 3231-21    | 2    | Screw-CARR              |
| 21  | 32153-2    | 2    | Nut-Lock, Side          |
| 22  | 3217-7     | 2    | Nut-Hex                 |


| Ref | Part No.    | Qty. | Description           |
|-----|-------------|------|-----------------------|
| 23  | 93-8743     | 2    | Footpad-Turn          |
| 24  | 302-5       | 2    | Fitting-Grease        |
| 25  | 105-0066-01 | 1    | Brake Pedal Mount ASM |

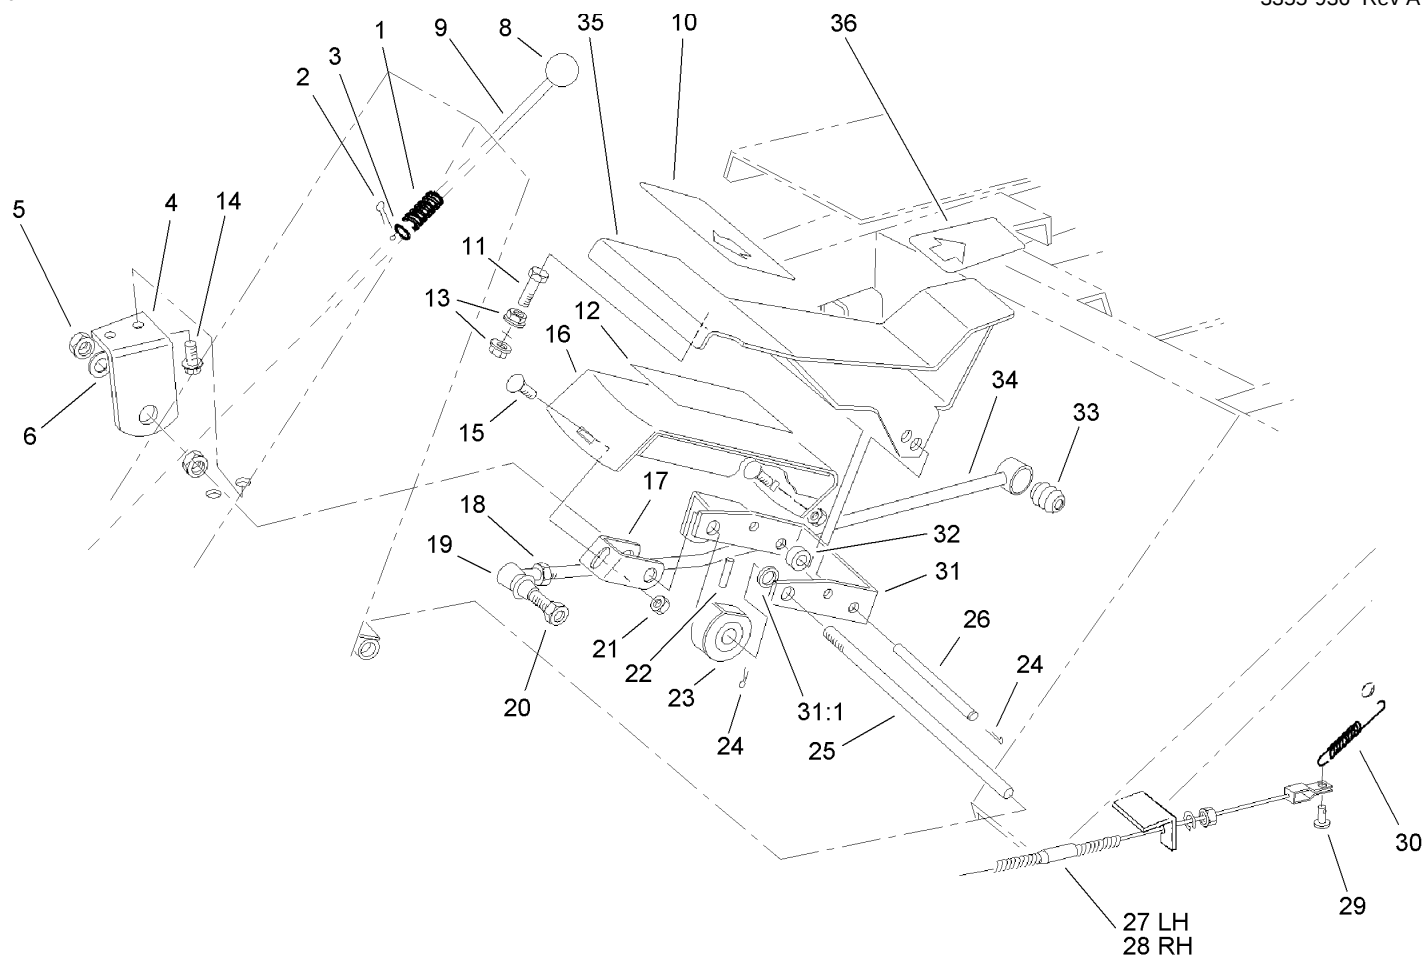 

## Traction Pedal Assembly


| Ref | Part No.   | Qty. | Description           |
|-----|------------|------|-----------------------|
| 1   | 95-1821    | 1    | Spring-Compression    |
| 2   | 3272-5     | 1    | Pin-Cotter            |
| 3   | 3256-22    | 1    | Washer-Flat           |
| 4   | 21-2850-01 | 1    | Mount-Pedal, RH       |
| 5   | 3218-5     | 2    | Nut-Jam               |
| 6   | 3256-26    | 1    | Washer-Flat           |
| 8   | 233-17     | 1    | Knob                  |
| 9   | 82-8670    | 1    | Rod-Latch, Brake      |
| 10  | 94-3307    | 1    | Pad-Pedal, Traction   |
| 11  | 323-15     | 1    | Screw-HH              |
| 12  | 88-1720    | 1    | Pad-Footrest          |
| 13  | 32128-43   | 2    | Nut-Flange            |
| 14  | 11-0590    | 2    | Screw-HWHTF           |
| 15  | 3230-1     | 2    | Bolt-CARR             |
| 16  | 88-1710-01 | 1    | Footrest ASM          |
| 17  | 88-1680-01 | 1    | Bracket-Footrest      |
| 18  | 3220-5     | 1    | Nut-Jam               |
| 19  | 21-0141    | 1    | RH Ball Joint ASM     |
| 20  | 3220-3     | 2    | Nut-Hex, Jam          |
| 21  | 32128-20   | 2    | Nut-HF                |
| 22  | 32121-6    | 1    | Pin-Roll, Slotted     |
| 23  | 28-5220    | 1    | Friction Wheel ASM    |
| 24  | 3272-6     | 4    | Pin-Cotter            |
| 25  | 88-1650    | 1    | Shaft-Pedal, Traction |
 
| Ref  | Part No.   | Qty. | Description           |
|------|------------|------|-----------------------|
| 26   | 88-1640    | 1    | Pin-Pedal, Traction   |
| 27   | 108-1380   | 1    | LH Brake Cable ASM    |
| 28   | 108-1379   | 1    | RH Brake Cable ASM    |
| 29   | 283-58     | 2    | Pin-Clevis            |
| 30   | 3-7243     | 2    | Spring-Extension      |
| 31   | 88-1670    | 1    | Pivot Bracket ASM     |
| 31:1 | 256-156    | 2    | Bushing-Flange        |
| 32   | 88-0470    | 1    | Tube-Spacer, Pedal    |
| 33   | 23-2270    | 1    | Bushing-Rubber        |
| 34   | 23-2240-03 | 1    | Pump Control Tube ASM |
| 35   | 94-3304-01 | 1    | Support-Pedal         |
| 36   | 94-3308    | 1    | Pad-Pedal, Traction   |

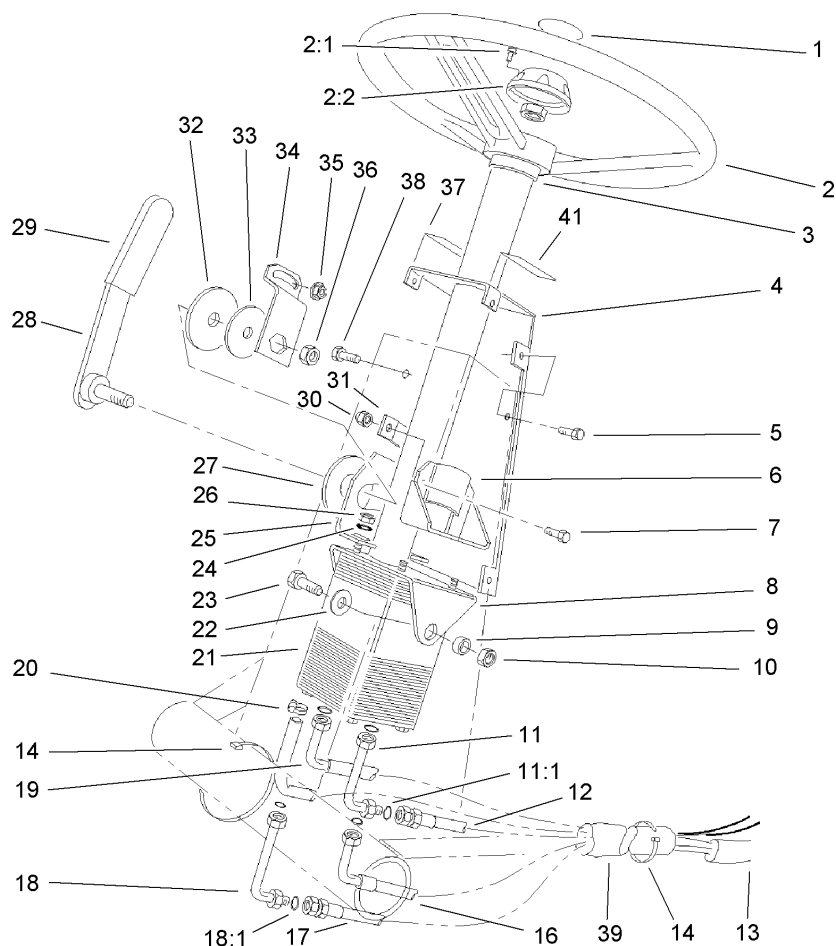

## Power Steering Assembly

 
| Ref  | Part No.   | Qty. | Description                | Ref | Part No.   | Qty. | Description          |
|------|------------|------|----------------------------|-----|------------|------|----------------------|
| 1    | 68-5370    | 1    | Decal                      | 22  | 3256-46    | 2    | Washer-Flat          |
| 2    | 75-0560    | 1    | Wheel-Steering             | 23  | 323-6      | 2    | Screw-HH             |
| 2:1  | 32144-21   | 1    | Screw                      | 24  | 3256-3     | 4    | Washer-Flat          |
| 2:2  | 68-5140    | 1    | Cap-Wheel, Steering        | 25  | 80-2940-03 | 1    | Plate-Pivot          |
| 3    | 21-9260    | 1    | Cover-Dust                 | 26  | 3296-20    | 4    | Nut-Lock, NI         |
| 4    | 82-8660-01 | 1    | Cover-Tower                | 27  | 31-0390    | 1    | Disc-Friction        |
| 5    | 32144-10   | 6    | Screw-HWH                  | 28  | 93-1353-03 | 1    | Lever-Steering, Tilt |
| 6    | 67-8690-03 | 1    | Support-Column             | 29  | 21-1880    | 2    | Grip-Handle          |
| 7    | 322-5      | 2    | Screw-HH                   | 30  | 3296-29    | 2    | Nut-Lock, NI         |
| 8    | 77-3120-01 | 1    | Bracket-Mounting, Column   | 31  | 82-8650    | 1    | Clamp-Column         |
| 9    | 80-2960    | 2    | Spacer-Tower               | 32  | 82-9010    | 1    | Disc-Friction        |
| 10   | 3296-39    | 2    | Nut-Lock, NI               | 33  | 80-2930    | 1    | Washer-Flat          |
| 11   | 82-8760    | 1    | Elbow-HYD                  | 34  | 80-2880    | 1    | Bracket-Tilt         |
| 11:1 | 237-30     | 1    | O-Ring                     | 35  | 32128-20   | 1    | Nut-HF               |
| 12   | 63-8970    | 1    | Hose-HYD                   | 36  | 3218-7     | 1    | Nut-Jam              |
| 13   | 70-1390    | 1    | Sleeve-Protective          | 37  | 82-8940    | 1    | Decal-Steering, Tilt |
| 14   | 3290-379   | 4    | Tie-Cable                  | 38  | 322-4      | 1    | Screw-HH             |
| 16   | 68-9730    | 1    | Hose-Steering, HYD         | 39  | 70-1380    | 1    | Sleeve-Protective    |
| 17   | 68-9720    | 1    | Hose-Steering, HYD         | 41  | 82-8930    | 1    | Decal-Brake, Parking |
| 18   | 82-8770    | 1    | Elbow-HYD                  |     |            |      |                      |
| 18:1 | 237-22     | 1    | O-Ring                     |     |            |      |                      |
| 19   | 63-8980    | 1    | Hose-HYD                   |     |            |      |                      |
| 20   | 2412-36    | 1    | Clamp-Hose                 |     |            |      |                      |
| 21   | 108-6557   | 1    | Steer Valve And Column ASM |     |            |      |                      |

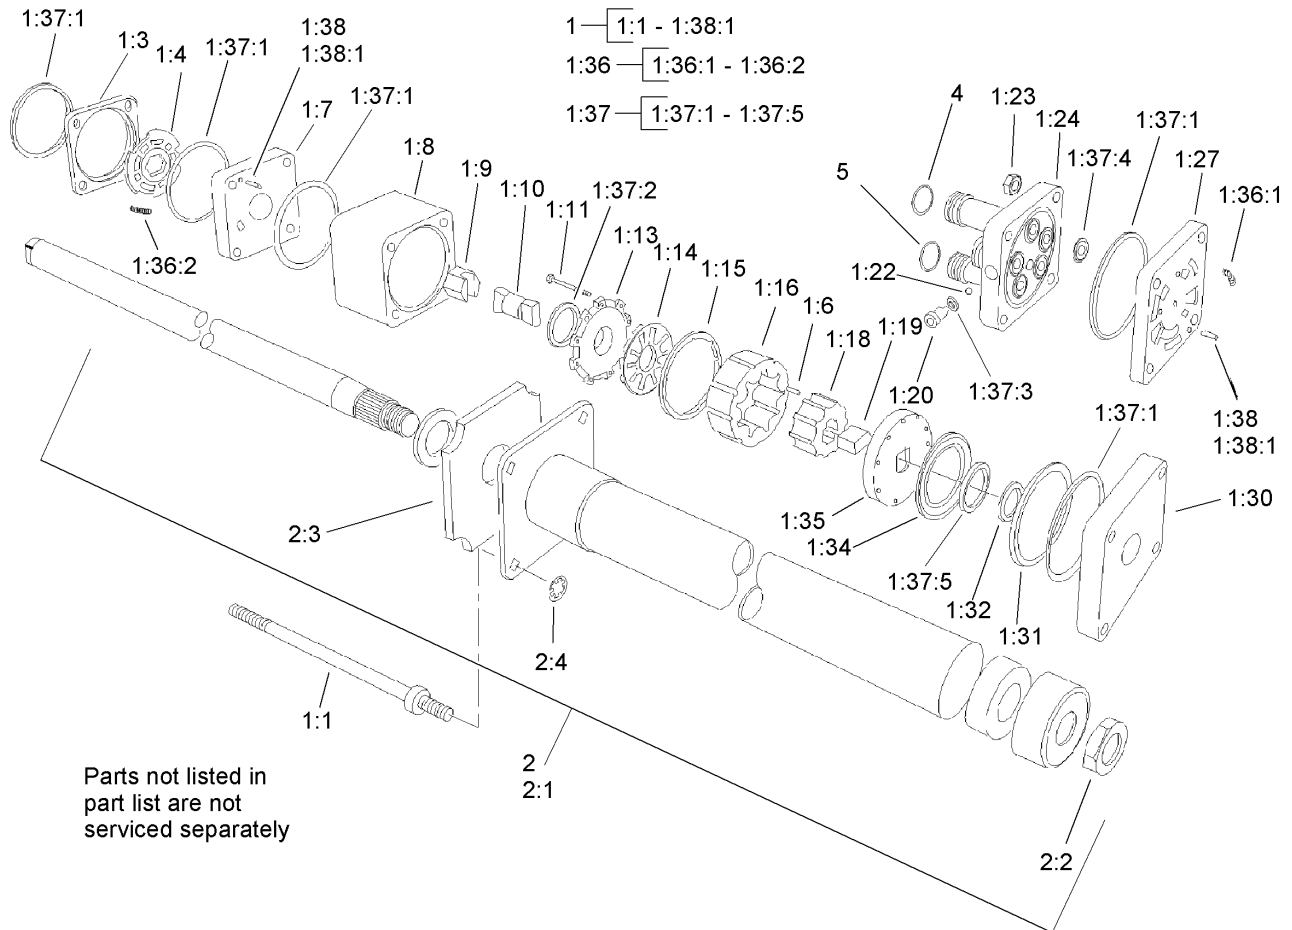

## Steer Valve and Column Assembly No. 108-6557

| Ref    | Part No. | Qty. | Description            |
|--------|----------|------|------------------------|
| 1      |          | 1    | Steer Valve ASM        |
| 1:1    | 92-7310  | 4    | Bolt-Special           |
| 2:1:3  |          | 1    | Ring-Valve             |
| 2:1:4  |          | 1    | Plate-Valve            |
| 2:1:6  |          | 9    | Pin-Alignment          |
| 2:1:7  |          | 1    | Manifold-Isolation     |
| 2:1:8  |          | 1    | Ring-Metering          |
| 2:1:9  |          | 1    | Hex Drive ASM          |
| 2:1:10 |          | 1    | Link-Drive             |
| 2:1:11 |          | 11   | Screw-HSH              |
| 2:1:13 |          | 1    | Cover-Commutator       |
| 2:1:14 |          | 1    | Commutator             |
| 2:1:15 |          | 1    | Ring-Commutator        |
| 2:1:16 |          | 1    | Stator                 |
| 2:1:18 |          | 1    | Rotor                  |
| 2:1:19 |          | 1    | Spacer-Link, Drive     |
| 2:1:20 |          | 1    | Plug                   |
| 2:1:22 |          | 1    | Ball                   |
| 2:1:23 |          | 4    | Nut-Hex                |
| 2:1:24 |          | 1    | Cover-Port             |
| 2:1:27 |          | 1    | Manifold-Port          |
| 2:1:30 |          | 1    | Plate-Cover, Upper     |
| 2:1:31 |          | 1    | Spacer-Bearing, Thrust |
| 2:1:32 |          | 1    | Spacer-Seal            |
| 2:1:34 |          | 1    | Bearing-Thrust         |

 
| Ref      | Part No. | Qty. | Description            |
|----------|----------|------|------------------------|
| 2:1:35   |          | 1    | Plate-Drive            |
| 1:1:36   | 66-9970  | 1    | Spring Kit             |
| 2:1:36:1 |          | 3    | Spring                 |
| 2:1:36:2 |          | 3    | Spring                 |
| 1:1:37   | 66-9980  | 1    | Seal Kit               |
| 2:1:37:1 |          | 5    | Ring-Seal              |
| 2:1:37:2 |          | 1    | Seal-Commutator        |
| 2:1:37:3 |          | 1    | O-Ring                 |
| 2:1:37:4 |          | 5    | O-Ring                 |
| 2:1:37:5 |          | 1    | Seal-Face              |
| 1:1:38   | 66-9990  | 1    | Needle Roller Kit      |
| 2:1:38:1 |          | 9    | Pin-Alignment          |
| 2        | 108-6560 | 1    | Column ASM             |
| 2:1      |          | 1    | Column ASM             |
| 2:2      | 3220-6   | 1    | Nut-Jam                |
| 2:3      | 92-7317  | 1    | Seal-Foam, Upper Cover |
| 2:4      | 92-7316  | 4    | Nut-Push On            |
| 4        | 237-30   | 2    | O-Ring                 |
| 5        | 237-22   | 2    | O-Ring                 |

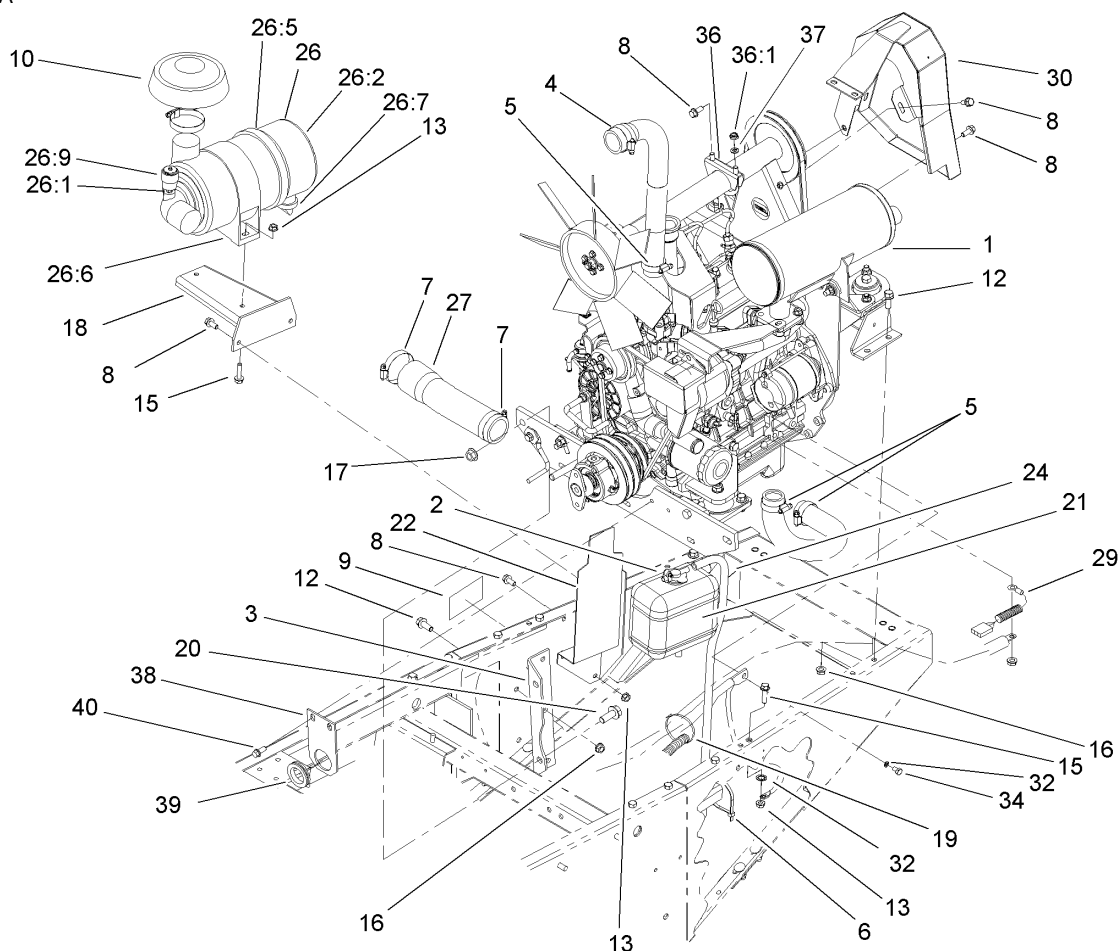

## Engine Installation Assembly

| Ref  | Part No.    | Qty. | Description             |
|------|-------------|------|-------------------------|
| ②1   |             | 1    | Engine ASM              |
| 2    | 2412-108    | 2    | Clamp-Worm              |
| 3    | 67-8190-01  | 2    | Bracket-Support, Engine |
| 4    | 2412-3      | 1    | Clamp-Hose              |
| 5    | 2412-111    | 3    | Clamp                   |
| 6    | 3334-945    | 1    | Tie-Cable               |
| 7    | 2412-130    | 2    | Clamp-Hose              |
| 8    | 3234-5      | 9    | Screw-HHF               |
| 9    | 83-9150     | 1    | Decal-Fluid, Starting   |
| 10   | 105-2539    | 1    | Cap ASM                 |
| 12   | 3234-11     | 10   | Screw-HHF               |
| 13   | 32128-20    | 6    | Nut-HF                  |
| 15   | 3234-36     | 3    | Screw-HHF               |
| 16   | 3290-357    | 10   | Nut-HHF, Whiz           |
| 17   | 32128-23    | 2    | Nut-HF                  |
| 18   | 98-4518-03  | 1    | Bracket-Cleaner, Air    |
| 19   | 3290-378    | 1    | Tie-Cable               |
| 20   | 3234-32     | 2    | Screw-HHF               |
| 21   | 104-9318    | 1    | Bottle-Overflow         |
| 22   | 105-0050-03 | 1    | Reservoir Bracket ASM   |
| 24   | 110-3257    | 1    | Hose-Fuel               |
| 26   | 104-3428    | 1    | Air Cleaner ASM         |
| 26:1 | 105-4292    | 1    | Nipple-Pipe             |
| 26:2 | 104-0497    | 1    | Cover ASM               |

 
| Ref   | Part No.    | Qty. | Description                |
|-------|-------------|------|----------------------------|
| 26:5  | 104-4897    | 1    | Gasket                     |
| 26:6  | 98-4525     | 1    | Bracket-Cleaner, Air       |
| 26:7  | 104-0498    | 1    | Valve-Vacuator             |
| ①26:8 | 108-3810    | 1    | Filter-Air                 |
| 26:9  | 93-9164     | 1    | Indicator-Mini             |
| 27    | 104-3434    | 1    | Hose-Inlet, Air            |
| 29    | 99-3441     | 1    | Harness-Wire, Fusible Link |
| 30    | 105-7807-03 | 1    | Guard-Belt, Fan            |
| 32    | 3254-6      | 2    | Washer-Lock, Internal      |
| 34    | 70-8470     | 1    | Screw-HH                   |
| 36    | 2112-6      | 1    | Clamp-Muffler              |
| 36:1  | 3218-2      | 2    | Nut-Jam                    |
| 37    | 3253-4      | 2    | Washer-Lock                |
| 38    | 104-3774-03 | 1    | Bracket-Bulkhead           |
| 39    | 240-7       | 1    | Grommet-Rubber             |
| 40    | 32144-11    | 2    | Screw-HWHTF                |

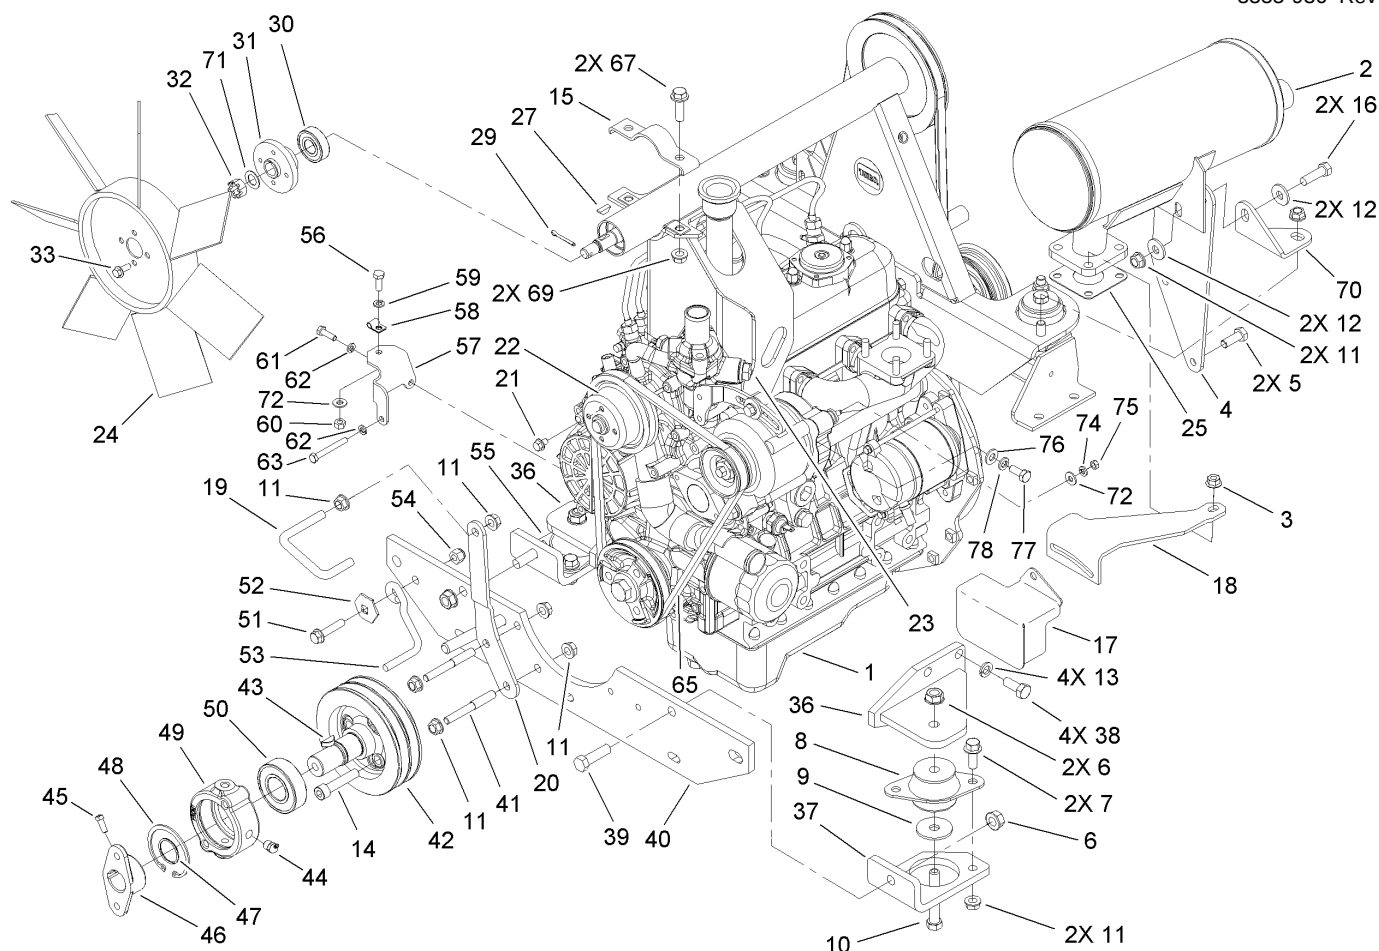

## Engine Mounting and Component Assembly

| Ref | Part No.    | Qty. | Description             |
|-----|-------------|------|-------------------------|
| 1   | 108-1361    | 1    | Engine-Kubota           |
| 2   | 106-8069    | 1    | Muffler-Exhaust         |
| 3   | 33004-00    | 4    | Nut-HF                  |
| 4   | 105-2523-03 | 1    | Bracket-Muffler         |
| 5   | 33114-016   | 2    | Screw-HH                |
| 6   | 32128-37    | 4    | Nut-HF                  |
| 7   | 3234-11     | 4    | Screw-HHF               |
| 8   | 53-9680     | 2    | Mount-Engine            |
| 9   | 53-9480     | 2    | Washer-Snubber          |
| 10  | 324-11      | 2    | Screw-HH                |
| 11  | 3290-357    | 12   | Nut-HHF, Whiz           |
| 12  | 80-6990     | 4    | Washer-Hardened         |
| 13  | 42-9600     | 8    | Washer-Lock, Spring     |
| 14  | 3274-106    | 3    | Screw-HSH               |
| 15  | 105-2519-03 | 1    | Clamp-Cradle            |
| 16  | 323-44      | 2    | Screw-HH                |
| 17  | 105-2557-03 | 1    | Guard-Alternator        |
| 18  | 105-2556-03 | 1    | Brace-Alternator, Upper |
| 19  | 105-4276    | 1    | Guide-Belt, PTO         |
| 20  | 105-0052-03 | 1    | Bracket-Belt Guide      |
| 21  | 81-1280     | 4    | Screw-HHF               |
| 22  | 98-9584     | 1    | Pulley-Fan              |
| 23  | 98-9346     | 1    | Sender-Temperature      |
| 24  | 107-9096    | 1    | Fan-Cooling             |

 
| Ref | Part No.    | Qty. | Description           |
|-----|-------------|------|-----------------------|
| 25  | 98-9611     | 1    | Gasket                |
| 27  | 3257-30     | 1    | Key-Woodruff          |
| 29  | 3272-11     | 1    | Pin-Cotter            |
| 30  | 38-7820     | 1    | Bearing-Ball          |
| 31  | 104-3408-03 | 1    | Hub-Fan               |
| 32  | 32136-3     | 1    | Nut-SHH               |
| 33  | 3234-33     | 4    | Screw-HHF             |
| 36  | 104-3463-03 | 2    | Mount-Front ASM       |
| 37  | 104-3464-03 | 1    | Mount-Frame, LH Front |
| 38  | 43-0090     | 8    | Screw-HH              |
| 39  | 324-6       | 2    | Screw-HH              |
| 40  | 75-9900-01  | 1    | Support-Engine, Front |
| 41  | 105-0057    | 2    | Stud-Belt Retainer    |
| 42  | 104-3406-03 | 1    | Pulley-Fan            |
| 43  | 3257-33     | 1    | Key-Woodruff          |
| 44  | 302-10      | 1    | Fitting-Grease        |
| 45  | 3241-5      | 2    | Screw-Set             |
| 46  | 27-1960     | 1    | Hub-Engine            |
| 47  | 32120-69    | 1    | Ring-Snap             |
| 48  | 32120-22    | 1    | Ring-Snap, Internal   |
| 49  | 43-3720     | 1    | Collar-Bearing        |
| 50  | 251-252     | 1    | Bearing               |
| 51  | 3234-18     | 1    | Screw-HHF             |
| 52  | 3290-224    | 1    | Lockwasher-Pyramid    |

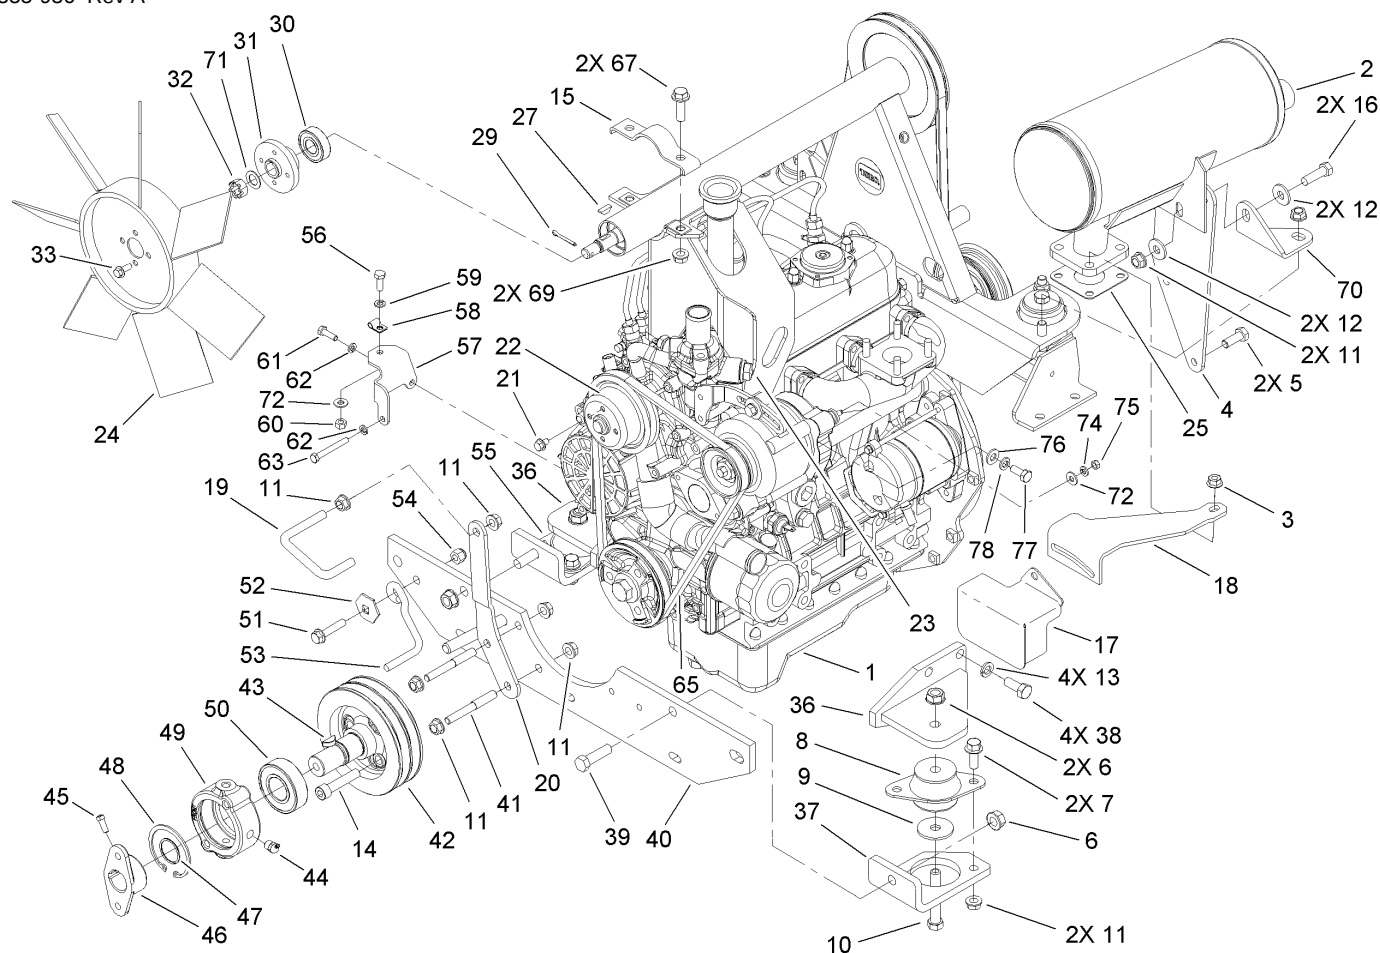

## Engine Mounting and Component Assembly (continued)

| Ref | Part No.    | Qty. | Description           |
|-----|-------------|------|-----------------------|
| 53  | 63-1400     | 1    | Rod-Belt              |
| 54  | 3296-39     | 1    | Nut-Lock, NI          |
| 55  | 104-3465-03 | 1    | Mount-Frame, RH Front |
| 56  | 321-4       | 1    | Screw-HH              |
| 57  | 104-3421-03 | 1    | Bracket-Throttle      |
| 58  | 2412-31     | 1    | Clamp-Boden           |
| 59  | 3253-3      | 1    | Washer-Lock           |
| 60  | 3217-5      | 1    | Nut-Hex               |
| 61  | 33113-050   | 1    | Screw-HH              |
| 62  | 48-8020     | 2    | Washer-Spring         |
| 63  | 48-7630     | 1    | Screw                 |
| 65  | 98-9676     | 1    | V-Belt                |
| 67  | 3234-24     | 2    | Screw-HHF             |
| 69  | 3296-39     | 2    | Nut-Lock, NI          |
| 70  | 105-2598-03 | 1    | Bracket-Muffler       |
| 71  | 18-9810     | 1    | Washer-Thrust         |
| 72  | 3256-22     | 2    | Washer-Flat           |
| 74  | 43-5930     | 1    | Washer-Spring         |
| 75  | 33013-00    | 1    | Nut-Hex               |
| 76  | 33094-00    | 1    | Washer-Plain          |
| 77  | 92-1374     | 1    | Screw-HH              |
| 78  | 3253-4      | 1    | Washer-Lock           |

 
|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |

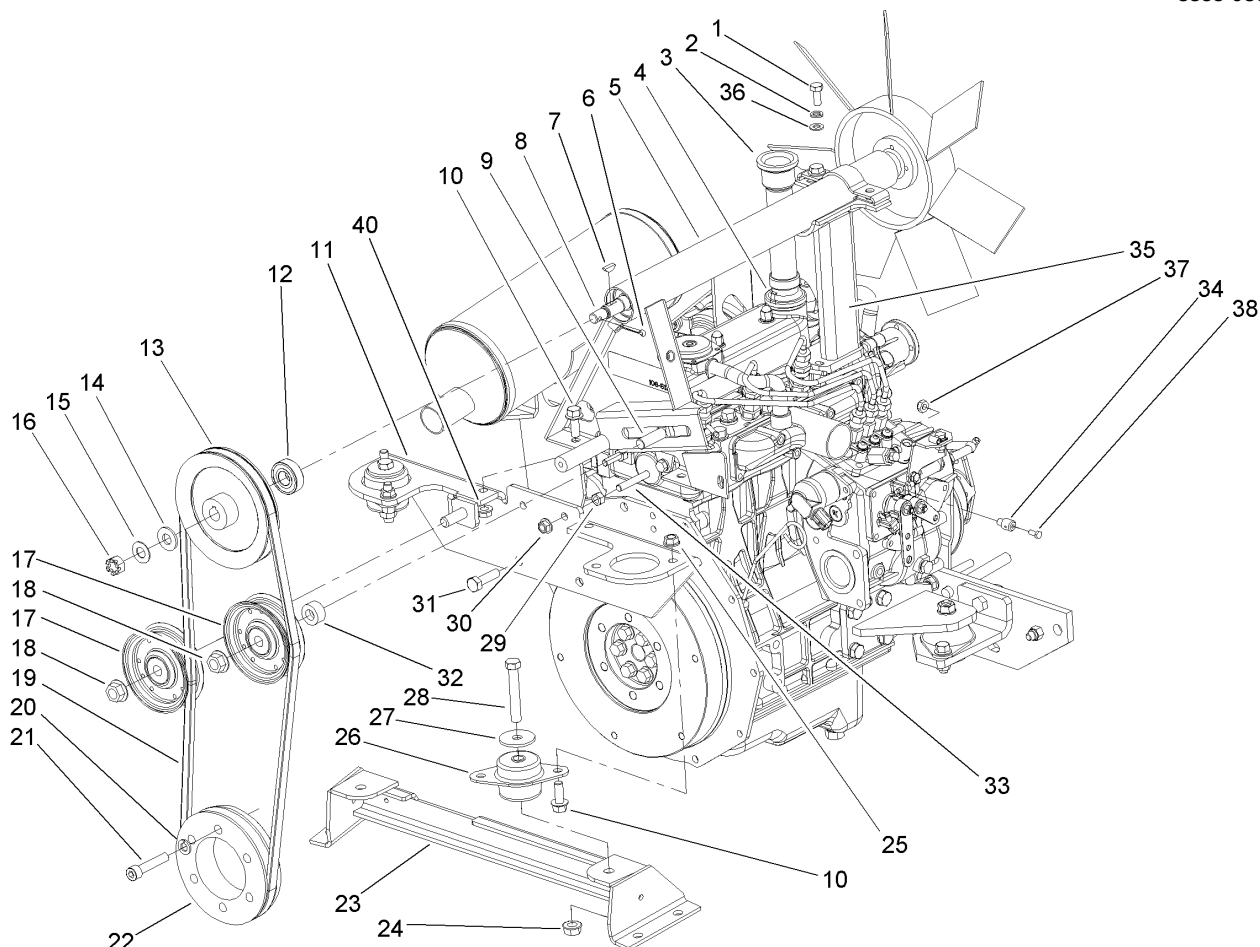

## Engine Pulley System Assembly


| Ref | Part No.    | Qty. | Description         |
|-----|-------------|------|---------------------|
| 1   | 93-7773     | 2    | Screw               |
| 2   | 3253-4      | 2    | Washer-Lock         |
| 3   | 105-0087    | 1    | Flange-Filler, Oil  |
| 4   | 98-7430     | 1    | O-Ring              |
| 5   | 106-4399    | 1    | Fan-Support         |
| 6   | 3272-16     | 1    | Pin-Cotter          |
| 7   | 3257-30     | 1    | Key-Woodruff        |
| 8   | 43-3690     | 1    | Fan Shaft           |
| 9   | 3233-14     | 1    | Screw-CARR          |
| 10  | 3234-11     | 6    | Screw-HHF           |
| 11  | 105-2501-03 | 1    | Engine Mount ASM    |
| 12  | 38-7820     | 1    | Bearing-Ball        |
| 13  | 105-2524    | 1    | Hub-Pulley          |
| 14  | 3-6803      | 2    | Washer-Adjusting    |
| 15  | 29-8910     | 1    | Washer              |
| 16  | 32136-3     | 1    | Nut-SHH             |
| 17  | 105-3699    | 2    | Pulley-Idler, Flat  |
| 18  | 32128-23    | 2    | Nut-HF              |
| 19  | 105-3693    | 1    | Belt-Fan            |
| 20  | 42-9600     | 6    | Washer-Lock, Spring |
| 21  | 3274-106    | 6    | Screw-HSH           |
| 22  | 104-3407-03 | 1    | Pulley-Flywheel     |
| 23  | 105-2520-03 | 1    | Engine Mount ASM    |
| 24  | 32128-37    | 2    | Nut-HF              |
 
| Ref | Part No.    | Qty. | Description            |
|-----|-------------|------|------------------------|
| 25  | 3290-357    | 4    | Nut-HHF, Whiz          |
| 26  | 53-9680     | 2    | Mount-Engine           |
| 27  | 53-9480     | 2    | Washer-Snubber         |
| 28  | 324-11      | 2    | Screw-HH               |
| 29  | 33014-00    | 2    | Nut-Hex                |
| 30  | 33004-00    | 2    | Nut-HF                 |
| 31  | 56-2140     | 2    | Bolt                   |
| 32  | 105-0058    | 1    | Spacer-Idler, Fan      |
| 33  | 105-2502    | 2    | Stud                   |
| 34  | 105-4263    | 1    | Swivel-Cable, Throttle |
| 35  | 105-2507-03 | 1    | Cradle-Support, Tube   |
| 36  | 68-0020     | 2    | Spacer-Pivot, Idler    |
| 37  | 3296-20     | 1    | Nut-Lock, NI           |
| 38  | 25-8640     | 1    | Screw-HH               |
| 40  | 32128-21    | 2    | Nut-HF                 |

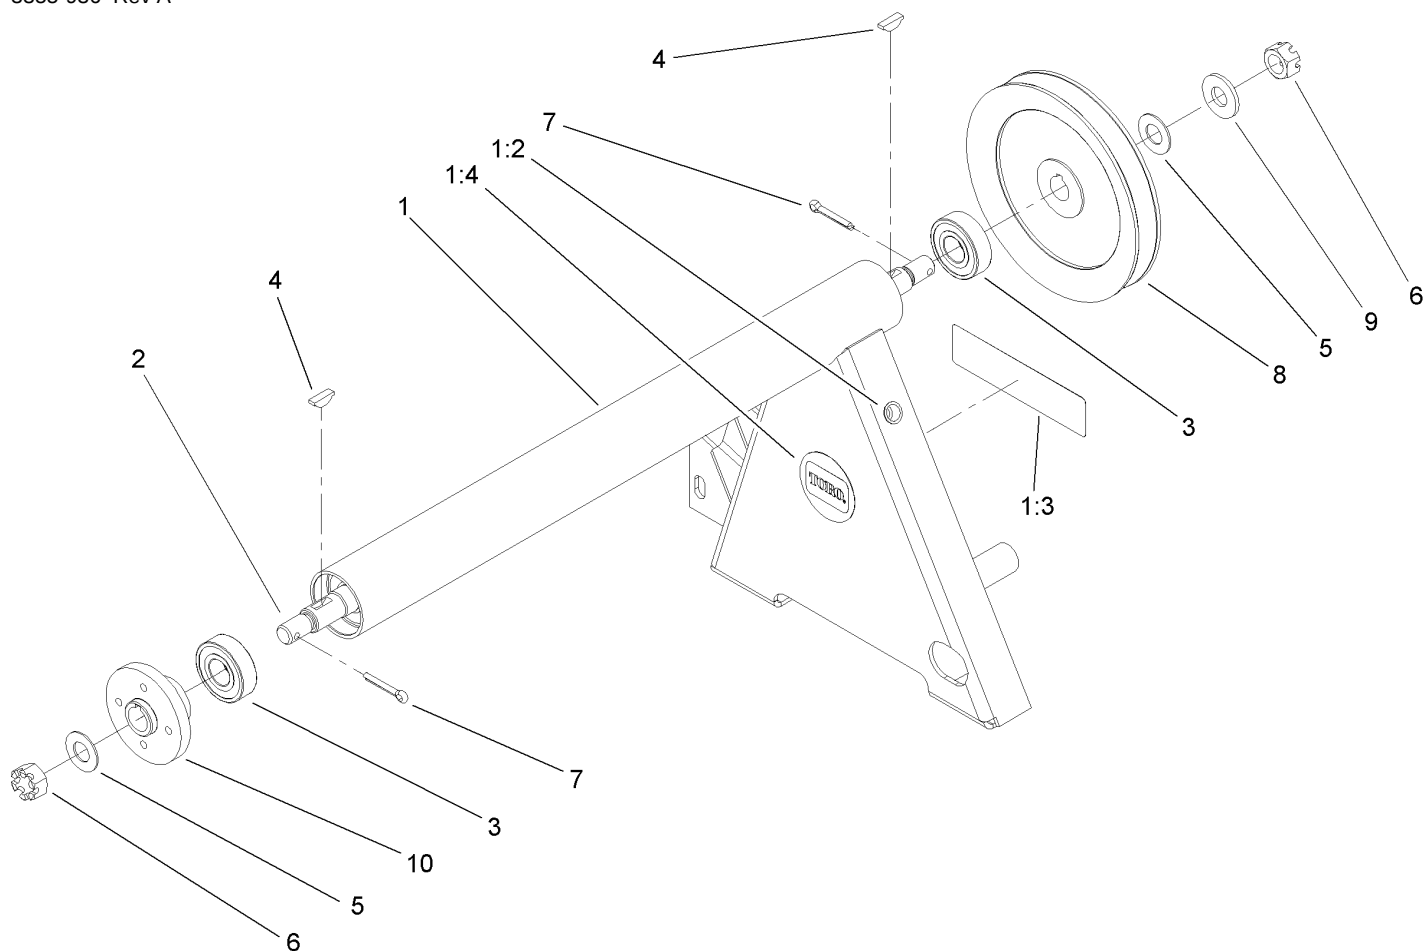

# Fan Support Assembly No. 106-4399

 
| Ref | Part No.    | Qty. | Description      |  |  |  |  |
|-----|-------------|------|------------------|--|--|--|--|
| 1   | 105-2592    | 1    | Tube Support ASM |  |  |  |  |
| 1:2 | 3290-472    | 2    | Insert-Threaded  |  |  |  |  |
| 1:3 | 106-8120    | 1    | Decal-Danger, Ce |  |  |  |  |
| 1:4 | 68-5370     | 1    | Decal            |  |  |  |  |
| 2   | 43-3690     | 1    | Fan Shaft        |  |  |  |  |
| 3   | 38-7820     | 2    | Bearing-Ball     |  |  |  |  |
| 4   | 3257-30     | 2    | Key-Woodruff     |  |  |  |  |
| 5   | 18-9810     | 2    | Washer-Thrust    |  |  |  |  |
| 6   | 32136-3     | 2    | Nut-SHH          |  |  |  |  |
| 7   | 3272-16     | 2    | Pin-Cotter       |  |  |  |  |
| 8   | 105-2524    | 1    | Hub-Pulley       |  |  |  |  |
| 9   | 29-8910     | 1    | Washer           |  |  |  |  |
| 10  | 104-3408-03 | 1    | Hub-Fan          |  |  |  |  |

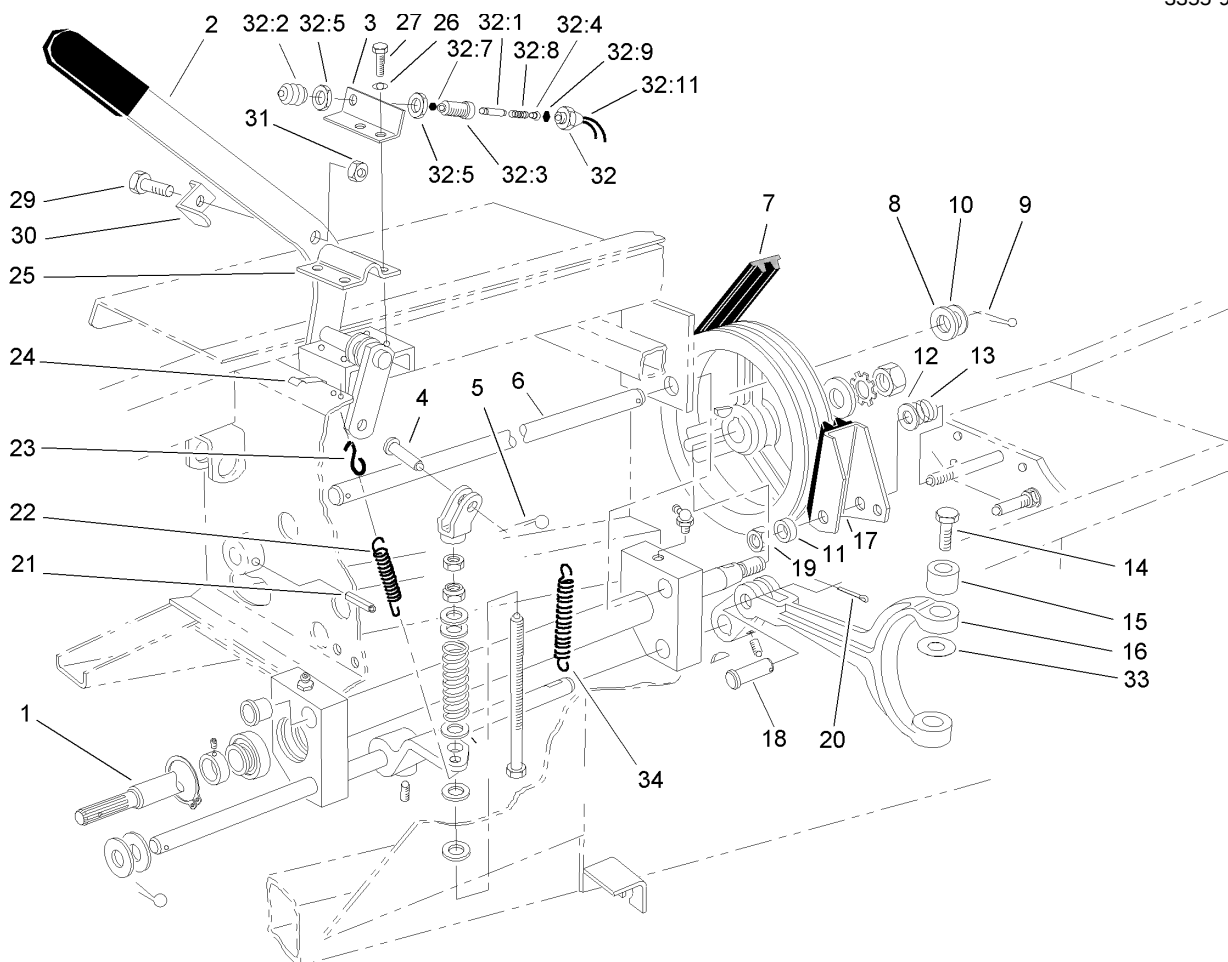

## Power-Take-Off and Shaft Assembly

| Ref | Part No.   | Qty. | Description           |
|-----|------------|------|-----------------------|
| 1   |            | 1    | PTO ASM               |
| 2   | 84-8500-01 | 1    | Lever-PTO             |
| 3   | 84-8520-01 | 1    | Bracket-Switch, PTO   |
| 4   | 283-42     | 1    | Pin-Clevis            |
| 5   | 3272-6     | 1    | Pin-Cotter            |
| 6   | 43-3860    | 1    | Shaft-Pivot, PTO      |
| 7   | 106-4383   | 1    | V-Belt                |
| 8   | 3256-28    | 1    | Washer-Flat           |
| 9   | 3272-22    | 1    | Pin-Cotter            |
| 10  | 3-6498     | 3    | Washer-Thrust         |
| 11  | 3-8812     | 1    | Spacer-Spring, Anchor |
| 12  | 3256-6     | 1    | Washer-Flat           |
| 13  | 5-1747     | 1    | Spring-Adjustment     |
| 14  | 92-5727    | 2    | Screw-Lock, Patch     |
| 15  | 92-5723    | 2    | Bushing-Fork, PTO     |
| 16  | 92-4060-03 | 1    | Fork-PTO              |
| 17  | 27-7370    | 1    | PTO Brake ASM         |
| 18  | 93-3769    | 1    | Pin-Clevis            |
| 19  | 3296-28    | 1    | Nut-Lock, NI          |
| 20  | 3272-11    | 1    | Pin-Cotter            |
| 21  | 32121-9    | 1    | Pin-Roll, Slotted     |
| 22  | 21-1830    | 1    | Spring-Extension      |
| 23  | 5-0701     | 1    | Anchor                |
| 24  | 212-93     | 3    | Clamp-Casing          |

 
| Ref   | Part No. | Qty. | Description              |
|-------|----------|------|--------------------------|
| 25    | 21-1600  | 1    | Clamp-Lever, PTO         |
| 26    | 3253-21  | 4    | Washer-Lock              |
| 27    | 32104-6  | 4    | Screw-HH                 |
| 29    | 321-4    | 1    | Screw-HH                 |
| 30    | 86-7050  | 1    | Bracket-Switch, Actuator |
| 31    | 3296-16  | 1    | Nut-Lock, NI             |
| 32    | 43-9071  | 1    | Limit Switch ASM         |
| 32:1  | 43-8860  | 1    | Plunger-Switch           |
| 32:2  | 43-8870  | 1    | Boot-Switch              |
| 32:3  | 43-8620  | 1    | Pin-Guide, Switch        |
| 32:4  | 43-8610  | 1    | Guide                    |
| 32:5  | 218-461  | 2    | Nut-HH                   |
| 32:7  | 237-7    | 1    | O-Ring                   |
| 32:8  | 43-8600  | 1    | Spring-Compression       |
| 32:9  | 237-30   | 1    | O-Ring                   |
| 32:11 | 72-4320  | 1    | Switch-Ball              |
| 33    | 75-9890  | 2    | Washer-Shim              |
| 34    | 108-1368 | 1    | Spring-Extension         |

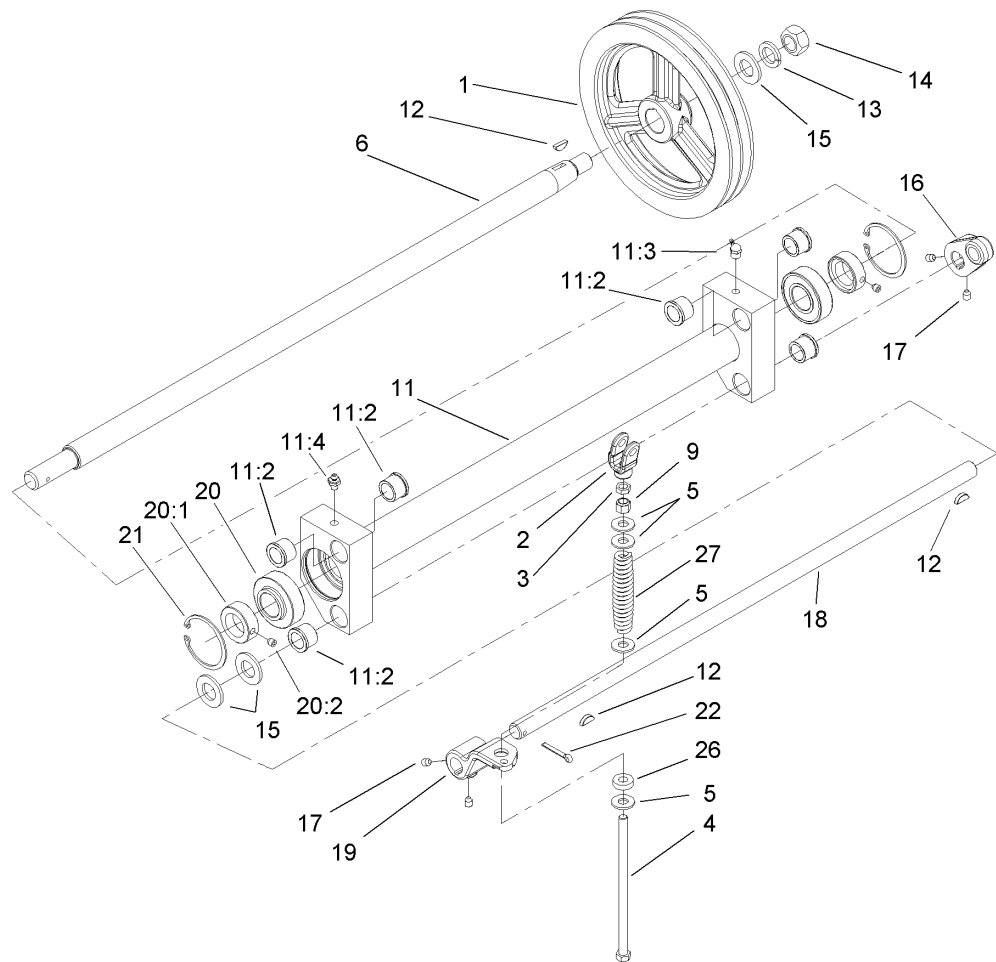

Power-Take-Off Assembly

| Ref  | Part No. | Qty. | Description         |
|------|----------|------|---------------------|
| 1    | 21-0230  | 1    | Pulley-PTO          |
| 2    | 43-5630  | 1    | Yoke-PTO            |
| 3    | 3219-3   | 1    | Nut-Hex             |
| 4    | 27-7900  | 1    | Screw-Adjusting     |
| 5    | 3256-41  | 4    | Washer              |
| 6    | 43-5540  | 1    | Shaft-PTO           |
| 9    | 3296-6   | 1    | Nut-Lock            |
| 11   | 100-6599 | 1    | PTO Pivot ASM       |
| 11:2 | 256-113  | 6    | Bushing-Flange      |
| 11:3 | 302-10   | 1    | Fitting-Grease      |
| 11:4 | 302-2    | 1    | Fitting-Grease      |
| 12   | 3257-5   | 3    | Key-Woodruff        |
| 13   | 3254-7   | 1    | Washer-Lock, Int    |
| 14   | 3219-7   | 1    | Nut-Hex             |
| 15   | 3256-28  | 3    | Washer-Flat         |
| 16   | 92-4058  | 1    | Arm-PTO             |
| 17   | 3246-3   | 4    | Screw-HSH           |
| 18   | 43-5550  | 1    | Shaft-Actuator, PTO |
| 19   | 43-5570  | 1    | Arm-Actuator        |
| 20   | 251-252  | 2    | Bearing             |
| 20:1 | 251-234  | 1    | Collar-Locking      |
| 20:2 | 106-9662 | 1    | Screw-Set, HSH      |
| 21   | 32120-22 | 2    | Ring-Snap, Internal |
| 22   | 3272-22  | 1    | Pin-Cotter          |


| Ref | Part No.   | Qty. | Description        |
|-----|------------|------|--------------------|
| 26  | 5-0652     | 1    | Spacer             |
| 27  | 21-0400-01 | 1    | Spring-Compression |

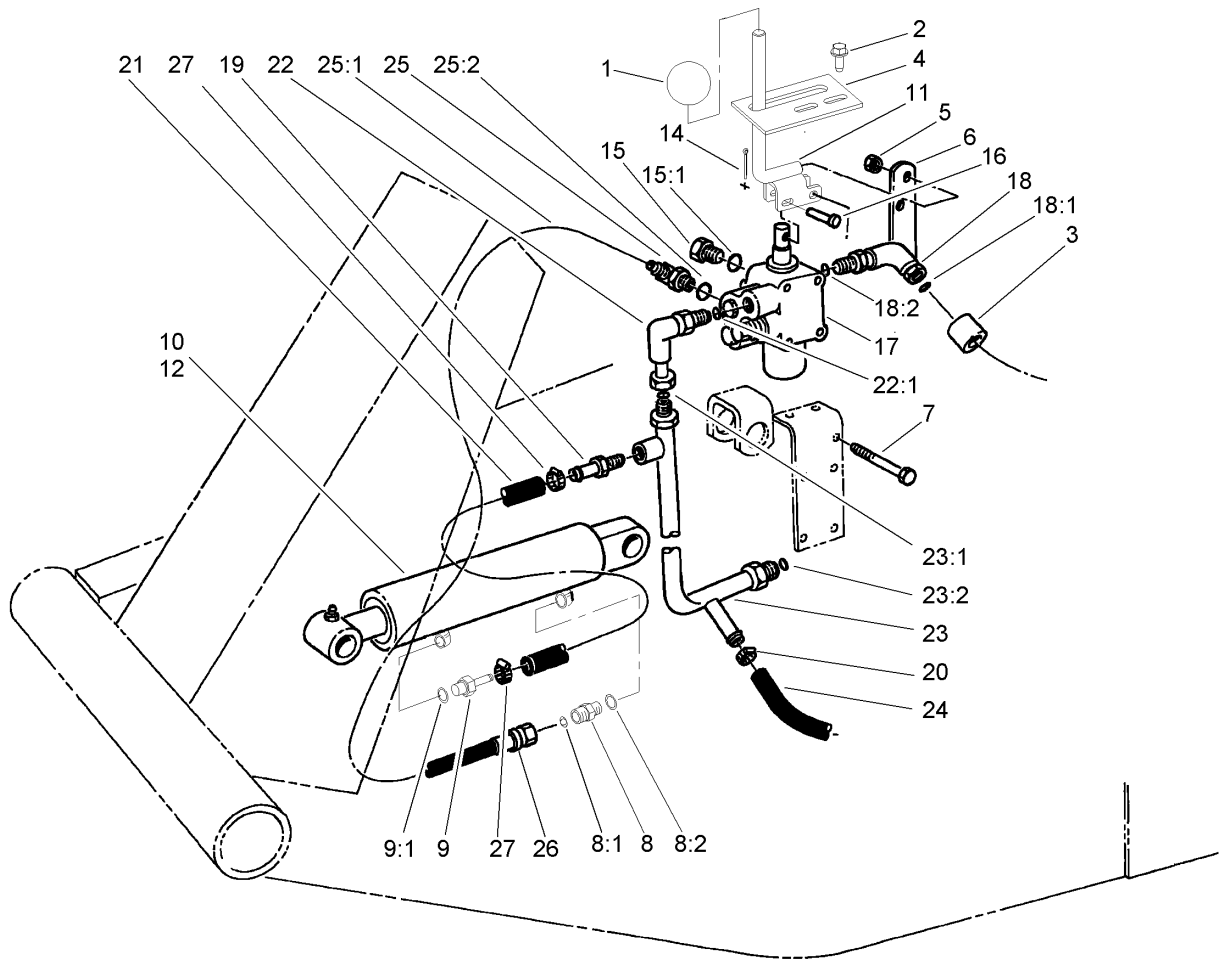 

## Valve and Cylinder Assembly


| Ref  | Part No.    | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 233-21      | 1    | Knob                     |
| 2    | 32144-10    | 2    | Screw-HWH                |
| 3    | 38-3400     | 1    | Guard-Rubber             |
| 4    | 105-7806    | 1    | Latch-Lever, Valve       |
| 5    | 3296-42     | 5    | Nut-Lock, NI             |
| 6    | 21-9010     | 1    | Lever-Valve, Pivot Mount |
| 7    | 321-23      | 5    | Screw-HH                 |
| 8    | 340-2       | 1    | Fitting-HYD, Straight    |
| 8:1  | 237-22      | 1    | O-Ring                   |
| 8:2  | 237-42      | 1    | O-Ring                   |
| 9    | 95-8849     | 1    | Fitting-Straight, HYD    |
| 9:1  | 237-78      | 1    | O-Ring                   |
| 10   | 100-6586    | 1    | Cylinder-HYD, 2.5 Inch   |
| 11   | 105-7839-03 | 1    | Valve Lever ASM          |
| 12   | 100-6591    | 1    | Cylinder-HYD, 3 Inch     |
| 14   | 3272-4      | 1    | Pin-Cotter               |
| 15   | 353-512     | 1    | Plug                     |
| 15:1 | 237-78      | 1    | O-Ring                   |
| 16   | 283-17      | 1    | Pin-Clevis               |
| 17   | 106-8071-01 | 1    | Valve ASM                |
| 18   | 340-99      | 1    | Fitting-HYD, 90 DEG      |
| 18:1 | 237-30      | 1    | O-Ring                   |
| 18:2 | 237-42      | 1    | O-Ring                   |
| 19   | 304-73      | 1    | Connector-Hose           |
 
| Ref  | Part No. | Qty. | Description            |
|------|----------|------|------------------------|
| 20   | 2412-36  | 1    | Clamp-Hose             |
| 21   | 92-7834  | 1    | Hose                   |
| 22   | 340-110  | 1    | Fitting-Swivel, 90 DEG |
| 22:1 | 237-42   | 1    | O-Ring                 |
| 23   | 63-9260  | 1    | Manifold-Valve         |
| 23:1 | 237-22   | 1    | O-Ring                 |
| 23:2 | 237-30   | 1    | O-Ring                 |
| 24   | 63-8990  | 1    | Hose-Out / Cool        |
| 25   | 340-97   | 1    | Fitting-HYD, 90 DEG    |
| 25:1 | 237-22   | 1    | O-Ring                 |
| 25:2 | 237-78   | 1    | O-Ring                 |
| 26   | 92-7833  | 1    | Hose ASM               |
| 27   | 2412-108 | 2    | Clamp-Worm             |

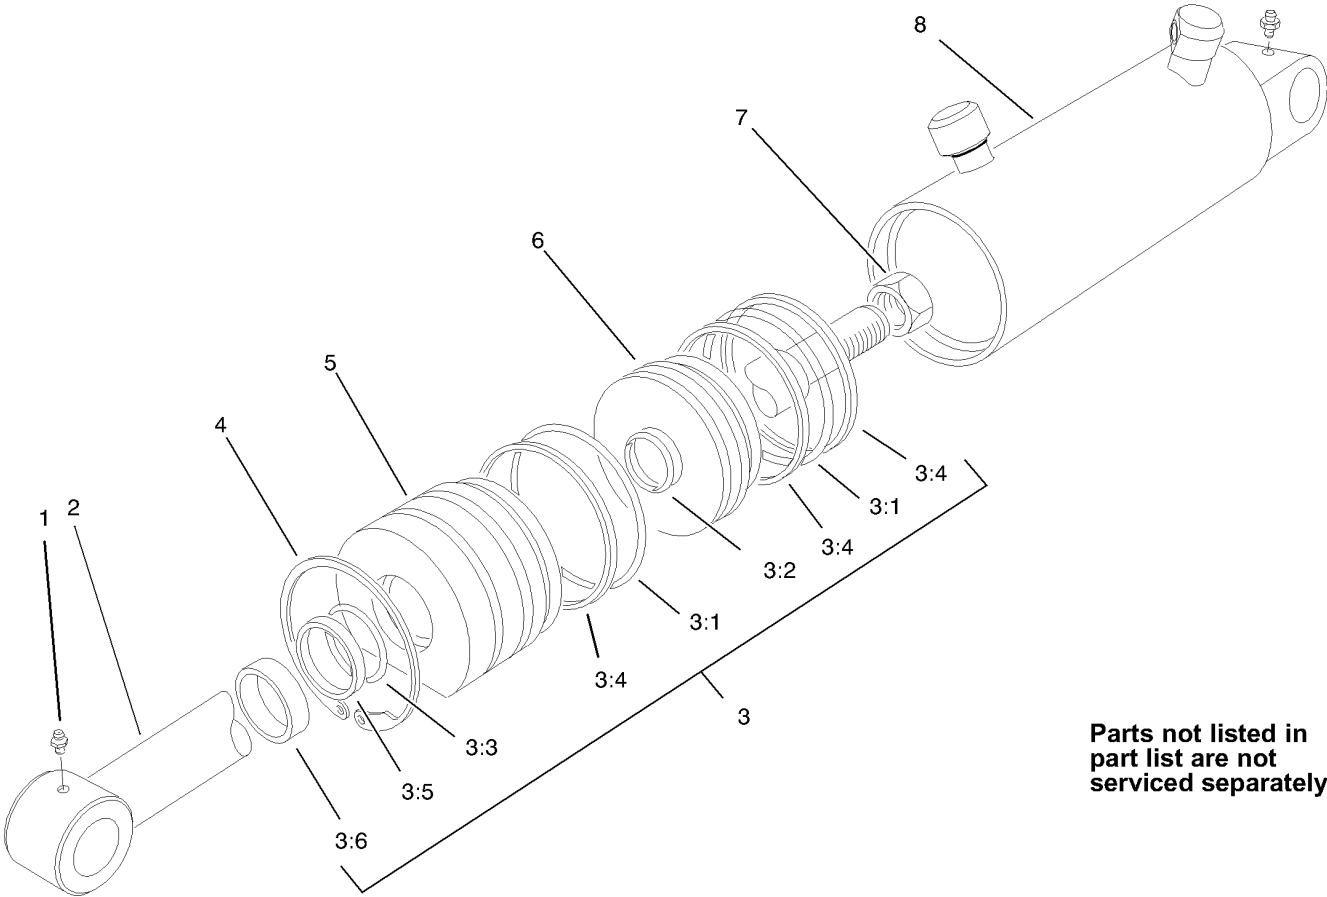


Hydraulic Cylinder Assembly No. 100-6586 (2-1/2in Bore)

| Ref | Part No. | Qty. | Description    |  |  |  |  |
|-----|----------|------|----------------|--|--|--|--|
| 1   | 302-55   | 2    | Fitting-Grease |  |  |  |  |
| 2   |          | 1    | Shaft          |  |  |  |  |
| 3   | 61-4960  | 1    | Seal Kit       |  |  |  |  |
| 3:1 |          | 2    | O-Ring         |  |  |  |  |
| 3:2 |          | 1    | O-Ring         |  |  |  |  |
| 3:3 |          | 1    | O-Ring         |  |  |  |  |
| 3:4 |          | 3    | Backup         |  |  |  |  |
| 3:5 |          | 1    | Backup         |  |  |  |  |
| 3:6 |          | 1    | Seal-Dust      |  |  |  |  |
| 4   | 61-4990  | 1    | Ring-Retaining |  |  |  |  |
| 5   |          | 1    | Head           |  |  |  |  |
| 6   |          | 1    | Piston         |  |  |  |  |
| 7   |          | 1    | Nut            |  |  |  |  |
| 8   |          | 1    | Barrel         |  |  |  |  |

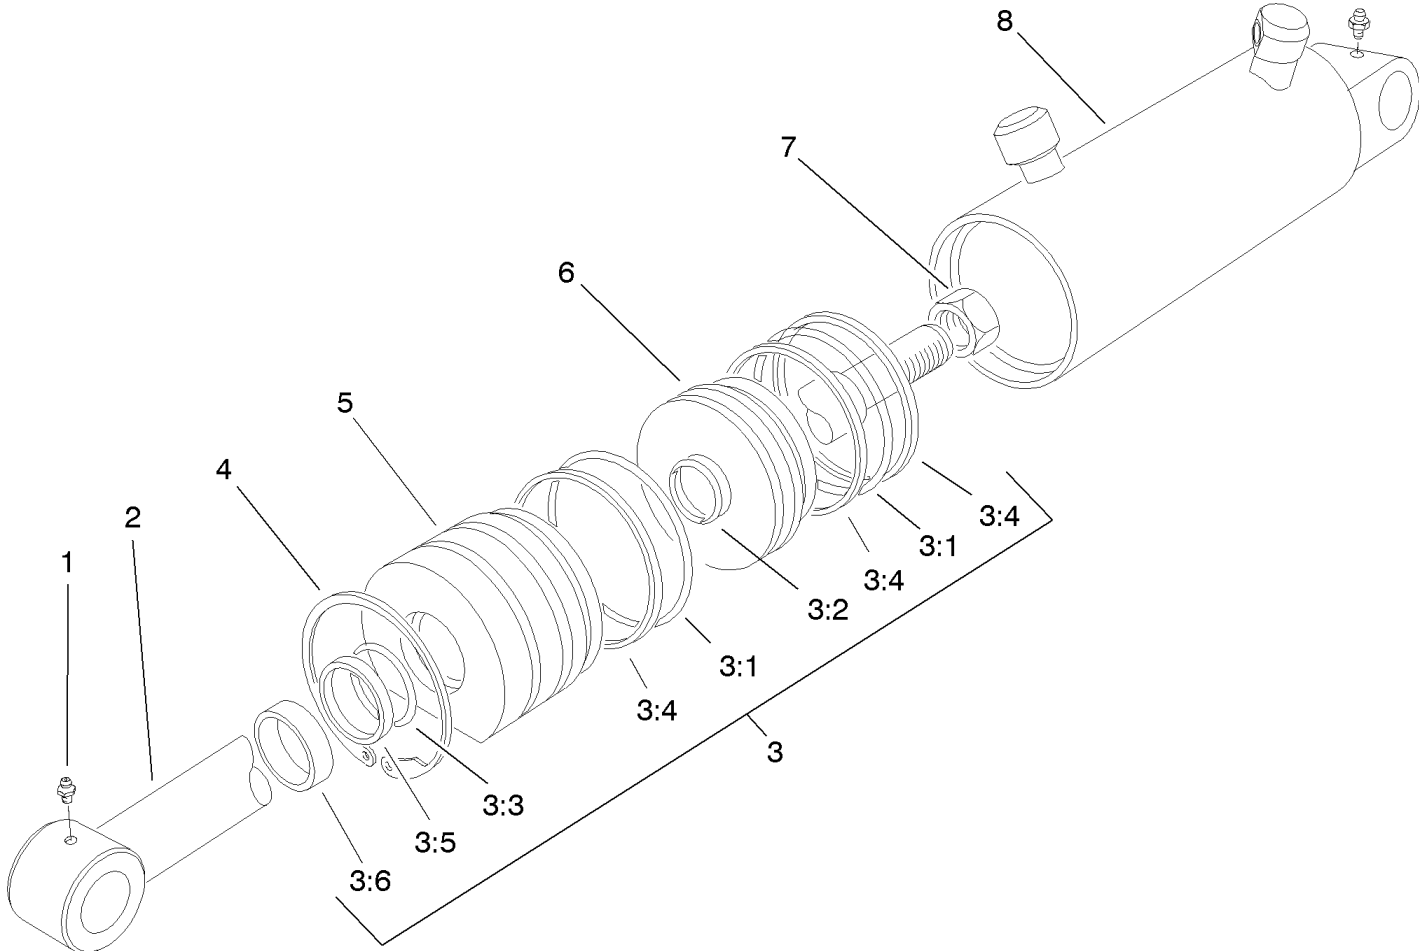 


**Hydraulic Cylinder Assembly No. 100-6591 (3in Bore)  
(Optional)**

| Ref | Part No. | Qty. | Description    |  |  |  |  |
|-----|----------|------|----------------|--|--|--|--|
| 1   | 302-55   | 2    | Fitting-Grease |  |  |  |  |
| 2   |          | 1    | Shaft          |  |  |  |  |
| 3   | 67-5500  | 1    | Seal Kit       |  |  |  |  |
| 3:1 |          | 2    | O-Ring         |  |  |  |  |
| 3:2 |          | 1    | O-Ring         |  |  |  |  |
| 3:3 |          | 1    | O-Ring         |  |  |  |  |
| 3:4 |          | 3    | Backup         |  |  |  |  |
| 3:5 |          | 1    | Backup         |  |  |  |  |
| 3:6 |          | 1    | Seal-Dust      |  |  |  |  |
| 4   | 67-5470  | 1    | Ring-Snap      |  |  |  |  |
| 5   |          | 1    | Head           |  |  |  |  |
| 6   |          | 1    | Piston         |  |  |  |  |
| 7   |          | 1    | Nut            |  |  |  |  |
| 8   |          | 1    | Barrel         |  |  |  |  |

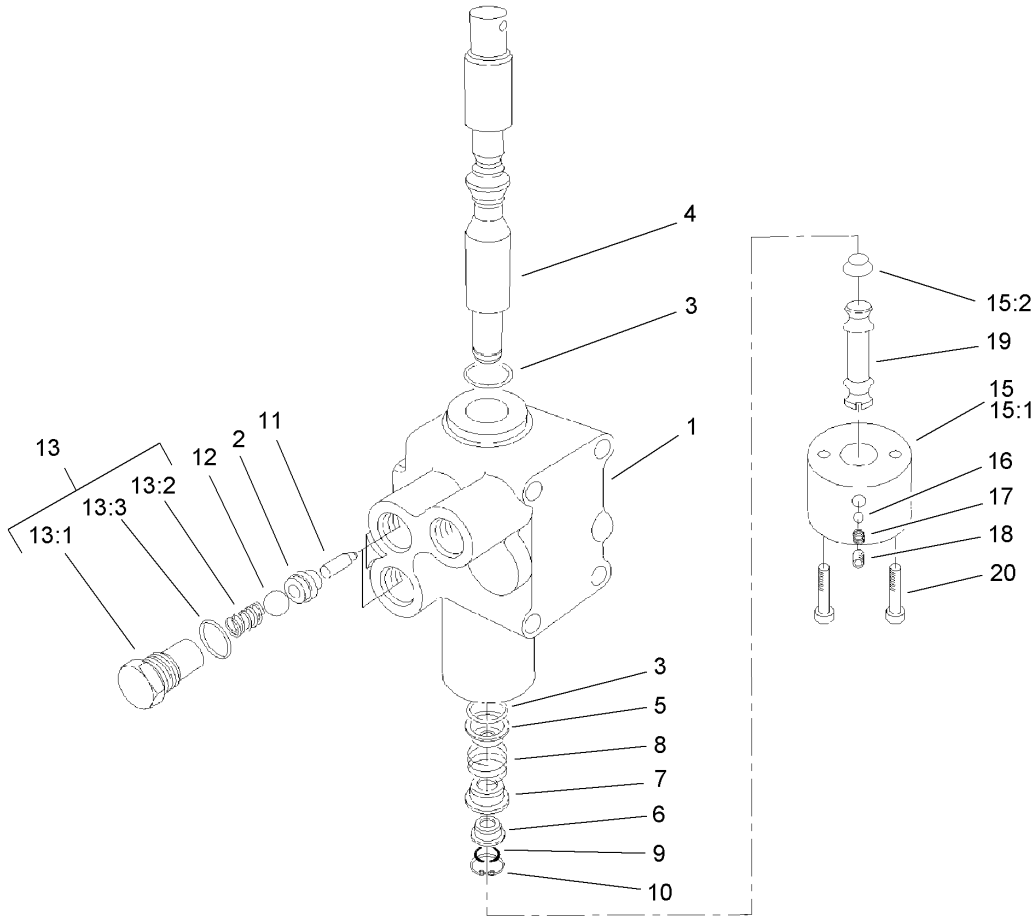 

Valve Assembly No. 106-8071-01


| Ref  | Part No. | Qty. | Description       |  |  |  |  |
|------|----------|------|-------------------|--|--|--|--|
| 1    |          | 1    | Body              |  |  |  |  |
| 2    | 22-8370  | 2    | Seat-Valve        |  |  |  |  |
| 3    | 22-8500  | 2    | O-Ring            |  |  |  |  |
| 4    | 105-7826 | 1    | Spool             |  |  |  |  |
| 5    | 22-8380  | 1    | Retainer          |  |  |  |  |
| 6    | 22-8400  | 1    | Spacer            |  |  |  |  |
| 7    | 22-8390  | 1    | Retainer          |  |  |  |  |
| 8    | 22-8410  | 1    | Spring            |  |  |  |  |
| 9    | 22-8480  | 1    | Ring-Snap         |  |  |  |  |
| 10   | 22-8490  | 1    | Ring-Snap         |  |  |  |  |
| 11   | 22-8360  | 2    | Pin               |  |  |  |  |
| 12   | 22-8350  | 2    | Ball              |  |  |  |  |
| 13   | 105-7827 | 2    | Plug ASM          |  |  |  |  |
| 13:1 | 22-8330  | 1    | Plug              |  |  |  |  |
| 13:2 | 22-8340  | 1    | Spring            |  |  |  |  |
| 13:3 | 237-42   | 1    | O-Ring            |  |  |  |  |
| 15   | 106-8070 | 1    | Detent Barrel ASM |  |  |  |  |
| 15:1 |          | 1    | Barrel-Detent     |  |  |  |  |
| 15:2 | 106-8068 | 1    | Plug-Dust         |  |  |  |  |
| 16   | 105-7829 | 2    | Ball-Steel        |  |  |  |  |
| 17   | 105-7830 | 2    | Spring            |  |  |  |  |
| 18   | 105-7831 | 2    | Screw-Set         |  |  |  |  |
| 19   | 105-7832 | 1    | Stud-Detent       |  |  |  |  |
| 20   | 105-7833 | 2    | Screw-Hs          |  |  |  |  |

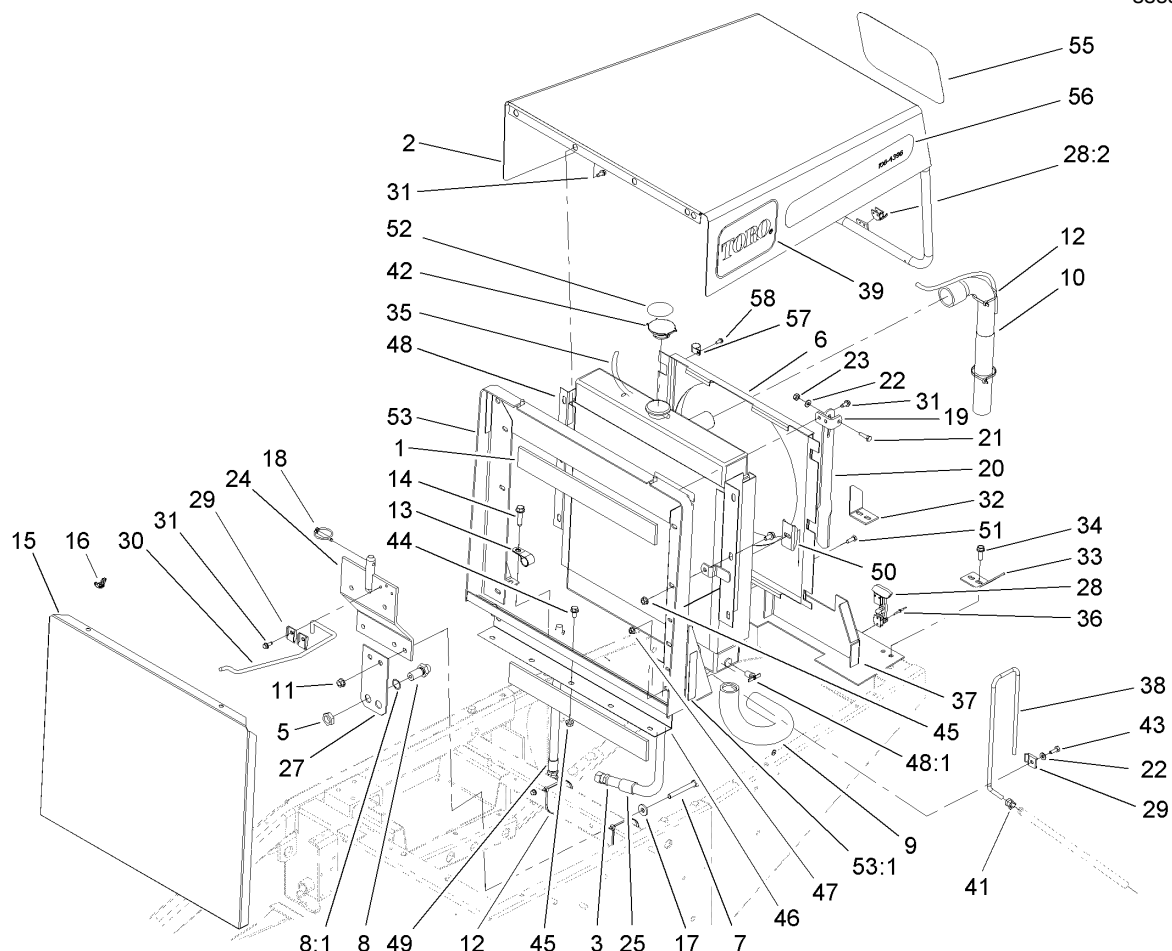 

## Radiator and Hood Assembly


| Ref | Part No.    | Qty. | Description                |
|-----|-------------|------|----------------------------|
| 1   | 43-3320     | 2    | Foam-Radiator              |
| 2   | 105-2919    | 1    | Hood ASM                   |
| 3   | 63-9010     | 1    | Hose-Coolant, Transmission |
| 5   | 340-70      | 2    | Nut-Lock                   |
| 6   | 105-0007-03 | 1    | Fan Shroud ASM             |
| 7   | 323-14      | 3    | Screw-HH                   |
| 8   | 340-71      | 2    | Fitting-Straight, Bulkhead |
| 8:1 | 237-22      | 2    | O-Ring                     |
| 9   | 104-3432    | 1    | Hose-Radiator, Bottom      |
| 10  | 104-3433    | 1    | Hose-Radiator, Top         |
| 11  | 32128-21    | 3    | Nut-HF                     |
| 12  | 3290-379    | 6    | Tie-Cable                  |
| 13  | 2412-4      | 1    | Clamp                      |
| 14  | 11-0590     | 1    | Screw-HWHTF                |
| 15  | 67-9030-03  | 1    | Grille ASM                 |
| 16  | 32103-2     | 2    | Nut-Wing                   |
| 17  | 5-0838      | 3    | Washer                     |
| 18  | 283-76      | 1    | Pin-Lynch                  |
| 19  | 84-5330     | 1    | Bracket-Prop, Hood         |
| 20  | 84-5380     | 1    | Strap-Prop, Hood           |
| 21  | 321-6       | 1    | Screw-HH                   |
| 22  | 3256-22     | 3    | Washer-Flat                |
| 23  | 3296-16     | 1    | Nut-Lock, NI               |
| 24  | 105-2542-01 | 1    | Bracket-Support, Seat      |
 
| Ref  | Part No.    | Qty. | Description          |
|------|-------------|------|----------------------|
| 25   | 38-3400     | 1    | Guard-Rubber         |
| 27   | 68-9160     | 1    | Bracket              |
| 28   | 59-9740     | 1    | Flex Draw Latch ASM  |
| 28:2 | 249-40      | 1    | Keeper               |
| 29   | 3-6657      | 4    | Clip-Skid            |
| 30   | 86-7040     | 1    | Rod-Prop, Seat       |
| 31   | 32144-10    | 7    | Screw-HWH            |
| 32   | 62-3010-01  | 1    | Bracket-RH           |
| 33   | 62-3020-01  | 1    | Bracket-LH           |
| 34   | 3234-17     | 4    | Screw-HHF            |
| 35   | 110-4109    | 1    | Hose-Fuel            |
| 36   | 3290-55     | 4    | Rivet-Pop            |
| 37   | 105-4255-01 | 1    | Pulley Guard ASM     |
| 38   | 105-4265    | 1    | Tube-Vent            |
| 39   | 62-7400     | 2    | Decal                |
| 41   | 2412-108    | 1    | Clamp-Worm           |
| 42   | 66-3240     | 1    | Cap-Radiator         |
| 43   | 321-4       | 2    | Screw-HH             |
| 44   | 3234-14     | 13   | Screw-HHF            |
| 45   | 32128-20    | 13   | Nut-HF               |
| 46   | 105-4264-03 | 1    | Grill-Plate, Sealing |
| 47   | 32128-33    | 1    | Nut-HF               |
| 48   | 108-8699    | 1    | Radiator ASM         |
| 48:1 | 304-46      | 1    | Draincock            |

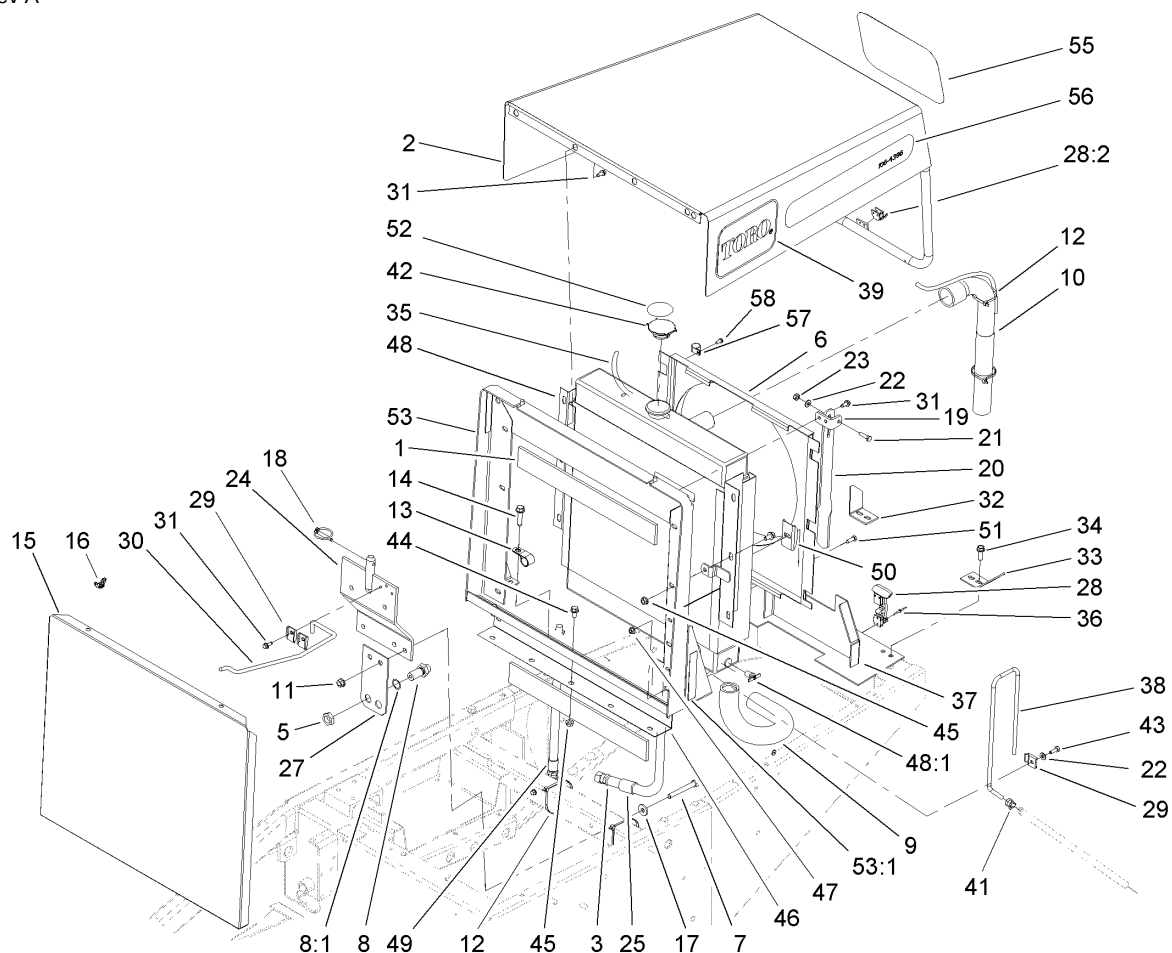


## Radiator and Hood Assembly (continued)
 
| Ref  | Part No.    | Qty. | Description               |  |  |  |  |
|------|-------------|------|---------------------------|--|--|--|--|
| 49   | 63-8960     | 1    | Hose                      |  |  |  |  |
| 50   | 105-0012-03 | 6    | Clip-Mounting, Fan Shroud |  |  |  |  |
| 51   | 3234-33     | 6    | Screw-HHF                 |  |  |  |  |
| 52   | 106-5976    | 1    | Decal-Warning             |  |  |  |  |
| 53   | 105-2918    | 1    | Radiator Support ASM      |  |  |  |  |
| 53:1 | 77-3100     | 3    | Decal-Warning             |  |  |  |  |
| 55   | 66-6140     | 1    | Decal                     |  |  |  |  |
| 56   | 106-4396    | 2    | Decal                     |  |  |  |  |
| 57   | 2412-83     | 1    | Clamp-Cable               |  |  |  |  |
| 58   | 32144-1     | 1    | Screw-Taptite             |  |  |  |  |

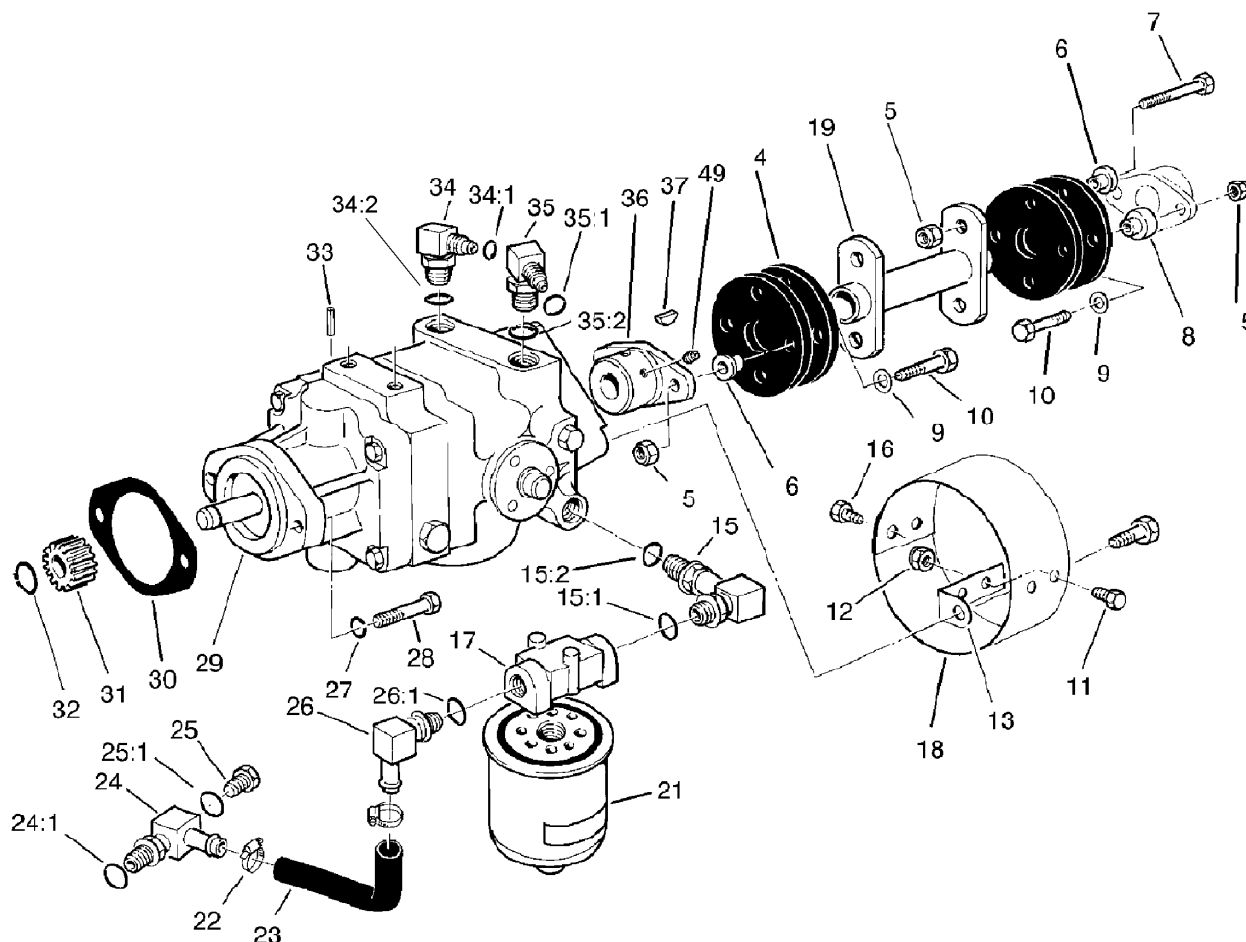

## Transmission Assembly

 
| Ref  | Part No.    | Qty. | Description         | Ref  | Part No. | Qty. | Description         |
|------|-------------|------|---------------------|------|----------|------|---------------------|
| 4    | 44-2230     | 4    | Coupling-Rubber     | 26   | 353-987  | 1    | Fitting-HYD, 90 DEG |
| 5    | 32152-1     | 8    | Nut-Lock, Cone      | 26:1 | 237-81   | 1    | O-Ring              |
| 6    | 71-4411     | 4    | Spacer              | 27   | 3253-21  | 2    | Washer-Lock         |
| 7    | 322-8       | 4    | Screw-HH            | 28   | 323-7    | 2    | Screw-HH            |
| 8    | 71-4410     | 4    | Spacer              | 29   | 92-8947  | 1    | Transmission ASM    |
| 9    | 3256-3      | 4    | Washer-Flat         | 30   | 41-8760  | 1    | Gasket              |
| 10   | 322-10      | 4    | Screw-HH            | 31   | 86-7220  | 1    | Gear-Pinion         |
| 11   | 321-2       | 2    | Screw-HH            | 32   | 32120-72 | 1    | Ring-Snap           |
| 12   | 3296-42     | 4    | Nut-Lock, NI        | 33   | 32121-6  | 1    | Pin-Roll, Slotted   |
| 13   | 54-9290     | 2    | Bracket-Mounting    | 34   | 340-77   | 1    | Fitting-HYD, 90 DEG |
| 15   | 68-8660     | 1    | Fitting-HYD, 90 DEG | 34:1 | 237-22   | 1    | O-Ring              |
| 15:1 | 237-80      | 1    | O-Ring              | 34:2 | 237-42   | 1    | O-Ring              |
| 15:2 | 237-81      | 1    | O-Ring              | 35   | 340-99   | 1    | Fitting-HYD, 90 DEG |
| 16   | 321-4       | 2    | Screw-HH            | 35:1 | 237-30   | 1    | O-Ring              |
| 17   | 68-8990     | 1    | Filter Head ASM     | 35:2 | 237-42   | 1    | O-Ring              |
| 18   | 54-9300-03  | 1    | Cover-Shaft, Pump   | 36   | 33-4380  | 1    | Hub-Pump            |
| 19   | 105-0033-03 | 1    | Drive Shaft ASM     | 37   | 3257-32  | 1    | Key-Woodruff        |
| 21   | 23-9740     | 1    | Filter-Oil          | 49   | 3241-5   | 2    | Screw-Set           |
| 22   | 2412-34     | 2    | Clamp-Hose          |      |          |      |                     |
| 23   | 68-9650     | 1    | Hose-Axle           |      |          |      |                     |
| 24   | 70-2620     | 1    | Fitting-HYD, 90 DEG |      |          |      |                     |
| 24:1 | 237-81      | 1    | O-Ring              |      |          |      |                     |
| 25   | 353-508     | 1    | Plug                |      |          |      |                     |
| 25:1 | 237-42      | 1    | O-Ring              |      |          |      |                     |

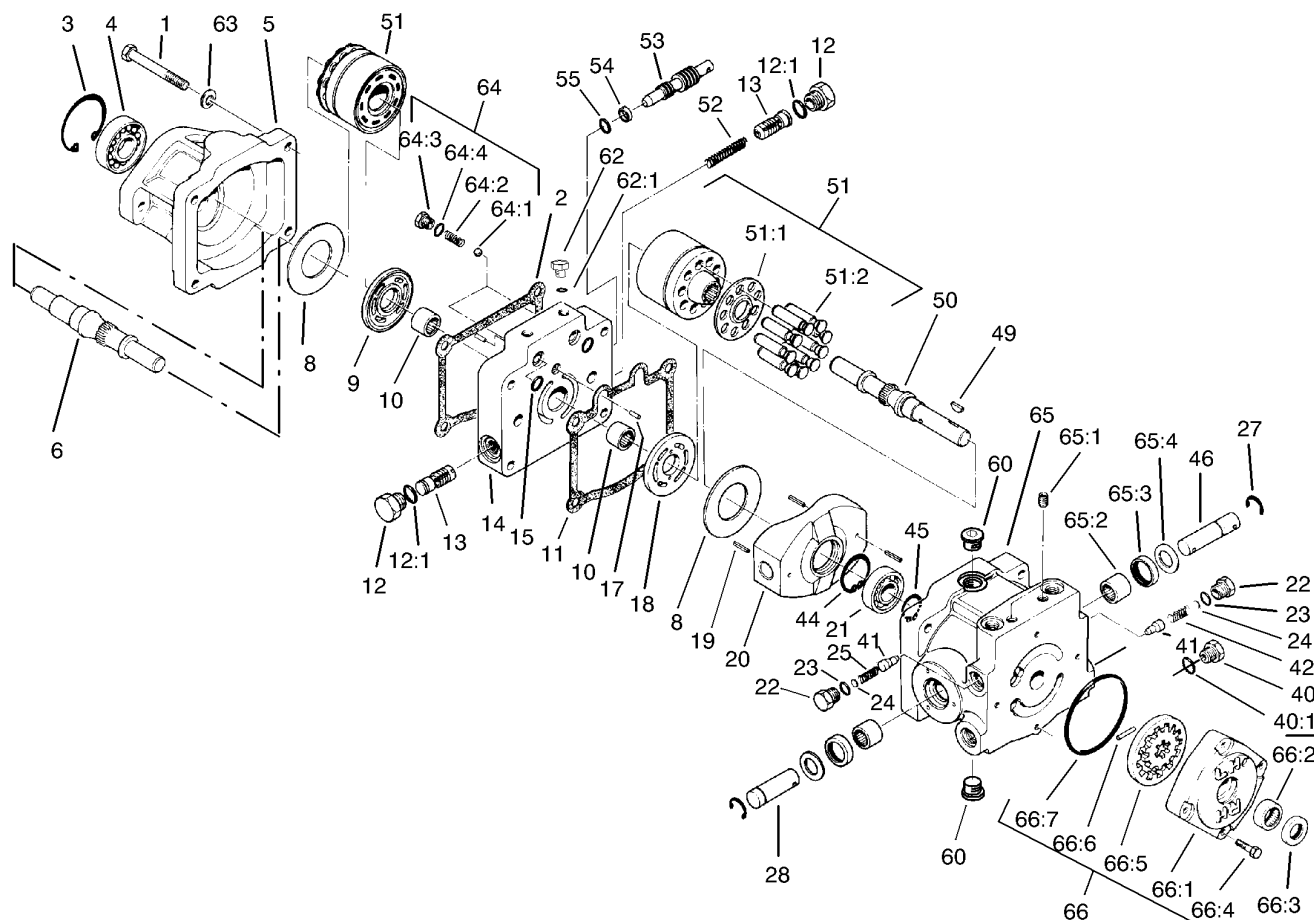

## Transmission Assembly No. 92-8947


| Ref  | Part No. | Qty. | Description           |
|------|----------|------|-----------------------|
| 1    | 323-56   | 4    | Screw-HH              |
| 2    | 67-9100  | 1    | Gasket                |
| 3    | 32120-8  | 1    | Ring-Snap             |
| 4    | 72-3750  | 1    | Bearing-Roller        |
| 5    | 67-9080  | 1    | Housing-Motor         |
| 6    | 46-8410  | 1    | Shaft-Motor           |
| 8    | 25-2380  | 2    | Plate-Thrust          |
| 9    | 25-2390  | 1    | Plate-Valve, Motor    |
| 10   | 46-8400  | 2    | Bearing-Shaft         |
| 11   | 25-2400  | 1    | Gasket                |
| 12   | 353-550  | 2    | Plug-HYD, HH          |
| 12:1 | 237-79   | 1    | O-Ring                |
| 13   | 25-2410  | 2    | Valve ASM             |
| 14   | 92-8918  | 1    | Section-Center        |
| 15   | 93-4132  | 2    | O-Ring                |
| 17   | 25-2430  | 2    | Pin-Dowel             |
| 18   | 25-2440  | 1    | Plate-Valve, Pump     |
| 19   | 32121-91 | 3    | Pin-Spring            |
| 20   | 25-2450  | 1    | Plate-Swash, Variable |
| 21   | 251-8    | 1    | Bearing-Ball          |
| 22   | 25-2460  | 2    | Plug-HH               |
| 23   | 237-86   | 4    | O-Ring                |
| 24   | 25-2470  | 2    | Pack-Shim             |
| 25   | 25-2480  | 1    | Spring-Valve          |
 
| Ref  | Part No. | Qty. | Description           |
|------|----------|------|-----------------------|
| 27   | 32151-46 | 2    | Ring-Retaining        |
| 28   | 25-2500  | 1    | Shaft-Trunnion        |
| 40   | 353-551  | 1    | Plug-HH               |
| 40:1 | 237-80   | 1    | O-Ring                |
| 41   | 83-7260  | 2    | Cone-Relief, Charge   |
| 42   | 25-2570  | 1    | Spring-Valve          |
| 44   | 32151-75 | 1    | Ring-Retaining        |
| 45   | 32120-15 | 1    | Ring-Snap, EXT        |
| 46   | 25-2580  | 1    | Shaft-Trunnion        |
| 49   | 3257-32  | 1    | Key-Woodruff          |
| 50   | 67-8020  | 1    | Shaft-Pump            |
| 51   | 48-1800  | 2    | Cylinder Block Kit    |
| 51:1 |          | 1    | Retainer-Slipper      |
| 51:2 |          | 9    | Piston ASM            |
| 52   | 25-2610  | 1    | Spring-Valve          |
| 53   | 88-8220  | 1    | Valve-By Pass         |
| 54   | 25-2630  | 1    | Ring-Back Up          |
| 55   | 237-22   | 1    | O-Ring                |
| 60   | 67-9090  | 1    | Plug ASM              |
| 62   | 75-0170  | 4    | Plug-Thread, Straight |
| 62:1 | 92-8777  | 1    | O-Ring                |
| 63   | 93-0312  | 4    | Washer-Hardened       |
| 64   | 99-5689  | 1    | Check Valve ASM       |
| 64:1 | 25-2490  | 1    | Ball                  |

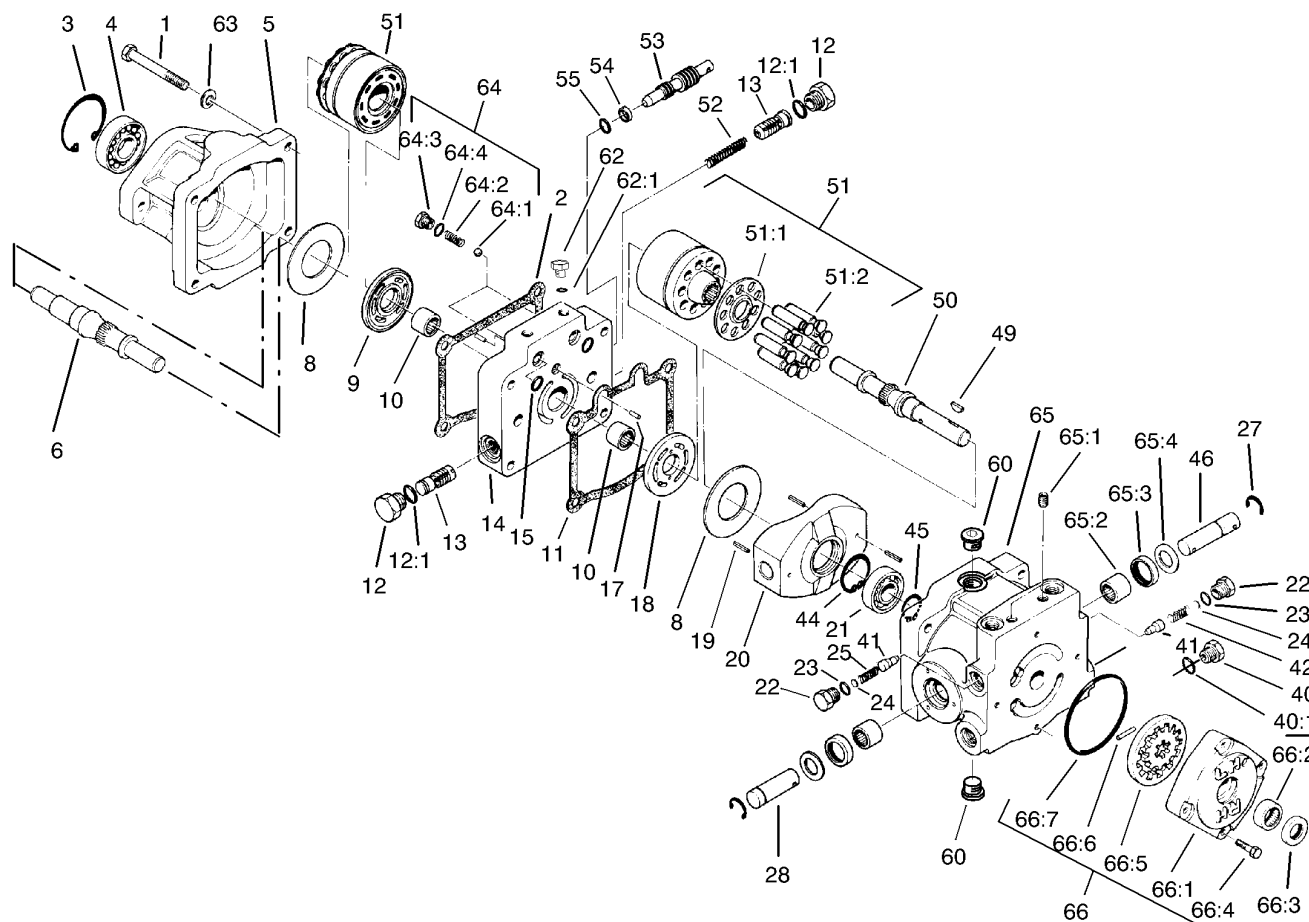


## Transmission Assembly No. 92-8947 (continued)
 
| Ref  | Part No. | Qty. | Description            |  |  |  |  |
|------|----------|------|------------------------|--|--|--|--|
| 64:2 | 25-2640  | 1    | Spring-Valve           |  |  |  |  |
| 64:3 | 25-2650  | 1    | Plug-Valve, Check      |  |  |  |  |
| 64:4 | 237-86   | 1    | O-Ring                 |  |  |  |  |
| 65   | 54-7890  | 1    | Housing Kit            |  |  |  |  |
| 65:1 | 285-17   | 2    | Plug-Pipe              |  |  |  |  |
| 65:2 | 252-82   | 2    | Bearing-Needle         |  |  |  |  |
| 65:3 | 25-3210  | 2    | Seal-Lip               |  |  |  |  |
| 65:4 | 25-2510  | 2    | Washer-Flat            |  |  |  |  |
| 66   | 25-3190  | 1    | Charge Pump Kit        |  |  |  |  |
| 66:1 | 25-2550  | 1    | Housing-Pump, Charge   |  |  |  |  |
| 66:2 | 67-8050  | 1    | Bearing-Needle         |  |  |  |  |
| 66:3 | 93-4133  | 1    | Seal-Lip               |  |  |  |  |
| 66:4 | 322-4    | 4    | Screw-HH               |  |  |  |  |
| 66:5 | 25-2540  | 1    | Gerotor ASM            |  |  |  |  |
| 66:6 | 25-2530  | 1    | Pin-Straight, Headless |  |  |  |  |
| 66:7 | 237-95   | 1    | O-Ring                 |  |  |  |  |

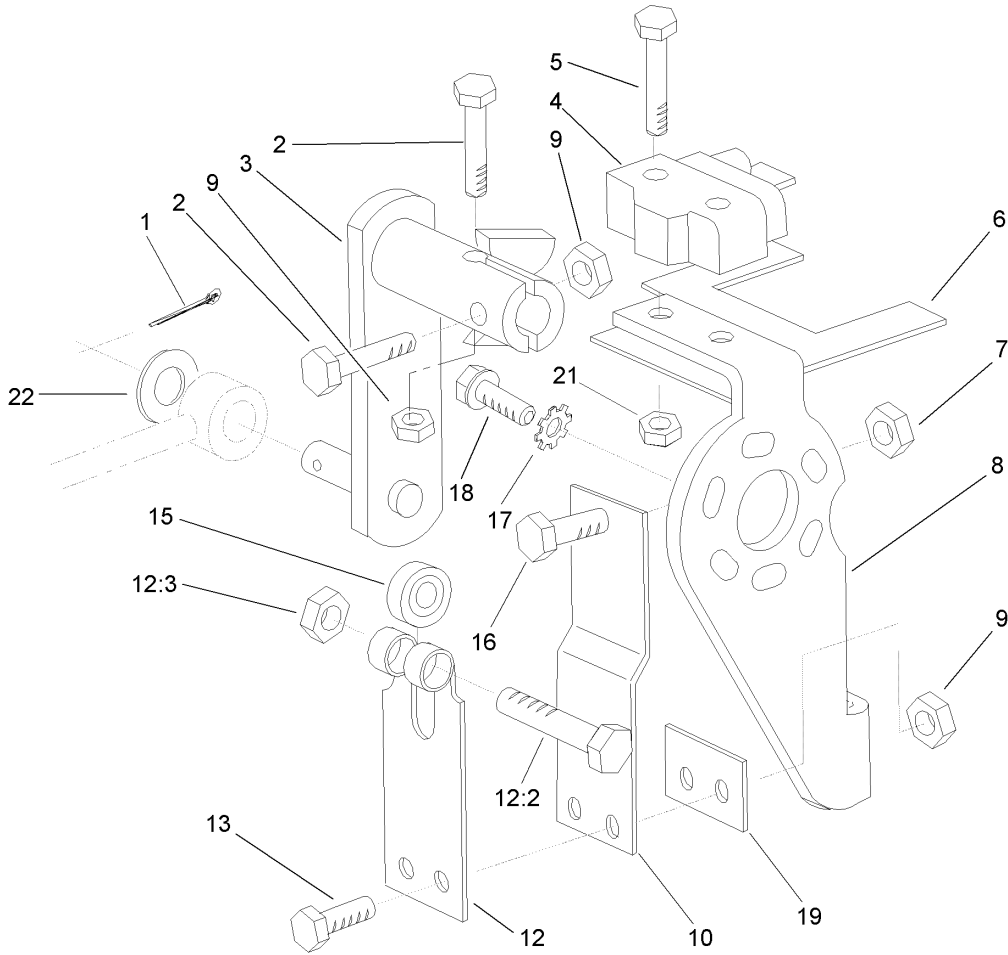

Neutral Centering Device Assembly


| Ref  | Part No.    | Qty. | Description              |  |  |  |  |
|------|-------------|------|--------------------------|--|--|--|--|
| 1    | 3272-10     | 1    | Pin-Cotter               |  |  |  |  |
| 2    | 321-9       | 2    | Screw-HH                 |  |  |  |  |
| 3    | 108-6555-03 | 1    | Pump Lever ASM           |  |  |  |  |
| 4    | 29-6163     | 1    | Switch-Micro             |  |  |  |  |
| 5    | 32105-21    | 2    | Screw-HH                 |  |  |  |  |
| 6    | 46-8810     | 1    | Stop-Spring, Leaf        |  |  |  |  |
| 7    | 3219-2      | 1    | Nut-Hex                  |  |  |  |  |
| 8    | 29-6120-03  | 1    | Plate-Pump               |  |  |  |  |
| 9    | 3296-42     | 4    | Nut-Lock, NI             |  |  |  |  |
| 10   | 29-6170     | 1    | Extended Leaf Spring ASM |  |  |  |  |
| 12   | 110-9650    | 1    | Leaf Spring ASM          |  |  |  |  |
| 12:2 | 36-2250     | 1    | Shoulder Bolt            |  |  |  |  |
| 12:3 | 3296-42     | 1    | Nut-Lock, NI             |  |  |  |  |
| 13   | 321-6       | 2    | Screw-HH                 |  |  |  |  |
| 15   | 251-259     | 1    | Bearing-Ball             |  |  |  |  |
| 16   | 3210-7      | 1    | Screw-HH                 |  |  |  |  |
| 17   | 3255-7      | 3    | Washer-Lock / EXT        |  |  |  |  |
| 18   | 49-2040     | 3    | Screw-HWHTF              |  |  |  |  |
| 19   | 51-3150     | 1    | Shim-Arm, Spring         |  |  |  |  |
| 21   | 3296-9      | 2    | Nut-Lock                 |  |  |  |  |
| 22   | 3256-6      | 1    | Washer-Flat              |  |  |  |  |

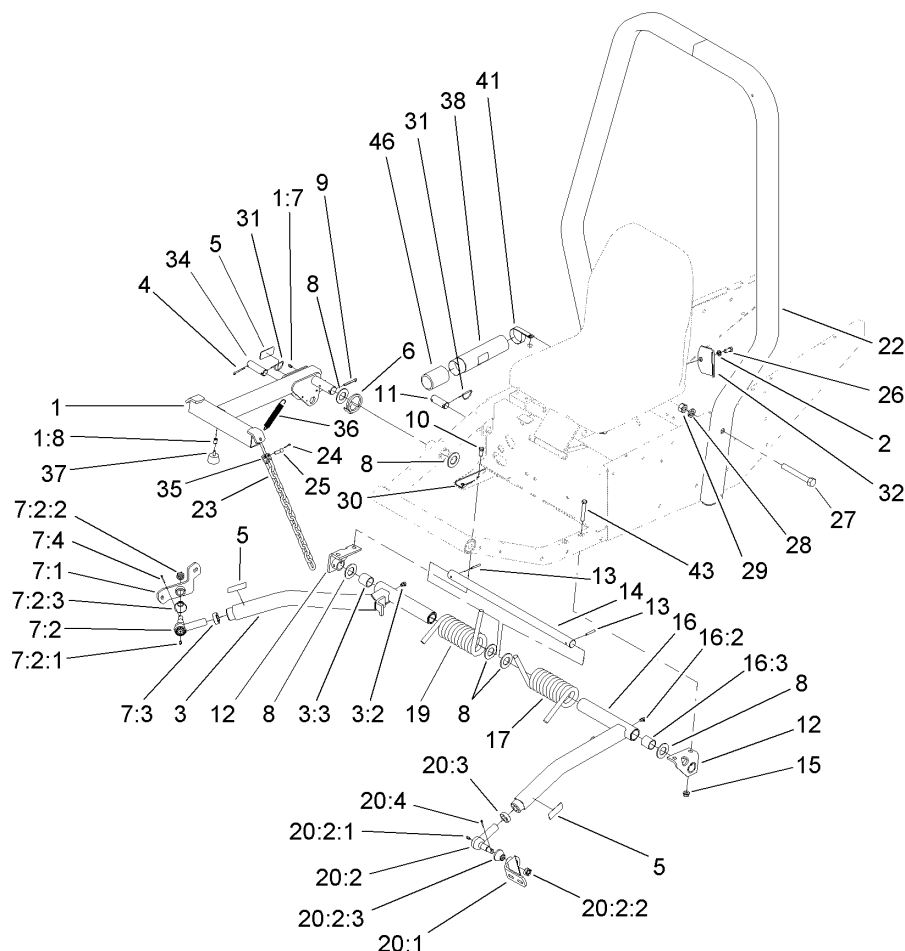 

## Push Arm and Roll-Over Protection System Assembly


| Ref   | Part No.   | Qty. | Description          |
|-------|------------|------|----------------------|
| 1     | 66-6370    | 1    | Lift Arm ASM         |
| 1:7   | 302-5      | 1    | Fitting-Grease       |
| 1:8   | 3290-472   | 1    | Insert-Threaded      |
| 2     | 3253-6     | 2    | Washer-Lock          |
| 3     | 66-7150    | 1    | Arm-Push, RH         |
| 3:2   | 302-33     | 1    | Fitting-Grease       |
| 3:3   | 256-126    | 2    | Bushing              |
| 4     | 3272-24    | 1    | Pin-Cotter           |
| 5     | 55-4300    | 3    | Decal-Warning        |
| 6     | 46-8840-01 | 1    | Spring-Lift Arm      |
| 7     |            | 1    | RH Ball Joint ASM    |
| 7:1   | 21-3020-01 | 1    | Mount-Balljoint, RH  |
| 7:2   | 86-8100-01 | 1    | Ball Joint ASM       |
| 7:2:1 | 302-5      | 1    | Fitting-Grease       |
| 7:2:2 | 32136-2    | 1    | Nut-SHH              |
| 7:2:3 | 105-7835   | 1    | Seal                 |
| 7:3   | 21-3000    | 1    | Nut-HJ               |
| 7:4   | 3272-11    | 1    | Pin-Cotter           |
| 8     | 5-1754     | 6    | Washer-Flat          |
| 9     | 3272-33    | 1    | Pin-Cotter           |
| 10    | 110-9672   | 2    | Screw-HH             |
| 11    | 3-7292     | 1    | Pin-Clevis           |
| 12    | 21-2860-01 | 2    | Push Arm Bracket ASM |
| 13    | 32121-84   | 2    | Pin-Spiral           |
 
| Ref    | Part No.    | Qty. | Description                |
|--------|-------------|------|----------------------------|
| 14     | 21-2990     | 1    | Shaft-Pivot                |
| 15     | 110-9671    | 4    | Nut-HF                     |
| 16     | 21-2960     | 1    | Arm-Push, LH               |
| 16:2   | 302-33      | 1    | Fitting-Grease             |
| 16:3   | 256-126     | 2    | Bushing                    |
| 17     | 105-9550-01 | 1    | Spring-Torsion, LH (Light) |
| 17     | 21-2900-01  | 1    | Spring-Torsion, LH         |
| 19     | 21-2890-01  | 1    | Spring-Torsion, RH         |
| 20     |             | 1    | LH Ball Joint ASM          |
| 20:1   | 21-3050-01  | 1    | LH Ball Joint Mount ASM    |
| 20:2   | 86-8100-01  | 1    | Ball Joint ASM             |
| 20:2:1 | 302-5       | 1    | Fitting-Grease             |
| 20:2:2 | 32136-2     | 1    | Nut-SHH                    |
| 20:2:3 | 105-7835    | 1    | Seal                       |
| 20:3   | 21-3000     | 1    | Nut-HJ                     |
| 20:4   | 3272-11     | 1    | Pin-Cotter                 |
| 22     | 99-1299-03  | 1    | ROPS-2 Post                |
| 23     | 3-1365      | 3    | Chain                      |
| 24     | 3272-10     | 6    | Pin-Cotter                 |
| 25     | 283-10      | 6    | Pin-Clevis                 |
| 26     | 3212-4      | 2    | Screw-HH                   |
| 27     | 328-12      | 4    | Screw-HH                   |
| 28     | 3253-9      | 4    | Washer-Lock                |
| 29     | 3217-12     | 4    | Nut-Hex                    |

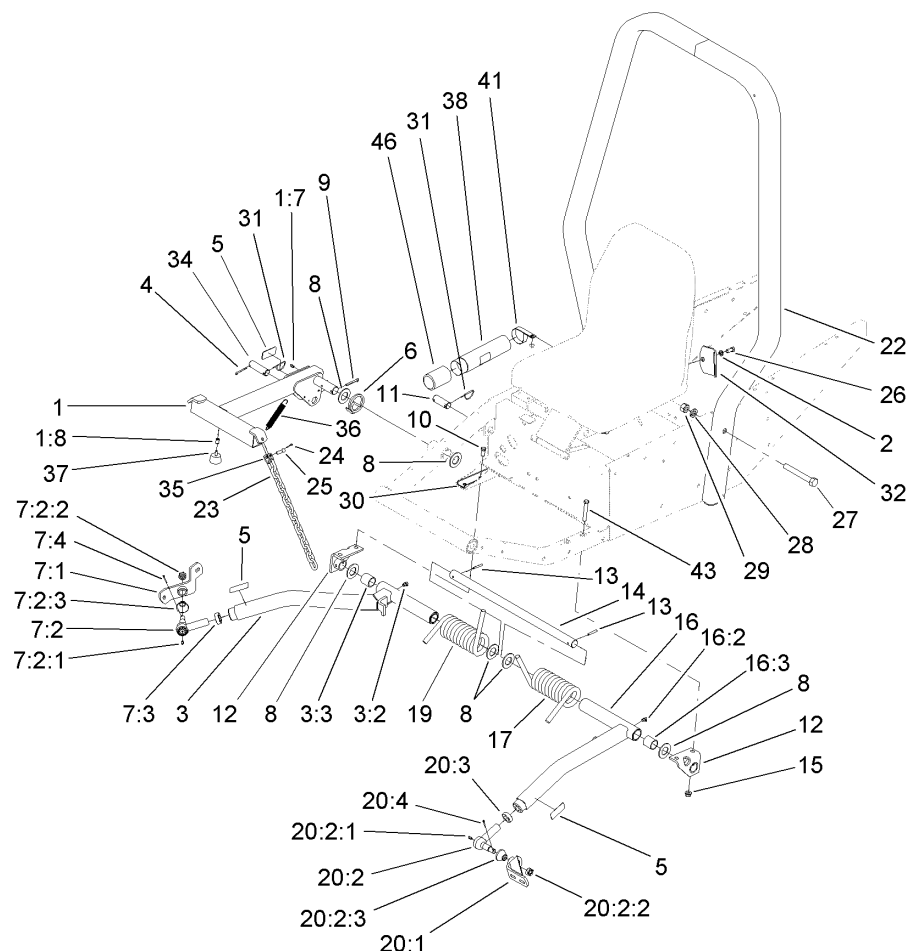


## Push Arm and Roll-Over Protection System Assembly (continued)
 
| Ref | Part No.   | Qty. | Description           |
|-----|------------|------|-----------------------|
| 30  | 23-1950-01 | 1    | Support-Reinforcement |
| 31  | 5-3126     | 3    | Pin-Lynch             |
| 32  | 72-9390    | 1    | Belt-Seat             |
| 34  | 24-9510    | 1    | Pin                   |
| 35  | 5-2942     | 6    | Shackle               |
| 36  | 21-1830    | 1    | Spring-Extension      |
| 37  | 68-3270    | 1    | Bumper-Rubber         |
| 38  | 104-7050   | 1    | Housing-Manual        |
| 41  | 2412-133   | 2    | R-Clamp               |
| 43  | 110-9673   | 2    | Screw-HH              |
| 46  | 104-7048   | 1    | Cap-Housing           |

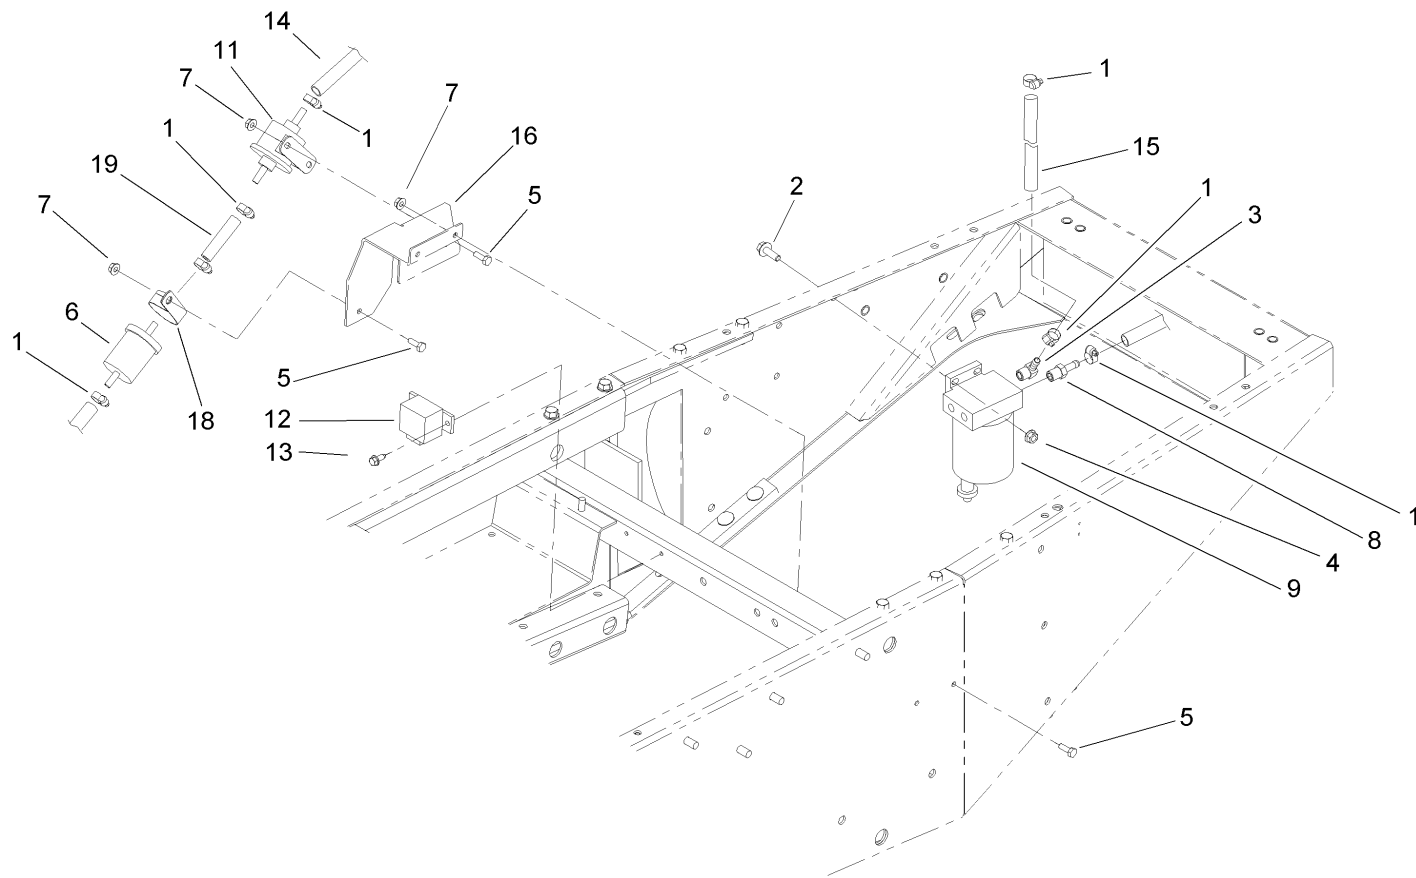


Water and Fuel Filter Assembly

| Ref | Part No.    | Qty. | Description             |  |  |  |  |
|-----|-------------|------|-------------------------|--|--|--|--|
| 1   | 2412-108    | 7    | Clamp-Worm              |  |  |  |  |
| 2   | 3234-29     | 2    | Screw-HHF               |  |  |  |  |
| 3   | 353-781     | 1    | Fitting-Elbow           |  |  |  |  |
| 4   | 32128-20    | 2    | Nut-HF                  |  |  |  |  |
| 5   | 321-4       | 5    | Screw-HH                |  |  |  |  |
| 6   | 98-7612     | 1    | Filter-Fuel             |  |  |  |  |
| 7   | 32128-33    | 5    | Nut-HF                  |  |  |  |  |
| 8   | 353-783     | 1    | Fitting-Straight        |  |  |  |  |
| 9   | 98-9305     | 1    | Water / Fuel Filter ASM |  |  |  |  |
| 11  | 104-5215    | 1    | Pump-Fuel, Electric     |  |  |  |  |
| 12  | 66-8800     | 1    | Relay                   |  |  |  |  |
| 13  | 32144-10    | 2    | Screw-HWH               |  |  |  |  |
| 14  | 110-3259    | 1    | Hose-Fuel               |  |  |  |  |
| 15  | 109-0274    | 1    | Hose-Fuel               |  |  |  |  |
| 16  | 105-2561-03 | 1    | Bracket-Pump, Fuel      |  |  |  |  |
| 18  | 2412-147    | 1    | Clamp                   |  |  |  |  |
| 19  | 110-0047    | 1    | Hose-Fuel               |  |  |  |  |

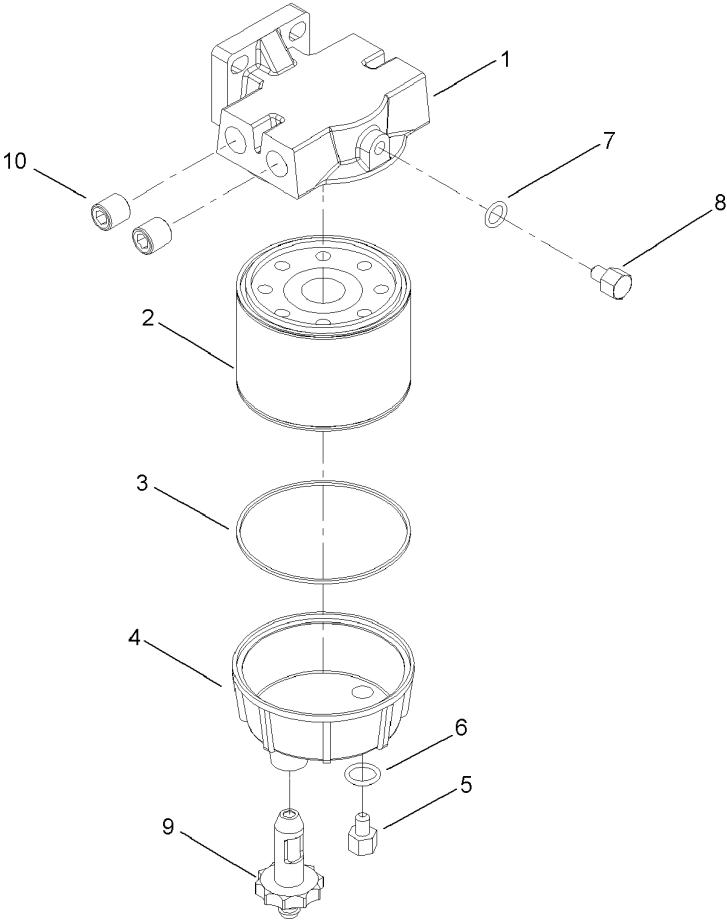 

**Water and Fuel Filter Assembly No. 98-9305**

 
| Ref | Part No. | Qty. | Description         |  |  |  |  |
|-----|----------|------|---------------------|--|--|--|--|
| 1   | 98-9772  | 1    | Head-Filter         |  |  |  |  |
| 2   | 98-9764  | 1    | Element             |  |  |  |  |
| 3   | 98-9774  | 1    | O Ring-Base, Filter |  |  |  |  |
| 4   | 98-9775  | 1    | Base-Filter         |  |  |  |  |
| 5   | 98-9773  | 1    | Plug-Base, Filter   |  |  |  |  |
| 6   | 237-42   | 1    | O-Ring              |  |  |  |  |
| 7   | 237-78   | 1    | O-Ring              |  |  |  |  |
| 8   | 98-9776  | 1    | Plug-Head, Filter   |  |  |  |  |
| 9   | 98-9777  | 1    | Drain Valve ASM     |  |  |  |  |
| 10  | 285-22   | 2    | Plug-Pipe           |  |  |  |  |

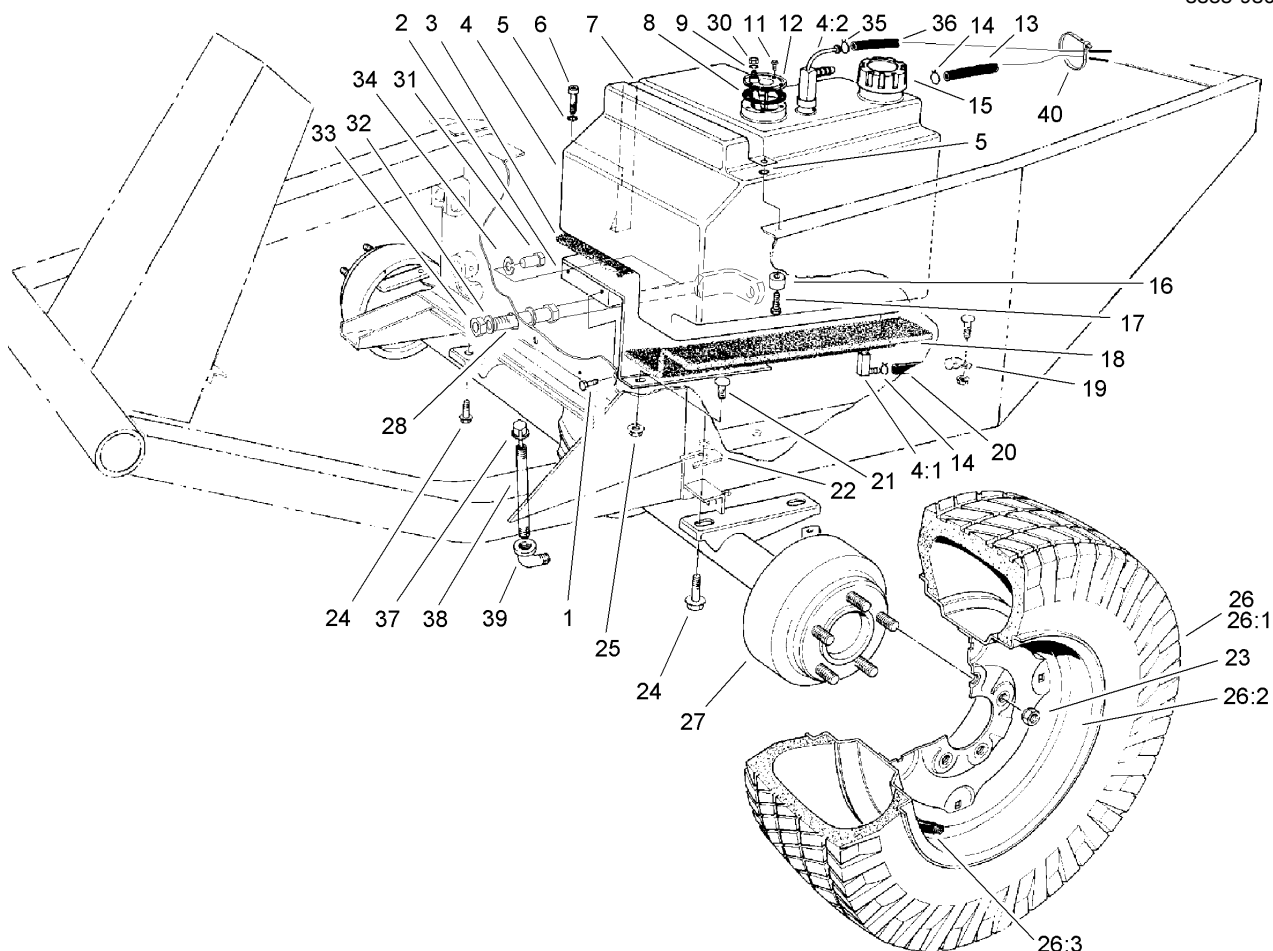

## Fuel Tank and Front Axle Assembly

| Ref | Part No. | Qty. | Description             |
|-----|----------|------|-------------------------|
| 1   | 3234-11  | 2    | Screw-HHF               |
| 2   | 68-9760  | 1    | Fuel Tank Base ASM      |
| 3   | 21-3600  | 1    | Foam-Support, Tank      |
| 4   | 43-4150  | 1    | Fuel Tank ASM           |
| 4:1 | 43-4190  | 1    | Fitting ASM             |
| 4:2 | 43-4160  | 1    | Fitting-Return And Vent |
| 5   | 3253-3   | 2    | Washer-Lock             |
| 6   | 32104-96 | 1    | Screw-HH                |
| 7   | 37-9550  | 1    | Strap-Tank, Gas         |
| 8   | 62-7650  | 1    | Gasket                  |
| 9   | 3253-17  | 1    | Washer-Lock             |
| 11  | 32144-53 | 5    | Screw-SHWH              |
| 12  | 105-2563 | 1    | Sender-Fuel             |
| 13  | 110-4109 | 1    | Hose-Fuel               |
| 14  | 2412-108 | 2    | Clamp-Worm              |
| 15  | 55-3572  | 1    | Gas Cap ASM             |
| 16  | 22-7810  | 1    | Spacer                  |
| 17  | 321-6    | 1    | Screw-HH                |
| 18  | 21-3610  | 1    | Foam-Support, Tank      |
| 19  | 2412-4   | 1    | Clamp                   |
| 20  | 110-4105 | 1    | Hose-Fuel               |
| 21  | 3230-2   | 3    | Bolt-CARR               |
| 22  | 42-6080  | 1    | Shim-Axle               |
| 23  | 23-7270  | 10   | Nut-Wheel               |

 
| Ref  | Part No.   | Qty. | Description           |
|------|------------|------|-----------------------|
| 24   | 32144-67   | 4    | Screw                 |
| 25   | 32128-20   | 3    | Nut-HF                |
| 26   |            | 2    | Wheel And Tire ASM    |
| 26:1 | 95-3348    | 1    | Tire                  |
| 26:2 | 217-117    | 1    | Wheel                 |
| 26:3 | 232-27     | 1    | Stem-Valve            |
| 27   | 86-9600-03 | 1    | Axle ASM              |
| 28   | 24-9830-01 | 1    | Support-Axle          |
| 30   | 3219-14    | 1    | Nut-Hex               |
| 31   | 323-6      | 1    | Screw-HH              |
| 32   | 3256-6     | 2    | Washer-Flat           |
| 33   | 3217-9     | 2    | Nut-HH                |
| 34   | 3253-21    | 1    | Washer-Lock           |
| 35   | 2412-80    | 2    | Clamp-Line, Fuel      |
| 36   | 110-5688   | 1    | Hose-Fuel             |
| 37   | 23-5180    | 1    | Dipstick-Axle         |
| 38   | 289-37     | 1    | Nipple-Pipe           |
| 39   | 2811-9     | 1    | Fitting-Elbow, Street |
| 40   | 3290-379   | 1    | Tie-Cable             |

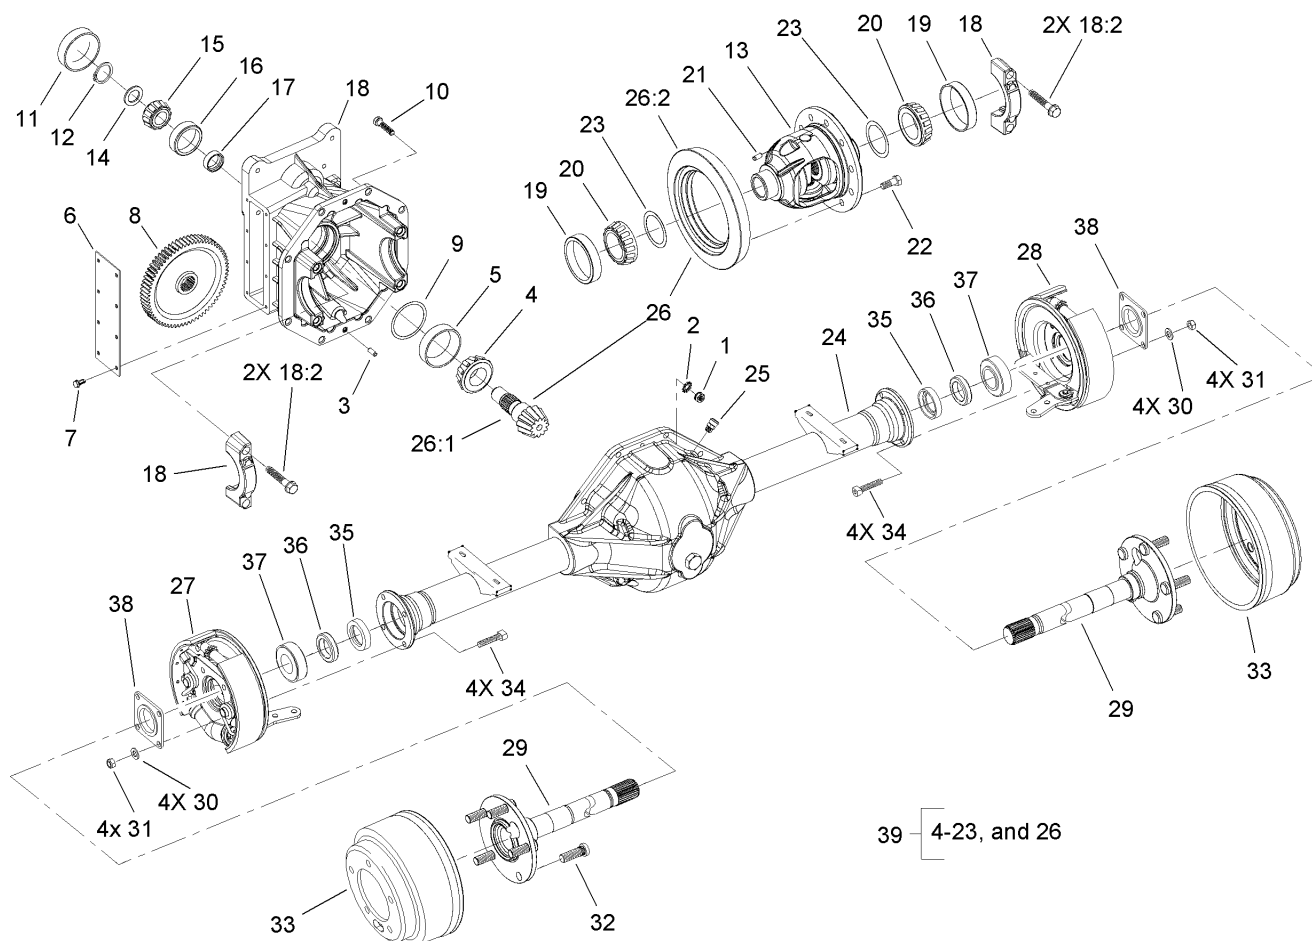

## Front Axle Assembly No. 86-9600-03

| Ref | Part No.  | Qty. | Description                |
|-----|-----------|------|----------------------------|
| 1   | 3219-2    | 8    | Nut-Hex                    |
| 2   | 3255-8    | 8    | Washer-Lock                |
| 3   | 21-8270   | 2    | Pin-Dowel                  |
| 4   | 43-6760   | 1    | Bearing-Roller, Cone Taper |
| 5   | 43-6750   | 1    | Bearing-Taper, Cup         |
| 6   | 21-7830   | 1    | Cover-Gear                 |
| 7   | 32144-112 | 8    | Screw-HWH                  |
| 8   | 86-7230   | 1    | Gear-Input, Transmission   |
| 9   | 43-6710   | 1    | Shim-Pinion (.003)         |
| 9   | 43-6711   | 1    | Shim-Pinion (.005)         |
| 9   | 43-6712   | 1    | Shim-Pinion (.010)         |
| 9   | 43-6713   | 1    | Shim-Pinion (.030)         |
| 10  | 3210-7    | 8    | Screw-HH                   |
| 11  | 21-7850   | 1    | Plug-Cup                   |
| 12  | 43-6550   | 1    | Ring-Snap                  |
| 13  | 110-4136  | 1    | Differential Case ASM      |
| 14  | 46-2210   | 1    | Shim-Bearing, Front        |
| 14  | 46-2211   | 1    | Shim-Front Bearing, .033   |
| 14  | 46-2212   | 1    | Shim-Front Bearing, .035   |
| 14  | 46-2213   | 1    | Shim-Front Bearing, .037   |
| 14  | 46-2214   | 1    | Shim-Front Bearing, .039   |
| 14  | 46-2215   | 1    | Shim-Front Bearing, .041   |
| 14  | 46-2216   | 1    | Shim-Front Bearing, .043   |
| 14  | 46-2220   | 1    | Shim-Front Bearing, .045   |

 
| Ref  | Part No. | Qty. | Description                |
|------|----------|------|----------------------------|
| 14   | 46-2221  | 1    | Shim-Front Bearing, .047   |
| 14   | 46-2222  | 1    | Shim-Front Bearing, .049   |
| 14   | 46-2223  | 1    | Shim-Front Bearing, .051   |
| 14   | 46-2224  | 1    | Shim-Front Bearing, .053   |
| 14   | 46-2225  | 1    | Shim-Front Bearing, .055   |
| 14   | 46-2226  | 1    | Shim-Front Bearing, .057   |
| 15   | 254-91   | 1    | Cone-Bearing               |
| 16   | 254-90   | 1    | Bearing-Cup                |
| 17   | 21-8020  | 1    | Spacer-Bearing             |
| 18   | 86-9580  | 1    | Upper Housing ASM          |
| 18:2 | 92-1773  | 4    | Screw-HHF                  |
| 19   | 254-66   | 2    | Cup-Bearing, Roller        |
| 20   | 254-65   | 2    | Cone-Bearing, Roller       |
| 21   | 32121-15 | 1    | Pin-Roll                   |
| 22   | 21-7770  | 5    | Screw-Gear, Drive          |
| 23   | 21-8120  | 1    | Shim-Bearing, Diff. (.030) |
| 23   | 21-8110  | 1    | Shim-Bearing, Diff. (.010) |
| 23   | 21-8100  | 1    | Shim-Bearing, Diff. (.005) |
| 23   | 21-8090  | 1    | Shim-Bearing, Diff. (.003) |
| 24   | 43-6840  | 1    | Housing-Lower              |
| 25   | 72-9420  | 1    | Vent                       |
| 26   | 92-4848  | 1    | Gear And Pinion ASM        |
| 26:1 |          | 1    | Drive Pinion               |
| 26:2 |          | 1    | Ring Gear                  |

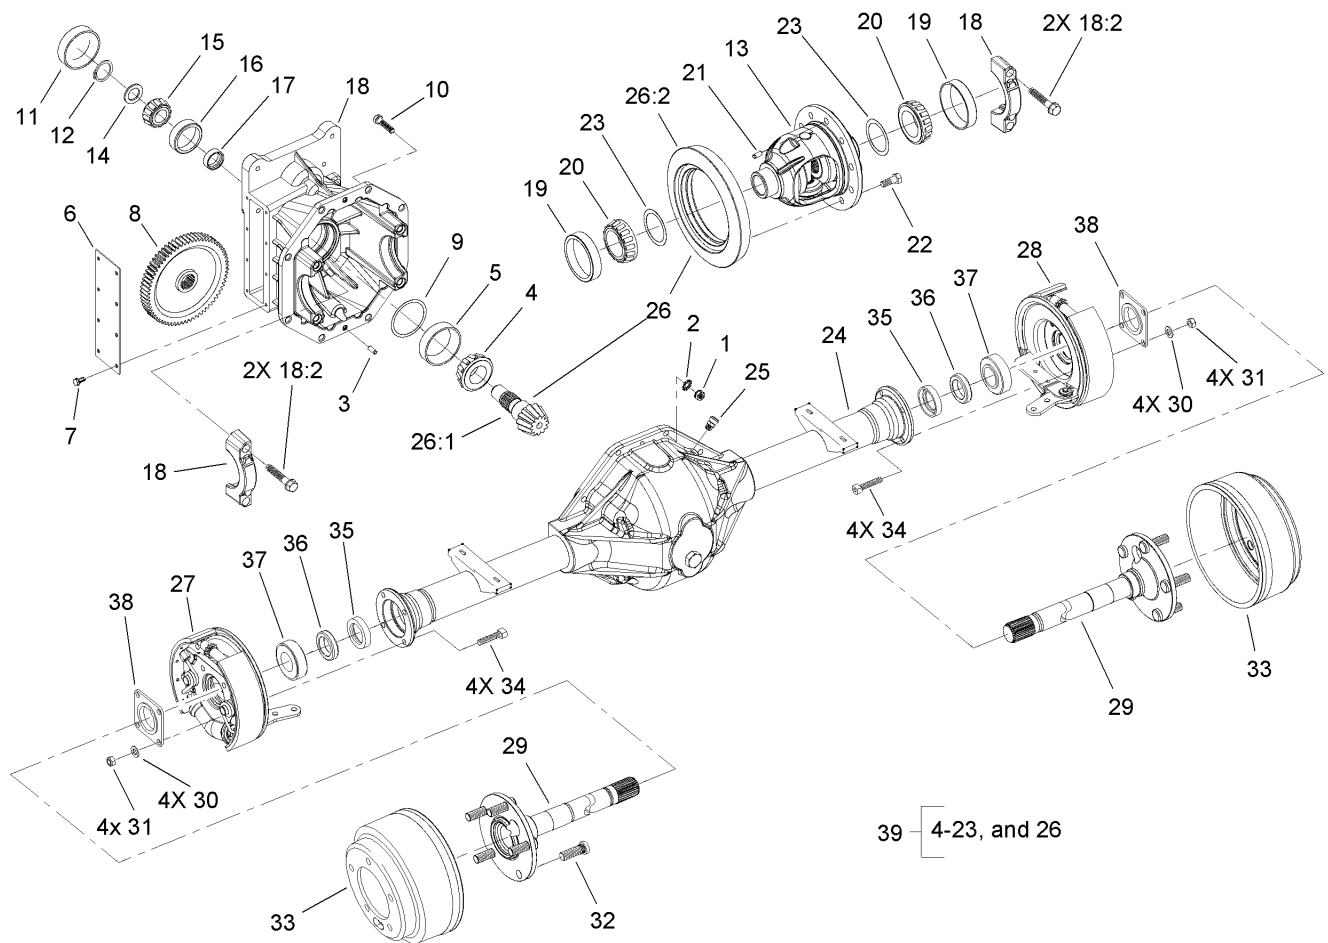

## Front Axle Assembly No. 86-9600-03 (continued)


| Ref | Part No.   | Qty. | Description                   |
|-----|------------|------|-------------------------------|
| 227 |            | 1    | RH Brake ASM                  |
| 228 |            | 1    | LH Brake ASM                  |
| 29  | 28-0650    | 1    | Flanged Axle Shaft            |
| 30  | 94-6936    | 8    | Washer-Hardened               |
| 31  | 94-6935    | 8    | Locknut                       |
| 32  | 242-34     | 10   | Stud-Drive                    |
| 33  | 28-0680-03 | 2    | Rear Axle Pin ASM             |
| 34  | 94-6934    | 8    | Screw-HH                      |
| 35  | 24-8840    | 2    | Ring-Retaining, Wheel Bearing |
| 36  | 99-6969    | 2    | Seal-Oil                      |
| 37  | 21-8180    | 2    | Bearing ASM                   |
| 38  | 28-0670    | 2    | Seal-Grease                   |
| 39  | 92-4903    | 1    | Differential Carrier ASM      |
 
|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |

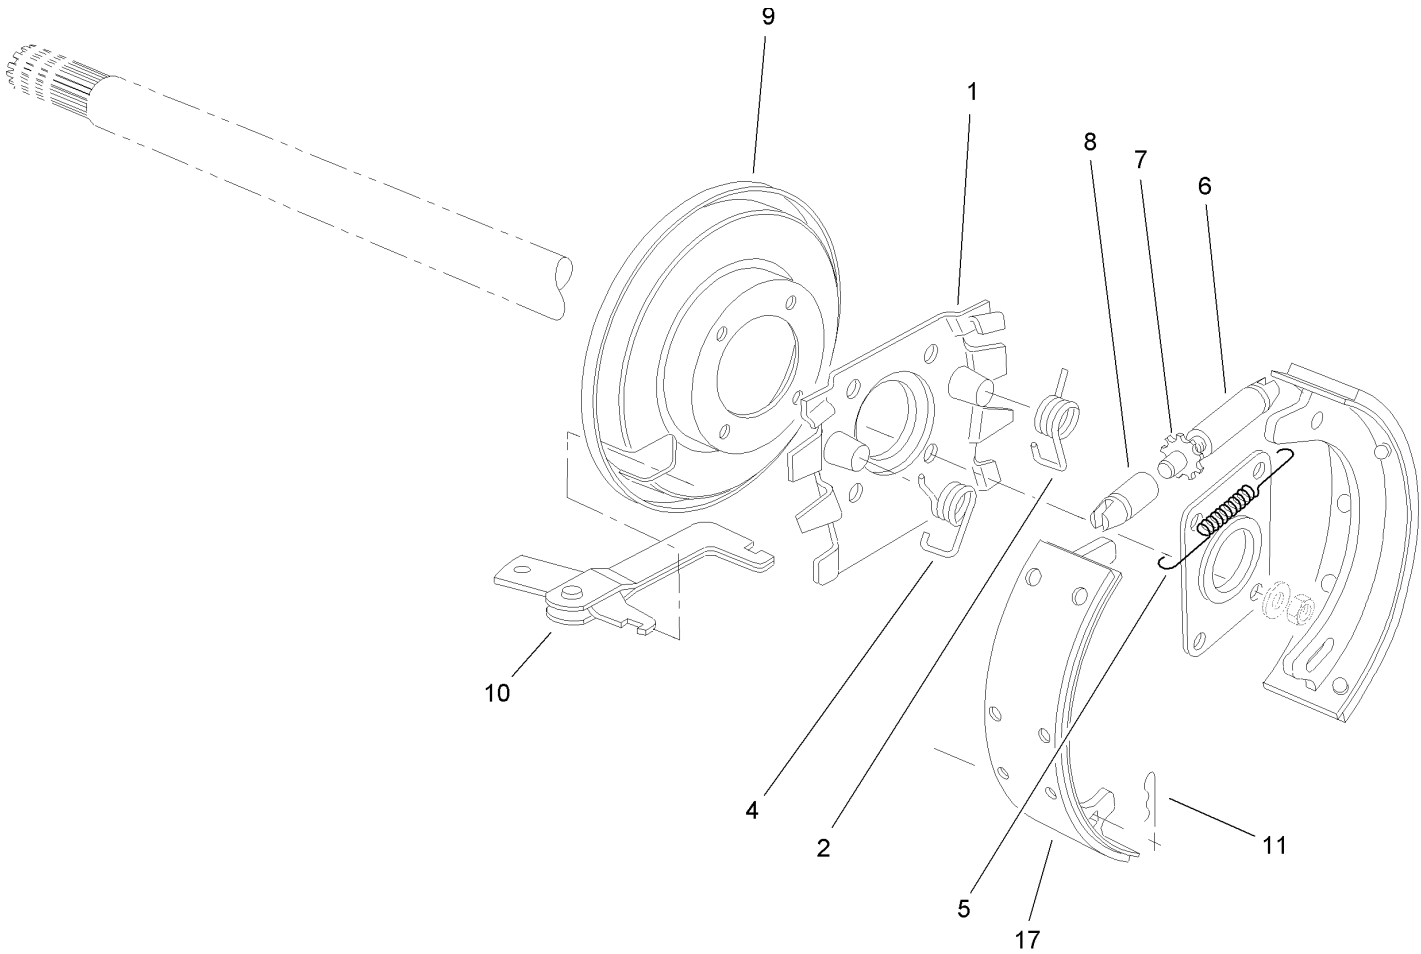


Front Axle Brake Assembly

| Ref | Part No. | Qty. | Description             |  |  |  |  |
|-----|----------|------|-------------------------|--|--|--|--|
| 1   | 43-6810  | 1    | Spider-Torque           |  |  |  |  |
| 2   | 21-9420  | 1    | Spring-Return, LH       |  |  |  |  |
| 4   | 21-9430  | 1    | Spring-Return, RH       |  |  |  |  |
| 5   | 21-9440  | 1    | Spring-Screw, Adjusting |  |  |  |  |
| 6   | 21-9380  | 1    | Nut-Pivot               |  |  |  |  |
| 7   | 21-9370  | 1    | Screw-Adjusting         |  |  |  |  |
| 8   | 21-9390  | 1    | Socket-Screw, Adjusting |  |  |  |  |
| 9   | 21-9450  | 1    | Shield-Dust             |  |  |  |  |
| 10  | 24-9180  | 1    | Strut And Lever ASM     |  |  |  |  |
| 11  | 21-9460  | 2    | Retainer-Lever, Brake   |  |  |  |  |
| 17  | 84-8600  | 1    | Set-Shoes, Lined        |  |  |  |  |

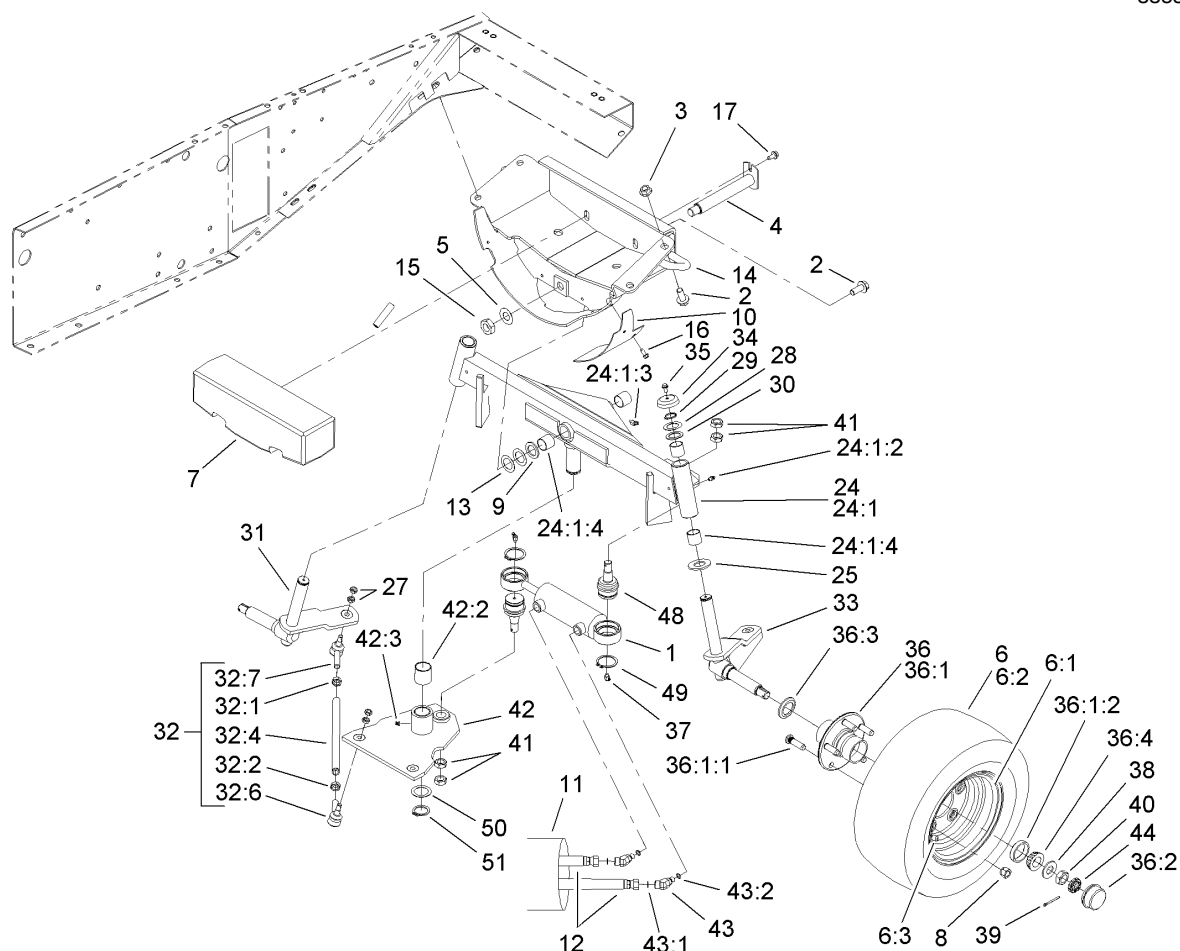 


## Rear Axle Assembly
 
| Ref    | Part No.    | Qty. | Description           | Ref    | Part No.   | Qty. | Description           |
|--------|-------------|------|-----------------------|--------|------------|------|-----------------------|
| 1      | 92-7828     | 1    | Cylinder-HYD          | 24:1:4 | 67-1750    | 6    | Bushing               |
| 2      | 3234-32     | 6    | Screw-HHF             | 25     | 256-121    | 2    | Washer-Thrust         |
| 3      | 32128-23    | 4    | Nut-HF                | 27     | 3220-3     | 8    | Nut-Hex, Jam          |
| 4      | 92-7807-01  | 1    | Rear Axle Pin ASM     | 28     | 5-1226     | 4    | Washer                |
| 5      | 71-4540     | 1    | Washer-Thrust         | 29     | 32151-36   | 2    | Ring-Retaining        |
| 26     |             | 2    | Wheel And Tire ASM    | 30     | 10-8110    | 2    | Washer-Thrust         |
| 6:1    | 217-106     | 1    | Wheel-8 Inch          | 31     | 93-3199-03 | 1    | RH Spindle ASM        |
| 6:2    | 231-105     | 1    | Tire-Rib              | 32     |            | 2    | Tie Rod-Steering ASM  |
| 6:3    | 232-31      | 1    | Stem-Valve            | 32:1   | 3220-12    | 1    | Nut-HJ (LH Thread)    |
| 7      | 98-3869-01  | 1    | Weight-Rear           | 32:2   | 3220-5-01  | 1    | Nut-HJ                |
| 8      | 242-50      | 10   | Nut-Lug               | 32:4   | 21-2000    | 1    | Tie Rod-Steering      |
| 9      | 92-7845     | 1    | Spacer-Hardened       | 32:6   | 21-0151    | 1    | LH Ball Joint ASM     |
| 10     | 99-2413-01  | 1    | Cover-Guard, Flywheel | 32:7   | 21-0141-03 | 1    | RH Ball Joint ASM     |
| 11     | 56-7980     | 1    | Sleeve-Protective     | 33     | 99-1292-03 | 1    | LH Spindle ASM        |
| 12     | 68-9710     | 2    | Hose-Steering, Rear   | 34     | 66-2990    | 2    | Cap-Spindle           |
| 13     | 56-2460     | 2    | Washer-Flat           | 35     | 3234-13    | 2    | Screw-HHF             |
| 14     | 92-7803-01  | 1    | Axle Support ASM      | 36     |            | 2    | Hub ASM               |
| 15     | 32146-20    | 1    | Nut-Jam               | 36:1   | 21-2820    | 1    | Hub                   |
| 16     | 32144-10    | 2    | Screw-HWH             | 36:1:1 | 10-6830    | 5    | Stud-Type, Drive      |
| 17     | 32144-14    | 1    | Screw-HWH             | 36:1:2 | 254-72     | 2    | Bearing-Cup, Tapered  |
| 24     | 106-8050-03 | 1    | Rear Axle ASM         | 36:2   | 241-119    | 1    | Cap-Dust              |
| 24:1   |             | 1    | Axle-Rear             | 36:3   | 253-129    | 1    | Seal                  |
| 24:1:2 | 302-5       | 2    | Fitting-Grease        | 36:4   | 254-94     | 2    | Bearing-Cone, Tapered |
| 24:1:3 | 302-11      | 1    | Fitting-Lube, 45 DEG  | 37     | 302-11     | 2    | Fitting-Lube, 45 DEG  |

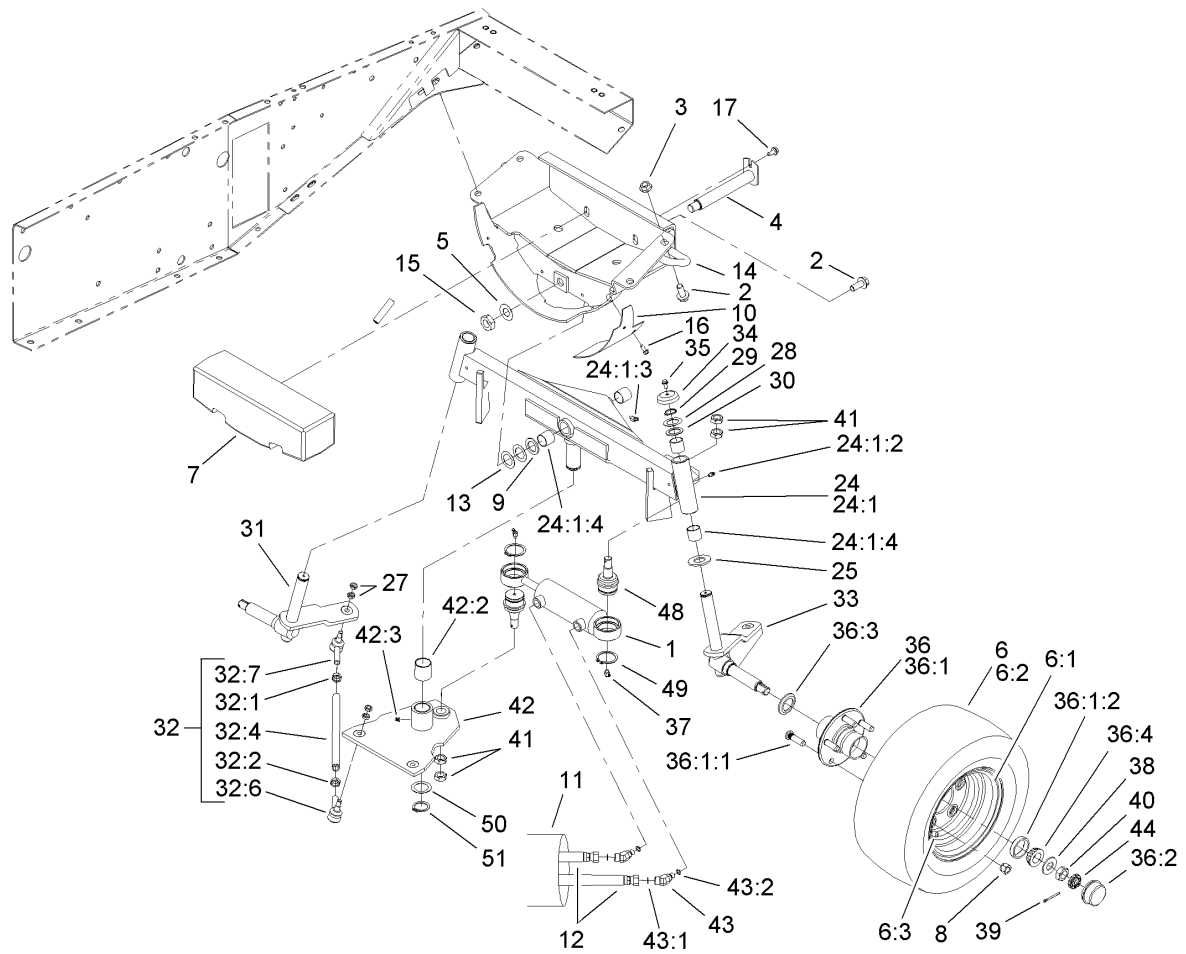


## Rear Axle Assembly (continued)
 
| Ref  | Part No.  | Qty. | Description              |  |  |  |  |
|------|-----------|------|--------------------------|--|--|--|--|
| 38   | 93-0309   | 2    | Washer-Tab               |  |  |  |  |
| 39   | 3272-13   | 2    | Pin-Cotter               |  |  |  |  |
| 40   | 3220-7    | 2    | Nut-Jam                  |  |  |  |  |
| 41   | 3220-6    | 4    | Nut-Jam                  |  |  |  |  |
| 42   | 106-8052  | 1    | Steering Pivot ASM       |  |  |  |  |
| 42:2 | 76-2970   | 2    | Bushing-Straight         |  |  |  |  |
| 42:3 | 302-5     | 1    | Fitting-Grease           |  |  |  |  |
| 43   | 340-54    | 2    | Elbow-45 DEG             |  |  |  |  |
| 43:1 | 237-22    | 1    | O-Ring                   |  |  |  |  |
| 43:2 | 237-78    | 1    | O-Ring                   |  |  |  |  |
| 44   | 93-0307   | 2    | Nut-Lock, Retainer       |  |  |  |  |
| 48   | 106-6774  | 2    | Joint-Ball               |  |  |  |  |
| 49   | 32151-104 | 2    | Ring-Retaining, External |  |  |  |  |
| 50   | 76-2980   | 1    | Washer-Thrust            |  |  |  |  |
| 51   | 32151-77  | 1    | Ring-Retaining, EXT      |  |  |  |  |

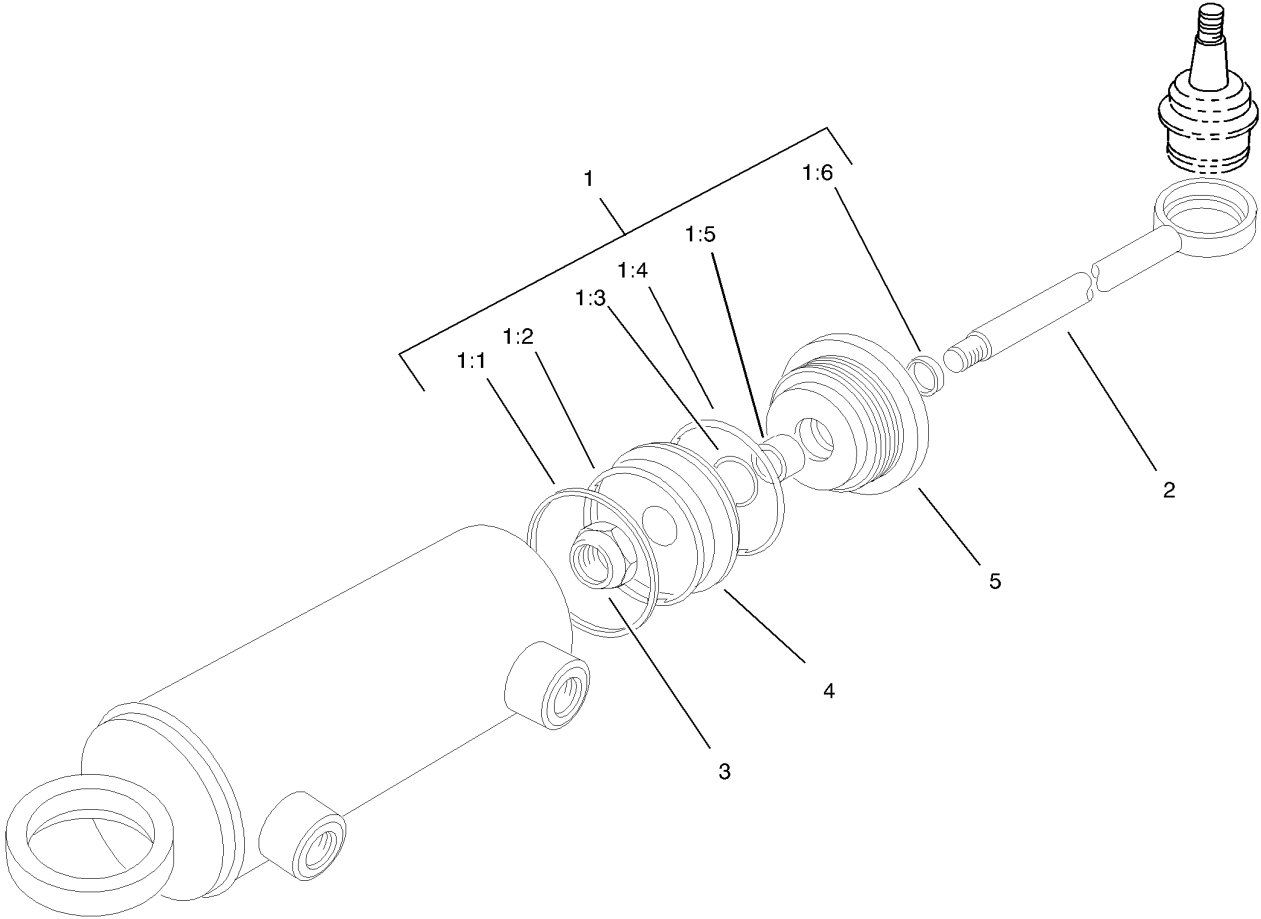

Hydraulic Cylinder Assembly No. 92-7828


| Ref | Part No. | Qty. | Description    |  |  |  |  |
|-----|----------|------|----------------|--|--|--|--|
| 1   | 92-6593  | 1    | Seal Kit       |  |  |  |  |
| 1:1 |          | 1    | Seal           |  |  |  |  |
| 1:2 |          | 1    | O-Ring         |  |  |  |  |
| 1:3 |          | 1    | O-Ring         |  |  |  |  |
| 1:4 |          | 1    | O-Ring         |  |  |  |  |
| 1:5 |          | 1    | U-Cup          |  |  |  |  |
| 1:6 |          | 1    | Wiper          |  |  |  |  |
| 2   |          | 1    | Piston Rod ASM |  |  |  |  |
| 3   |          | 1    | Locknut        |  |  |  |  |
| 4   |          | 1    | Piston         |  |  |  |  |
| 5   |          | 1    | Gland          |  |  |  |  |

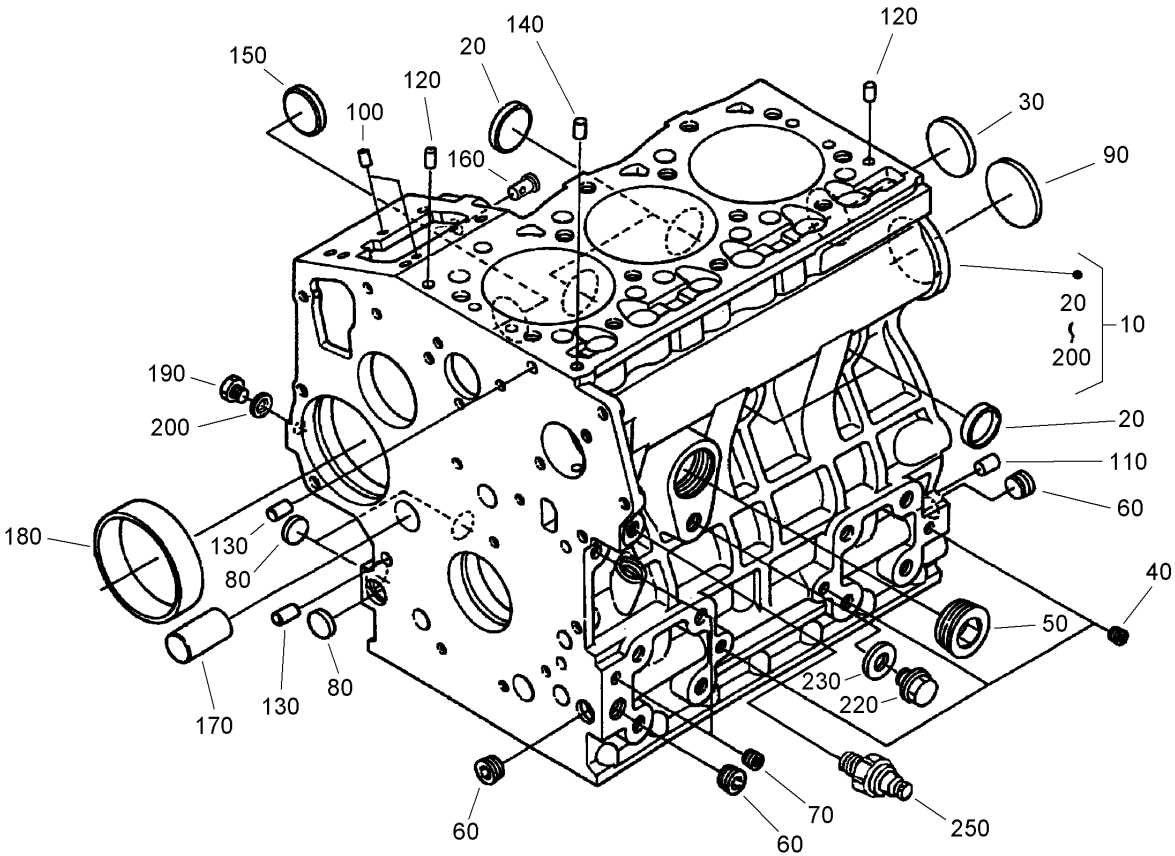 

Crankcase Assembly


| Ref | Part No. | Qty. | Description            |  |  |  |  |
|-----|----------|------|------------------------|--|--|--|--|
| 10  | 108-6571 | 1    | Crankcase ASM          |  |  |  |  |
| 20  | 98-9398  | 4    | Cap-Sealing            |  |  |  |  |
| 30  | 98-7539  | 1    | Cap-Sealing            |  |  |  |  |
| 40  | 98-7540  | 3    | Plug                   |  |  |  |  |
| 50  | 105-3779 | 1    | Plug                   |  |  |  |  |
| 60  | 98-9597  | 3    | Plug                   |  |  |  |  |
| 70  | 98-7487  | 2    | Plug                   |  |  |  |  |
| 80  | 98-7489  | 3    | Plug                   |  |  |  |  |
| 90  | 98-9668  | 1    | Plug                   |  |  |  |  |
| 100 | 98-9375  | 2    | Pin-Straight           |  |  |  |  |
| 110 | 98-9377  | 2    | Pin-Straight           |  |  |  |  |
| 120 | 105-3795 | 2    | Pin-Straight           |  |  |  |  |
| 130 | 98-9387  | 2    | Pin-Pipe               |  |  |  |  |
| 140 | 98-9539  | 1    | Pin-Pipe               |  |  |  |  |
| 150 | 98-9599  | 1    | Plug                   |  |  |  |  |
| 160 | 98-9630  | 1    | Pin-Spring, Start      |  |  |  |  |
| 170 | 98-9675  | 1    | Plug                   |  |  |  |  |
| 180 | 98-9656  | 1    | Bushing-Governor, Gear |  |  |  |  |
| 190 | 98-7507  | 1    | Plug                   |  |  |  |  |
| 200 | 98-7428  | 1    | Gasket                 |  |  |  |  |
| 220 | 99-3447  | 1    | Plug                   |  |  |  |  |
| 230 | 106-7056 | 1    | Gasket                 |  |  |  |  |
| 250 | 98-9416  | 1    | Switch-Oil             |  |  |  |  |



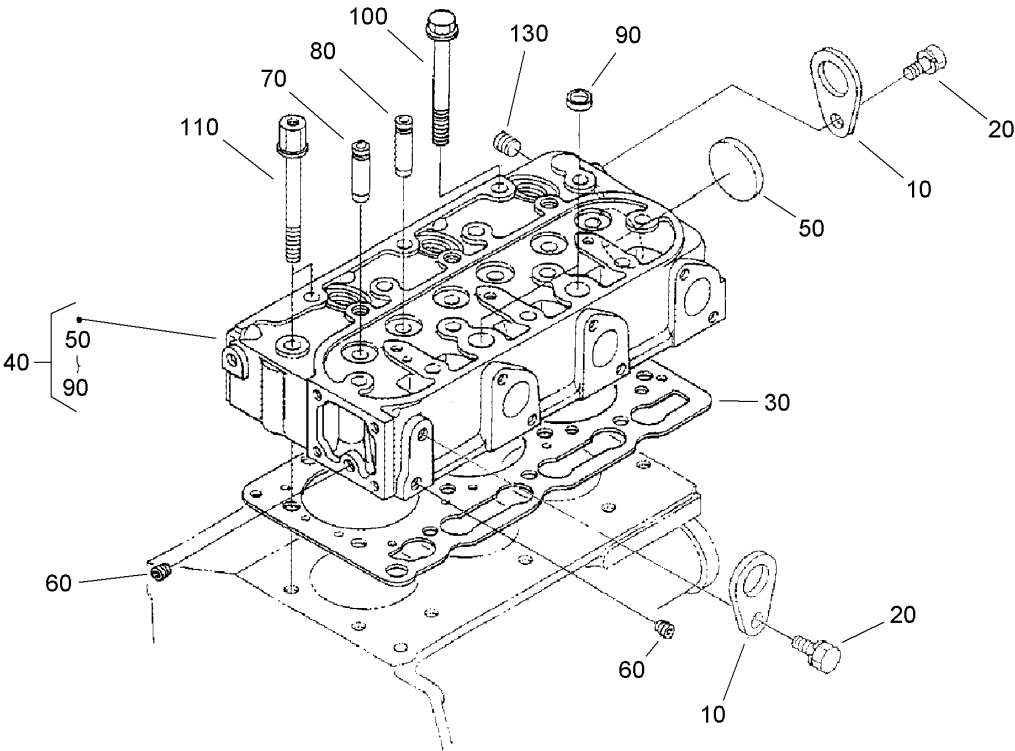 

Cylinder Head Assembly


| Ref | Part No. | Qty. | Description           |  |  |  |  |
|-----|----------|------|-----------------------|--|--|--|--|
| 10  | 98-7531  | 2    | Hook-Engine           |  |  |  |  |
| 20  | 100-9195 | 2    | Bolt                  |  |  |  |  |
| 30  | 108-6573 | 1    | Gasket-Head, Cylinder |  |  |  |  |
| 40  | 108-6574 | 1    | Cylinder Head ASM     |  |  |  |  |
| 50  | 98-9395  | 1    | Cap-Sealing           |  |  |  |  |
| 60  | 98-7540  | 2    | Plug                  |  |  |  |  |
| 70  | 107-9066 | 3    | Guide-Valve, Inlet    |  |  |  |  |
| 80  | 107-9067 | 3    | Guide-Valve, Exhaust  |  |  |  |  |
| 90  | 98-9389  | 2    | Cap-Sealing           |  |  |  |  |
| 100 | 98-9479  | 1    | Bolt-Head, Cylinder   |  |  |  |  |
| 110 | 98-9647  | 2    | Bolt-Head, Cylinder   |  |  |  |  |
| 130 | 98-9444  | 1    | Plug                  |  |  |  |  |

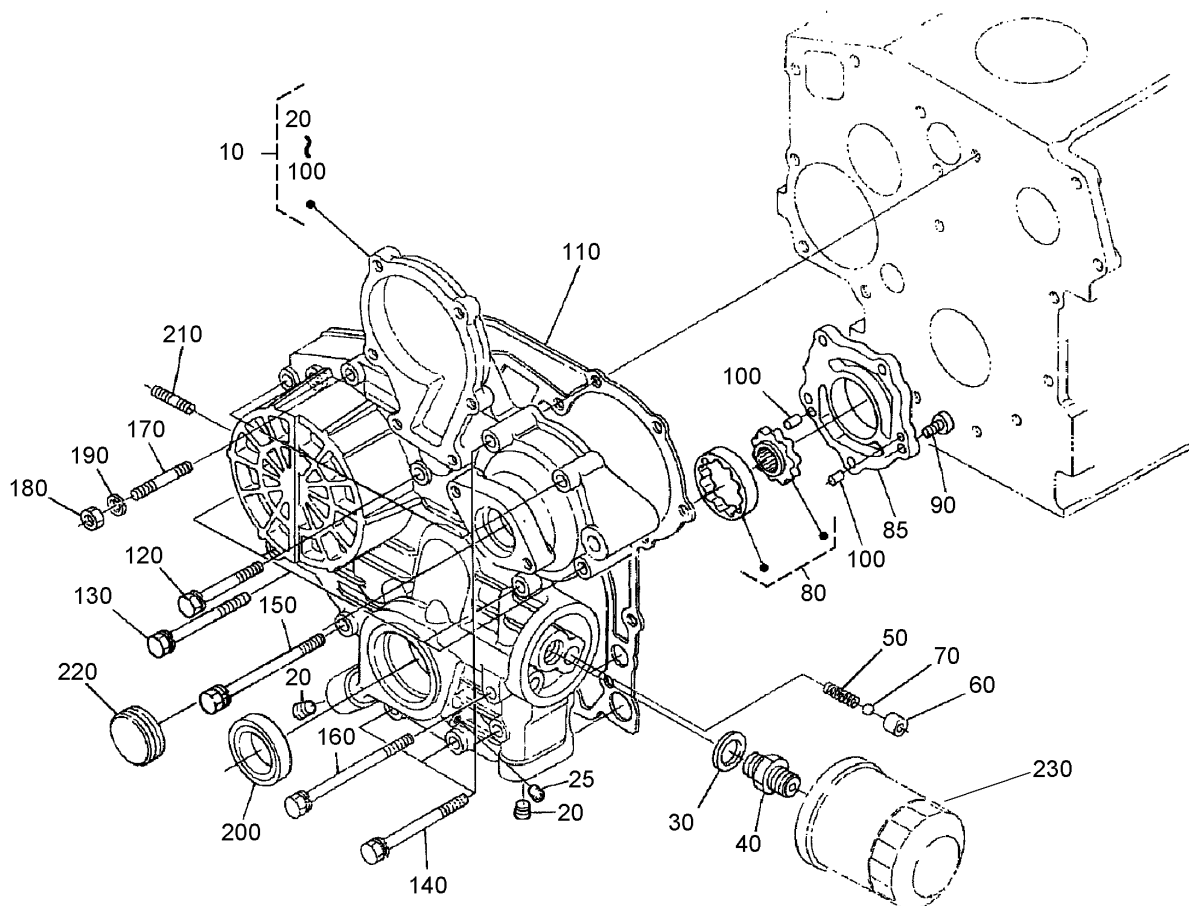 

## Gear Case Assembly


| Ref | Part No. | Qty. | Description        |
|-----|----------|------|--------------------|
| 10  | 107-9068 | 1    | Gear Case ASM      |
| 20  | 98-9598  | 2    | Plug               |
| 25  | 98-7487  | 1    | Plug               |
| 30  | 98-7562  | 1    | Washer-Plain       |
| 40  | 98-9388  | 1    | Joint-Pipe         |
| 50  | 98-9544  | 1    | Spring             |
| 60  | 98-9543  | 1    | Seat-Valve         |
| 70  | 98-9380  | 1    | Ball               |
| 80  | 98-9540  | 1    | Oil Pump Rotor ASM |
| 85  | 107-9069 | 1    | Cover-Pump, Oil    |
| 90  | 107-9071 | 5    | Screw              |
| 100 | 107-9072 | 2    | Pin-Straight       |
| 110 | 98-9633  | 1    | Gasket-Case, Gear  |
| 120 | 107-9073 | 3    | Bolt               |
| 130 | 105-3797 | 4    | Bolt               |
| 140 | 98-9356  | 4    | Bolt               |
| 150 | 107-9074 | 1    | Bolt               |
| 160 | 98-9586  | 1    | Bolt               |
| 170 | 105-3709 | 1    | Stud               |
| 180 | 98-7572  | 1    | Nut                |
| 190 | 98-7699  | 1    | Washer-Spring      |
| 200 | 98-9482  | 1    | Seal-Oil           |
| 210 | 105-3710 | 2    | Stud               |
| 220 | 98-9641  | 1    | Cover              |
 
| Ref | Part No. | Qty. | Description |
|-----|----------|------|-------------|
| 230 | 108-3841 | 1    | Filter-Oil  |

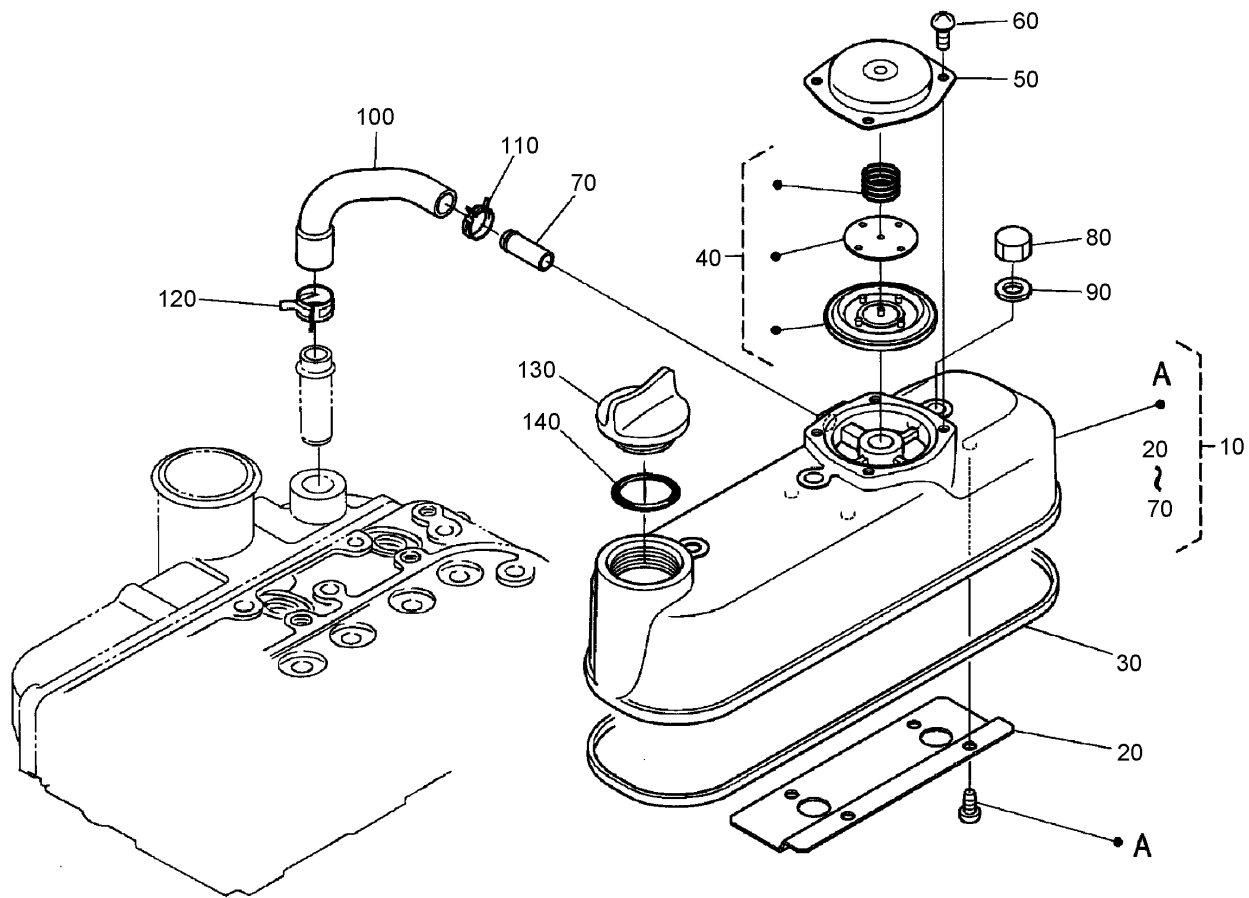


Head Cover Assembly

| Ref | Part No. | Qty. | Description             |  |  |  |  |
|-----|----------|------|-------------------------|--|--|--|--|
| 10  | 108-6575 | 1    | Cylinder Head Cover ASM |  |  |  |  |
| 20  | 108-2857 | 1    | Shield-Breather         |  |  |  |  |
| 30  | 98-9615  | 1    | Gasket-Cover, Head      |  |  |  |  |
| 40  | 108-2861 | 1    | Breather Valve ASM      |  |  |  |  |
| 50  | 108-2862 | 1    | Cover-Breather          |  |  |  |  |
| 60  | 108-2863 | 4    | Screw-PPH               |  |  |  |  |
| 70  | 98-7766  | 1    | Pipe-Return, Water      |  |  |  |  |
| 80  | 98-9455  | 3    | Nut-Cap                 |  |  |  |  |
| 90  | 98-9454  | 3    | Gasket                  |  |  |  |  |
| 100 | 108-2858 | 1    | Tube-Beather            |  |  |  |  |
| 110 | 108-2859 | 1    | Clamp-Hose              |  |  |  |  |
| 120 | 108-2860 | 1    | Clamp-Hose              |  |  |  |  |
| 130 | 107-9075 | 1    | Plug-Filler, Oil        |  |  |  |  |
| 140 | 99-3446  | 1    | O-Ring                  |  |  |  |  |

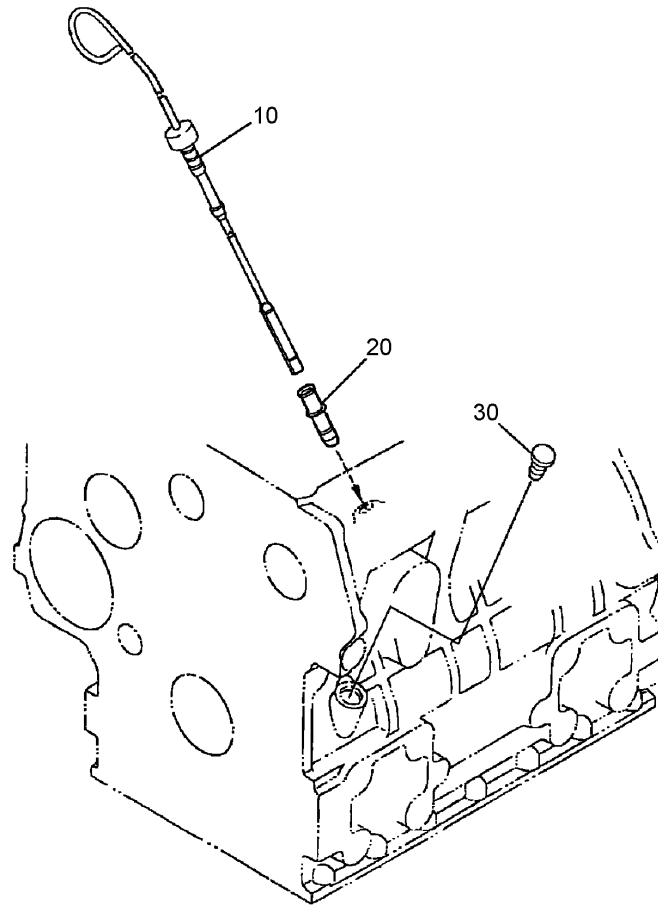 


## Dipstick and Guide Assembly
 
| Ref | Part No. | Qty. | Description      |
|-----|----------|------|------------------|
| 10  | 107-9076 | 1    | Gauge-Oil        |
| 20  | 105-3713 | 1    | Guide-Gauge, Oil |
| 30  | 105-3715 | 1    | Plug-Gauge, Oil  |

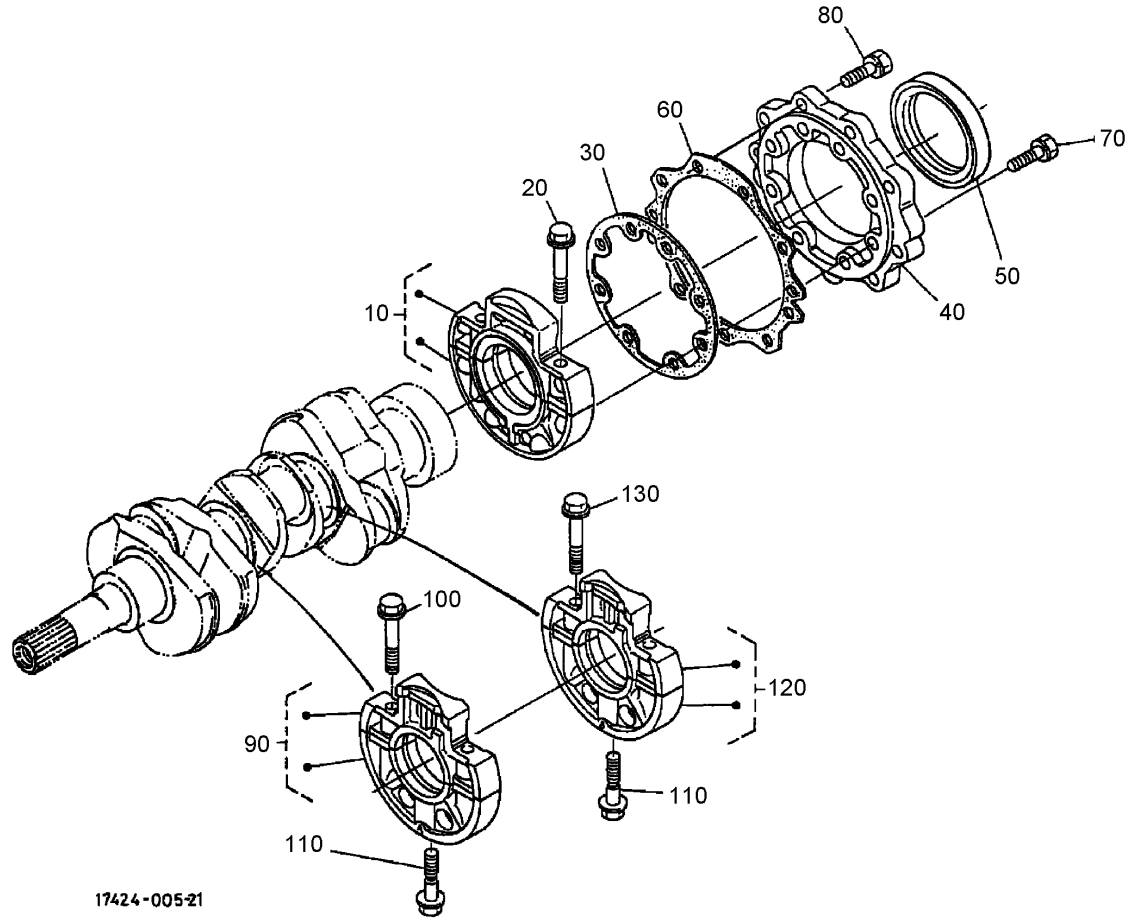


## Main Bearing Case Assembly
 
| Ref | Part No. | Qty. | Description                |  |  |  |  |
|-----|----------|------|----------------------------|--|--|--|--|
| 10  | 98-9480  | 1    | Main Bearing Case ASM      |  |  |  |  |
| 20  | 98-9484  | 6    | Bolt-Case, Bearing         |  |  |  |  |
| 30  | 98-9634  | 1    | Gasket-Case, Bearing       |  |  |  |  |
| 40  | 98-9487  | 1    | Cover-Case, Bearing        |  |  |  |  |
| 50  | 98-9483  | 1    | Seal-Oil                   |  |  |  |  |
| 60  | 98-9635  | 1    | Gasket-Cover, Bearing Case |  |  |  |  |
| 70  | 98-9352  | 8    | Bolt                       |  |  |  |  |
| 80  | 98-7568  | 9    | Bolt                       |  |  |  |  |
| 90  | 98-9606  | 1    | Main Bearing Case ASM      |  |  |  |  |
| 100 | 98-9484  | 2    | Bolt-Case, Bearing         |  |  |  |  |
| 110 | 98-9485  | 2    | Bolt-Case, Bearing         |  |  |  |  |
| 120 | 98-9607  | 1    | Main Bearing Case ASM      |  |  |  |  |
| 130 | 98-9484  | 2    | Bolt-Case, Bearing         |  |  |  |  |

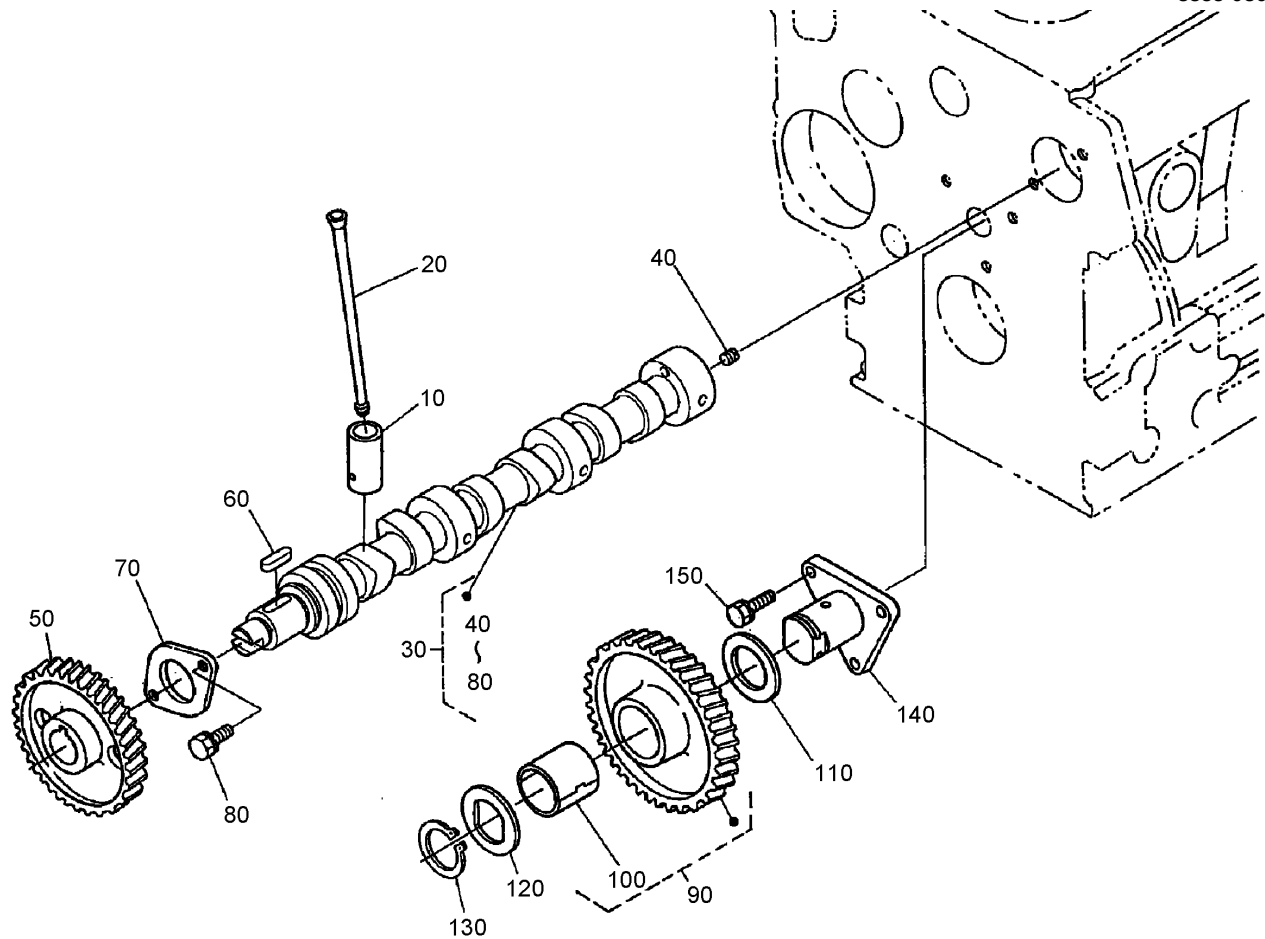

Camshaft and Idle Gear Shaft Assembly

| Ref | Part No. | Qty. | Description              |  |  |  |  |
|-----|----------|------|--------------------------|--|--|--|--|
| 10  | 98-9616  | 6    | Tappet                   |  |  |  |  |
| 20  | 98-9509  | 6    | Rod-Push                 |  |  |  |  |
| 30  | 108-6576 | 1    | Camshaft ASM             |  |  |  |  |
| 40  | 98-7449  | 1    | Screw-Set                |  |  |  |  |
| 50  | 98-9512  | 1    | Gear-Cam                 |  |  |  |  |
| 60  | 98-9378  | 1    | Key-Feather              |  |  |  |  |
| 70  | 98-9510  | 1    | Stopper-Camshaft         |  |  |  |  |
| 80  | 98-9351  | 2    | Bolt                     |  |  |  |  |
| 90  | 98-9649  | 1    | Idle Gear ASM            |  |  |  |  |
| 100 | 98-9650  | 1    | Bushing-Gear, Idle       |  |  |  |  |
| 110 | 98-9535  | 1    | Collar-Gear, Idle        |  |  |  |  |
| 120 | 98-9536  | 1    | Collar-Gear, Idle        |  |  |  |  |
| 130 | 98-9534  | 1    | Clip-Circular, Idle Gear |  |  |  |  |
| 140 | 98-9533  | 1    | Shaft-Gear, Idle         |  |  |  |  |
| 150 | 98-7692  | 3    | Bolt                     |  |  |  |  |

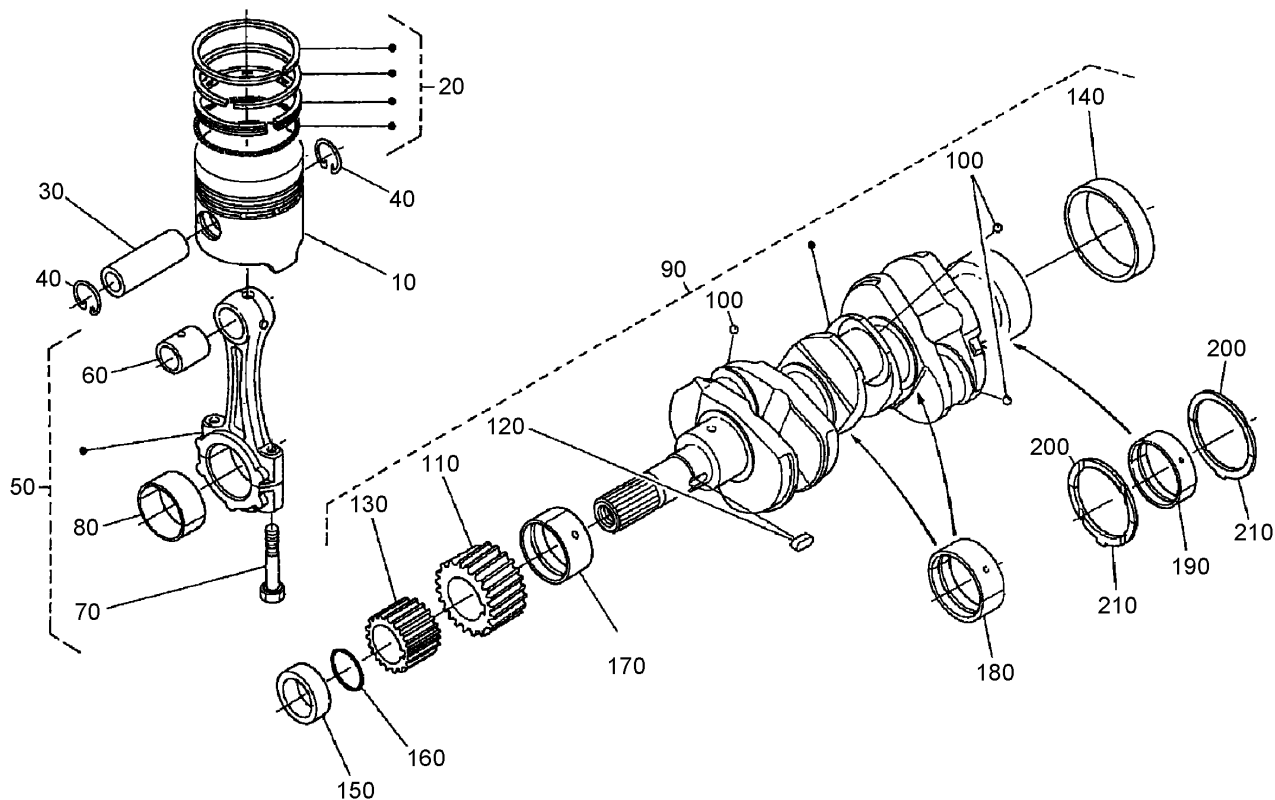 


## Piston and Crankshaft Assembly

| Ref | Part No. | Qty. | Description                |
|-----|----------|------|----------------------------|
| 10  | 98-9470  | 3    | Piston (0.5Mm)             |
| 10  | 98-9469  | 3    | Piston (STD)               |
| 20  | 98-9619  | 3    | Piston Ring ASM (0.5Mm)    |
| 20  | 98-9618  | 3    | Piston Ring ASM (STD)      |
| 30  | 98-9513  | 3    | Pin-Piston                 |
| 40  | 98-9514  | 6    | Clip-Circular, Piston Pin  |
| 50  | 98-9516  | 3    | Connecting Rod ASM         |
| 60  | 98-9515  | 3    | Bushing-Pin, Piston        |
| 70  | 98-9517  | 6    | Bolt-Rod, Connecting       |
| 80  | 98-9520  | 3    | Bearing-Rod (0.4Mm)        |
| 80  | 98-9519  | 3    | Bearing-Rod (0.2Mm)        |
| 80  | 98-9518  | 3    | Metal-Crankpin (STD)       |
| 90  | 98-9642  | 1    | Crankshaft ASM             |
| 100 | 98-7473  | 3    | Ball                       |
| 110 | 98-9532  | 1    | Gear-Crankshaft            |
| 120 | 98-9666  | 1    | Key                        |
| 130 | 98-9542  | 1    | Gear-Drive, Oil Pump       |
| 140 | 98-9522  | 1    | Sleeve-Crankshaft          |
| 150 | 98-9521  | 1    | Collar-Crankshaft          |
| 160 | 105-3783 | 1    | O-Ring                     |
| 170 | 98-9523  | 1    | Metal Crankshaft (STD)     |
| 170 | 98-9528  | 1    | Bearing-Main (0.2Mm)       |
| 170 | 98-9529  | 1    | Bearing-Main (0.4Mm)       |
| 180 | 98-9524  | 2    | Metal-Crankshaft (STD Set) |

 
| Ref | Part No. | Qty. | Description             |
|-----|----------|------|-------------------------|
| 180 | 98-9530  | 2    | Bearing-Main (0.2Mm)    |
| 180 | 98-9531  | 2    | Bearing-Main (0.4Mm)    |
| 190 | 98-9556  | 1    | Bearing-Main (STD)      |
| 190 | 105-3719 | 1    | Metal-Crankshaft (.2Mm) |
| 190 | 105-3720 | 1    | Metal-Crankshaft (.4Mm) |
| 200 | 98-9413  | 2    | Bearing-Thrust (STD)    |
| 200 | 98-9414  | 2    | Bearing-Thrust (0.2Mm)  |
| 200 | 98-9415  | 2    | Bearing-Thrust (0.4Mm)  |
| 210 | 98-9688  | 2    | Bearing-Thrust (STD)    |
| 210 | 98-9689  | 2    | Bearing-Thrust (0.2Mm)  |
| 210 | 98-9690  | 2    | Bearing-Thrust (0.4Mm)  |



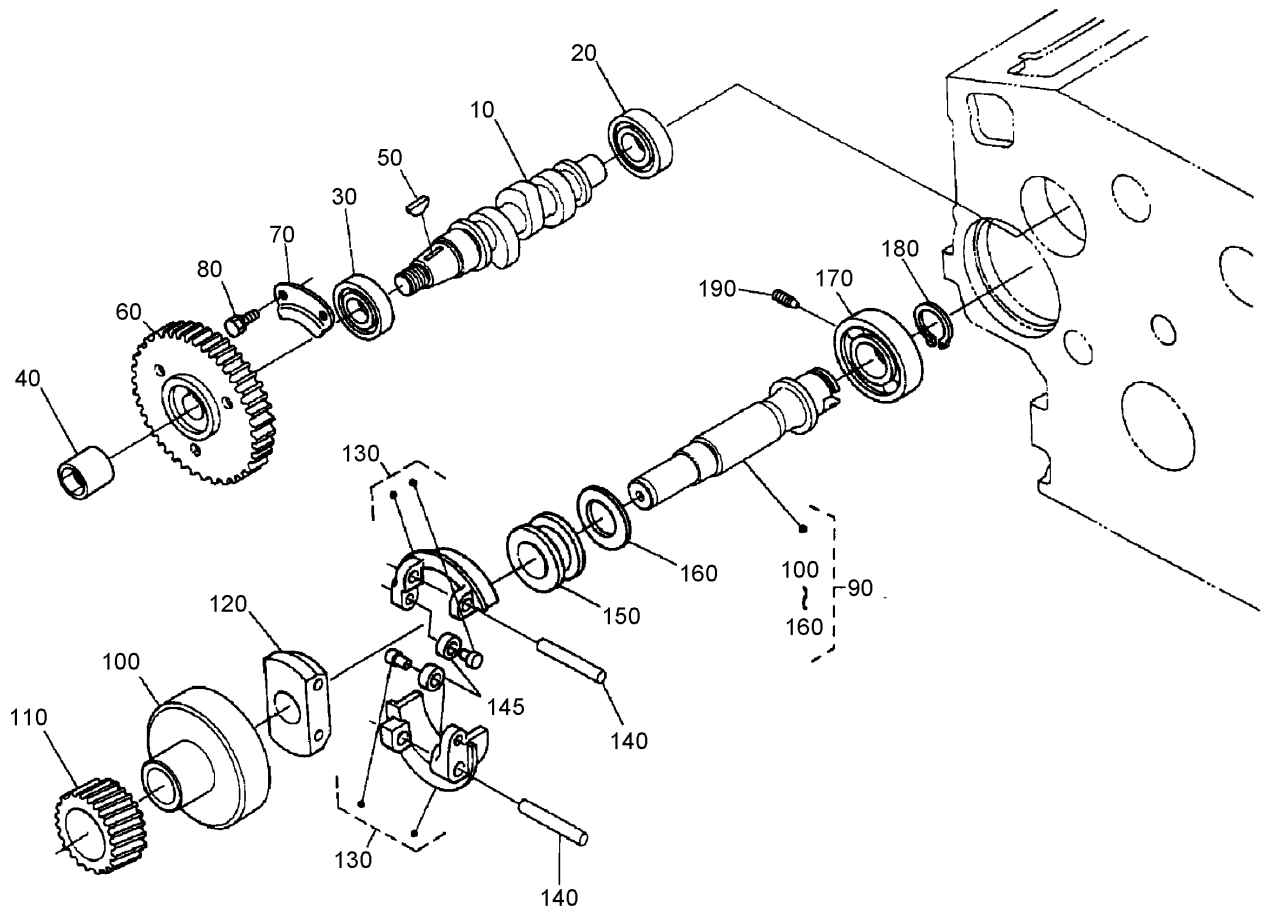


## Fuel Camshaft and Governor Shaft Assembly
 
| Ref | Part No. | Qty. | Description                   |  |  |  |  |
|-----|----------|------|-------------------------------|--|--|--|--|
| 10  | 98-9459  | 1    | Camshaft-Fuel                 |  |  |  |  |
| 20  | 107-9077 | 1    | Bearing-Ball                  |  |  |  |  |
| 30  | 107-9078 | 1    | Bearing-Ball                  |  |  |  |  |
| 40  | 98-9590  | 1    | Nut-Cap                       |  |  |  |  |
| 50  | 98-9595  | 1    | Key-Woodruff                  |  |  |  |  |
| 60  | 98-9669  | 1    | Gear-Pump, Injection          |  |  |  |  |
| 70  | 98-9511  | 1    | Stopper-Fuel, Camshaft        |  |  |  |  |
| 80  | 98-9350  | 2    | Bolt                          |  |  |  |  |
| 90  | 98-9644  | 1    | Governor Shaft ASM            |  |  |  |  |
| 100 | 98-9562  | 1    | Holder-Gear, Governor         |  |  |  |  |
| 110 | 98-9673  | 1    | Gear-Governor                 |  |  |  |  |
| 120 | 98-9561  | 1    | Holder-Weight, Governor       |  |  |  |  |
| 130 | 98-9559  | 2    | Governor Weight ASM           |  |  |  |  |
| 140 | 98-9560  | 2    | Shaft-Weight, Governor        |  |  |  |  |
| 145 | 98-9692  | 2    | Roller                        |  |  |  |  |
| 150 | 98-9563  | 1    | Sleeve-Governor               |  |  |  |  |
| 160 | 98-9564  | 1    | Washer-Thrust                 |  |  |  |  |
| 170 | 107-9079 | 1    | Bearing-Ball                  |  |  |  |  |
| 180 | 98-9657  | 1    | Clip-Circular, Governor Shaft |  |  |  |  |
| 190 | 98-9565  | 1    | Screw-Set                     |  |  |  |  |

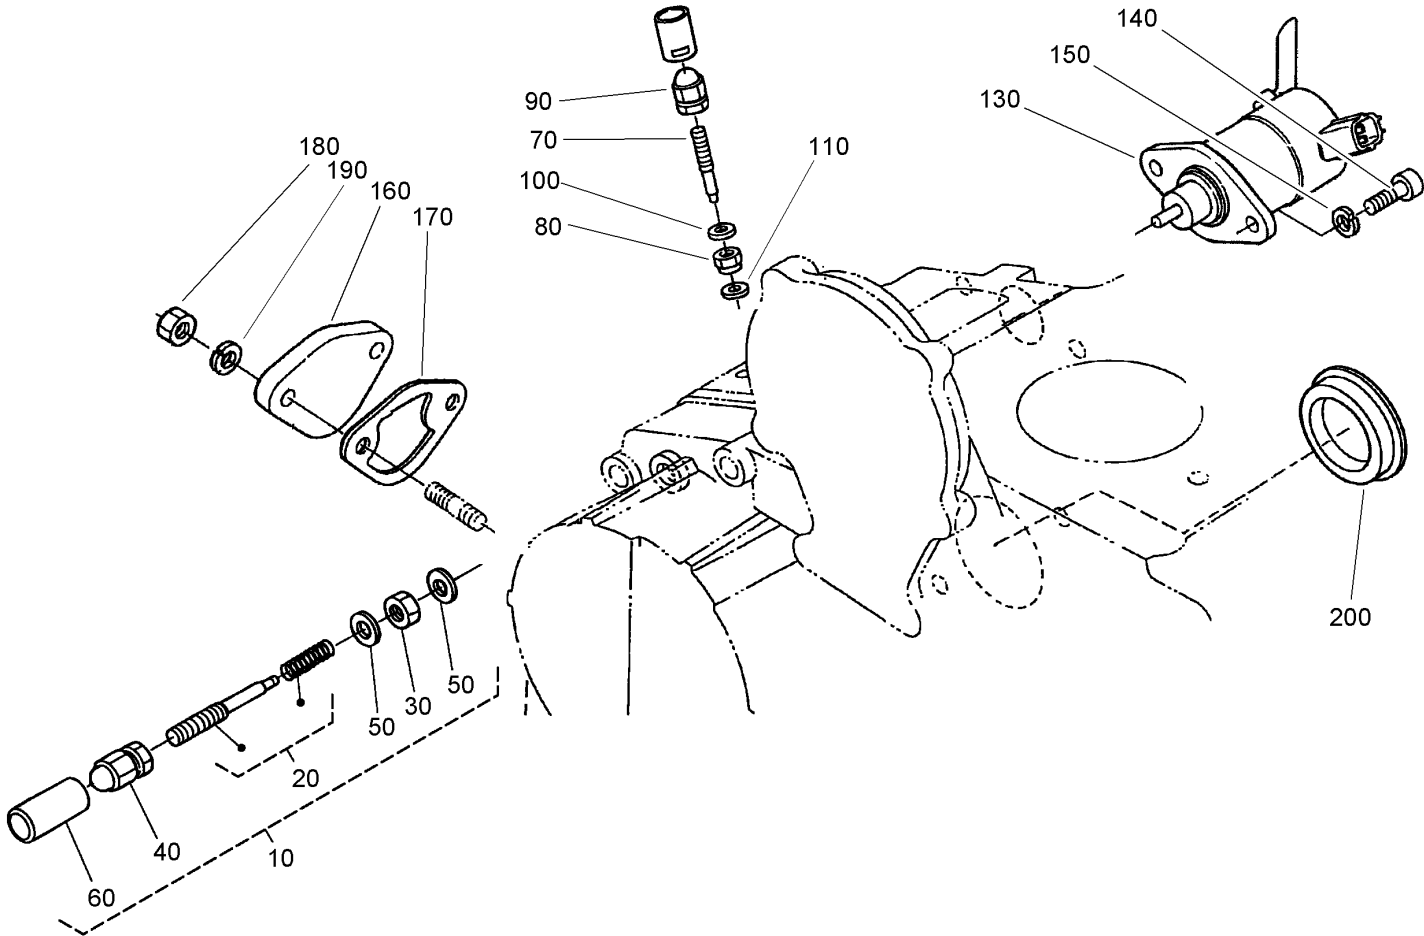


Idle Apparatus Assembly

| Ref | Part No. | Qty. | Description        |  |  |  |  |
|-----|----------|------|--------------------|--|--|--|--|
| 10  | 98-9678  | 1    | Idle Apparatus ASM |  |  |  |  |
| 20  | 98-9679  | 1    | Adjusting Bolt ASM |  |  |  |  |
| 30  | 98-9439  | 1    | Nut                |  |  |  |  |
| 40  | 99-8387  | 1    | Nut-Cap            |  |  |  |  |
| 50  | 98-7654  | 2    | Gasket             |  |  |  |  |
| 60  | 98-7656  | 1    | Cap                |  |  |  |  |
| 70  | 98-9557  | 1    | Bolt-Adjusting     |  |  |  |  |
| 80  | 99-3512  | 1    | Nut                |  |  |  |  |
| 90  | 99-8387  | 1    | Nut-Cap            |  |  |  |  |
| 100 | 98-7654  | 1    | Gasket             |  |  |  |  |
| 110 | 107-9081 | 1    | Gasket             |  |  |  |  |
| 130 | 104-5155 | 1    | Solenoid-Stop      |  |  |  |  |
| 140 | 105-3799 | 2    | Bolt-HSH           |  |  |  |  |
| 150 | 98-7699  | 2    | Washer-Spring      |  |  |  |  |
| 160 | 99-3514  | 1    | Cover              |  |  |  |  |
| 170 | 98-9636  | 1    | Gasket-Pump, Fuel  |  |  |  |  |
| 180 | 98-7572  | 2    | Nut                |  |  |  |  |
| 190 | 98-7699  | 2    | Washer-Spring      |  |  |  |  |
| 200 | 98-9640  | 1    | Cover-Pump         |  |  |  |  |

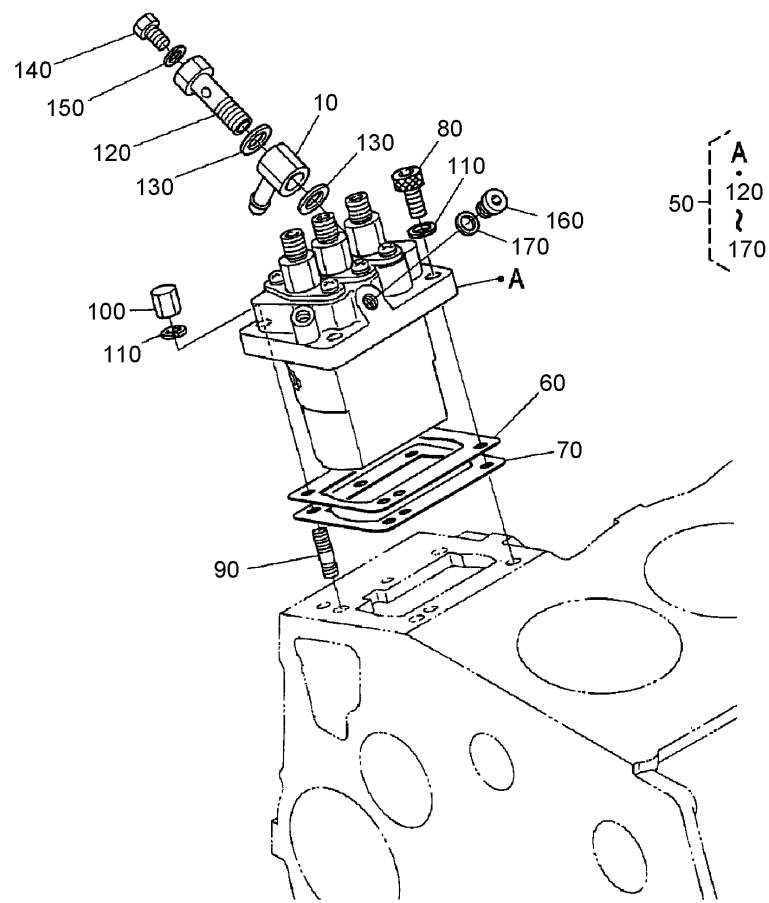 

Injection Pump Assembly


| Ref | Part No. | Qty. | Description             |  |  |  |  |
|-----|----------|------|-------------------------|--|--|--|--|
| 10  | 98-9596  | 1    | Joint-Eye               |  |  |  |  |
| 10  | 105-3786 | 1    | Spring-Start            |  |  |  |  |
| 50  | 98-9643  | 1    | Injection Pump ASM      |  |  |  |  |
| 60  | 98-9457  | 1    | Shim-Injection (0.25Mm) |  |  |  |  |
| 60  | 98-9456  | 1    | Shim (0.2Mm)            |  |  |  |  |
| 70  | 98-9458  | 1    | Shim-Injection (0.30Mm) |  |  |  |  |
| 80  | 98-9361  | 2    | Bolt-HSH                |  |  |  |  |
| 90  | 98-9438  | 2    | Stud                    |  |  |  |  |
| 100 | 98-9440  | 2    | Nut-Cap                 |  |  |  |  |
| 110 | 98-7699  | 4    | Washer-Spring           |  |  |  |  |
| 120 | 98-9464  | 1    | Bolt-Joint              |  |  |  |  |
| 130 | 98-9445  | 2    | Gasket                  |  |  |  |  |
| 140 | 98-9430  | 1    | Screw                   |  |  |  |  |
| 150 | 98-9446  | 1    | Gasket                  |  |  |  |  |
| 160 | 98-9466  | 1    | Plug                    |  |  |  |  |
| 170 | 98-9451  | 1    | Gasket                  |  |  |  |  |

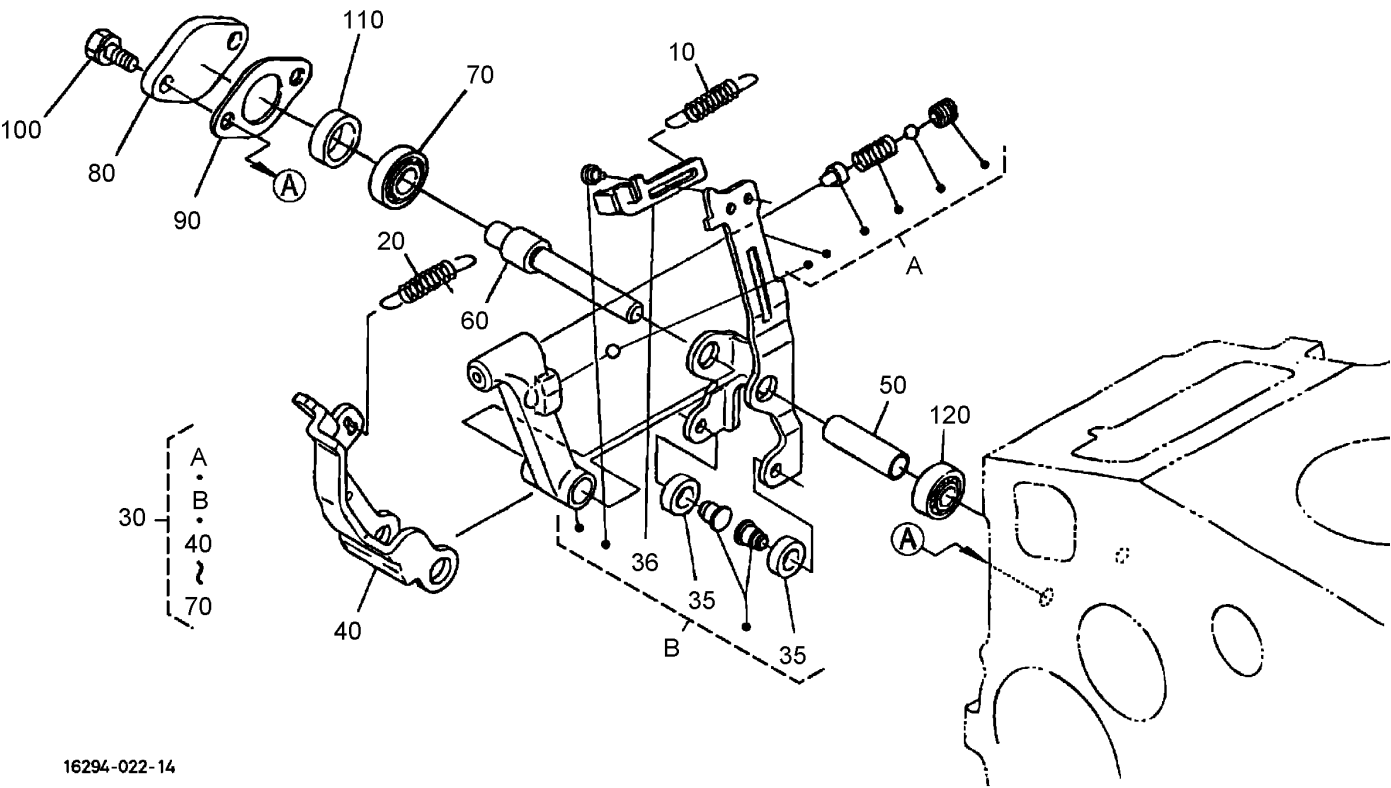 

16294-022-14


**Governor Assembly**
 
| Ref | Part No. | Qty. | Description             |  |  |  |  |
|-----|----------|------|-------------------------|--|--|--|--|
| 10  | 105-3786 | 1    | Spring-Start            |  |  |  |  |
| 20  | 98-9681  | 1    | Spring-Governor         |  |  |  |  |
| 30  | 107-9082 | 1    | Fork Lever ASM          |  |  |  |  |
| 35  | 98-9692  | 2    | Roller                  |  |  |  |  |
| 36  | 107-9083 | 1    | Lever-Thrust            |  |  |  |  |
| 40  | 107-9084 | 1    | Lever-Fork              |  |  |  |  |
| 50  | 107-9085 | 1    | Shaft-Lever, Fork       |  |  |  |  |
| 60  | 107-9086 | 1    | Shaft-Lever, Fork       |  |  |  |  |
| 70  | 98-9570  | 1    | Bearing-Miniaturize     |  |  |  |  |
| 80  | 98-9569  | 1    | Cover-Shaft, Fork Lever |  |  |  |  |
| 90  | 98-9682  | 1    | Gasket                  |  |  |  |  |
| 100 | 98-9351  | 2    | Bolt                    |  |  |  |  |
| 110 | 98-9567  | 1    | Collar                  |  |  |  |  |
| 120 | 98-9571  | 1    | Bearing-Miniaturize     |  |  |  |  |

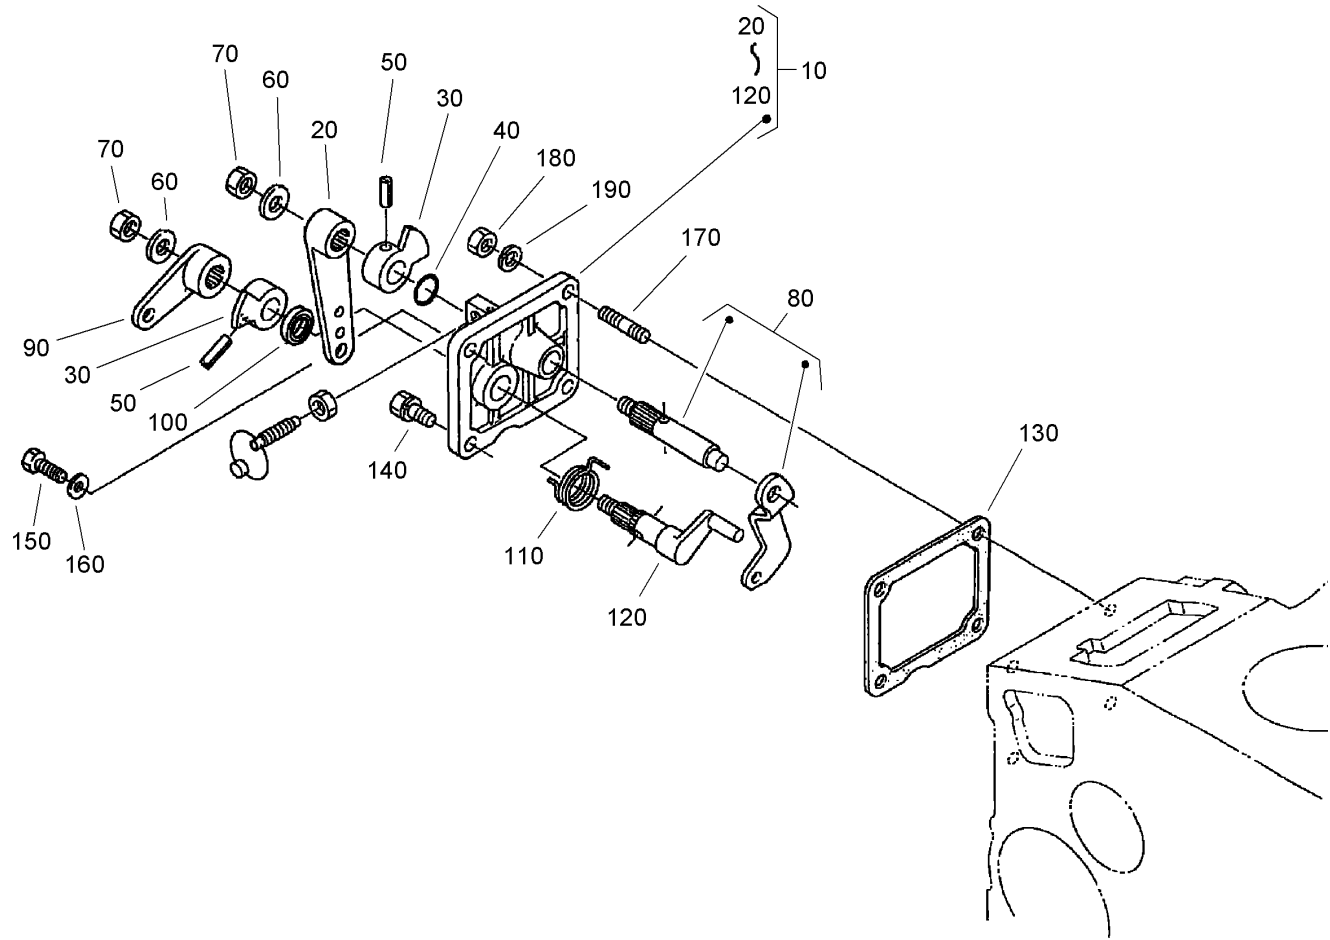


Speed Control Plate Assembly

| Ref | Part No. | Qty. | Description          |  |  |  |  |
|-----|----------|------|----------------------|--|--|--|--|
| 10  | 105-3735 | 1    | Control Plate ASM    |  |  |  |  |
| 20  | 98-9662  | 1    | Lever-Control, Speed |  |  |  |  |
| 30  | 98-9572  | 2    | Lever-Control, Speed |  |  |  |  |
| 40  | 105-3788 | 1    | O-Ring               |  |  |  |  |
| 50  | 98-7602  | 2    | Pin-Spring           |  |  |  |  |
| 60  | 98-9594  | 2    | Washer-Plain         |  |  |  |  |
| 70  | 98-9589  | 2    | Nut                  |  |  |  |  |
| 80  | 98-9658  | 1    | Governor Lever ASM   |  |  |  |  |
| 90  | 98-9663  | 1    | Lever-Stop, Engine   |  |  |  |  |
| 100 | 98-7601  | 1    | Seal-Oil             |  |  |  |  |
| 110 | 98-9472  | 1    | Spring-Return        |  |  |  |  |
| 120 | 98-9664  | 1    | Shaft-Lever, Stop    |  |  |  |  |
| 130 | 98-9637  | 1    | Gasket               |  |  |  |  |
| 140 | 98-7692  | 1    | Bolt                 |  |  |  |  |
| 150 | 99-8348  | 1    | Bolt                 |  |  |  |  |
| 160 | 98-7654  | 2    | Gasket               |  |  |  |  |
| 170 | 105-3710 | 2    | Stud                 |  |  |  |  |
| 180 | 98-7572  | 2    | Nut                  |  |  |  |  |
| 190 | 98-7699  | 2    | Washer-Spring        |  |  |  |  |

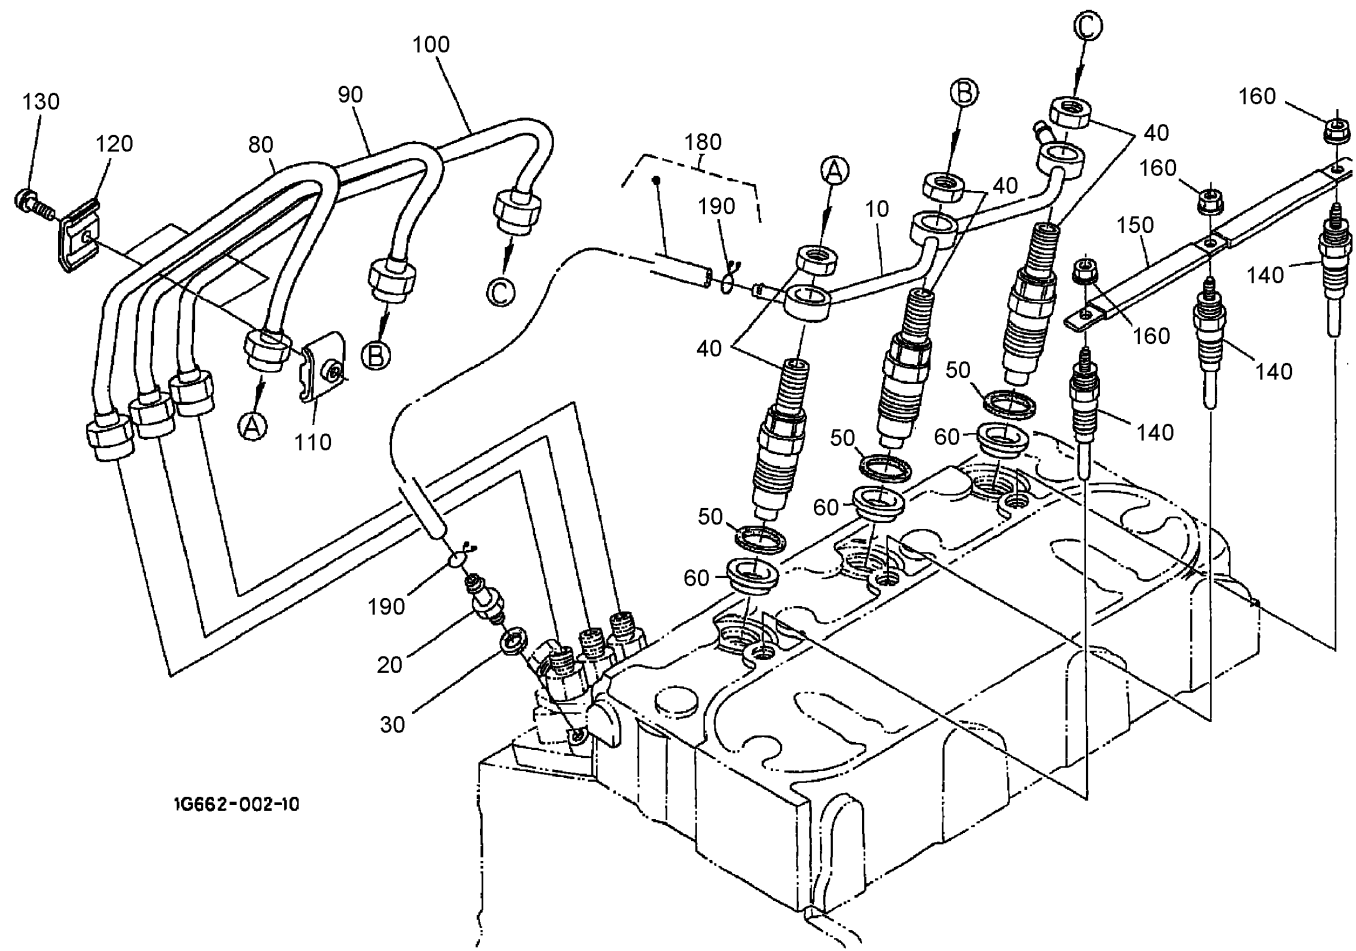 


Nozzle Holder and Glow Plug Assembly

| Ref | Part No. | Qty. | Description        |  |  |  |  |
|-----|----------|------|--------------------|--|--|--|--|
| 10  | 98-9620  | 1    | Over Flow Pipe ASM |  |  |  |  |
| 20  | 98-9431  | 1    | Screw-Bleeder      |  |  |  |  |
| 30  | 98-7654  | 1    | Gasket             |  |  |  |  |
| 40  | 108-2866 | 3    | Nozzle Holder Kit  |  |  |  |  |
| 50  | 98-7676  | 3    | Gasket             |  |  |  |  |
| 60  | 98-7677  | 3    | Seal               |  |  |  |  |
| 80  | 98-9653  | 1    | Pipe-Injection     |  |  |  |  |
| 90  | 98-9654  | 1    | Pipe-Injection     |  |  |  |  |
| 100 | 98-9655  | 1    | Pipe-Injection     |  |  |  |  |
| 110 | 98-7682  | 2    | Clamp-Pipe         |  |  |  |  |
| 120 | 98-7683  | 2    | Clamp-Pipe         |  |  |  |  |
| 130 | 98-7684  | 2    | Screw (W/Washer)   |  |  |  |  |
| 140 | 98-9695  | 3    | Plug-Glow          |  |  |  |  |
| 150 | 98-9631  | 3    | Cord-Plug, Glow    |  |  |  |  |
| 160 | 99-8377  | 3    | Nut-Flange         |  |  |  |  |
| 180 | 98-9420  | 1    | Over Flow Pipe ASM |  |  |  |  |
| 190 | 98-7671  | 2    | Clip-Pipe          |  |  |  |  |

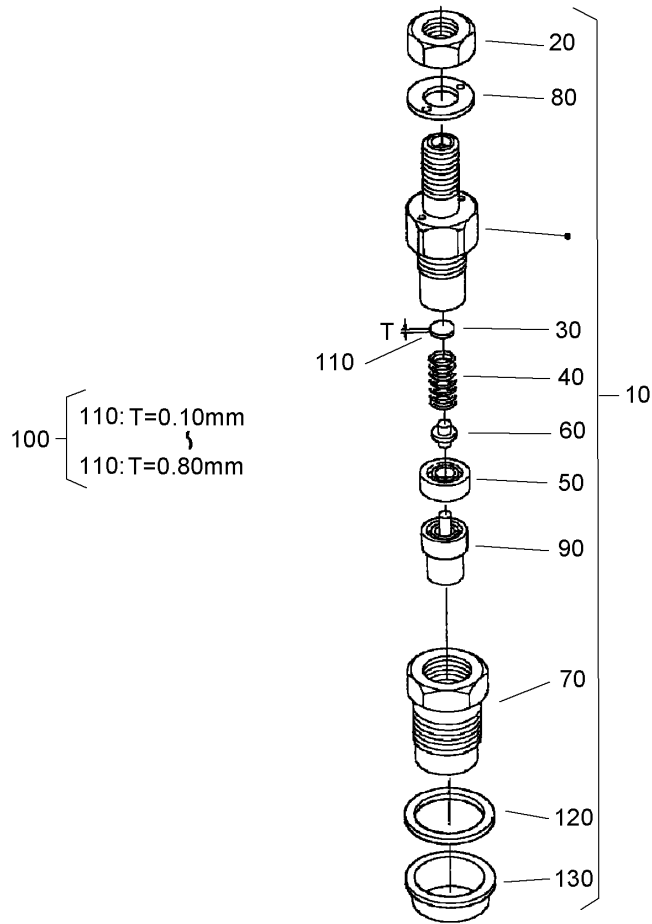 


Nozzle Holder Assembly

| Ref | Part No. | Qty. | Description            |  |  |  |  |
|-----|----------|------|------------------------|--|--|--|--|
| 10  | 108-2866 | 3    | Nozzle Holder Kit      |  |  |  |  |
| 20  | 99-8301  | 3    | Nut                    |  |  |  |  |
| 30  | 99-8302  | 3    | Washer-Adjusting       |  |  |  |  |
| 40  | 99-8303  | 3    | Spring-Nozzle          |  |  |  |  |
| 50  | 99-8304  | 3    | Spacer-Distance        |  |  |  |  |
| 60  | 99-8305  | 3    | Rod-Push               |  |  |  |  |
| 70  | 99-8306  | 3    | Nut-Nozzle             |  |  |  |  |
| 80  | 99-8307  | 3    | Washer-Plain           |  |  |  |  |
| 90  | 107-7826 | 3    | Piece-Nozzle           |  |  |  |  |
| 100 | 99-8309  | 3    | Adjusting Washer ASM   |  |  |  |  |
| 110 | 99-8310  | 3    | Washer-Adjust (0.10Mm) |  |  |  |  |
| 110 | 99-8311  | 3    | Washer-Adjust (0.20Mm) |  |  |  |  |
| 110 | 99-8312  | 3    | Washer-Adjust (0.30Mm) |  |  |  |  |
| 110 | 99-8313  | 3    | Washer-Adjust (0.40Mm) |  |  |  |  |
| 110 | 99-8314  | 3    | Washer-Adjust (0.50Mm) |  |  |  |  |
| 110 | 99-8315  | 3    | Washer-Adjust (0.52Mm) |  |  |  |  |
| 110 | 99-8316  | 3    | Washer-Adjust (0.54Mm) |  |  |  |  |
| 110 | 99-8317  | 3    | Washer-Adjust (0.56Mm) |  |  |  |  |
| 110 | 99-8318  | 3    | Washer-Adjust (0.58Mm) |  |  |  |  |
| 110 | 99-8319  | 3    | Washer-Adjust (0.80Mm) |  |  |  |  |
| 120 | 98-7676  | 3    | Gasket                 |  |  |  |  |
| 130 | 98-7677  | 3    | Seal                   |  |  |  |  |

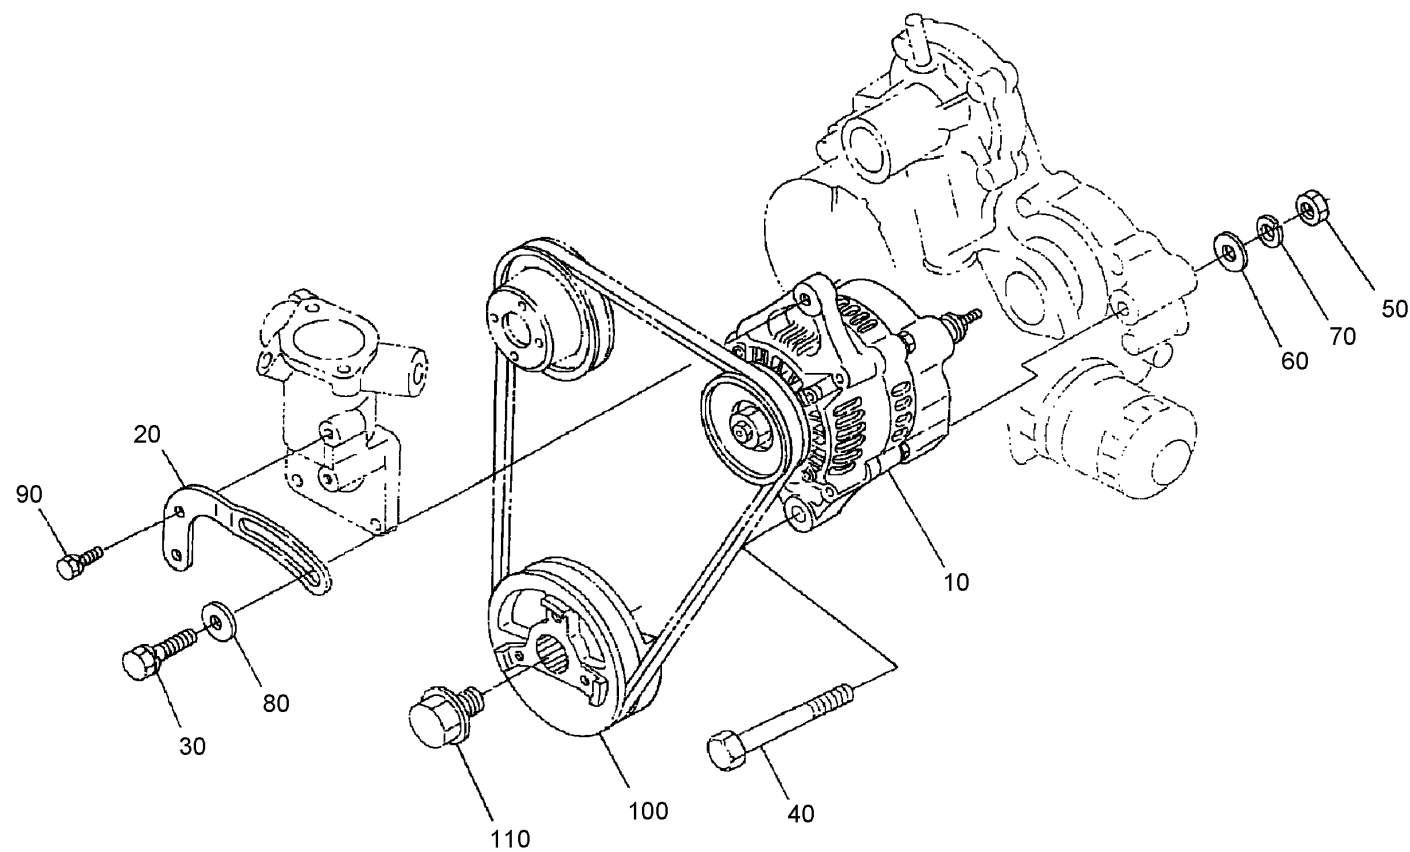 

Alternator and Pulley Assembly

| Ref | Part No. | Qty. | Description       |  |  |  |  |
|-----|----------|------|-------------------|--|--|--|--|
| 10  | 98-9474  | 1    | Alternator ASM    |  |  |  |  |
| 20  | 98-9573  | 1    | Stay-Dynamo       |  |  |  |  |
| 30  | 108-7088 | 1    | Bolt              |  |  |  |  |
| 40  | 98-9360  | 1    | Bolt              |  |  |  |  |
| 50  | 98-7737  | 1    | Nut               |  |  |  |  |
| 60  | 3256-24  | 1    | Washer-Flat       |  |  |  |  |
| 70  | 98-7738  | 1    | Washer-Spring     |  |  |  |  |
| 80  | 100-9233 | 1    | Washer-Plain      |  |  |  |  |
| 90  | 98-7692  | 1    | Bolt              |  |  |  |  |
| 100 | 98-9473  | 1    | Pulley-Drive, Fan |  |  |  |  |
| 110 | 98-9585  | 1    | Bolt              |  |  |  |  |

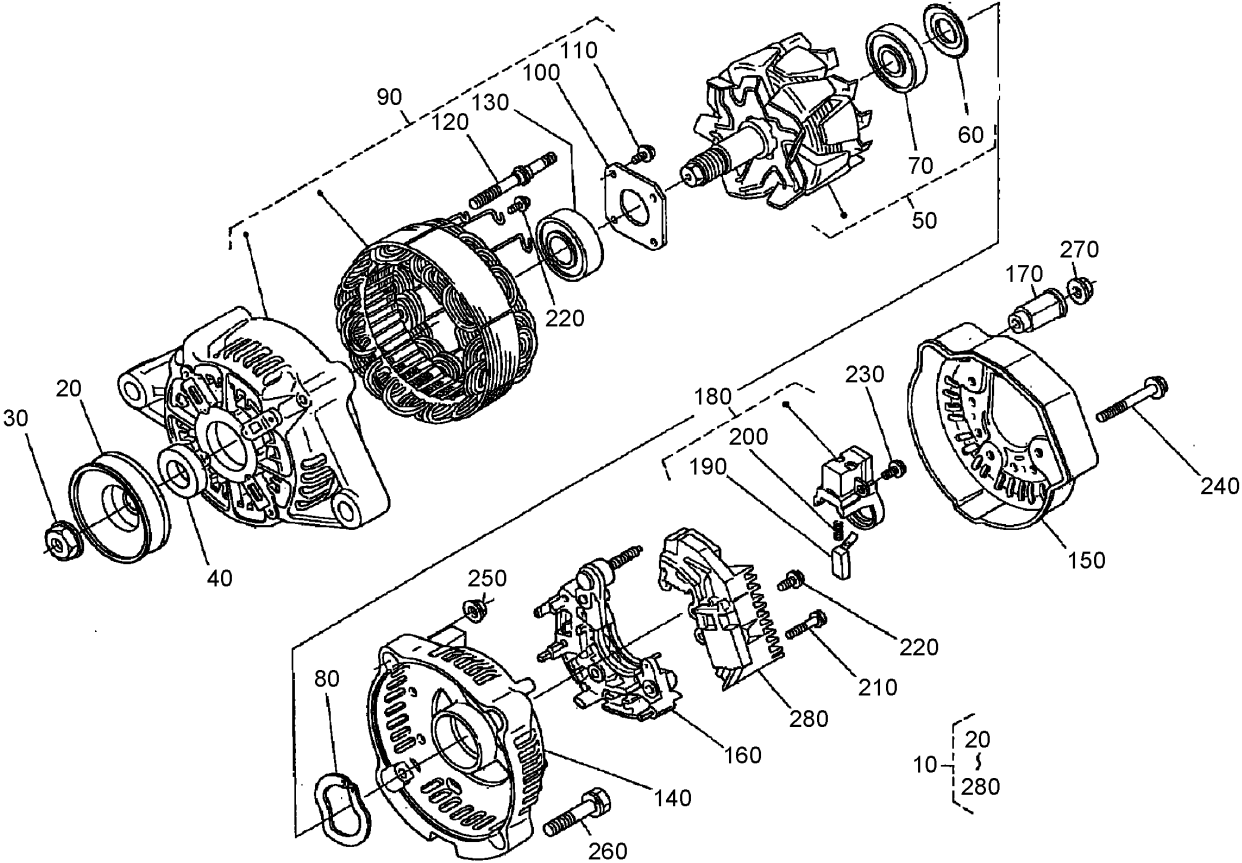 


Alternator (Component Part) Assembly

| Ref | Part No. | Qty. | Description         |
|-----|----------|------|---------------------|
| 10  | 98-9474  | 1    | Alternator ASM      |
| 20  | 98-9453  | 1    | Pulley-Dynamo       |
| 30  | 98-7708  | 1    | Nut                 |
| 40  | 98-7709  | 1    | Collar              |
| 50  | 107-0136 | 1    | Rotor               |
| 60  | 98-7711  | 1    | Cover-Bearing       |
| 70  | 107-0138 | 1    | Bearing-Ball        |
| 80  | 98-7713  | 1    | Washer-Thrust       |
| 90  | 107-0139 | 1    | Drive End Frame ASM |
| 100 | 98-7715  | 1    | Plate-Retainer      |
| 110 | 98-7716  | 4    | Screw-Head, Round   |
| 120 | 98-7717  | 2    | Bolt-Through        |
| 130 | 107-0137 | 1    | Bearing-Ball        |
| 140 | 107-9087 | 1    | Frame-End           |
| 150 | 107-0140 | 1    | Cover-End           |
| 160 | 98-9476  | 1    | Rectifier ASM       |
| 170 | 98-7722  | 1    | Bushing-Insulation  |
| 180 | 107-0141 | 1    | Holder-Brush        |
| 190 | 98-7724  | 2    | Brush               |
| 200 | 98-7725  | 2    | Spring-Brush        |
| 210 | 98-7726  | 2    | Screw-Head, Round   |
| 220 | 98-7727  | 6    | Screw-Head, Round   |
| 230 | 98-7728  | 1    | Screw-Head, Round   |
| 240 | 98-7729  | 3    | Bolt                |


| Ref | Part No. | Qty. | Description   |
|-----|----------|------|---------------|
| 250 | 98-7730  | 2    | Nut           |
| 260 | 98-7731  | 2    | Bolt          |
| 270 | 98-7732  | 1    | Nut           |
| 280 | 107-9088 | 1    | Regulator ASM |



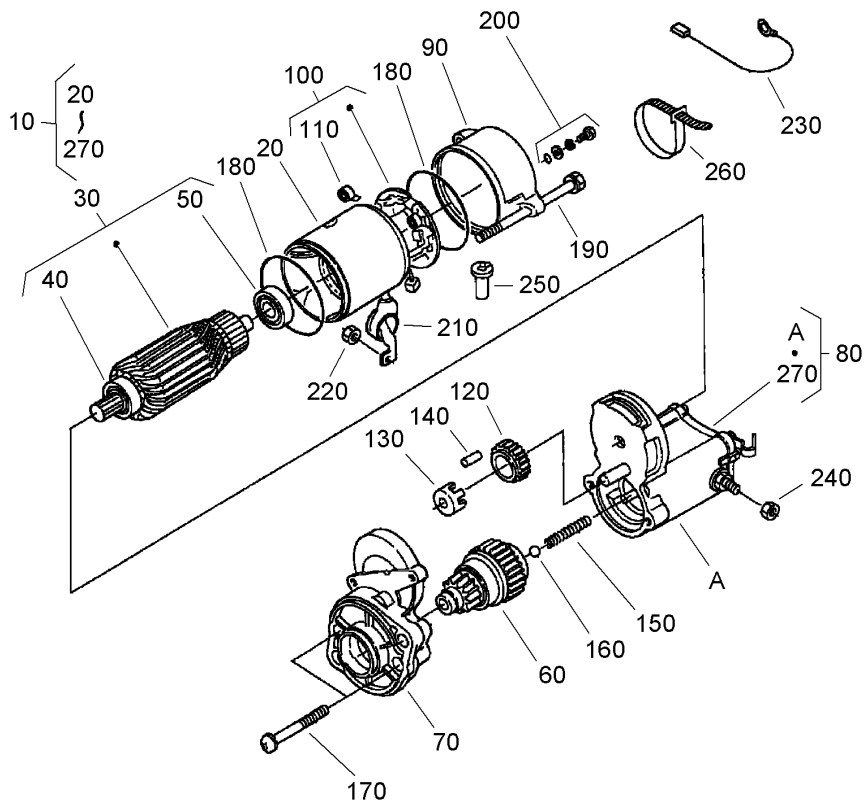 


### Starter Assembly No. 98-9705
 
| Ref | Part No. | Qty. | Description          | Ref | Part No. | Qty. | Description |
|-----|----------|------|----------------------|-----|----------|------|-------------|
| 10  | 98-9705  | 1    | Starter ASM          | 250 | 98-7759  | 1    | Pipe-Drain  |
| 20  | 104-8608 | 1    | Yoke ASM             | 260 | 98-9712  | 1    | Band-Cover  |
| 30  | 98-7742  | 1    | Armature ASM         | 270 | 105-2886 | 1    | Cover ASM   |
| 40  | 98-7744  | 1    | Bearing              |     |          |      |             |
| 50  | 98-7743  | 1    | Bearing              |     |          |      |             |
| 60  | 99-8373  | 1    | Clutch-Running, Over |     |          |      |             |
| 70  | 99-8374  | 1    | Frame-End, Drive     |     |          |      |             |
| 80  | 105-3746 | 1    | Magnetic Switch ASM  |     |          |      |             |
| 90  | 98-7748  | 1    | Frame-End            |     |          |      |             |
| 100 | 98-7749  | 1    | Brush Holder ASM     |     |          |      |             |
| 110 | 98-7750  | 4    | Spring-Brush         |     |          |      |             |
| 120 | 98-7751  | 1    | Gear                 |     |          |      |             |
| 130 | 98-7752  | 1    | Retainer             |     |          |      |             |
| 140 | 98-7753  | 5    | Roller               |     |          |      |             |
| 150 | 98-7754  | 1    | Spring               |     |          |      |             |
| 160 | 98-7755  | 1    | Ball                 |     |          |      |             |
| 170 | 98-7756  | 2    | Bolt                 |     |          |      |             |
| 180 | 98-7757  | 2    | O-Ring               |     |          |      |             |
| 190 | 100-9240 | 2    | Bolt                 |     |          |      |             |
| 200 | 98-7758  | 2    | Bolt ASM             |     |          |      |             |
| 210 | 99-8375  | 1    | Cover                |     |          |      |             |
| 220 | 99-8371  | 1    | Nut-Hex              |     |          |      |             |
| 230 | 98-9711  | 1    | Cord-Solenoid, Stop  |     |          |      |             |
| 240 | 99-8376  | 1    | Nut-Hex              |     |          |      |             |

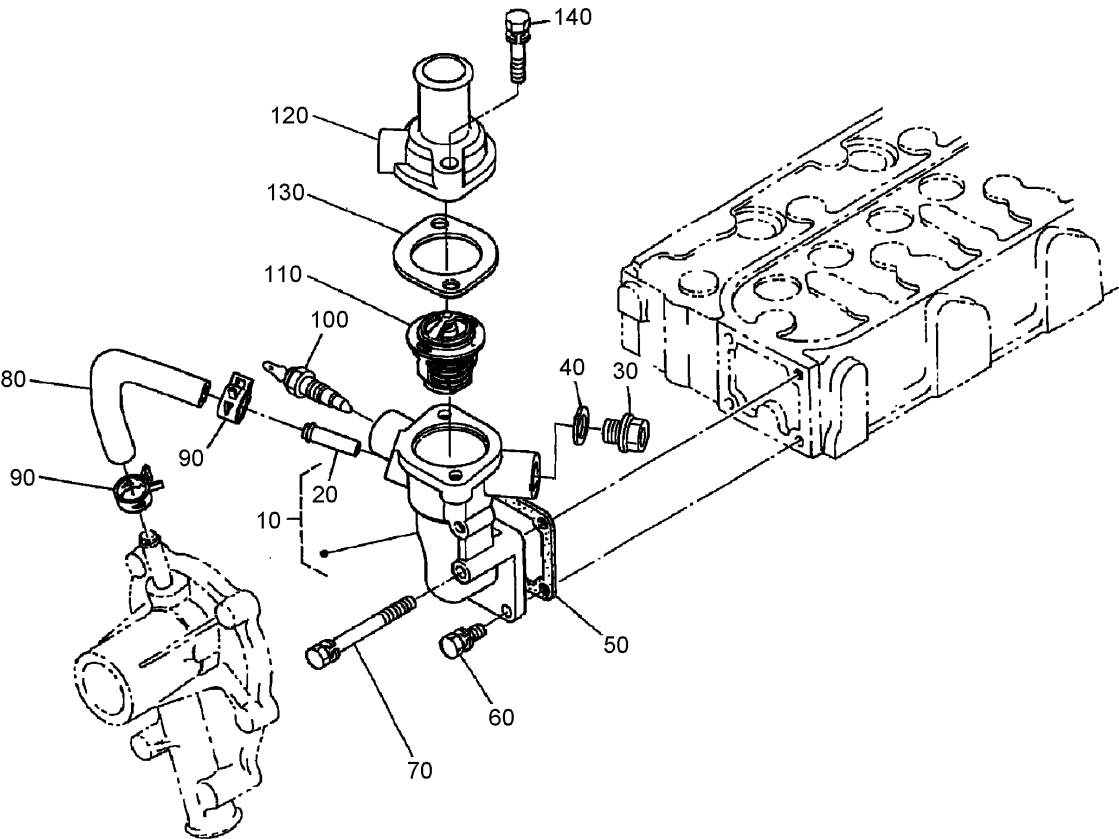


Water Flange and Thermostat Assembly

| Ref | Part No. | Qty. | Description          |  |  |  |  |
|-----|----------|------|----------------------|--|--|--|--|
| 10  | 98-9713  | 1    | Water Flange ASM     |  |  |  |  |
| 20  | 98-9580  | 1    | Pipe-Return, Water   |  |  |  |  |
| 30  | 105-3747 | 1    | Plug                 |  |  |  |  |
| 40  | 99-3583  | 1    | Packing              |  |  |  |  |
| 50  | 98-9638  | 1    | Gasket-Flange, Water |  |  |  |  |
| 60  | 98-7692  | 3    | Bolt                 |  |  |  |  |
| 70  | 98-9356  | 1    | Bolt                 |  |  |  |  |
| 80  | 98-9578  | 1    | Pipe-Return, Water   |  |  |  |  |
| 90  | 98-9579  | 2    | Band-Pipe            |  |  |  |  |
| 100 | 98-9719  | 1    | Thermoswitch         |  |  |  |  |
| 110 | 98-7778  | 1    | Thermostat ASM       |  |  |  |  |
| 120 | 98-9471  | 1    | Cover-Thermostat     |  |  |  |  |
| 130 | 105-3748 | 1    | Gasket-Thermostat    |  |  |  |  |
| 140 | 98-7777  | 2    | Bolt                 |  |  |  |  |

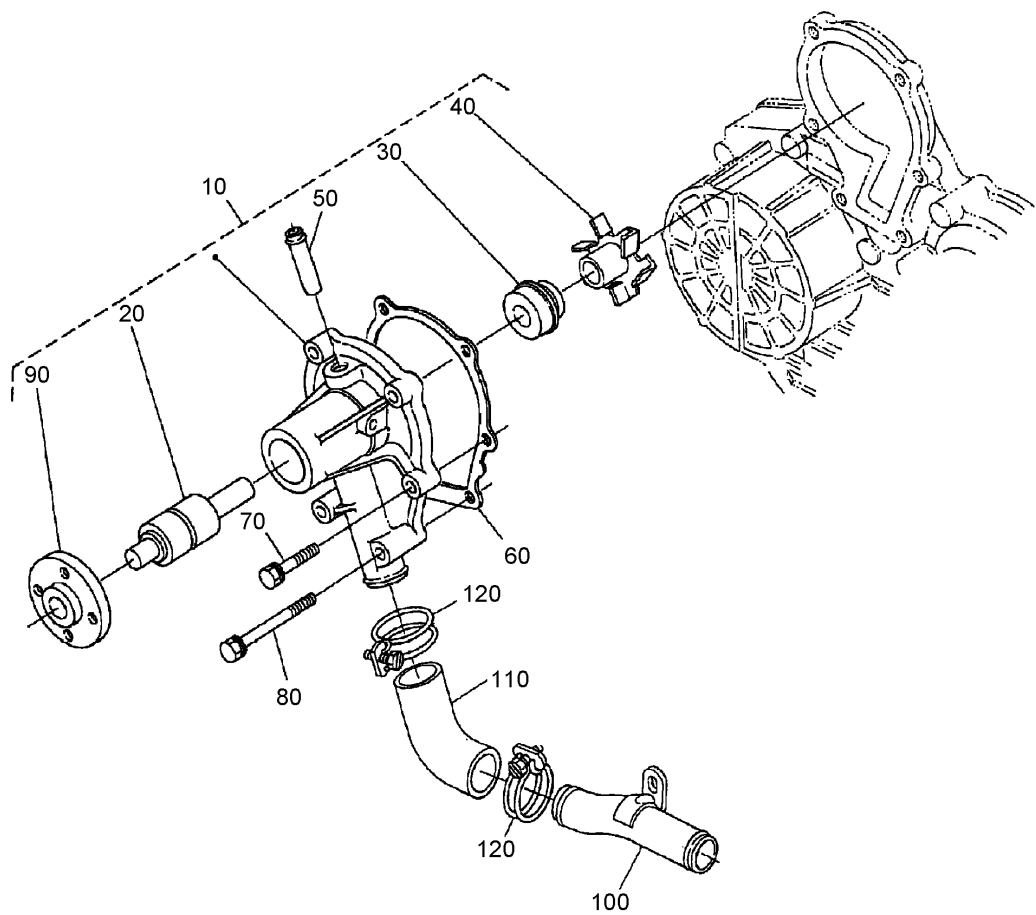 

Water Pump and Pipe Assembly

| Ref | Part No. | Qty. | Description          |  |  |  |  |
|-----|----------|------|----------------------|--|--|--|--|
| 10  | 107-9089 | 1    | Water Pump ASM       |  |  |  |  |
| 20  | 99-3517  | 1    | Bearing-Pump, Water  |  |  |  |  |
| 30  | 105-3750 | 1    | Mechanical Seal ASM  |  |  |  |  |
| 40  | 99-3519  | 1    | Impeller-Pump, Water |  |  |  |  |
| 50  | 98-9577  | 1    | Pipe-Return, Water   |  |  |  |  |
| 60  | 99-3454  | 1    | Gasket-Pump, Water   |  |  |  |  |
| 70  | 98-9353  | 4    | Bolt                 |  |  |  |  |
| 80  | 107-9090 | 2    | Bolt                 |  |  |  |  |
| 90  | 99-3516  | 4    | Flange-Pump, Water   |  |  |  |  |
| 100 | 98-9716  | 1    | Pipe-Water           |  |  |  |  |
| 110 | 107-9091 | 1    | Pipe-Water           |  |  |  |  |
| 120 | 98-9717  | 2    | Clamp                |  |  |  |  |

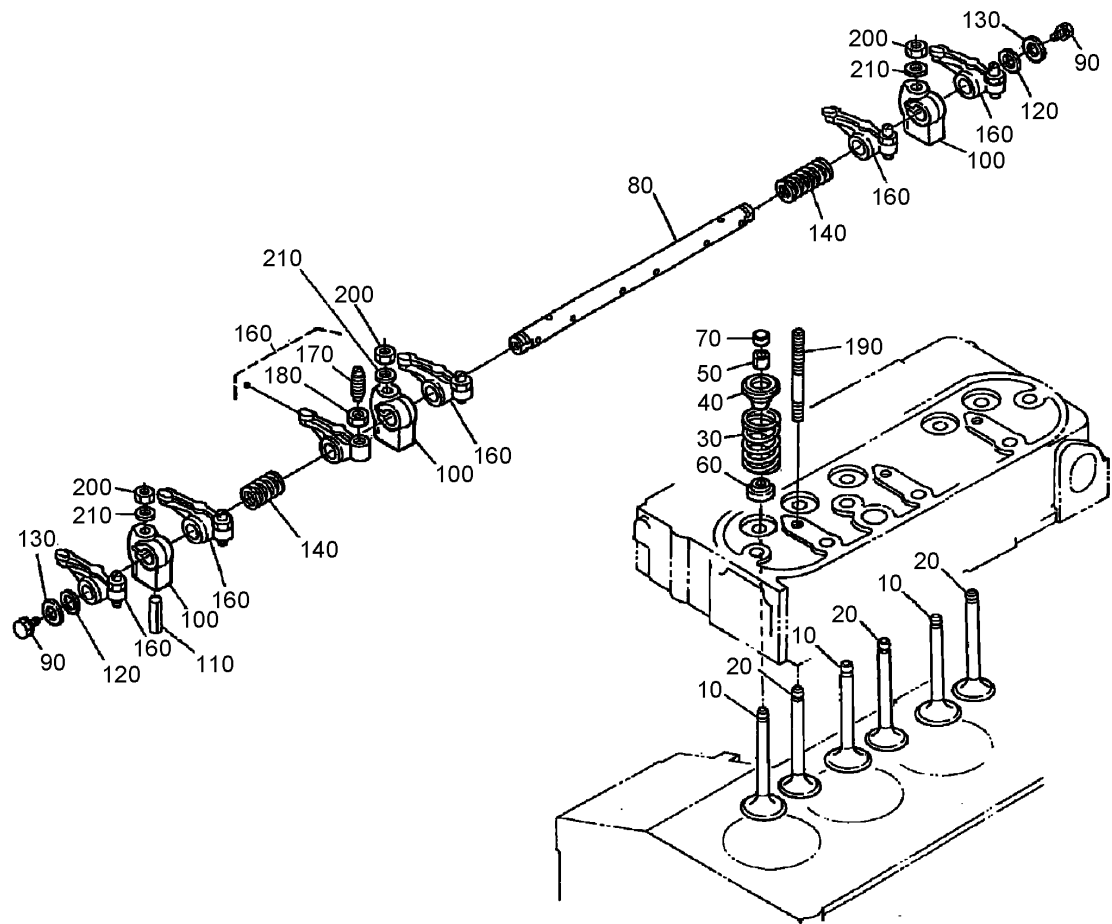 


Valve and Rocker Arm Assembly

| Ref | Part No. | Qty. | Description              |  |  |  |  |
|-----|----------|------|--------------------------|--|--|--|--|
| 10  | 98-9494  | 3    | Valve-Inlet              |  |  |  |  |
| 20  | 98-9495  | 3    | Valve-Exhaust            |  |  |  |  |
| 30  | 98-9648  | 6    | Spring-Valve             |  |  |  |  |
| 40  | 107-9092 | 6    | Retainer-Spring          |  |  |  |  |
| 50  | 98-9390  | 6    | Collet-Set, Valve Spring |  |  |  |  |
| 60  | 99-8385  | 6    | Seat-Stem, Valve         |  |  |  |  |
| 70  | 98-9497  | 6    | Cap-Valve                |  |  |  |  |
| 80  | 105-3790 | 1    | R-Arm Shaft ASM          |  |  |  |  |
| 90  | 100-9265 | 2    | Bolt                     |  |  |  |  |
| 100 | 98-9505  | 3    | Bracket-Arm, Rocker      |  |  |  |  |
| 110 | 105-3758 | 1    | Pin-Spring               |  |  |  |  |
| 120 | 98-9507  | 2    | Washer-Shaft, R-Arm      |  |  |  |  |
| 130 | 3256-1   | 2    | Washer-Flat              |  |  |  |  |
| 140 | 98-9504  | 2    | Spring-Arm, Rocker       |  |  |  |  |
| 160 | 98-9501  | 6    | Rocker Arm ASM           |  |  |  |  |
| 170 | 98-9502  | 6    | Screw-Adjusting          |  |  |  |  |
| 180 | 98-9503  | 6    | Nut                      |  |  |  |  |
| 190 | 98-9506  | 3    | Stud                     |  |  |  |  |
| 200 | 98-9393  | 3    | Nut                      |  |  |  |  |
| 210 | 98-9385  | 3    | Washer-Flat              |  |  |  |  |





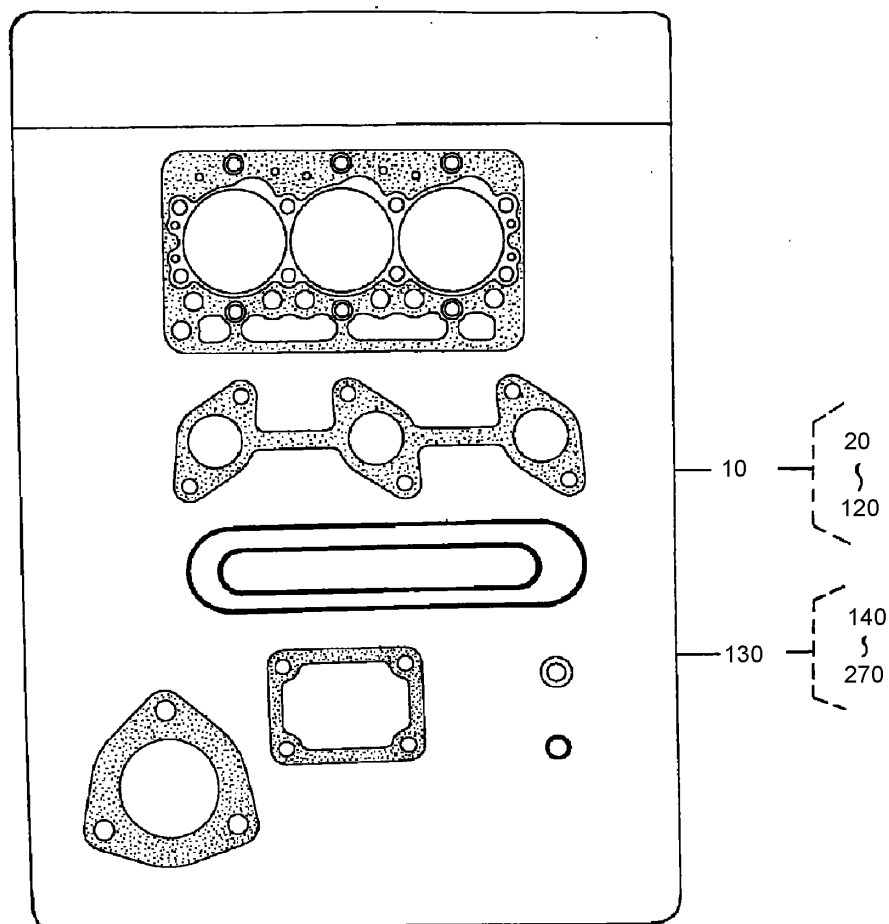 

## Gasket Kit Assembly

| Ref | Part No. | Qty. | Description      |
|-----|----------|------|------------------|
| 10  | 107-7848 | 1    | Upper Gasket Kit |
| 130 | 107-9095 | 1    | Lower Gasket Kit |

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |

# Attachments and Accessories

## For 30626 - Groundsmaster 328-D

| Product Name                                       | Model/Part |
|----------------------------------------------------|------------|
| Jack Pad Kit . . . . .                             | 106-4386   |
| 2-Wheel Drive Rear Axle Kit . . . . .              | 106-8060   |
| Tire Chains (23 x 8.50-12) . . . . .               | 11-0390    |
| Wheel Weight Kit . . . . .                         | 11-0440    |
| Tube-Inner (23 x 8.50-12) . . . . .                | 231-90     |
| Rear Weight Kit . . . . .                          | 24-5780    |
| Weight-Rear . . . . .                              | 24-5790-01 |
| Standard Seat Kit . . . . .                        | 30623      |
| Deluxe Seat Kit . . . . .                          | 30625      |
| Seat Adapter Kit . . . . .                         | 30628      |
| Cruise Control Kit . . . . .                       | 30677      |
| Arm Rest Kit . . . . .                             | 30707      |
| 72 Inch Rear Discharge Mower . . . . .             | 30710      |
| Quick Attach Adapter Kit . . . . .                 | 30711      |
| 72 Inch Guardian Recycler Mower . . . . .          | 30716      |
| Mowers and Boom Quick Attach Adapter Kit . . . . . | 30719      |
| 72 Inch Side Discharge Mower . . . . .             | 30722      |
| Recycler Mower Quick Attach Adapter Kit . . . . .  | 30729      |
| Rotary Broom . . . . .                             | 30743      |
| 48 Inch V-Plow . . . . .                           | 30750      |
| 48 Inch V-Plow Mounting Kit . . . . .              | 30757      |
| 72 Inch Mower Mulching Kit . . . . .               | 30799      |
| Debris Blower . . . . .                            | 30855      |
| 4-Ply Wide Wheel and Tire ASM . . . . .            | 62-7020    |
| Wheel And Tire ASM . . . . .                       | 69-9870    |
| Spark Arrestor Screen . . . . .                    | 75-6880    |

