

 


MODEL NO. 62912-0000001 Thru
2000001 & UP
MODEL NO. 62923-0000001 Thru
2000001 & UP

**PARTS
CATALOG**

5 H.P. LAWN VACUUM, H.P. & S.P.

**ONLY COPY
DO NOT REMOVE**
Tech Publications

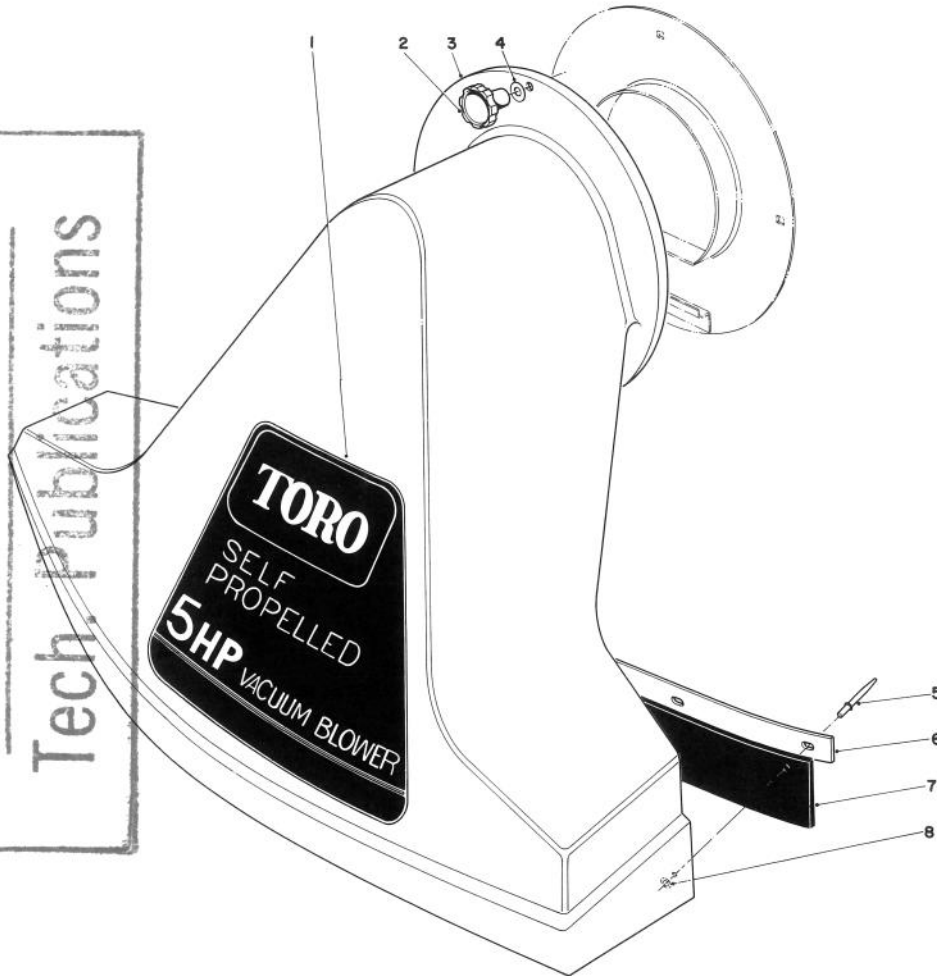


C-0463

SNOUT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67-7730	Decal - Toro Vacuum Model No. 62912	1
*	67-7720	Decal - Toro Vacuum Model No. 62923	1
2	19-4050	Knob - Handle Release	1
3	40-7000	Snout Assembly (Incl. Ref. #5-8)	1

Ref. No.	Part No.	Description	No. Used
4	3-3391	Washer	1
5	3290-417	Rivet - Pop	5
6	20-6840	Clamp - Flap	1
7	20-6830	Flap - Rubber	1
8	3256-51	Washer	5

 *Not Illustrated

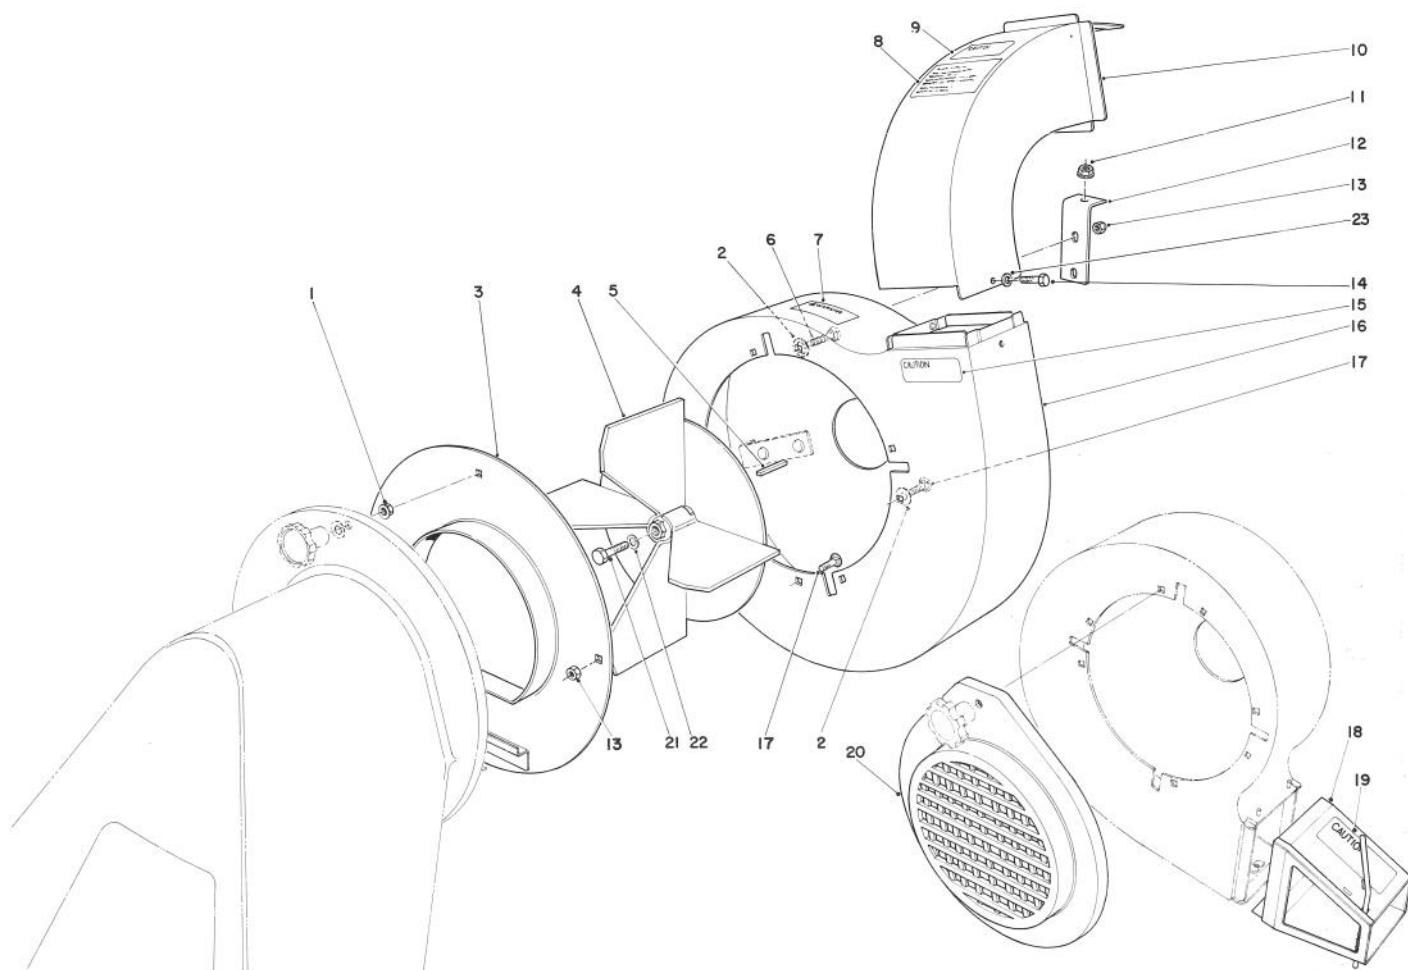


BLOWER ASSEMBLY (Model 62912 & 62923)

Ref. No.	Part No.	Description	No. Used
1	32128-26	Nut - Flange	1
2	3256-25	Washer - Flat	3
3	20-5450	Cover - Blower	1
4	37-9230	Fan (Model No .62923)	1
*	37-9230	Fan (Model No .62912)	1
5	57-0036	Key	1
6	57-3220	Bolt - Carriage	1
7	37-9250	Decal - Warning	1
8	20-7000	Decal - Toro	1
9	20-8710	Decal - Caution	1
10	20-6130	Chute - Vacuum	1
11	3296-58	Nut - Flange Lock	1
12	39-4660	Bracket - Housing	2

Ref. No.	Part No.	Description	No. Used
13	3296-29	Nut - Lock	7
14	321-4	Screw	1
15	20-7010	Decal - Warning	1
16	20-5890	Housing - Blower	1
17	3230-15	Bolt - Carriage	3
18	20-6570	Blower - Exhaust (Incl Ref.#19)	1
19	20-7900	Decal - Exhaust	1
20	20-5780	Blower - Intake	1
21	3290-456	Washer - Lock	1
22	40-6990	Screw - Special	1
23	3290-436	Washer - Lock	1

 
*Not Illustrated

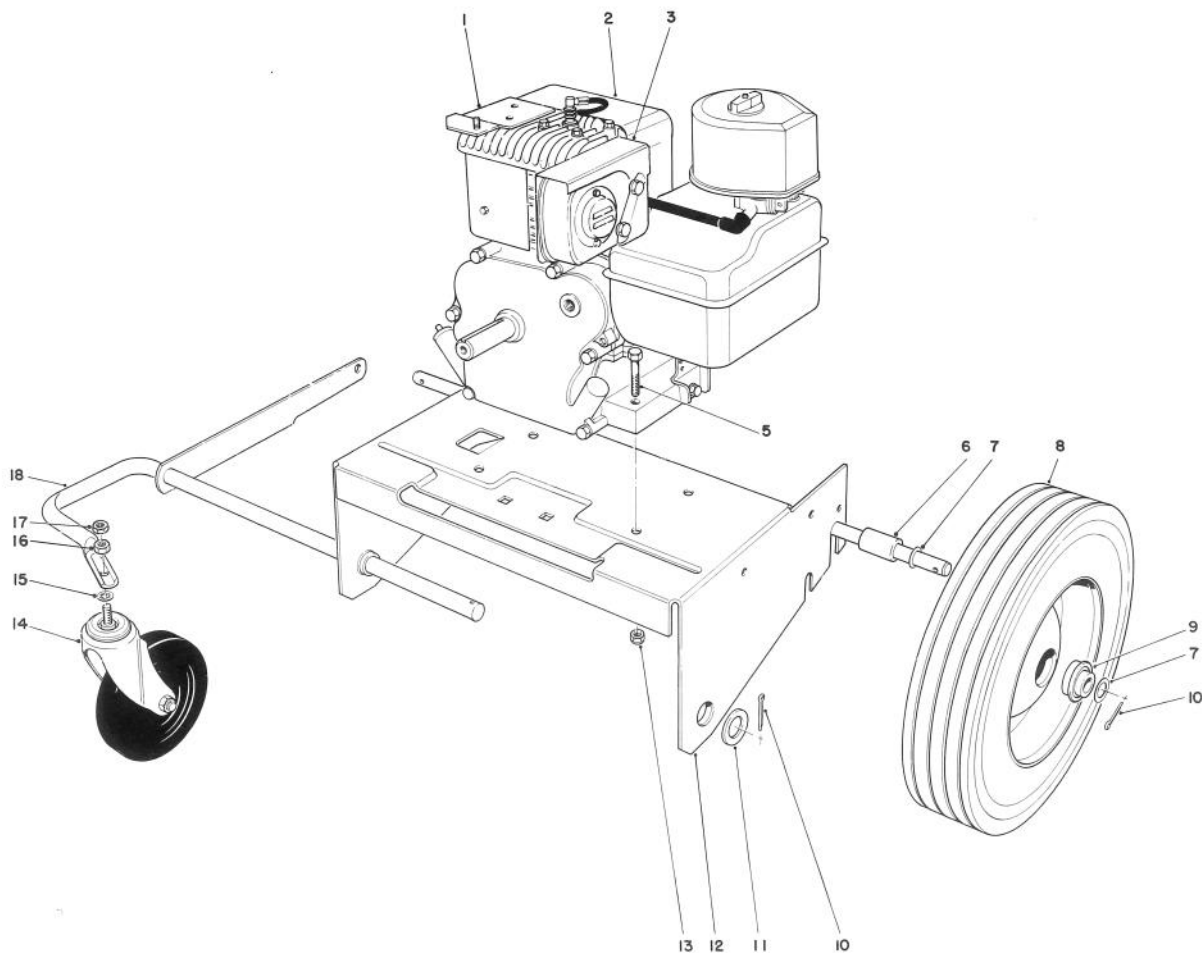

C-0465

ENGINE & BASE ASSEMBLY (Model 62912)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	39-4680	Bracket - Mounting	1	10	3272-17	Pin - Cotter	3
2		Engine	1	11	3256-29	Washer - Flat	1
3	39-4690	Shield - Muffler	1	12	20-5560	Plate - Engine	1
5	322-8	Screw	4	13	3296-29	Nut - Lock	4
6	20-5410	Spacer - Axle	2	14	23-3320	Caster	1
7	7-3590	Washer - Flat	4	15	3254-4	Washer - Lock	1
8	20-6100	Wheel		16	3217-9	Nut	1
		(Incl. Ref.#9)	2	17	3296-23	Nut -Lock	1
9	251-258	Bearing	4	18	23-3280	Support - Front Wheel	1

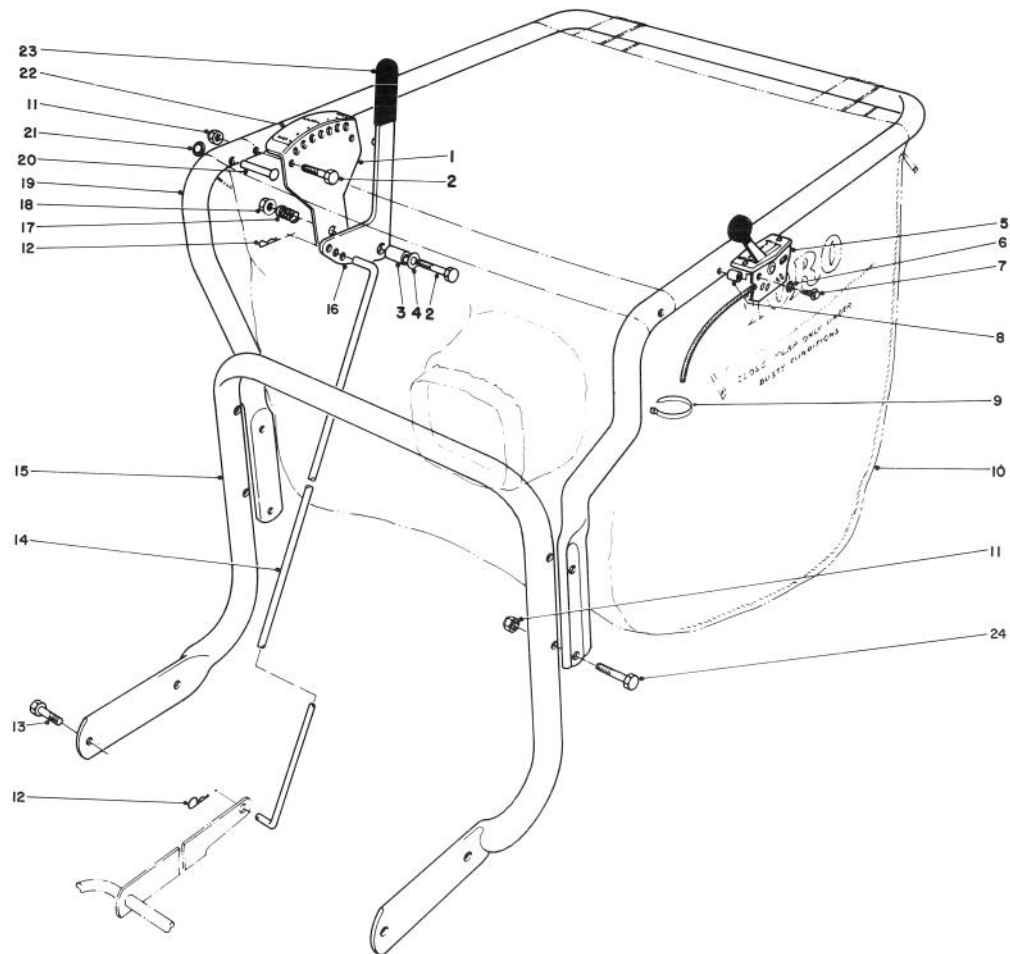 


C-0466

CONTROL & HANDLE ASSEMBLY (Model 62912)

Ref. No.	Part No.	Description	No. Used
1	20-5820	Bracket Adjustment	1
2	322-8	Screw	3
3	20-5650	Spacer	1
4	3256-3	Washer - Flat	1
5	23-3610	Throttle Control	1
6	3255-17	Washer - Lock	2
7	32104-72	Screw - Self Tapping	2
8	23-3620	Spacer	2
9	3290-378	Cable Tie	1
10	71-3540	Bag - Vacuum	1
11	3296-29	Nut - Lock	10
12	3290-250	Pin - Cotter	2


Ref. No.	Part No.	Description	No. Used
13	322-5	Screw	4
14	33-2410	Rod - Connecting	1
15	20-5810	Handle - Lower	1
16	23-3410	Handle - Adjustment	1
17	20-6110	Spring	1
18	32128-13	Nut - Flange	1
19	23-3570	Handle - Upper	1
20	3263-9	Rivet	2
21	3290-418	Nut - Push On	1
22	20-6880	Decal - Adjustment	1
23	3-7877	Grip - Handle	1
24	322-9	Screw - Hex. Hd.	4

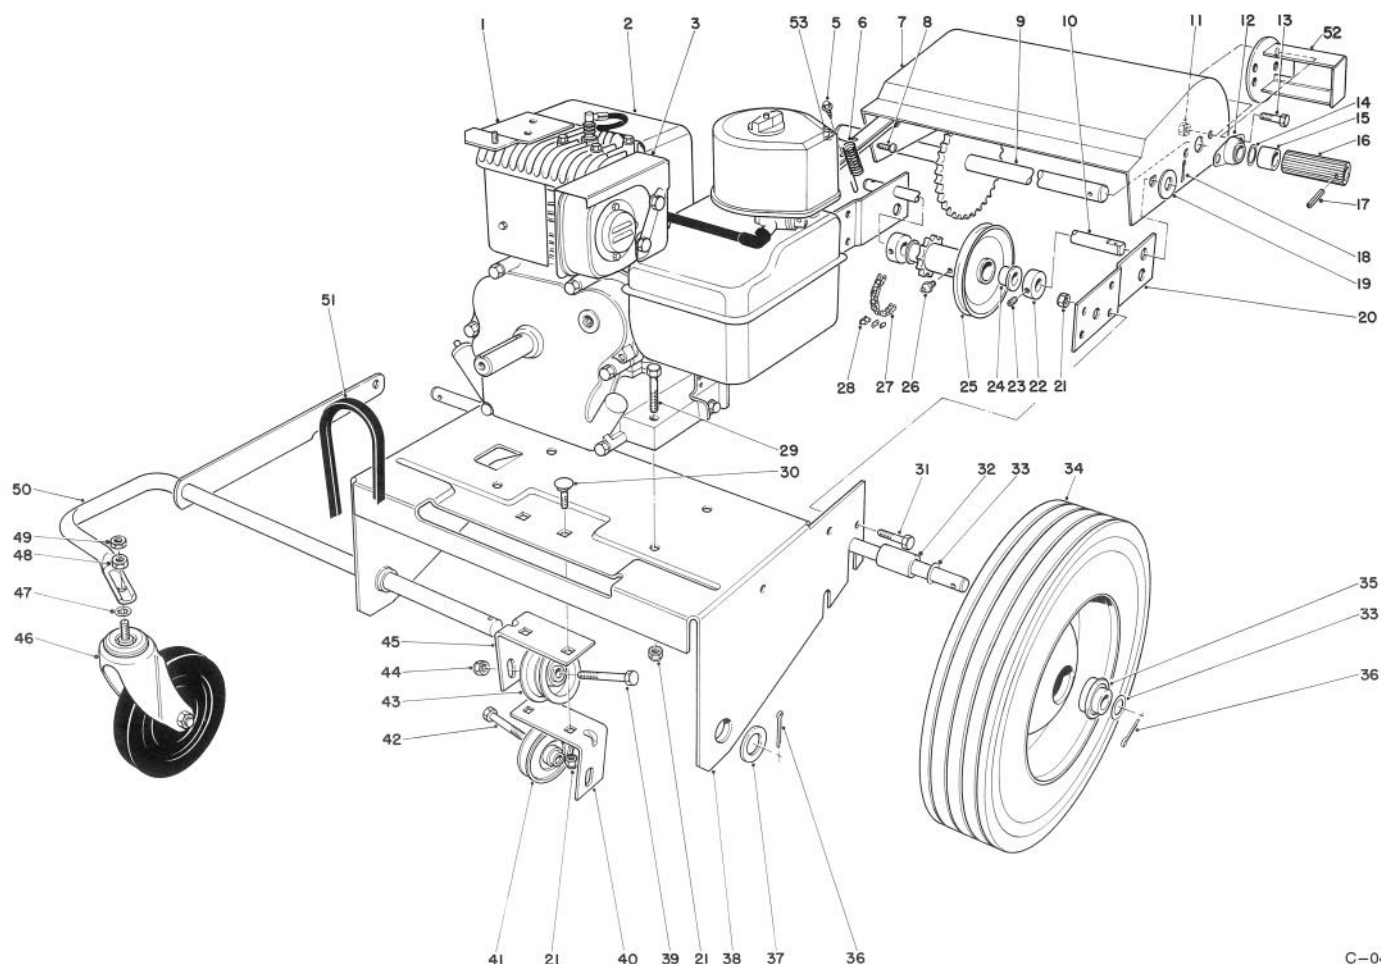 

C-0467

ENGINE & BASE ASSEMBLY (Model 62923)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	39-4680	Bracket - Mounting	1	25	20-6000	Idler Assembly (Incl. Ref. #24 & 26)	1
2		Engine	1	26	302-5	Fitting - Grease	1
3	39-4690	Shield - Muffler	1	27	3-3434	Chain - Traction (Incl. Ref. #28)	1
5	32140-32	Screw - Self Tapping	1	28	2710-31	Link - Connecting	1
6	23-3520	Spring	1	29	322-8	Screw	4
7	20-6040	Guard	1	30	3230-16	Bolt - Carriage	2
8	3290-359	Screw	1	31	322-5	Screw	4
9	20-7270	Shaft - Friction	1	32	20-5410	Spacer - Axle	2
10	20-5870	Shaft	1	33	7-3590	Washer - Flat	5
11	3296-29	Nut	4	34	20-6100	Wheel (Incl. Ref. #35)	2
12	256-236	Bearing	2	35	251-258	Bearing	4
13	322-2	Screw - Hex. Hd. Cap	4	36	3272-17	Pin - Cotter	3
14	7-3590	Washer	2	37	3256-29	Washer - Flat	1
15	20-5460	Spacer	2	38	20-5560	Plate - Engine	1
16	20-5960	Wheel - Friction	2	39	323-10	Screw	1
17	32121-4	Pin - Roll	2	40	20-8690	Bracket - Idler Mount L.H.	1
18	3272-7	Pin - Cotter	2	41	12-5820	Pulley - Idler	1
19	3256-26	Washer	2	42	323-19	Screw	1
20	43-6830	Bracket - Mounting	2	43	12-6700	Pulley - Idler	1
21	3296-29	Washer - Lock	10	44	3296-39	Nut - lock	2
22	20-5950	Collar (Incl. Ref. #23)	2	45	20-8680	Bracket - Idler Mount R.H.	1
23	3245-1	Screw - Set	2				
24	256-105	Bushing - Flange	2				

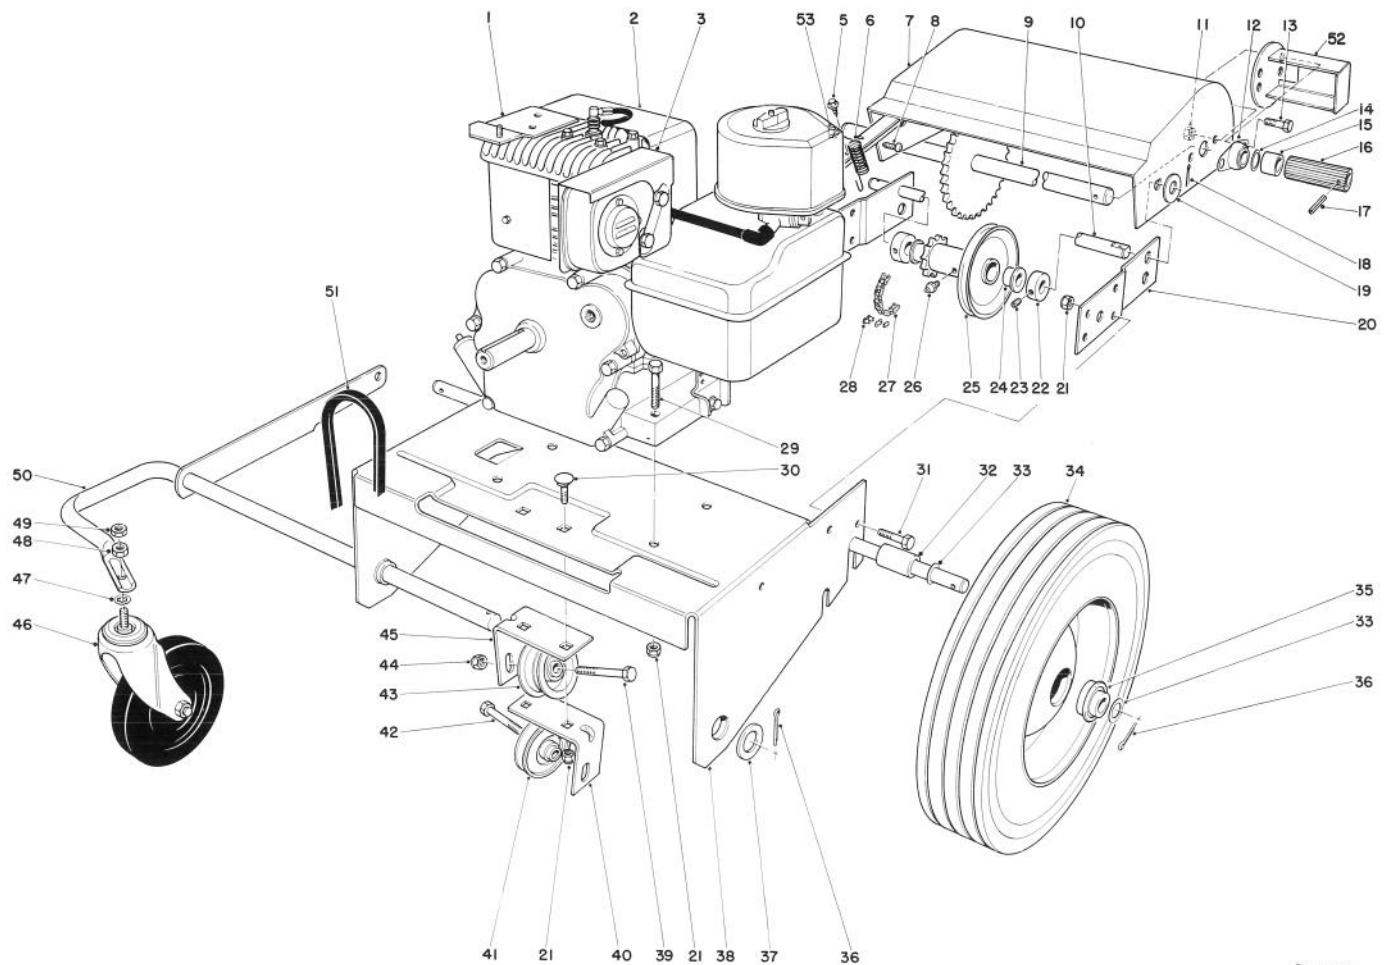 


C-0467

ENGINE & BASE ASSEMBLY (Model 62923 Continued)

Ref. No.	Part No.	Description	No. Used
46	23-3320	Caster	1
47	3254-4	Washer - Lock	1
48	3217-9	Nut	1
49	3296-23	Nut - Lock	1

Ref. No.	Part No.	Description	No. Used
50	23-3280	Support - Front Wheel	1
51	20-5990	"V"Belt	1
52	37-9210	Guard	2
53	3296-2	Nut	1

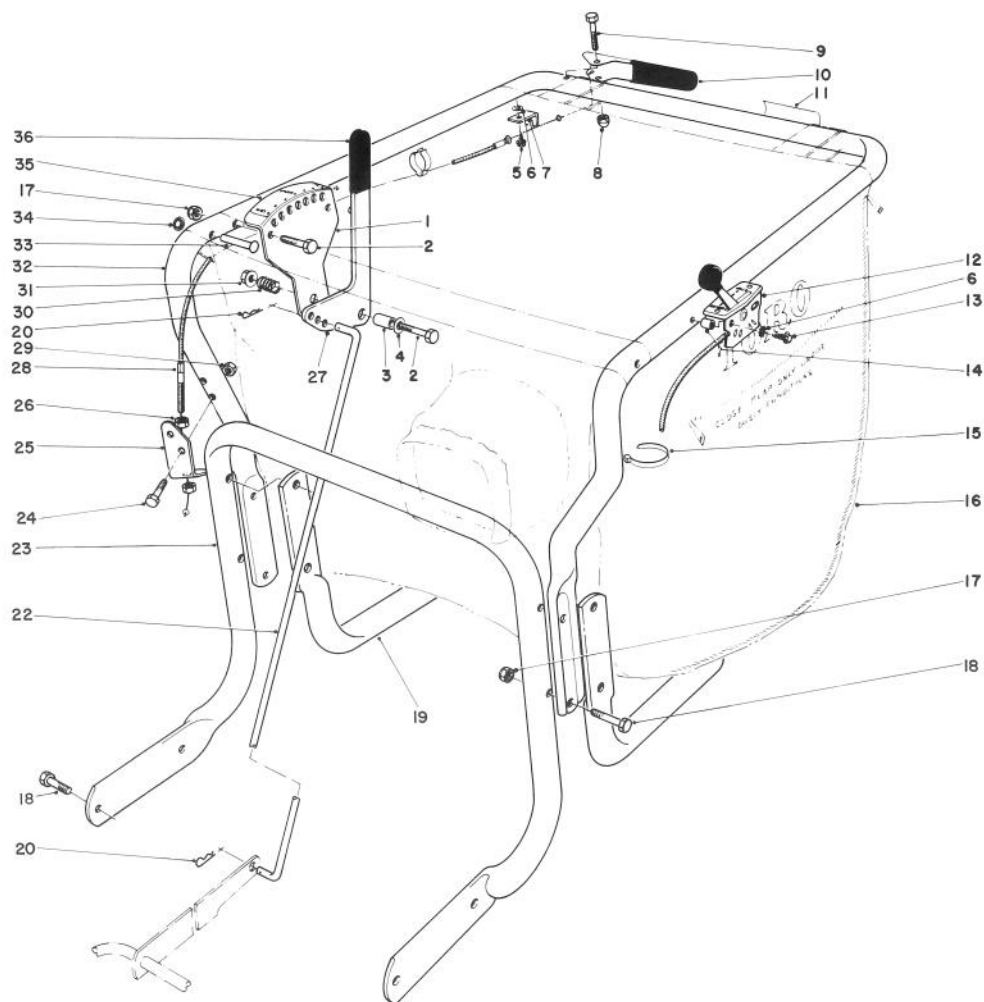 


C-0468

CONTROL & HANDLE ASSEMBLY (Model 62923)

Ref. No.	Part No.	Description	No. Used
1	20-5820	Bracket - Adjustment	1
2	322-8	Screw	3
3	20-5650	Spacer	1
4	3256-3	Washer - Flat	1
5	32144-112	Screw - Special	1
6	3255-17	Washer - Lock	3
7	20-8780	Ring - Retaining	1
8	32111-7	Nut	1
9	321-10	Screw	1
10	25-7880	Lever	1
11	20-8700	Decal - Traction Control	
12	23-3610	Throttle Control	1
13	32104-72	Screw - Self Tapping	2
14	23-3620	Spacer	2
15	3290-378	Cable Tie	2
16	71-3540	Bag - Vacuum	1
17	3296-29	Nut - Lock	6
18	322-5	Screw - Hex. Hd. Cap	4

Ref. No.	Part No.	Description	No. Used
19	66-1640	Support - Bag	1
20	3290-250	Pin - Cotter	2
22	33-2410	Rod - Connecting	1
23	20-5810	Handle - Lower	1
24	321-10	Screw - Hex. Hd. Cap	2
25	33-2830	Mount - Bowden	1
26	32149-5	Nut	2
27	23-3410	Handle - Adjustment	1
28	25-7860	Cable - Bodine	1
29	3296-42	Nut - Lock	2
30	20-6110	Spring	1
31	32128-13	Nut - Flange	1
32	23-3570	Handle - Upper	1
33	3263-9	Rivet	2
34	3290-418	Nut - Push On	2
35	20-6880	Decal - Adjustment	1
36	3-7877	Grip - Handle	1

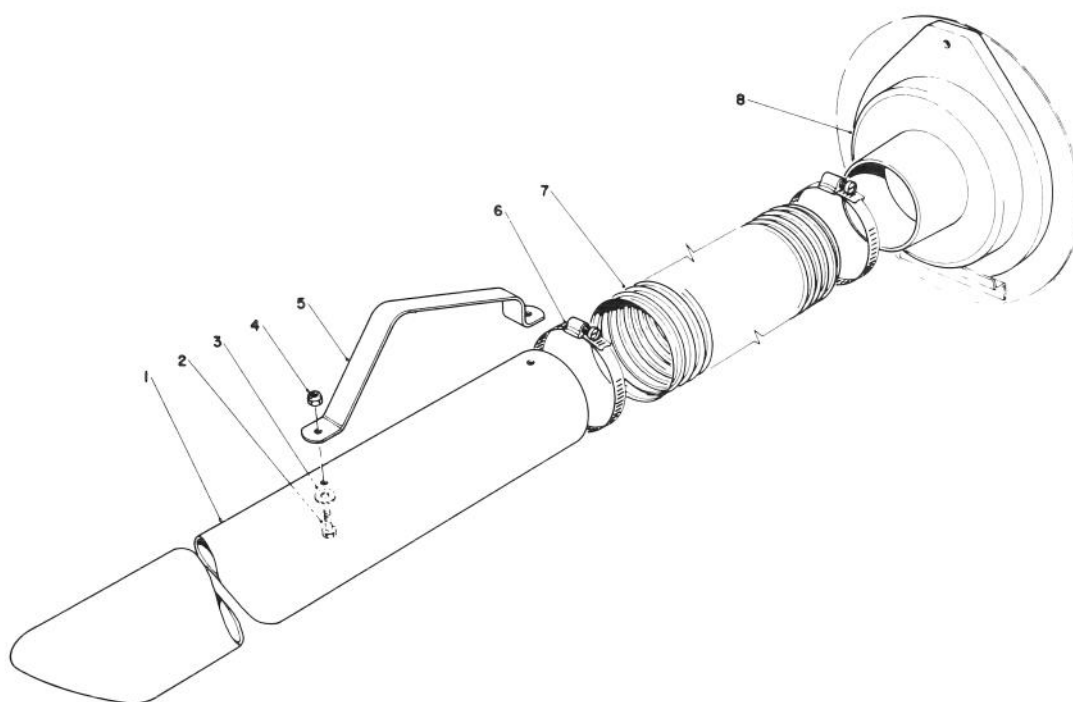 


C-0469

VACUUM HOSE KIT (Model 59085 Optional)

Ref. No.	Part No.	Description	No. Used
1	20-5750	Nozzle	1
2	321-3	Screw	2
3	20-5690	Washer - Special	2
4	32149-2	Nut - Lock	2

Ref. No.	Part No.	Description	No. Used
5	20-6200	Handle	1
6	2412-46	Clamp - Hose	2
7	20-6650	Hose - Vacuum	1
8	20-5740	Adaptor	1

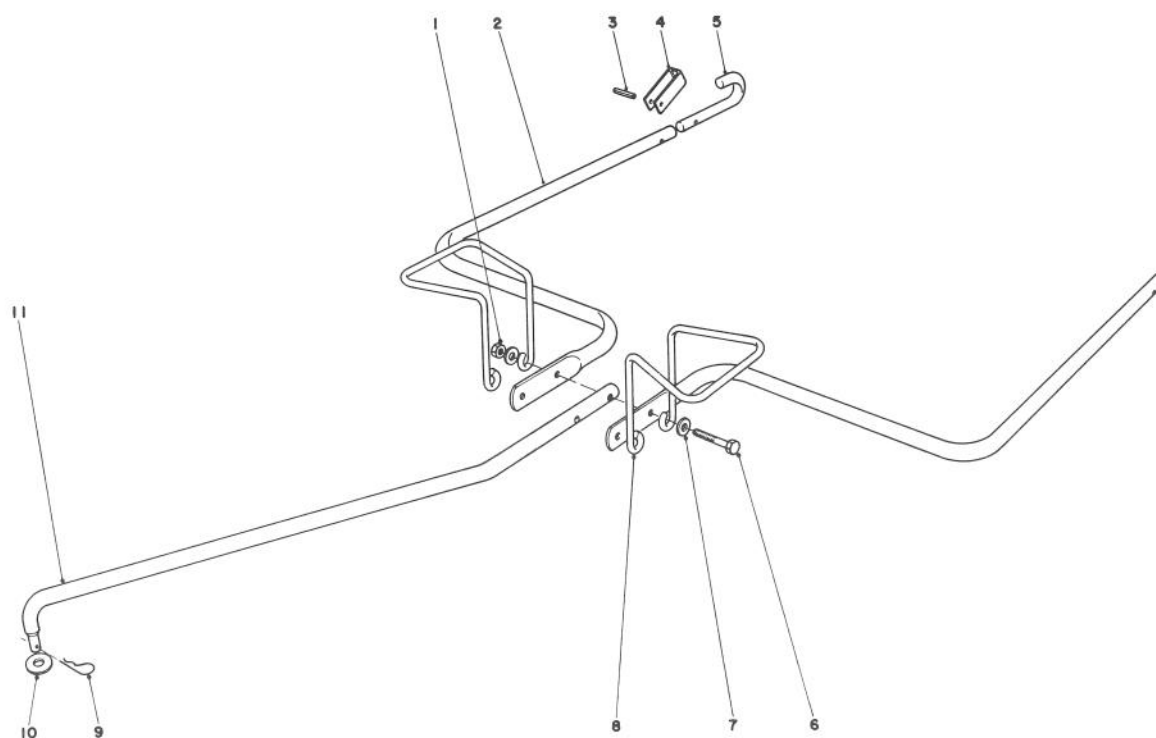 


C-0462

HITCH KIT (Model 59087 Optional)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32152-4	Nut - Lock	2	7	3256-2	Washer - Flat	4
2	20-8010	Arm - Hitch	2	8	23-5190	Support - Bag	2
3	32121-18	Pin - Roll	2	9	3290-250	Pin - Cotter	1
4	20-8030	Lock - Hitch	2	10	3290-377	Nut - Push On	1
5	20-8850	Hook - Hitch Arm	2	11	23-5360	Pole - Hitch	1
6	321-15	Screw	2				

 ENGINE BRIGGS & STRATTON MODEL NO. 130202-1640-01

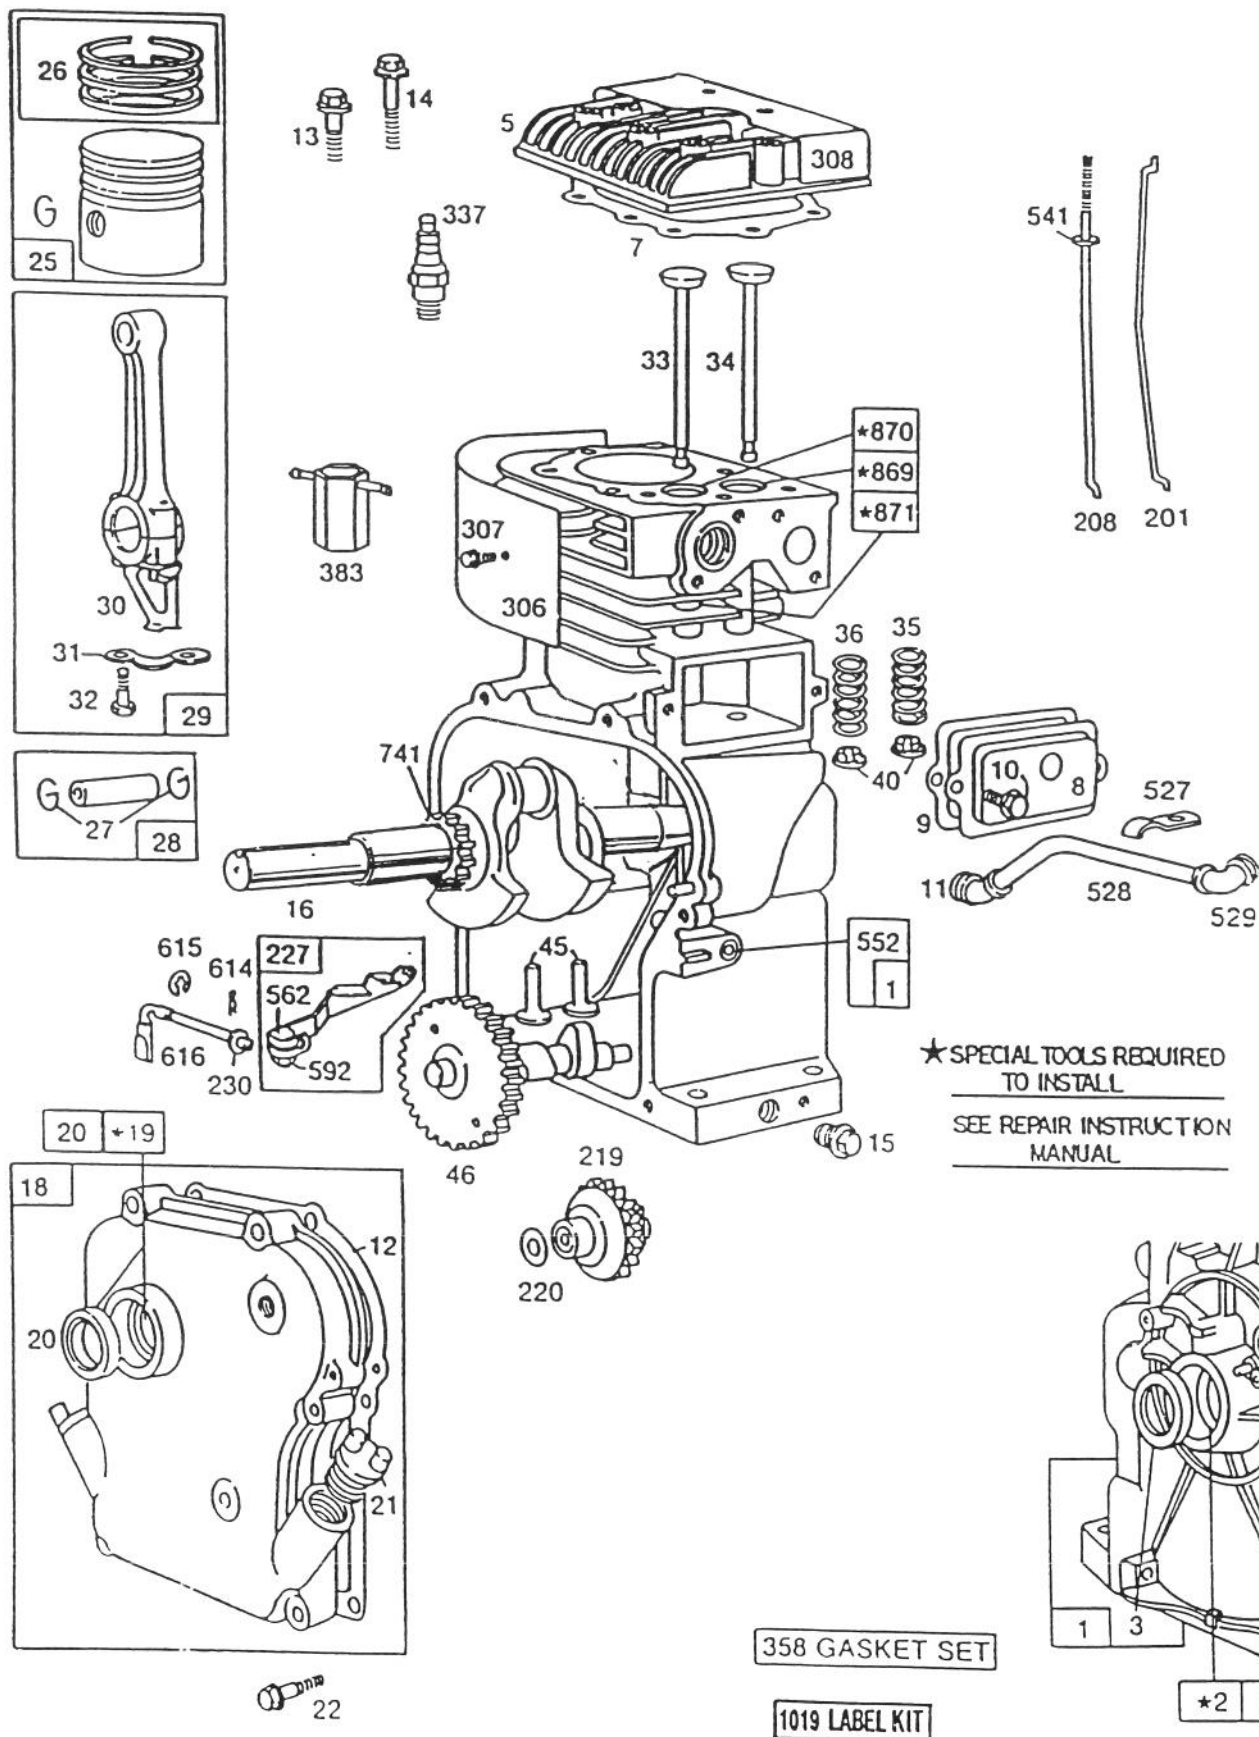


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL NO. 130202-1640-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	395990	Cylinder Assembly	1	29	299430	Rod Assembly(Std.)	1
2	297565	Bushing - Cylinder NOTE: Requires special tools for installation	1			NOTE: For .020" Undersize Crankpin Bore Order #390459	
3	299819	Seal - Oil	1	30	221890	Dipper - Connecting Rod	1
5	211542	Head - Cylinder	1	31	221876	Lock	1
7	272157	Gasket - Head	1	32	92296	Screw - Connecting Rod	1
8	294178	Breather - Valve Chamber	1	33	211119	Valve - Exhaust	1
9	*27549	Gasket - Valve Cover	1	34	261044	Valve - Intake	1
10	93394	Screw - Breather	1	35	260552	Spring - Intake Valve	1
11	66578	Grommet - Breather Tube	1	36	26478	Spring - Exhaust Valve	1
12	*270080	Gasket (.015"Std.)	1	40	93312	Retainer - Valve Spring	1
	*270125	Gasket (.015")	1	45	260642	Tappet - Valve	1
	*270126	Gasket (.009")	1	46	212733	Gear - Cam	1
13	94221	Screw - Cylinder Head	1	201	261558	Link - Governor	1
14	93369	Screw - Cylinder Head	1	208	230946	Rod - Control	1
15	91249	Plug - Pipe	1	219	391737	Gear - Governor	1
16	492088	Crankshaft	1	220	221551	Washer - Thrust	1
	230978	Pin - Crankshaft Gear	1	227	393920	Lever Assembly	1
18	298602	Cover Assembly	1	230	222450	Washer - Lever	1
19	297603	Bushing - Cover NOTE: Requires special tools for installation	1	306	221511	Shield - Cylinder	1
20	294606	Seal - Oil	1	307	93758	Screw - Shield	1
21	66768	Plug - Oil Filler	1	308	221512	Cover - Cylinder Head	1
22	93032	Screw	1	337	802592	Spark Plug	1
25	298904	Piston Assembly (Std.)	1	358	397145	Set - Gasket	1
	298905	Piston Assembly (.010 ' Oversize)	1	383	89838	Wrench - Spark Plug	1
	298906	Piston Assembly (.020" Oversize)	1	527	221514	Clamp - Breather Tube	1
	298907	Piston Assembly (.030" Oversize) PISTON RING SETS:	1	528	231328	Tube - Breather	1
26	298982	Ring Set (Std.)	1	529	67838	Grommet - Breather Tube	1
	298983	Ring Set (.010" Oversize)	1	541	22398	Washer	1
	298984	Ring Set (.020" Oversize)	1	552	231079	Bushing - Governor Crank	1
	298985	Ring Set (.030" Oversize)	1	562	92613	Bolt - Governor Lever	1
	299742	Ring Set Chrome Standard Size	1	592	231082	Nut	1
27	26026	Lock - Piston Pin	1	614	93306	Pin - Cotter	1
28	298909	Pin Assembly (Std.)	1	615	93307	Ring - Retaining	1
	298908	Pin Assembly (.005" O.S.)	1	616	231077	Crank - Governor	1
				741	261696	Gear - Timing	1
				869	211787	Seat - Intake Valve (Std.)	1
				870	211172	Seat - Exhaust Valve (Std.) NOTE: For options see Repair Manual	1
				871	262001	Guide - Exhaust Valve	1
					63709	Guide - Intake Valve NOTE: See Repair Instruction Manual	1
				1019	49110	Kit - Label	1

*Included in Gasket Set Part No.397145

 ENGINE BRIGGS & STRATTON MODEL NO. 130202-1640-01(Continued)

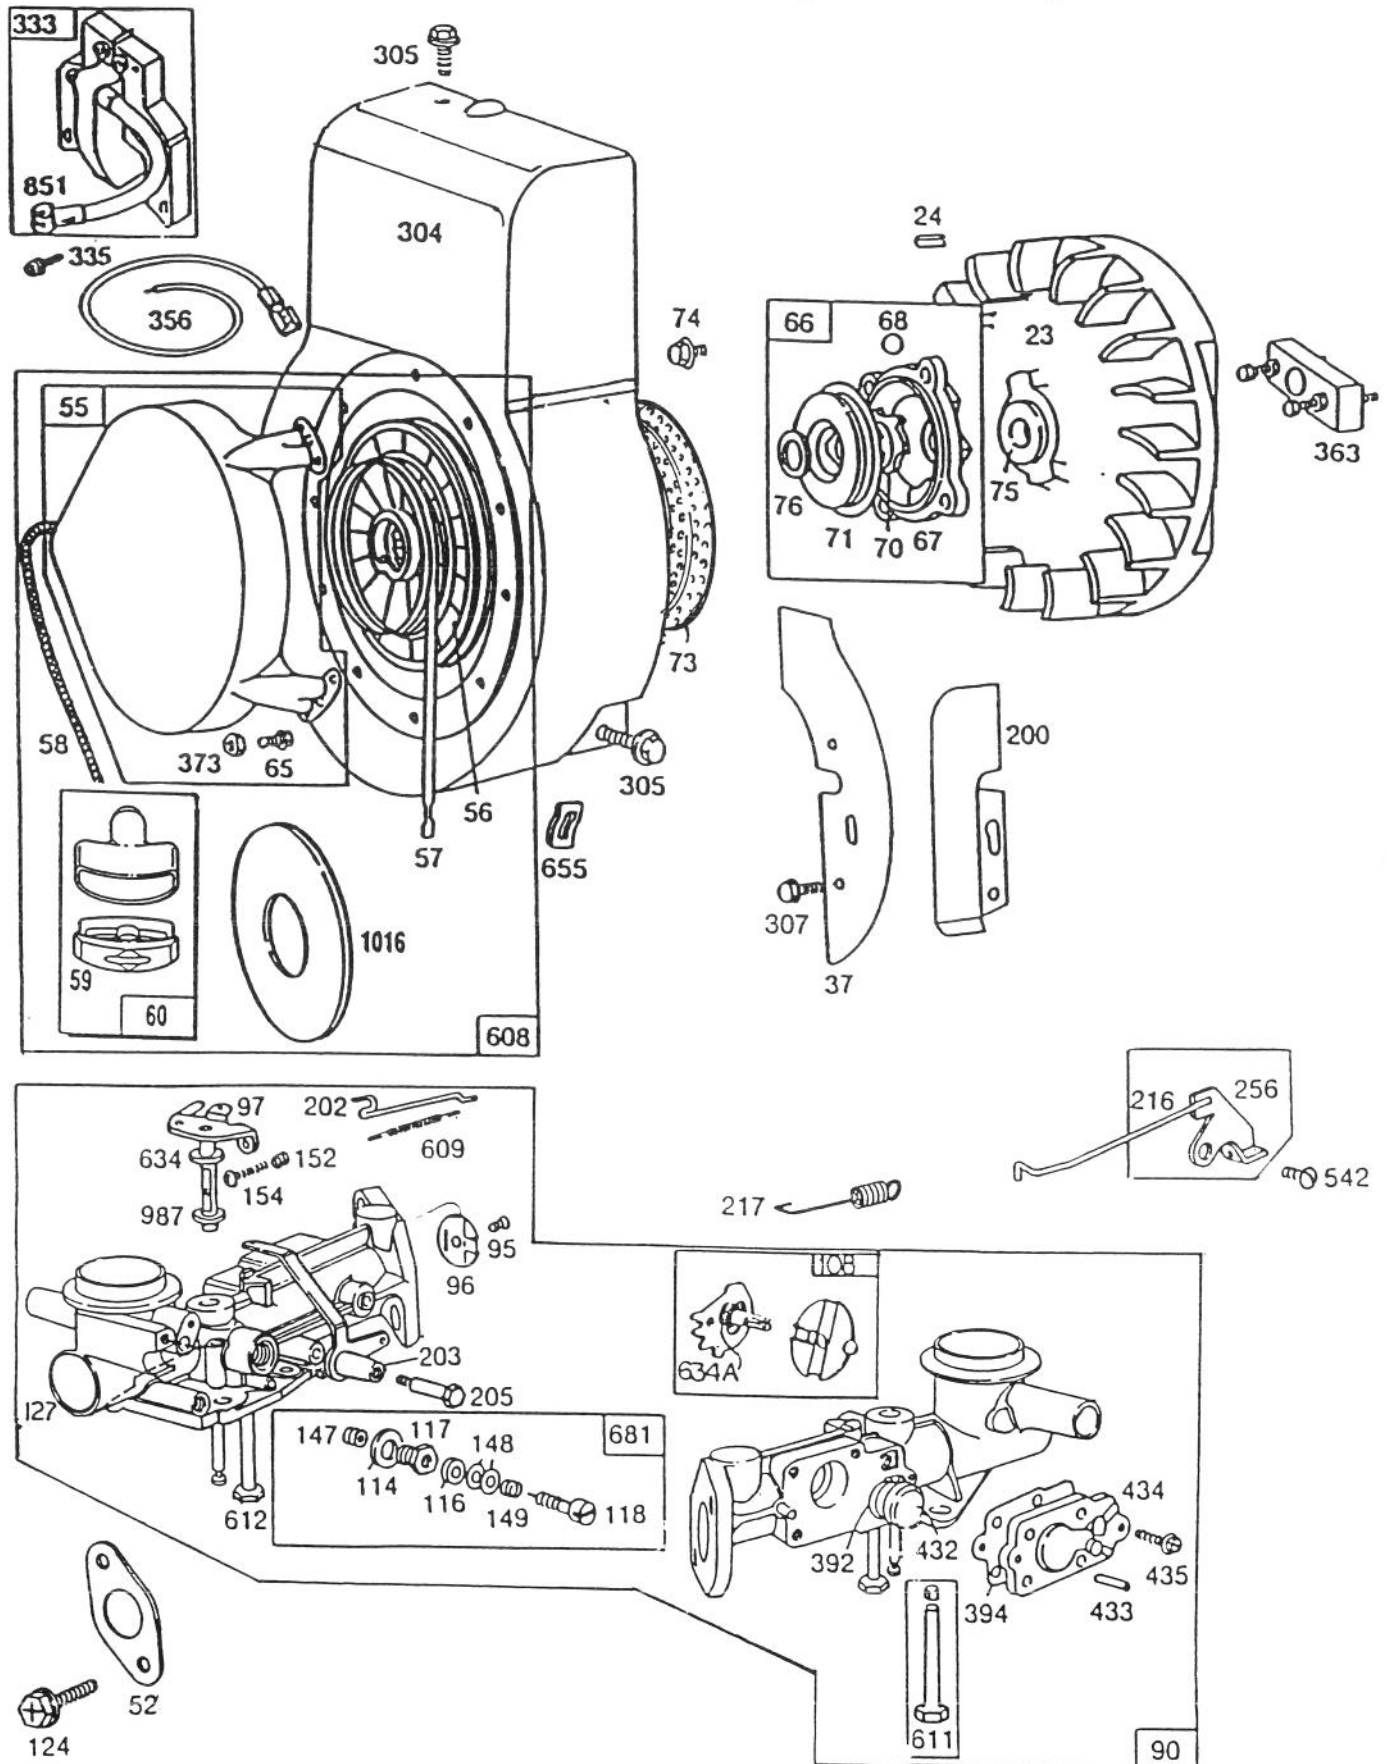






Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL NO. 130202-1640-01(Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
23	297922	Flywheel - Magneto	1	154	935275	Screw	1
24	222698	Key - Flywheel	1	200	221480	Guide - Air	1
37	222443	Guard - Flywheel	1	202	260678	Link - Throttle	1
52	*27355	Gasket - Carburetor	2	203	393919	Crank - Bell	1
55	299431	Housing - Rewind Starter	1	205	93838	Screw - Shoulder	1
56	295871	Pulley - Rewind Starter	1	216	397709	Link - Choke	1
57	490179	Spring - Rewind Starter	1	217	261951	Spring - Choke	1
58	66884	Rope - Rewind Starter	1	256	397709	Crank - Bell	1
59	490653	Pin - Starter Grip	1	304	398345	Housing - Blower	1
60	490652	Grip - Starter Rope	1	305	93158	Screw - Blower	1
65	94128	Screw	1	307	93758	Screw - Shield	1
66	399671	Clutch Assembly - Rewind	1	333	397358	Armature - Magneto	1
67	394897	Housing - Starter Clutch	1	335	93414	Screw	1
68	63770	Ball - Clutch	1	356	398808	Wire - Ground	1
70	298799	Ratchet - Rewind Starter	1	363	19069	Puller - Flywheel	1
71	394506	Washer - Clutch Retaining	1	373	92987	Nut	1
73	221923	Screen - Starter Pulley	1	392	260455	Spring - Fuel Pump	1
74	93490	Screw	1	394	270026	Diaphragm	1
75	224061	Washer - Lock	1	432	221377	Cap - Spring	1
90	397940	Carburetor Assembly	1	433	93265	Pin - Diaphragm Cover	1
95	93499	Screw - Throttle Valve	1	434	210959	Cover - Diaphragm	1
96	211203	Throttle - Carburetor	1	435	93141	Screw	1
97	299212	Shaft & Lever - Throttle	1	542	94025	Screw	1
108	397134	Valve Group - Choke	1	608	390463	Starter - Rewind	1
114	66594	Gasket - Needle Valve Nut	1	609	260694	Spring - Throttle Link	1
116	65978	Packing - Needle Valve	1	611	391813	Fuel Pipe & Clip Assembly	1
117	230590	Nut - Needle Valve	1	612	296811	Pipe - Fuel	1
118	23433	Valve - Needle	1	634	271853	Washer - Throttle	1
124	93357	Screw	1	634A	270382	Washer - Choke	1
127	22831	Plug - Welsh	1	655	222598	Anchor - Spring	1
147	230591	Seat - Needle Valve	1	681	299060	Kit - Needle Valve	1
148	22235	Washer - Needle valve	2	851	221798	Terminal - Ignition Cable	1
149	26336	Spring - Needle Valve	1	987	398970	Seal - Throttle Shaft	1
152	26057	Spring - Throttle Adjust	1	1016	490817	Spacer	1

*Included in Gasket Set Part No.397145

     ENGINE BRIGGS & STRATTON MODEL NO. 130202-1640-01

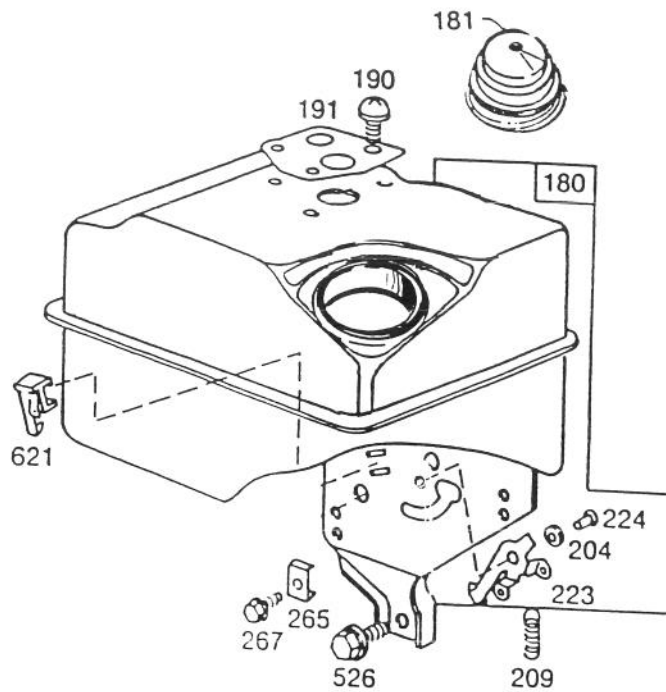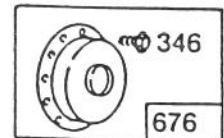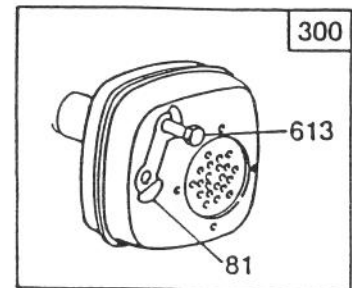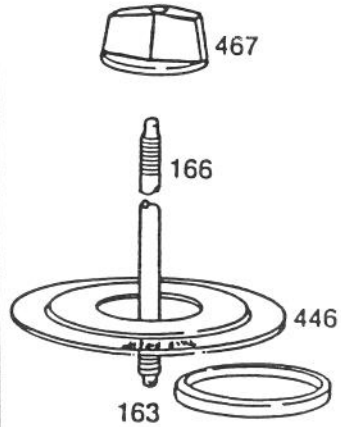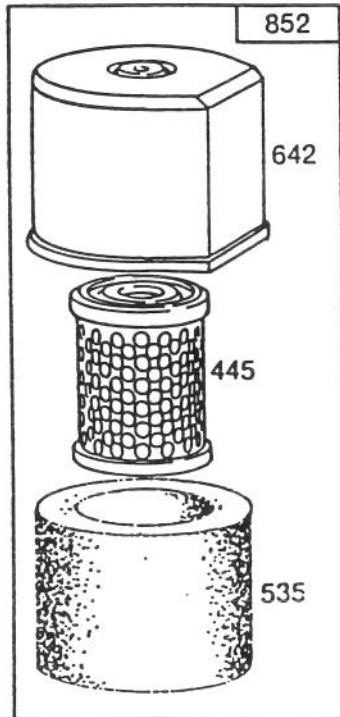

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL NO. 130202-1640-01(Continued)

Ref. No.	Part No.	Description	No. Used
81	222263	Lock - Screw	1
163	27139	Gasket - Air Cleaner	1
166	231332	Stud - air Cleaner	1
180	397137	Fuel Tank Assembly	1
181	397567	Cap - Fuel Tank	1
190	93440	Screw - Fuel Tank	1
191	*271592	Gasket - Fuel Tank	1
204	222962	Bushing - Governor Lever	1
209	260695	Spring	1
223	221517	Lever - Governor	1
224	93491	Rivet	1
265	221535	Clamp - Casing	1
267	93496	Screw	1

Ref. No.	Part No.	Description	No. Used
300	393615	Muffler	1
346	93705	Screw	1
445	396424	Cartridge - Air Cleaner	1
446	222844	Base - Air Cleaner	1
467	212706	Knob - Air Cleaner	1
526	93343	Screw - Tank	1
535	271466	Element - Air Cleaner	1
613	93935	Screw - Hex. Hd. Shoulder	1
621	297472	Switch - Stop	1
642	223306	Cover - Air Cleaner	1
676	395700	Deflector - Exhaust	1
852	396397	Air Cleaner Group	1

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]