

42in Twin Bagger

Model No. 190-180-190 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.


Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2006 All Rights Reserved 3355-989 Rev A

42 Inch Twin Bagger Assembly

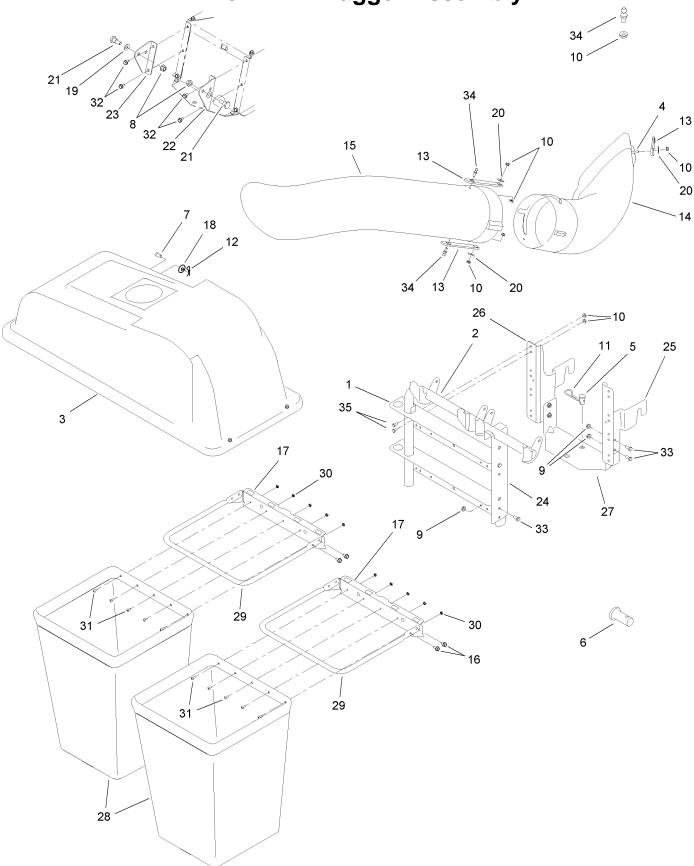

42 Inch Twin Bagger Assembly

Ref	Part No.	Qty.	Description		
1	112-0939	1	Bracket-Mounting		
2	112-0941	1	Support Tube ASM		
3	112-1200		Cover ASM (Double)		
4	112-1078		Screw-HH		
5	112-1244	1	Pin-Clevis		
6	112-1097		Pin-Clevis		
7	112-1245		Pin-Clevis		
8	112-0859		Nut-Lock, Flange		
9	112-0511		Nut-Lock, Flange		
10	112-0657		Nut-Lock, Flange		
11	112-1246		Clip-Hairpin		
12	112-0398		Pin-Click		
13	112-0996		Strap-Chute		
14	112-1146		Chute-Discharge		
15	112-1140		Tube-Chute, Upper		
16	112-1005		Screw-HWH		
17	112-0330		Bracket-Bag, Hanger		
18	112-0940		Washer-Bell		
19	112-1100		Washer-Bell		
20	112-0461		Washer-Flat		
21	112-1173		Bolt-Shoulder		
22			Bracket-Support, RH		
23	112-1202				
23	112-1203		Bracket-Support, LH Bracket-Support		
	112-1043				
25	112-1044		Bracket-Catcher, RH		
26	112-1045		Bracket-Catcher, LH		
27	112-1046		Bracket-Cross, Support		
28	112-1198		Bag-Grass		
29	112-1034		Frame-Catcher, Bag		
30	112-1105		Nut-Sems		
31	112-1076		Screw-Truss, Machine		
32	112-0472		Screw-HH, TAP		
33	112-1090		Screw-HH		
34	112-0484		Pin-Catcher, Grass		
35	112-1083	8	Screw-HH		

