




MODEL NO. 09500-00101 & Up

PARTS CATALOG

FAIRWAY AERATOR

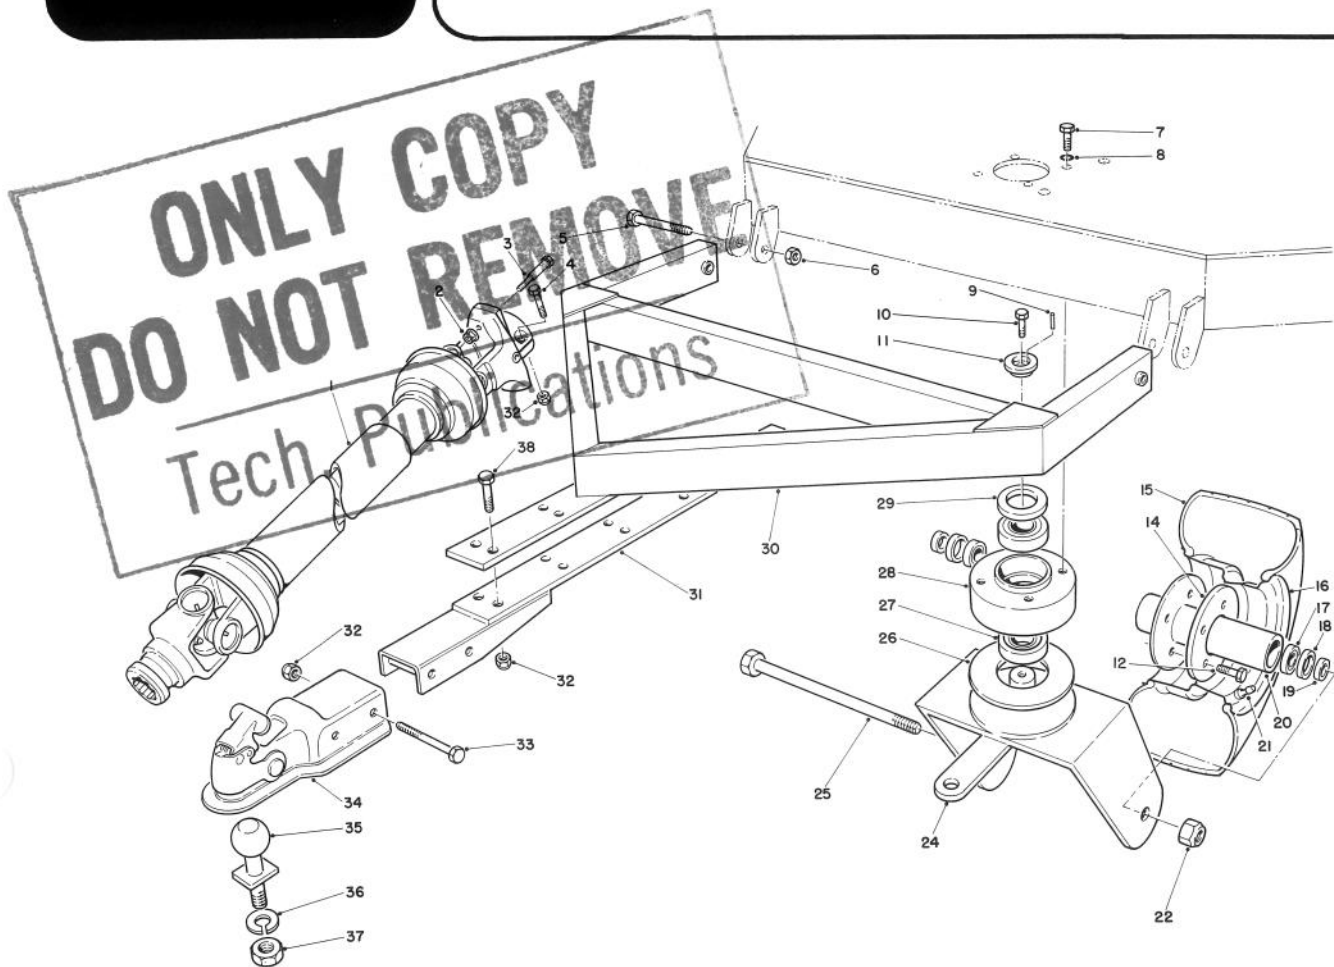


T-0895-90

TOW FRAME & FRONT WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	68-8070	Driveline Assembly - Front	1
2	32128-47	Nut - Flange	1
3	71-6970	Bolt - Shear	1
4	325-9	Screw - Cap, Hex. Hd.	1
5	327-14	Screw - Cap, Hex. Hd.	2
6	3217-11	Nut - Hex	2
7	325-5	Screw - Cap, Hex. Hd.	4
8	3253-7	Washer - Lock	4
9	32121-3	Pin - Roll	1
10	325-6	Screw - Cap, Hex. Hd.	1
11	71-6820	Cap - Retaining	1
12	3212-5	Bolt	4
14	71-6760	Support - Rim	1
15	231-119	Tire	1
16	217-60	Rim	1
17	71-6780	Bearing	2

Ref. No.	Part No.	Description	No. Used
18	71-6790	Seal - Oil	2
19	71-6750	Spacer - Outer	2
20	71-6830	Hub W.A. - Wheel	1
21	232-35	Stem - Valve	1
22	3296-70	Nut - Hex	1
24	71-6730	Caster W.A.	1
25	71-6800	Shaft - Axle	1
26	71-6810	Disc - Plastic	1
27	71-6720	Bearing	2
28	71-6770	Housing - Bearing	1
29	71-6710	Seal - Oil	1
30	71-6890	Hitch W.A.	1
31	71-7020	Adapter W.A. - Hitch	1
32	3296-23	Nut - Lock	7
33	325-17	Screw - Cap, Hex. Hd.	2
34	71-7010	Coupler - Hitch	1

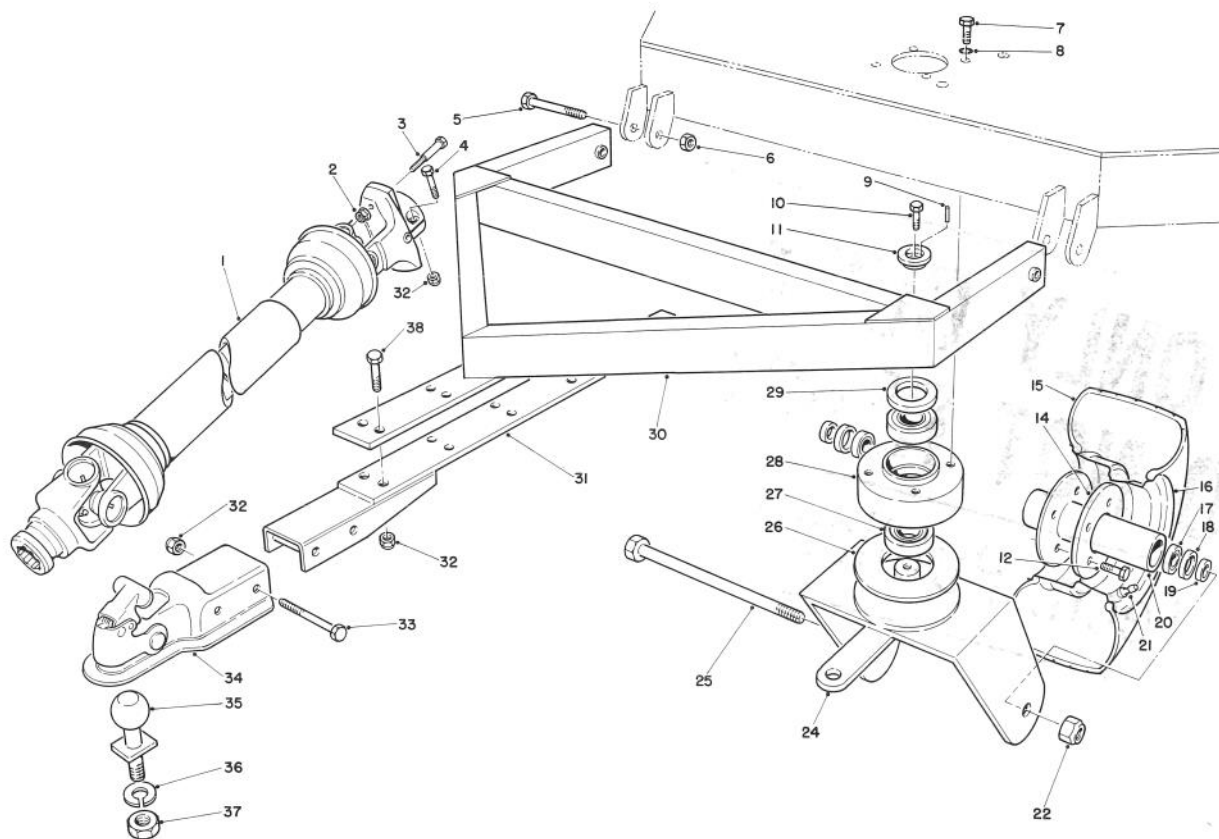


T-0895-90

TOW FRAME & FRONT WHEEL ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
35	71-7070	Ball - Hitch	1
36	3253-11	Washer - Lock	1
37	72-8010	Nut - Hex	1

Ref. No.	Part No.	Description	No. Used
38	325-8	Screw - Cap, Hex. Hd.	4
*	72-8000	Cross & Bearing Kit (Used on Ref. #1)	2

*Not Illustrated

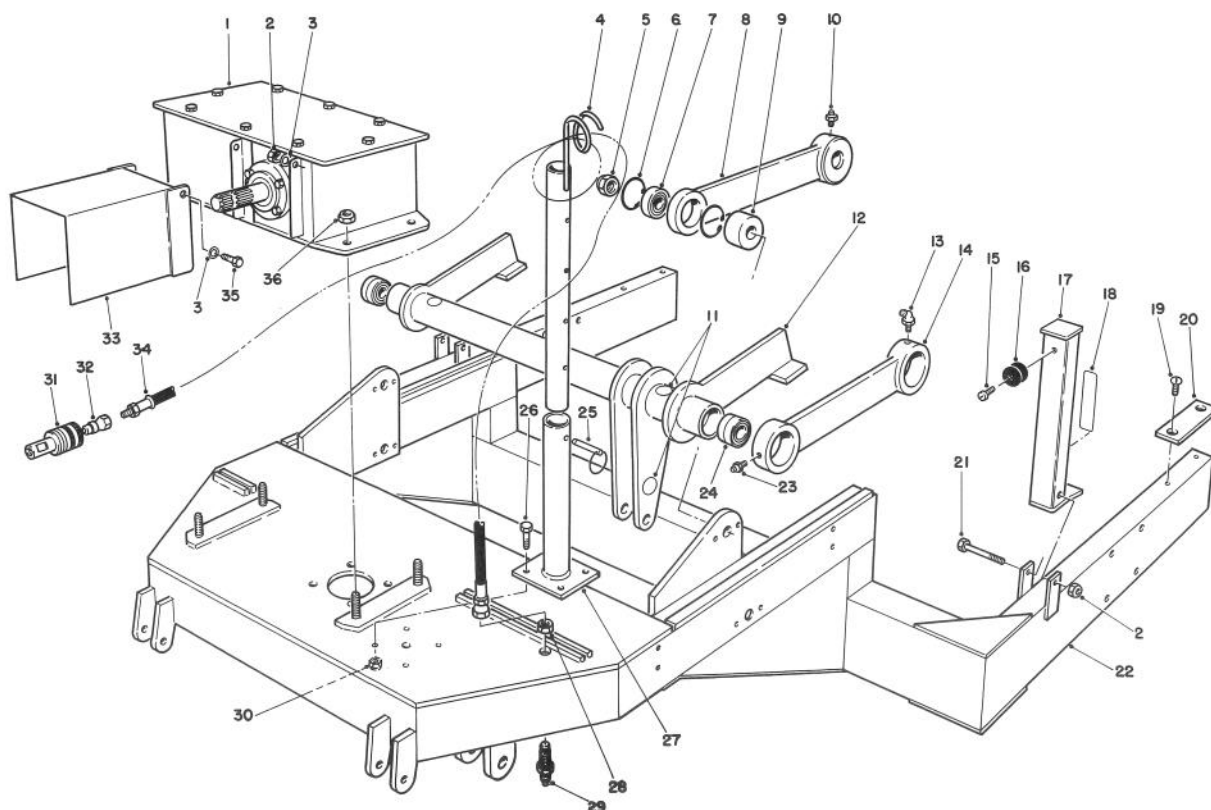


T-0898-90

CHASSIS ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
†1		Gear Case Assy. - Pickoff	1	20	71-7510	Pad - Absorber, Shock	2
2	3296-39	Nut - Lock	4	21	323-15	Screw - Cap, Hex. Hd.	2
3	3256-56	Washer - Flat	4	22	71-6880	Frame W.A. - Carrier	1
4	71-6910	Extension W.A. - Stand	1	23	302-55	Fitting - Grease	2
5	3296-70	Nut - Hex	2	24	70-9240	Bearing	4
6	32120-8	Ring - Retaining	4	25	21-9110	Pin - Ball	1
7	70-9240	Bearing	2	26	322-5	Screw - Cap, Hex. Hd.	4
8	71-6590	Lift Arm - Top	2	27	71-6950	Stand W.A. - Hose	1
9	72-7970	Spacer - Lift Arm, Top	2	†28		Nut - Bulkhead	1
10	302-55	Fitting - Grease	3	29	354-33	Fitting Assembly - Bulkhead (Incl. Ref. #28)	1
11	58-6520	Decal - Grease	3	30	3296-29	Nut - Lock	4
12	71-6510	Lift Unit W.A.	1	31		Body - Female	1
13	302-61	Fitting - Grease	2	32		Tip - Male	1
14	71-6600	Lift Arm - Bottom, LH	1	33	71-7540	Shield - Drive Line	1
* 15	74-3110	Lift Arm - Bottom, RH	1	34	71-6980	Hose - Hydraulic	1
16	47-2830	Screw	2	35	323-6	Screw - Cap, Hex. Hd.	2
17	71-7530	Grommet	2	36	3296-23	Nut - Lock	4
18	76-2920	Stand - Transport	2	*	71-7060	Coupler - Quick (Incl. Ref. #31 & 32)	1
19	67-5370	Decal - Caution	2				
	32108-20	Screw - Countersink	4				

*Not Illustrated

†Not Serviced Separately

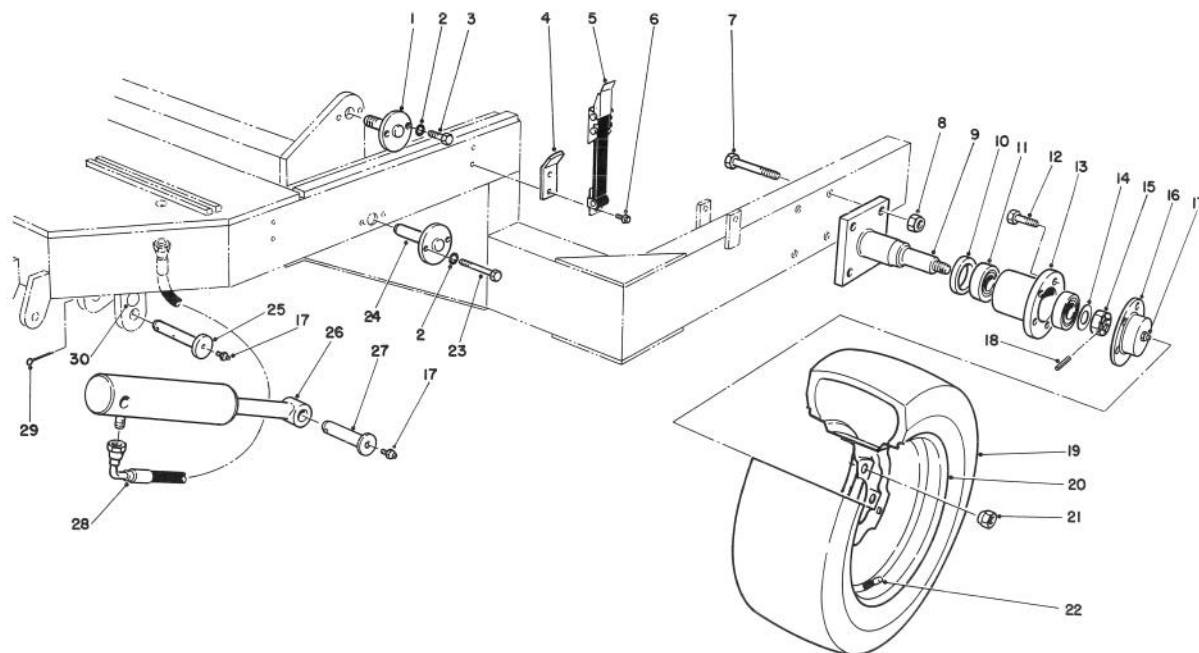


REAR WHEEL ASSEMBLY

T-0897-90

Ref. No.	Part No.	Description	No. Used
1	71-6620	Pin - Location, Top	2
2	3253-21	Washer - Lock	4
3	323-6	Screw - Cap, Hex. Hd.	4
4	71-6900	Guide - Cover, Front	4
5	71-6990	Latch - Draw, Flexible	4
6	3234-13	Screw - Flange Hd.	8
7	327-14	Screw - Cap, Hex. Hd.	8
8	3296-61	Nut - Lock	8
9	71-6860	Shaft - Axle	2
10	71-6710	Seal - Oil	2
11	71-6630	Bearing	4
12	3212-6	Screw - Cap, Hex. Hd.	10
13	71-6850	Housing - Bearing	2
14	70-9520	Washer - Flat	2
15	70-9460	Nut - Castle	2

Ref. No.	Part No.	Description	No. Used
16	71-6840	Cap - Hub	2
17	302-55	Fitting - Grease	2
18	32121-34	Pin - Roll	2
19	231-101	Tire	2
20	217-117	Rim	2
21	23-7270	Nut - Wheel	10
22	232-27	Stem - Valve	2
23	323-14	Screw - Cap, Hex. Hd.	4
24	71-6520	Pin - Location, Bottom	2
25	71-6540	Pin - Mount, Front	1
26	71-6560	Cylinder - Hydraulic	1
27	71-6550	Pin - Mount, Rear	1
28	71-7490	Hose Assembly	1
29	3272-23	Pin - Cotter	2
30	58-6520	Decal - Grease	1

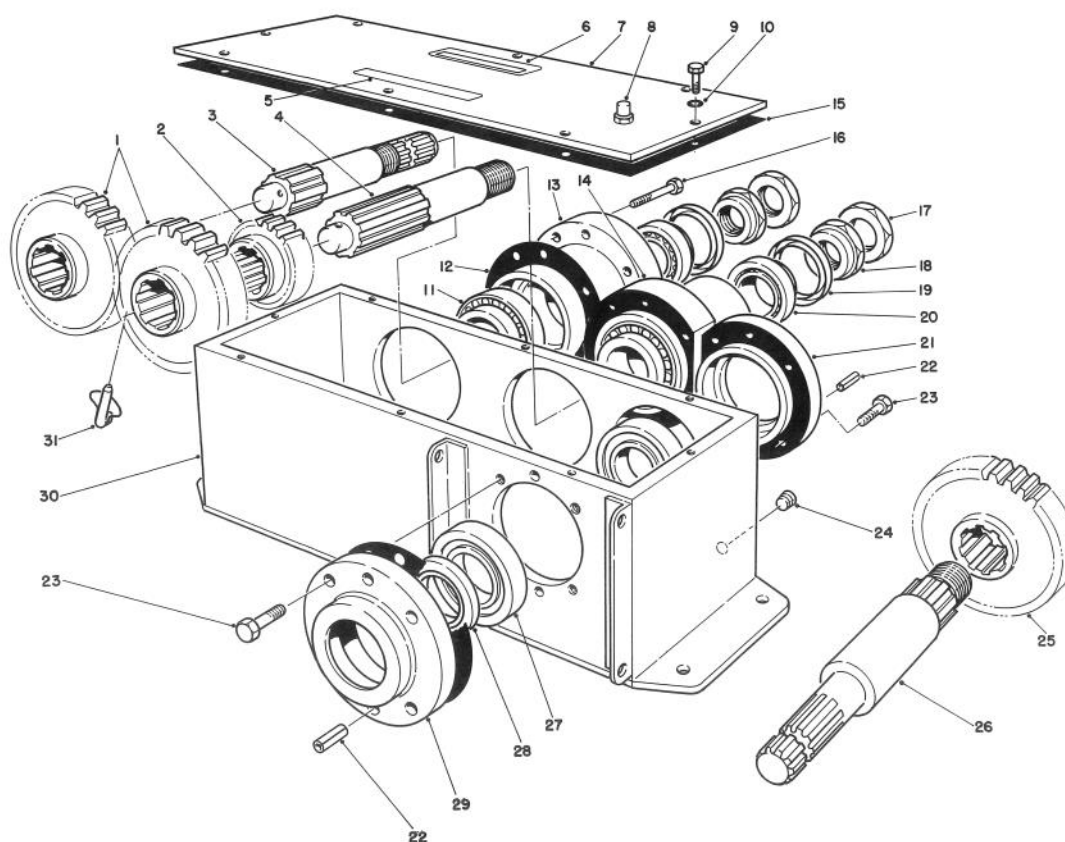


T-0893-90

FRONT GEAR BOX ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-7300	Gear - 30 Tooth	1
*	71-7310	Gear - 31 Tooth	1
*	71-7320	Gear - 32 Tooth	1
*	71-7330	Gear - 33 Tooth	1
*	71-7340	Gear - 34 Tooth	1
*	71-7350	Gear - 35 Tooth	2
*	71-7360	Gear - 36 Tooth	1
*	71-7370	Gear - 37 Tooth	1
*	71-7380	Gear - 38 Tooth	1
*	71-7390	Gear - 39 Tooth	1
*	71-7400	Gear - 40 Tooth	1
2	71-7200	Gear - 20 Tooth	1
3	71-6570	Shaft - Corer	1
4	70-9690	Shaft - Intermediate	1
5	65-3090	Decal	1
6	67-5360	Decal - Warning	1
7	70-9670	Cover - Gearbox	1
8	72-3800	Filter/Breather	1
9	322-5	Screw - Cap, Hex. Hd.	8
10	3253-4	Washer - Lock	8
11	71-6700	Bearing	2

Ref. No.	Part No.	Description	No. Used
12	71-7160	Gasket	4
13	71-6580	Housing - Bearing	1
14	71-6500	Housing - Bearing	1
15	71-6610	Gasket - Cover	1
16	323-8	Screw - Cap, Hex. Hd.	8
17	70-9720	Nut - Jam	2
18	70-9710	Nut - Hex	2
19	71-6490	Seal - Oil	2
20	71-6690	Bearing	2
21	70-9640	Cap - Bearing	1
22	32121-41	Pin - Roll	8
23	323-6	Screw - Cap, Hex. Hd.	8
24	285-21	Plug - Pipe	1
25	71-7350	Gear - 35 Tooth	1
26	70-9700	Shaft - Tractor	1
27	72-3820	Bearing	2
28	70-9680	Seal - Oil	1
29	70-9650	Cap - Bearing	1
30	70-9660	Gear Case W.A.	1
31	283-72	Pin - Lynch	2

*Not Illustrated

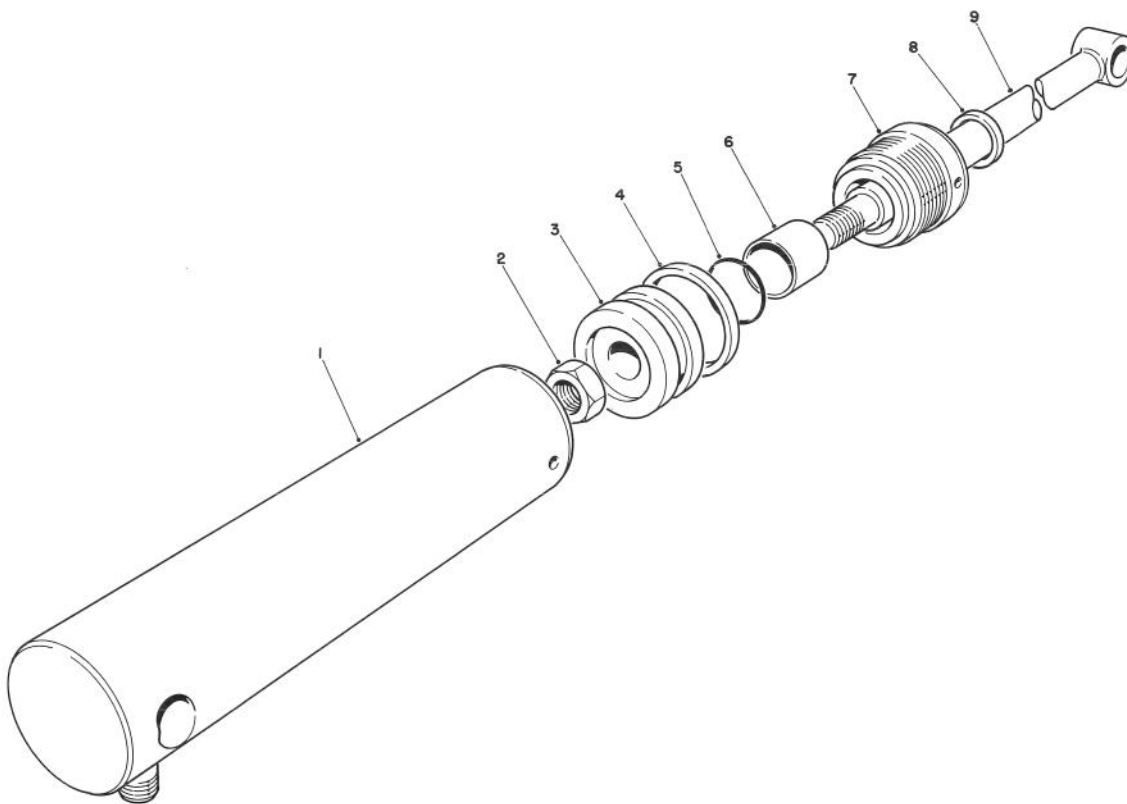


CYLINDER ASSEMBLY 71-6560

T-0899-90

Ref. No.	Part No.	Description	No. Used
†1		Barrel	1
†2		Nut	1
†3		Piston	1
†4		Seal - Piston	1
†5		O-Ring	1
†6		Bushing - Bronze	1

Ref. No.	Part No.	Description	No. Used
†7		Cap - End	1
†8		Seal - Wiper	1
†9		Rod	1
*	71-6560	Cylinder (Complete)	1
*	71-6640	Seal Kit (Incl. Ref. #4-6 & 8)	1

*Not Illustrated
†Not Serviced Separately

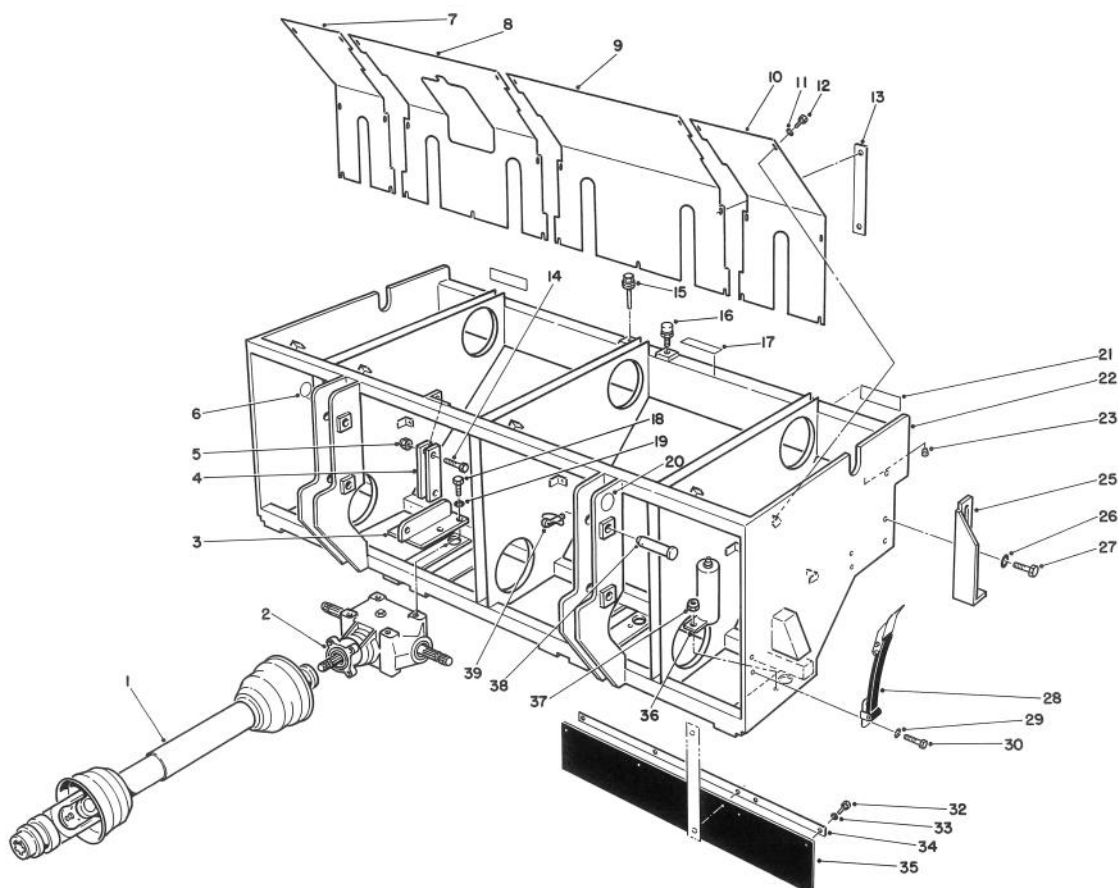


T-1137-90

CORER & SHIELD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	68-8060	Drive Line Assy. - Gearbox	1	22	77-3030	Head - Coring, W.A.	1
2	77-3050	Gearbox - Bevel	1	23	285-21	Plug - Pipe	1
3	76-3760	Plate - Mounting, Gearbox	1	25	71-7470	Adjuster - L.H.	1
4	71-7150	Plate - Upright, Gearbox	2	*	71-7480	Adjuster - R. H.	1
5	3296-23	Nut - Lock	2	26	3256-69	Washer - Flat	4
6	58-6520	Decal - Grease	1	27	327-4	Screw - Cap, Hex. Hd.	4
7	77-3070	Screen - Outer, R.H.	1	28	71-6990	Latch - Draw, Flexible (Complete)	4
8	77-3090	Screen - Inner, R. H.	1	29	3253-3	Washer - Lock	8
9	77-3080	Screen - Inner, L. H.	1	30	321-2	Screw - Cap, Hex. Hd.	8
10	77-3060	Screen - Outer, L.H.	1	32	322-5	Screw - Cap, Hex. Hd.	10
11	3253-4	Washer - Lock	16	33	3256-2	Washer - Flat	10
12	322-3	Screw - Cap, Hex. Hd.	16	34	71-7460	Strap - Securing, Curtain	2
13	72-7980	Strap	6	35	71-7450	Curtain - Lower	2
14	325-8	Screw - Cap, Hex. Hd.	2	36	71-7180	Cover - Dust	6
15	72-7960	Indicator - Oil Level	1	37	3296-39	Nut - Lock	6
16	72-3800	Filter/Breather	1	38	71-6530	Pin - Mount, Lift Arm	4
17	67-5360	Decal - Warning, Covers	1	39	283-71	Pin - Lynch	4
18	48-7830	Screw, Cap, Hex. Hd.	4	*	72-7990	Cross & Bearing Kit (Used on Ref. #1)	2
19	3253-7	Washer - Lock	4				
20	58-6520	Decal - Grease	1				
21	59-9930	Decal - Danger	2				

*Not Illustrated

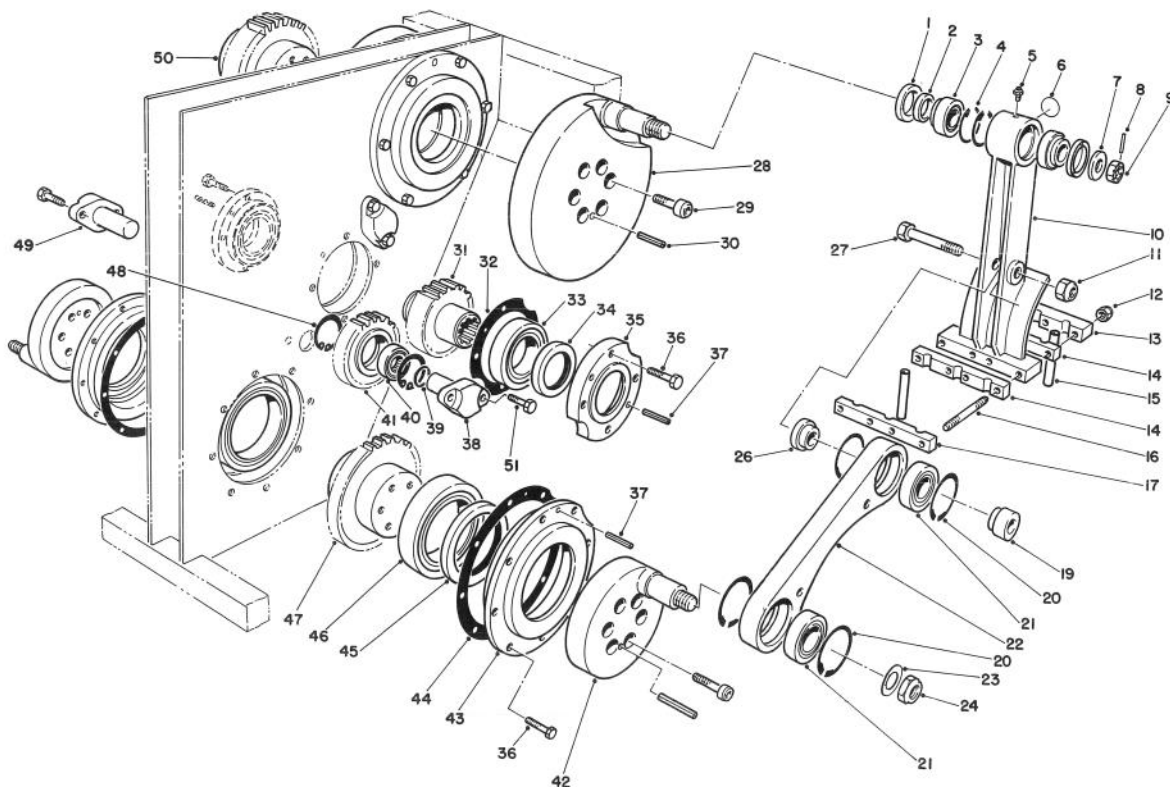


CORER GEAR CASE & STOMPER ARM ASSEMBLY

T-1138-90

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	72-3840	Seal - Oil	12	14	70-9400	Block - Inner, 6-Tine	12
2	70-9580	Spacer - Inner	6	*	70-9270	Block - Inner, 2-Tine	6
3	72-3810	Bearing	12	15	62-4600	Tine - 3/4"	36
4	32151-76	Ring - Retaining	12	*	71-0940	Tine - 7/8"	12
5	302-55	Fitting - Grease	6	16	71-7120	Stud 1/2 x 150mm	24
6	58-6520	Decal - Grease	6	*	71-7110	Stud 1/2 x 130mm	24
7	70-9570	Spacer - Outer	6	17	70-9390	Block - Bridging, 6-Tine	6
8	32121-34	Pin - Roll	6	*	70-9410	Block - Bridging, 2-Tine	6
9	70-9460	Nut - Castle	6	19	72-8060	Bushing - Spacer, Long	6
10	70-9420	Arm - Tine	6	20	32151-88	Ring - Retaining	24
11	3296-70	Nut - Lock	6	21	72-8070	Bearing	12
12	3296-23	Nut - Lock	24	22	77-3040	Rod - Connecting	6
13	70-9380	Block - Outer, 6-Tine	6	23	3256-62	Washer - Flat	6
*	70-9260	Block - Outer, 2-Tine	6	24	3296-70	Nut - Lock	6

*Not Illustrated

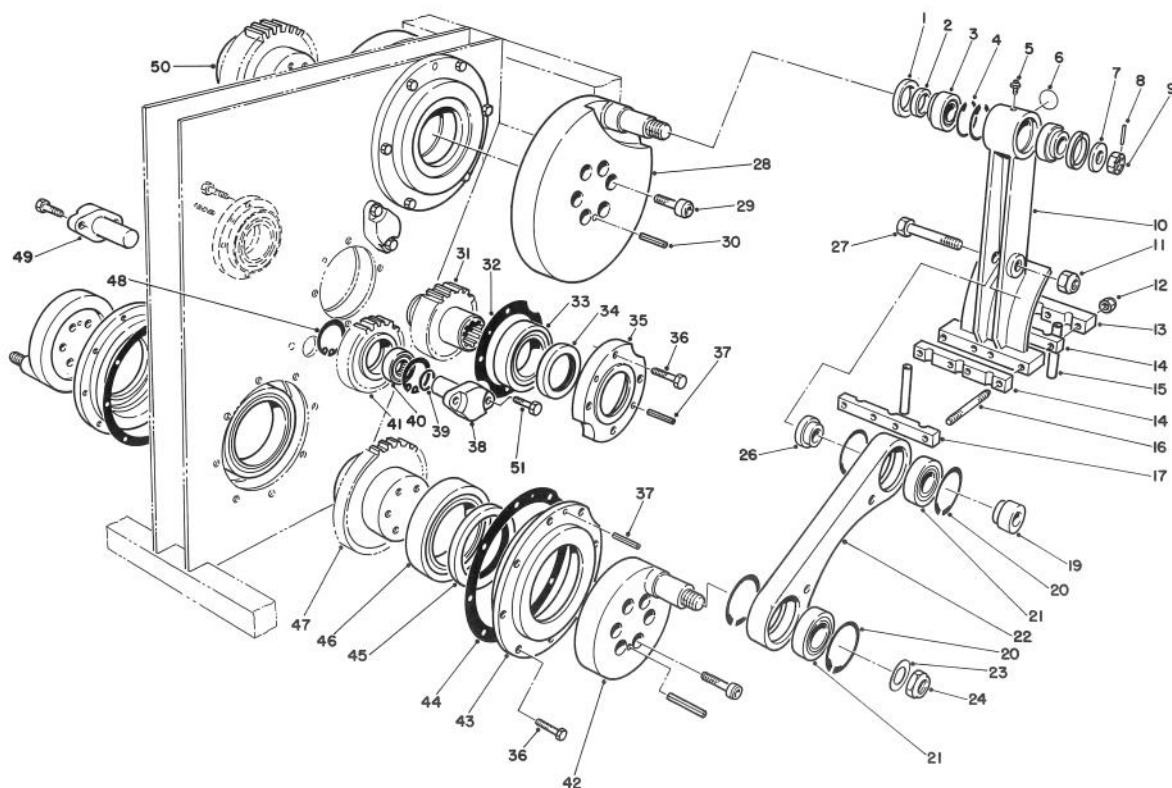


T-1138-90

CORER GEAR CASE & STOMPER ARM ASSEMBLY (Cont.)

Ref. No.	Part No.	Description	No. Used
26	72-8090	Bushing - Spacer, Short	6
27	70-9550	Bolt - Connecting	6
28	76-3780	Crank - Top	6
29	3274-4	Screw - Cap, Hex. Socket	72
30	71-7100	Pin - Roll	12
31	76-3630	Gear - Shaft, Drive	3
32	77-4510	Gasket	6
33	70-9220	Bearing	6
34	70-9350	Seal - Oil	6
35	76-3690	Flange - Shaft, Drive	6
36	3212-4	Screw - Cap, Hex. Hd.	132
37	32121-41	Pin - Roll	36
38	76-3680	Cap - End	6

Ref. No.	Part No.	Description	No. Used
39	237-168	O-Ring	12
40	77-4560	Bearing	6
41	76-3640	Gear - Idler	6
42	72-8100	Crank - Bottom	6
43	76-3700	Flange - Crankshaft	12
44	70-9470	Gasket	12
45	70-9340	Seal - Oil	12
46	70-9330	Bearing	12
47	76-3660	Crankshaft - Bottom	3
48	32120-62	Ring - Retaining	12
49	76-3670	Shaft - Idler	6
50	76-3650	Crankshaft - Top	3
51	3212-2	Screw - Cap, Hex. Hd.	24

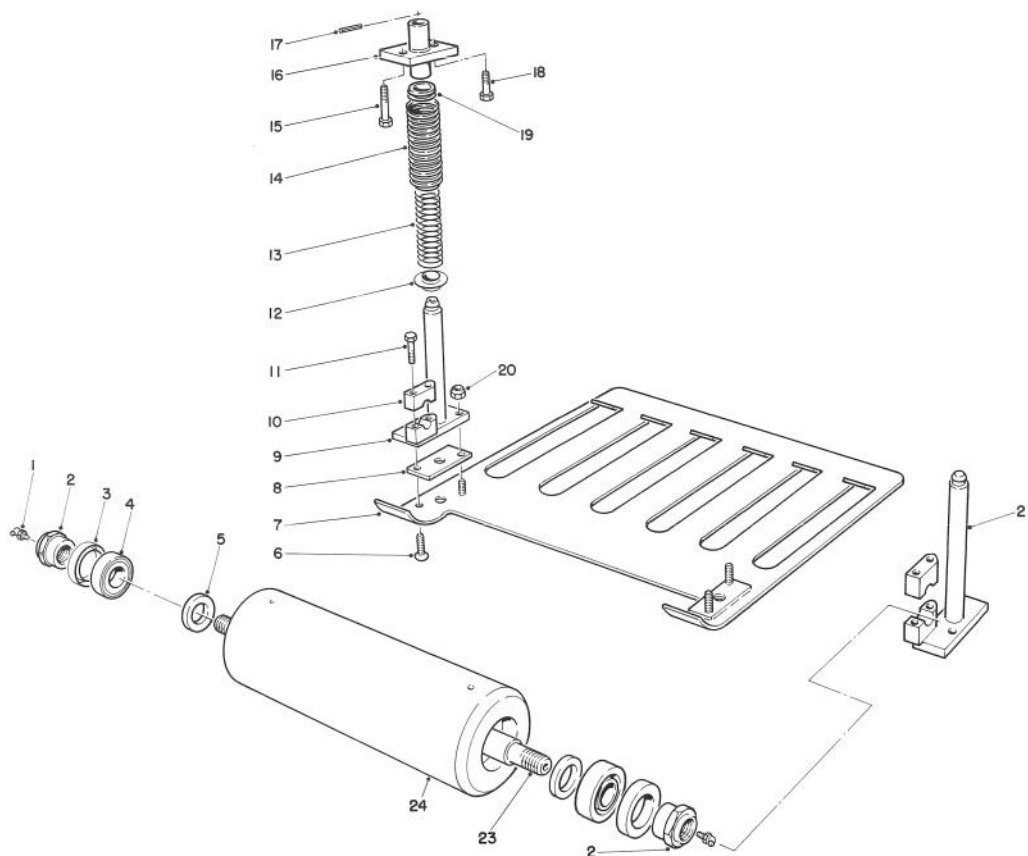


T-0896-90

ROLLER & FINGER PLATE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	302-61	Fitting - Grease	6
2	71-7290	Nut - Thin	6
3	71-6790	Seal - Oil	6
4	71-6780	Bearing	6
5	72-3830	Seal - Oil	6
6	3289-17	Screw - C'sink, Flat Hd.	12
7	70-9440	Plate - 6 Tine	3
*	70-9430	Plate - 2 Tine	3
8	71-7270	Plate - Backing	6
9	71-7220	Shaft - R.H.	3
10	72-8020	Block - Clamp, Top	6
11	3212-6	Screw - Cap, Hex. Hd.	12
12	71-7240	Ring - Clamp, Bottom	6

Ref. No.	Part No.	Description	No. Used
13	70-9450	Spring - Compression	6
14	70-9630	Shield - Rubber	6
15	323-35	Screw - Cap, Hex. Hd.	6
16	71-7130	Bushing	6
17	32121-15	Pin - Roll	6
18	323-7	Screw - Cap, Hex. Hd.	6
19	71-7230	Ring - Clamp, Top	6
20	3296-39	Nut -Lock	12
21	71-7210	Shaft - L.H.	3
23	71-7280	Shaft	3
24	71-7250	Roller Assembly (Incl. Ref. #1-5, 22 & 23)	3

*Not Illustrated

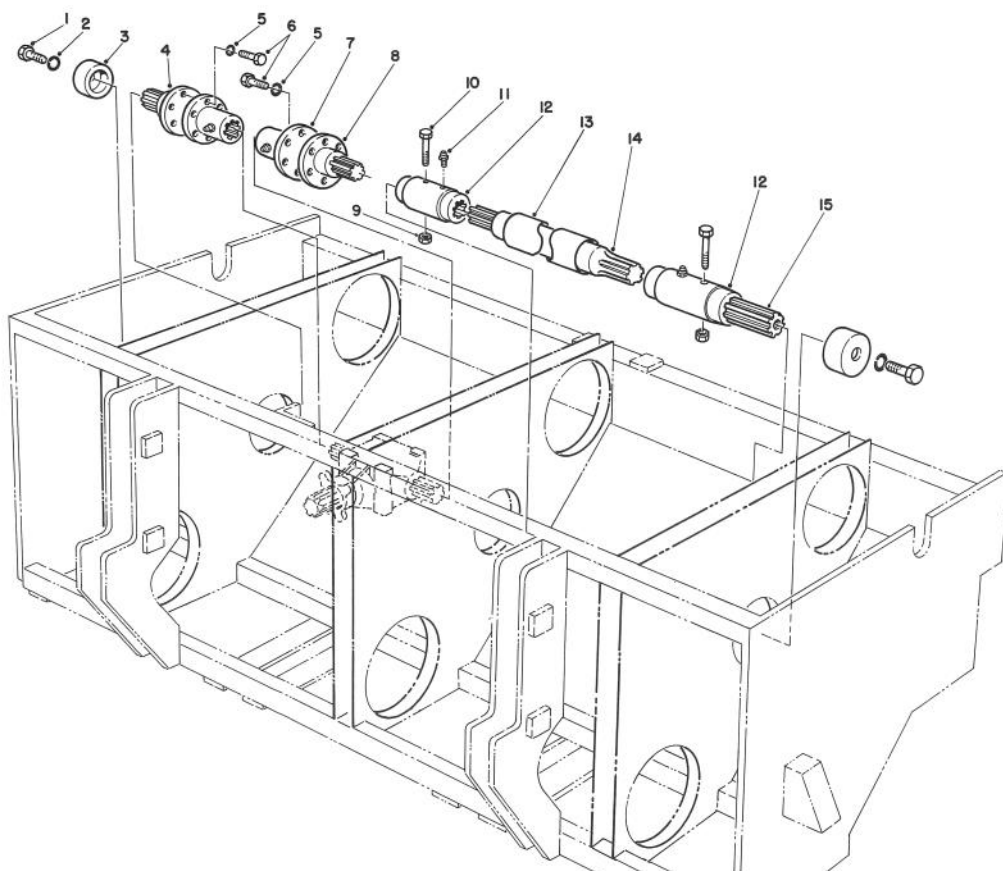


T-1139-90

DRIVE LINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	325-5	Screw - Cap, Hex. Hd.	2
2	48-8070	Washer - Lock	2
3	76-3750	Flange	2
4	76-3730	Shaft - Splined	1
5	3253-7	Washer - Lock	12
6	3274-89	Screw - Cap, Hex. Socket	12
7	76-3710	Coupling - Flange	2
8	76-3720	Shaft - Splined	1

Ref. No.	Part No.	Description	No. Used
9	3296-29	Nut - Lock	2
10	322-12	Screw - Cap, Hex. Hd.	2
11	302-55	Fitting - Grease	4
12	76-3740	Coupling - Splined	2
13	70-9620	Tube - Shield	1
14	70-9300	Shaft - Splined	1
15	70-9310	Shaft - Splined	1

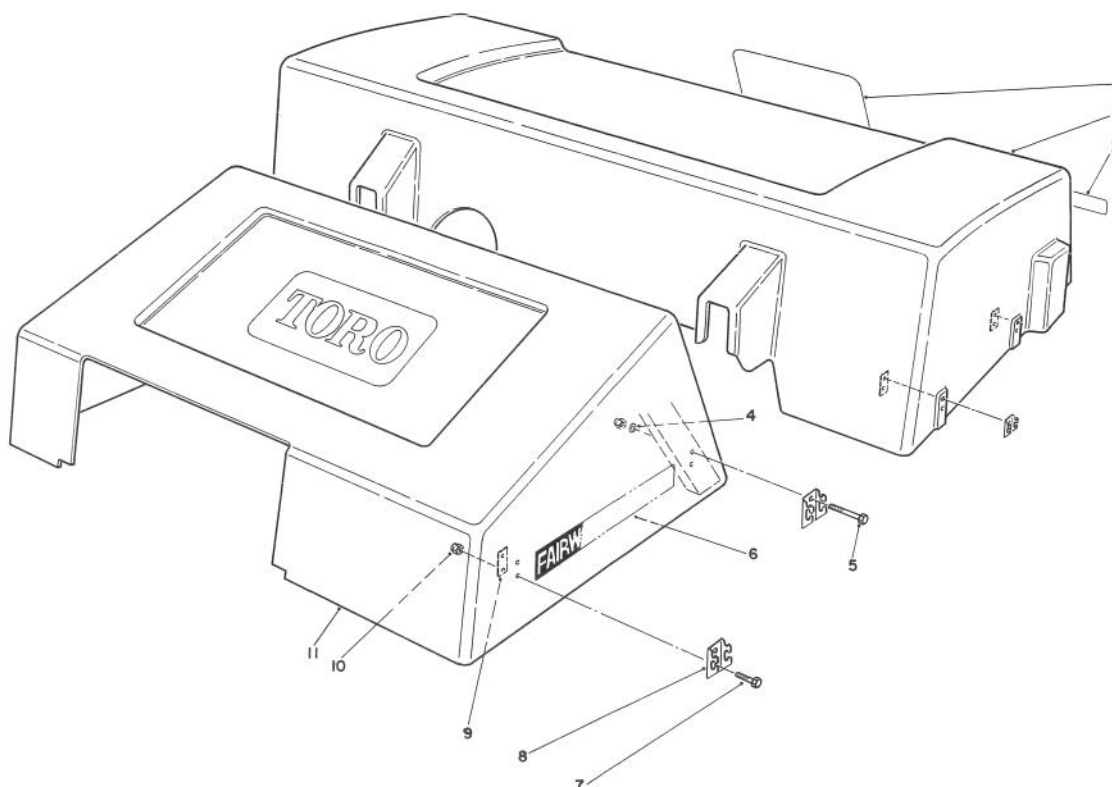


T-0900-90

AERATOR & CORING HEAD COVERS

Ref. No.	Part No.	Description	No. Used
1	67-7310	Decal - Toro	2
2	70-9190	Cover - Coring Head	1
3	59-9930	Decal - Danger	2
4	3256-22	Washer - Flat	4
5	321-9	Screw - Cap, Hex. Hd.	4
6	67-5330	Decal - Aerator, Fairway	2

Ref. No.	Part No.	Description	No. Used
7	321-4	Screw - Cap, Hex. Hd.	12
8	71-6990	Latch (Complete) (Keeper Shown Illustrated)	4
9	71-6940	Plate - Backing	6
10	3296-42	Nut - Lock	16
11	70-9200	Cover - Front, Aerator	1

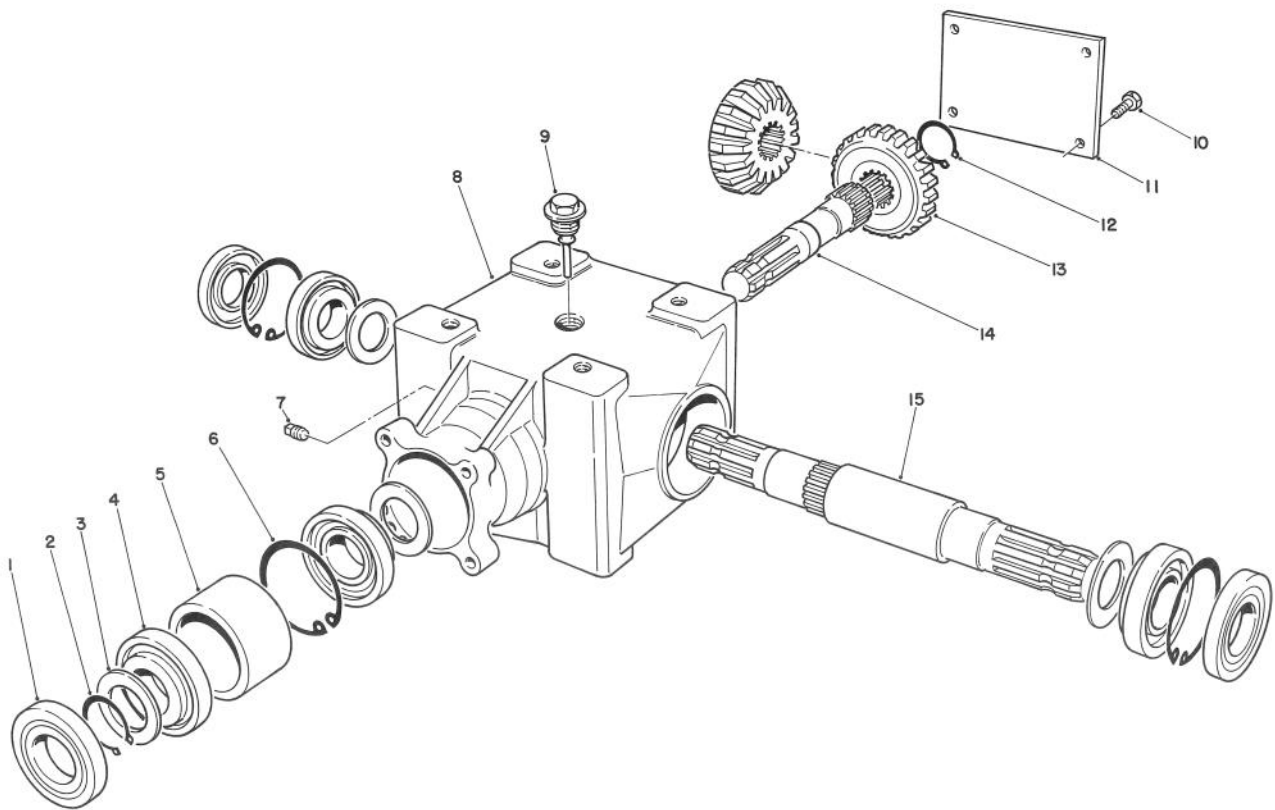

T-1127-90

GEAR BOX 77-3050

Ref. No.	Part No.	Description	No. Used
1	74-3200	Seal - Oil	3
2	74-2960	Ring - Retaining	1
†3	74-2990	Shim Kit	4
4	71-6630	Bearing	4
5	77-4430	Spacer	1
6	32120-31	Ring - Snap	3
7	281-1	Plug - Pipe	1
8		Case	1

Ref. No.	Part No.	Description	No. Used
9	77-4490	Plug - Oil Level/Filler	1
10	77-4500	Bolt - Hex. Socket Hd.	4
11	77-4470	Cover	1
12	77-4460	Ring - Retaining	1
13	77-4450	Gear - 18 Tooth	2
14	77-4440	Shaft - Input	1
15	77-4480	Shaft	1

†Includes three (3) shims of various thickness to properly adjust gear backlash & shaft end play.
Required when replacing items #4, 5, & 13-15. Instruction sheet included.

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]