

Greensmaster 3150 and 3250-D

April 18, 2006

Model/Serial Range:	Model Number:	Serial Numbers:
Greensmaster 3150	04357	210000001-250999999
Greensmaster 3250-D	04383	200000001-250999999

Subject: Joystick Micro Switches may stick due to debris entering the switch.

The Joystick Micro Switch may bind and stick due to the entry of contamination such as Topdressing material.

When replacing the Micro Switch (111332) used in the Joystick assembly on these units, you can install the Switch Assembly (108-6496) instead. This switch comes with a protective boot that will shield the switch from contamination.

If you have any additional questions regarding this bulletin, please contact your local Toro Commercial Distributor.

Ref: 16-03 Copyright, 2006. The Toro Company