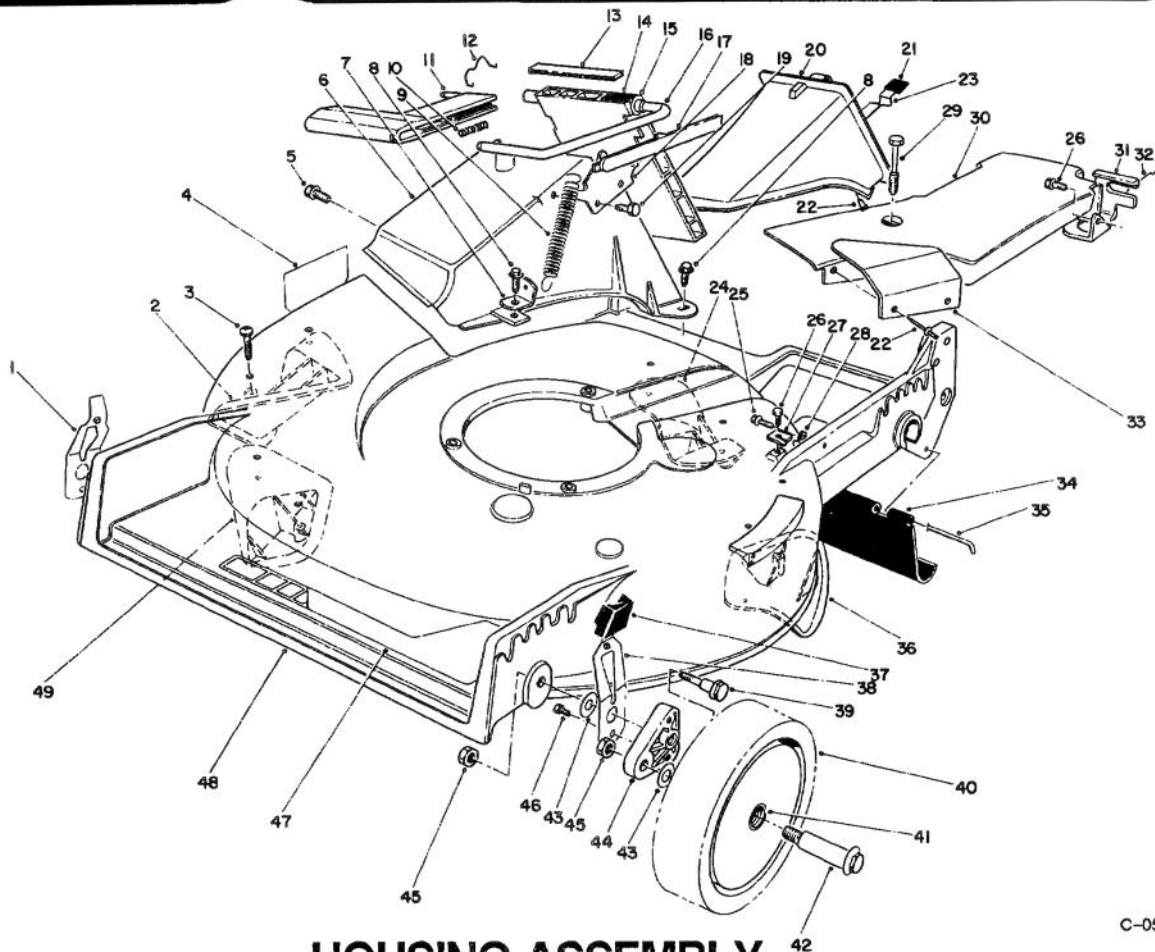


TORO


MODEL NO. 20666-0000001 & UP

**PARTS
CATALOG****21" S.P. REAR BAGGER**

C-0566

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	71-0560	Spring Arm Ass'y - R.H.	1	17	49-4170	Cover - Handle	1
2	76-2140	Plate - Kicker Rt. Rear	1	18	76-4570	Plate - Latch	1
3	32104-130	Screw - Pan Hd.	8	19	46-8090	Screw - Hex Washer Hd. Self Tapping	2
4	39-5770	Decal - Danger	1	20	76-2110	Plug	1
5	46-6810	Screw - Hex Washer Hd. Thread Forming	1	21	76-4650	Grip - Latch	1
6	46-3501	Tunnel - Discharge	1	22	3295-35	Rivet	3
7	76-4560	Bracket - Spring	1	23	76-4640	Latch - Plug	1
8	46-6811	Screw w/Washer	3	24	76-2150	Plate - Kicker Left Rear	1
9	76-4660	Spring - Door	1	25	12-5450	Screw	1
10	46-7080	Spring - Compression	1	26	32144-70	Screw - Hex Washer Hd. Thread Forming	2
11	46-3520	Handle - Door	1	27	62-3720	Clamp - Cable	1
12	47-5840	Retainer - Door	1	28	2412-83	R-Clamp	1
13	46-6821	Cover - Door	1	29	37-7260	Capscrew - Special	2
14	46-3511	Door - Discharge	1	30	52-7406	Belt Cover Assembly (Incl. Ref. #22 & 33)	1
15	23-0880	Bushing	1				
16	76-4580	Rod - Door	1				

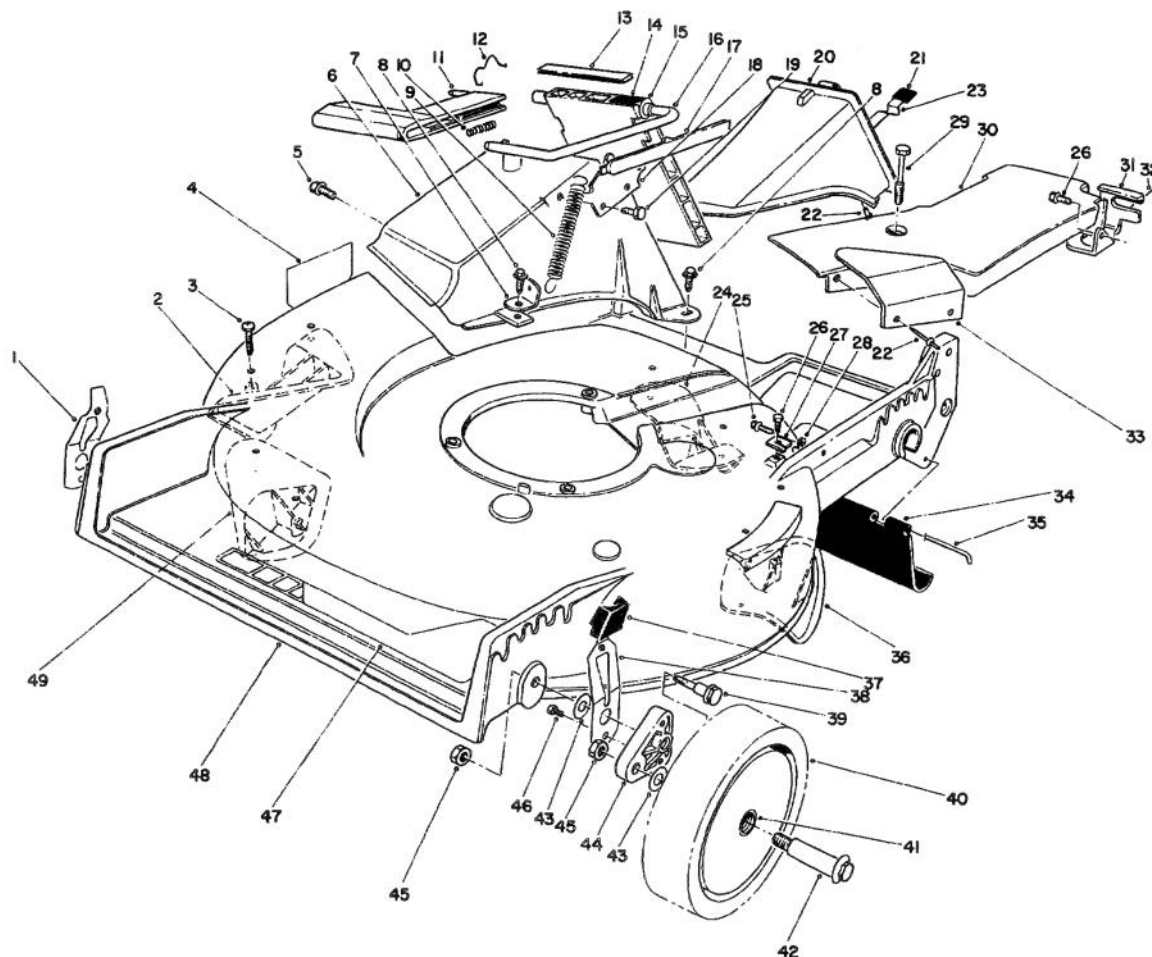


C-0566

HOUSING ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
31	62-3940	Bracket - Traction Adjust.	1	43	40-1940	Washer - Wheel	4
32	46-7030	Retainer - Cable	1	44	66-0580	Arm - Pivot	2
33	77-0280	Shield - Heat	1	45	52-3620	Nut - Lock	4
34	44-0580	Shield - Rear	1	46	32144-85	Screw - Hex Hd. Cap	2
35	33-3208	Rod - Shield	1	47	76-1950	Decal - Deck	1
36	76-2130	Plate - Kicker Left Front	1	48	14-0759	Housing Assembly (Incl. Ref. #4)	1
37	25-7740	Knob - Spring Arm	2	49	76-2120	Plate - Kicker Rt. Front	1
38	71-0570	Spring Arm Ass'y - L.H.	1	*	77-0200	Discharge Door Assembly (Incl. Ref. #10, 11, 13-17)	1
39	66-0561	Screw - Pivot	2	*	77-0500	Plug Assembly (Incl. Ref. #20-23)	1
40	11-9509	Wheel & Tire Assembly (Incl. Ref. #41)	2				
41	27-6250	Bushing	4				
42	27-6231	Bolt - Wheel	2				

*Not Illustrated

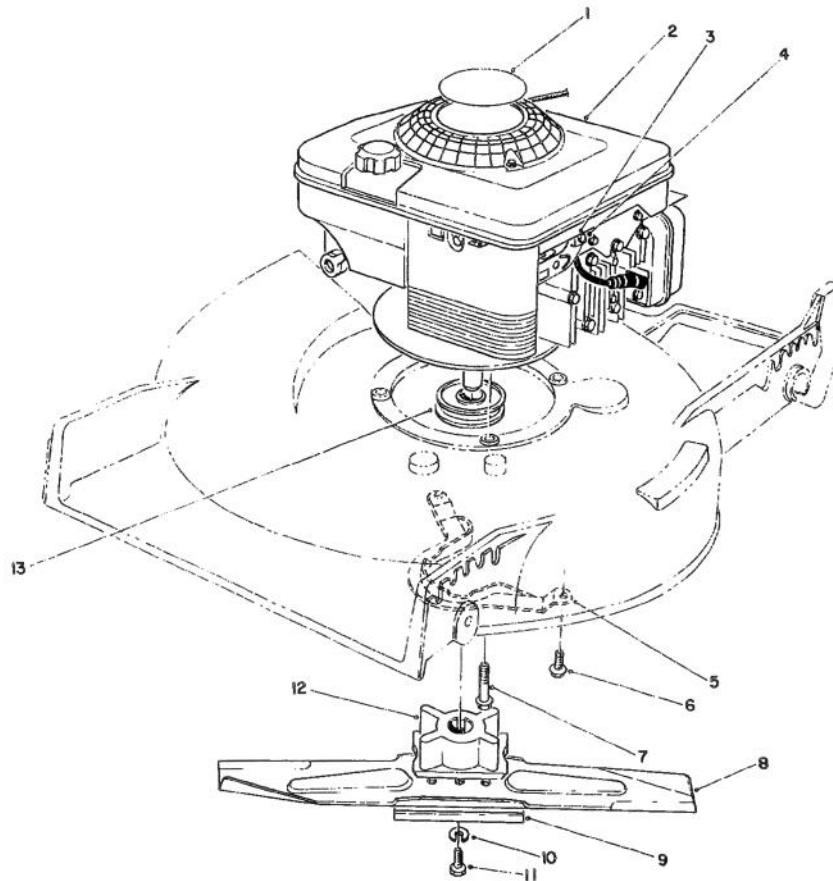


C-0567

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	75-9400	Decal - Engine	1	8	75-9420	Blade - 21"	1
2		Engine	1	9	46-2980	Stiffener - Blade	1
†3	2210-249	Clamp - Casing	1	10	3253-22	Lockwasher	1
†4	2210-313	Screw - Clamp	1	11	26-0670	Screw - Blade	1
5	40-5720	Guide - Belt	1	12	62-7540	Retainer - Blade	1
6	49-2040	Screw - Thread Forming	2	13	62-7550	Pulley - Driver	1
7	32144-102	Screw - Thread Forming	3				

†Provided with Engine

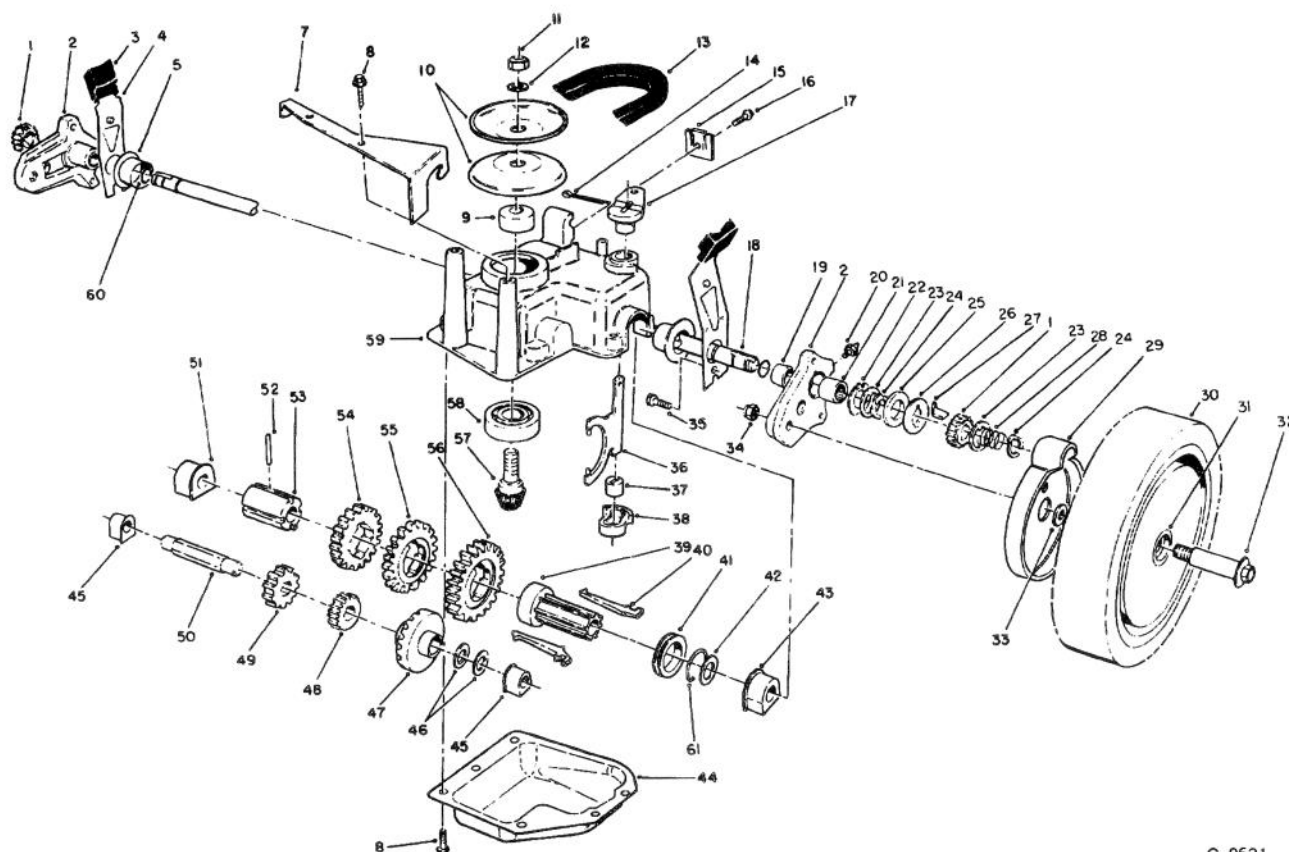


C-0521

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	65-4750	Pinion	2
2	63-8701	Pivot Arm Assembly (Incl. Ref # 19, 20, & 21)	2
3	25-7740	Knob - Arm	2
4	63-8720	Spring Arm Assembly	2
5	42-3520	End Cap	2
7	62-4320	Bracket - Belt Guide	1
8	49-2040	Screw - Self Tapping	8
9	62-6660	Spacer	1
10	60-8840	Pulley - Half	2
11	3296-5	Locknut	1
12	3256-24	Washer - Flat	1
13	62-3900	V-Belt	1
14	3272-10	Pin - Cotter	1
15	46-5610	Cable Clamp	1
16	32144-70	Screw - Thread Forming	1
17	60-8820	Lever - Shift	1
18	65-4770	Shaft - Output	1
19	70-9760	Bushing	2
20	302-56	Fitting - Grease	2
21	48-2060	Needle Bearing	2
22	65-4730	Thrust Washer	2
23	65-4740	Thrust Washer	4
24	65-2720	Ring - Retaining	4
25	65-4710	Ring - Friction	2

Ref. No.	Part No.	Description	No. Used
26	65-4760	Washer - Clutch	2
27	66-6050	Key - Rocker L.H.	1
*	66-6040	Key - Rocker R.H.	1
28	65-4720	Spring	2
29	74-1660	Cover - Wheel	2
30	11-9519	Wheel - Tire & Gear Ass'y (Incl. Ref. # 31)	2
31	27-6250	Bushing - Wheel	4
32	27-6231	Wheel Bolt	2
33	74-1670	Spacer - Wheel Cover	2
34	52-3620	Locknut	2
35	32144-85	Screw	2
36	60-8870	Yoke - Shift	1
37	29-9570	Bushing - Yoke	1
38	60-8810	Retainer - Shift Fork	1
39	76-0780	Sleeve - Shift Key	1
40	76-0760	Key - Shift	2
41	76-0770	Collar - Shift	1
42	36-4780	Washer - Thrust	1
43	60-8770	Bushing - Output Shaft	1
44	60-8730	Cover - Gear Case	1
45	60-8750	Bushing - Int. Shaft	2
46	36-4791	Washer - Thrust	2
47	55-3760	Gear - Pinion 15 Tooth	1
48	55-3780	Gear - Pinion 20 Tooth	1

*Not Illustrated

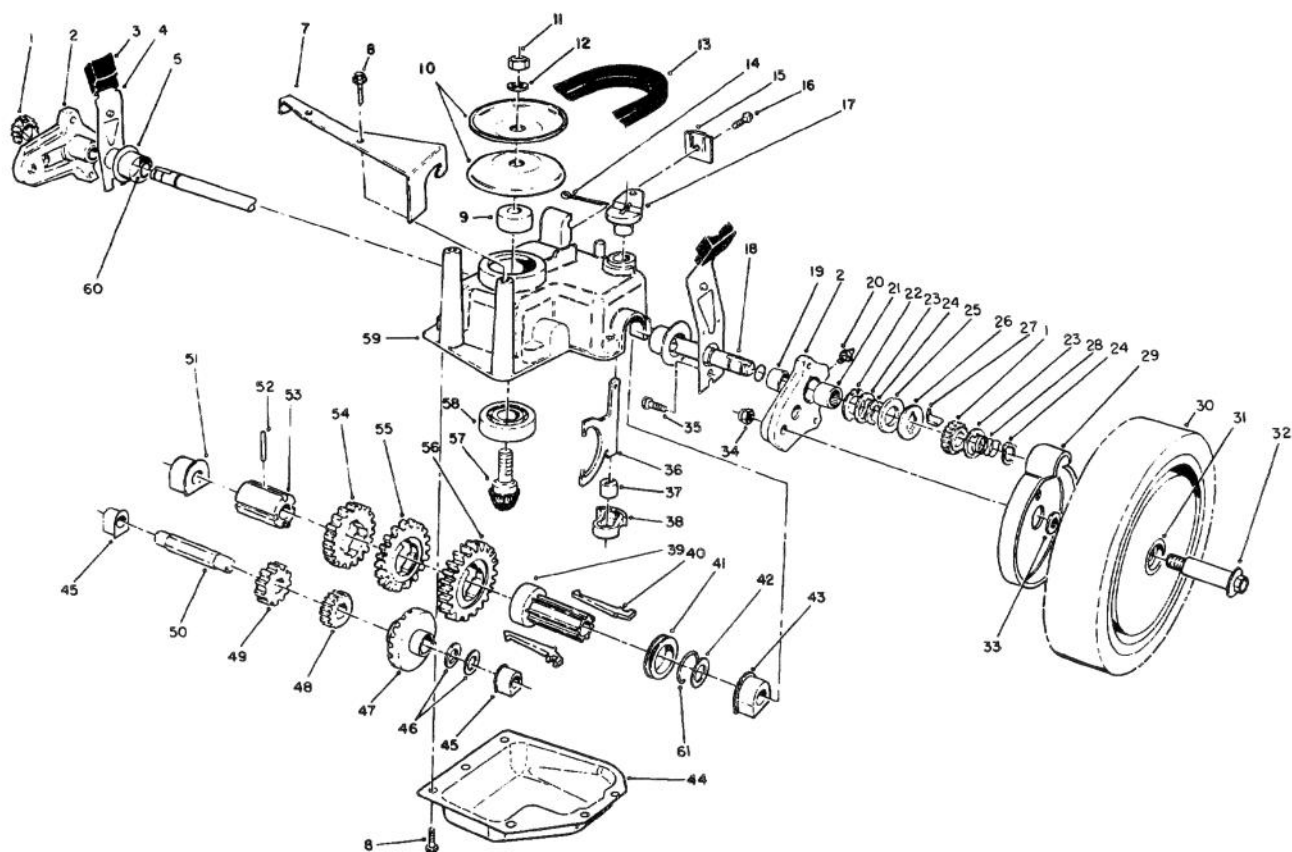


C-0521

GEAR CASE ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
49	55-3800	Gear - Pinion	1	56	55-3770	Gear - 49 Tooth 1st Gear	1
50	60-8800	Shaft - Intermediate	1	57	60-8890	Pinion - Bevel	1
51	60-8850	Bushing - Output Shaft	1	58	38-7820	Bearing - Ball	1
52	32121-120	Pin - Coil	1	59	60-8710	Gear Case - Upper	1
53	60-8790	Sleeve - Gear	1	60	237-153	O-Ring	2
54	55-3810	Gear - 39 Tooth 3rd Gear	1	61	65-5250	Clip - Spring	1
55	55-3790	Gear - 44 Tooth 2nd Gear	1	*	62-6673	Gear Case Assembly	1

*Not Illustrated

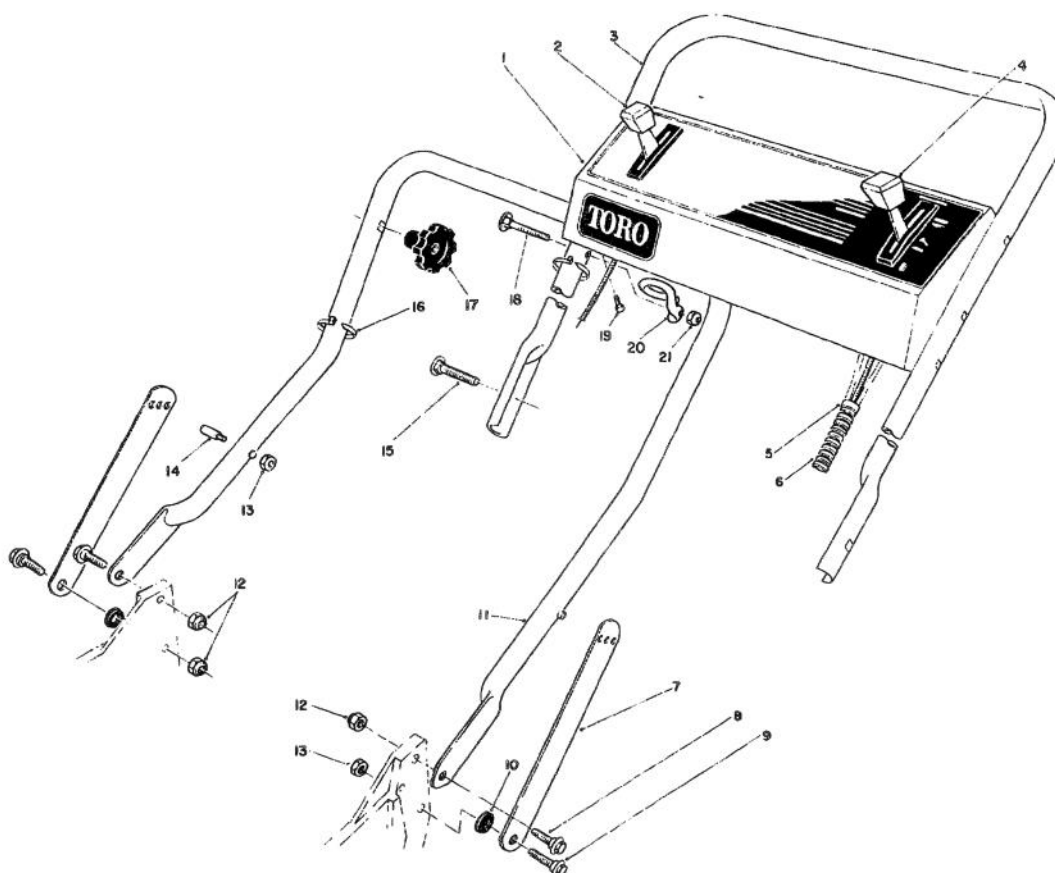


C-0329

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	74-3500	Panel - Control	1	9	27-7210	Screw - Shoulder	2
2	76-2720	Control - Ground Speed (Bend Type #1) (Sheath Lg. 42-1/4") (Wire Lg. 2-1/4")	1	10	3-3287	Spacer	2
3	49-4234	Handle - Upper	1	11	43-1361	Lower Handle Assembly	1
4	49-4197	Control - Throttle (Bend Type # 6) (Sheath Lg. 55-1/2") (Wire Lg. 2-3/8")	1	12	3296-29	Locknut	3
5	2412-50	Clip - Convolute Tubing	4	13	3296-47	Locknut	3
6	46-6440	Cover - Control Cables	1	†14	49-2750	Pin - Handle	2
7	43-1370	Latch - Handle	2	†15	17-9421	Screw - Handle	2
8	27-7211	Screw - Shoulder	2	16	3290-378	Tie - Cable	2
				17	19-4050	Knob - Handle Release	2
				18	46-6433	Screw - Handle	1
				19	32104-76	Screw - Self Tap Slotted	5
				20	46-8080	Guide - Rope	1
				21	3296-42	Locknut	1

†Service Replacement Parts

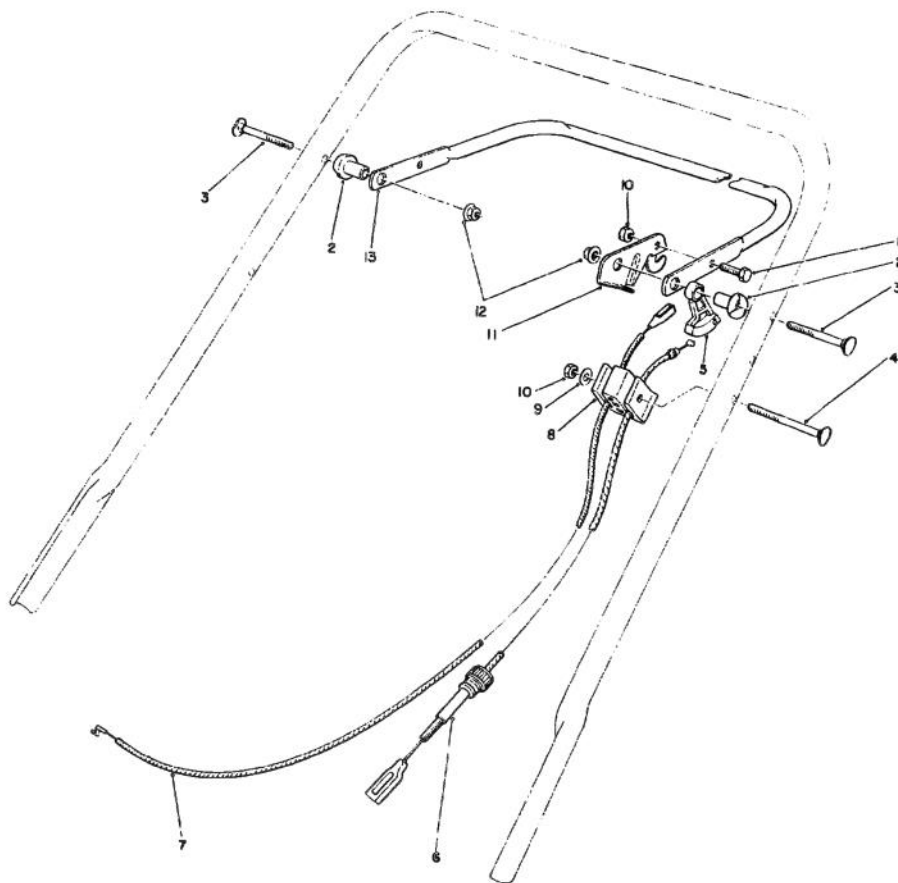


C-0330-90

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	321-3	Capscrew - Hex Hd.	1
2	49-1630	Support - Spacer	2
3	17-9421	Screw - Handle	2
4	46-6434	Screw - Handle	1
5	46-5520	Lever - Traction	1
6	46-5481	Cable - Traction	1
7	76-4330	Cable - Brake	1

Ref. No.	Part No.	Description	No. Used
8	46-6980	Support - Cable	1
9	3256-22	Washer - Flat	1
10	3296-42	Locknut	2
11	66-5350	Lever - Control	1
12	3296-58	Locknut	2
13	71-3080	Bar - Control	1

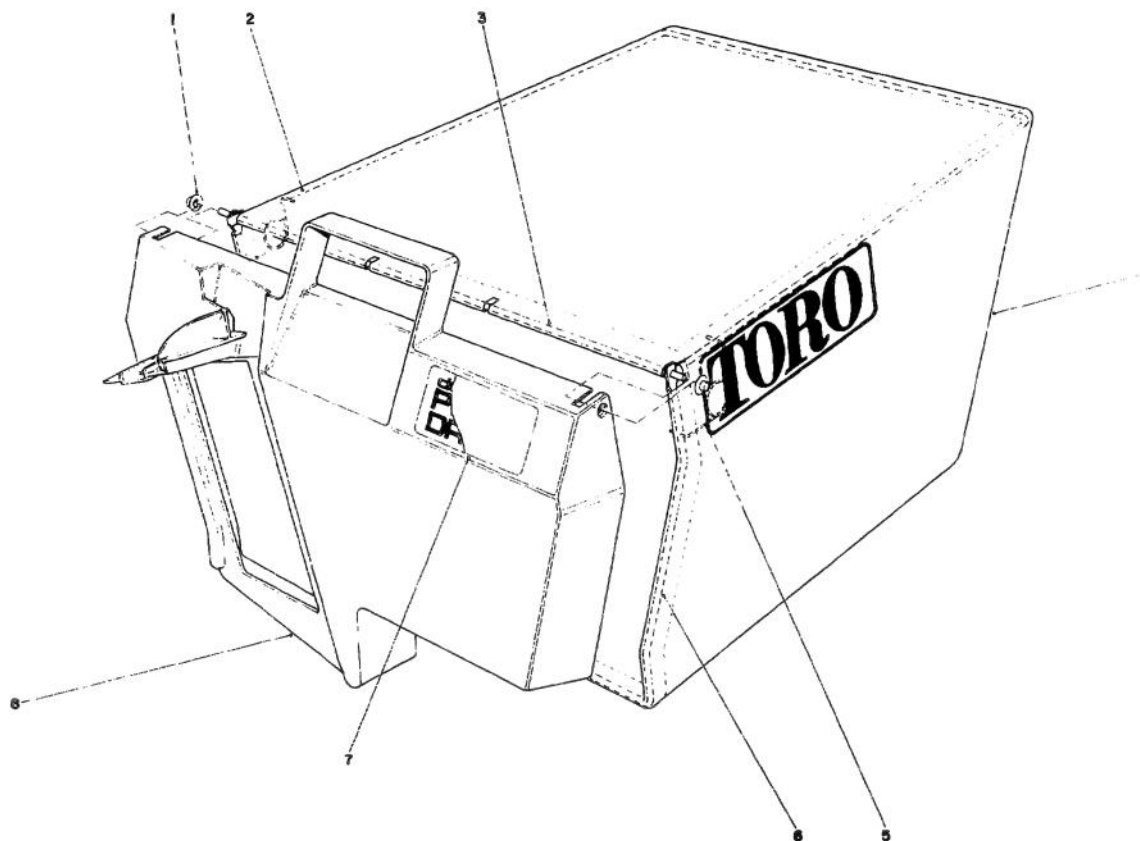

C-0331-90

GRASS BAG ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	3290-422	Nut - Push	2
2	42-4030	Bag Frame - Upper	1
3	33-4820	Hinge - Bag Door	1
4	44-0522	Bag - Grass	1

Ref. No.	Part No.	Description	No. Used
5	36-6910	Spring	2
6	42-4020	Frame - Bag	1
7	66-2150	Decal - Bag Door	1
8	37-1393	Door - Grass Bag	1



Ref. No.	Part No.	Description	No. Used
1	76-4780	Decal - Caution	1
2	13-2239	Chute - Discharge (Incl. Ref. #1)	1

Ref. No.	Part No.	Description	No. Used



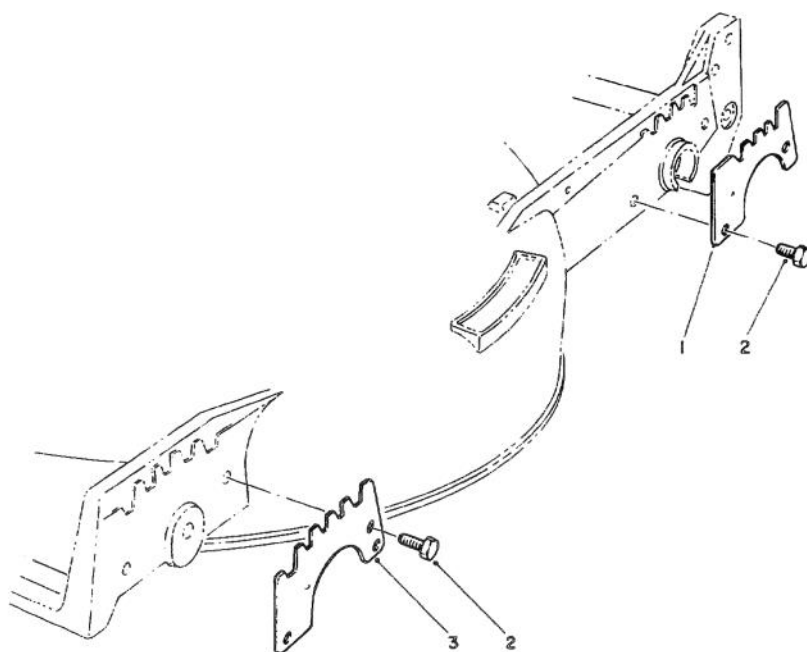


C-0332-90

WEAR PLATE MODEL NO. 49-4080 (OPTIONAL)

Ref. No.	Part No.	Description	No. Used
1	49-4070	Plate - Rear Wear	2
2	32104-17	Thread Forming Screw	8

Ref. No.	Part No.	Description	No. Used
3	43-5050	Plate - Wear Front	2

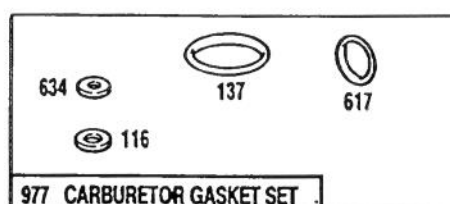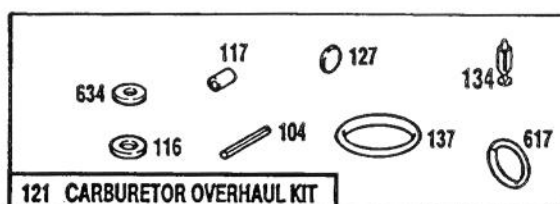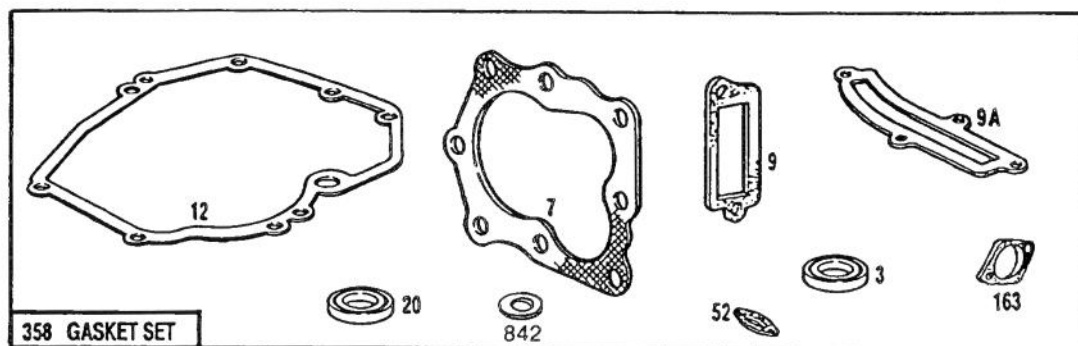


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTION MODEL 124702-3115-01

Ref. No.	Part No.	Description	No. Used
3	393862	Seal - Oil	1
7	272200	Gasket - Cylinder Hd.	1
9	271904	Gasket - Valve Cover	1
9A	272238	Gasket - Baffle Plate	1
12	272198	Gasket - Crankcase	1
20	399781	Seal - Oil	1
52	272199	Gasket - Intake Elbow	1
104	231371	Pin - Float Hinge	1
116		Gasket - Sealing	1
117		Jet	1

Ref. No.	Part No.	Description	No. Used
121	493762	Carburetor Overhaul Kit	1
127		Plug - Welch	1
134	398188	Valve - Inlet	1
137		Gasket - Bowl	1
163	272257	Gasket - Air Cleaner	1
358	493263	Gasket Set	1
617	270344	Seal - Fuel Intake Tube	1
634		Washer - Throttle Shaft	1
842	280966	Seal - O-Ring	1
977	490937	Gasket Set - Carburetor	1

ENGINE BRIGGS & STRATTON MODEL 124702-3115-01

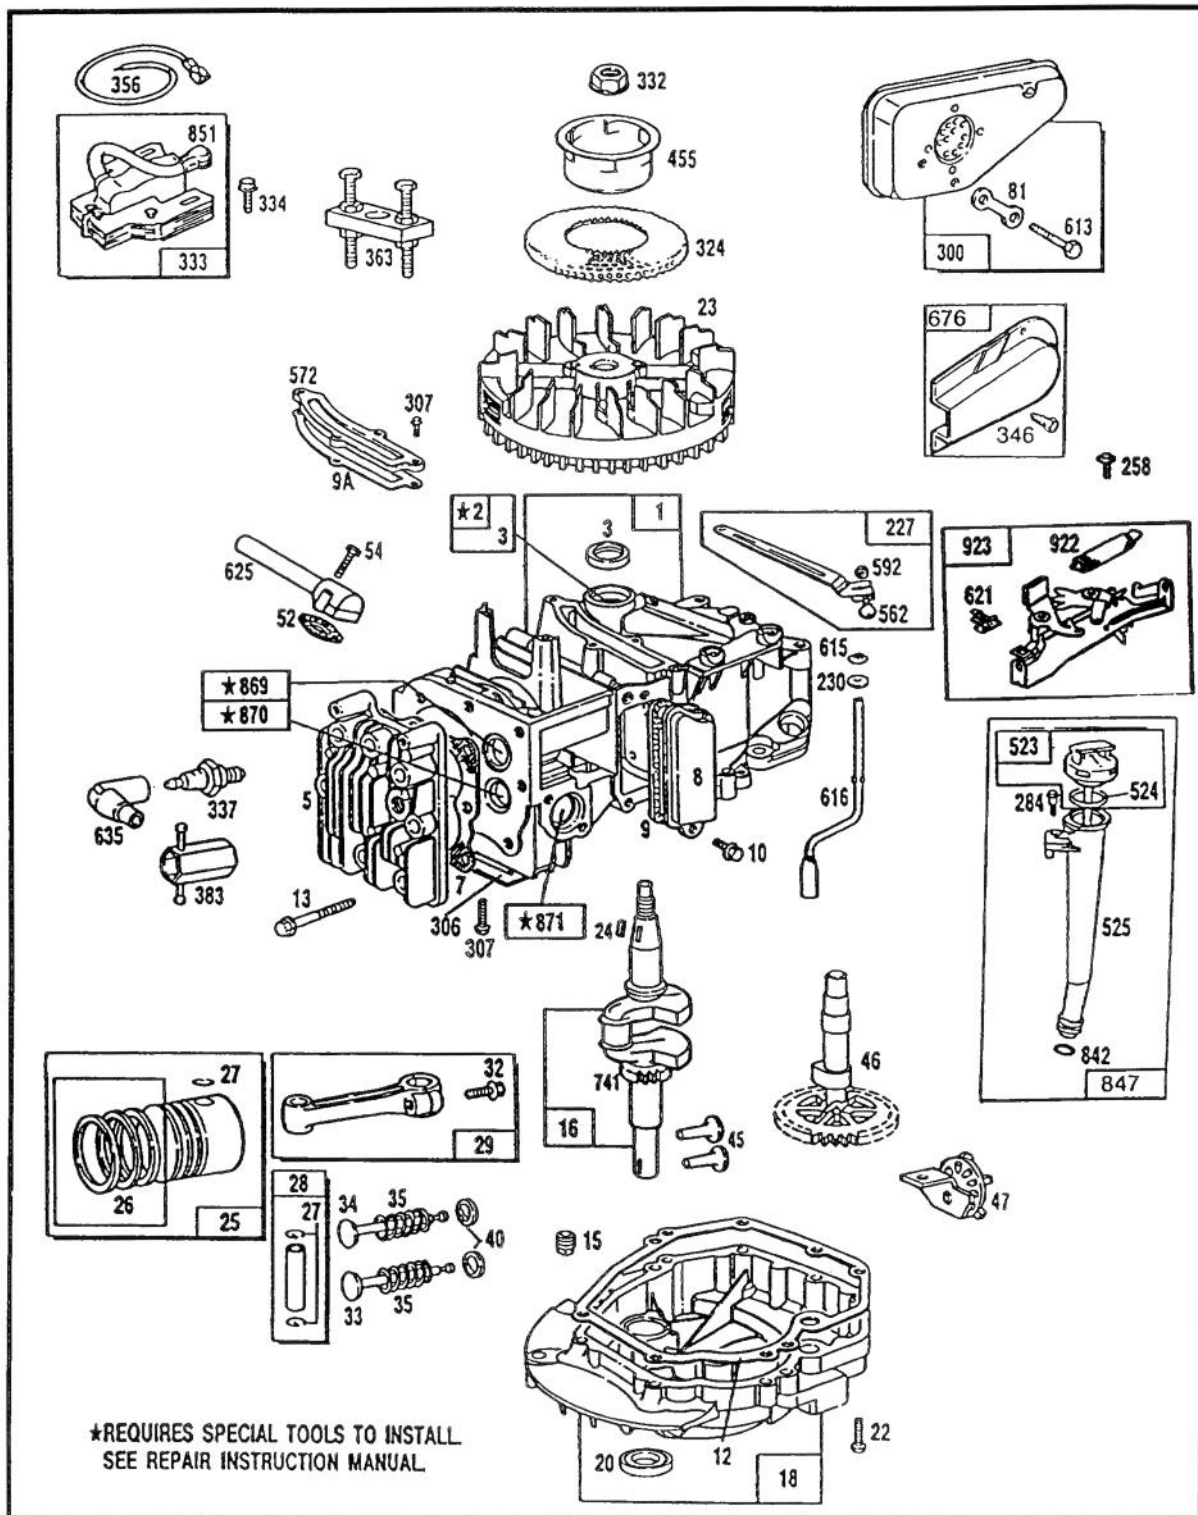


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL NO. 124702-3115-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1	45	262204	Tappet - Valve	1
2	293708	Bushing - Cylinder	1	46	492830	Gear - Cam	1
		Note: Requires special tools for installation.		47	492524	Oil Slinger Gear & Bracket	1
3	**393862	Seal - Oil	1	52	**272199	Gasket - Intake Elbow	1
5	213610	Head - Cylinder	1	54	94526	Screw - Intake Elbow Mtg.	1
7	**272200	Gasket - Head Cylinder	1	81	233664	Lock - Muffler Screw	1
8	399717	Breather - Valve Chamber	1	227	492349	Lever Ass'y - Governor	1
9	**271904	Gasket - Valve Cover	1	230	67072	Washer - Governor Crank	1
9A	**272238	Gasket - Baffle Plate	1	258	94512	Screw - Hex Hd.	1
10	94222	Screw - Breather Mounting Sem	1	284	94511	Screw - Hex Hd.	1
12	**272198	Gasket - Crankcase	1	300	490547	Muffler - Exhaust	1
13	94547	Screw - Cylinder Hd.	1	306	224324	Shield - Cylinder	1
15	94239	Plug - Oil Drain	1	307	94515	Screw - Hex Hd.	1
16	493731	Crankshaft	1	324	224251	Screen - Rotating	1
		Note: Order 94388 for Timing Gear Key.		332	92284	Nut - Flywheel	1
18	493279	Sump - Engine	1	333	802574	Armature - Magneto	1
20	**399781	Seal - Oil	1	334	93381	Screw - Armature Mtg. Sem	1
22	94220	Screw - Sump Mtg. Sem	1	337	293918	Plug - Spark (With Gasket) (1-1/2" High - 37-42mm) (Resistor Type)	1
23	492177	Flywheel - Magneto	1	346	93705	Screw - Hex Hd.	1
24	222698	Key - Flywheel	1	356	398808	Wire - Ground	1
25	493262	Piston Ass'y - Standard	1	363	19069	Puller - Flywheel (Optional Accessory)	1
	493385	Piston Ass'y - .010" O.S.	1	383	89838	Wrench - Spark Plug	1
	493386	Piston Ass'y - .020" O.S.	1	455	224250	Cup - Starter	1
	493387	Piston Ass'y - .030" O.S.	1	523	493460	Cap with Dipstick - Oil Filter	1
		Ring Sets:		524	280393	Seal - Filler Tube	1
		Note: For Chrome Piston Ring Set - Standard Size Order Part No. 493391		525	281019	Tube - Oil Filter	1
26	493261	Ring Set - Std. Piston	1	562	92613	Bolt - Governor Lever	1
	493388	Ring Set - .010" O.S. Piston	1	572	224328	Baffle - Cylinder	1
	493389	Ring Set - .020" O.S. Piston	1	592	231082	Nut - Hex	1
	493390	Ring Set - .030" O.S. Piston	1	613	94231	Screw - Muffler Mtg.	1
27	26026	Lock - Piston Pin	1	615	94474	Pushnut (Governor Crank)	1
28	298909	Pin Ass'y - Piston - Std.	1	616	262578	Crank - Governor	1
	298908	Pin Ass'y - Piston - .005" O.S.	1	621	396847	Switch - Stop	1
29	490566	Rod Ass'y - Connecting	1	625	492717	Tube - Fuel Intake	1
		Note: For Connecting Rod with .020" undersize Crankpin Bearing - Order No. 490743.		635	66538	Elbow - Spark Plug	1
32	94405	Screw Connecting Rod	1	676	493871	Deflector - Muffler	1
33	262651	Valve - Exhaust	1	741	262598	Gear - Timing	1
34	262652	Valve - Intake	1	842	280966	Seal - O-Ring	1
35	262224	Spring - Valve	1	847	493459	Tube Ass'y - Oil Fill	1
40	93312	Retainer - Valve Spring	1	851	492916	Terminal - Ignition Cable	1
		Used with valves with groove in stem.		869	213512	Seat - Intake Valve (Std.)	1
				870	213513	Seat - Exhaust Valve (Std.)	1
				871	262001	Guide - Exhaust Valve	1
						Note: 63709 Guide - Intake Valve. See Repair Instruction Manual.	
				922	262640	Spring - Brake	1
				923	492918	Brake Assembly	1

**Included in Carburetor Gasket Set - Part No. 490937

ENGINE BRIGGS & STRATTON MODEL 124702-3115-01

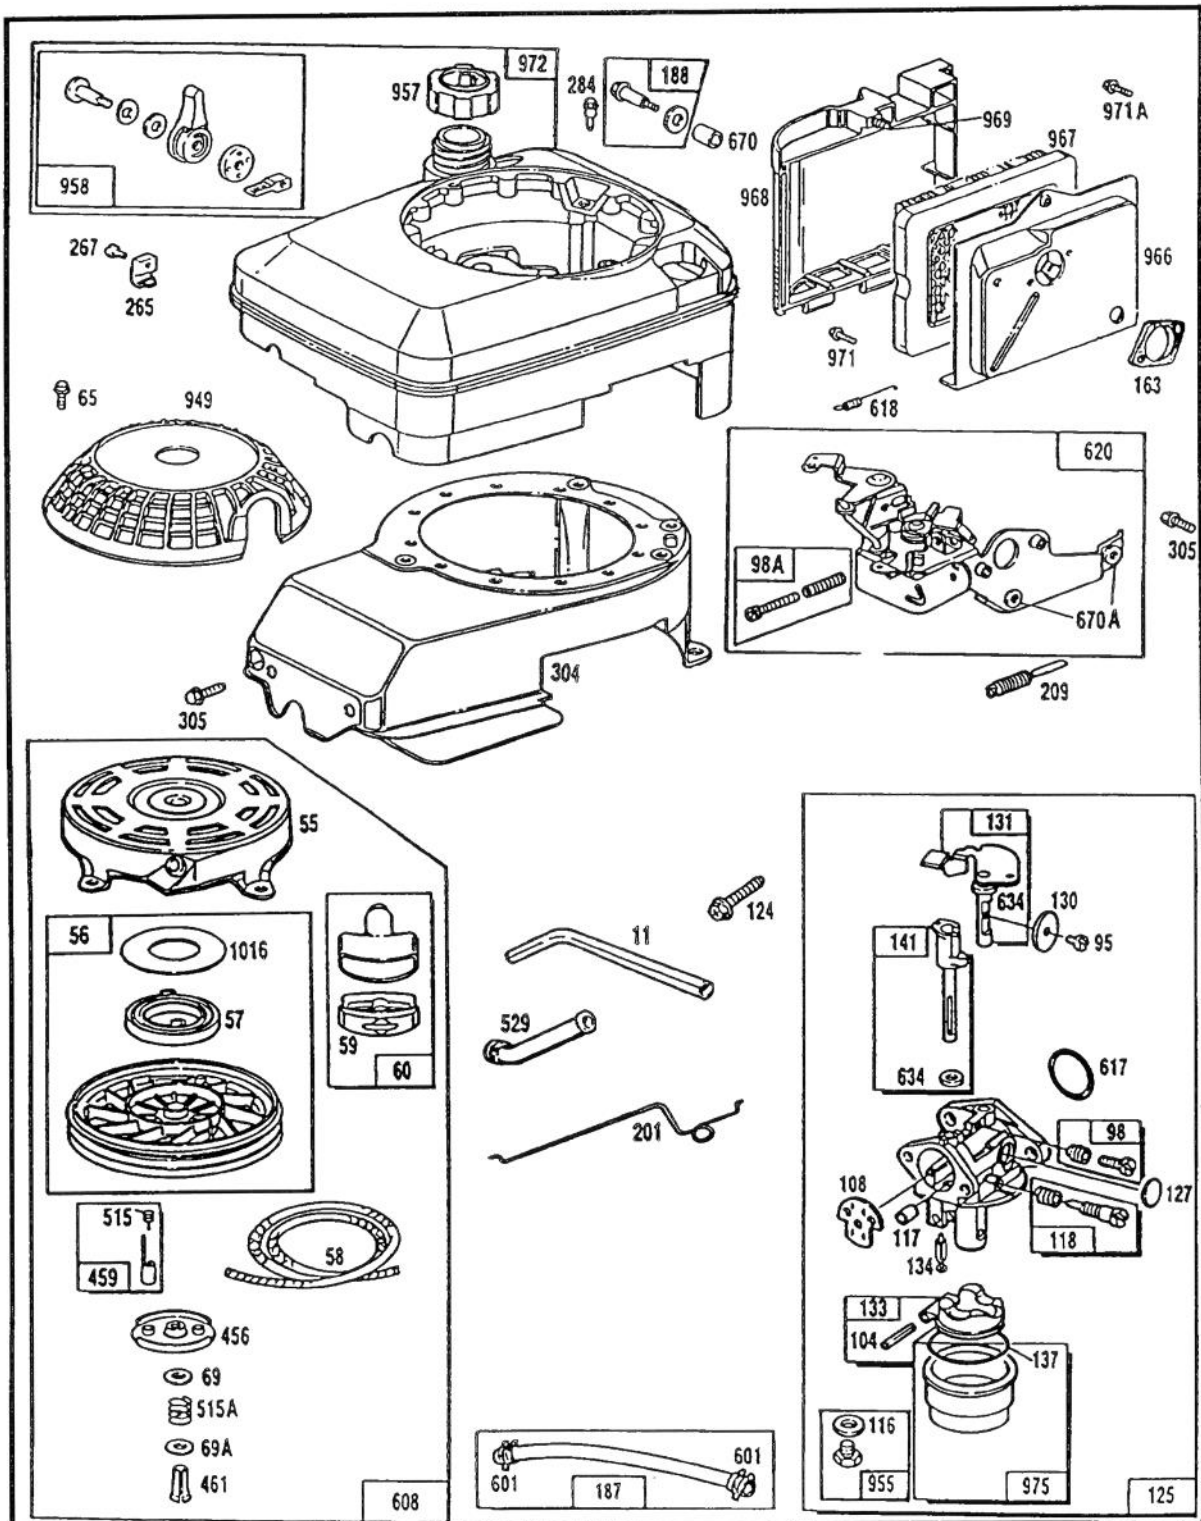

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL NO. 124702-3115-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
11	231685	Tube - Breather	1	209	262661	Spring - Governor	1
55	492831	Housing - Rewind Starter	1	265	221535	Clamp - Casing	1
56	492832	Pulley - Rewind Starter	1	267	94204	Screw - Clamp Mtg.	1
57	262594	Spring - Rewind Starter	1	284	94511	Screw - Hex Hd.	1
58	280399	Rope - Rewind Starter (Cut to 88 5/8")	1	304	493294	Housing - Blower	1
59	396892	Insert - Handle	1	305	94513	Screw - Hex Hd. Sem	1
60	393152	Handle - Rewind Starter	1	456	224321	Retainer - Rewind Starter	1
65	94058	Screw - Guard Mounting	1	459	492833	Pawl - Starter	1
69	280973	Washer - Rewind Starter	1	461	262626	Pin - Starter	1
69A	224322	Washer - Rewind Starter	1	515	262556	Spring - Pawl	1
95	94098	Screw - Throttle Valve Mtg. Sem	1	515A	262625	Spring - Torsion	1
98	398185	Screw - Idle Adjustment	1	529	280943	Grommet - Breather	1
98A	493280	Screw Ass'y - Speed Adj.	1	601	93053	Clamp - Hose (Green)	1
104	231371	Pin - Float Hinge	1			Note: 93807 Clamp - Hose (Black)	
108	223471	Valve - Choke	1	608	493295	Starter Ass'y - Rewind	1
116	*†	Gasket - Sealing (Sold in Kit Only)	1	617	*†270344	Seal - Fuel Intake Tube	1
117	*	Jet (Sold in Kit Only)	1	618	260870	Spring - Choke Return	1
118	493765	Valve & Spring - Needle	1	620	492978	Bracket Assembly - Carburetor Control	1
124	94525	Screw - Carburetor Mtg.	1	621	396847	Switch - Stop	1
125	493868	Carburetor Assembly	1	634	*†	Washer - Throttle Shaft (Sold in Kit Only)	1
127	*	Plug - Welch (Sold in Kit Only)	1	670	280512	Spacer - Fuel Tank	1
130	223470	Valve - Throttle	1	670A	493823	Spacer - Carb. Brkt.	2
131	493267	Shaft & Lever - Throttle	1	949	280946	Guard - Finger	1
133	398187	Float Ass'y - Carburetor	1	955	493869	Screw - Bowl Mtg.	1
134	398188	Valve - Inlet (Incl. Seat)	1	957	397974	Cap Assembly - Fuel	1
137	*†	Gasket - Bowl (Sold in Kit Only)	1	958	493277	Valve - Fuel Shut-Off	1
141	493266	Shaft - Choke	1	966	492363	Base - Air Cleaner	1
163	272257	Gasket - Air Cleaner	1	967	491588	Filter - Air	1
187	492790	Hose - Fuel (Cut to Suit)	1	968	280937	Cover - Air Cleaner	1
188	398540	Screw - Tank Mounting (Includes Washer)	1	969	94120	Screw - Cover Mtg.	1
201	262579	Link - Governor	1	971	94269	Screw - Air Cleaner	1
				971A	94121	Screw - Backplate to Carb.	1
				972	493231	Tank Assembly - Fuel	1
				975	493640	Bowl Ass'y - Carburetor	1
				1016	224278	Cover - Rewind Starter	1

*Included in Carburetor Overhaul Kit - Part No. 493762

†Included in Carburetor Gasket Set - Part No. 490937

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Lawnmower has two Identification numbers, a model number and a serial number. The two numbers are stamped on a decal which is located on the rear of the housing. In any correspondence concerning the lawnmower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the lawnmower.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any

reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.