



XL 320 Lawn Tractor

Model No. 71209 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame and Body Assembly	 3	Crankshaft Assembly Briggs and Stratton 21A907-0169-E1	 19
Hood and Tower Assembly	 4	Crankcase Assembly Briggs and Stratton 21A907-0169-E1	 20
Rear Body and Seat Assembly	 5	Oil Filter, Tube and Pump Assembly Briggs and Stratton 21A907-0169-E1	 21
Steering Component Assembly	 6	Carburetor Assembly Briggs and Stratton 21A907-0169-E1	 22
Fixed Steering Assembly	 7	Governor Assembly Briggs and Stratton 21A907-0169-E1	 23
OHV Engine System Component Assembly	 8	Blower Housing Assembly Briggs and Stratton 21A907-0169-E1	 24
Traction Clutch Assembly	 9	Starter Assembly Briggs and Stratton 21A907-0169-E1	 25
Shifter Assembly	 10	Gasket Assembly Briggs and Stratton 21A907-0169-E1	 26
5 Speed Transaxle Assembly	 11	Carburetor Overhaul Kit Assembly Briggs and Stratton 21A907-0169-E1	 27
32 Inch Deck Assembly	 12	Attachments and Accessories List	 28
32 Inch Deck Blade Drive and Brake Assembly	 13		
Height-of-Cut Assembly	 14		
Electrical Component Assembly	 15		
Engine Assembly	 16		
32 Inch Deck Component Assembly	 17		
Cylinder Assembly Briggs and Stratton 21A907-0169-E1	 18		

Part Description Abbreviations

 
Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|---|---|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Included in Engine Gasket Set-Ref. 358. | ❹ Included in Valve Gasket Set-Ref. 1095. |
| ❺ Included in Carburetor Overhaul Kit-Ref. 121. | ❻ Obtain from your local Briggs & Stratton dealer |



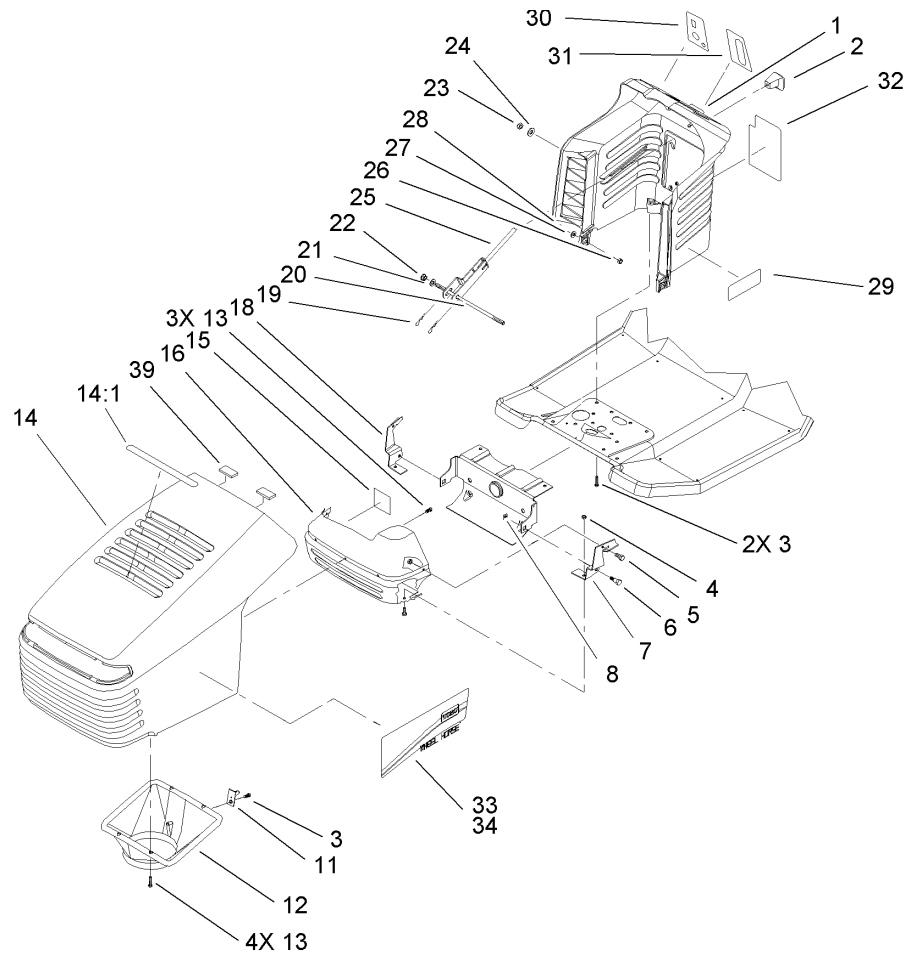

Hood and Tower Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	99-1947	1	Tower-Steering	27	3256-23	2	Washer-Flat
2	94-5565	1	Knob-Shift	28	322-3	2	Screw-HH
3	46-8091	3	Screw-HWH	29	108-7802	2	Decal-Tower
4	3296-42	4	Nut-Lock, NI	30	99-8142	1	Decal-Ignition
5	321-2	4	Screw-HH	31	92-5730	1	Decal-Throttle
6	28-0540	2	Bolt-Shoulder	32	93-6673	1	Decal-Deck, Engage
7	88-6050-03	1	Bracket-Hinge, LH	33	105-2497	1	Decal
8	3290-496	2	Nut-Retainer	34	105-2496	1	Decal
11	94-1984	1	Latch-Pin	39	94-1980	2	Foam-Hood
12	93-3891	1	Duct-Air, Hood				
13	46-8090	7	Screw-Plastite				
14	92-8650	1	Hood ASM				
14:1	92-5748	1	Decal				
15	92-5782	3	Tape-Foil				
16	93-3864-03	1	Shield-Heat				
18	88-6040-03	1	Bracket-Hinge, RH				
19	3290-307	2	Pin-Hair				
20	100-7401	1	Rod-Tower, Pivot				
21	3256-24	2	Washer-Flat				
22	3218-3	2	Nut-Jam				
23	100-7402	2	Nut-Cap				
24	100-7403	2	Washer-Flat				
25	88-5190-03	1	Lever-Deck, Engage				
26	3296-29	2	Nut-Lock, NI				

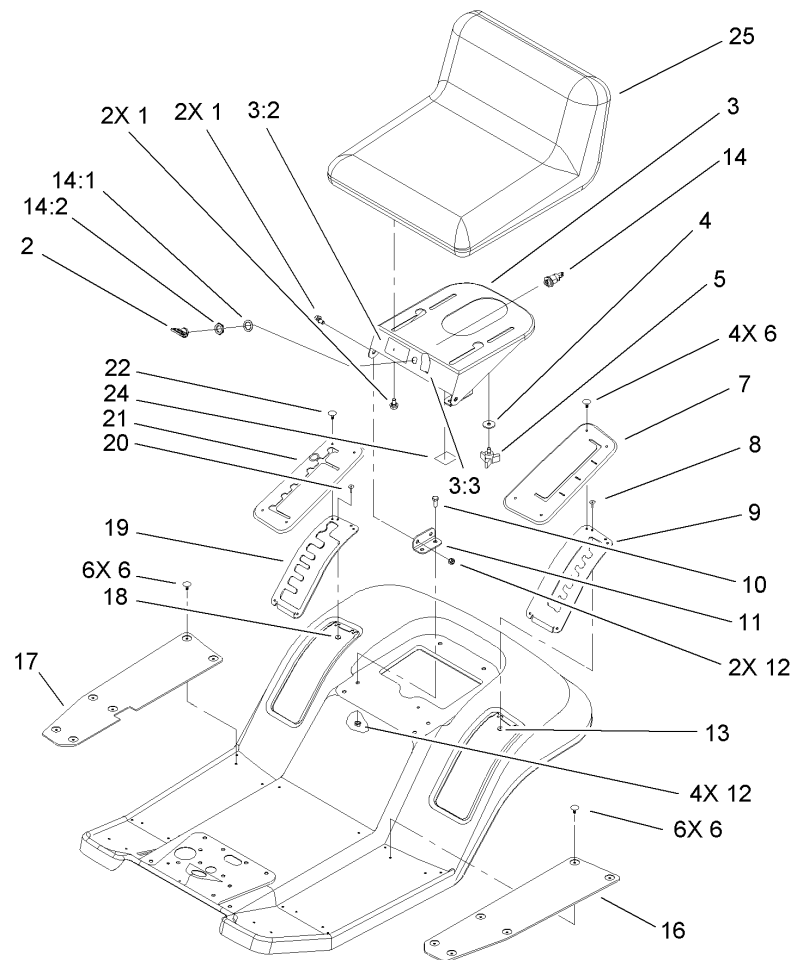 

Rear Body and Seat Assembly

Ref	Part No.	Qty.	Description
1	37-8770	4	Bolt-Shoulder
2	63-8360	1	Key-Ignition
3	106-6437	1	Seat Support ASM
3:2	99-2986	1	Decal-Danger
3:3	99-5340	1	Decal-Switch
4	5-4460	2	Washer-Pivot
5	92-9674	2	Knob
6	3290-479	16	Fastener-Panel
7	93-7657	1	Cover-HOC
8	3290-282	2	Rivet-Pop
9	88-5030-03	1	Gate-HOC
10	322-3	4	Screw-HH
11	88-4820-03	2	Bracket-Hinge, Seat
12	3296-29	6	Nut-Lock, NI
13	3269-26	2	Washer-Flat
14	46-5780	1	Switch-Starter
14:1	3254-5	1	Washer-Tooth
14:2	218-461	1	Nut-HH
16	88-5240	1	Mat-Foot, LH
17	88-5220	1	Mat-Foot, RH
18	3269-26	2	Washer-Flat
19	88-5020-03	1	Plate-Gate, Shift
20	3290-282	2	Rivet-Pop
21	93-7656	1	Cover-Shift


Ref	Part No.	Qty.	Description
22	3290-479	4	Fastener-Panel
24	105-2699	1	Decal-Noise
25	106-6439	1	Seat-11 Inch

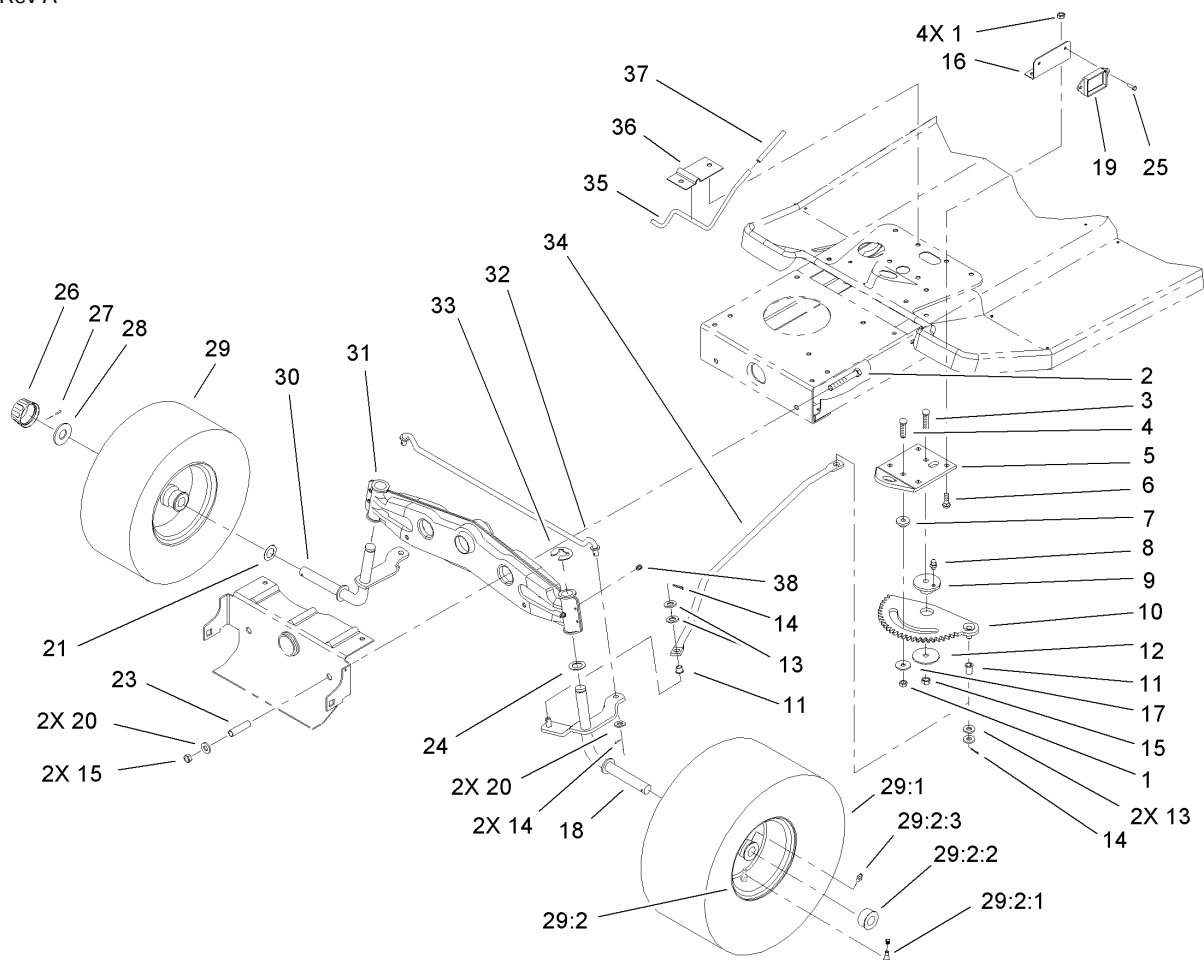 

Steering Component Assembly


Ref	Part No.	Qty.	Description
1	3296-29	5	Nut-Lock, NI
2	323-13	2	Screw-HH
3	3231-4	1	Screw-CARR
4	3230-3	1	Screw-CARR
5	88-5130-03	1	Bracket-Rack, Steering
6	3230-2	4	Bolt-CARR
7	88-5010	1	Spacer-Rack, Steering
8	302-26	1	Fitting-Grease
9	88-4670	1	Bushing-Eccentric
10	88-5200	1	Rack-Steering
11	52-2891	2	Bushing-Link, Steering
12	111419	1	Washer-Bearing
13	3256-25	4	Washer-Flat
14	3272-10	4	Pin-Cotter
15	3296-39	3	Nut-Lock, NI
16	99-2956-03	1	Bracket-Module
17	5-4460	1	Washer-Pivot
18	92-7890-03	1	LH Spindle ASM
19	99-3700	1	Module
20	3256-24	4	Washer-Flat
21	3-6498	4	Washer-Thrust
23	88-5470	2	Spacer-Axle, Front
24	3-6498	2	Washer-Thrust
25	9266714	2	Screw-HWH

Ref	Part No.	Qty.	Description
26	61-9780	2	Cap-Hub
27	3272-12	2	Pin-Cotter
28	28-2480	2	Washer
29		2	Front Wheel And Tire ASM
29:1	99-2992	1	Tire
29:2	88-4360	1	Rim ASM
29:2:1	232-27	1	Stem-Valve
29:2:2	110513	2	Bearing-Wheel
29:2:3	302-5	1	Fitting-Grease
29:99	232-38	1	Tube
30	92-7889-03	1	RH Spindle ASM
31	94-1962-03	1	Front Axle ASM
32	88-5380	1	Tie Rod-Steering
33	32151-48	2	E-Ring
34	88-4830	1	Link-Drag
35	88-5510	1	Rod-Brake, Parking
36	88-5520-03	1	Bracket-Brake, Parking
37	88-0890	1	Grip-Brake, Parking
38	302-5	2	Fitting-Grease

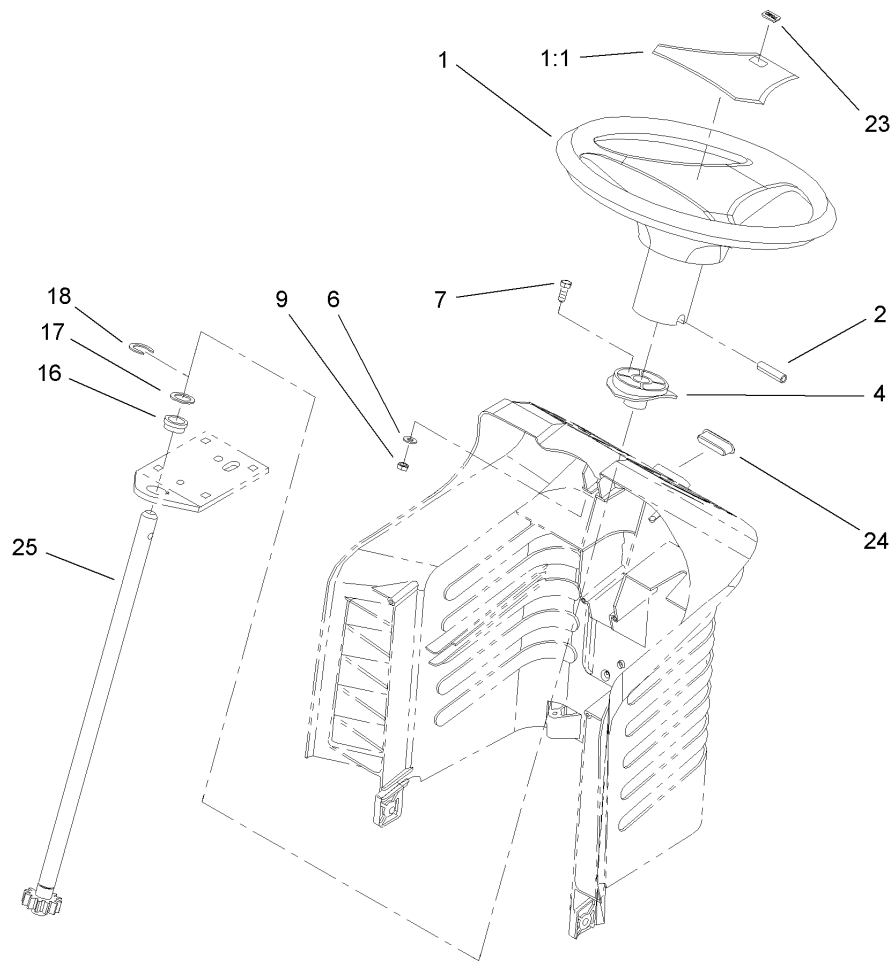 

Fixed Steering Assembly


Ref	Part No.	Qty.	Description				
1	98-1467	1	Wheel-Steering				
1:1	98-1468	1	Cover-Wheel, Steering				
2	32121-111	1	Pin-Roll				
4	88-4190	1	Bushing-Sliding				
6	3256-22	2	Washer-Flat				
7	321-4	2	Screw-HH				
9	3296-42	2	Nut-Lock, NI				
16	88-5150	1	Bearing-Flange				
17	3-6498	1	Washer-Thrust				
18	32151-48	1	E-Ring				
23	98-1459	1	Decal				
24	88-4150	1	Plug				
25	88-6380	1	Shaft-Steering, Long				

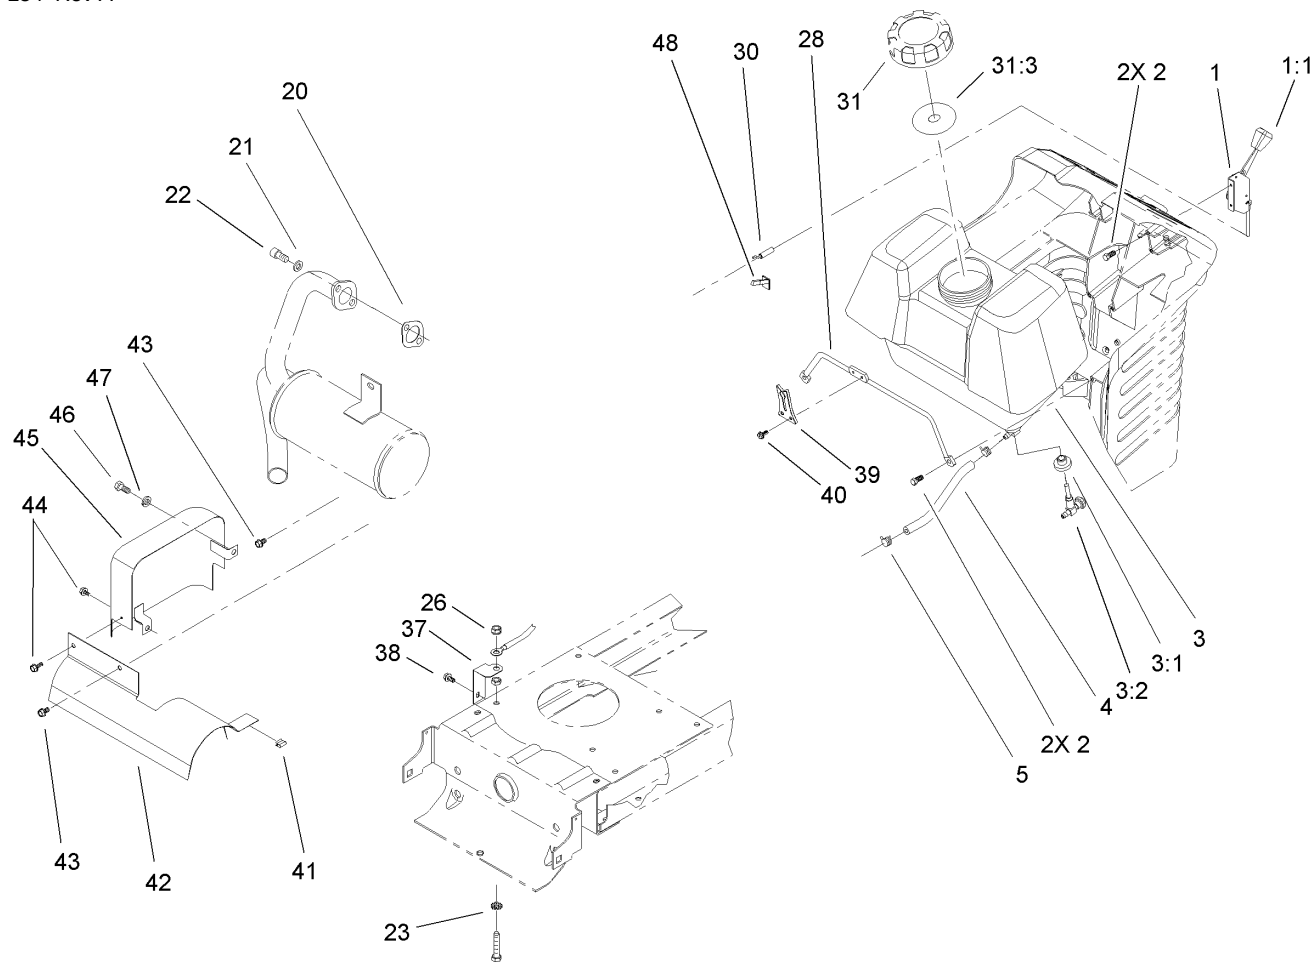 

OHV Engine System Component Assembly

Ref	Part No.	Qty.	Description
1	88-4340	1	Control-Throttle
1:1	66-0120	1	Knob
2	27-0220	4	Screw-Special
3	88-3880	1	Gas Tank ASM
3:1	46-6560	1	Bushing
3:2	104048	1	Valve-Fuel
4	107-9297	1	Fuel-Hose, 8.5 Inch
5	2412-98	2	Clamp
20	88-4410	1	Gasket-Muffler
21	3253-4	2	Washer-Lock
22	3274-10	2	Screw-HSH
23	3255-8	1	Washer-Lock
26	32149-1	2	Nut-Keps
28	94-1952	1	Rod-Tank, Gas
30	88-4350	1	Cable-Throttle
31	88-3980	1	Gas Cap ASM
31:3	88-4010	1	Gasket-Cap, Gas
37	93-3809	1	Bracket-Ground
38	9266714	1	Screw-HWH
39	94-1951	1	Latch-Hood
40	32144-112	2	Screw-HWH
41	93-3882	1	Clip-Tinnerman
42	105-2462-03	1	Shield-Muffler
43	9266714	2	Screw-HWH


Ref	Part No.	Qty.	Description
44	32104-76	2	Screw
45	93-8450-03	1	Exhaust Shield ASM
46	322-3	1	Screw-HH
47	3253-4	1	Washer-Lock
48	88-4490	1	Reducer-Throttle, Rpm

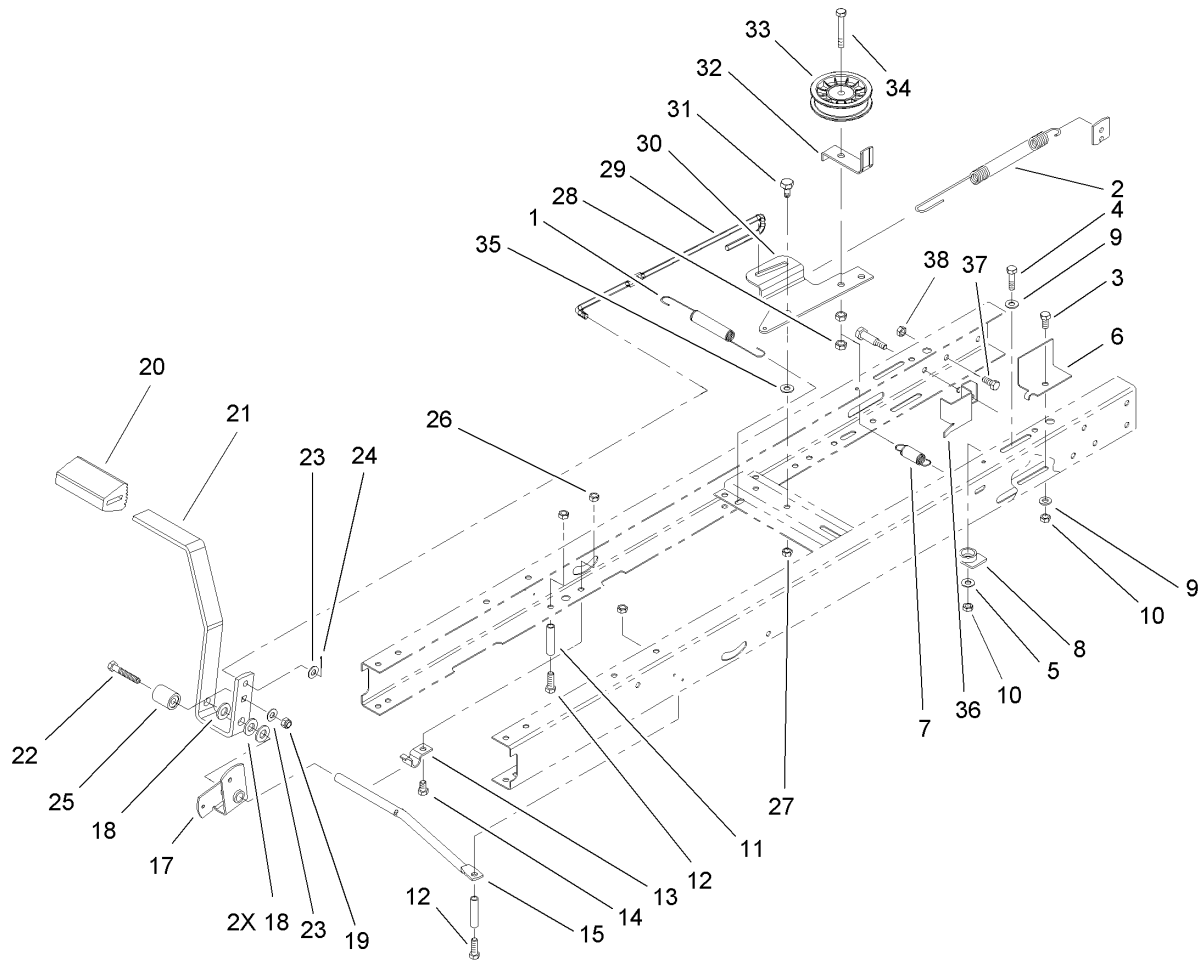 

Traction Clutch Assembly


Ref	Part No.	Qty.	Description
1	27-8890	1	Spring-Return
2	94-4295	1	Spring-Brake
3	322-3	1	Screw-HH
4	322-6	1	Screw-HH
5	5-4460	1	Washer-Pivot
6	94-5433	1	Bracket-Belt, Guide
7	88-6330	1	Spring-Extension
8	84-5610	1	Guide-Cable
9	3256-23	2	Washer-Flat
10	3296-29	2	Nut-Lock, NI
11	46-5590	2	Tubing-Spacer
12	322-12	2	Screw-HH
13	88-4810	1	Clamp-Shift, Pivot
14	322-3	1	Screw-HH
15	88-5500	1	Rod-Pedal, Pivot
17	88-4800-03	1	Bellcrank
18	3256-26	3	Washer-Flat
19	3296-47	1	Nut-Lock, NI
20	65-2920	1	Pad-Pedal
21	88-5000-03	1	Pedal-Clutch / Brake
22	322-9	1	Screw-HH
23	3256-23	2	Washer-Flat
24	3272-10	1	Pin-Cotter
25	99-6836	1	Spacer-Plastic

Ref	Part No.	Qty.	Description
26	3296-29	3	Nut-Lock, NI
27	3296-29	1	Nut-Lock, NI
28	3296-59	2	Nut-Lock, NI
29	88-5270	1	Rod-Clutch / Brake
30	88-6070	1	Arm-Idler
31	37-8770	1	Bolt-Shoulder
32	88-5560	1	Guide-Idler, Belt
33	104-4160	1	Pulley-Idler
34	323-10	1	Screw-HH
35	5-4460	1	Washer-Pivot
36	94-4926	1	Bracket-Belt, Guide
37	322-3	1	Screw-HH
38	3296-29	1	Nut-Lock, NI

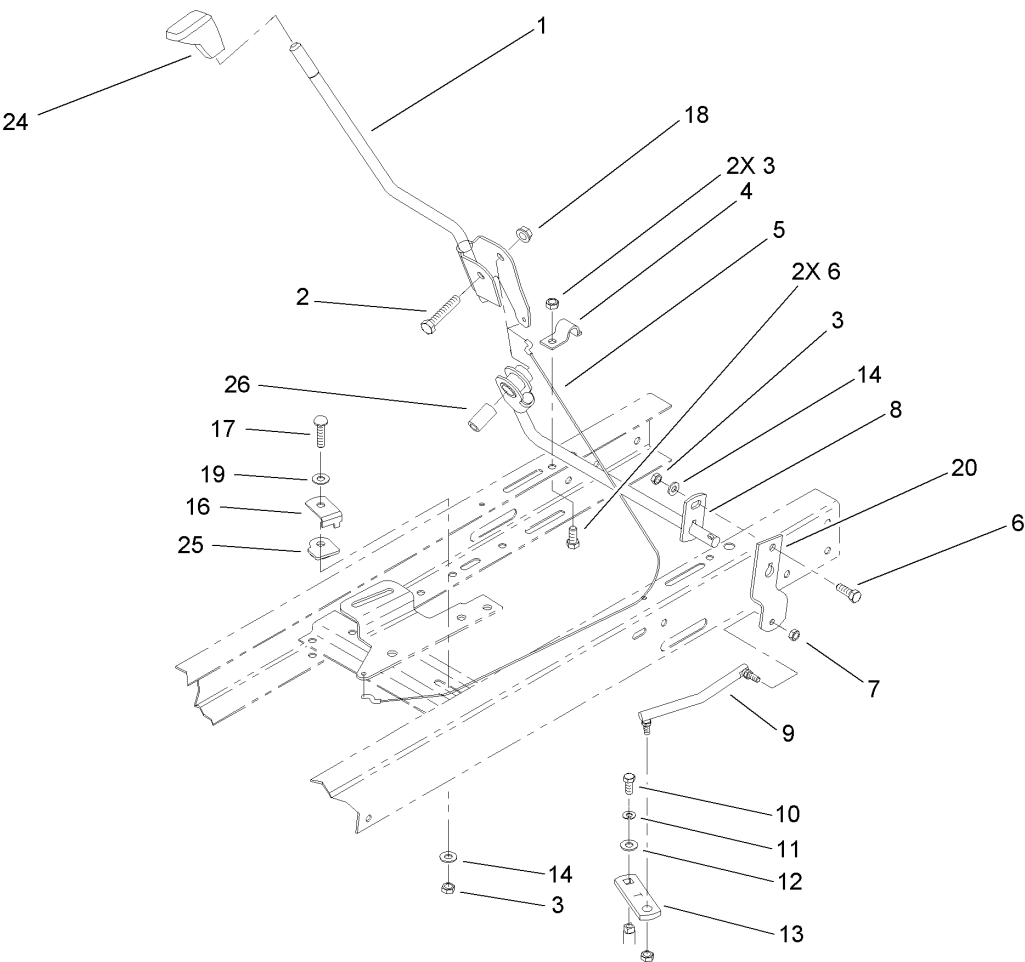 


Shifter Assembly

Ref	Part No.	Qty.	Description				
1	94-1991-03	1	Lever-Shift ASM				
2	323-10	1	Screw-HH				
3	3296-29	4	Nut-Lock, NI				
4	88-4810	2	Clamp-Shift, Pivot				
5	55-9321	1	Cable-Clutch				
6	322-3	3	Screw-HH				
7	3296-3	2	Nut-Lock				
8	94-1993-03	1	Shift Pivot ASM				
9	94-5432	1	Link-Shift				
10	329-23	1	Screw-HH				
11	3253-3	1	Washer-Lock				
12	7-5461	1	Spacer				
13	88-5340	1	Lever-Shift				
14	3256-23	2	Washer-Flat				
16	88-5930	1	Keeper-Cable				
17	3230-3	1	Screw-CARR				
18	3296-39	1	Nut-Lock, NI				
19	3256-25	1	Washer-Flat				
20	94-1968	1	Lever-Pivot, Shift				
24	94-5565	1	Knob-Shift				
25	84-5610	1	Guide-Cable				
26	94-1997	1	Bushing-Shift, Lever				

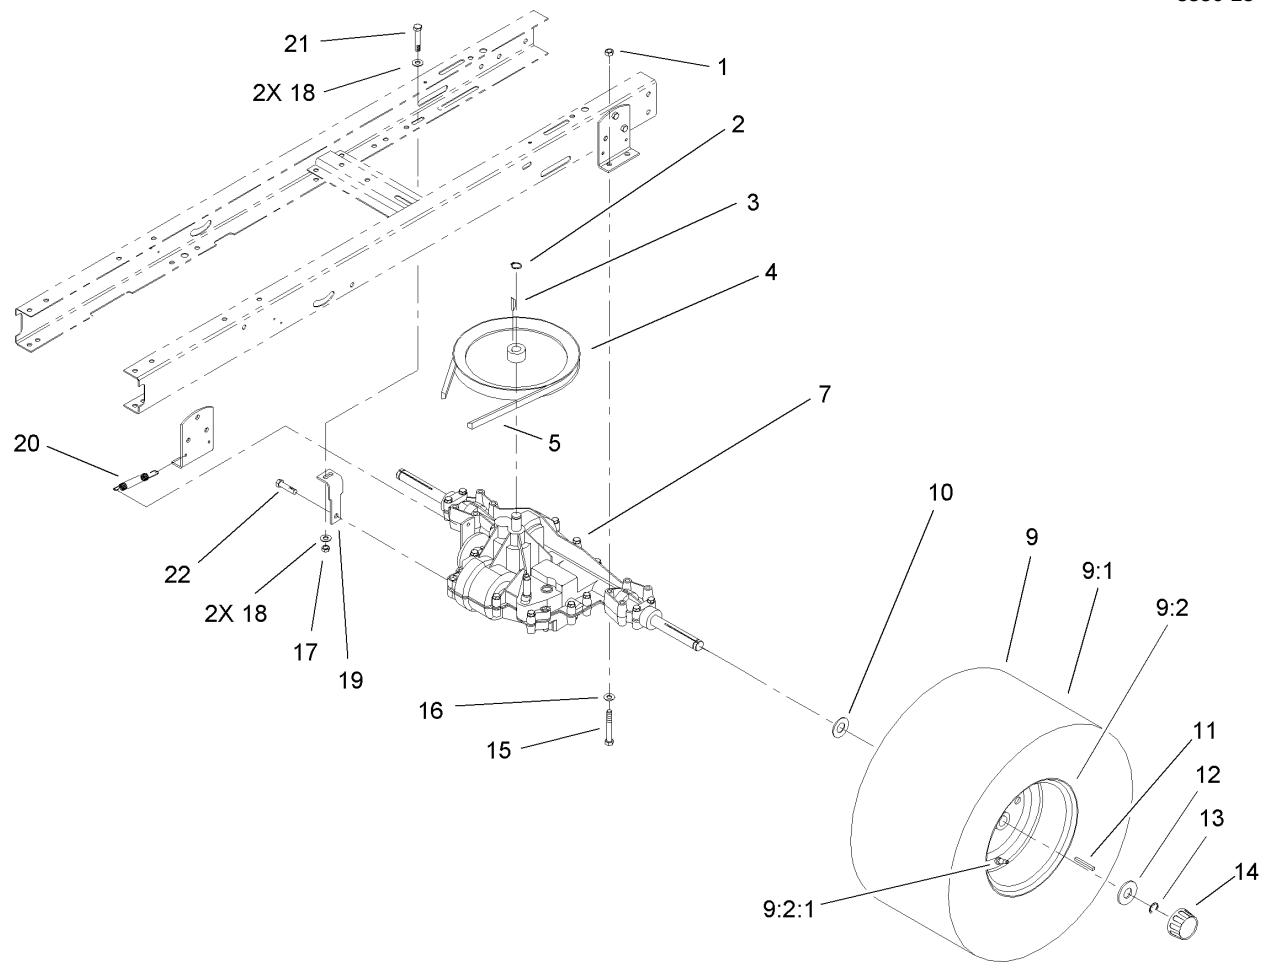 

5 Speed Transaxle Assembly


Ref	Part No.	Qty.	Description				
1	3296-29	4	Nut-Lock, NI				
2	32120-64	1	Ring-Snap, External				
3	3257-23	1	Key-Woodruff				
4	88-4840	1	Pulley-Transmission				
5	94-4291	1	V Belt-Traction				
7	94-6022	1	Transaxle				
29		2	Rear Wheel And Tire ASM				
9:1	99-2336	1	Tire				
9:2	88-4380	1	Rim ASM				
9:2:1	232-27	1	Stem-Valve				
9:99	231-91	1	Tube				
10	3-6498	2	Washer-Thrust				
11	7-0036	2	Key-Square				
12	28-2480	2	Washer				
13	32151-48	2	E-Ring				
14	61-9780	2	Cap-Hub				
15	322-12	4	Screw-HH				
16	3256-23	4	Washer-Flat				
17	3296-29	2	Nut-Lock, NI				
18	3256-23	4	Washer-Flat				
19	94-1969	2	Strap-Torque				
20	26-6701	1	Spring-Return, Brake				
21	322-3	2	Screw-HH				
22	32144-14	2	Screw-HWH				

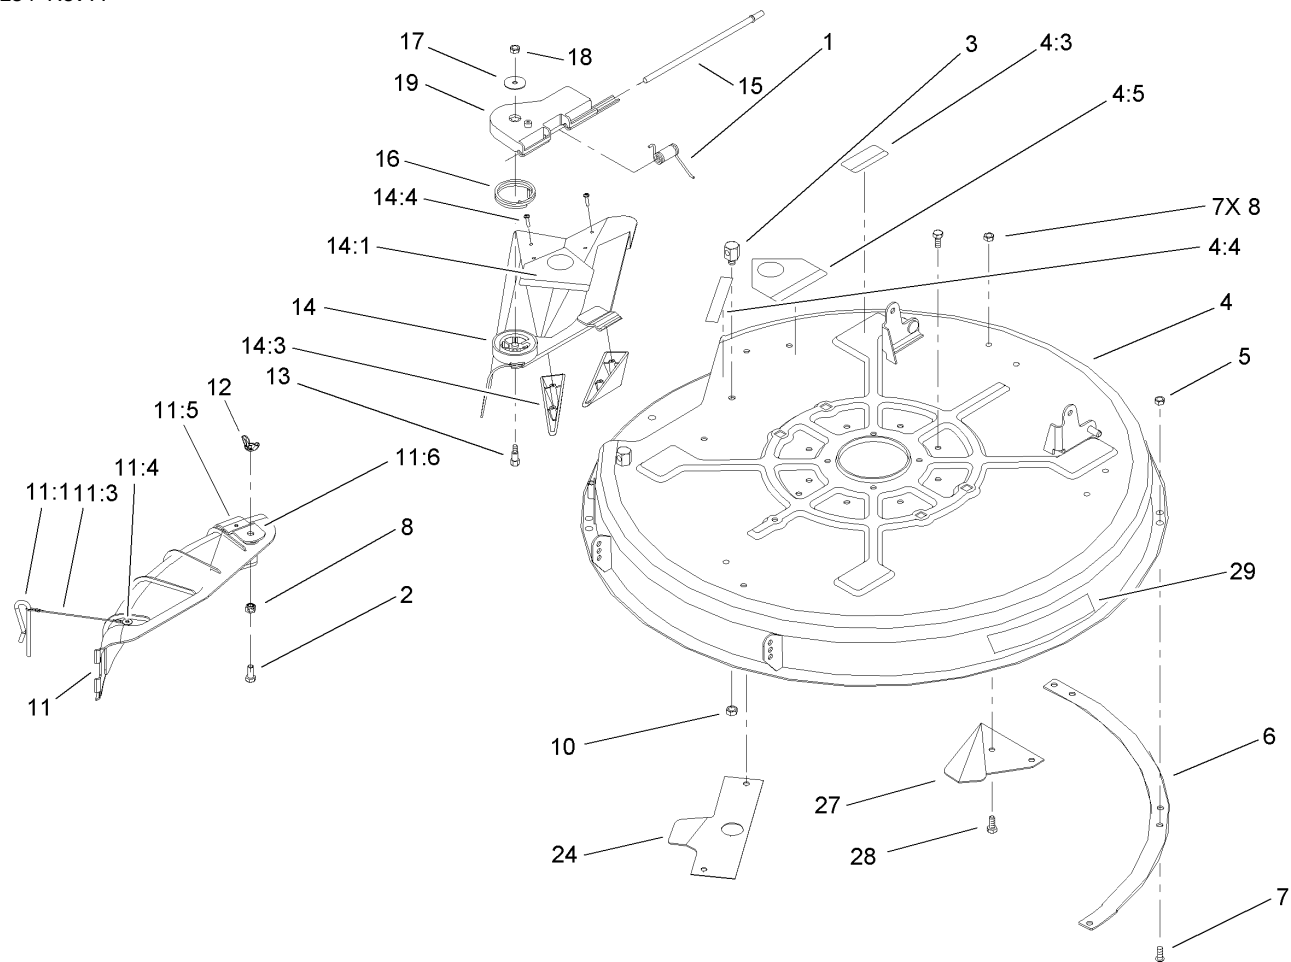 

32 Inch Deck Assembly

Ref	Part No.	Qty.	Description
1	92-2493	1	Spring
2	322-6	1	Screw-HH
3	28-7350	1	Post-Pivot
4	95-7483	1	Deck ASM
4:3	93-6674	2	Decal-Warning
4:4	93-7009	1	Decal-Danger
4:5	93-7010	2	Decal-Danger
5	3296-29	8	Nut-Lock, NI
6	80-4490-03	4	Ring-Deck
7	322-3	8	Screw-HH
8	3296-29	8	Nut-Lock, NI
10	3296-59	1	Nut-Lock, NI
11	82-6151	1	Discharge Cover ASM
11:1	28-8130	1	Pin-Locking, Chute
11:3	28-8070	1	Lanyard
11:4	3290-282	2	Rivet-Pop
11:5	3256-49	1	Washer-Flat
11:6	83-7010-03	1	Brace
12	32103-2	1	Nut-Wing
13	92-8916	1	Bolt-Shoulder
14	93-7694	1	32 Inch Deflector ASM
14:1	93-7010	1	Decal-Danger
14:3	93-7696	2	Kicker
14:4	93-0231	4	Screw-PPH


Ref	Part No.	Qty.	Description
15	88-6150	1	Rod-Hinge, Deflector
16	88-6160	1	Spring-Torsion
17	3256-58	1	Washer-Flat
18	3296-42	1	Nut-Lock, NI
19	88-4540	1	Pivot-Hinge, Deflector
24	92-2494-03	1	Ramp-Deflector
27	80-2630-03	4	Kicker
28	322-3	7	Screw-HH
29	106-6406	1	Decal-Recycler

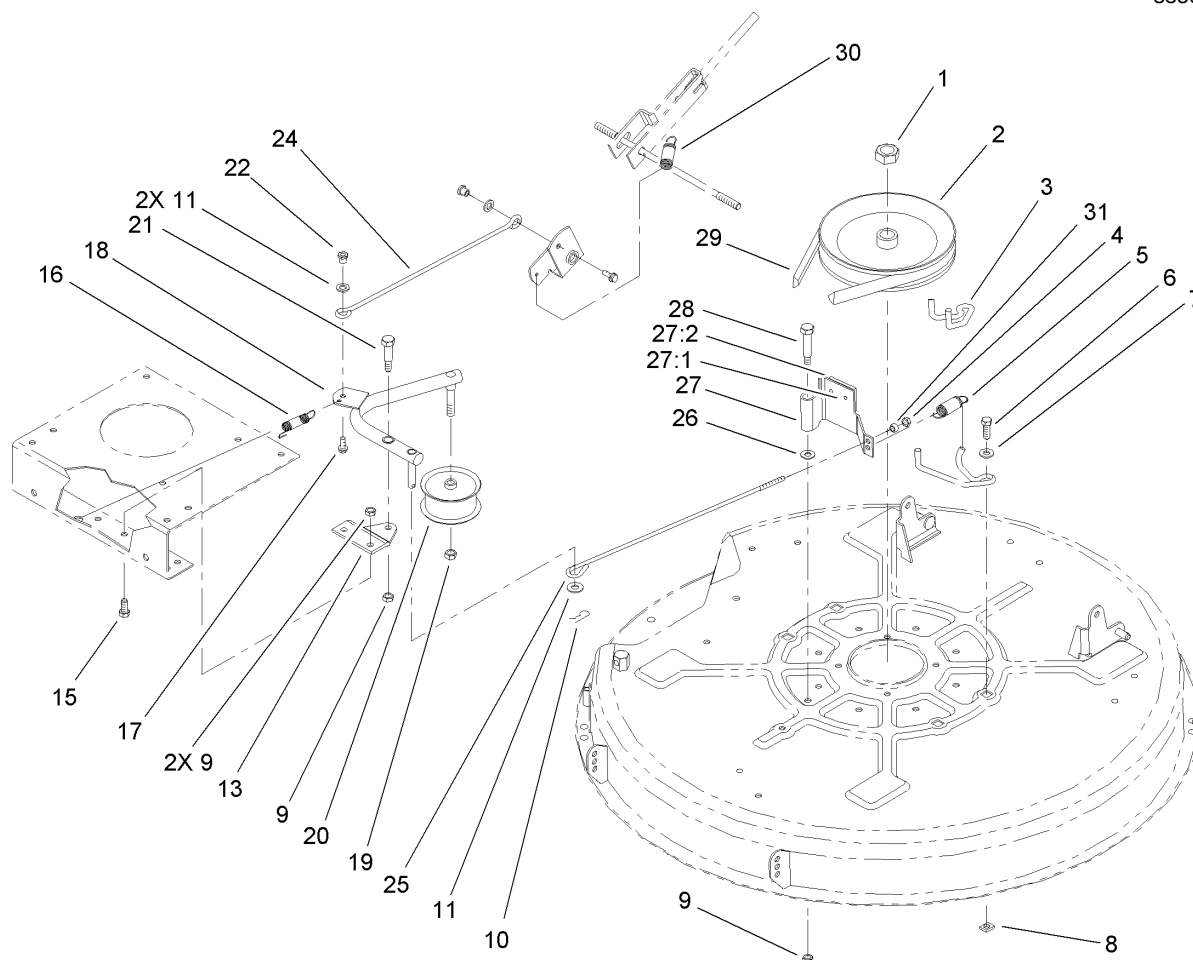 

32 Inch Deck Blade Drive and Brake Assembly


Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	88-5060	1	Pulley-Deck
3	88-5760	2	Guide-Belt, Deck
4	3296-42	1	Nut-Lock, NI
5	88-6330	1	Spring-Extension
6	322-5	2	Screw-HH
7	5-4460	2	Washer-Pivot
8	3290-496	2	Nut-Retainer
9	3296-29	4	Nut-Lock, NI
10	3290-307	1	Pin-Hair
11	3256-24	3	Washer-Flat
13	88-5370-03	1	Plate-Mounting, Idler
15	322-3	2	Screw-HH
16	26-6700	1	Spring-Return, Brake
17	3234-13	2	Screw-HHF
18	88-5850-03	1	Arm-Idler
19	3296-39	1	Nut-Lock, NI
20	56-9870	1	Pulley-Idler
21	7-0030	1	Bolt-Shoulder
22	47-4990	2	Post-Mounting, Linkage
24	88-5980	1	Rod-Engage, Deck
25	88-5690	1	Rod-Brake, Deck
26	3256-23	1	Washer-Flat
27	88-6110	1	Brake Arm ASM

Ref	Part No.	Qty.	Description
27:1	3290-282	2	Rivet-Pop
27:2	56-9830	1	Pad-Brake
28	88-4590	1	Bolt-Shoulder
29	88-6260	1	V-Belt
30	88-6420	1	Cable Spring ASM
31	67-0710	1	Ball-Swivel, Stop

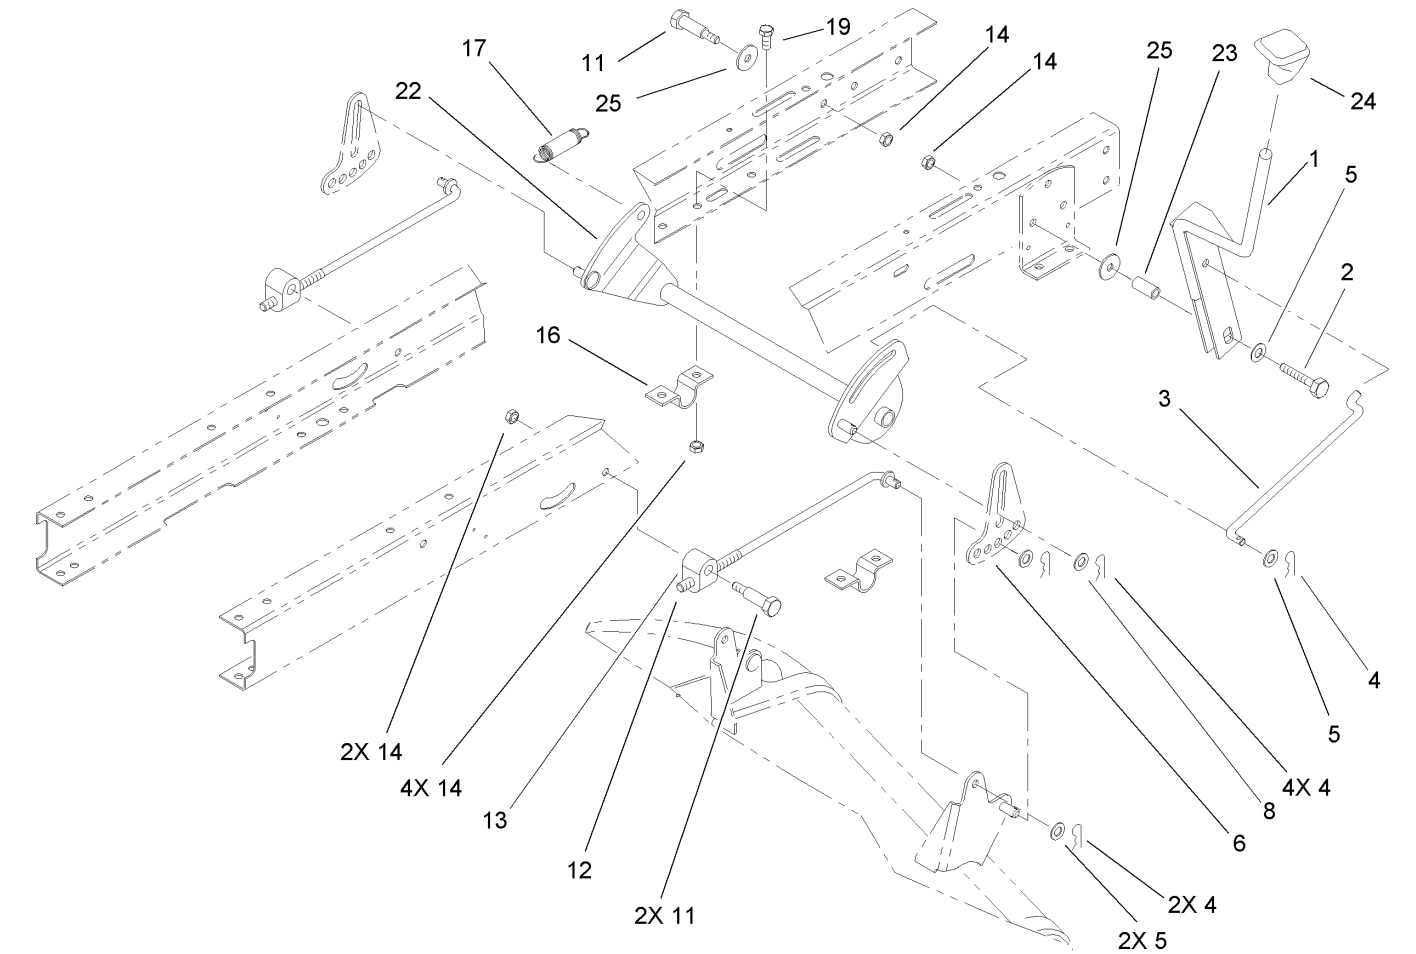 

Height-of-Cut Assembly


Ref	Part No.	Qty.	Description				
1	93-3822-03	1	Lever ASM				
2	322-32	1	Screw-HH				
3	88-5900	1	Link-HOC				
4	3290-307	7	Pin-Hair				
5	3256-24	4	Washer-Flat				
6	88-5570-03	2	Link-Adjusting, HOC				
8	80-6990	4	Washer-Hardened				
11	7-0030	3	Bolt-Shoulder				
12	88-5450	2	Rod-Hanger, Rear				
13	88-4230	2	Trunnion-HOC				
14	3296-29	8	Nut-Lock, NI				
16	88-4730	2	Clamp-Pivot, HOC				
17	88-6460	1	Spring-Extension				
19	322-3	4	Screw-HH				
22	88-5110-03	1	Pivot ASM				
23	65-7210	1	Spacer				
24	94-5565	1	Knob-Shift				
25	5-4460	2	Washer-Pivot				

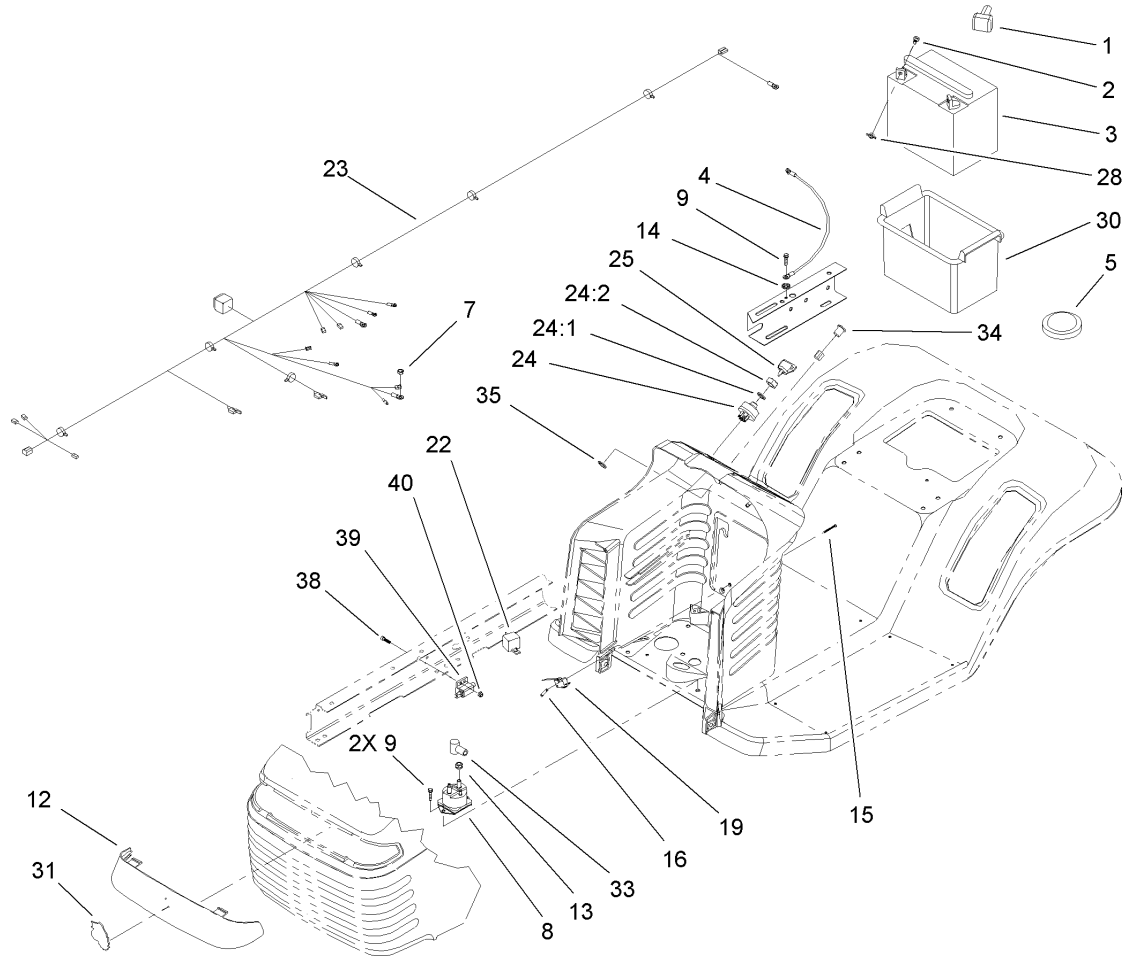 

Electrical Component Assembly


Ref	Part No.	Qty.	Description
1	28-8080	1	Boot-Terminal
2	321-4	2	Screw-HH
3	104-1755	1	Battery
4	44-8110	1	Wire ASM
5	100-3524	1	Switch-Seat
7	32149-2	1	Nut-Keps
8	106-8245	1	Solenoid
9	9266714	3	Screw-HWH
12	88-3960	1	Lens-Headlight
13	32149-2	2	Nut-Keps
14	3255-7	2	Washer-Lock / EXT
15	93-0539	2	Screw-HH
16	3290-354	1	Nut-Speed
19	88-9932	1	Switch-Micro
22	98-7249	1	Relay
23	106-6434	1	Harness-Wire
24	88-9830	1	Key Switch ASM
24:1	3254-5	1	Washer-Tooth
24:2	218-461	1	Nut-HH
25	63-8360	1	Key-Ignition
28	32103-22	2	Nut-Wing
30	88-4040	1	Box-Battery
31	95-4248	1	Decal
33	93-3190	1	Boot-Insulator, Terminal

Ref	Part No.	Qty.	Description
34	95-7652	1	Light-Indicator
35	32151-80	1	Nut-Push-On, Circular
38	3274-14	2	Screw-HSH
39	65-7410	1	Switch-Pole, Single
40	3296-2	2	Nut-Lock

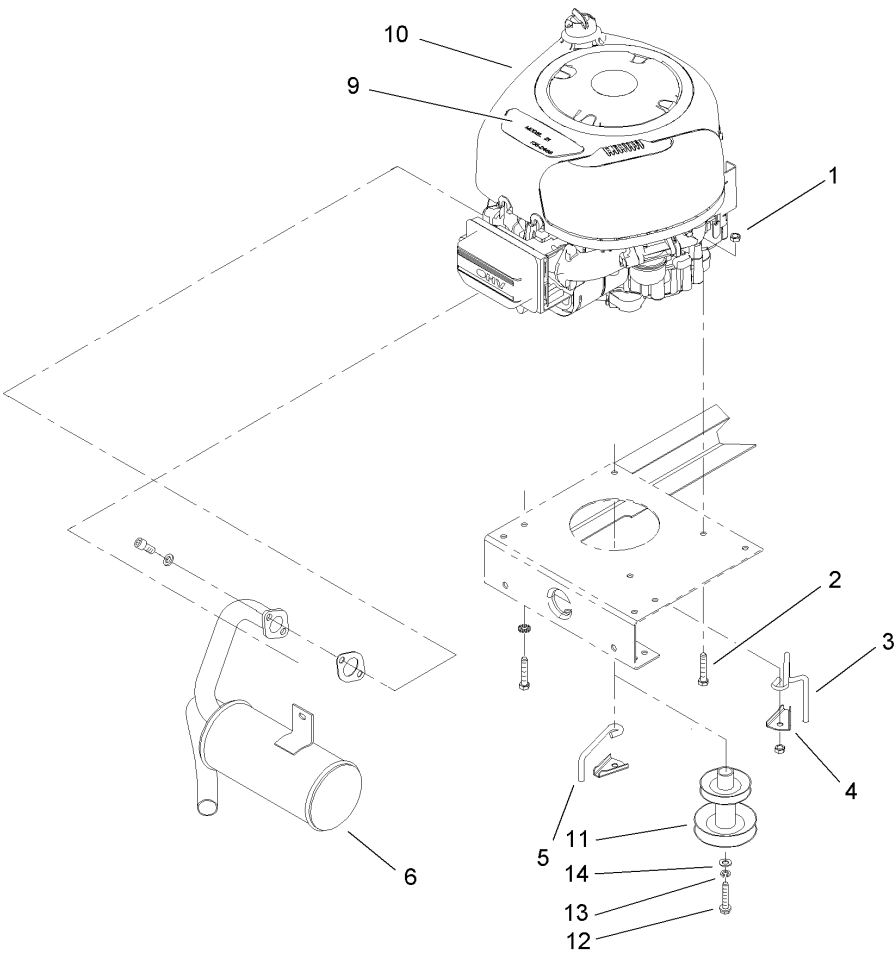 

Engine Assembly


Ref	Part No.	Qty.	Description				
1	3296-29	3	Nut-Lock, NI				
2	322-9	4	Screw-HH				
3	88-6060	1	Guide-Belt, LH				
4	76-3820	2	Anchor-Guide, Belt				
5	88-5490	1	Guide-Belt, RH				
6	105-2461	1	Muffler-Exhaust				
9	107-4904	1	Decal-Engine, Intek				
2 10		1	Engine-Briggs And Stratton, 21A907-0169-E1				
11	88-5050	1	Pulley-Engine				
12	62-3760	1	Screw-HH				
13	3253-22	1	Washer-Lock				
14	3256-25	1	Washer-Flat				

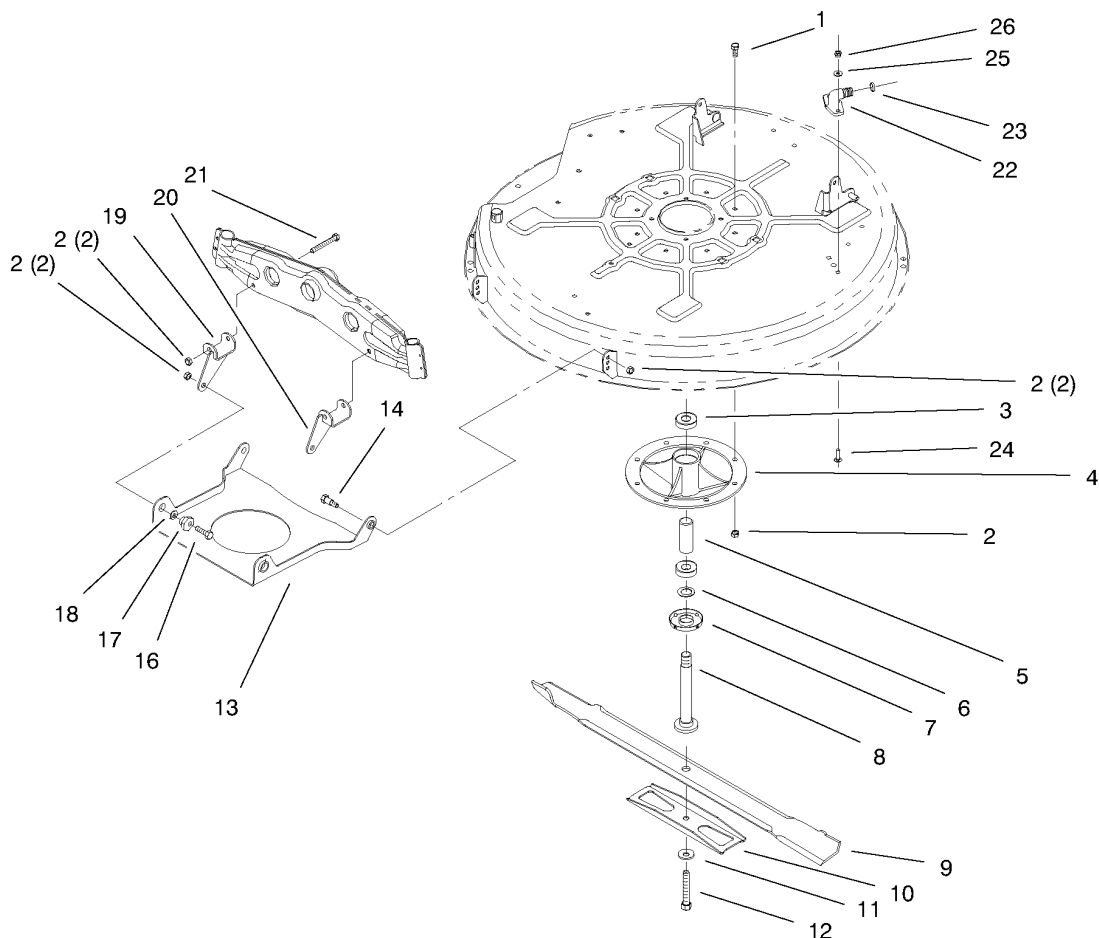 

32 Inch Deck Component Assembly

Ref	Part No.	Qty.	Description
1	322-3	8	Screw-HH
2	3296-29	14	Nut-Lock, NI
3	251-297	2	Bearing-Ball
4	56-7030	1	Spindle
5	83-7020	1	Spacer-Bearing
6	80-4390	1	Spacer-Hardned
7	80-4370	1	Shield-Bearing
8	80-4350	1	Shaft-Spindle
9	80-4430	1	Blade-Recycler
10	80-4570-03	1	Stiffener
11	3290-465	1	Washer-Belleville
12	26-0671	1	Screw-Blade
13	88-4940-03	1	Suspension-Pan, Front
14	28-0540	2	Bolt-Shoulder
16	322-6	2	Screw-HH
17	106661	2	Cam
18	3256-23	2	Washer-Flat
19	88-5640-03	1	Bracket-RH
20	88-5650-03	1	Bracket-LH
21	322-12	2	Screw-HH
22	95-2747	1	Fitting-Washout
23	46-6290	1	O-Ring
24	3229-1	2	Screw-CARR
25	3256-1	2	Washer-Flat

Ref	Part No.	Qty.	Description
26	3296-16	2	Nut-Lock, NI

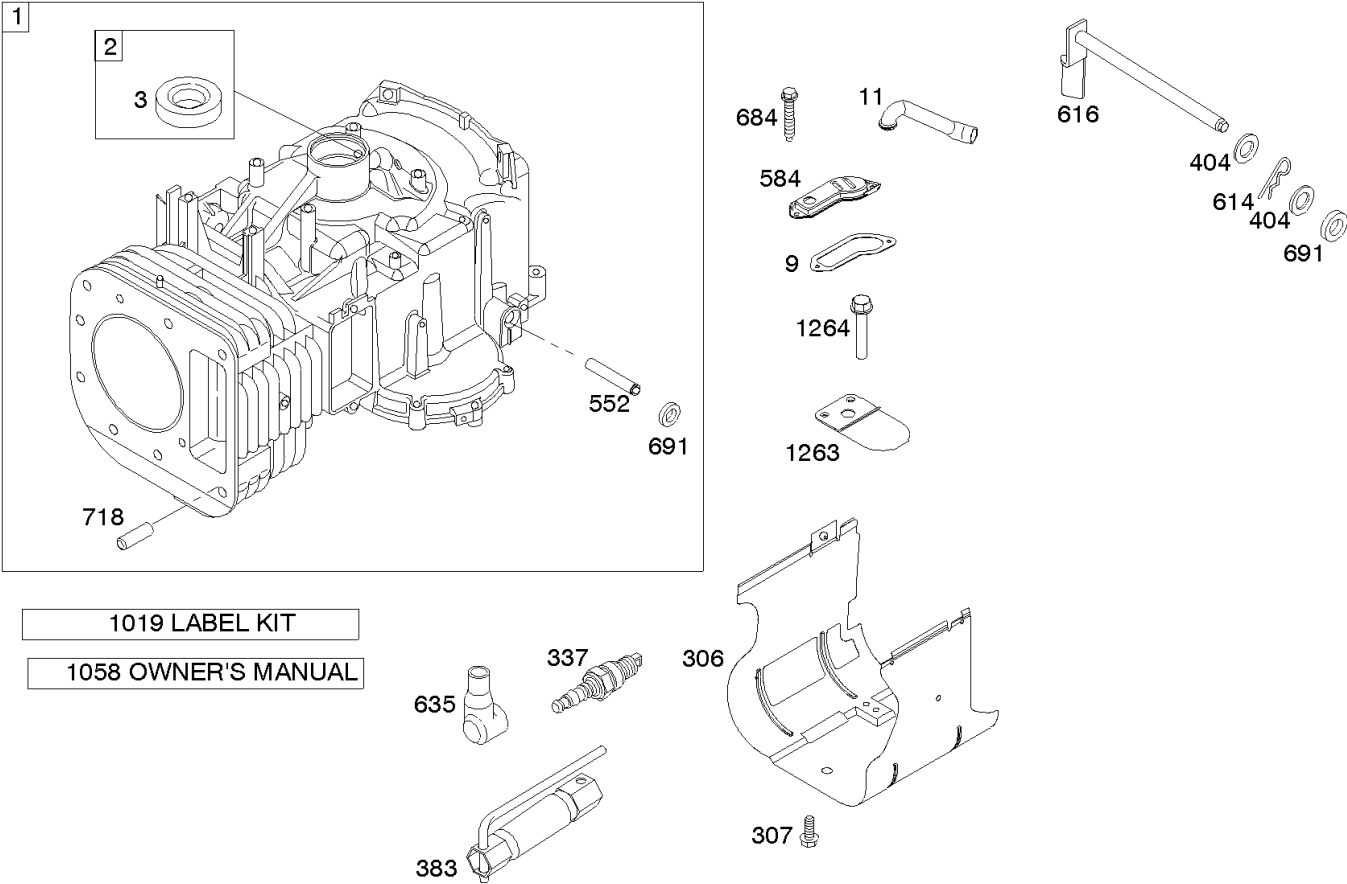 


Assemblies include all parts shown in frames.

Cylinder Assembly

Briggs and Stratton 21A907-0169-E1

Ref	Part No.	Qty.	Description				
1	697377	1	Cylinder ASM				
2	399265	1	Bushing / Seal Kit (Magneto Side)				
3	391086	1	Seal-Oil				
9	697109	1	Gasket-Breather				
11	697113	1	Tube-Breather				
306	697359	1	Shield-Cylinder				
307	691003	1	Screw				
337	691043	1	Spark Plug				
383	89838	1	Wrench-Plug, Spark				
404	691691	1	Washer				
552	697144	1	Bushing-Crank, Governor				
584	697112	1	Cover-Passage, Breather				
614	691620	1	Pin-Cotter				
616	692012	1	Crank-Governor				
635	691909	1	Boot-Plug, Spark				
684	697157	1	Screw				
691	692407	1	Seal-Shaft, Governor				
718	690959	1	Pin-Locating				
1019	697143	1	Label Kit				
1058	MS6673	1	Owner's Manual				
1263	697124	1	Reed-Breather				
1264	697104	1	Screw				
160	697740	1	Short Block				



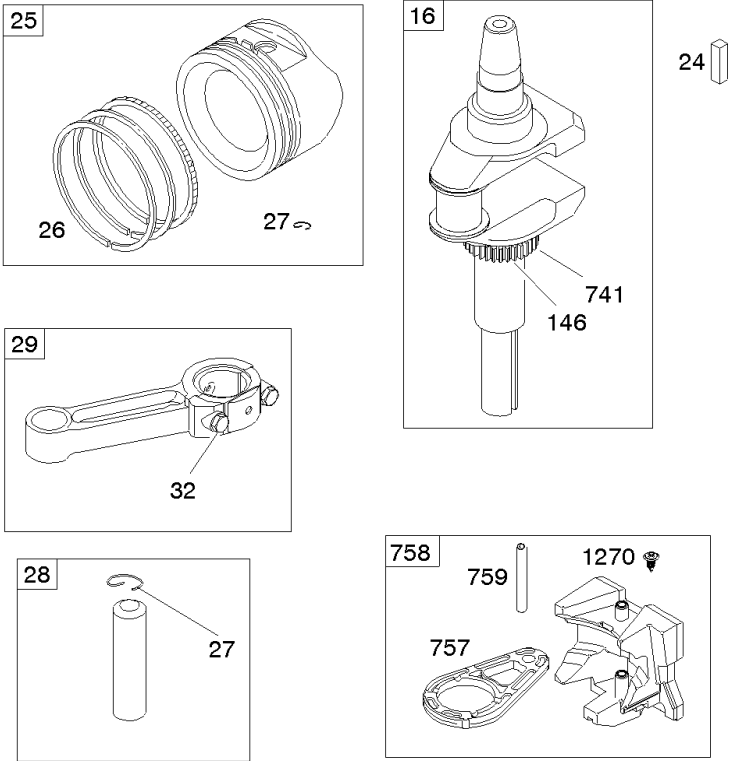 


Assemblies include all parts shown in frames.

Crankshaft Assembly

Briggs and Stratton 21A907-0169-E1

Ref	Part No.	Qty.	Description				
16	697390	0	Crankshaft				
24	222698	0	Key				
25	698371	0	Piston ASM (Standard)				
25	698373	0	Piston ASM (.020In Oversize)				
26	698375	0	Ring Set (Standard)				
26	698377	0	Ring Set (.020In Oversize)				
27	698469	0	Lock-Pin, Piston				
28	697099	0	Pin-Piston (Standard)				
29	697364	0	Rod-Connecting (Standard)				
32	692852	0	Screw (Connecting Rod)				
146	691639	0	Key-Timing				
741	697128	0	Gear-Timing				
757	697607	0	Link-Counterweight				
758	697391	0	Counterweight				
759	697392	0	Pin-Counterweight				
1270	697156	0	Plug-Counterweight, Avs				

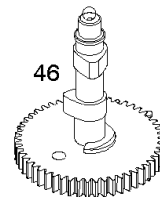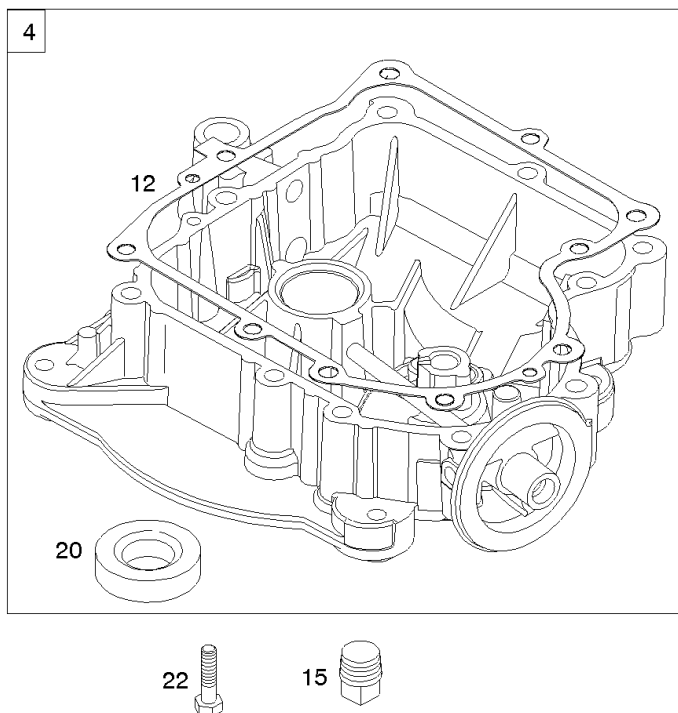   


Assemblies include all parts shown in frames.

Crankcase Assembly

Briggs and Stratton 21A907-0169-E1


Ref	Part No.	Qty.	Description				
64	697106	1	Sump-Engine				
6612	697110	1	Gasket-Crankcase				
615	690946	1	Plug-Drain, Oil				
6620	690947	1	Seal-Oil				
622	692125	1	Screw				
643	691968	1	Slinger-Governor / Oil				
646	699016	1	Camshaft				

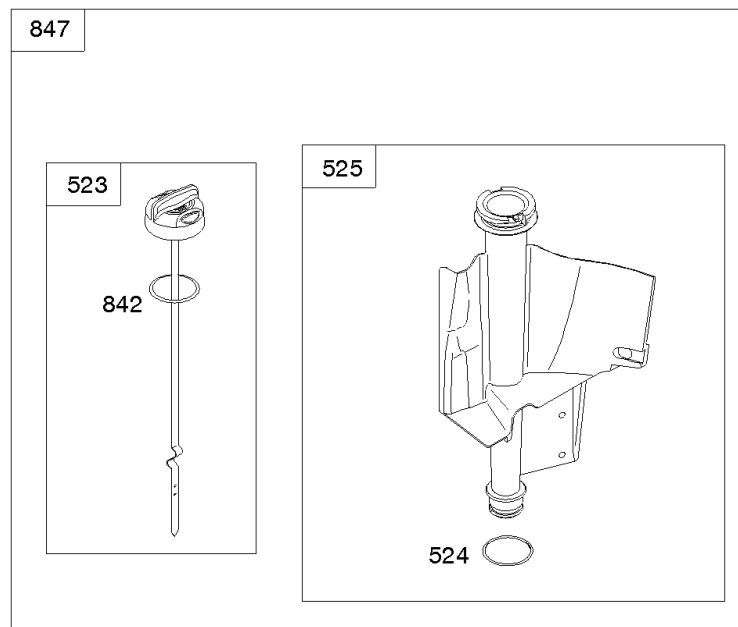 

Assemblies include all parts shown in frames.

Oil Filter, Tube and Pump Assembly Briggs and Stratton 21A907-0169-E1

Ref	Part No.	Qty.	Description				
6523	697086	1	Dipstick				
6524	691032	1	Seal				
6525	697184	1	Tube-Dipstick				
6842	691031	1	Seal-O Ring				
6847	697611	1	Dipstick And Tube ASM				

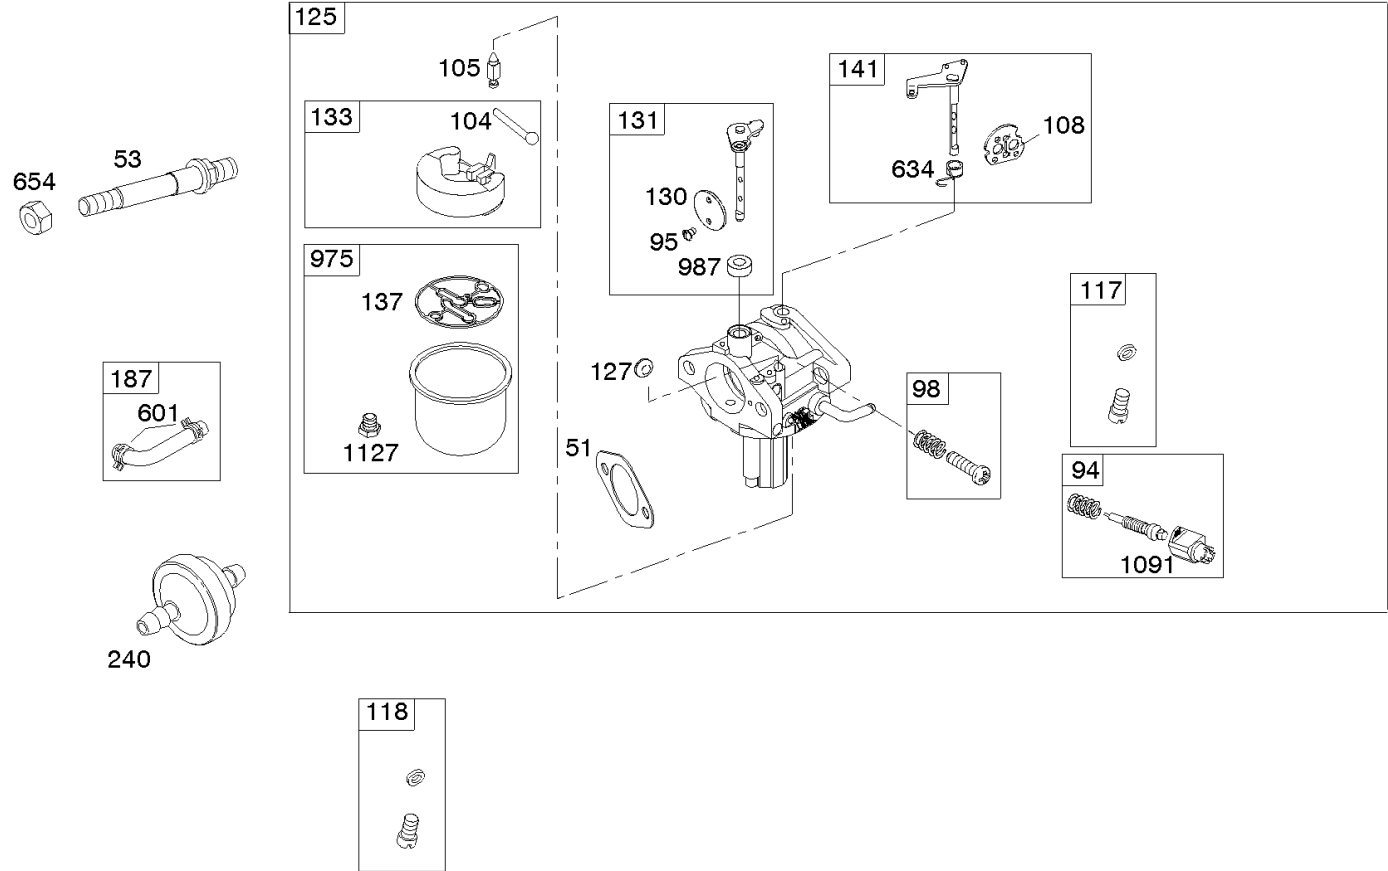 


Assemblies include all parts shown in frames.

Carburetor Assembly

Briggs and Stratton 21A907-0169-E1

Ref	Part No.	Qty.	Description
⑤④51	692137	0	Gasket-Intake
⑤⑥			
⑥53	690227	1	Stud
⑥94	695425	1	Idle Mixture Kit
⑤⑥95	690718	1	Screw
⑥98	695408	1	Idle Speed Kit
⑤⑥104	694918	1	Pin-Hinge, Float
⑤⑥105	696136	1	Valve-Needle, Float
⑥108	698773	1	Valve-Choke (Manual Choke)
⑤⑥117	698784	1	Jet-Main (Standard)
⑥118	698788	1	Jet-Main (High Altitude)
⑥125	698772	1	Carburetor
⑤⑥127	690727	1	Plug-Welch
⑥130	698774	1	Valve-Throttle
⑥131	698776	1	Throttle Shaft Kit
⑥133	694914	1	Pin-Hinge, Float
⑤⑥137	698781	1	Gasket-Bowl, Float
⑥141	698778	1	Choke Shaft Kit
⑥187	697098	1	Line-Fuel (Cut To Required Length)
⑥240	394358	1	Filter-Fuel
⑥601	95162	1	Clamp-Hose
⑤⑥634	698779	1	Spring / Seal ASM
⑥654	690958	1	Nut

Ref	Part No.	Qty.	Description
⑥975	698783	1	Bowl-Float
⑥987	698777	1	Seal-Shaft, Throttle
⑥1127	695407	1	Screw-Float Bowl (Bottom Of Bowl)
⑥1091	691333	1	Cap-Limiter

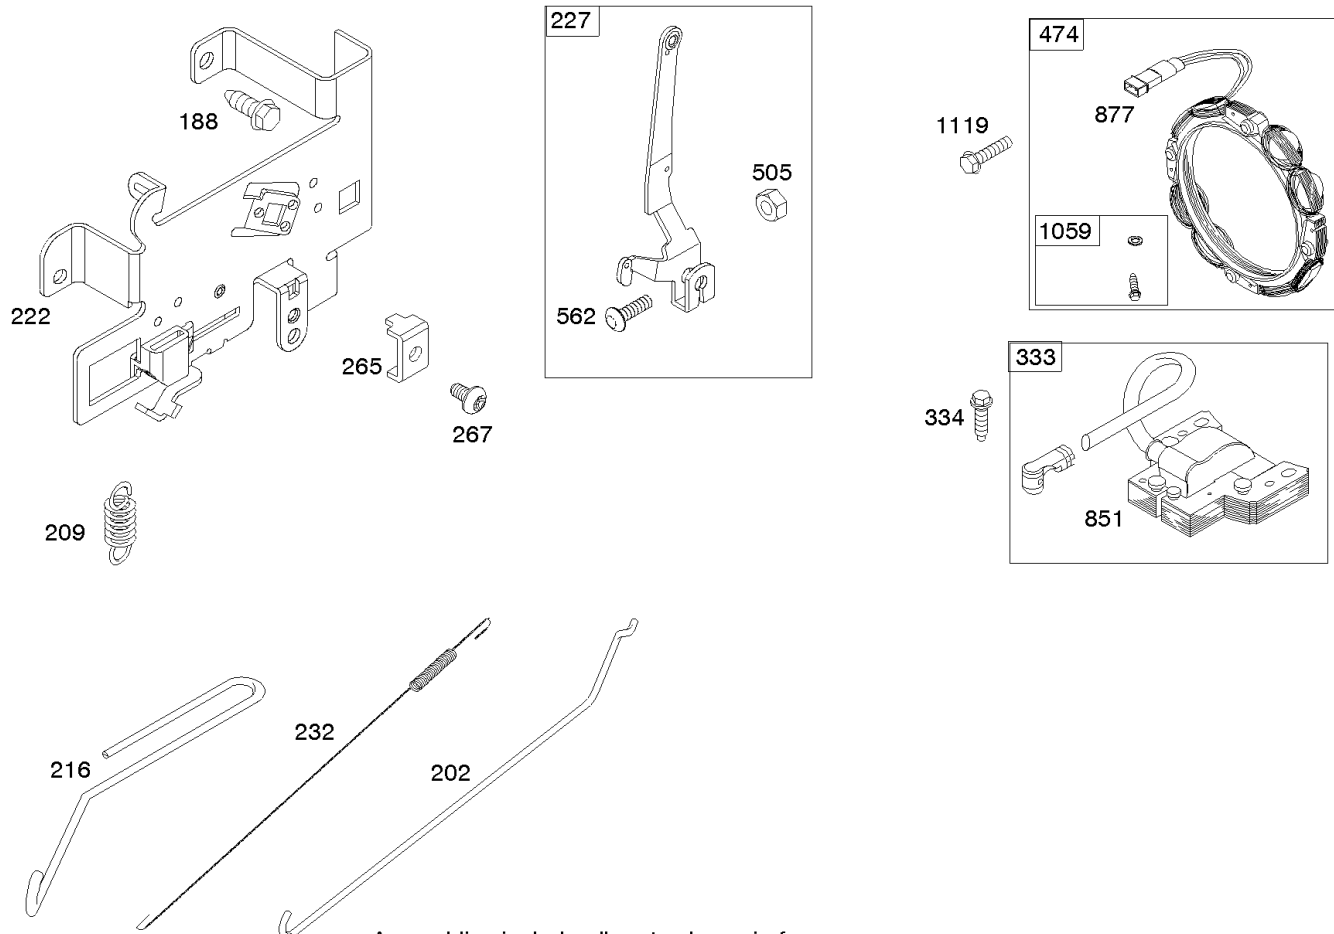 


Assemblies include all parts shown in frames.

Governor Assembly
Briggs and Stratton 21A907-0169-E1

Ref	Part No.	Qty.	Description				
⑥188	691693	1	Screw				
⑥202	691841	1	Link-Governor, Mechanical				
⑥209	692208	1	Spring-Governor				
⑥216	691840	1	Link-Choke				
⑥222	694042	1	Bracket-Control				
⑥227	691374	1	Lever-Control, Governor				
⑥232	691842	1	Spring-Link, Governor				
⑥265	691024	1	Clamp-Casing				
⑥267	695134	1	Screw				
⑥333	492341	1	Armature-Magneto				
⑥334	691061	1	Screw				
⑥474	696459	1	Alternator				
⑥505	691251	1	Nut				
⑥562	691119	1	Screw				
⑥851	493880	1	Terminal-Spark Plug				
⑥877	393456	1	Wire-Connector / Alternator				
⑥1119	691183	1	Screw				
⑥1059	698516	1	Screw / Washer Kit				

 304

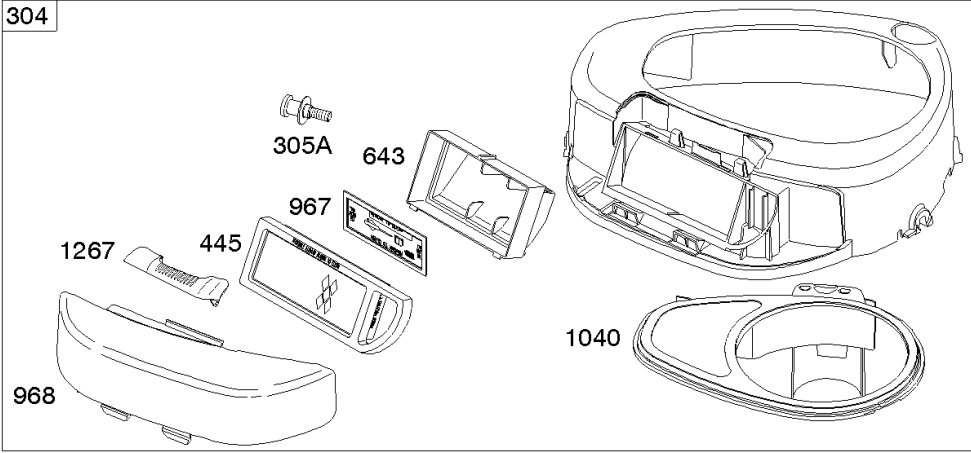

1044

 
74

73

305


75

356

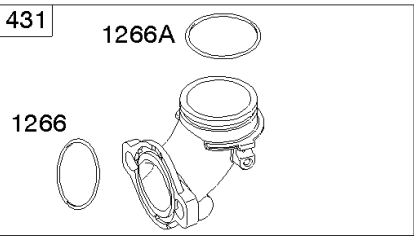

1005

 23

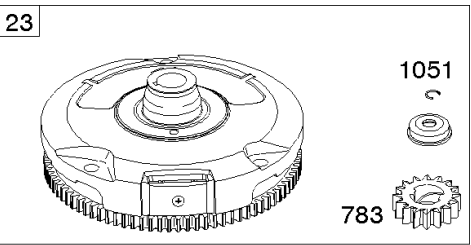

1036 LABEL-EMISSION

37

363


Assemblies include all parts shown in frames.

Blower Housing Assembly

Briggs and Stratton 21A907-0169-E1



Ref	Part No.	Qty.	Description
23	698281	1	Flywheel
37	697352	1	Guard-Flywheel
73	697133	1	Screen-Rotating
74	697897	1	Screw
75	690582	1	Washer-Flywheel
78	691003	1	Screw
304	697137	1	Housing-Blower
305	697102	1	Screw
305A	697103	1	Screw
356	690807	1	Wire-Stop
363	19203	1	Puller-Flywheel
431	697122	1	Elbow-Intake
445	697014	1	Filter-Air Cleaner Cartridge
643	698413	1	Retainer-Air Filter
783	693713	1	Gear-Pinion
967	697292	1	Filter-Pre Cleaner
968	697420	1	Cover-Air Cleaner
1005	699044	1	Fan-Flywheel
1036	697221	1	Decal-Emission
1040	698368	1	Plate-Trim
1044	698139	1	Screw
1051	691265	1	Ring-Retaining
1266	691917	1	Seal-O Ring
1266A	697123	1	Seal-O Ring

Ref	Part No.	Qty.	Description
1267	697419	1	Latch-Housing, Blower

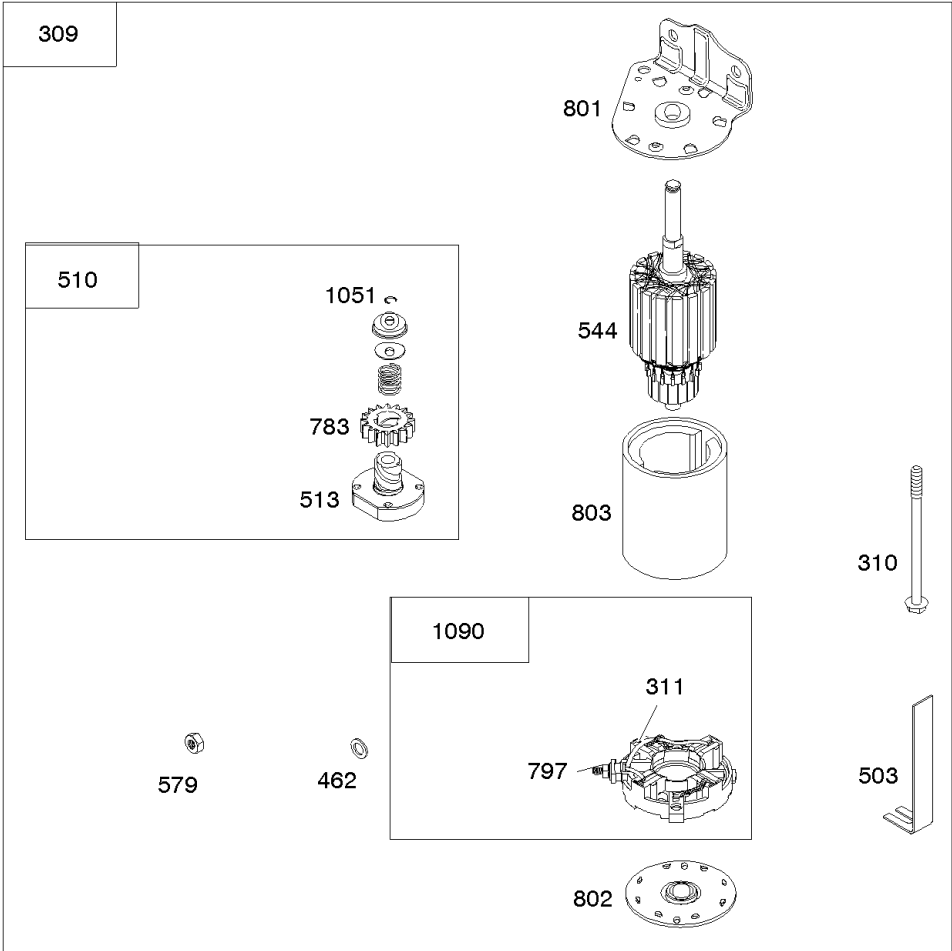 

Starter Assembly
Briggs and Stratton 21A907-0169-E1

Ref	Part No.	Qty.	Description				
309	693551	1	Motor-Starter				
310	690323	1	Bolt				
311	497608	1	Brush Set				
462	691261	1	Washer				
503	691532	1	Strap-Starter				
510	693699	1	Drive-Starter				
513	692024	1	Clutch-Drive				
544	692034	1	Armature-Starter				
579	691029	1	Nut				
697	690372	1	Screw				
729	691224	1	Clip-Wire				
783	693713	1	Gear-Pinion				
797	693167	1	Nut				
801	691283	1	Cap-Drive				
802	691286	1	Cap-End				
803	693757	1	Housing-Starter				
1051	691265	1	Ring-Retaining				
1090	691293	1	Retainer-Brush				

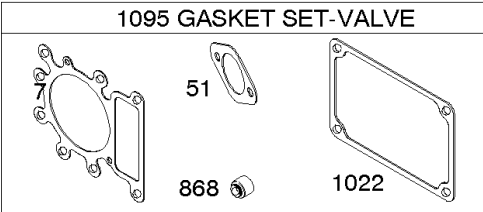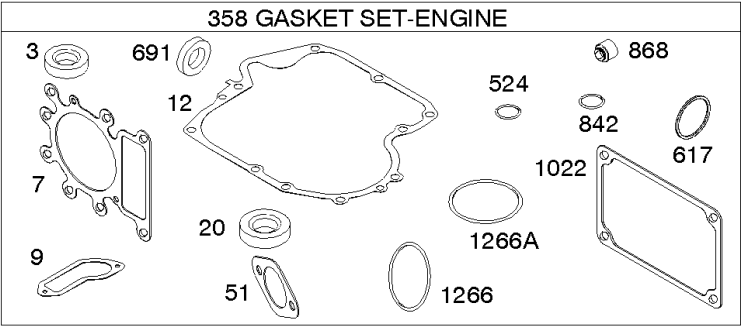  


Assemblies include all parts shown in frames.

Gasket Assembly

Briggs and Stratton 21A907-0169-E1

Ref	Part No.	Qty.	Description				
363	391086	1	Seal-Oil (Magneto Side)				
3476	273280	1	Gasket-Head, Cylinder				
369	697109	1	Gasket-Breather				
3612	697110	1	Gasket-Crankcase				
3620	690947	1	Seal-Oil (PTO Side)				
345166	692137	1	Gasket-Intake				
6358	697151	1	Engine Gasket Set				
3461766	692138	1	Seal-O Ring (Intake Manifold)				
36524	691032	1	Seal-O Ring (Dipstick Tube)				
36691	692407	1	Seal-Shaft, Governor				
36842	691031	1	Seal-O Ring Seal (Dipstick Tube)				
348686	690968	1	Seal-Valve				
3410226	272475	1	Gasket-Cover, Rocker				
361095	691581	1	Valve Gasket Set				
3512666	691917	1	Seal-O Ring (Intake Elbow)				
351266A6	697123	0	Seal-O Ring (Intake Elbow)				

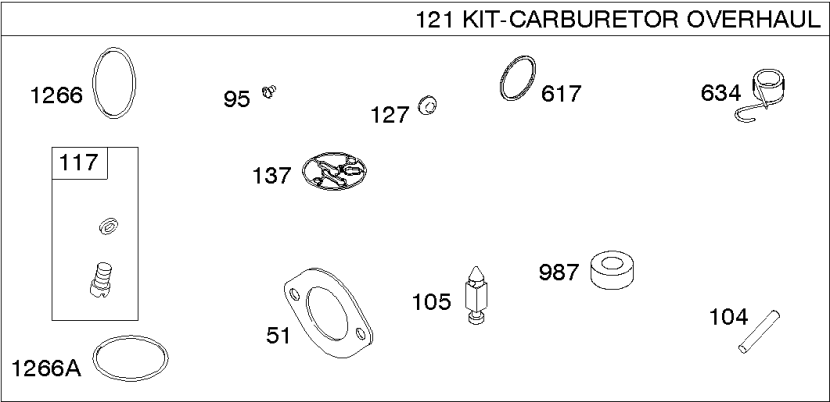 

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly
Briggs and Stratton 21A907-0169-E1

Ref	Part No.	Qty.	Description				
3451 56	692137	0	Gasket-Intake				
5695	690718	1	Screw				
56104	694918	1	Pin-Hinge, Float				
56105	696136	1	Valve-Needle, Float				
56117	698784	1	Jet-Main (Standard)				
56121	697154	1	Carburetor Overhaul Kit				
56127	690727	1	Plug-Welch				
56137	698781	1	Gasket-Bowl, Float				
35617 6	692138	1	Seal				
56634	698779	1	Spring / Seal ASM				
56987	698777	1	Seal-Shaft, Throttle				
351266 6	691917	0	Seal-O Ring				
351266A 6	697123	1	Seal-O Ring				

Attachments and Accessories

For 71209 - XL 320 Lawn Tractor

Product Name	Model/Part
Tire Chains	47-7220
8 Inch Rear Wheel Weight Kit	59159
32 Inch Recycler Kit	59167
9.0 cu. ft. Twin Bagger	79086
6.0 cu. ft. Easy-Empty Grass Catcher	79096
10 cu. ft. Dump Cart	79901
Sunshade	79913
10 cu. ft. Poly Dump Cart	79935
Folding Loading Ramp	79949
Sweeper	79985
Tractor Rack	79990
Headlight Kit	92-6301
Tower Kit	98-9880

NOTES

NOTES

NOTES

