



Right-Hand Axle End Assembly

Groundsmaster® 4500-D/4700-D

Reelmaster® 6500-D/6700-D Traction Unit

Model No. 106-1150

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers


Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

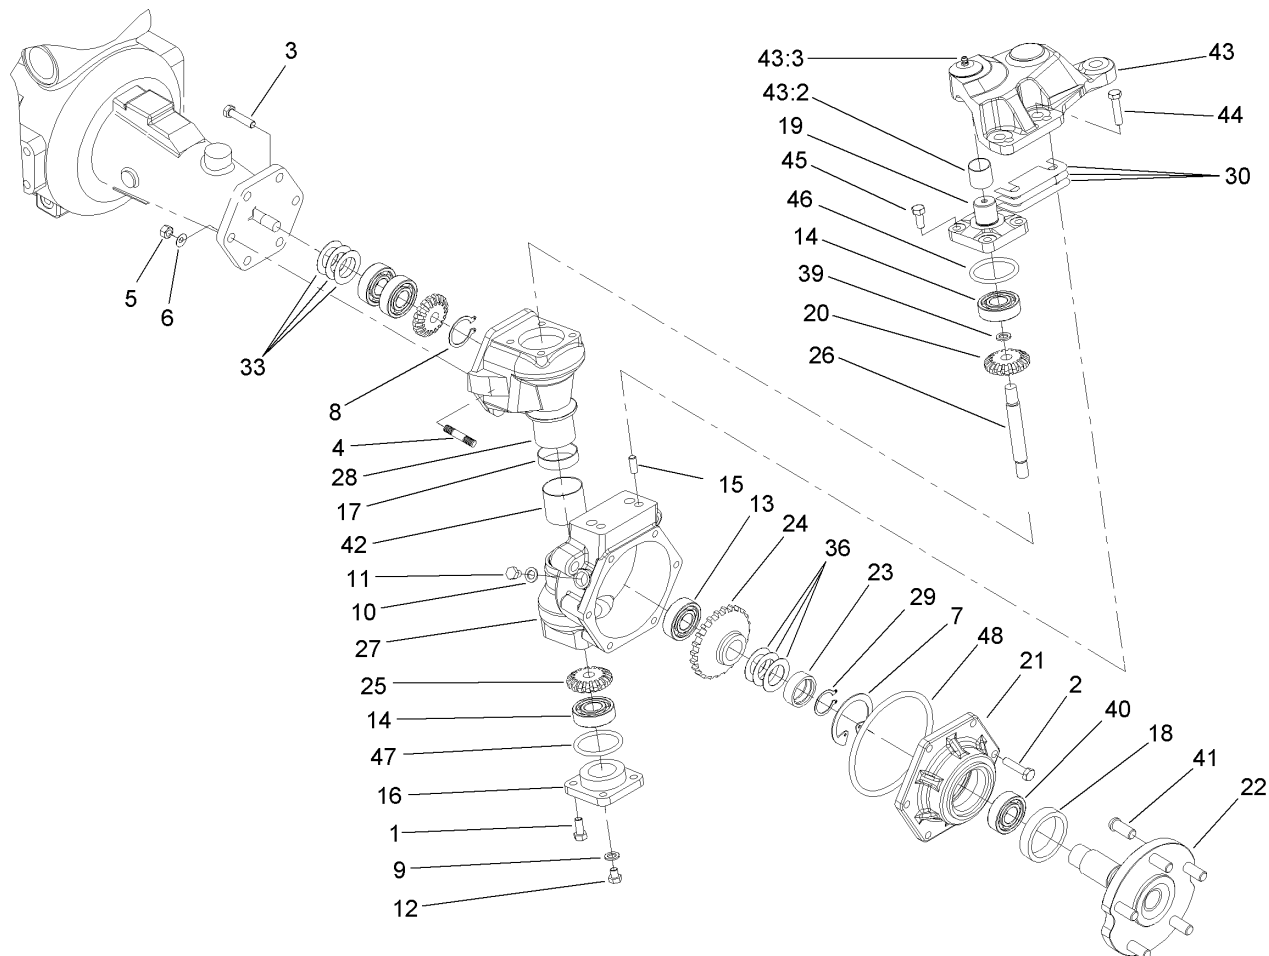

Right-Hand Axle End Assembly

Ref	Part No.	Qty.	Description
1	100-2562	4	Bolt
2	99-7596	6	Bolt
3	99-7599	4	Bolt
4	99-7525	2	Stud
5	99-7526	2	Nut
6	99-7527	2	Washer-Spring
7	99-7539	1	Clip
8	99-7531	1	Clip
9	99-7590	2	Washer-Seal
10	99-7536	1	Washer-Seal
11	99-7535	1	Plug
12	99-7589	2	Plug
13	99-7534	1	Bearing-Ball
14	99-7532	2	Bearing-Roller, Taper
15	99-7597	2	Pin-Dowel
16	100-2560	1	Cover
17	110-4754	1	Seal-Oil
18	99-7564	1	Seal-Oil
19	104-2373	1	Knuckle
20	95-7519	1	Gear-Bevel, 17 Tooth
21	95-7521	1	Cover-Axle
22	95-7522	1	Axle
23	95-7523	1	Spacer
24	95-7524	1	Gear-Bevel, 29 Tooth

Ref	Part No.	Qty.	Description
25	95-7527	1	Gear-Bevel, 17 Tooth
26	110-4753	1	Shaft-Gear, Bevel
27	110-4751	1	Case-Axle
28	110-4752	1	Case-Gear, Bevel
29	95-7544	2	Clip
30	95-7547	1	Shim 0.1
30	95-7548	1	Shim 0.2
30	95-7549	1	Shim 0.4
33	99-7552	1	Shim 0.1
33	99-7553	1	Shim 0.2
33	99-7554	1	Shim 0.5
36	99-7555	1	Shim 0.3
36	99-7556	1	Shim 0.2
36	99-7557	1	Shim 0.5
39	99-7558	1	Collar
40	99-7561	1	Bearing-Ball
41	99-7563	5	Stud
42	104-2378	1	Bushing
43	100-3766	1	RH Steering Arm ASM
43:2	104-8634	1	Bushing
43:3	106-1104	2	Fitting-Grease
44	104-2375	2	Bolt
45	104-2374	4	Bolt
46	106-1069	1	O-Ring



Ref	Part No.	Qty.	Description
47	106-1070	1	O-Ring
48	106-1071	1	O-Ring

