


TORO®

MODEL NO. 22042-1000001 & UP
MODEL NO. 22685-1000001 & UP

PARTS CATALOG

21" RWD LANDSCAPER™ REAR BAGGER

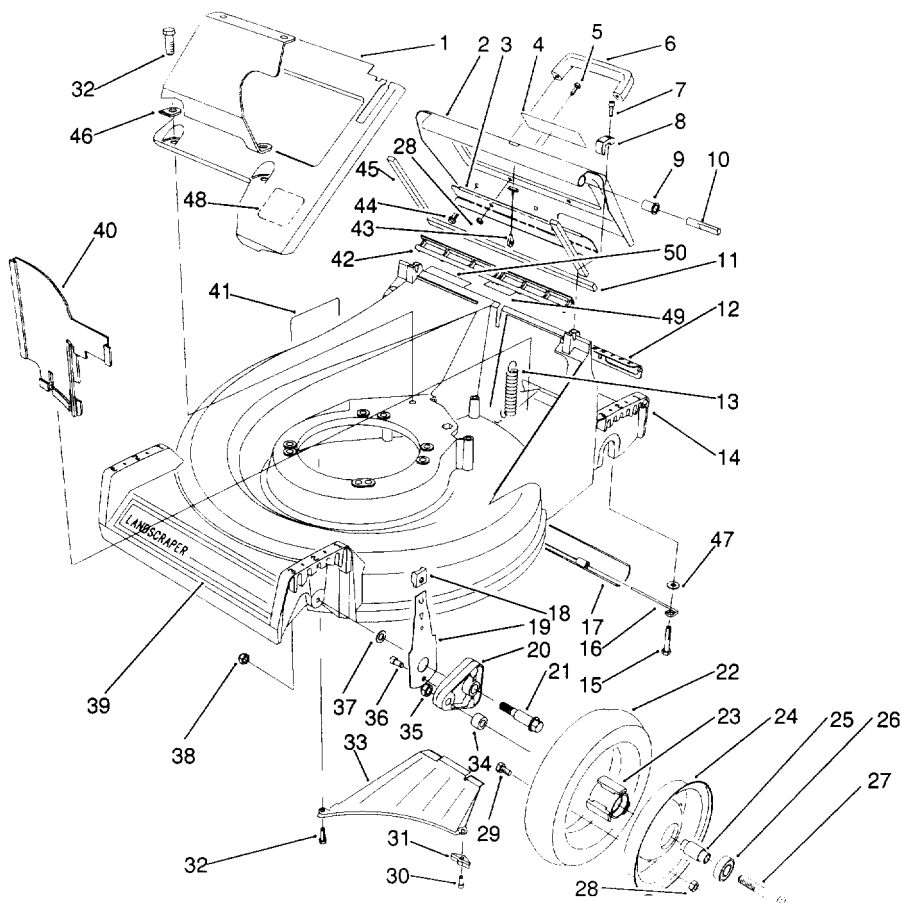


C-0645

HOUSING & WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	65-5660	Panel - Screen	1
2	13-9659	Door - Discharge (Incl. Ref. #4, 11 & 45) (Model No. 22685 Only)	1
*	14-2509	Door - Discharge (Incl. Ref. #4, 11, & 45) (Model No. 22042 Only)	1
3	66-0610	Brace - Door	1
4	63-9050	Decal - Warning (Model No. 22685 Only)	1
*	71-8370	Decal - Warning (Model No. 22042 Only)	1
5	321-39	Screw - Cap, Hex. Hd.	2
6	65-5100	Handle - Door	1
7	65-5210	Screw - Thread Forming	2
8	65-5140	Clamp - Hinge	2
9	65-5460	Bushing - Door	2

Ref. No.	Part No.	Description	No. Used
10	65-5290	Pin - Hinge	2
11	65-5490	Seal - Door, End	1
12	74-1950	Cover - Access	1
13	65-5360	Spring - Extension	1
14	13-9649	Housing - Deck (Incl. Ref. #39 & 41) (Model No. 22685 Only)	1
*	14-2519	Housing - Deck (Incl. Ref. #39 & 41) (Model No. 22042 Only)	1
15	5-2490	Screw - Special	2
16	76-1980	Hanger - Shield	2
17	65-5350	Shield - Trailing	1
18	25-7740	Knob - Arm	2
19	66-0540	Spring Arm Assy. - Front	2
20	66-0580	Arm - Pivot Front	2
21	66-0560	Screw - Shoulder	2

* Not Illustrated

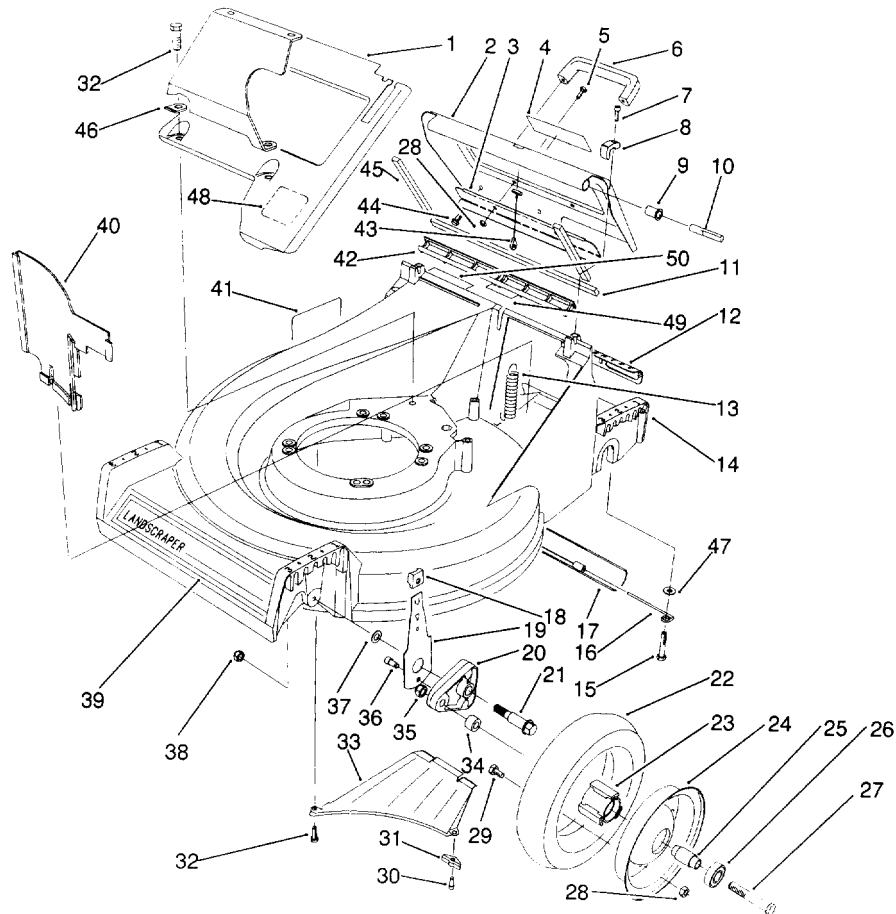


C-0645

HOUSING & WHEEL ASSEMBLY (Cont.)

Ref. No.	Part No.	Description	No. Used
22	53-7740	Tire	2
23	52-2410	Hub	2
24	53-7780	Wheel - Half	4
25	52-2440	Spacer	2
26	52-2450	Bearing	4
27	323-13	Screw - Cap, Hex. Hd.	2
28	3296-42	Nut - Lock	10
29	321-2	Screw - Hex Hd. Cap	8
30	65-5221	Screw - Bracket	1
31	66-0640	Bracket - Discharge	1
32	32144-70	Screw - Hex. Hd. Thd. Fm.	3
33	65-5010	Ramp - Discharge	1
34	52-2480	Spacer - Wheel	2
35	3296-39	Nut - Lock	2
36	65-5220	Screw - Thread Forming	2
37	40-1940	Washer	2
38	52-3620	Nut - Lock	2
39	74-2060	Decal - Landscaper	1
40	66-0020	Panel - Vertical	1

Ref. No.	Part No.	Description	No. Used
41	39-5770	Decal - Danger (Model No. 22685 Only)	1
*	62-3860	Decal - Danger (Model No. 22042 Only)	1
42	65-5160	Seal - Door	1
43	65-5370	Cable - Door	1
44	46-8091	Screw - Hex Washer Hd.	2
45	65-5480	Seal - Door, Side	2
46	74-2040	Base - Tank	1
47	3256-23	Washer - Flat	2
48		Decal - Noise Rating (Model No. 22042 Only)	1
49		Decal - French Regulation (Model No. 22042 Only)	1
50		Decal - Power Rating (Model No. 22042 Only)	1
*	53-7720	Wheel Assembly (Incl. Ref. #22-26, 28 & 29)	2

*Not Illustrated

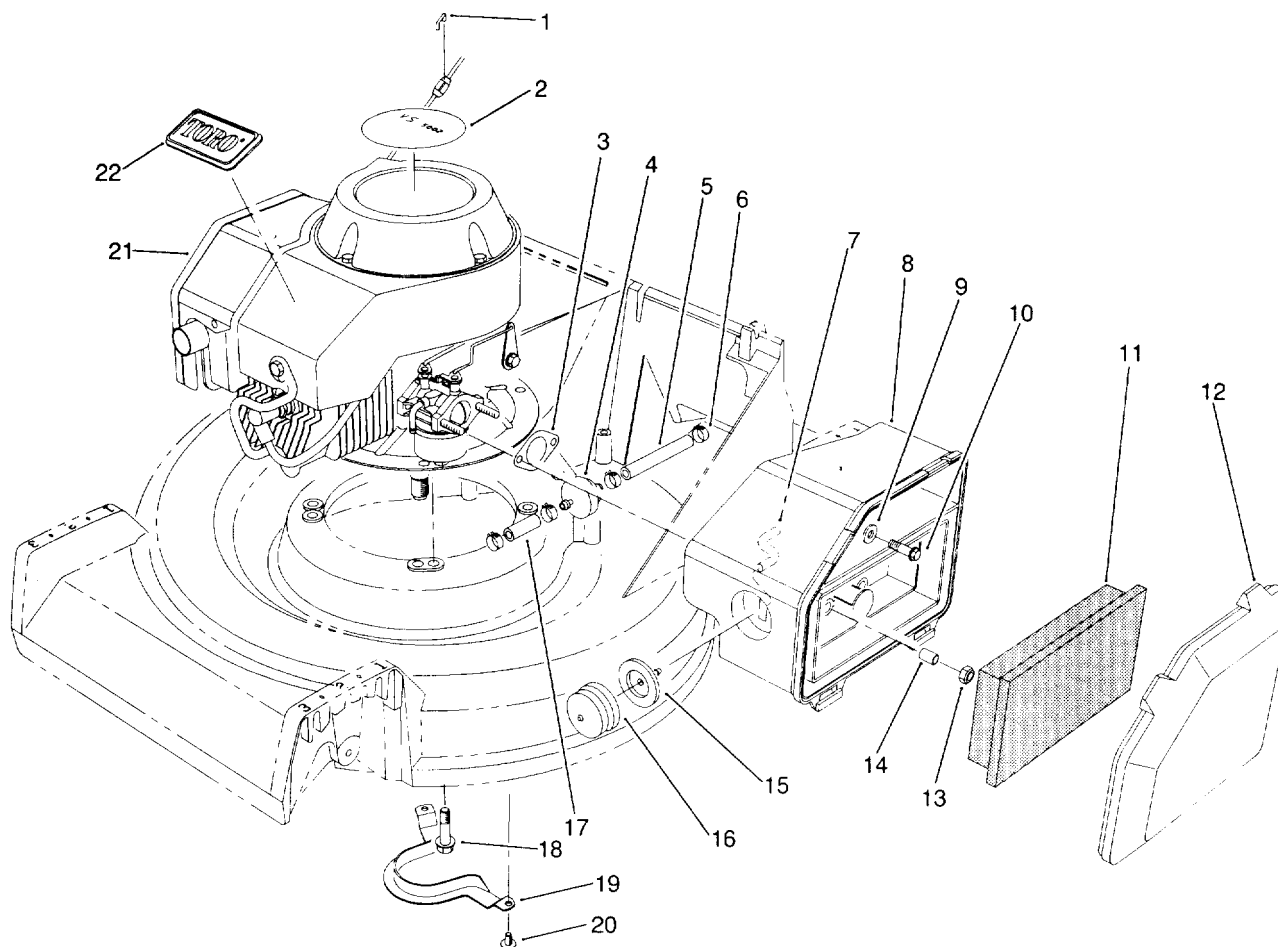


C-0535

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
†1		Staple	1	12	63-9340	Cover - Air Cleaner	1
2	77-0040	Decal - Recoil	1	13	50-7180	Nut - Lock	2
3	81-0090	Gasket	1	14	62-3980	Spacer	2
4	56-6360	Filter - Fuel	1	15	44-2750	Body - Primer	1
5	51-3214	Hose - Fuel	1	16	66-7460	Bulb - Primer	1
6	2412-95	Clamp - Hose	4	17	51-3211	Hose - Fuel	1
7	44-3172	Hose - Primer	1	18	66-9301	Screw - Hex. Flange Hd.	3
8	63-9330	Body - Air Cleaner	1	19	66-0570	Guide - Belt	1
9	3256-16	Washer - Flat	1	20	32144-70	Screw - Hex. Hd. Thd. Fm.	2
10	51-2690	Screw - Hex. Flange Hd.	1	21	61-8062	Engine Assy. Complete	1
11	63-9380	Element - Air Cleaner	1	22	46-8290	Plate - Logo, Toro	1

†Obtain Locally

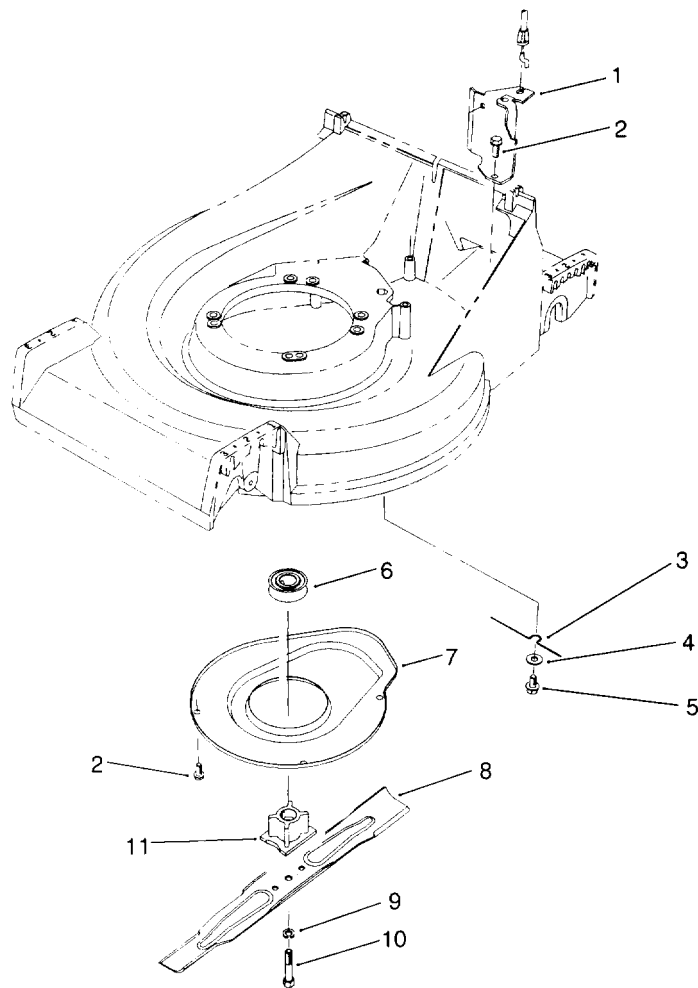


C-0536

BLADE & SHIELD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66-0030	Bracket - Support, Cable	1
2	32144-70	Screw - Hex. Hd. Thd. Fm.	5
3	66-0620	Retainer - Belt	1
4	3256-24	Washer - Flat	1
5	32144-15	Screw - Thread Forming	1
6	62-7550	Pulley	1

Ref. No.	Part No.	Description	No. Used
7	65-5200	Shield	1
8	62-7700	Blade	1
9	3253-22	Washer - Lock	1
10	26-0670	Screw - Blade	1
11	62-7540	Retainer - Blade	1

*Not Illustrated

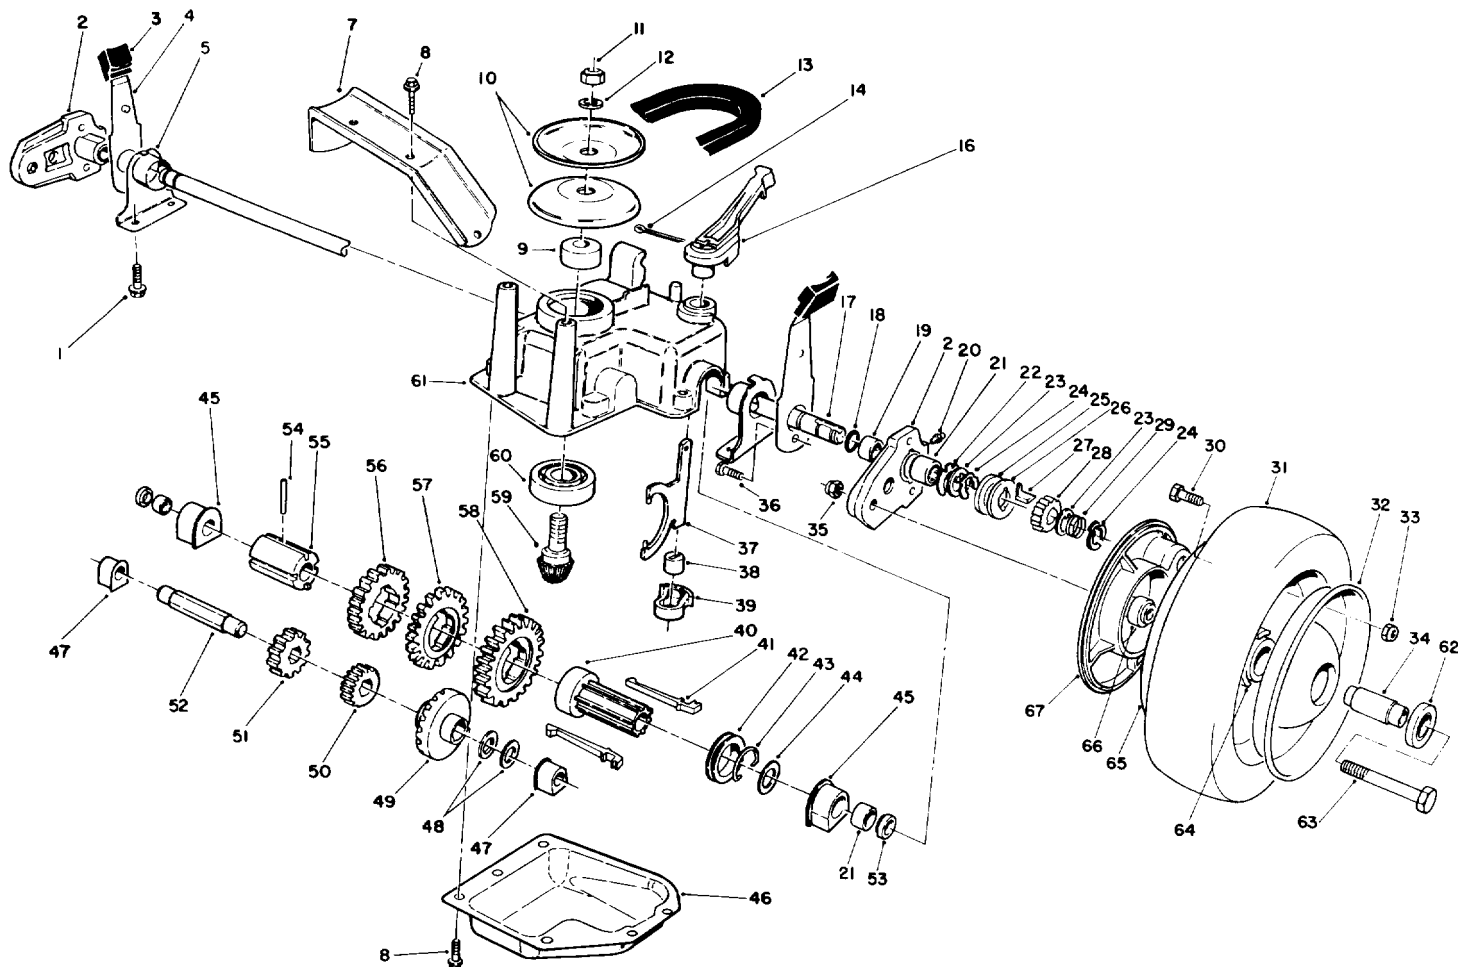


C-0540

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-70	Screw - Hex. Washer Hd.	4
2	65-5042	Pivot Arm Assembly (Incl. Ref. #19-21)	2
3	25-7740	Knob - Arm	2
4	65-5440	Spring Arm Assembly	2
5	66-0360	Cap - End	2
7	65-5190	Bracket - Guide, Belt	1
8	49-2040	Screw - Self Tapping	8
9	62-6660	Spacer	1
10	60-8840	Pulley - Half	2
11	3296-5	Nut - Lock	1
12	3256-24	Washer - Flat	1
13	66-0210	V-Belt	1
14	3272-5	Pin - Cotter	1
16	74-1960	Lever - Shift	1
17	76-4340	Shaft - Output	1
18	237-153	Seal - O-Ring	2
19	70-9760	Bushing - Sleeve	2
20	302-56	Fitting - Grease	2
21	48-2060	Bearing - Needle	4
22	65-4730	Washer - Thrust, Inner	2
23	65-4740	Washer - Thrust, Keyed	4
24	65-2720	Ring - Retaining	4
25	65-4710	Ring - Friction	2
26	65-4760	Washer - Clutch	2

27	66-6050	Key - Rocking L.H.	1
*	66-6040	Key - Rocking R.H.	1
28	65-4750	Pinion	2
29	65-4720	Spring - Compression	2
30	321-2	Screw - Cap, Hex. Hd.	8
31	53-7740	Tire	2
32	53-7780	Plate - Wheel, Half	2
33	3296-42	Nut - Lock	8
34	52-2440	Spacer - Bearing	2
35	3296-39	Nut - Lock	2
36	65-5220	Screw - Cap, Socket Hd.	2
37	60-8870	Yoke - Shift	1
38	29-9570	Bushing - Yoke	1
39	60-8810	Retainer - Shift, Fork	1
40	76-0780	Sleeve - Shift, Key	1
41	76-0760	Key - Shift	2
42	76-0770	Collar - Shift	1
43	65-5250	Clip - Spring	1
44	36-4780	Washer - Thrust	1
45	74-1990	Bushing - Shaft, Output	2
46	60-8730	Cover - Gear Case	1
47	60-8750	Bushing - Intrmdt. Shaft	2
48	36-4791	Washer - Thrust	2
49	55-3760	Gear - Pinion 15T	1
50	55-3780	Gear - Pinion 20T	1

*Not Illustrated

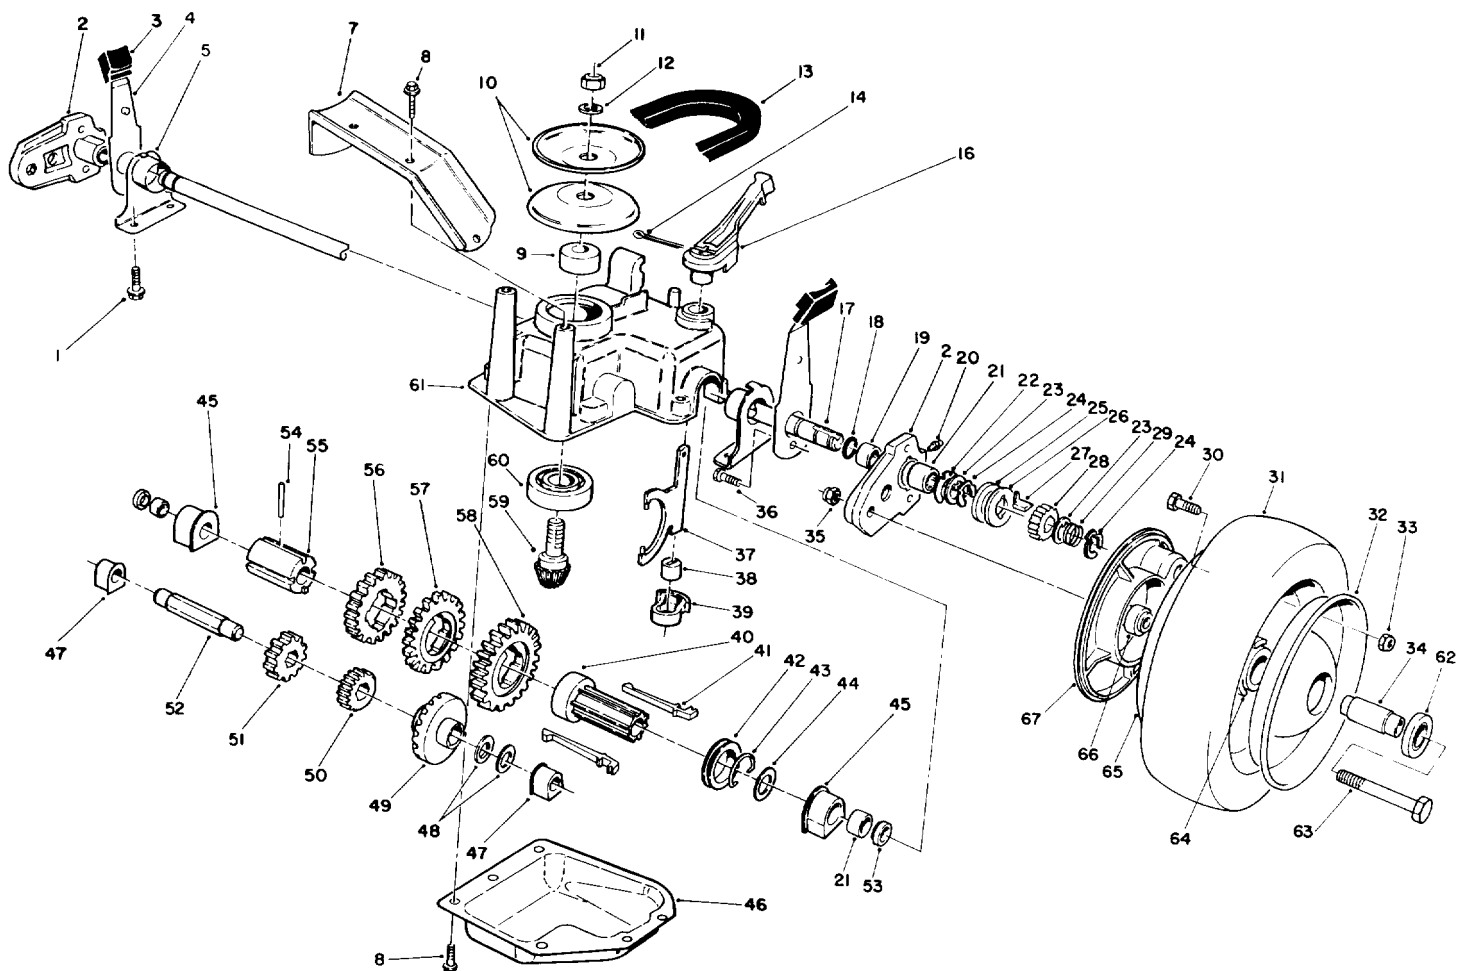


C-0540

GEAR CASE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
51	55-3800	Gear - Pinion 25T	1
52	60-8800	Shaft - Intermediate	1
53	47-6730	Seal - Oil	2
54	32121-120	Pin - Coil	1
55	60-8790	Sleeve - Gear	1
56	55-3810	Gear - 39T (3rd Gear)	1
57	55-3790	Gear - 44T (2nd Gear)	1
58	55-3770	Gear - 49T (1st Gear)	1
59	60-8890	Pinion - Bevel	1
60	38-7820	Bearing - Ball	1
61	60-8710	Case - Gear, Upper	1

Ref. No.	Part No.	Description	No. Used
62	52-2450	Bearing - Wheel	4
63	323-13	Bolt - Wheel	2
64	52-2410	Hub - Support, Bearing	2
65	53-7750	Wheel - Gear, Half	2
66	74-1650	Spacer - Cover	2
67	74-1690	Cover - Wheel	2
*	74-1980	Gear Case Assy. Complete	1
*	74-1720	Wheel Assembly (Incl. Ref. #30-34, 62, 64 & 65)	2


*Not Illustrated

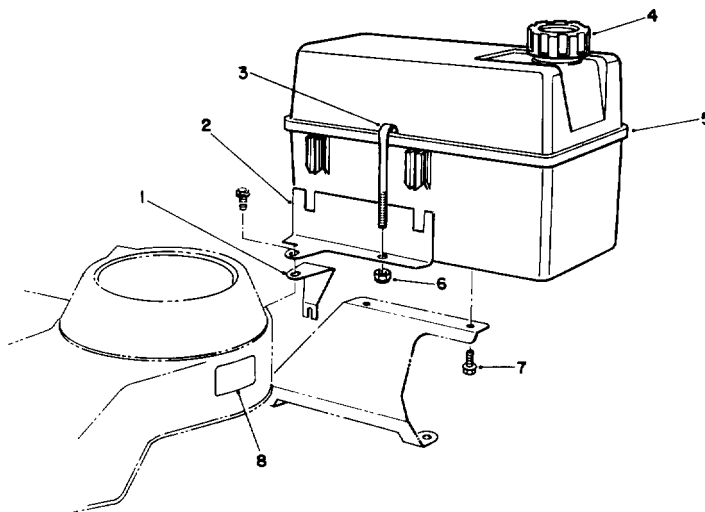

C-0539

FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	77-0520	Support - Bracket	1	5	71-9010	Fuel Tank Assembly	1
2	74-2110	Bracket - Tank	1	6	3296-42	Nut	1
3	77-2840	Retainer - Fuel Tank	1	7	46-8091	Screw - Hex. Washer Hd.	2
4	55-3575	Gas Cap Assembly	1	8	62-7600	Decal - Fuel Mix	1

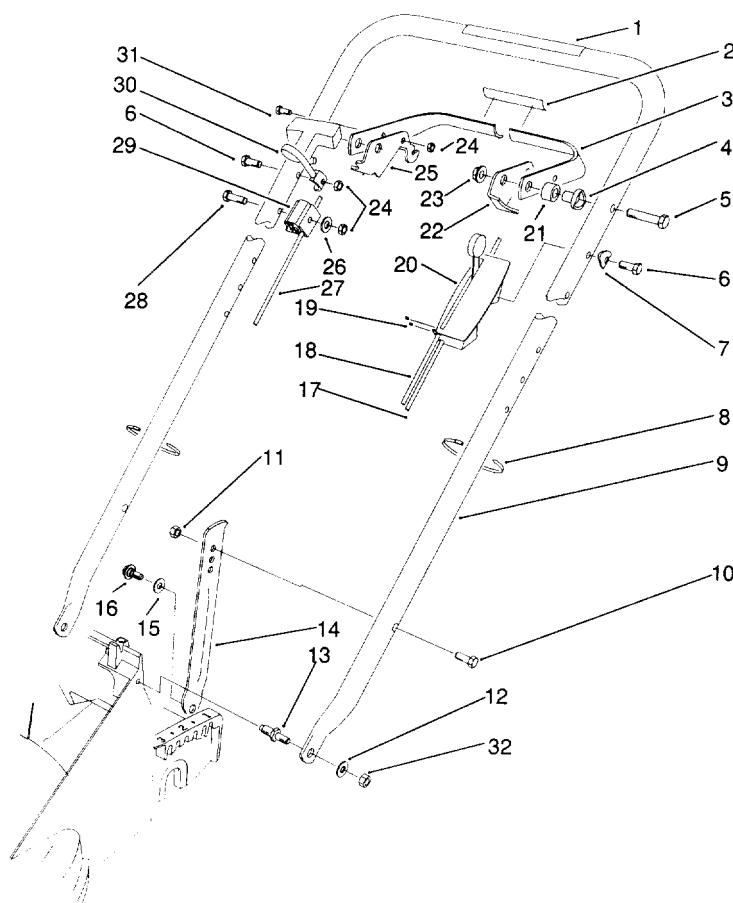


C-0649

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	82-5580	Decal - Warning (Model No. 22685 Only)	1
*	63-8540	Decal - Warning (Model No. 22042 Only)	1
2	71-1290	Decal - Traction (Model No. 22685 Only)	1
*	62-7590	Decal - Traction (Model No. 22042 Only)	1
3	61-8270	Bar - Control	1
4	49-1630	Support - Spacer	2
5	322-10	Screw - Cap, Hex. Hd.	2
6	321-13	Screw - Cap, Hex. Hd.	3
7	3-7501	Washer - Curved	2
8	3290-378	Tie - Cable	2
9	14-2529	Handle (Incl. Ref. #1) (Model No. 22685 Only)	1
*	14-2539	Handle (Incl. Ref. #1) (Model No. 22042 Only)	1
10	322-17	Screw - Cap, Hex. Hd.	2
11	3296-29	Nut - Lock	2
12	3256-23	Washer - Flat	2

Ref. No.	Part No.	Description	No. Used
13	74-2130	Stud - Shoulder	2
14	65-5731	Latch - Handle	2
15	256-313	Washer - Flat	2
16	5-2490	Screw - Special	2
17	74-1931	Cable - Traction	1
18	70-1062	Cable - Throttle	1
19	32151-86	Ring - Retaining	2
20	82-9950	Bracket - Throttle, Control (Model No. 22685 Only)	1
*	82-9952	Bracket - Throttle Control (Model No. 22042 Only)	1
21	256-276	Spacer	1
22	66-5350	Lever - Control, L.H.	1
23	3296-58	Nut - Lock	2
24	3296-42	Nut - Lock	4
25	77-5270	Lever - Control, R.H.	1
26	3256-22	Washer - Flat	1
27	56-6097	Cable - Brake	1
28	321-15	Screw - Cap, Hex. Hd.	1
29	46-6980	Support - Cable	1
30	46-8081	Guide - Rope	1
31	321-4	Screw - Cap, Hex. Hd.	2
32	3296-47	Nut - Lock	2


*Not Illustrated

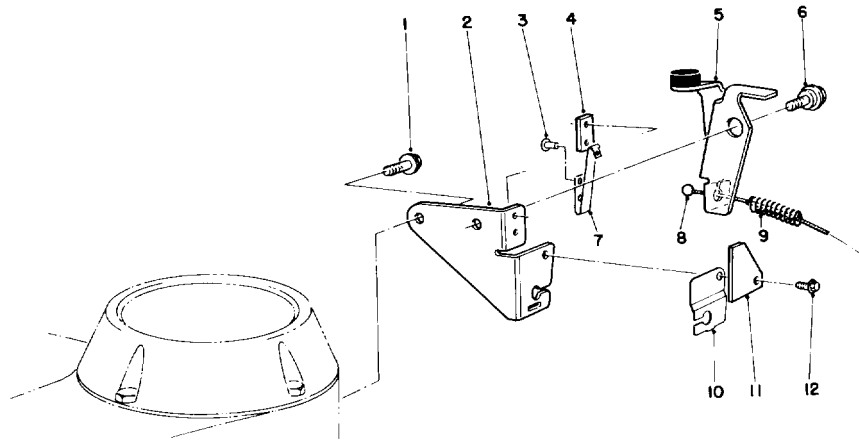

C-0531

BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	46-0790	Screw - Self Tapping	1	8	56-6097	Cable - Brake	1
2	53-4620	Plate - Mounting	1	9	66-5370	Spring - Compression	1
3	3290-459	Rivet	2	10	53-4610	Clamp - Cable	1
4	77-5260	Strap - Insulation	1	11	53-4690	Stop - Strap, Ground	1
5	66-5380	Brake Plate Assembly	1	12	12-5450	Screw - Self Tapping	1
6	56-6190	Screw - Shoulder, Metric	1	*	12-4599	Mounting Plate Assembly (Incl. Ref. #2-4 & 7)	1
7	60-9010	Strap - Ground	1				

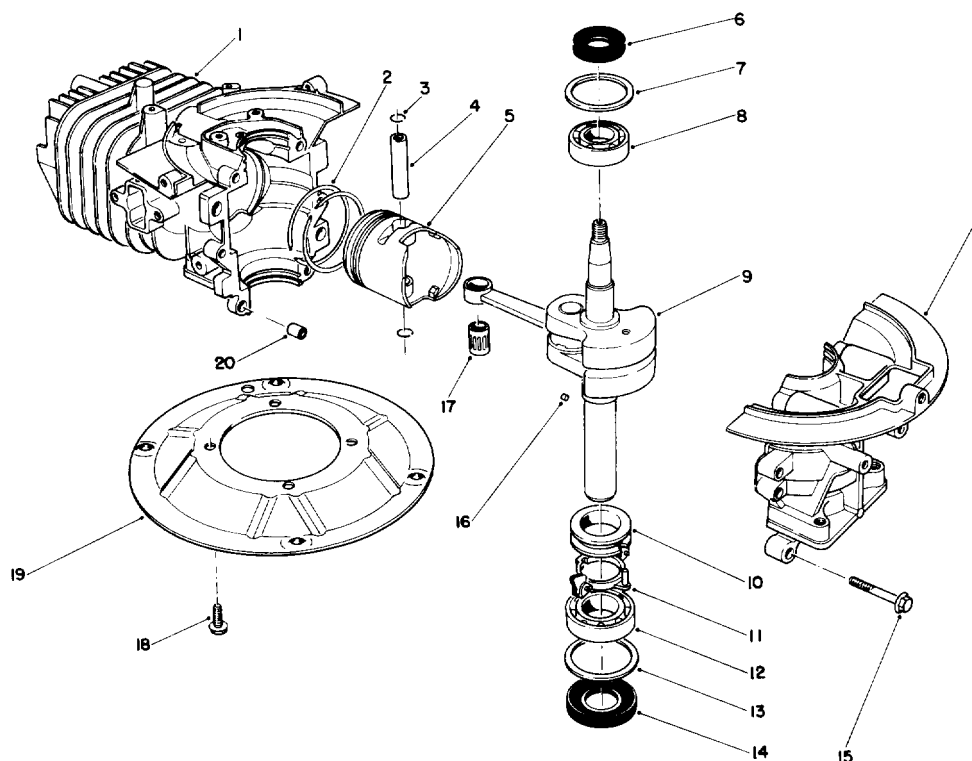


T-0663

CRANKSHAFT ASSEMBLY (Model No. 47PL0-3)

Ref. No.	Part No.	Description	No. Used
1	81-2800	Crankcase/Cylinder Assy.	1
2	81-0590	Piston Ring Set	1
3	81-0620	Circlip	2
4	81-0600	Pin - Wrist	1
5	81-2140	Piston - 58mm	1
6	81-0720	Seal - Oil, Upper	1
7	81-0710	Washer - Thrust, Upper	1
8	81-0690	Bearing - Upper 20mm	1
9	81-4680	Crankshaft/Connecting Rod Assembly	1
10	81-0770	Spacer - Governor	1

Ref. No.	Part No.	Description	No. Used
11	81-0750	Bracket - Arm, Governor	1
12	81-0700	Bearing - Lower 25mm	1
13	81-0730	Washer - Thrust, Lower	1
14	81-0740	Seal - Oil, Lower	1
15	81-0540	Bolt 30mm Lg.	5
16	81-0760	Pin - Crankshaft	1
17	81-0610	Bearing - Wrist Pin	1
18	81-0570	Bolt	4
19	81-0560	Plate - Mounting	1
20	81-0520	Pin - Crankcase	2
*	12-8099	Short Block	1

*Not Illustrated

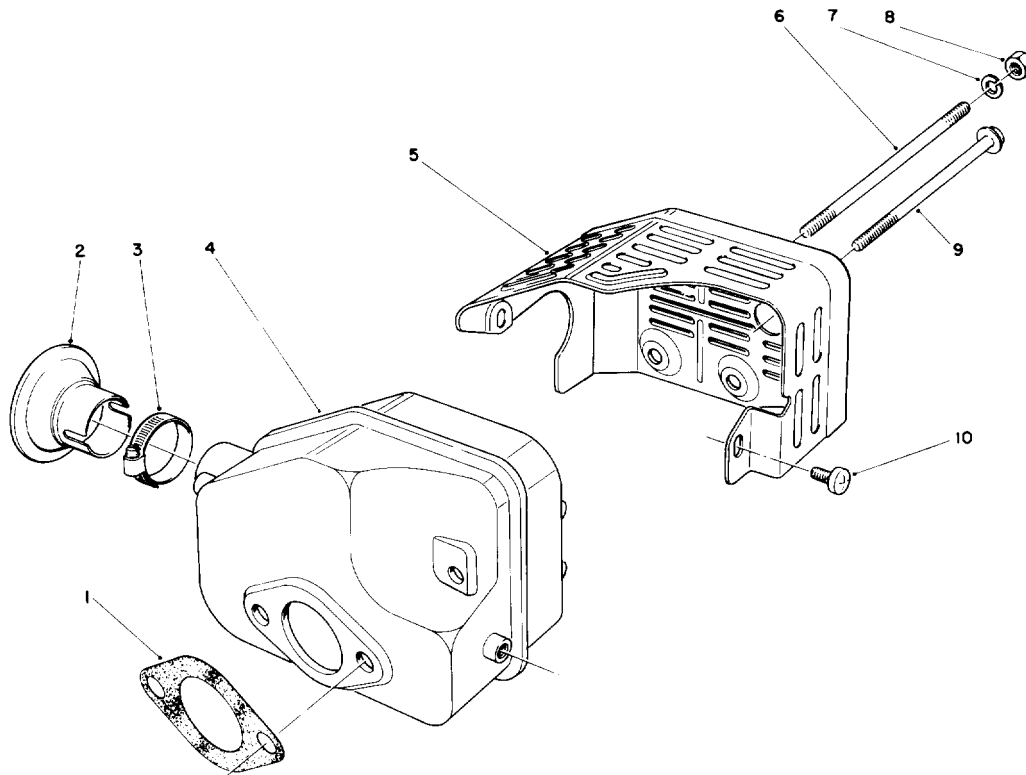


T-0667

MUFFLER ASSEMBLY (Model No. 47PL0-3)

Ref. No.	Part No.	Description	No. Used
1	81-1080	Gasket - Muffler	1
2	81-0200	Spark Arrester (Optional)	1
†3		Clamp	1
4	81-5690	Muffler	1
5	81-2450	Cover - Muffler	1

Ref. No.	Part No.	Description	No. Used
6	81-1100	Bolt	2
7	81-1120	Washer - Lock	2
8	81-1110	Nut	2
9	81-1150	Bolt - Self Tapping	1
10	81-1140	Screw - Phillips Hd.	2

†Obtain Locally

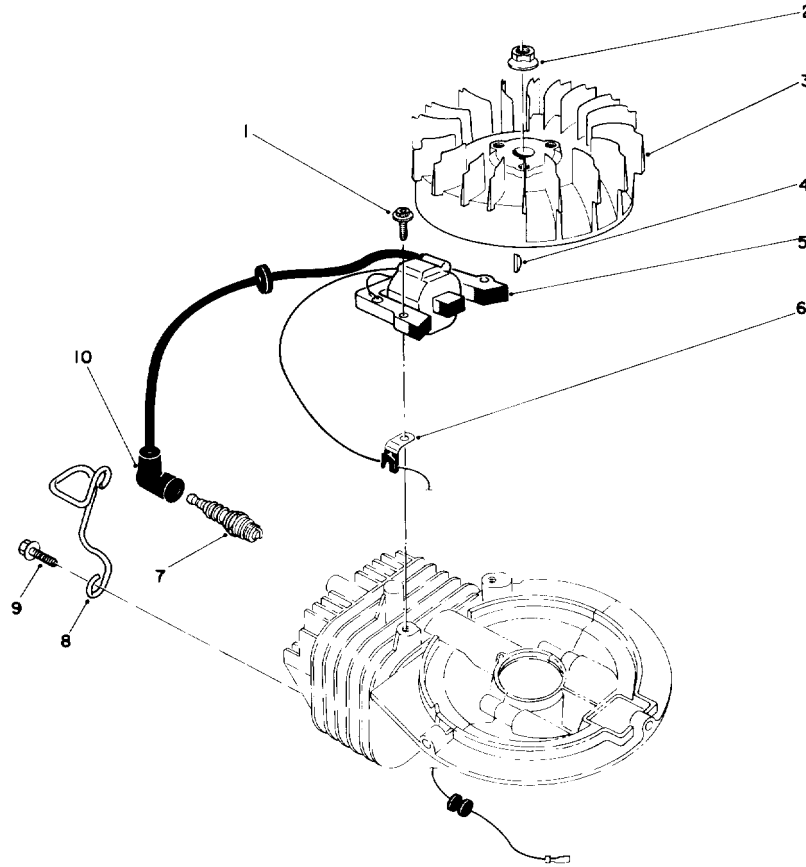


T-0664

IGNITION ASSEMBLY (Model No. 47PL0-3)

Ref. No.	Part No.	Description	No. Used
1	81-5680	Screw - Cap, Hex Hd.	2
2	81-1330	Nut	1
3	81-2810	Flywheel - Magneto	1
4	81-2370	Key - Flywheel	1
5	81-2820	Coil/Ignition Assembly	1
6	81-1480	Clamp	1

Ref. No.	Part No.	Description	No. Used
7	81-0181	Spark Plug	1
8	81-2120	Guard - Spark Plug	1
9	81-2350	Bolt - Self Tapping (20mm Lg.)	2
10	81-1500	Cap Assembly - Spark Plug	1
*	41-7650	Puller - Flywheel	1

*Not Illustrated

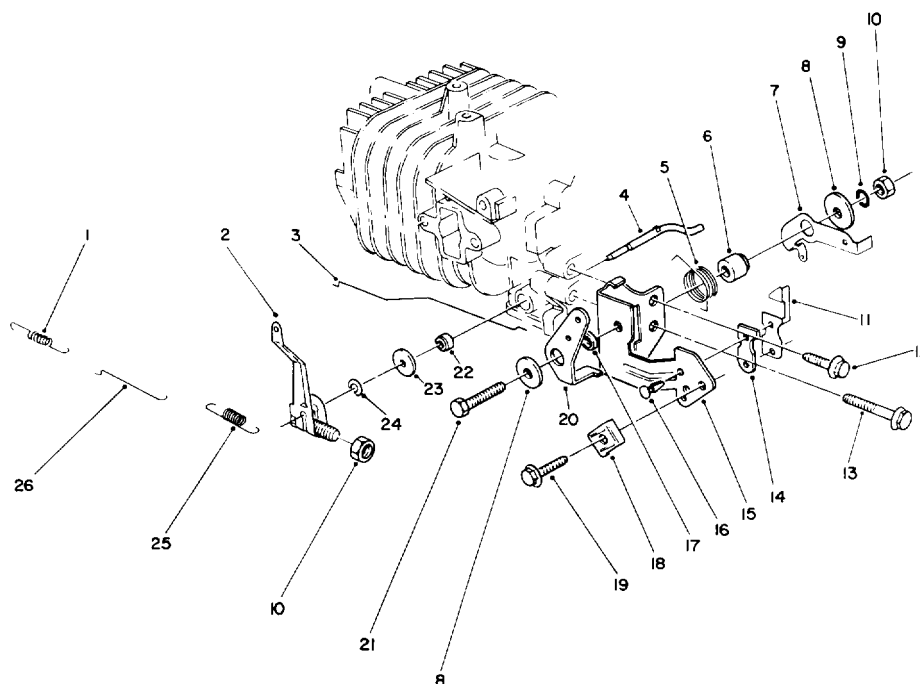


c-0564

GOVERNOR ASSEMBLY (Model No. 47PL0-3)

Ref. No.	Part No.	Description	No. Used
1	81-0920	Spring - Carburetor Rod	1
2	81-5420	Governor Arm/Bolt Assy.	1
3	81-5410	Rod - Choke	1
4	81-2880	Shaft - Governor	1
5	81-2460	Spring - Lever, Choke	1
6	81-1770	Spacer - Lever, Governor	1
7	81-2850	Lever - Governor	1
8	81-1750	Washer - Lever, Choke	2
9	81-1450	Washer - Lock	1
10	81-0900	Nut	2
11	81-1840	Terminal - Kill Switch	1
12	81-1170	Bolt - Self Tapping	1
13	81-0540	Bolt	1

Ref. No.	Part No.	Description	No. Used
14	81-1830	Insulator - Kill Switch	1
15	81-2420	Bracket - Throttle	1
16	81-4530	Rivet - Kill Switch	2
17	81-2470	Spacer - Lever, Choke	1
18	81-2430	Clamp - Cable	1
19	50-0130	Bolt - Clamp, Cable	1
20	81-1710	Lever - Choke	1
21	81-1730	Bolt - Bracket, Throttle	1
22	81-0850	Seal - Shaft, Governor	1
23	81-0860	Washer	1
24	81-0870	Ring - Retaining	1
25	81-2830	Spring - Governor	1
26	81-0910	Rod - Carburetor	1

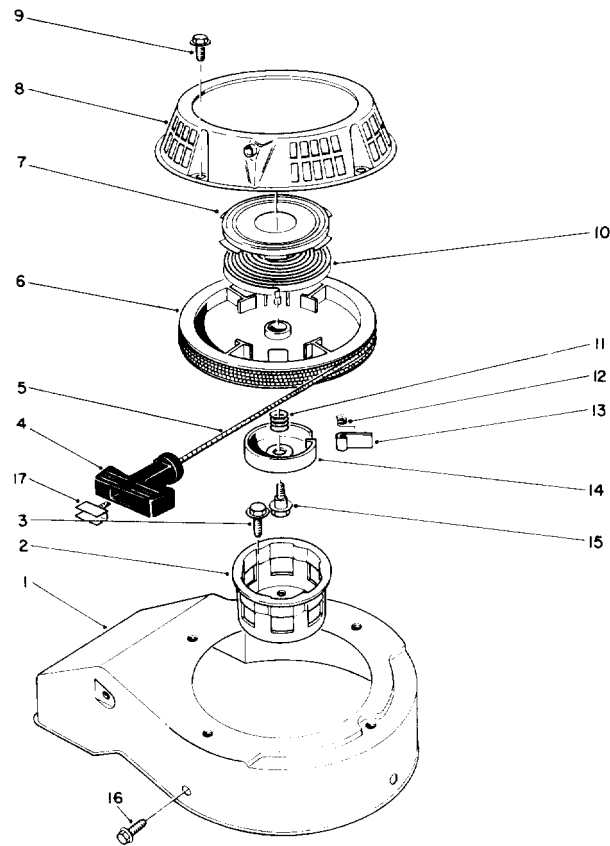


T-1102

RECOIL ASSEMBLY (Model No. 47PL0-3)

Ref. No.	Part No.	Description	No. Used
1	81-2080	Cover - Fan, Cooling	1
2	81-2170	Cup - Pulley, Starter	1
3	81-1300	Bolt	3
4	81-1630	Handle - Recoil	1
5	81-1270	Rope	1
6	81-1210	Pulley - Rope	1
7		Retainer - Spring, Recoil	1
8	81-2100	Case - Starter	1
9	81-1280	Bolt	4
10		Spring - Recoil	1
11	81-1240	Spring - Compression	1

Ref. No.	Part No.	Description	No. Used
12	81-1220	Spring - Dog	1
13	81-1230	Dog - Starter	1
14	81-1250	Retainer - Dog	1
15	81-1260	Bolt - Shoulder	1
16	53-1340	Bolt - Self Tapping (15mm Lg.)	3
17	81-5760	Insert - Handle, Recoil	1
*	81-5940	Starter Assembly (Incl. Ref. #4-15)	1
*	81-2300	Spring & Retainer Assembly (Incl. Ref. #7 & 10)	1

*Not Illustrated

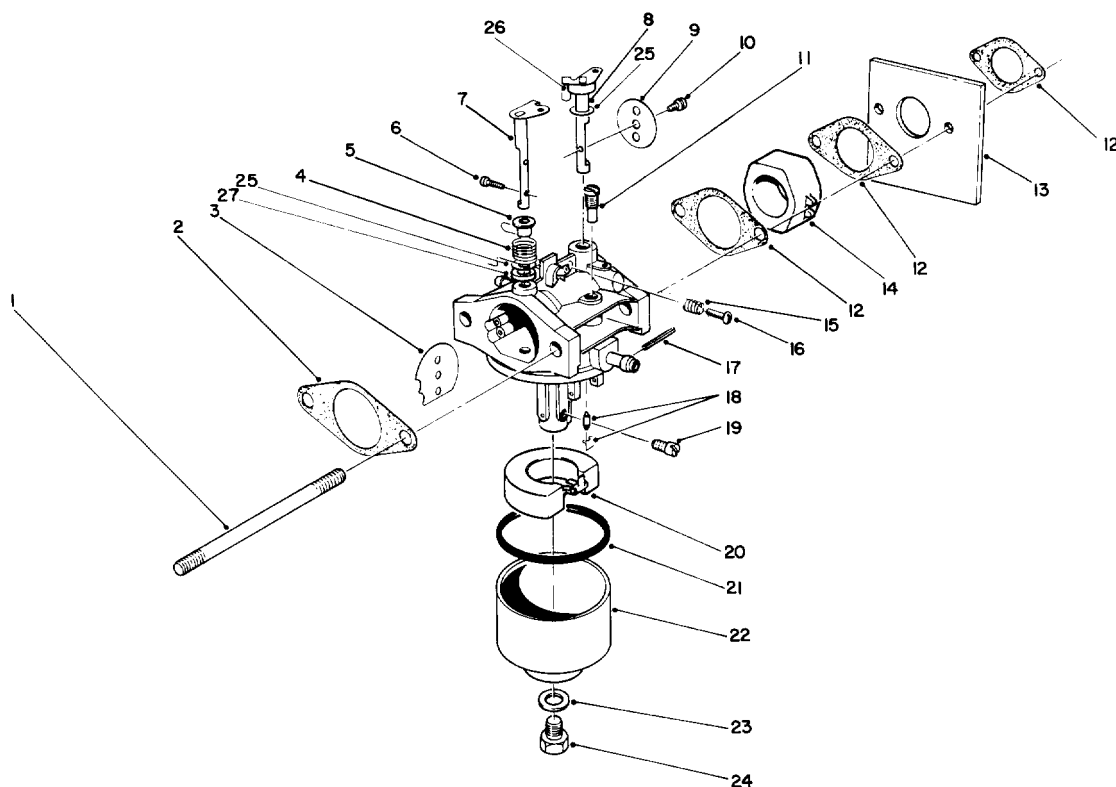


CARBURETOR ASSEMBLY (Model No. 47PL0-3)

C-0563

Ref. No.	Part No.	Description	No. Used
1	81-5450	Stud Bolt, Carburetor	2
2	81-0090	Gasket	1
3	81-0240	Valve - Choke	1
4	81-0230	Spring - Choke	1
5	81-0220	Bushing - Choke	1
6	81-2160	Screw - Choke Plate	2
7	81-1950	Shaft - Choke	1
8	81-0250	Shaft - Throttle	1
9	81-0260	Valve - Throttle	1
10	81-0270	Screw - Throttle	1
11	81-1030	Jet - Pilot #40	1
12	81-0780	Gasket - Carburetor	3
13	81-5490	Shield - Carburetor	1
14	81-2190	Insulator - Carburetor	1
15	81-2580	Spring - Idle Stop	1
16	50-0250	Screw - Idle Stop	1
17	81-2600	Pin - Float	1

Ref. No.	Part No.	Description	No. Used
18	81-4910	Needle Valve	1
19	81-1060	Jet - Main #75	1
*	81-2340	Jet - Main #72.5 High Alt. Above 6,000 Ft. (Optional)	A/R
20	81-0970	Float	1
21	81-1010	Gasket - Bowl, Float	1
22	81-5660	Bowl - Float	1
23	81-1020	Gasket - Capscrew, Bowl	1
24	81-5670	Capscrew - Bowl	1
*	12-6379	Carburetor Kit (Incl. Ref. #2, 12, 18, 21 & 23)	1
25	81-2530	Seal	2
26	81-2540	Ring	1
27	81-2550	Packing	1
*	81-5430	Carburetor Ass'y w/Primer	1
*	81-2520	Carburetor Ass'y	1

*Not Illustrated

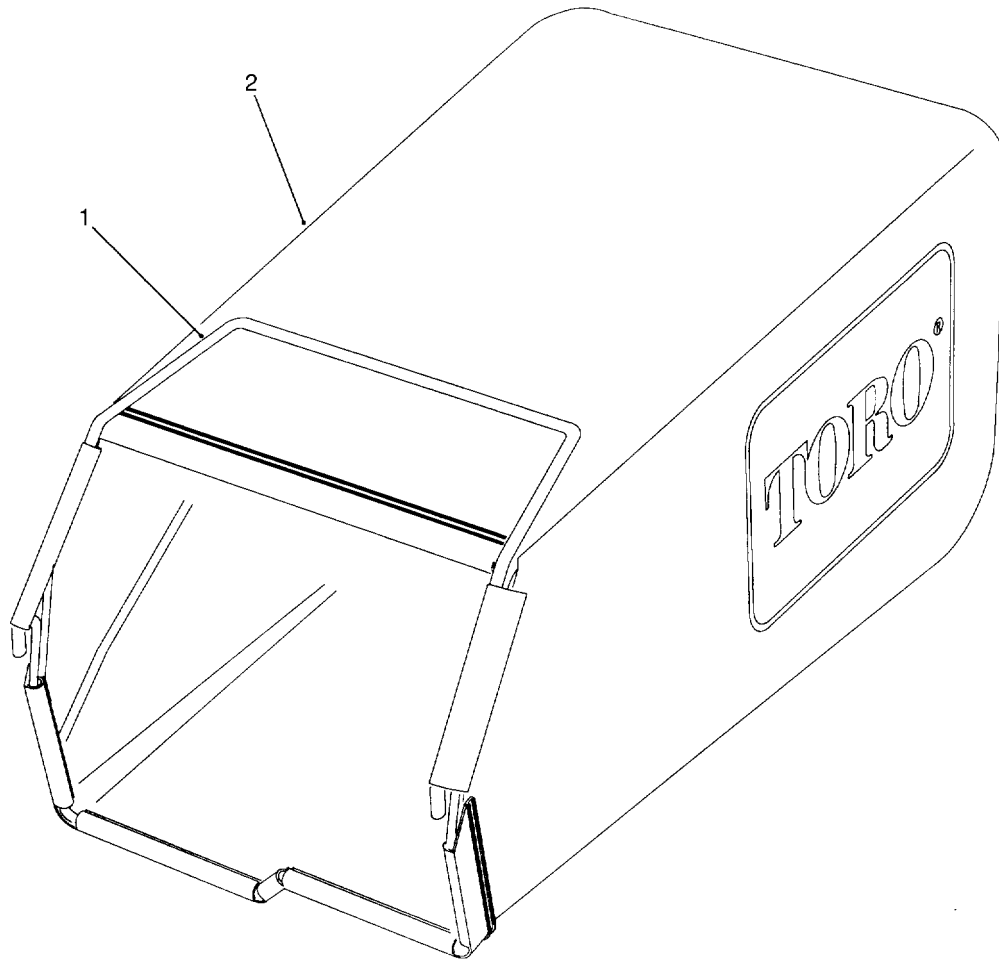


C-0168

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-1790	Frame - Bag, Grass	1

Ref. No.	Part No.	Description	No. Used
2	66-0010	Bag	1

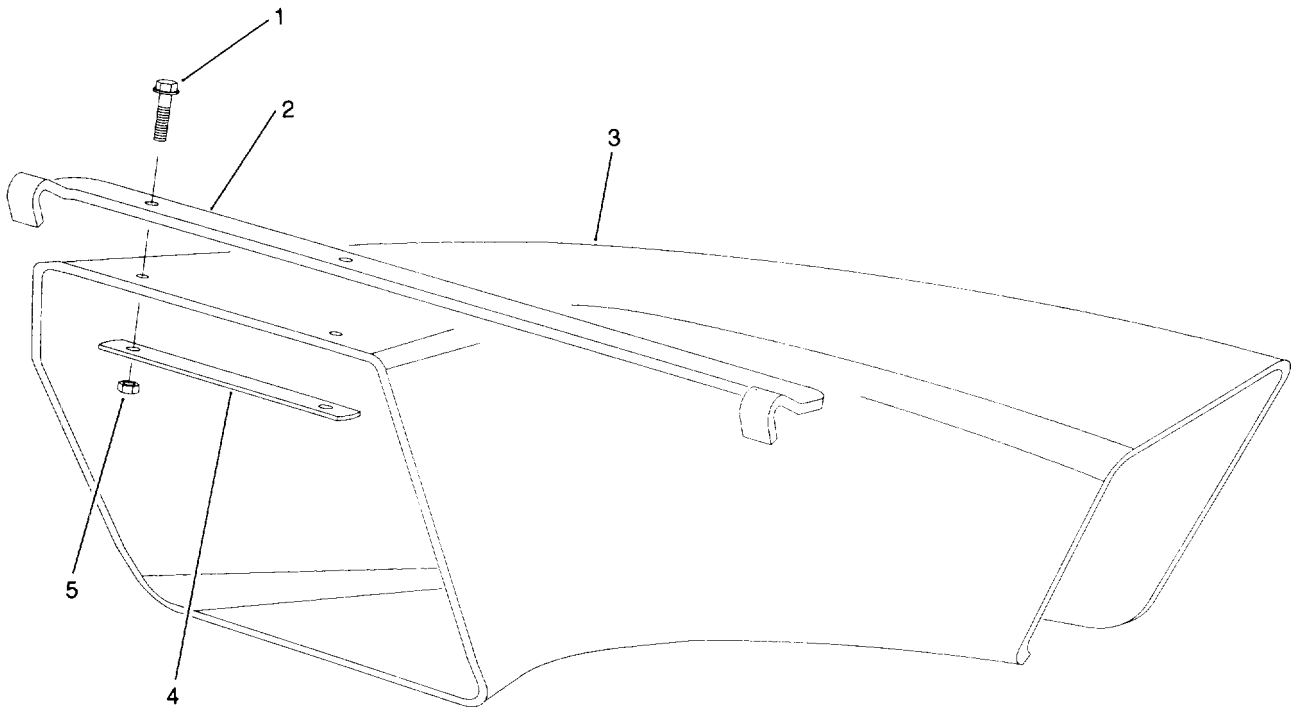

C-0169A

SIDE DISCHARGE CHUTE Model No. 59112 (Optional)

Ref. No.	Part No.	Description	No. Used
1	3290-126	Screw - Hex. Washer Hd.	2
2	66-0070	Bracket - Hanger, Chute	1
3	65-5240	Chute - Discharge	1
4	3296-12	Nut - Lock	2

Ref. No.	Part No.	Description	No. Used
5	66-0060	Plate - Stress	1



Ref. No.	Part No.	Description	No. Used
1	77-0390	Shredder - Leaf	1

Ref. No.	Part No.	Description	No. Used