



Super Recycler[®] Lawn Mower

Model No. 20053 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing Assembly 3	Air Cleaner Assembly Briggs and Stratton	
Housing Assembly No. 108-4750 4	125K02-0189-E1 12
Height-of-Cut Assembly 5	Governor Assembly Briggs and Stratton	
Engine Assembly 6	125K02-0189-E1 13
Handle Assembly 7	Muffler and Fuel Tank Assembly Briggs and Stratton	
Cylinder Assembly Briggs and Stratton		125K02-0189-E1 14
125K02-0189-E1 8	Blower Housing Assembly Briggs and Stratton	
Crankshaft Assembly Briggs and Stratton		125K02-0189-E1 15
125K02-0189-E1 9	Starter Assembly Briggs and Stratton 125K02-0189-E1 16
Crankcase Assembly Briggs and Stratton		125K02-0189-E1 17
125K02-0189-E1 10	Engine Gasket Set Assembly Briggs and Stratton 125K02-0189-E1 17
Carburetor Assembly Briggs and Stratton		125K02-0189-E1 18
125K02-0189-E1 11	Carburetor Overhaul Kit and Gasket Set Assemblies Briggs and Stratton 125K02-0189-E1 18


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head


Footnotes

- ❶ Not serviced separately
- ❷ Obtain from your local Briggs & Stratton dealer
- ❸ For use only on Models with BBC

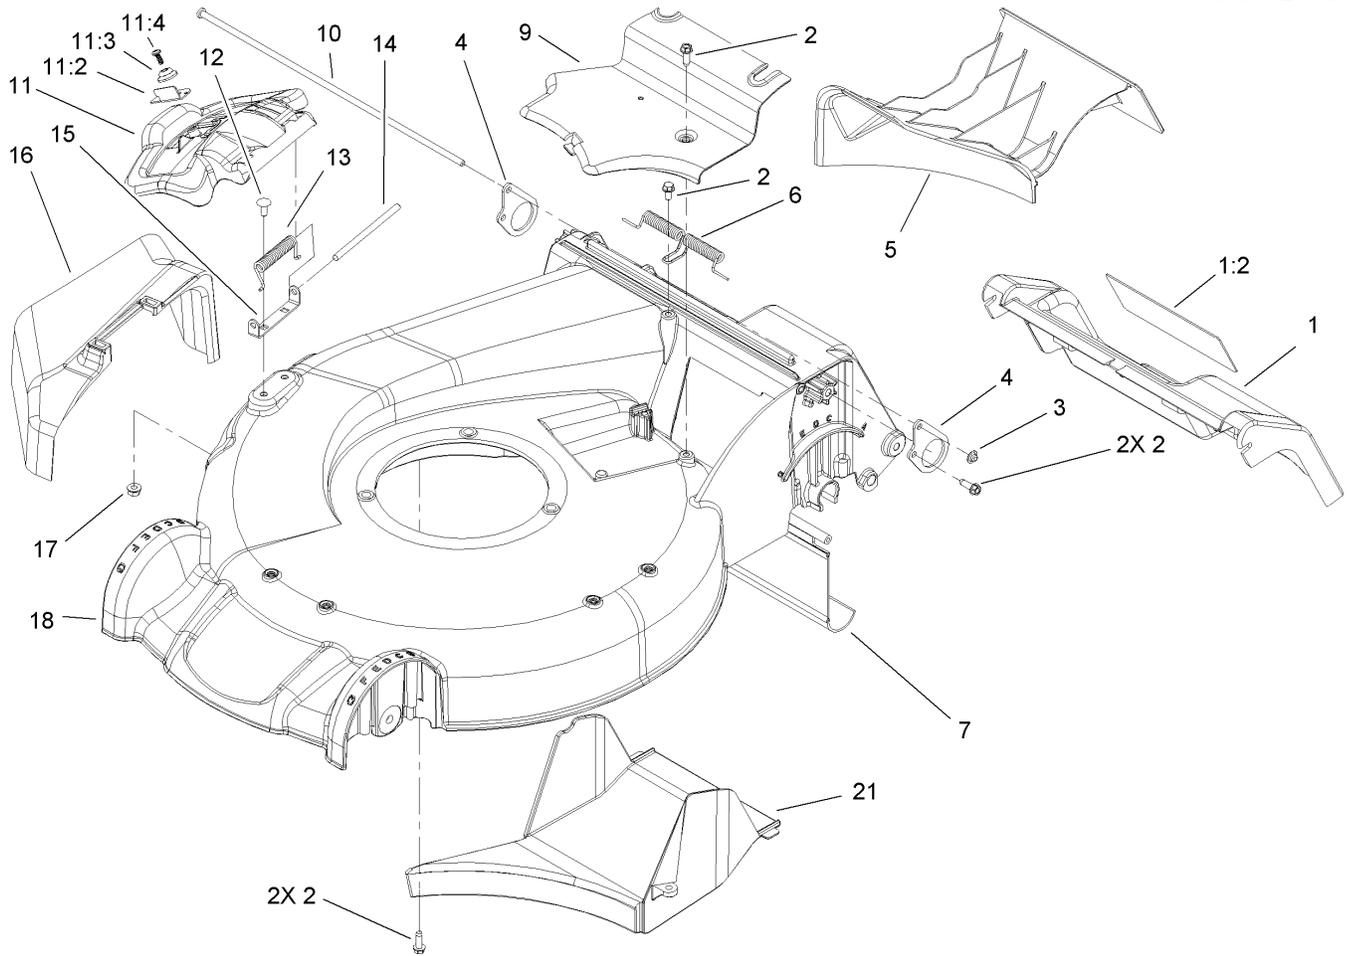


Housing Assembly

Ref	Part No.	Qty.	Description
1	105-1323	1	Rear Door ASM
1:2	105-1295	1	Decal-Warning
2	49-2040	6	Screw-HWHTF
3	3290-337	1	Nut-Speed
4	107-7493	2	Plate-Support, Door
5	107-7490	1	Plug-Mulch
6	105-3032	1	Spring-Door, Rear
7	107-7496	1	Shield-Trailing
9	107-7494	1	Cover-Belt
10	107-7499	1	Rod-Support, Door
11	107-3717	1	Discharge Door ASM
11:2	107-0795	1	Latch-Door
11:3	107-7456	1	Cap-Door
11:4	107-7461	1	Screw-Plastite
12	3229-11	2	Screw-CARR
13	99-5293	1	Spring-Torsion
14	99-5291	1	Rod-Cover
15	99-5292	1	Bracket-Cover
16	108-3753	1	Chute-Discharge, Side
17	32128-32	2	Nut-HHF
18	108-4750	1	Housing ASM
21	107-7495	1	Tunnel-Discharge

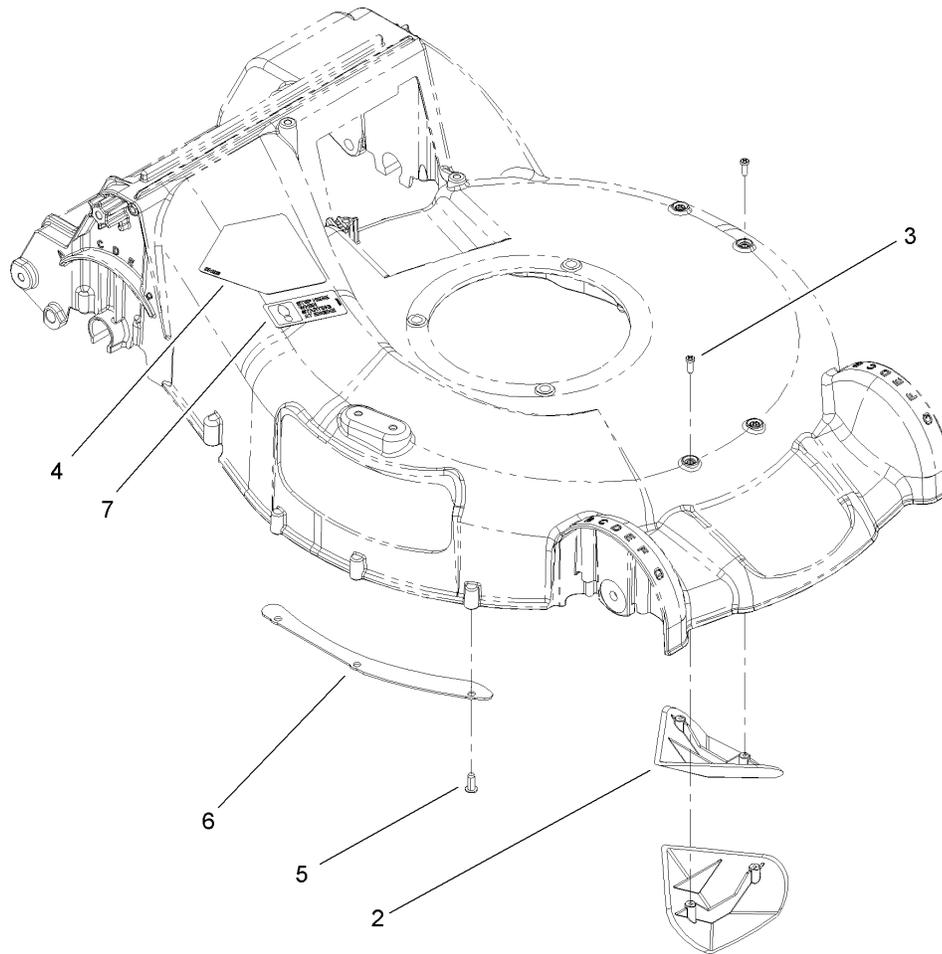


Housing Assembly No. 108-4750

Ref	Part No.	Qty.	Description
2	108-3798	2	Kicker-Housing
3	32144-111	4	Screw-PPH
4	105-6838	1	Decal-Danger
5	63-8590	3	Screw
6	105-1316-03	1	Sheet-Lip
7	108-8117	1	Decal-Placement, Foot

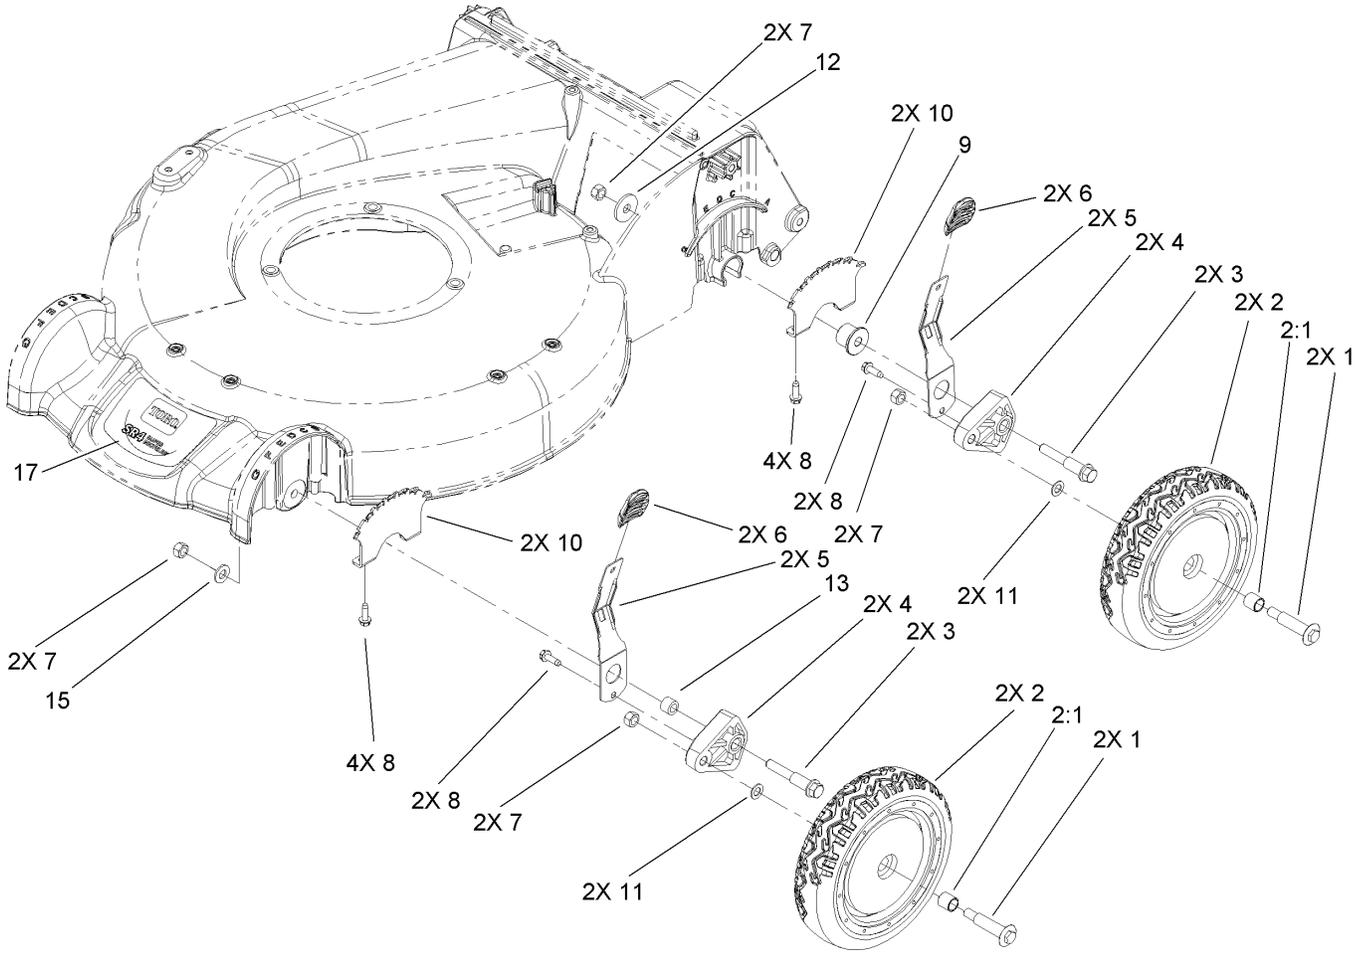


Height-of-Cut Assembly

Ref	Part No.	Qty.	Description
1	92-1057	4	Bolt-Shoulder
2	107-3708	4	Wheel ASM
2:1	27-6250	2	Bushing
3	107-7498	4	Screw-Shoulder, HOC
4	107-7492	4	Arm-Pivot
5	107-7491	4	Spring Arm
6	105-3042	4	Knob-Lever, HOC
7	603773	8	Nut
8	49-2040	12	Screw-HWHTF
9	108-9758	2	Spacer-Hp
10	107-7478	4	Plate-HOC
11	40-1940	4	Washer
12	2844	2	Washer
13	52-2480	2	Spacer-Wheel
15	3256-24	2	Washer-Flat
17	108-8168	1	Decal

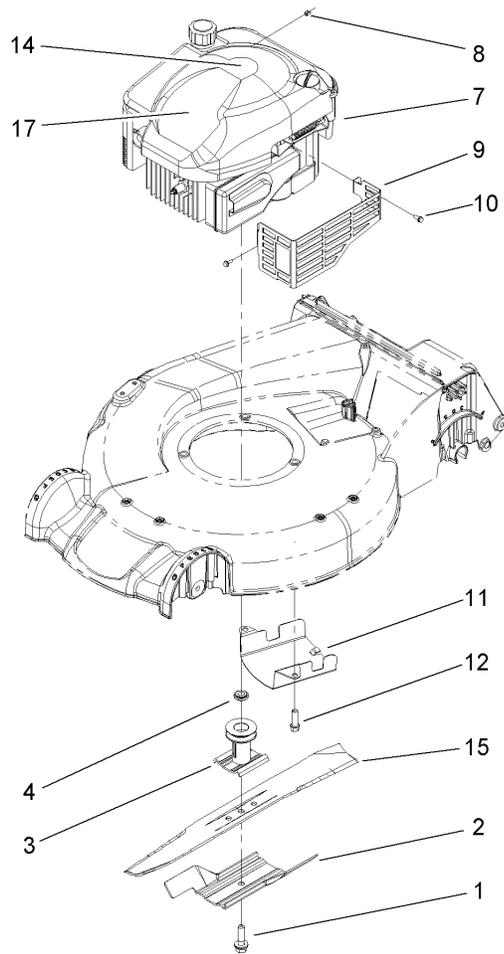


Engine Assembly

Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
2	105-6848-03	1	Accelerator-Blade				
3	106-3987	1	Blade Driver ASM				
4	106-3999	1	Spacer-Driver				
1 27		1	Engine-Briggs And Stratton, 125K02-0189-E1				
8	2210-316	1	Stop-Rope				
9	104-7577-03	1	Shield-Muffler				
10	32144-1	3	Screw-Taptite				
11	107-7489-03	1	Shield-Grass				
12	95-1727	3	Screw-Taptite				
14	108-8130	1	Decal-Recoil				
15	108-3762-03	1	Blade-Recycling				
17	108-9774	1	Decal				

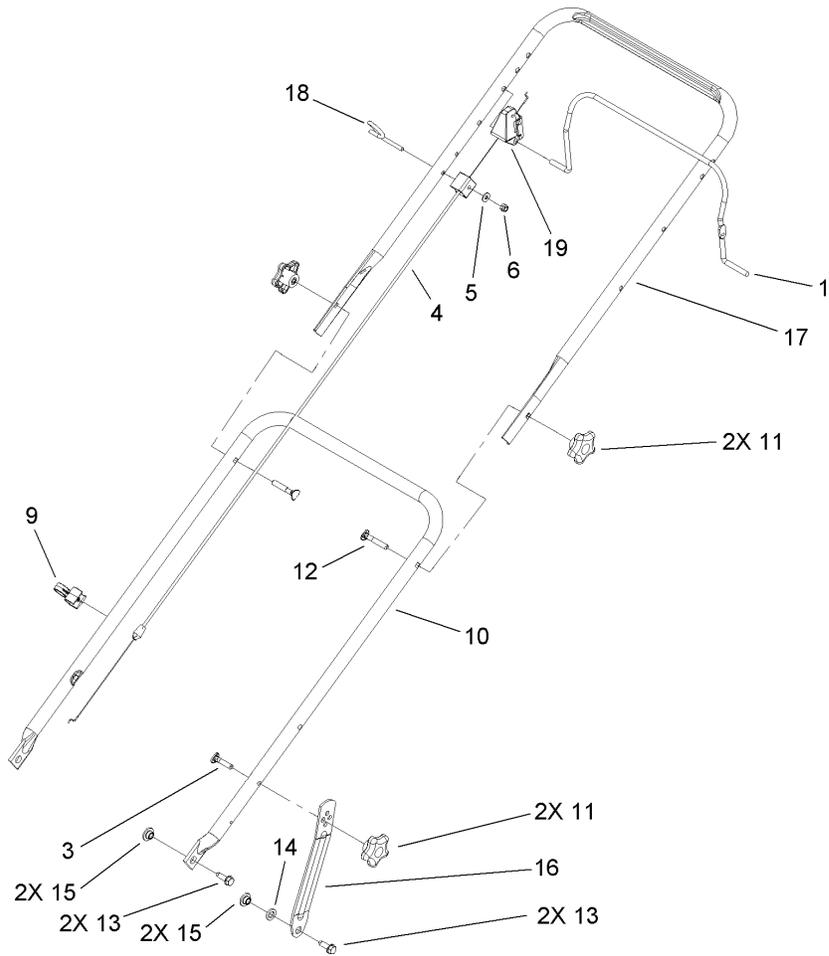

Handle Assembly





Ref	Part No.	Qty.	Description
1	105-6800-03	1	Bail-Brake
3	92-2260	2	Screw-Handle
4	108-8156	1	Cable-Brake, Hp
5	3256-1	1	Washer-Flat
6	3296-73	1	Nut-Lock, NI
9	106-6805	1	Guide-Cable
10	107-7476-05	1	Handle-Lower
11	108-8162	4	Knob-Locking
12	92-2260	2	Screw-Handle
13	701243	4	Screw-HWHTF
14	55-9670	2	Washer
15	27-6600	4	Spacer-Coupling
16	108-8145-03	2	Support-Handle
17	107-3783-05	1	Handle-Upper
18	106-8330	1	Guide-Rope
19	107-0757	1	Stop-Pivot

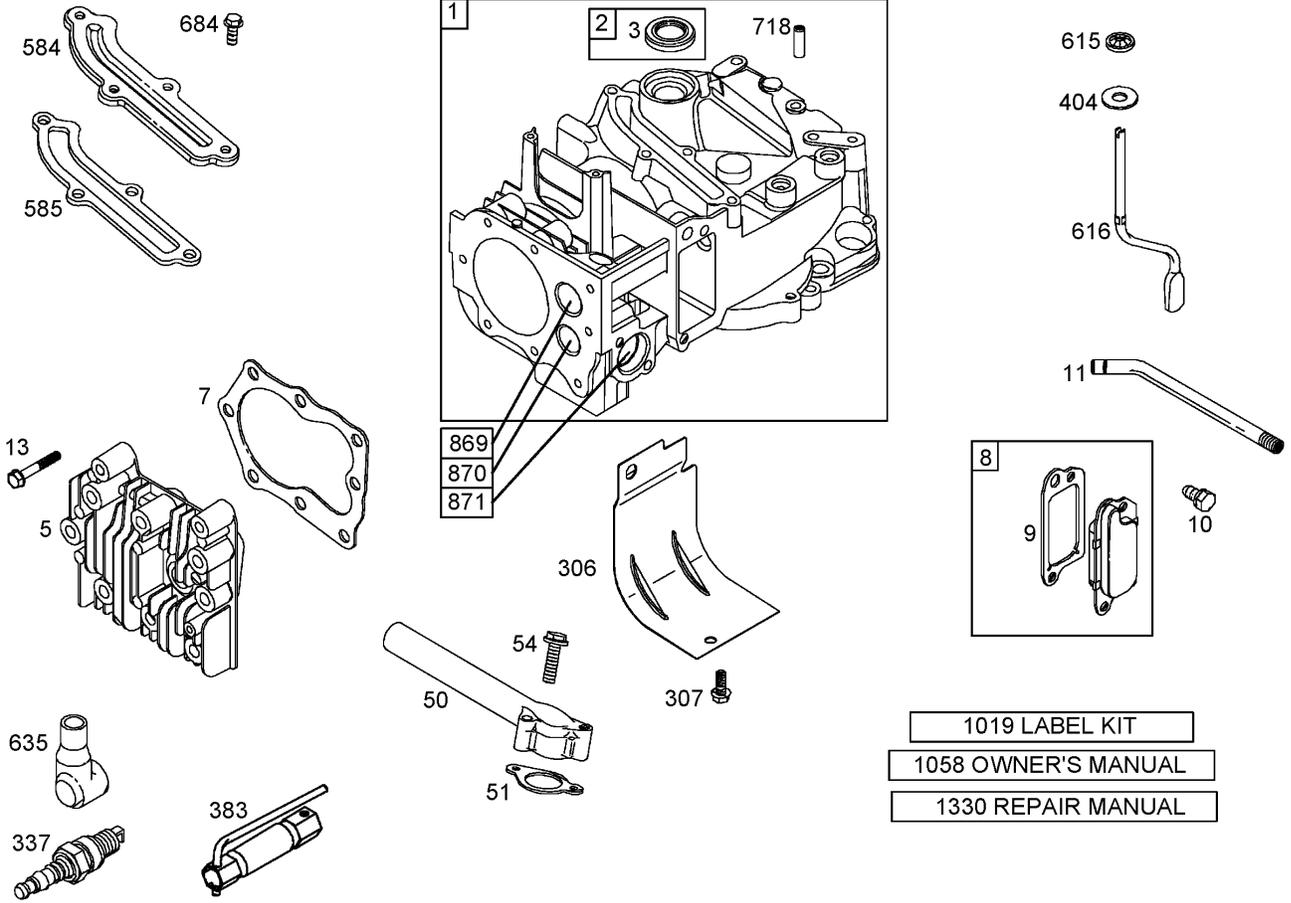

Cylinder Assembly Briggs and Stratton 125K02-0189-E1


Ref	Part No.	Qty.	Description
1	697322	1	Cylinder ASM
2	399269	1	Bushing/Seal Kit
3	299819	1	Seal-Oil (Magneto Side)
5	691160	1	Head-Cylinder
7	692249	1	Gasket-Head, Cylinder
8	695250	1	Breather ASM
9	699472	1	Gasket-Breather
10	691125	1	Screw (Breather Side)
11	691781	1	Tube-Breather
13	690912	1	Screw (Cylinder Head)
50	497465	1	Manifold-Intake
51	272199	1	Gasket-Intake
54	691650	1	Screw (Intake Manifold)
306	690450	1	Shield-Cylinder
307	690345	1	Screw (Cylinder Shield)
337	802592	1	Plug-Spark
383	89838	1	Wrench-Plug, Spark
404	690272	1	Washer (Governor Crank)
584	697734	1	Cover-Passage, Breather
585	691879	1	Gasket-Passage, Breather
615	690340	1	Retainer-Shaft, Governor
616	698801	1	Crank-Governor
635	66538	1	Boot-Plug, Spark
684	690345	1	Screw (Breather Passage Cover)

Ref	Part No.	Qty.	Description
718	690959	1	Pin-Locating
869	691155	1	Seat-Valve (Intake)
870	690380	1	Seat-Valve (Exhaust)
871	262001	1	Bushing-Guide (Exhaust)
871	63709	1	Bushing-Guide (Intake)
1019	494256	1	Label Kit
1058	275177	1	Manual-Owner's
1330	270962	1	Manual-Repair

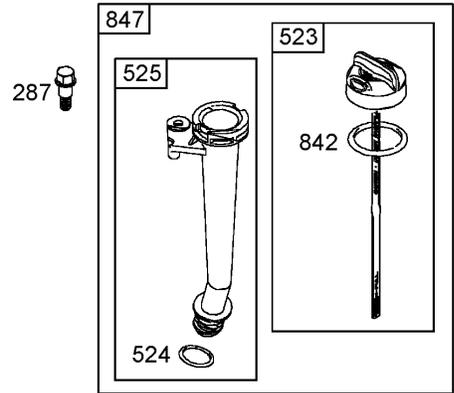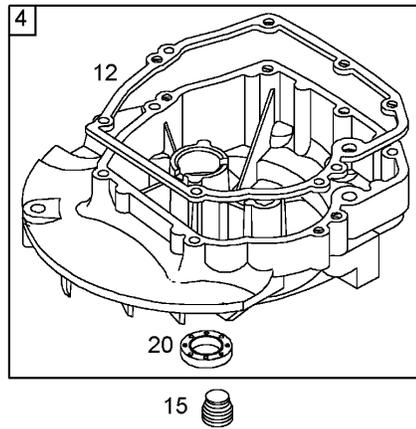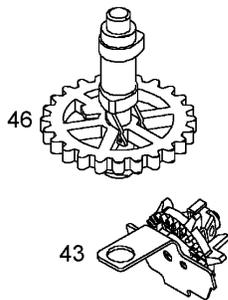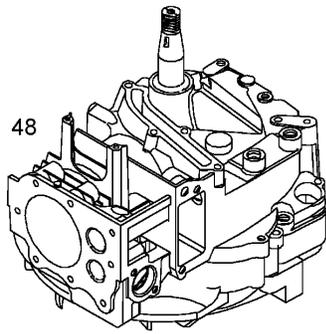

Crankcase Assembly Briggs and Stratton 125K02-0189-E1







Ref	Part No.	Qty.	Description
④4	493279	1	Sump-Engine
④12	692232	1	Gasket-Crankcase (.015 Thick, Standard)
④15	691680	1	Plug-Drain, Oil
④20	399781	1	Seal-Oil
④22	691092	1	Screw (Engine Sump)
④43	691997	1	Slinger-Governor/Oil
④46	691449	1	Camshaft
④48	696276	1	Short Block
④287	690940	1	Screw (Dipstick Tube)
④523	499621	1	Dipstick
④524	692296	1	Seal-Tube, Dipstick
④525	495265	1	Tube-Dipstick
④842	691031	1	Seal-O Ring (Dipstick Tube)
④847	692047	1	Dipstick/Tube ASM

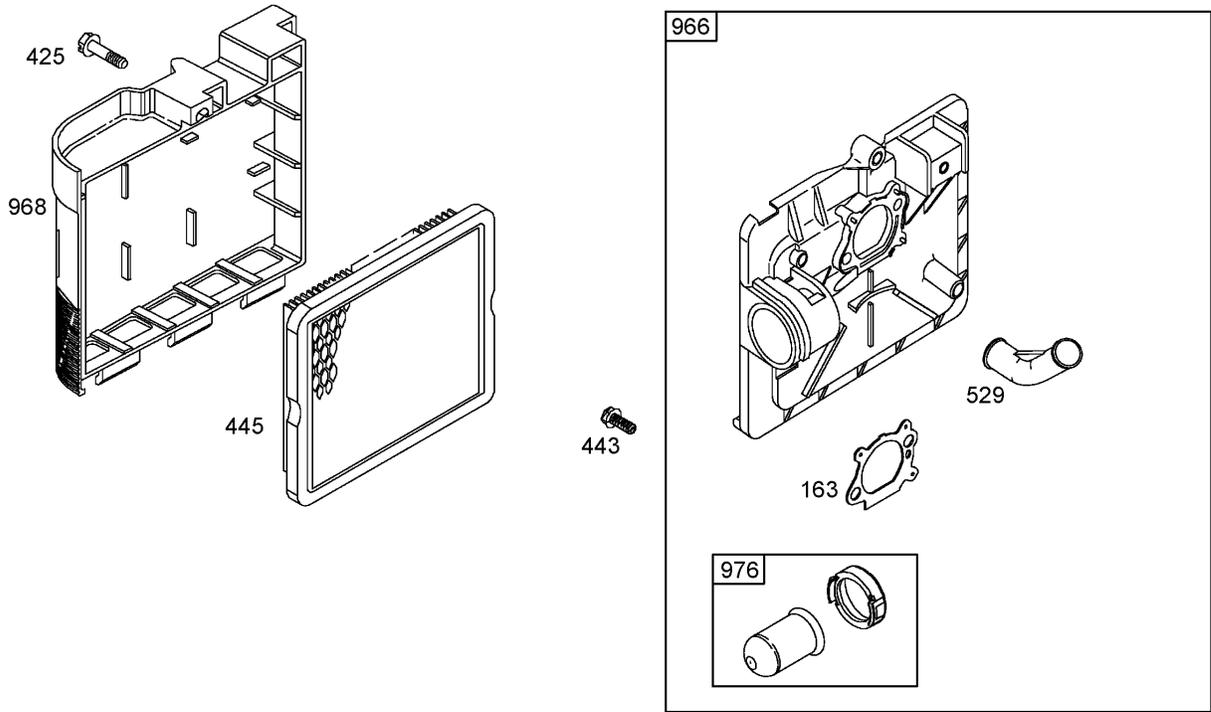

Air Cleaner Assembly Briggs and Stratton 125K02-0189-E1

Ref	Part No.	Qty.	Description
②163	272653	1	Gasket-Air Cleaner
②425	690670	1	Screw (Air Cleaner Cover)
②443	692523	1	Screw (Air Cleaner Primer Base)
②445	491588	1	Filter-Air Cleaner, Cartridge
②529	691923	1	Grommet
②966	496116	1	Base-Primer, Air Cleaner
②968	692298	1	Cover-Cleaner, Air
②976	694395	1	Primer-Carburetor


--	--	--	--

 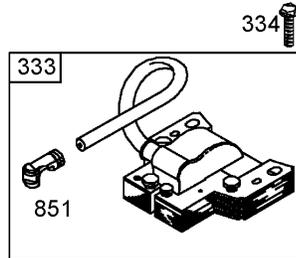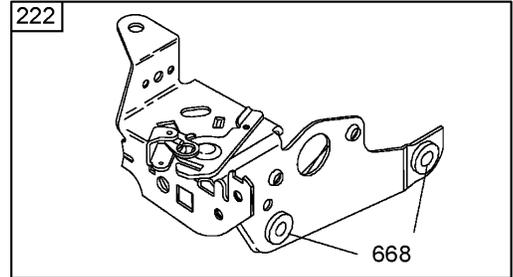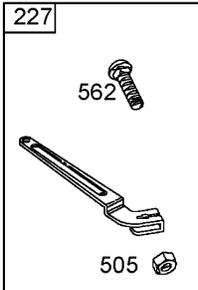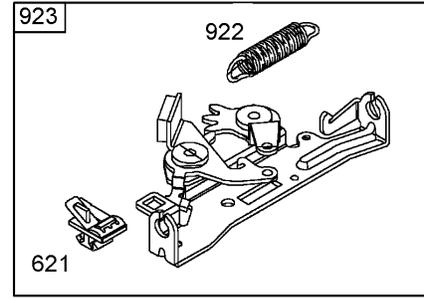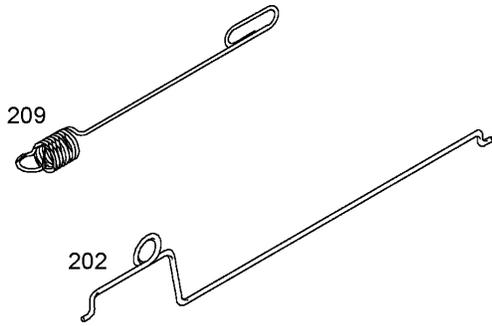

Governor Assembly Briggs and Stratton 125K02-0189-E1


Ref	Part No.	Qty.	Description
2188	693399	1	Screw (Control Bracket)
2202	691829	1	Link-Governor, Mechanical
2209	691292	1	Spring-Governor
2222	791128	1	Bracket-Control
2227	690783	1	Lever-Control, Governor
2333	802574	1	Armature-Magneto
2334	691061	1	Screw (Magneto Armature)
2356	692390	1	Wire-Stop
2505	691251	1	Nut (Governor Control Lever)
2562	691119	1	Bolt (Governor Control Lever)
2621	692310	1	Switch-Stop
2668	493823	1	Spacer
2745	691648	1	Screw (Brake)
2851	493880	1	Terminal-Spark Plug
2922	691831	1	Spring-Brake
2923	691994	1	Brake ASM

--	--	--	--

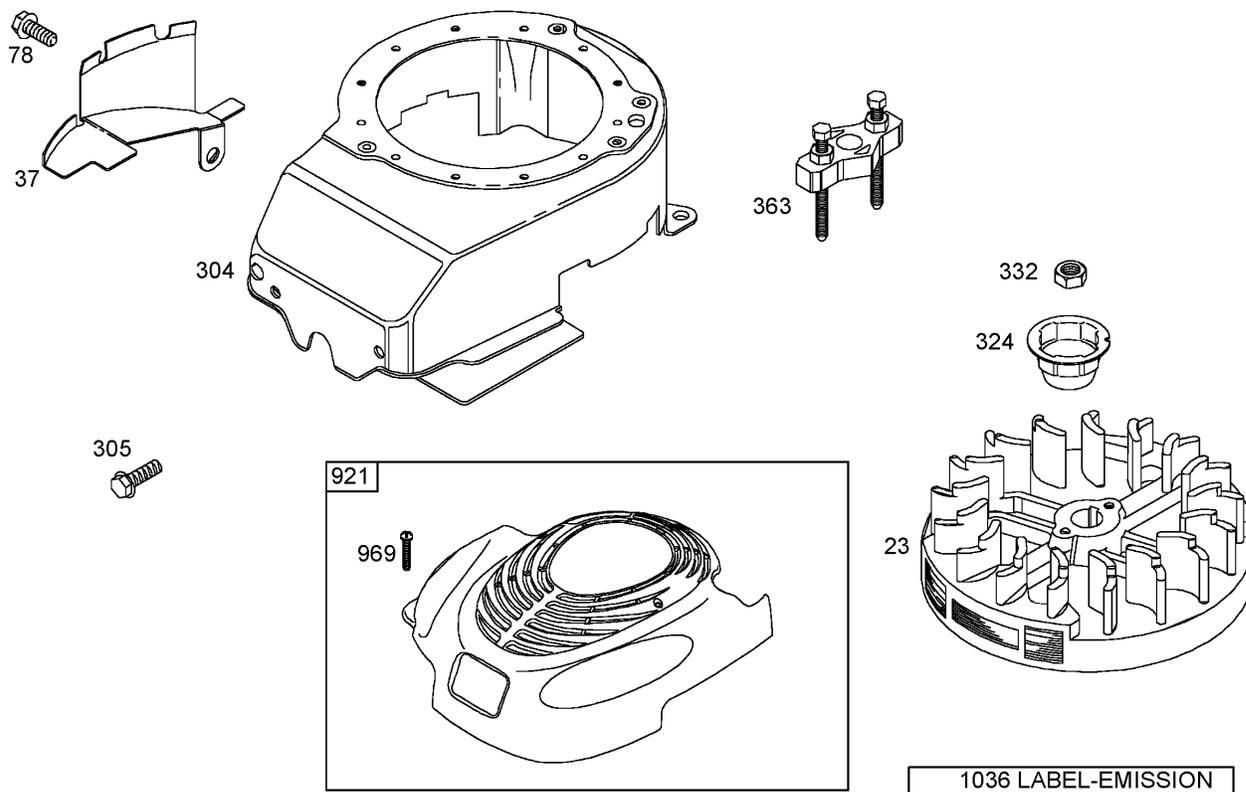

Blower Housing Assembly Briggs and Stratton 125K02-0189-E1



Ref	Part No.	Qty.	Description
23	692315	1	Flywheel
37	694086	1	Guard-Flywheel
78	691108	1	Screw (Flywheel Guard)
304	493293	1	Housing-Blower
305	691108	1	Screw (Blower Housing)
324	695161	1	Cup/Screen ASM
332	690662	1	Nut (Flywheel)
363	19069	1	Puller-Flywheel
921	790036	1	Cover-Housing, Blower
969	691138	1	Screw (Blower Housing Cover)
1036	790411	1	Label-Emission

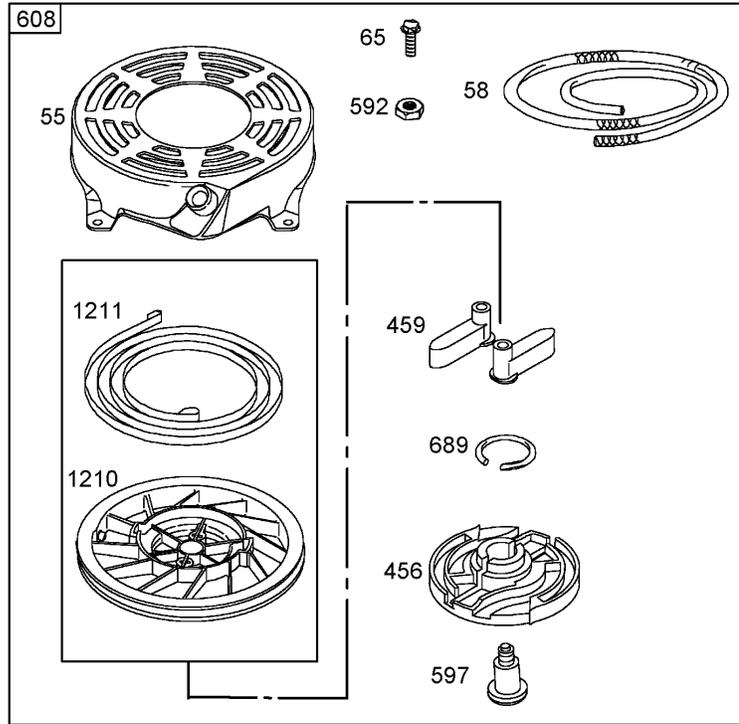

Starter Assembly Briggs and Stratton 125K02-0189-E1

Ref	Part No.	Qty.	Description
●55	691421	1	Housing-Starter, Rewind
●58	791362	1	Rope-Starter (Cut To Required Length)
●65	690837	1	Screw (Rewind Starter)
●456	692299	1	Plate-Friction, Pawl
●459	281505	1	Ratchet-Pawl
●592	690800	1	Nut (Rewind Starter)
●597	691696	1	Screw (Pawl Friction Plate)
●608	791363	1	Starter-Rewind
●689	691855	1	Spring-Friction
●1210	498144	1	Pulley/Spring ASM (Pulley)
●1211	498144	1	Pulley/Spring ASM (Spring)

--	--	--	--

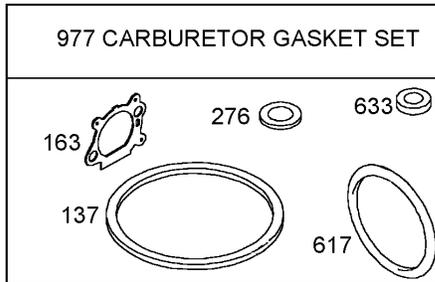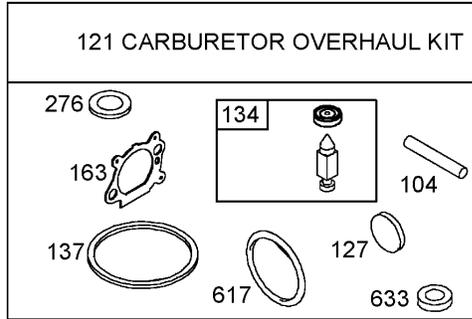

Carburetor Overhaul Kit and Gasket Set Assemblies Briggs and Stratton 125K02-0189-E1

Ref	Part No.	Qty.	Description				
②104	691242	1	Pin-Hinge, Float				
②121	498260	1	Carburetor Overhaul Kit				
②127	694468	1	Plug-Welch				
②134	398188	1	Needle/Seat Kit				
②137	693981	1	Gasket-Bowl, Float				
②163	272653	1	Gasket-Air Cleaner				
②276	271716	1	Washer-Sealing				
②617	270344	1	Seal-O Ring (Intake Manifold)				
②633	691321	1	Seal (Choke/Throttle Shaft)				
②977	498261	1	Carburetor Gasket Set				

NOTES

