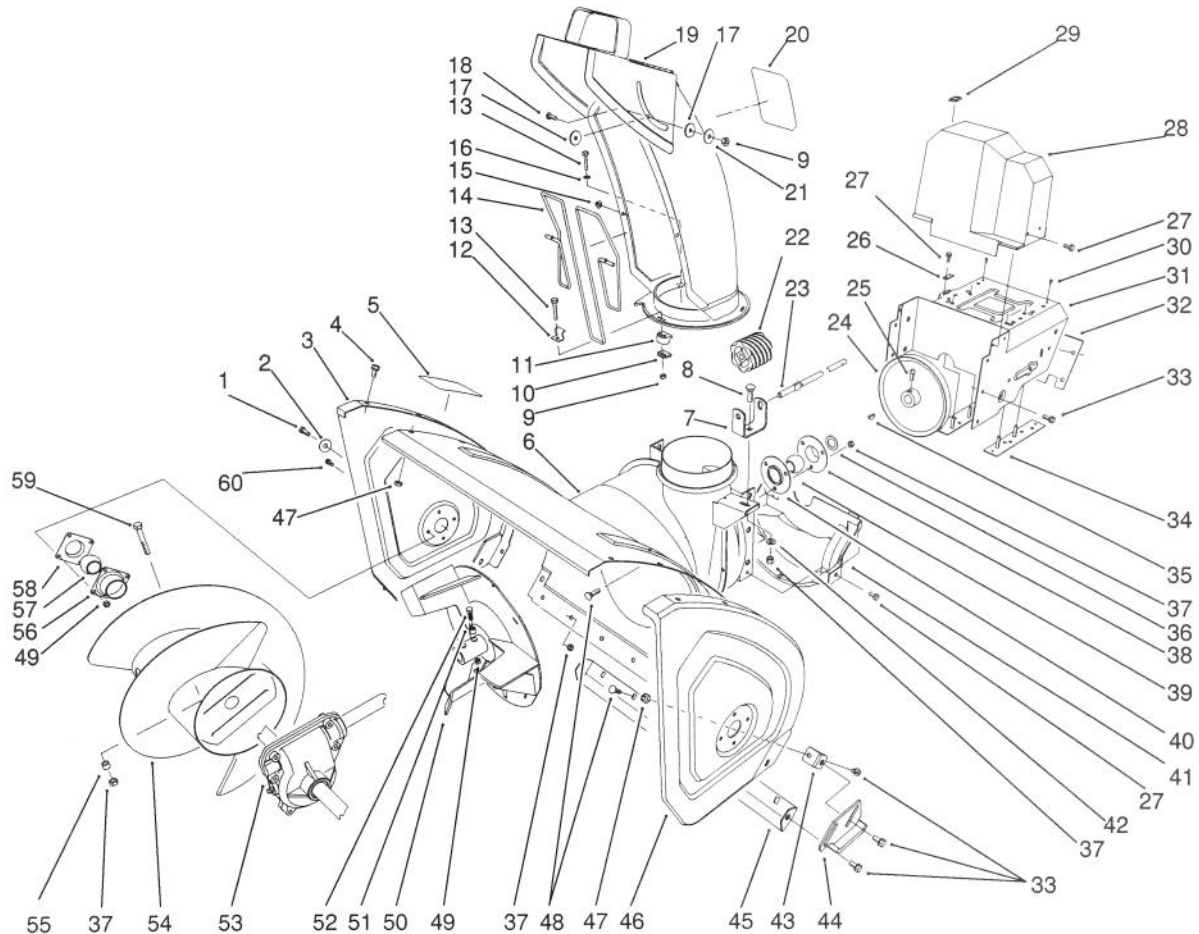 


TORO®

MODEL NO. 38505-1000001 & UP

**PARTS
CATALOG****624 SNOWTHROWER**


C-0045

HOUSING & CHUTE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323-6	Screw - Cap Hex. Hd.	2
2	3-0750	Washer - Retaining	2
3	66-7820	Plate - Side R.H.	1
4	3234-28	Screw - Hex Flange Hd.	10
5	53-7670	Decal - Danger Auger	1
6	62-0720	Housing - 24"	1
7	63-2180	Bracket - Gear	1
8	3230-2	Bolt - Carriage	1
9	3296-2	Nut - Lock	4
10	63-2670	Plate - Chute Retainer	3
11	62-1430	Retainer - Chute	3
12	63-3130	Bracket - Chute Guard	1
13	3274-13	Screw - Machine	3
14	63-3020	Guard - Chute	1
15	3290-326	Nut - Push	2
16	3256-14	Washer - Flat	1
17	63-2900	Washer - Plastic	2

Ref. No.	Part No.	Description	No. Used
18	32122-32	Screw	1
19	62-0840	Chute Assembly	1
20	63-3760	Decal - Danger Chute	1
21	3256-61	Washer - Flat	1
22	62-0820	Gear - Worm	1
23	62-1720	Rod - Chute Gear	1
24	62-1300	Pulley - Impeller	1
25	3242-4	Screw - Set Sq. Hd.	2
26	63-2300	Retainer - Cable	1
27	32144-4	Screw - Hex. Flange Hd.	6
28	63-2080	Cover - Belt (Upper)	1
29	63-3290	Cover - Cable	1
30	3269-23	Rivet	4
31	66-6980	Frame - Engine	1
32	62-1440	Cover - Engine Frame	1
33	3234-7	Screw - Hex. Washer Hd.	12

 *Not Illustrated

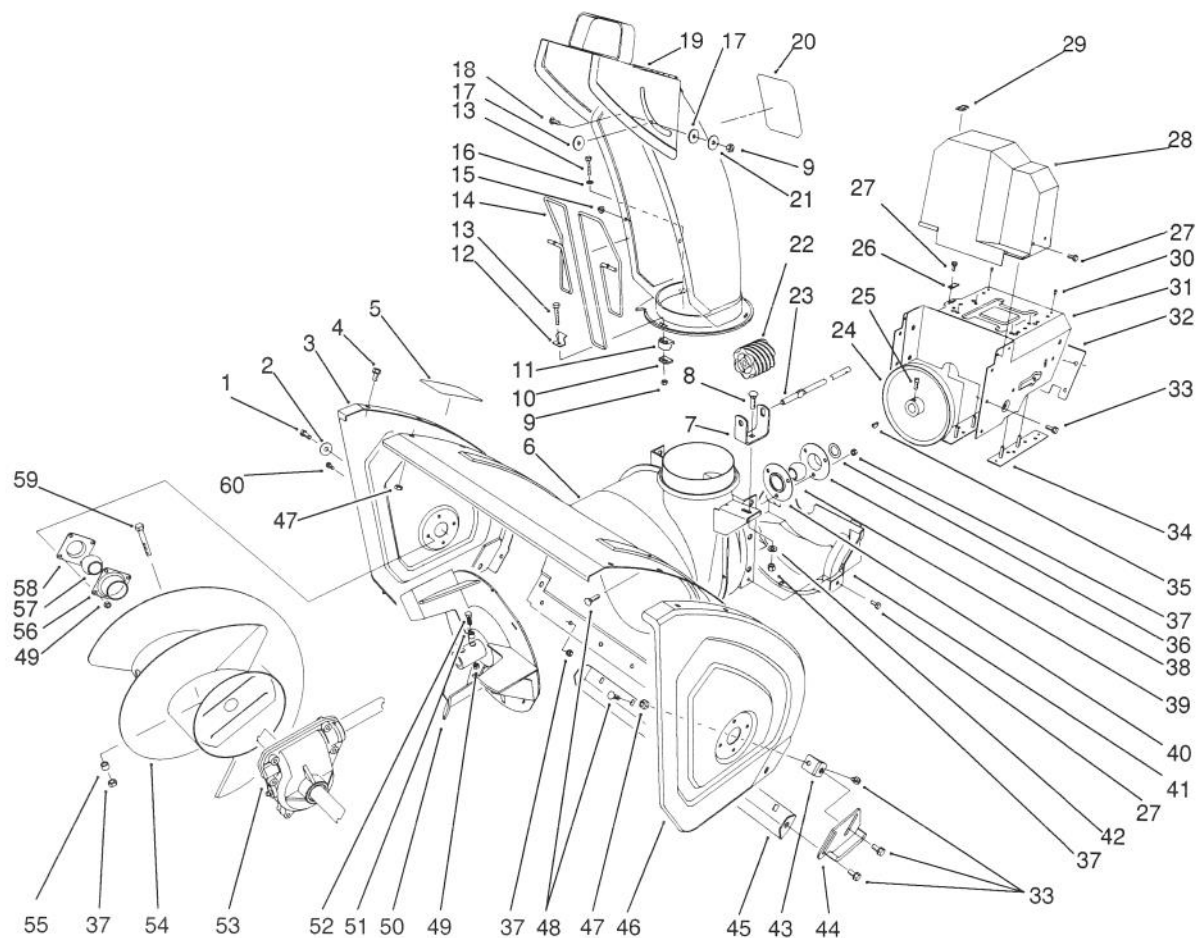


C-0045

HOUSING & CHUTE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
34	68-4090	Plate - Engine Stud L.H.	1
*	68-4080	Plate - Engine Stud R.H.	1
35	3257-23	Key - Woodruff	1
36	252-80	Washer - Thrust	1
37	3296-29	Nut - Lock	12
38		Flange - Bearing (Rear)	1
39	63-3450	Bearing - Impeller	1
40		Flange - Bearing (Front)	1
41	62-1400	Cover - Belt (Lower)	1
42	3256-23	Washer - Flat	1
43	62-1240	Bracket - Skid	2
44	74-1100	Plate Skid Assembly (1 Pair)	1
45	66-7762	Blade - Scraper	1
46	66-7830	Plate - Side L.H.	1
47	3296-47	Nut - Lock	12
48	3230-23	Screw - Carriage	9

Ref. No.	Part No.	Description	No. Used
49	3296-42	Nut - Lock	10
50	66-7910	Impeller	1
51	66-8010	Spacer	2
52	321-44	Screw - Cap Hex. Hd.	2
53	66-8020	Auger Gearbox Assembly	1
54	68-7450	Auger - R.H.	1
*	68-7460	Auger - L.H.	1
55	25-5090	Spacer - Auger Hub	2
56	20-0990	Flange - Bearing (Inner)	2
57	20-0980	Bearing - Auger	2
58	20-1000	Flange - Bearing (Outer)	2
59	17-7030	Bolt - Auger	2
60	321-3	Screw - Cap Hex Hd.	8
*	12-8789	Impeller Bearing Assembly (Incl. Ref. #38-40)	1

 *Not Illustrated

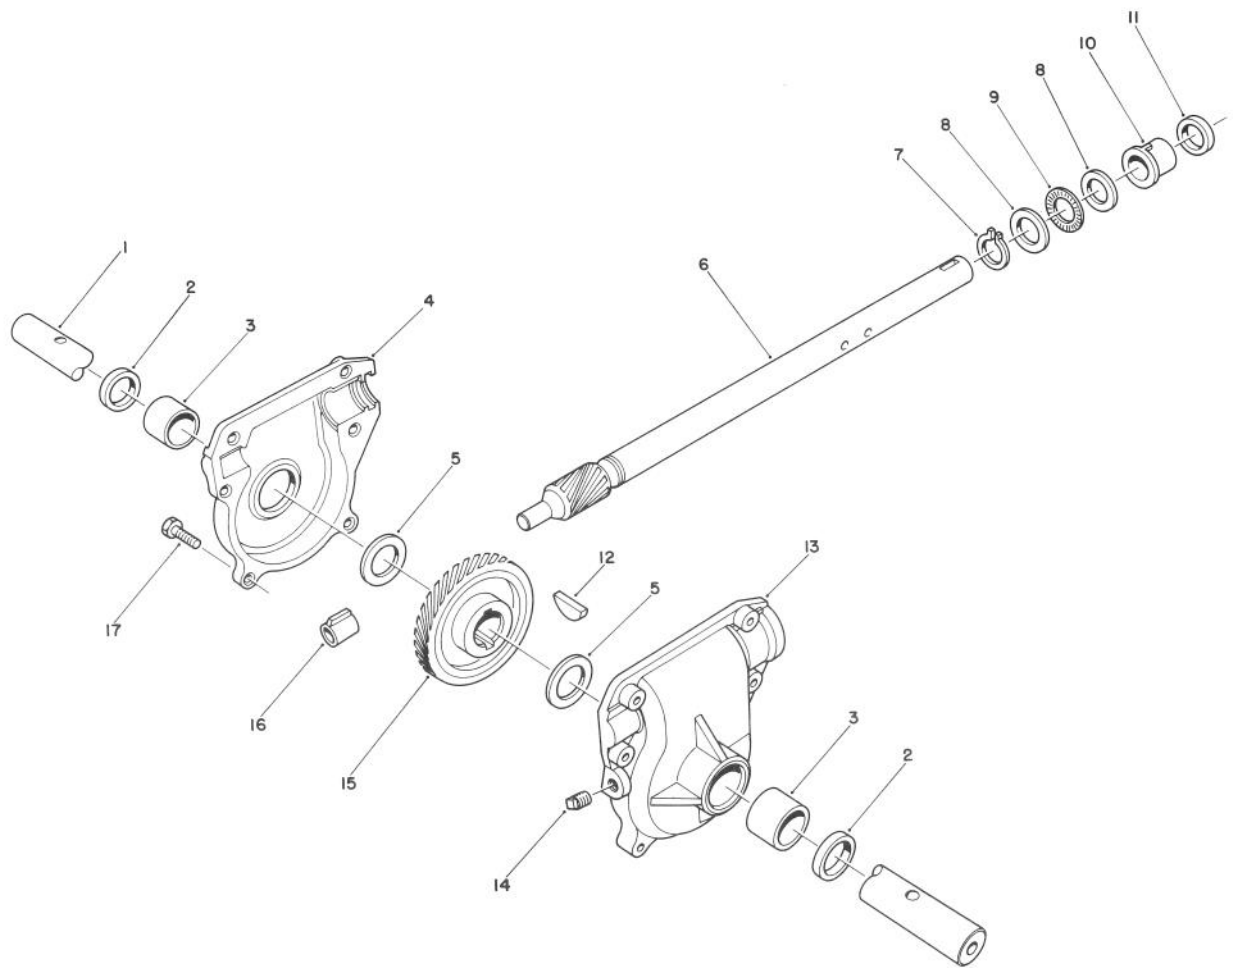


C-0046

24" AUGER GEARCASE ASSEMBLY NO. 66-8020

Ref. No.	Part No.	Description	No. Used
1	62-1530	Shaft - Auger (24")	1
2	7-0045	Seal - Oil	2
3	256-237	Bushing - Sleeve	2
4	62-0570	Gearcase Assembly - R.H. (Incl. Ref. # 2-3)	2
5	252-71	Bearing - Thrust	2
6	66-7810	Shaft - Impeller	1
7	32151-33	Ring - Snap	1
8	252-78	Washer - Thrust	2
9	252-76	Bearing - Thrust	1

Ref. No.	Part No.	Description	No. Used
10	37-6560	Bushing - Input	1
11	253-149	Seal - Input	1
12	3257-10	Key - Woodruff	1
13	62-0580	Gearcase Assembly - L.H. (Incl. Ref. # 2-3)	1
14	281-1	Plug - Pipe Sq. Hd.	1
15	62-0120	Gear - Helical	1
16	62-1150	Bushing - Worm	1
17	32144-86	Screw - Hex Washer Hd.	6
*	505-105	Sealant 100g Tube	1

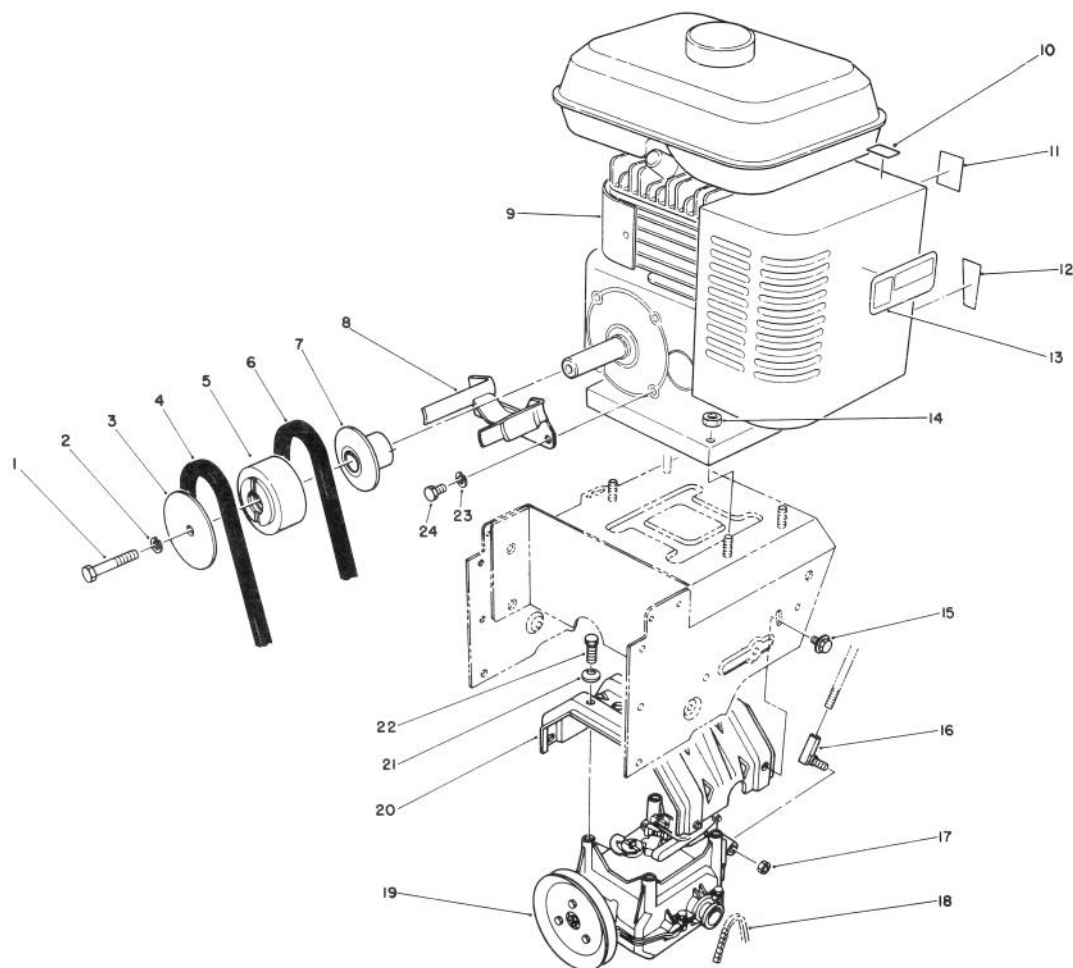 


C-0049

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3211-9	Screw - Cap Hex. Hd.	1
2	3253-21	Washer - Lock	1
3	62-0910	Sheave Half - Impeller	1
4	63-2960	Belt - Impeller	1
5	62-0900	Hub - Sheave	1
6	63-2950	Belt - Traction	1
7	62-0890	Sheave Half - Traction	1
8	68-7490	Guide - Belt	1
9	68-8280	Engine - 6 hp.	1
10	68-8540	Decal - Primer	1
11	63-3490	Decal - Choke	1
12	63-3190	Decal - Throttle	1


Ref. No.	Part No.	Description	No. Used
13	63-2310	Decal - Hot Surface	1
14	32128-20	Nut - Lock	4
15	3234-7	Screw - Hex Flange Hd.	4
16	63-2640	Joint- Ball	1
17	3296-39	Nut - Lock	1
18	63-2930	Chain - Drive	1
19	66-8030	Transmission Assembly	1
20	63-2990	Frame - Transmission	1
21	3290-461	Washer - Belleville	4
22	11-0590	Screw - Cap Hex Hd.	4
23	3253-4	Washer - Lock	2
24	3210-1	Screw - Cap Hex Hd.	2

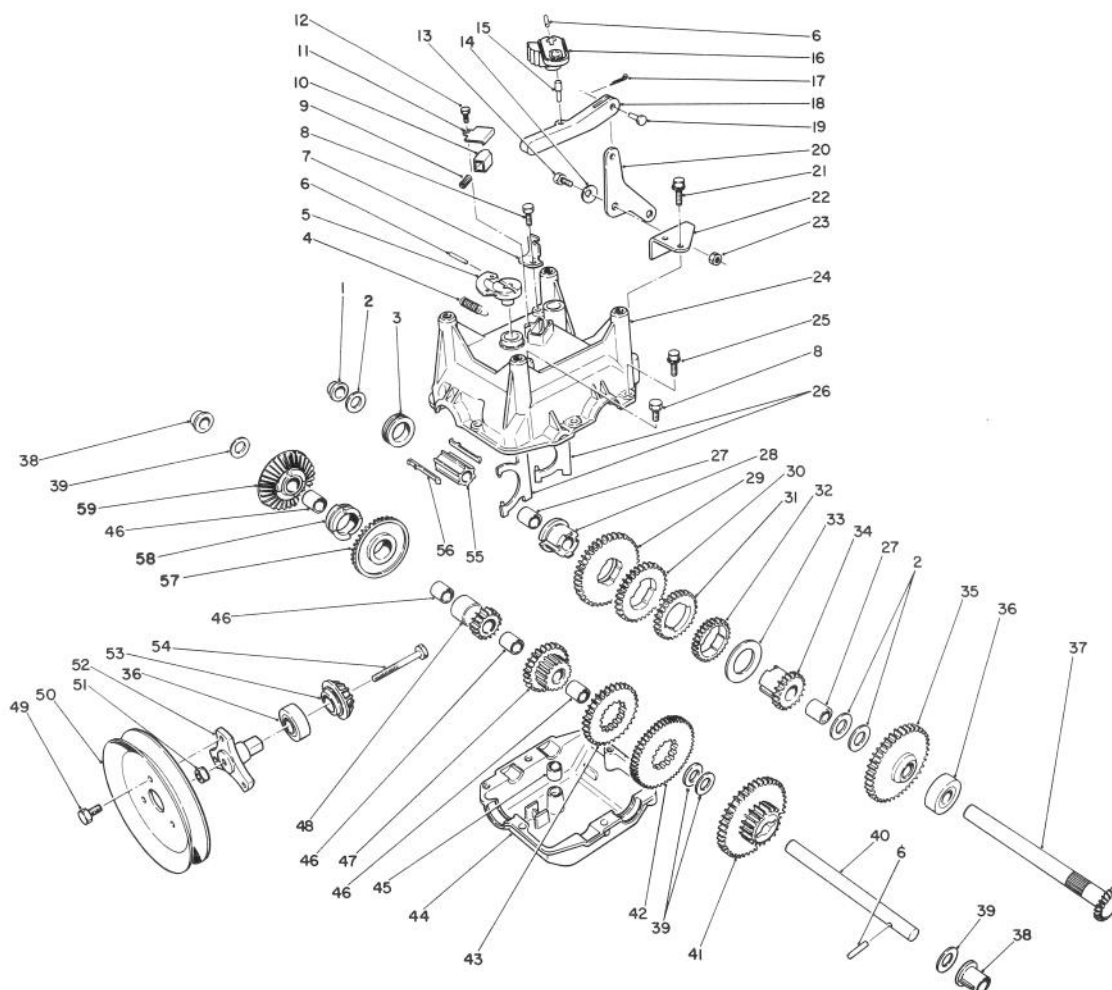 

C-0052

TRANSMISSION ASSEMBLY NO. 66-8030

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	62-1180	Bushing - Output (Flange)	1	22	62-1190	Bracket - Bellcrank	1
2	252-59	Washer - Thrust	3	23	3296-42	Nut - Lock	1
3	62-0430	Collar - Shift (Speed)	1	24	62-0490	Gear Case - Upper	1
4	63-2920	Spring - Extension (F/R Return)	1	25	32144-86	Screw - Hex. Washer Hd.	6
5	62-0880	Lever - Direction Shift	1	26	62-1040	Yoke-Shift	2
6	32121-106	Pin - Coil	3	27	62-1350	Bushing - Output	2
7	62-1740	Bracket - Cable	1	28	62-0320	Sleeve	1
8	32144-4	Screw - Self Tapping	2	29	62-0240	Gear - 45T	1
9	63-2890	Spring - Compression (Detent)	1	30	62-0220	Gear - 34T	1
10	62-1020	Button - Detent	1	31	62-0200	Gear - 27T	1
11	62-1690	Cover - Detent	1	32	62-0250	Gear - 29T	1
12	32104-71	Screw - Pan Hd.	1	33	63-2280	Washer - Thrust	1
13	63-3410	Bolt - Shoulder	1	34	62-0340	Sleeve - Gear 19T	1
14	3290-477	Washer - Curved	1	35	62-0370	Gear - 41T	1
15	63-2190	Pin - Gearshift Link	1	36	38-7820	Bearing - Ball	2
16	62-0870	Lever - Gear Shift	1	37	62-1080	Shaft - Output	1
17	3272-1	Pin - Cotter	1	38	62-1170	Bushing - Flange	2
18	62-0860	Link - Gearshift	1	39	257-10	Washer - Thrust	4
19	283-3	Pin - Clevis	1	40	62-0330	Shaft - Intermediate	1
20	63-2600	Bellcrank	1	41	62-0360	Gear - Compound 19T/41T	1
21	32104-95	Screw - Hex. Washer Hd.	2	42	62-0260	Gear - 51T	1
				43	62-0210	Gear - 33T	1
				44	62-0480	Gear Case - Lower	1

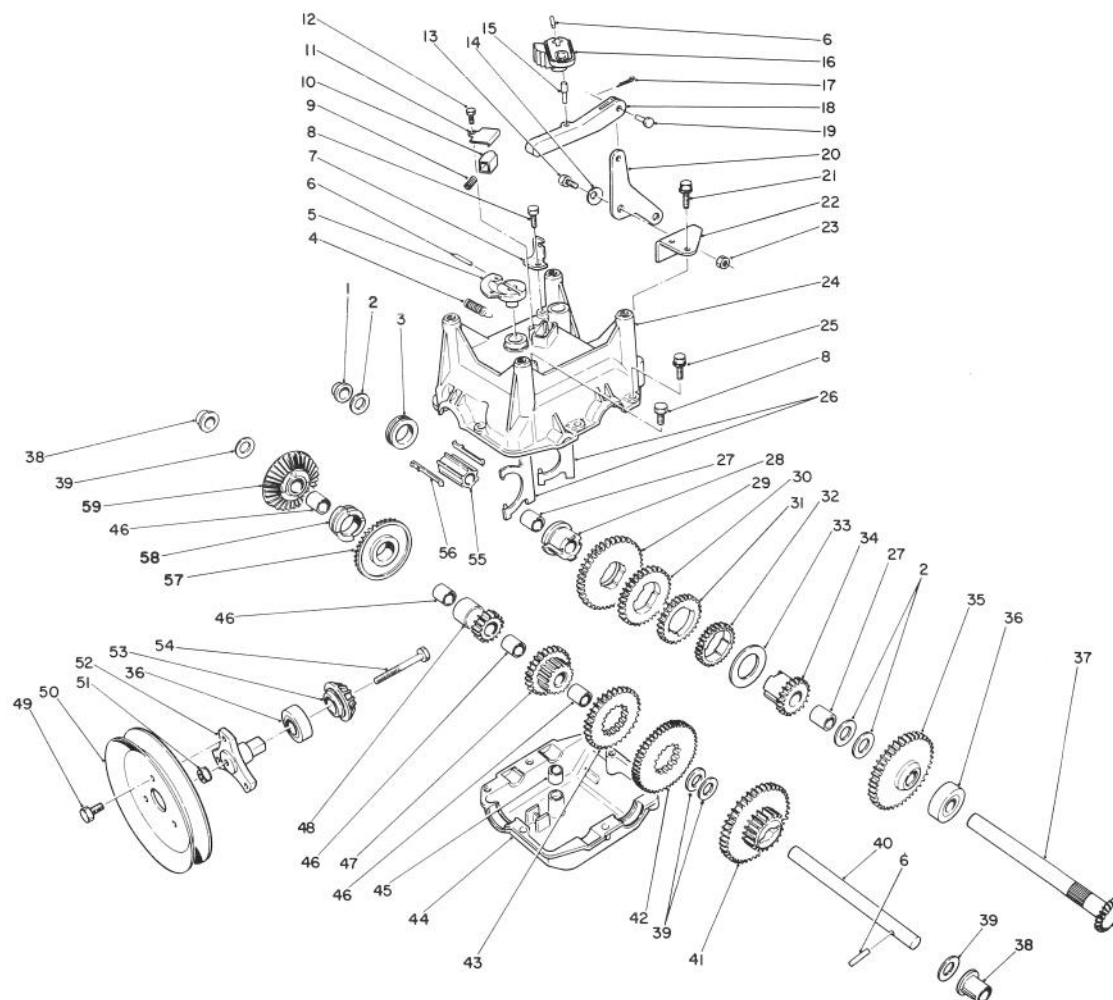 


C-0052

TRANSMISSION ASSEMBLY NO. 66-8030 (Continued)

Ref. No.	Part No.	Description	No. Used
45	29-9570	Bushing - Yoke	1
46	62-1160	Bushing - Intermediate	4
47	68-4310	Gear - 26T	1
48	62-0500	Gear - 15T	1
49	12-3270	Screw	3
50	62-1310	Pulley - Traction	1
51	32128-32	Nut - Flange Lock	1
52	62-0380	Hub - Pulley	1

Ref. No.	Part No.	Description	No. Used
53	62-0350	Pinion - Bevel 19T	1
54	321-15	Screw - Hex. Hd. Cap	1
55	68-4320	Sleeve - Shift	1
56	62-0310	Key - Shift	2
57	67-5870	Gear - Bevel 36T	1
58	67-5880	Collar - Shift	1
59	13-3559	Gear - Bevel Reverse 36T (Incl. Ref. #46)	1

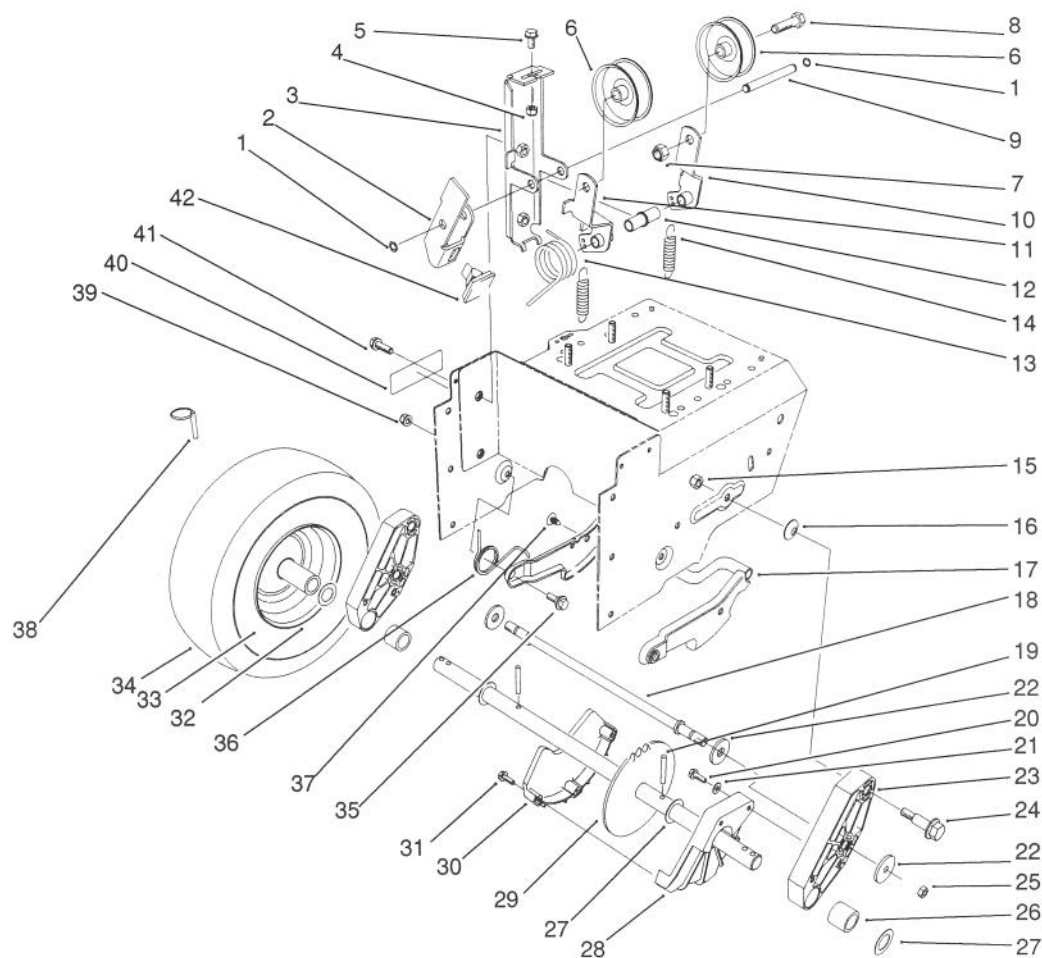 


C-0053

TRACTION DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32120-46	Ring - Retaining	2	24	62-1330	Bolt - Shoulder	2
2	63-2810	Arm - Brake	1	25	3296-23	Nut - Lock	2
3	63-2850	Bracket - Idler Arm	1	26	63-2250	Bushing - Axle	2
4	3296-42	Nut - Lock	1	27	252-80	Washer - Thrust	4
5	3234-13	Screw - Hex. Washer Hd.	1	28	62-1010	Guard - Chain L.H.	1
6	3-4244	Pulley - Idler	2	29	63-2110	Axle Assembly	1
7	3296-59	Nut - Lock	2	30	62-1000	Guard - Chain R.H.	1
8	323-7	Screw - Hex. Hd. Cap	2	31	32104-121	Screw - Hex. Flange Hd.	3
9	62-0970	Pin - Idler	1	32	241-128	Rim - Wheel	2
10	62-1260	Arm - Traction Idler	1	33	232-46	Tube - Inner	2
11	62-1280	Arm - Impeller Idler	1	34	231-120	Tire	2
12	62-1210	Bushing - Idler	1	35	5-2490	Bolt - Shoulder	2
13	63-2880	Spring - Torsion	1	36	63-2740	Spring - Torsion	1
14	63-2870	Spring - Extension	2	37	3290-476	Fastener - Panel	1
15	3296-39	Nut - Lock	2	38	3290-243	Pin - Klik	2
16	3290-461	Washer - Belleville	2	39	3296-47	Nut - Lock	2
17	62-0470	Latch - Arm	1	40	63-3470	Decal - Warning	1
18	66-7720	Rod - Latch	1	41	3234-7	Screw - Hex. Flange Hd.	2
19	32121-9	Pin - Roll	2	42	66-8060	Pad - Brake	1
20	32144-4	Screw - Hex. Flange Hd.	2	*	67-9220	Wheel & Tire Assembly (Incl. Ref. #32-34)	1
21	3256-1	Washer - Flat	2	*	56-2700	Tire Chains Kit (Optional)	1
22	63-3340	Washer	4	*	44-1190	Weight Kit (Optional)	1
23	66-7740	Pivot Arm Assembly (Incl. Ref. # 26)	2				

 
*Not Illustrated

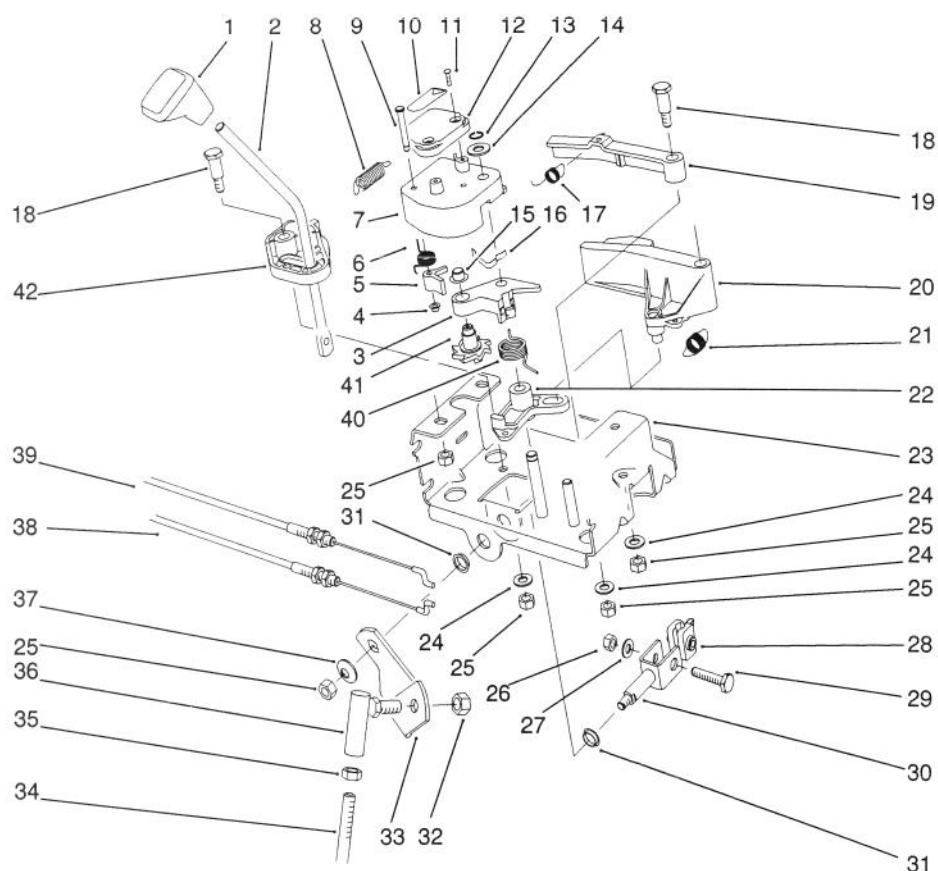

C-0054

TRACTION LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	62-1290	Knob - Shift	1	21	63-2230	Spring - Extension (Reverse Lever)	1
2	67-9240	Rod - Shift (Upper)	1	22	62-1120	Lever - Reverse	1
3	62-1110	Lever - Index Wheel	1	23	63-2150	Frame - Control	1
4	3290-422	Nut - Push	1	24	3256-23	Washer - Flat	3
5	62-0180	Tang - Index	1	25	3296-29	Nut - Lock	7
6	62-1650	Spring - Torsion	1	26	3296-42	Nut - Lock	1
7	62-1100	Lever - Latch	1	27	3256-1	Washer - Flat	1
8	63-2220	Spring - Extension (Latch Lever)	1	28	67-9250	Retainer - Shift Rod	1
9	63-2610	Pin - Tang	1	29	321-43	Screw - Hex. Hd.Cap	1
10	63-2480	Decal - #2	1	30	66-7730	Clevis	1
11	32104-118	Screw - Pan Hd.	2	31	256-296	Bushing - Nyliner	2
12	62-1140	Cover - Latch	1	32	3296-39	Nut - Lock	1
13	32120-46	Ring - Retaining	1	33	63-2630	Bracket - Shift	1
14	257-9	Washer - Thrust	1	34	63-2620	Rod - Shift (Lower)	1
15	3290-320	Nut - Push	1	35	3220-3	Nut - Jam	2
16	62-1710	Spring - Flat	1	36	63-2640	Joint - Ball	1
17	63-2240	Spring - Extension (Lockout)	1	37	3290-456	Washer - Belleville	1
18	63-2650	Screw - Shoulder	2	38	63-2210	Cable - Gearbox	1
19	62-1700	Lever - Lockout	1	39	63-2200	Cable - Latch	1
20	62-1130	Lever - Reverse	1	40	63-2270	Spring - Torsion	1
				41	62-0170	Wheel - Index	1
				42	62-1470	Base - Lockout	1

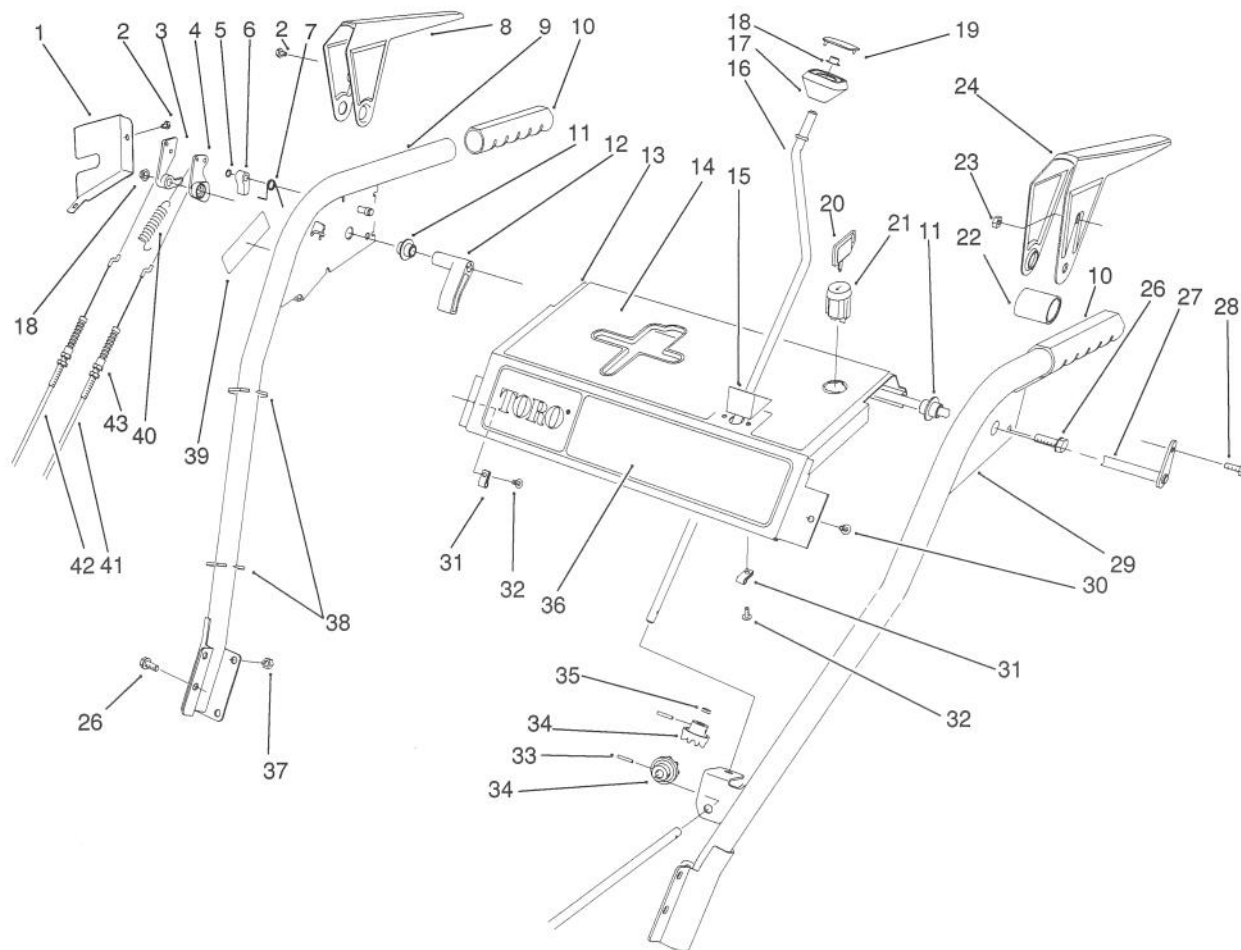 


C-0056

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	63-2170	Cover - Lever Lock	1	23	3296-2	Nut - Lock	1
2	2210-250	Screw	3	24	62-1060	Lever - Traction	1
3	62-0300	Tang - Locking	1	26	3234-7	Screw - Hex. Flange Hd.	6
4	62-0290	Cam - Release	1	27	63-2030	Rod - Cross	1
5	32151-66	Ring - Retaining	1	28	3290-359	Screw	1
6	62-0280	Latch - Lock	1	29	66-8090	Handle - L.H.	1
7	63-2910	Spring - Torsion	1	30	32104-76	Screw - Self Tapping	2
8	62-1050	Lever - Impeller	1	31	2412-101	Clip - Wire	2
9	62-1380	Handle - R.H.	1	32	32104-118	Screw - Pan Hd.	2
10	66-7850	Handlegrip	2	33	32121-50	Pin - Roll	2
11	62-1070	Bushing - Lever	2	34	62-1460	Gear - Universal	2
12	62-1640	Lever - Trip	1	35	62-1230	Washer - Rubber	1
13	66-8100	Panel - Control	1	36	63-2500	Decal - Panel Front	1
14	63-2550	Decal - Panel Top	1	37	3296-47	Nut - Lock	4
15	62-1490	Plate - Guide	1	38	3290-378	Tie - Cable	2
16	63-2160	Rod - Chute Crank	1	39	63-3470	Decal - Warning	1
17	62-1320	Knob - Chute Control	1	40	63-2720	Spring - Extension	1
18	3290-320	Nut - Push	2	41	63-2710	Cable - Traction	1
19	62-1520	Cover - Knob	1	42	63-2700	Cable - Impeller	1
20	63-8360	Key - Switch	1	43	3296-42	Nut - Lock	2
21	40-5940	Switch - On/Off	1	*	63-3430	Harness - Wire	1
22	63-3380	Spacer - Traction Lever	1				

 *Not Illustrated

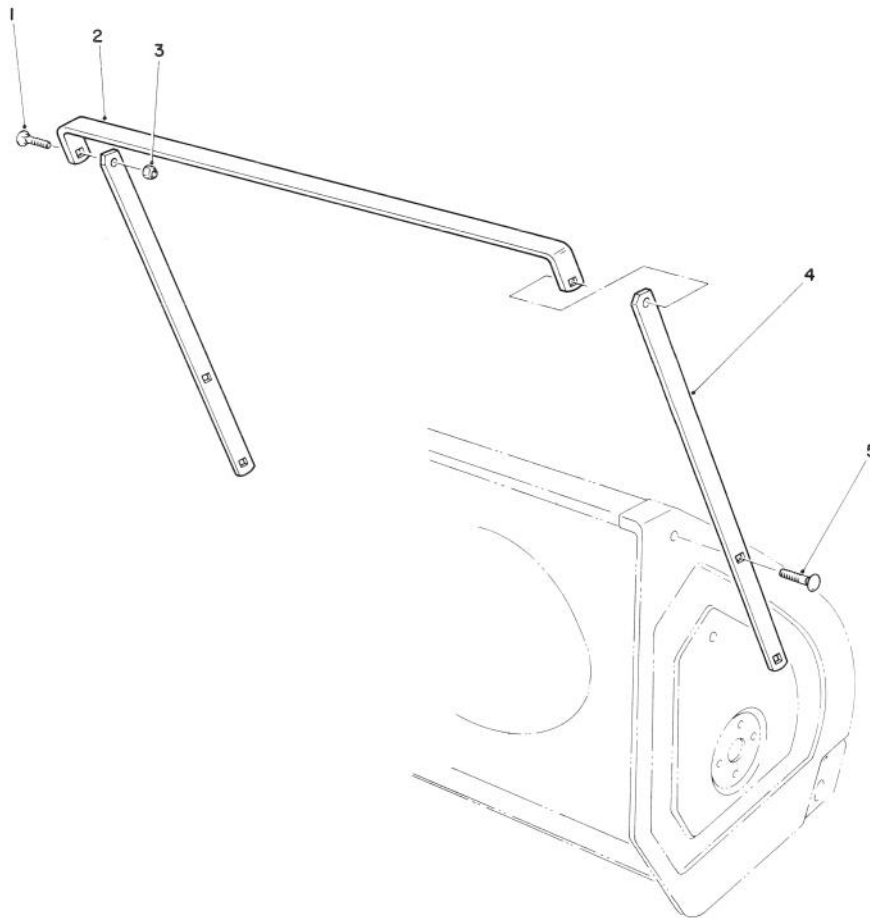


C-0068

DRIFT BREAKER ASSEMBLY (Optional)

Ref. No.	Part No.	Description	No. Used
1	3230-16	Bolt - Carriage	2
†2		Breaker - Top (24")	1
3	3296-29	Nut - Lock	6
†4		Breaker - Side	2

Ref. No.	Part No.	Description	No. Used
5	3230-1	Bolt - Carriage	4
*	66-7960	Drift Breaker Kit (Incl. Ref. #1-5)	1

 *Not Illustrated
†Items not sold separately.

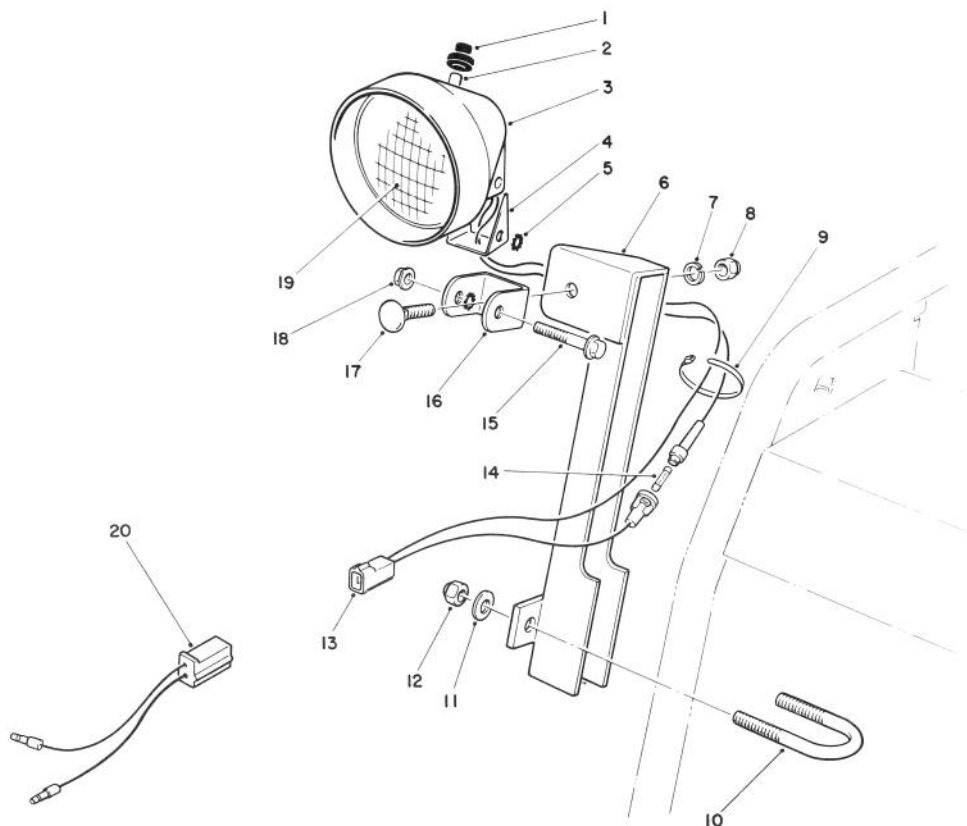


C-0072

LIGHT KIT NO. 66-7950 (Optional)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	218-473	Boot - Switch	1	12	3296-29	Nut - Lock	2
2	218-553	Switch Assembly	1	13	218-555	Wire Assembly	1
3	218-552	Bucket - Headlamp	1	†14		Fuse - 7-1/2 Amp.	1
4	218-554	Bracket	1	15	322-13	Screw - Hex. Flange Hd.	1
5	3255-8	Washer - Lock	2	16	218-556	Bracket - U	1
6	68-7110	Mount - Lamp	1	17	3231-2	Bolt - Carriage	1
7	3253-21	Washer - Lock	1	18	32128-35	Nut - Flange Lock	1
8	3217-7	Nut - Hex.	1	19	218-16	Bulb - Sealed Beam	1
9	3290-378	Tie Wrap	2	20	68-9340	Wire Assembly	1
10	68-7140	Bolt - U	1	*	54-9871	Headlamp Assembly (Incl. Ref. #1-5, 7-8 & 13-19)	1
11	3256-23	Washer - Flat	2				

*Not Illustrated

 †Obtain Locally

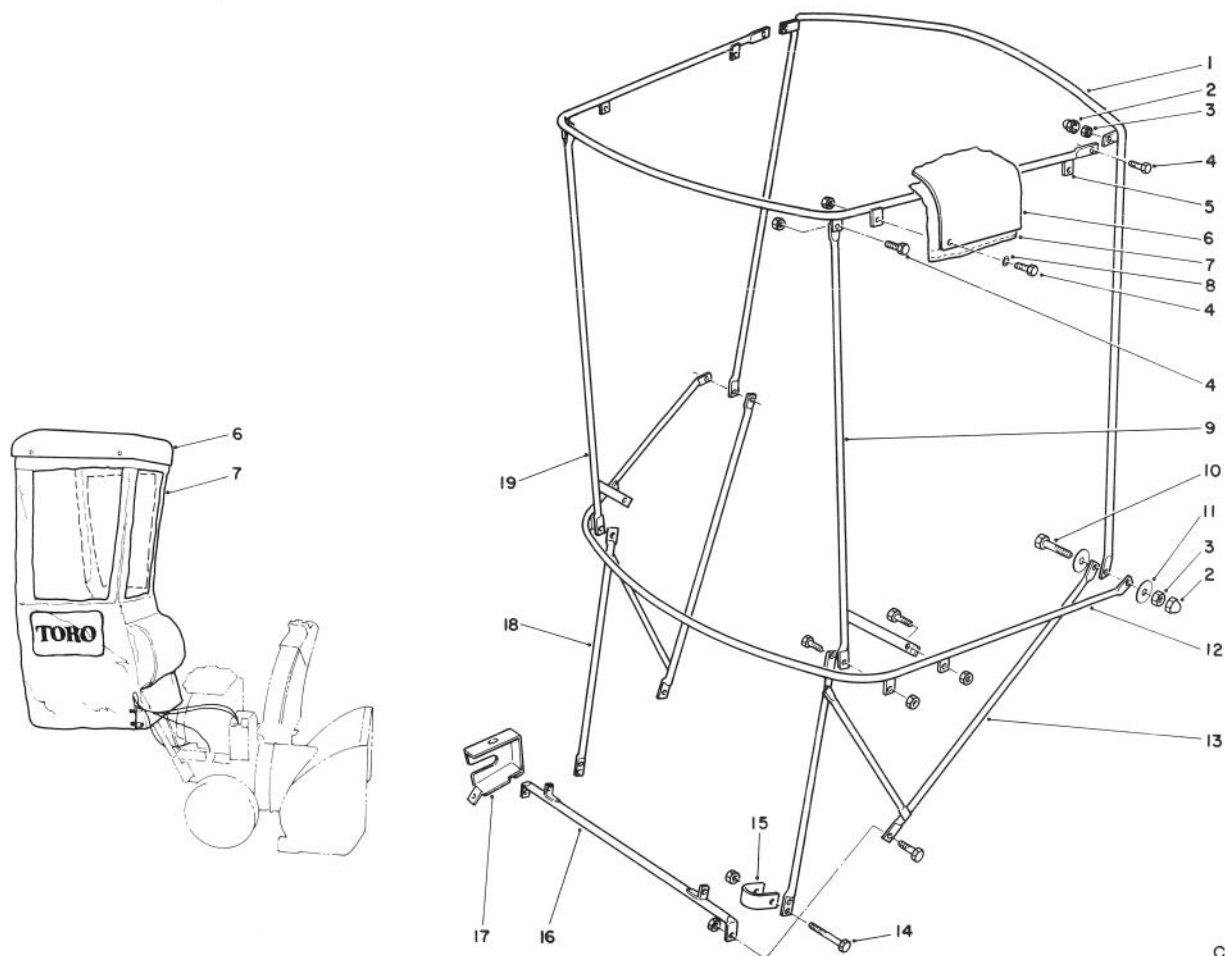


C-0138

SNOW CAB ASSEMBLY NO. 68-9500 (Optional)

Ref. No.	Part No.	Description	No. Used
1	70-2260	Bow - Vertical	1
2	70-2240	Cover - Nut	4
3	32153-4	Nut - Lock	18
4	321-4	Screw - Cap Hex. Hd.	14
5	70-2250	Frame - Top	1
†6		Top - Plastic	1
†7		Cover - Vinyl	1
8	3256-1	Washer - Flat	4
9	70-2220	Post - Corner L.H.	1
10	321-6	Screw - Hex. Hd. Cap	2

Ref. No.	Part No.	Description	No. Used
11	3256-58	Washer - Fender	4
12	70-2270	Bow - Horizontal	1
13	66-6230	Bracket - Attaching L.H.	1
14	321-11	Screw - Hex. Hd. Cap	2
15	66-6240	Clamp - U	2
16	66-6210	Bracket - Base Attaching	1
17	63-3330	Cover - Lever	1
18	66-6220	Bracket - Attaching R.H.	1
19	70-2230	Post - Corner R.H.	1

 †Not sold separate

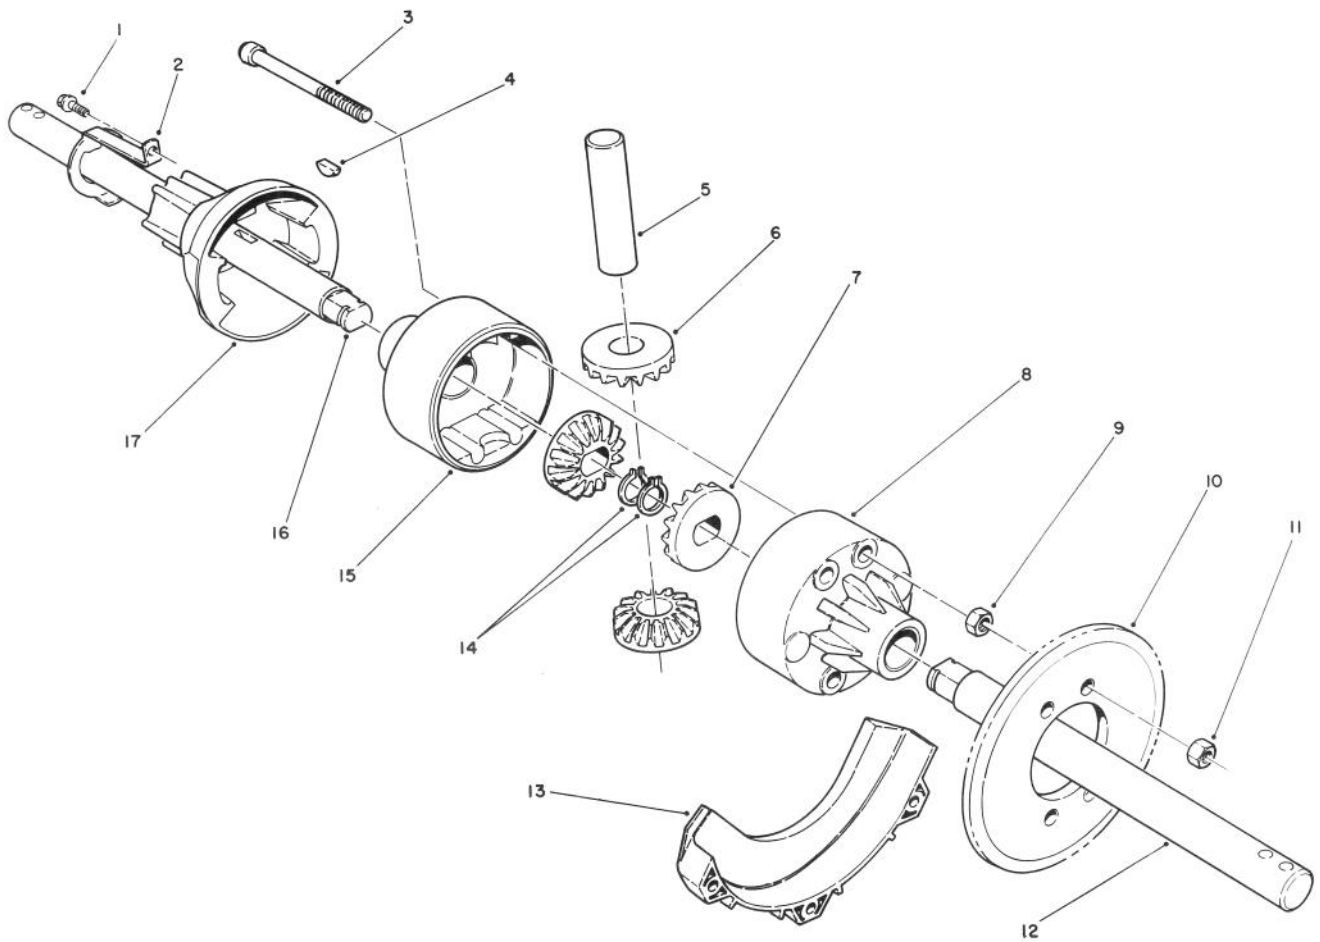


C-0137

DIFFERENTIAL KIT MODEL NO. 38038 (Optional)

Ref. No.	Part No.	Description	No. Used
1	32144-73	Screw - Hex. Washer Hd.	1
2	68-9260	Spring - Lockout	1
3	3274-82	Screw - Hex. Socket Hd.	4
4	3257-41	Key - Woodruff	2
5		Shaft - Cross	1
6		Gear - Cross Shaft Pinion	2
7		Gear - Side Pinion	2
8	68-9220	Housing - Female	1
9	3217-6	Nut - Hex.	4
10	68-9270	Sprocket - 32T	11

Ref. No.	Part No.	Description	No. Used
11	3296-47	Nut - Lock	4
12	68-9230	Shaft - Differential L.H.	1
13	68-9310	Guard - Chain R.H.	1
14	32120-93	Ring - Retaining	2
15	68-9210	Housing - Male	1
16	68-9240	Shaft - Differential R.H.	1
17	68-9250	Coupling - Differential	1
*	68-8410	Cover - Lower Belt	1
*	68-9390	Decal - Caution/Instructions	1
*	68-9280	Gear Set (Incl. Ref. #5-7)	1

 *Not Illustrated

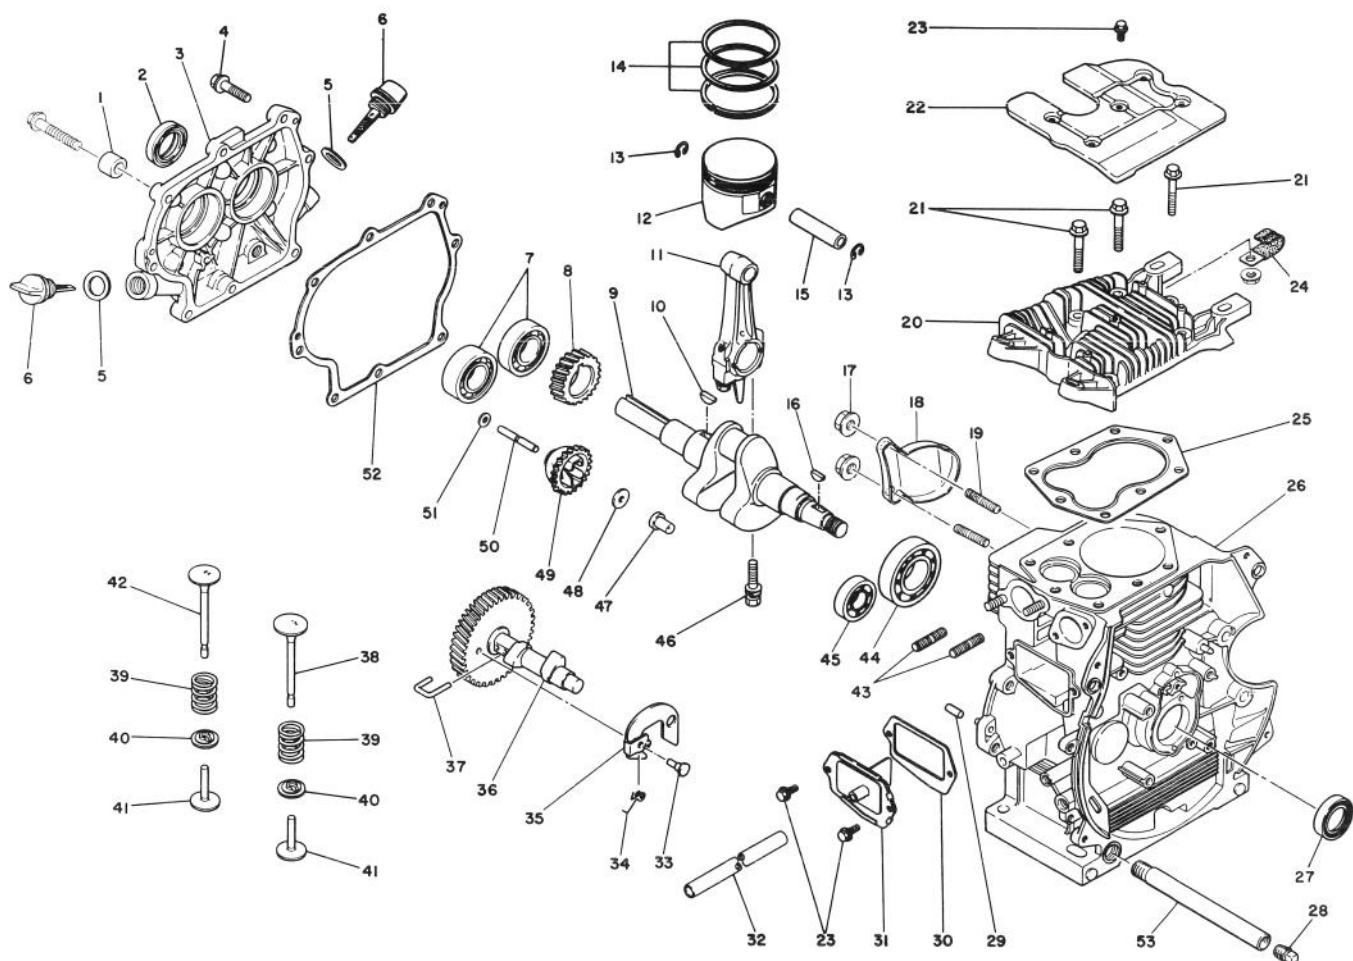

C-0150


ENGINE NO. 68-8280 CRANKCASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	65-2390	Spacer	1
2	65-0490	Seal - Oil	1
3	65-0520	Cover - Crankcase	1
4	65-0480	Bolt - Flange	7
5	65-0510	Gasket	2
6	65-0500	Gauge - Oil (Incl. Ref. #5)	2
7	65-0590	Bearing - Ball	2
8	65-0170	Gear - Crankshaft	1
9	65-0190	Crankshaft	1
10	65-0180	Key - Woodruff	1
11	65-0430	Connecting Rod Assembly (Std.) (Incl. Ref #46)	1
*	65-0440	Connecting Rod Assembly (US. .25) (Incl. Ref #46)	1
*	65-0450	Connecting Rod Assembly (US. .50) (Incl. Ref. #46)	1
12	65-0380	Piston Assembly (Std.) (Incl. Ref. #15)	1
13	65-0370	Clip - Piston Pin	2
14	65-0320	Piston Ring Set (Std.)	1
15	65-0470	Pin - Piston	1
16	65-0200	Key - Woodruff	1
17	65-1710	Nut - Flange Lock	2

Ref. No.	Part No.	Description	No. Used
18	71-1630	Cover	1
19	71-1880	Bolt - Stud	2
20	65-0140	Head - Cylinder	1
21	65-0130	Bolt - Head	8
22	65-0120	Cover - Head	1
23	65-0050	Bolt - Flange	3
24	65-0160	Clamp - Cable	1
†25	65-0150	Gasket - Head	1
26	71-1790	Cylinder Block Assembly (Incl. Ref. #19, 29 & 43)	1
27	65-0110	Seal - Oil	1
28	281-7	Plug - Drain	1
29	65-0080	Pin - Dowel	2
†30	65-0070	Gasket - Breather	1
31	65-0060	Breather Valve Assembly	1
32	65-0770	Tube - Breather	1
33	65-0310	Pin	1
34	65-0300	Spring - Return	1
35	65-0290	Flyweight	1
36	65-0270	Camshaft Assembly (Incl. Ref. #34-36 & 38)	1
37	65-0280	Pin	1
38	65-0260	Valve - Intake	1

*Not Illustrated

 †Included in Gasket Kit No. 65-1900

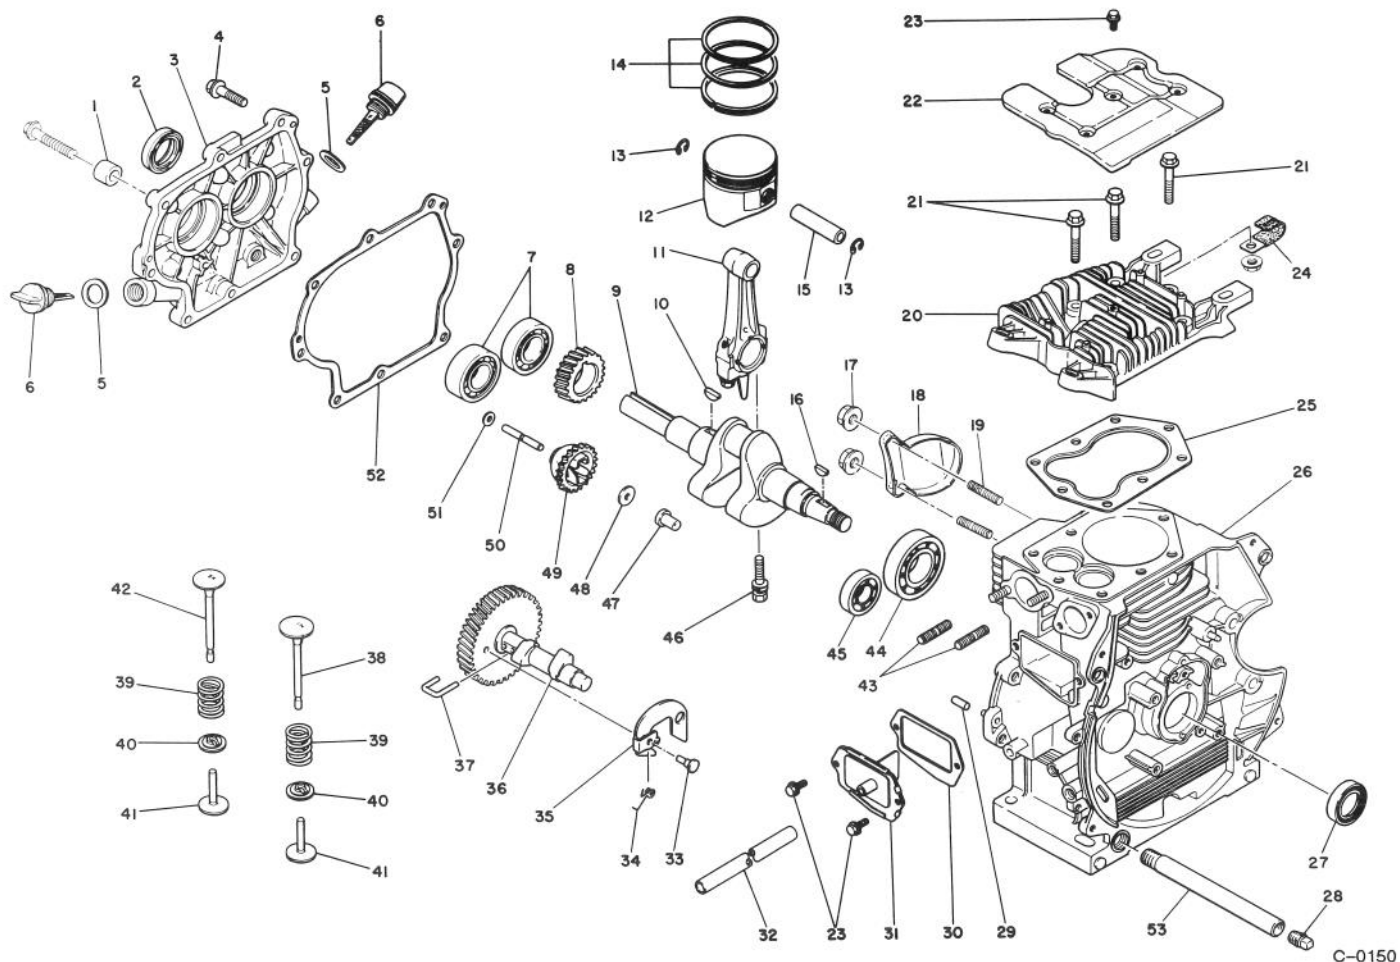


ENGINE NO. 68-8280 CRANKCASE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
39	65-0230	Spring - Valve	2
40	65-0240	Retainer - Valve Spring	2
41	65-0250	Tappet - Valve	2
42	65-0220	Valve - Exhaust	1
43	65-0020	Bolt - Stud	2
44	65-0030	Bearing - Ball	1
45	65-0040	Bearing - Ball	1
46	65-0460	Bolt - Connecting Rod	2

Ref. No.	Part No.	Description	No. Used
47	65-0570	Slider - Governor	1
48	65-0580	Spacer	1
49	65-0560	Governor Gear Assembly (Incl. Ref. #47)	1
50	65-0550	Shaft - Governor	1
51	65-0540	Washer	1
†52	65-2160	Gasket - Crankcase	1
53	66-6690	Pipe - Nipple	1

 †Included in Gasket Kit No. 65-1900

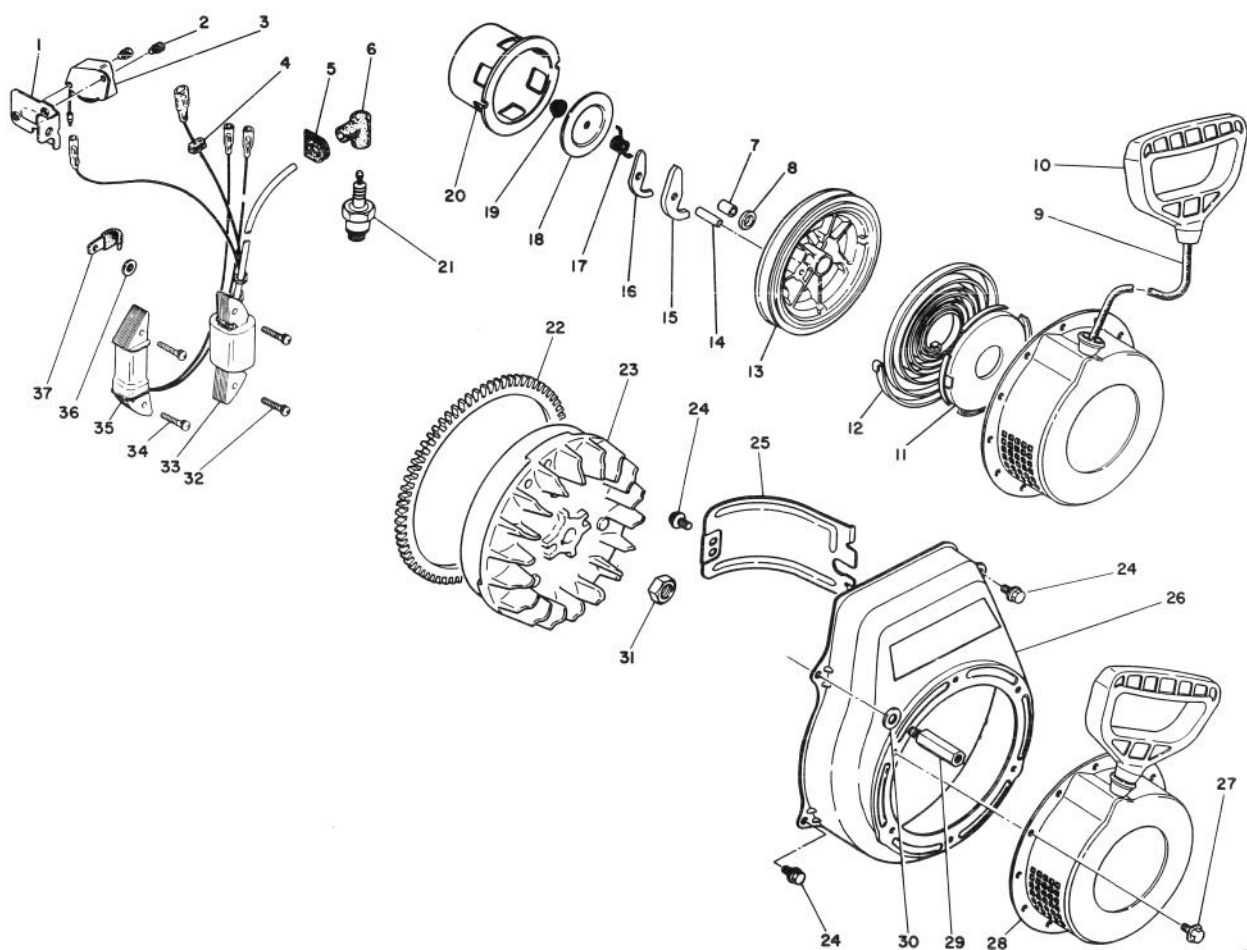


C-0143

ENGINE NO. 68-8280 IGNITION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	65-2370	Bracket - Unit	1
2	65-0680	Screw & Washer	2
3	65-1830	Unit - Ignition	1
4	65-1810	Grommet	1
5	65-0630	Grommet	1
6	65-0620	Cap - Plug	1
7	65-1540	Shaft	1
8	65-1550	Washer	1
9	65-1660	Rope - Starter	1
10	65-1670	Handle - Starter	1
11	65-1650	Case	1
12	65-1640	Spring - Spiral	1
13	65-1630	Reel	1
14	65-1620	Pin	1
15	65-1610	Ratchet	1
16	65-1600	Ratchet	1
17	65-1590	Spring - Friction	1
18	65-1580	Plate - Friction	1
19	65-1570	Nut - Flange	1

Ref. No.	Part No.	Description	No. Used
20	65-1560	Pulley - Starter	1
21	65-0640	Plug - Spark	1
22	65-1740	Gear - Ring	1
23	71-1850	Flywheel	1
24	65-0050	Bolt - Flange	4
25	65-0750	Baffle - Cylinder	1
26	71-1780	Cover - Fan	1
27	65-0840	Bolt - Flange	3
28	65-1530	Recoil Starter Assembly (Incl. Ref. #7-20)	1
29	65-1880	Bolt - Shoulder	1
30	65-1870	Washer	1
31	65-0600	Nut	1
32	65-0710	Screw & Washer	2
33	65-2380	Coil - Ignition (Incl. Ref. #4)	1
34	54-5760	Screw & Washer	2
35	65-2400	Coil - Lighting	1
36	65-0730	Nut - Push	1
37	65-0740	Clamp - Cable	1

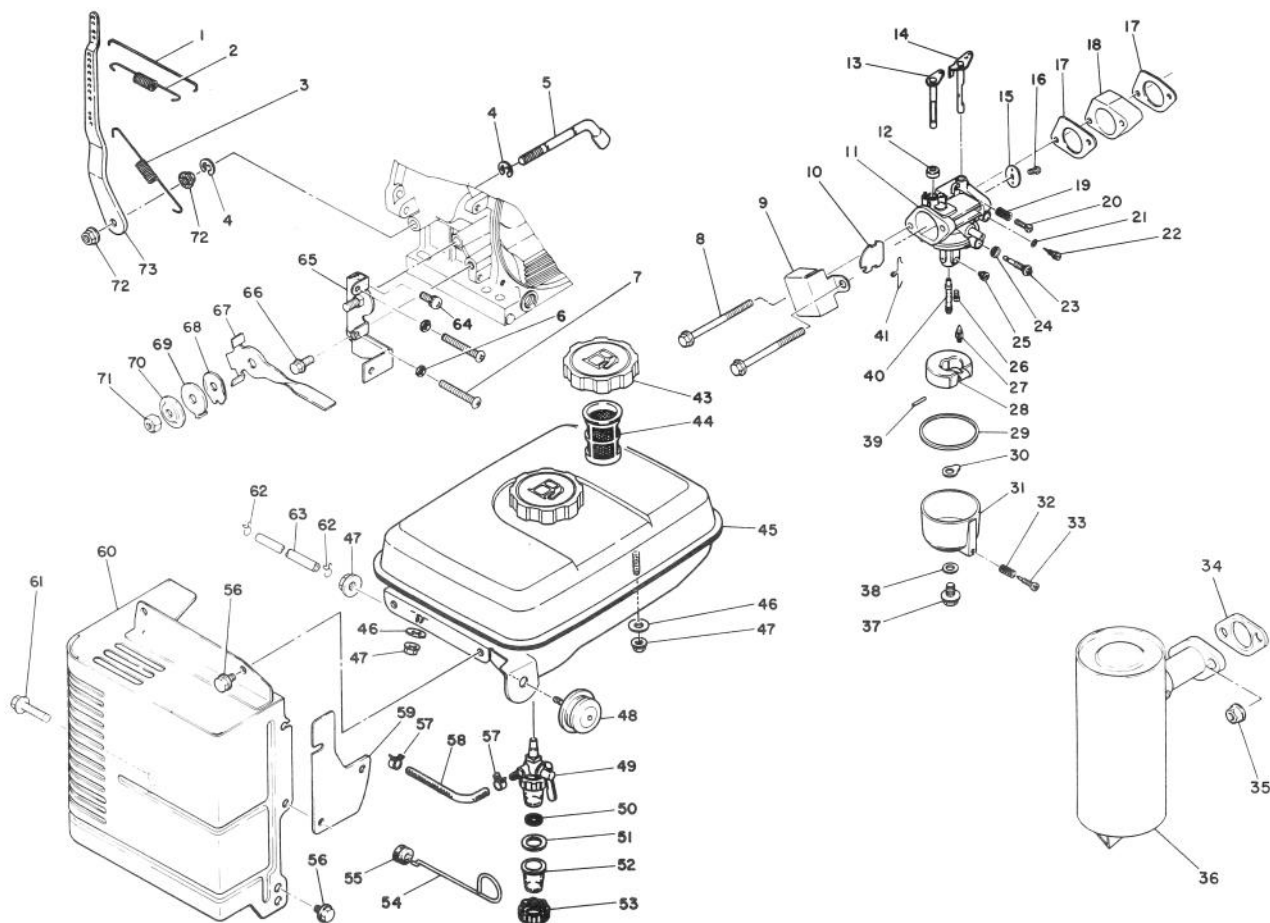 


C-0151

ENGINE NO. 68-8280 FUEL SYSTEM & MUFFLER

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	65-0870	Rod - Governor	1	22	65-1160	Valve - Needle (Incl. Ref. #21)	1
2	65-0880	Spring - Rod	1	23	65-1180	Jet - Slow	1
3	71-1760	Spring - Governor	1	24	65-1190	Gasket	1
4	65-0860	Ring - Snap	2	25	65-1200	Jet - Main	1
5	65-0850	Shaft - Governor	1	26	65-1210	Screw	1
6	65-1010	Nut	2	27	65-1290	Valve	1
7	65-1020	Screw - Machine Pan Hd.	2	28	65-1300	Float	1
8	65-1370	Bolt - Flange	2	29	65-2300	Gasket - Float Bowl	1
9	65-1380	Cover	1	30	65-1330	Gasket	1
10	65-1270	Valve - Choke	1	31	65-1340	Float Bowl Assembly (Incl. Ref. #32 & 33)	1
11	71-1660	Carburetor Assembly (Incl. Ref. #10-16, 33 & 37-42)	1	32	65-1220	Spring	1
12	65-1250	Cap	1	33	65-1230	Screw	1
13	71-1670	Shaft - Choke	1	†34	65-2330	Gasket - Exhaust	1
14	65-1110	Shaft - Throttle	1	35	54-4670	Nut - Flange Lock	2
15	65-1120	Valve - Throttle	1	36	71-1690	Muffler Assembly	1
16	65-1130	Screw - Throttle Valve	1	37	65-1360	Plug - Float Bowl	1
†17	65-1080	Gasket - Carburetor	2	38	65-1350	Gasket - Plug	1
18	71-1650	Insulator - Carburetor	1	39	65-1310	Pin - Float	1
19	65-1140	Spring - Idle Stop	1	40	65-1280	Nozzle - Main	1
20	65-1150	Screw - Idle Stop	1	41	65-1260	Clip	1
21	65-1170	Seal - O-Ring	1	43	65-1680	Cap - Fuel Tank	1

 †Included in Gasket Kit No. 65-1900

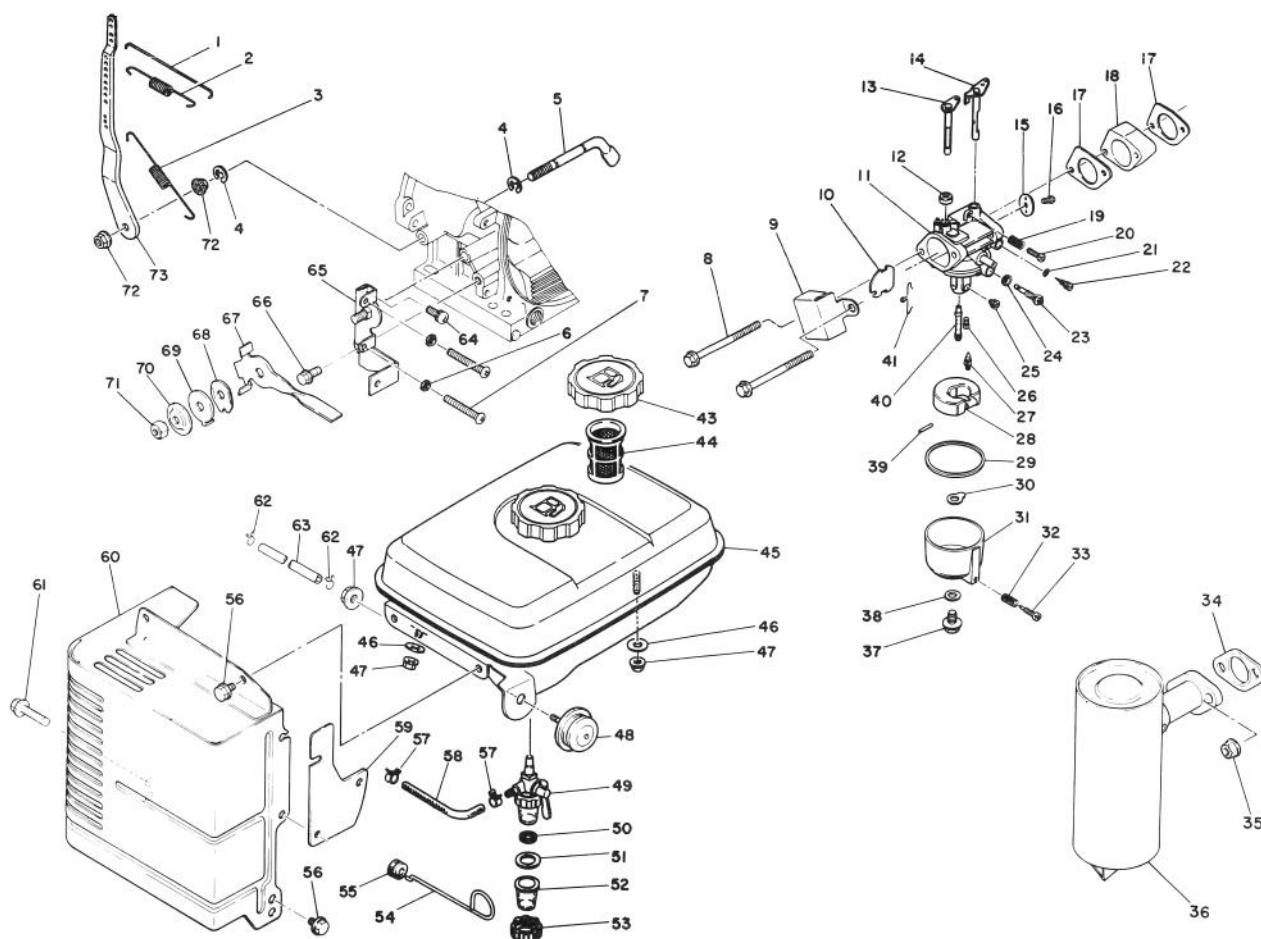

C-0151

ENGINE NO. 68-8280 FUEL SYSTEM & MUFFLER (Cont.)

Ref. No.	Part No.	Description	No. Used
44	65-1690	Filter - Fuel	1
45	71-1700	Fuel Tank Assembly (Incl. Ref. #43, 44 & 46)	1
46	65-1700	Gasket	4
47	65-1710	Nut - Flange	5
48	65-2440	Primer Pump Assembly	1
49	71-1720	Petcock - Fuel (Incl. Ref. #50-53)	1
50	65-1770	Screen	1
51	65-1780	Gasket	1
52	65-1790	Cup	1
53	65-1800	Nut	1
54	71-1750	Rod - Choke	1
55	65-1430	Grommet	1
56	65-0050	Bolt - Flange	5
57	65-1720	Clip - Fuel Tube	2

Ref. No.	Part No.	Description	No. Used
58	71-1710	Tube - Fuel	1
59	65-2450	Cover - Engine	1
60	71-1830	Cover - Engine	1
61	66-2460	Bolt - Flange	1
62	71-1730	Clamp - Fuel Hose	2
63	71-1740	Hose - Fuel	1
64	65-2430	Screw & Washer	1
65	65-2420	Bracket	1
66	65-0990	Bolt - Flange	1
67	71-1640	Lever - Control	1
68	65-0800	Spring - Leaf	1
69	65-0810	Washer - Lock	1
70	65-0820	Washer	1
71	65-0830	Nut - Lock	1
72	65-0890	Nut - Flange	2
73	65-0910	Lever - Governor	1

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Snowthrower has two identification numbers; a model number and a serial number. The two numbers are stamped on a decal which is located on the rear of the engine frame. In any correspondence concerning the snowthrower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the snowthrower.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason

you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

MAINTENANCE RECORD

[illegible]