



Clip Kit

For the Greensmaster® Flex 21 Walk-behind Mower

Model No. 105-5325

Form No. 3326-590 Rev B

Installation Instructions

Preparing to Install the Kit

1. Stop the engine, wait for all moving parts to stop, and disconnect the spark plug.
2. Remove the belt cover (Fig. 1).

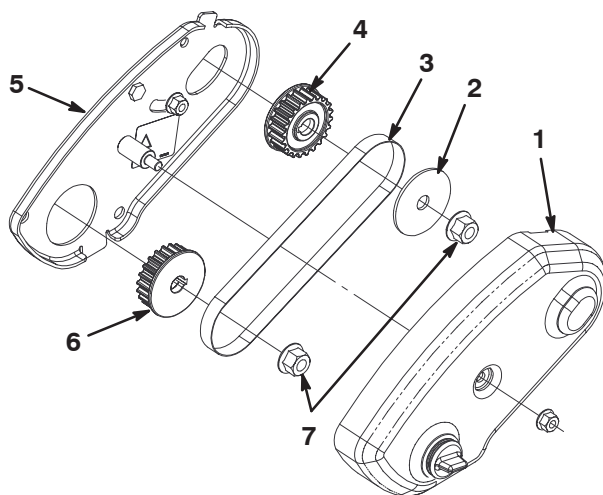


Figure 1

- | | |
|--------------------|---------------------|
| 1. Belt cover | 5. Reel drive plate |
| 2. Washer | 6. Lower pulley |
| 3. Reel drive belt | 7. Hex nuts |
| 4. Upper pulley | |
3. Loosen the tension on the reel drive belt (Fig. 1). Refer to your Operator's Manual.

Increasing the Reel Speed (Clip .14 Inches)

1. Remove the hex nuts that hold the upper and lower pulleys (Fig. 1).
2. Remove the reel drive belt (Fig. 1).
3. Replace the **upper** pulley with the pulley supplied in the kit.
4. Remove the **lower** pulley and insert it on the shaft so that the flange faces the reel drive plate (Fig. 1).
5. Install the reel drive belt.
6. Install the washer on the **lower** pulley.
7. Adjust the reel drive belt tension. Refer to your Operator's Manual.
8. Install the belt cover.

Decreasing the Reel Speed (Clip .21 Inches)

1. Remove the hex nut that holds the **lower** pulley (Fig. 1).
2. Remove the reel drive belt from the **lower** pulley (Fig. 1).
3. Replace the **lower** pulley with the pulley supplied in the kit.
4. Install the reel drive belt.
5. Adjust the reel drive belt tension. Refer to your Operator's Manual.
6. Install the belt cover.