



NEW HOLLAND ..

G4010 Zero-Turn-Radius Mower

Model No. 725058046 - T07ZT0001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame Assembly 3	Oil Pan and Lubrication Assembly Kohler SV590-0019 18
Deck Lift and Seat Support Assembly 4	Head, Valve and Breather Assembly Kohler SV590-0019 19
Seat Assembly 5	Ignition and Electrical Assembly Kohler SV590-0019 20
Control Assembly 6	Blower Housing Assembly Kohler SV590-0019 21
Hydro Drive Assembly 7	Starter Assembly Kohler SV590-0019 22
RH Hydro No. 110-6771 Assembly 8	Fuel System Assembly Kohler SV590-0019 23
LH Hydro No. 110-6770 Assembly 9	Engine Control Assembly Kohler SV590-0019 24
Engine and Clutch Assembly 10	Air Intake and Filtration Assembly Kohler SV590-0019 25
Styling and Fuel System Assembly 11	Exhaust Stud, Gasket and Decal Assembly Kohler SV590-0019 26
42 Inch Deck Assembly 12	Attachments and Accessories List 27
42 Inch Deck No. 112-9797 Assembly 13		
42 Inch Deck Spindle and Belt Drive Assembly 14		
Electrical Assembly 15		
Crankshaft Assembly Kohler SV590-0019 16		
Crankcase Assembly Kohler SV590-0019 17		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- ❶ Not illustrated
- ❷ Not serviced separately
- ❸ Obtain from your local Kohler dealer

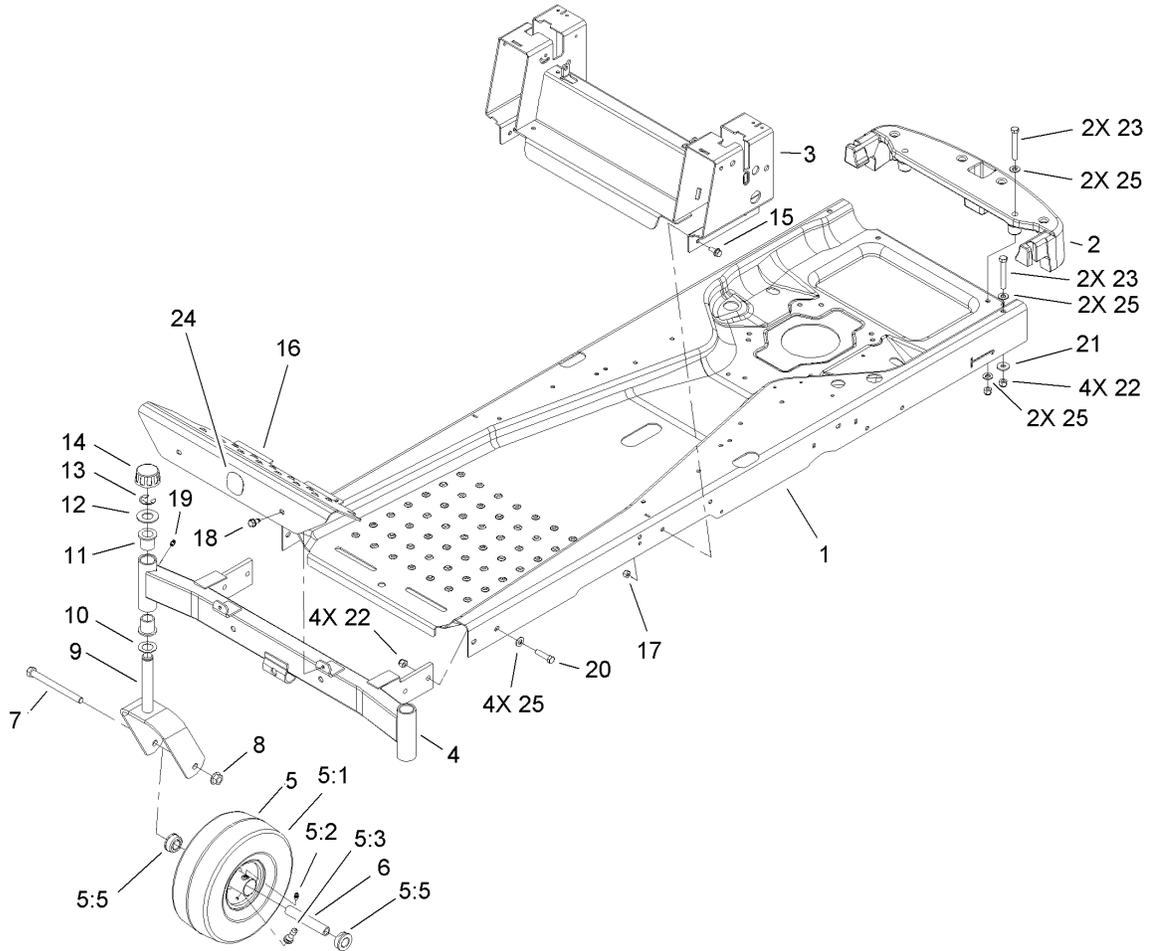

Frame Assembly


Ref	Part No.	Qty.	Description
1	110-6780-04	1	Frame
2	110-6899-03	1	Bumper-Rear
3	110-6872-03	1	Seat Control ASM
4	108-7882-04	1	Front Axle ASM
5	107-7342	2	Front Wheel And Tire ASM
5:1	105-1943	1	Tire
5:2	302-5	1	Fitting-Grease
5:3	232-27	1	Stem-Valve
5:5	114-1640	2	Bearing-Outside
5:99	93-4244	1	Tube-Inner (W/Valve)
6	104-3667	2	Spanner-Wheel
7	325-22	2	Screw-HH
8	32128-23	2	Nut-HF
9	108-7851-04	2	Caster Fork ASM
10	110-6767	2	Washer-Thrust
11	1-303514	4	Bearing-Flanged
12	104-8076	2	Washer
13	32151-103	2	Ring-Snap
14	61-9780	2	Cap-Hub
15	3234-47	7	Screw-HHF
16	108-7855-03	1	Footrest
17	3296-29	7	Nut-Lock, NI
18	32104-32	2	Screw-HWH
19	302-5	2	Fitting-Grease

Ref	Part No.	Qty.	Description
20	323-8	4	Screw-HH
21	80-6990	2	Washer-Hardened
22	3296-39	8	Nut-Lock, NI
23	323-13	4	Screw-HH
24	107-7338	1	Emblem-Logo
25	3256-24	10	Washer-Flat

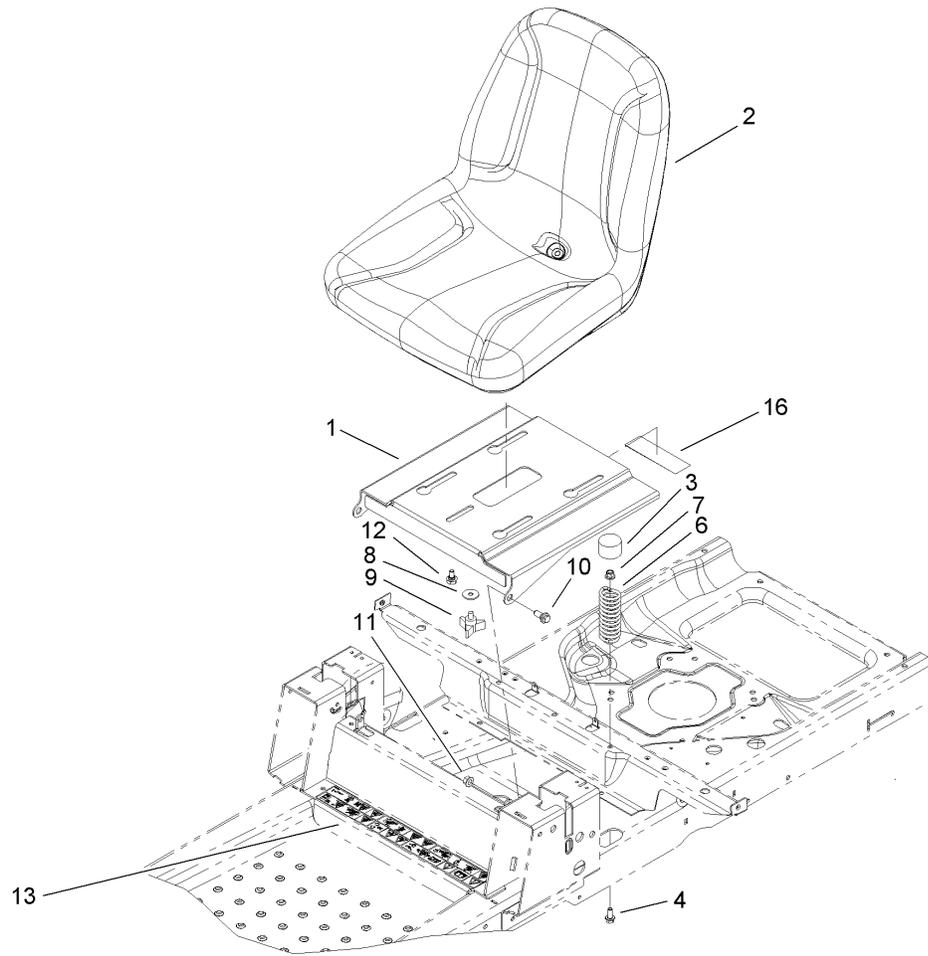

Seat Assembly


Ref	Part No.	Qty.	Description	
1	110-6679-03	1	Base-Seat	
2	110-6773	1	Seat-18 Inch	
3	701178	2	Cap-Protector	
4	3234-47	2	Screw-HHF	
6	92-7054	2	Spring-Compression	
7	3296-58	2	Nut-Lock, NI	
8	5-4460	1	Washer-Pivot	
9	92-9674	1	Knob	
10	94-7582	2	Bolt-Shoulder	
11	32128-21	2	Nut-HF	
12	37-8771	4	Bolt-Shoulder	
13	110-6825	1	Decal-Danger	
16	106-8717	1	Decal-Service	

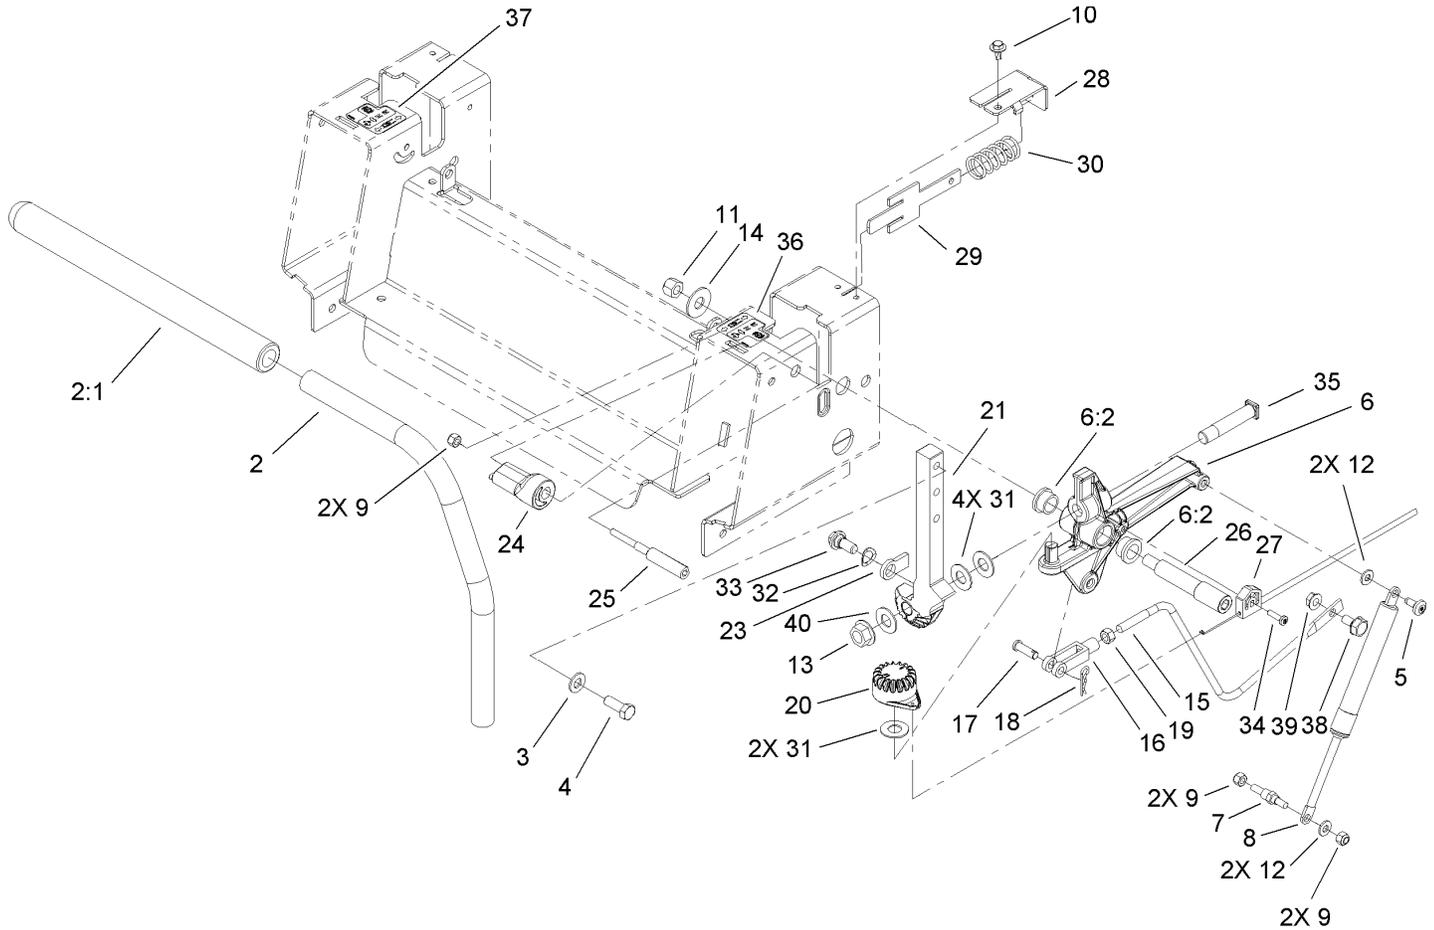

Control Assembly

Ref	Part No.	Qty.	Description
1	110-6814	1	RH Handle ASM
1:1	108-6187	1	Grip
2	110-6815	1	LH Handle ASM
2:1	108-6187	1	Grip
3	3256-24	4	Washer-Flat
4	323-6	4	Screw-HH
5	112-4004	2	Screw-Shoulder
6	110-6828	2	Activator Arm ASM
6:2	105-3455	2	Bushing
7	110-6810	2	Stud-Damper
8	103-2913	2	Damper-Control, Motion
9	3296-42	6	Nut-Lock, NI
10	46-8560	2	Screw-HHF
11	3296-48	2	Nut-Lock, NI
12	3256-22	4	Washer-Flat
13	32128-23	2	Nut-HF
14	3256-5	2	Washer-Flat
15	110-6693	2	Link-Hydro
16	1-303105	2	Yoke-Adjustable
17	1-808280	2	Pin-Clevis
18	1-806003	2	Pin-Hair
19	3220-2	2	Nut-Jam
20	110-6845	2	Gear-Control
21	110-6783	1	Arm-Actuator, LH


Ref	Part No.	Qty.	Description
22	110-6782	1	Arm-Actuator, RH
23	110-6856	2	Tab-Stop
24	110-6873	2	Eccentric
25	110-6874	2	Screw-Eccentric
26	110-6875	2	Bolt-Shoulder
27	110-6858	2	Cable-Parking Brake
28	110-6751	2	Bracket-Return
29	110-6750	2	Plate-Return
30	110-6752	2	Spring
31	110-6894	6	Washer-Pivot
32	3290-221	2	Washer-Spring
33	94-7582	2	Bolt-Shoulder
34	110-0863	2	Screw-Torx
35	110-6784	2	Bolt-Shoulder
36	112-9754	1	Decal-LH Control Lever
37	112-9755	1	Decal-RH Control Lever
38	37-8771	2	Bolt-Shoulder
39	3296-58	2	Nut-Lock, NI
40	112-9771	2	Washer-Teflon

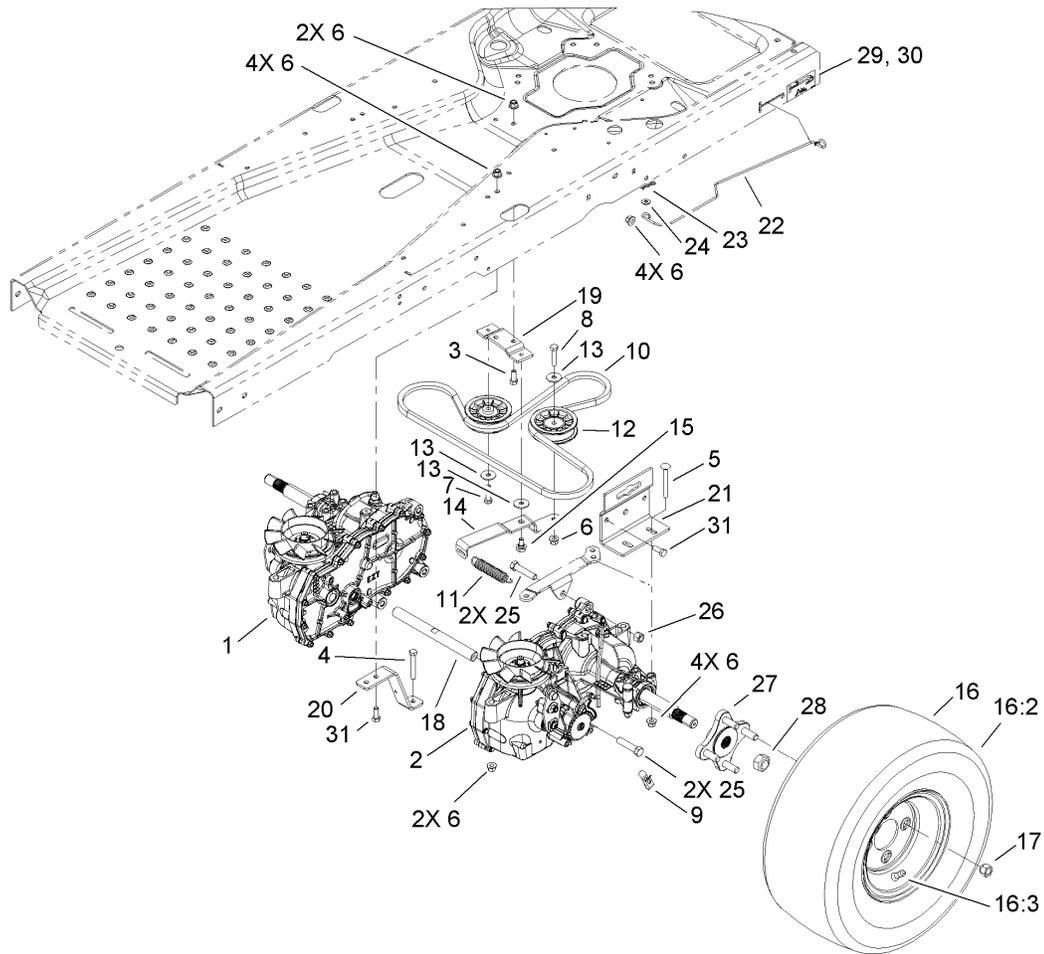

Hydro Drive Assembly

Ref	Part No.	Qty.	Description
1	110-6771	1	Hydro-RH
2	110-6770	1	Hydro-LH
3	322-4	2	Screw-HH
4	322-11	2	Screw-HH
5	3230-9	4	Screw-CARR
6	3296-58	17	Nut-Lock, NI
7	322-6	1	Screw-HH
8	322-7	1	Screw-HH
9	110-6677	2	Clip-Spring
10	110-6774	1	V-Belt
11	63-1590	1	Spring-Idler
12	110-6775	2	Pulley-Idler
13	5-4460	3	Washer-Pivot
14	110-1925	1	Arm-Idler
15	37-8771	1	Bolt-Shoulder
16	112-9791	2	Wheel And Tire ASM
16:2	110-6885	1	Tire
16:3	232-27	1	Stem-Valve
●16:99	107-2491	1	Tube-Tire
17	242-50	8	Nut-Lug
18	110-6807	1	Shaft-Cross
19	110-1926	1	Plate-Pivot
20	110-6806-03	2	Strap-Torque
21	110-6878-03	2	Support-Hydro


Ref	Part No.	Qty.	Description
22	110-6787	2	Rod-Bypass
23	1-806003	2	Pin-Hair
24	3256-22	2	Washer-Flat
25	324-8	4	Screw-HH
26	3296-48	2	Nut-Lock, NI
27	112-3979	2	Hub ASM
28	112-3982	2	Nut-Lock
29	110-6680	1	Decal-Transport, LH
30	110-6690	1	Decal-Transport, RH
31	3234-47	8	Screw-HHF

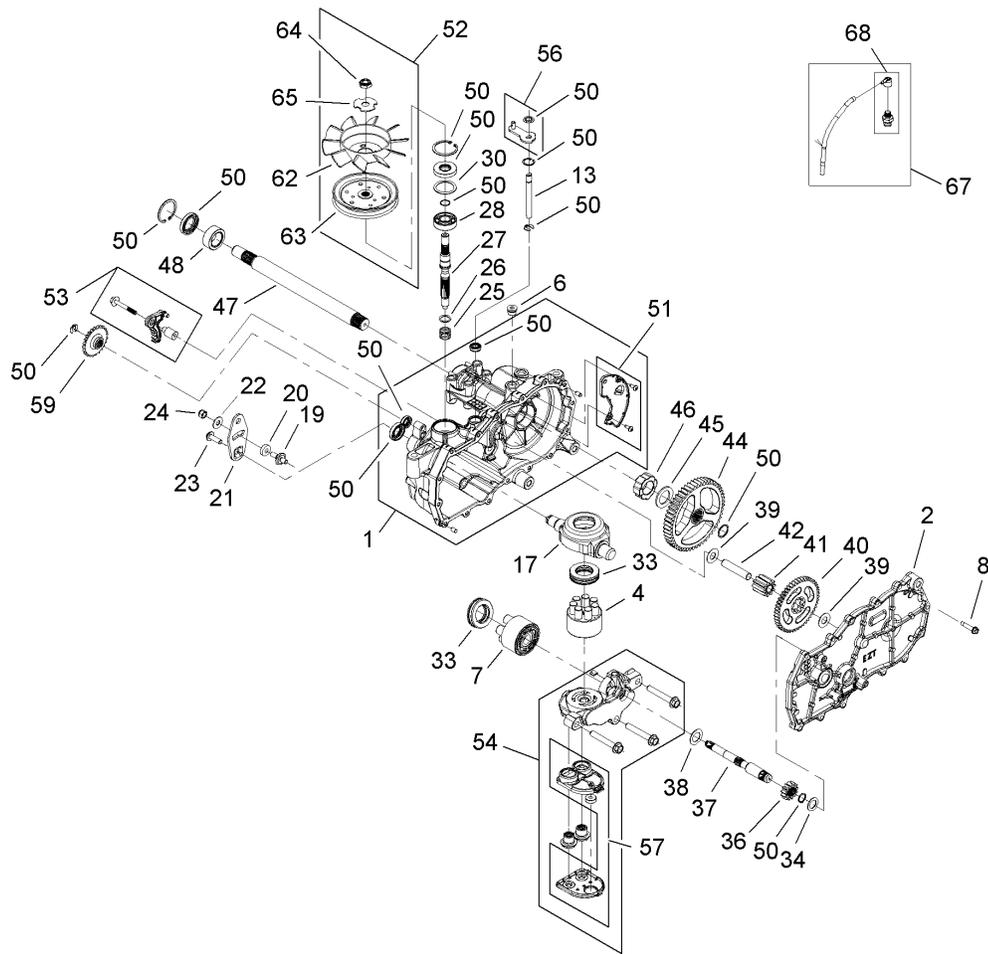

RH Hydro No. 110-6771 Assembly

Ref	Part No.	Qty.	Description
1	114-1630	1	RH Main Housing ASM
2	114-1631	1	RH Side ASM
4	110-8561	1	Pump Block ASM
6	112-9850	1	Plug
7	103-2666	1	Cylinder Block Kit
8	104-5305	16	Screw-HHF
13	106-8678	1	Rod-Bypass
17	104-5304	1	Swashplate-Trunnion
19	104-2116	1	Stud
20	112-9853	1	Puck-Friction
21	106-8747	1	Arm-Control
22	5-4460	1	Washer-Pivot
23	107-2488	1	Screw
24	105-1872	1	Nut
25	94-1936	1	Spring-Block
26	94-1937	1	Washer-Block, Thrust
27	104-5306	1	Shaft-Input
28	104-5311	1	Bearing-Ball
30	104-5308	1	Spacer
33	94-6922	2	Bearing-Thrust
34	104-5339	1	Washer-Flat
36	104-5316	1	Gear-Pinnion, 13T
37	114-1632	1	Shaft, Motor
38	104-5360	1	Washer-Shaft, Motor


Ref	Part No.	Qty.	Description
39	94-1933	2	Washer
40	104-5317	1	Gear
41	104-5318	1	Gear-Jackshaft, 10T
42	104-5329	1	Pin-Jackshaft
44	112-9855	1	Gear-52T Bull
45	112-9856	1	Washer
46	112-9857	1	Bearing-Sleeve
47	112-9858	1	Shaft-Axle
48	112-9859	1	Bushing-Axle
50	106-8686	1	Seal Kit
51	106-8697	1	RH Expansion Plate Kit
52	106-8698	1	Fan Pulley Kit
53	114-1633	1	Brake Arm Kit
54	112-9861	1	RH Center Section Filter Kit
55	112-9863	1	Tube-Sealant
56	107-2489	1	Bypass Arm Kit
57	114-1634	1	Filter Kit
59	106-8694	1	Disc-Brake, Cog
62	110-8566	1	Fan-6 Inch, 10 Blade
63	104-1754	1	Pulley
64	105-1875	1	Nut-Lock
65	107-9122	1	Washer-Slotted
67	112-9866	1	Breather Kit
68	114-1635	1	Breather ASM

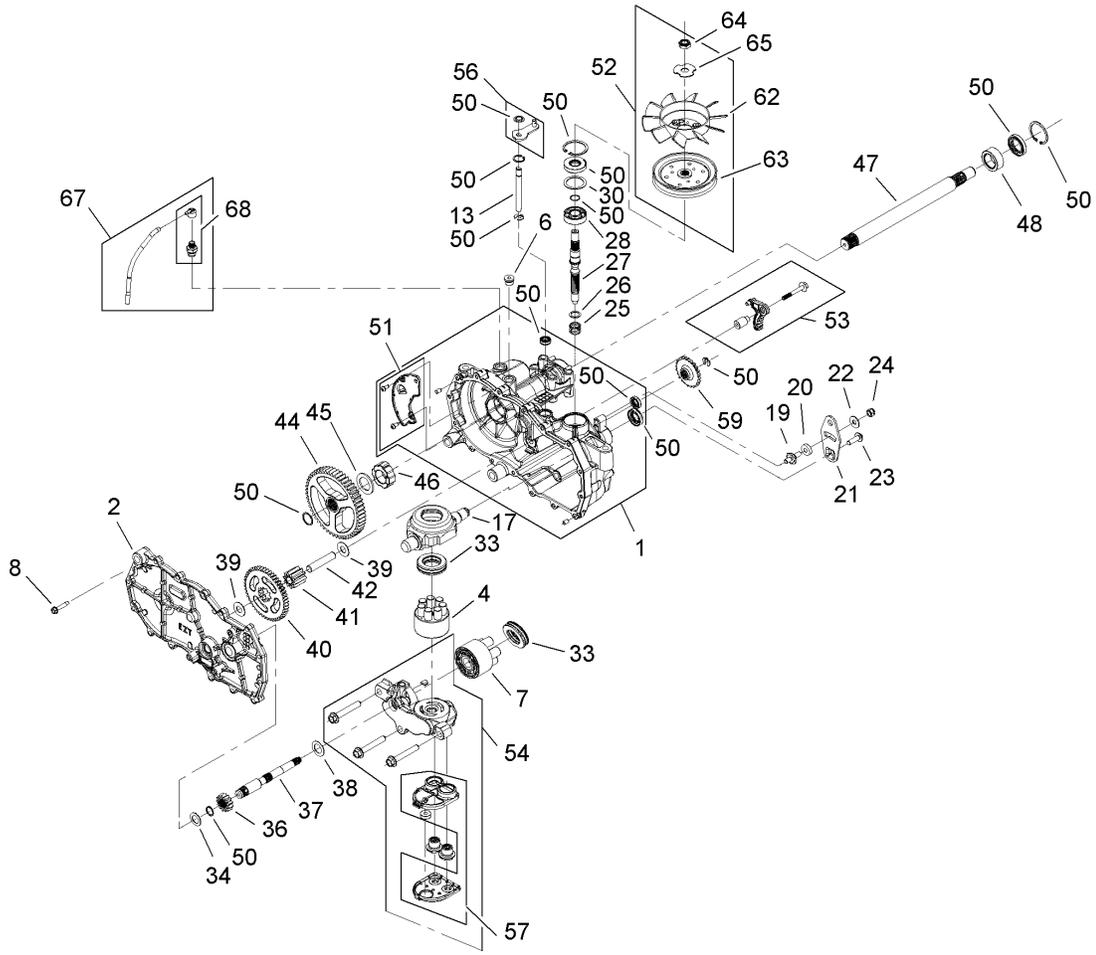

LH Hydro No. 110-6770 Assembly


Ref	Part No.	Qty.	Description
1	114-1636	1	LH Main Housing ASM
2	114-1637	1	LH Side ASM
4	110-8561	1	Pump Block ASM
6	112-9850	1	Plug
7	103-2666	1	Cylinder Block Kit
8	104-5305	16	Screw-HHF
13	106-8678	1	Rod-Bypass
17	104-5304	1	Swashplate-Trunnion
19	104-2116	1	Stud
20	112-9853	1	Puck-Friction
21	106-8747	1	Arm-Control
22	5-4460	1	Washer-Pivot
23	107-2488	1	Screw
24	105-1872	1	Nut
25	94-1936	1	Spring-Block
26	94-1937	1	Washer-Block, Thrust
27	104-5306	1	Shaft-Input
28	104-5311	1	Bearing-Ball
30	104-5308	1	Spacer
33	94-6922	2	Bearing-Thrust
34	104-5339	1	Washer-Flat
36	104-5316	1	Gear-Pinnion, 13T
37	114-1632	1	Shaft, Motor
38	104-5360	1	Washer-Shaft, Motor

Ref	Part No.	Qty.	Description
39	94-1933	2	Washer
40	104-5317	1	Gear
41	104-5318	1	Gear-Jackshaft, 10T
42	104-5329	1	Pin-Jackshaft
44	112-9855	1	Gear-52T Bull
45	112-9856	1	Washer
46	112-9857	1	Bearing-Sleeve
47	112-9858	1	Shaft-Axle
48	112-9859	1	Bushing-Axle
50	106-8686	1	Seal Kit
51	106-8687	1	LH Expansion Plate Kit
52	106-8698	1	Fan Pulley Kit
53	114-1633	1	Brake Arm Kit
54	112-9862	1	LH Center Section Filter Kit
55	112-9863	1	Tube-Sealant
56	107-2489	1	Bypass Arm Kit
57	114-1634	1	Filter Kit
59	106-8694	1	Disc-Brake, Cog
62	110-8566	1	Fan-6 Inch, 10 Blade
63	104-1754	1	Pulley
64	105-1875	1	Nut-Lock
65	107-9122	1	Washer-Slotted
67	112-9866	1	Breather Kit
68	114-1635	1	Breather ASM

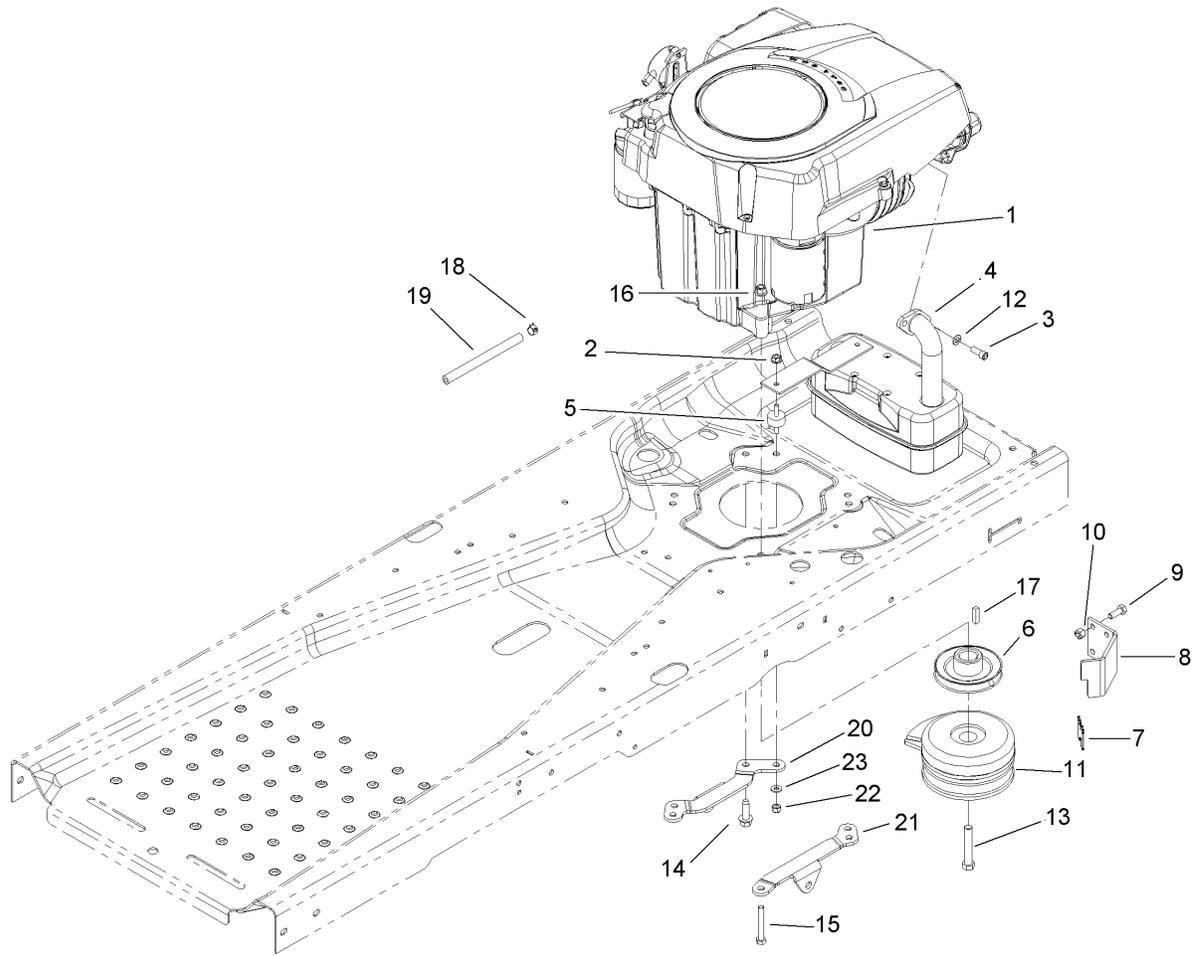

Engine and Clutch Assembly


Ref	Part No.	Qty.	Description
② ③ 1		1	Engine-Kohler, Sv590-0019
2	32128-33	1	Nut-HF
3	3274-10	2	Screw-HSH
4	108-7829	1	Muffler-Kohler
5	112-3976	1	Isolator
6	110-6758	1	Pulley-Engine
7	112-3974	1	Bumper
8	110-6896	1	Stop-Clutch
9	322-4	2	Screw-HH
10	3296-29	2	Nut-Lock, NI
11	104-3334	1	Clutch-Electric
12	3253-4	2	Washer-Lock
13	3212-10	1	Screw-HH
14	32144-109	3	Screw
15	322-11	1	Screw-HH
16	3296-58	1	Nut-Lock, NI
17	5-7280	1	Key
18	2412-98	2	Clamp
19	109-0306	1	Hose-Fuel
20	110-6798	1	Support-Hydro, RH
21	110-6799	1	Support-Hydro, LH
22	3296-42	1	Nut-Lock, NI
23	3256-22	1	Washer-Flat

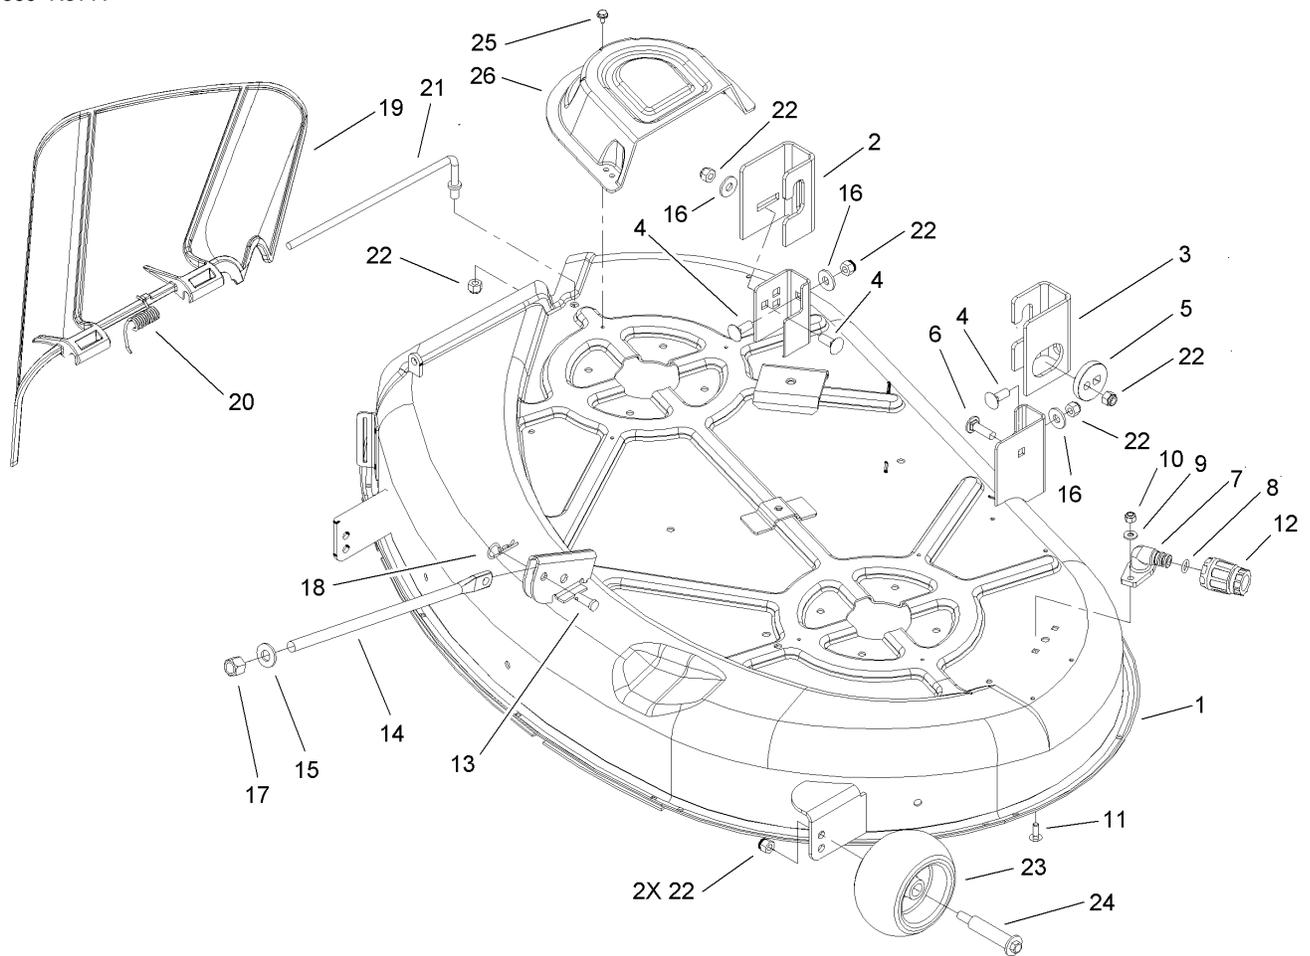

42 Inch Deck Assembly

Ref	Part No.	Qty.	Description
1	112-9797	1	42 Inch Deck ASM
2	108-7836	1	Bracket-Hanger, Right Rear
3	108-7838	1	Bracket-Hanger, Left Rear
4	3231-2	3	Screw-CARR
5	112-3980	1	Eccentric
6	3231-28	1	Screw-CARR
7	95-2747	1	Fitting-Washout
8	46-6290	1	O-Ring
9	3256-22	2	Washer-Flat
10	3296-42	2	Nut-Lock, NI
11	3229-1	2	Screw-CARR
12	95-3270	1	Connector-Hose
13	1-808284	1	Pin-Clevis
14	108-7847	1	Rod-Lift
15	87-7270	1	Washer-Thrust
16	80-6990	3	Washer-Hardened
17	3296-23	1	Nut-Lock, NI
18	9335054	1	Pin-Hair
19	112-3951	1	Deflector
20	110-6694	1	Spring-Torsion
21	112-4026	1	Rod-Pivot
22	3296-39	7	Nut-Lock, NI
23	1-603299	2	Roller-Scalp, Anti
24	112-3977	2	Bolt-Shoulder


Ref	Part No.	Qty.	Description
25	32104-76	6	Screw
26	108-7889	2	Cover-Belt

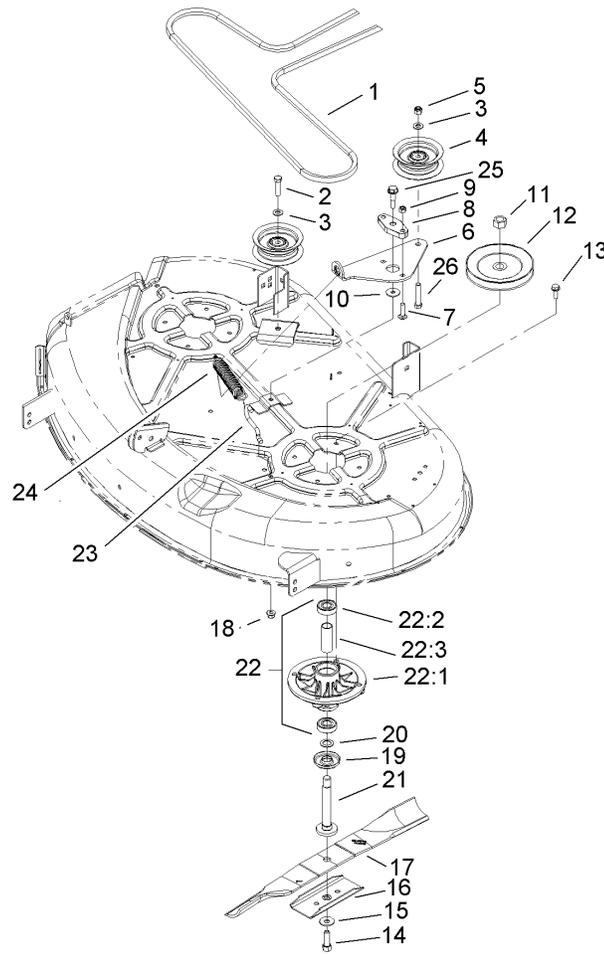

42 Inch Deck Spindle and Belt Drive Assembly

Ref	Part No.	Qty.	Description
1	110-6871	1	V-Belt
2	323-8	1	Screw-HH
3	3256-24	2	Washer-Flat
4	106-2175	2	Pulley-Idler, Flat
5	3296-39	1	Nut-Lock, NI
6	110-6867-03	1	Arm-Idler
7	3230-3	2	Screw-CARR
8	108-7881	1	Bushing-Pivot
9	3296-29	2	Nut-Lock, NI
10	5-4460	1	Washer-Pivot
11	3219-6	2	Nut-Hex
12	110-6864	2	Pulley
13	32144-41	8	Screw-Taptite
14	26-0671	2	Screw-Blade
15	3290-465	2	Washer-Belleville
16	106-2248-03	2	Stiffener-Blade
17	110-6568-03	2	Blade-21.6 Inch
18	3296-58	1	Nut-Lock, NI
19	80-4360	2	Shield-Bearing
20	80-4380	2	Spacer
21	110-6866	2	Shaft-Spindle
22		2	Spindle ASM
22:1	88-4510	1	Housing-Spindle
22:2	100-1048	2	Bearing-Ball


Ref	Part No.	Qty.	Description
22:3	62-3661	1	Spacer-Bearing
23	88-5970	1	Hook-Return, Spring
24	106-2177	1	Spring-Extension
25	110-6897	1	Bolt-Shoulder
26	323-10	1	Screw-HH

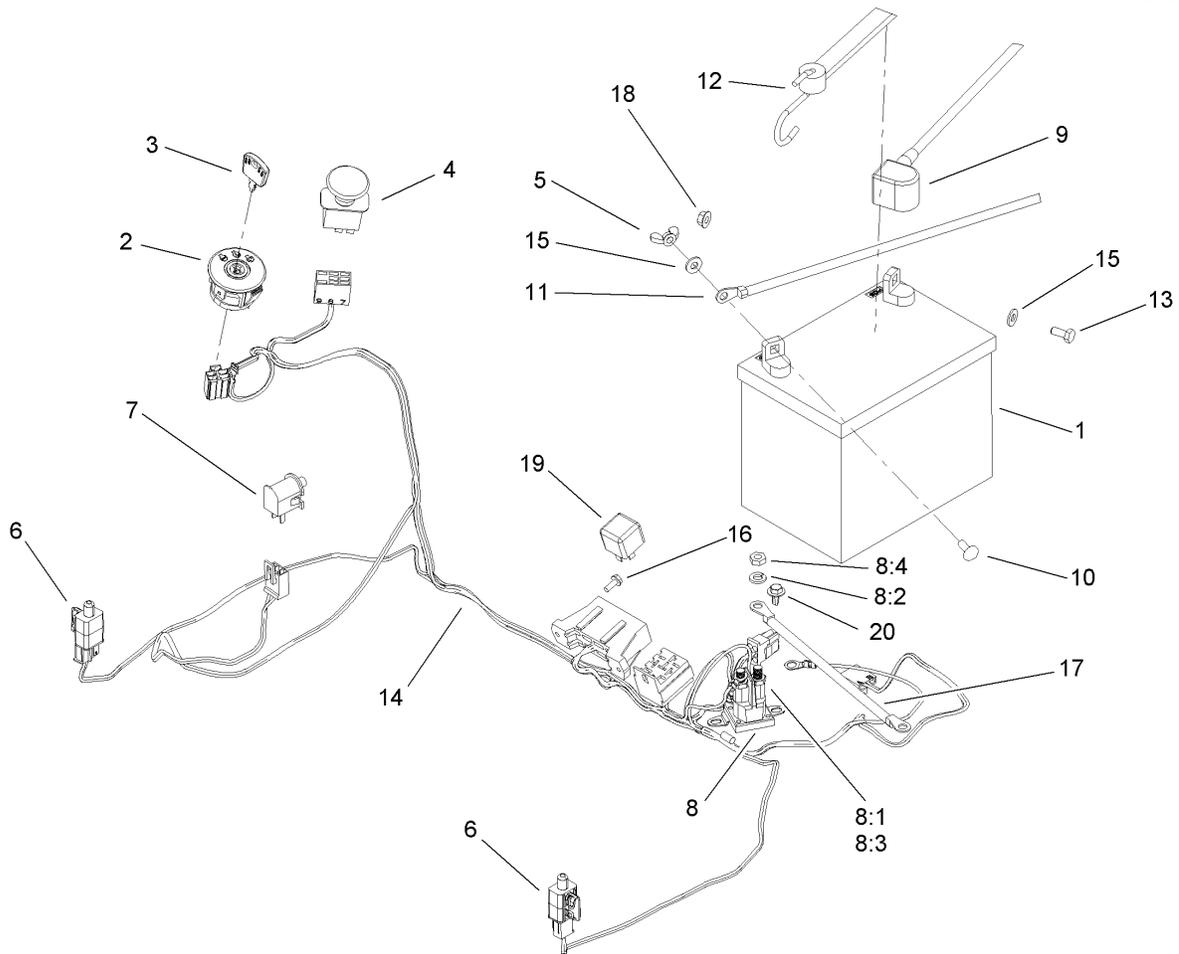

Electrical Assembly

Ref	Part No.	Qty.	Description
1	104-2493	1	Battery
2	110-6764	1	Switch-Ignition
3	700918	1	Key
4	93-9999	1	Switch-PTO
5	32103-22	1	Nut-Wing
6	110-6765	2	Switch-Single Pole No
7	82-2190	1	Switch-Bail
8	1-513075	1	Switch-Solenoid
8:1	3253-17	2	Washer-Lock
8:2	3253-4	2	Washer-Lock
8:3	3219-14	2	Nut-Hex
8:4	3220-2	2	Nut-Jam
9	110-6794	1	Cable-Battery, Red
10	3229-1	1	Screw-CARR
11	110-6793	1	Cable-Battery, Black
12	104-2466	1	Holddown-Battery
13	321-3	1	Screw-HH
14	110-1923	1	Harness-Wire
15	3256-22	2	Washer-Flat
16	32144-1	3	Screw-Taptite
17	110-6792	1	Cable-Battery, Red
18	32128-33	2	Nut-HF
19	98-7249	1	Relay
20	46-8560	2	Screw-HHF


Ref	Part No.	Qty.	Description
●24	614249	1	Strap-Tie

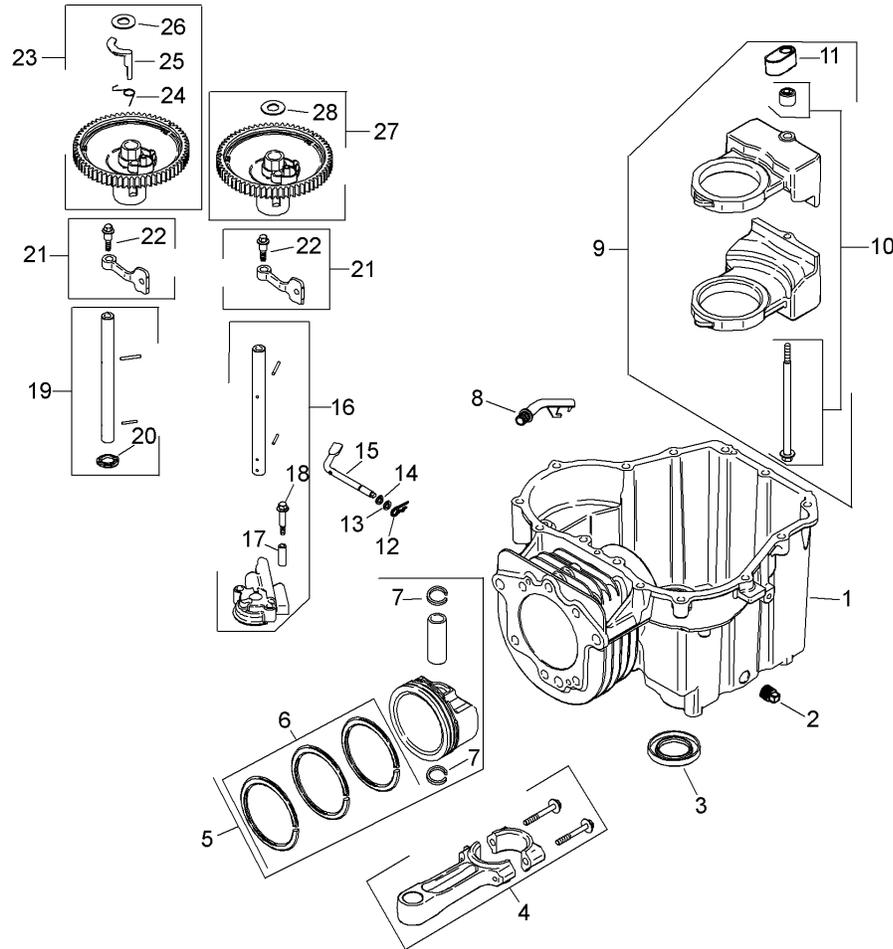

Crankspace Assembly Kohler SV590-0019

Ref	Part No.	Qty.	Description
❶		1	Crankcase (Use: Short Block 20 522 02)
❷	25 139 57-S	1	Plug-Square Head Solid (3/8)
❸	20 032 01-S	1	Seal-Oil
❹	20 067 04-S	1	Rod-Connecting
❺	20 874 01-S	1	Piston W/Ring Set (94 Mm)
❻	20 108 01-S	1	Ring Set (94Mm) (Includes 6, 7)
❼	20 018 04-S	2	Retainer-Pin, Piston
❽	20 123 02-S	1	Tube-Back, Drain
❾	20 755 04-S	2	Balance Weight Kit (Includes 10, 11)
❿	20 380 16-S	1	Locating Pin Kit
⓫	20 423 02-S	1	Shoe-Guide
⓬	12 154 05-S	1	Clip-Pin, Hitch
⓭	M-631015-S	1	Washer-Flat (6Mm)
⓮	X-25-102-S	1	Washer-Flat (1/4)
⓯	20 144 02-S	1	Shaft-Cross, Governor
⓰	20 393 02-S	1	Oil Pump ASM (Includes 17,18)
⓱	20 112 02-S	2	Spacer-Screw, Oil Pump
⓲	20 086 13-S	2	Screw-Pump, Oil
⓳	20 144 06-S	1	Camshaft Center-Exhaust ASM (Includes 20)
⓴	20 468 01-S	1	Washer-Thrust
⓵	20 090 01-S	2	Cam Lever ASM (Includes 22)
⓶	20 086 06-S	2	Bolt-Shoulder (M5X0.8X36)


Ref	Part No.	Qty.	Description
⓷	20 010 04-S	1	Cam Gear ASM - Intake (Includes 24-26)
⓸	20 089 06-S	1	Spring-A C R
⓹	20 044 16-S	1	Weight-A C R
⓺	20 468 03-S	1	Washer-Thrust, A C R
⓻	20 010 04-S	2	Cam Gear ASM - Intake (Includes 28)
⓼	20 468 03-S	1	Washer-Thrust, A C R

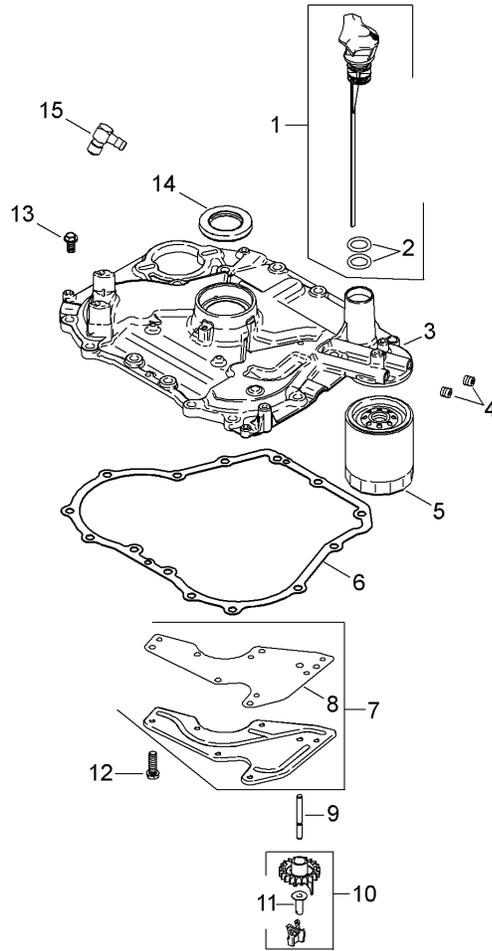

Oil Pan and Lubrication Assembly Kohler SV590-0019


Ref	Part No.	Qty.	Description
❶	20 040 02-S	1	Dipstick Blade Kit (Yellow) (Includes 2)
❷	20 153 01-S	2	O Ring-Dipstick
❸	20 009 10-S	1	Closure Plate ASM (Includes 6, 15)
❹	25 139 60-S	2	Plug-Hex, Countersunk (1/8)
❺	12 050 01-S	1	Filter-Oil
❻	20 041 01-S	1	Gasket-Plate, Closure
❼	20 096 02-S	1	Oil Passage Cover Kit (Includes 8)
❽	20 041 02-S	1	Gasket-Passage, Oil
❾	20 144 03-S	1	Shaft-Gear, Governor
❿	20 310 03-S	1	Governor Gear ASM (Includes 11)
⓫	12 380 01-S	1	Pin-Regulating, Governor
⓬	M-545013-S	6	Screw-Flange, Hex (M5X0.8X13)
⓭	M-851030-S	14	Screw-Flange, Hex (M8X1.25X30)
⓮	20 032 01-S	1	Seal-Oil
⓯	25 155 02-S	1	Connector-Hose, 90 DEG

--	--	--	--

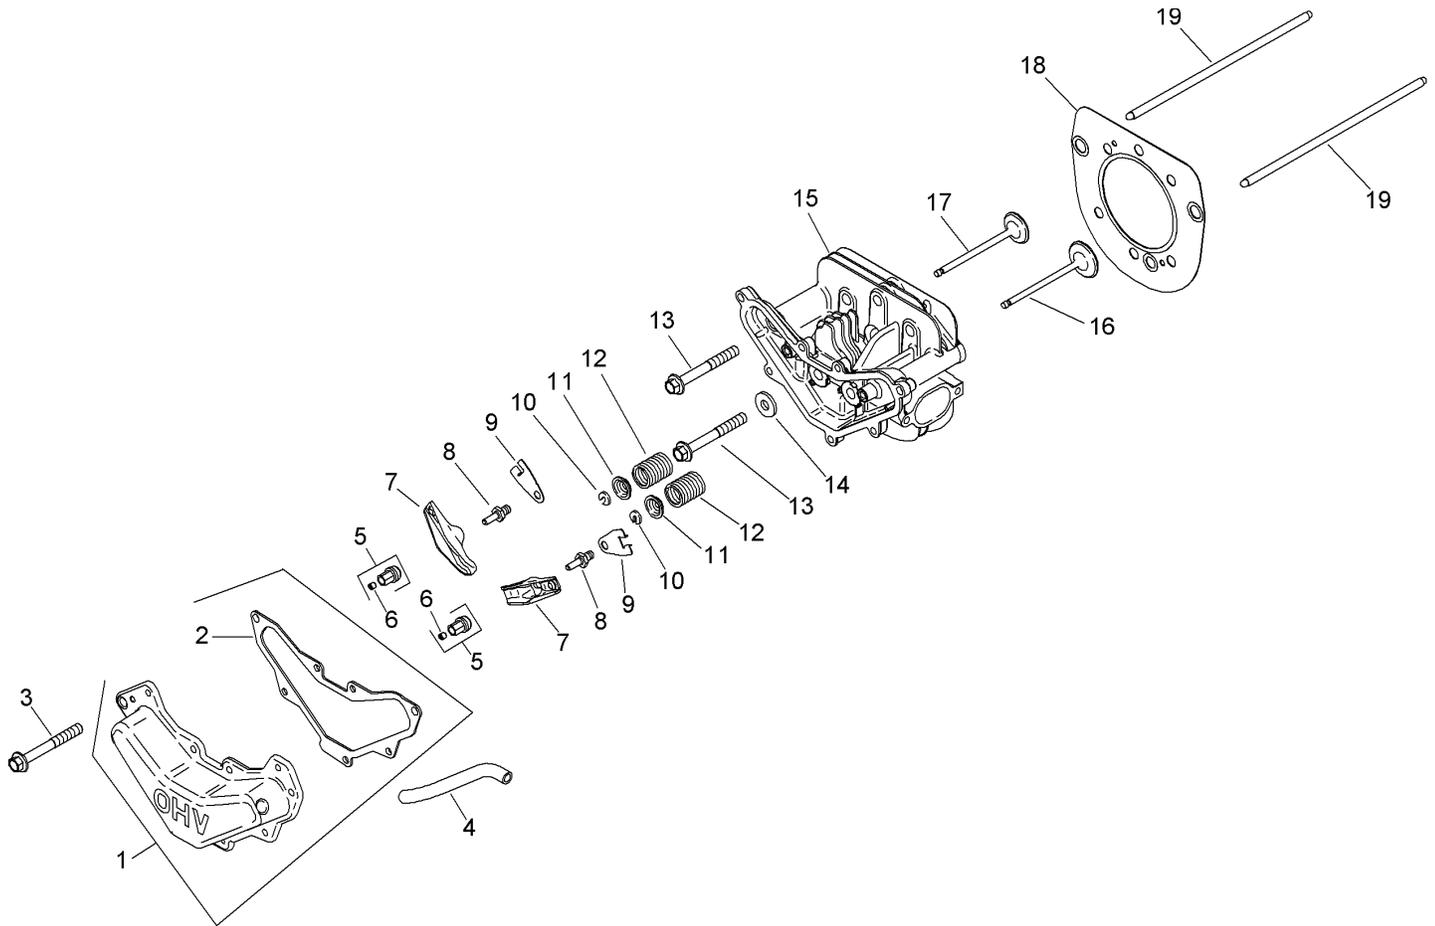

Head, Valve and Breather Assembly Kohler SV590-0019


Ref	Part No.	Qty.	Description
❶	20 096 07-S	1	Valve Cover Kit (Includes 2)
❷	20 041 13-S	1	Gasket-Valve Cover
❸	M-645020-S	7	Screw-Flange, Hex (M6X1.0X20)
❹	20 326 01-S	1	Hose-Breather
❺	20 599 02-S	2	Pivot-Arm, Rocker (Includes 6)
❻	20 086 04-S	2	Screw-Set
❼	20 186 01-S	2	Arm-Rocker
❽	20 086 03-S	2	Stud-Rocker
❾	20 146 03-S	2	Plate-Guide, Push Rod
❿	20 062 01-S	2	Lock-Retainer
⓫	20 173 01-S	2	Cap-Spring, Valve
⓬	20 089 03-S	2	Spring-Valve
⓭	20 086 02-S	6	Screw-Flange, Hex (M10X1.5X37)
⓮	12 468 05-S	1	Washer-Flat (1/2)
⓯	20 318 05-S	1	Cylinder Head ASM
⓰	20 016 01-S	1	Valve-Exhaust
⓱	20 017 01-S	1	Valve-Intake
⓲	20 841 01-S	1	Cylinder Head Gasket Kit (Includes 2, 13, 14)
⓳	20 411 04-S	2	Rod-Push

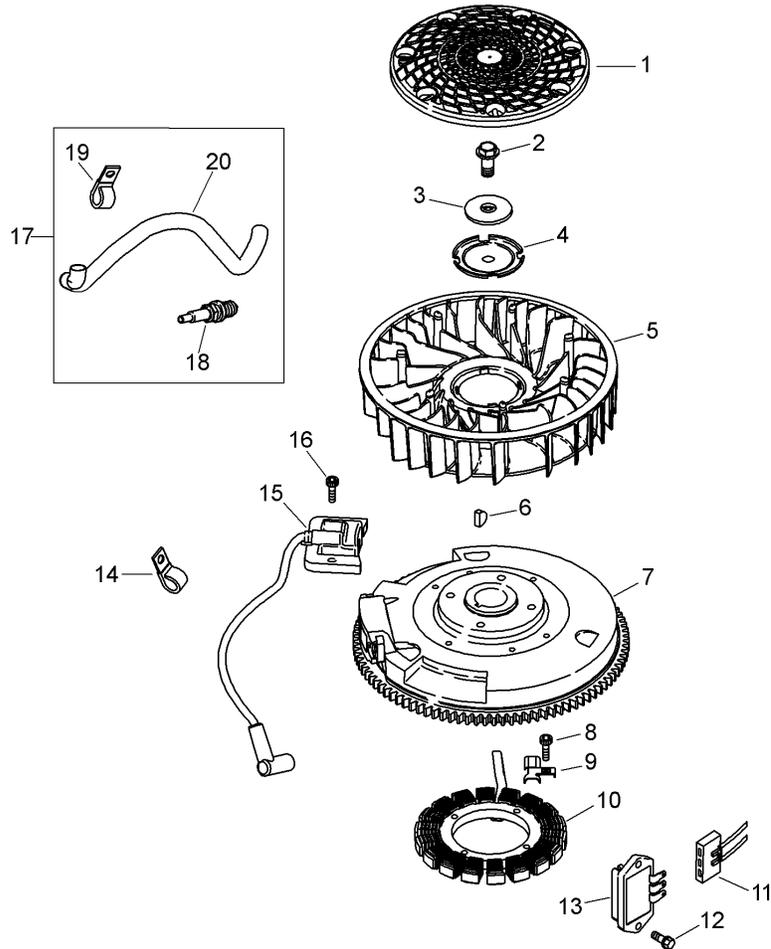

Ignition and Electrical Assembly Kohler SV590-0019


Ref	Part No.	Qty.	Description
❶	20 162 02-S	1	Screen-Grass
❷	12 086 14-S	1	Screw-Hex, Flange (M10X1.5X45)
❸	12 468 03-S	1	Washer-Flat (3/8)
❹	20 146 04-S	1	Plate-Mounting, Fan
❺	20 157 01-S	1	Fan
❻	X-42-15-S	1	Key (3/16 X 5/8)
❼	20 025 05-S	1	Flywheel
❽	20 086 17-S	2	Screw-Socket, Hex (M5X0.8X25)
❾	20 154 03-S	1	Clip-Wire, Stator
❿	237878-S	1	Stator Kit (15 Amp)
⓫	236602-S	1	Connector (3 Contact)
⓬	M-545020-S	2	Screw-HHFTF (M5X0.8X20)
⓭	41 403 09-S	1	Rectifier-Regulator
⓮	231285-S	2	Clip-Cable
⓯	20 584 01-S	1	Module-Ignition
⓰	M-561025-S	2	Screw-Socket, Hex (M5X0.8X25)
⓱	20 707 01-S	1	R F I Suppression Kit (Includes 18-20)
⓲	25 132 14-S	1	Spark Plug (R F I)
⓳	25 154 08-S	1	Clip-Cable
⓴	20 123 01-S	1	Tube (R F I)
⓵	20 176 01-S	1	Harness-Wiring (Six Pin)

--	--	--	--

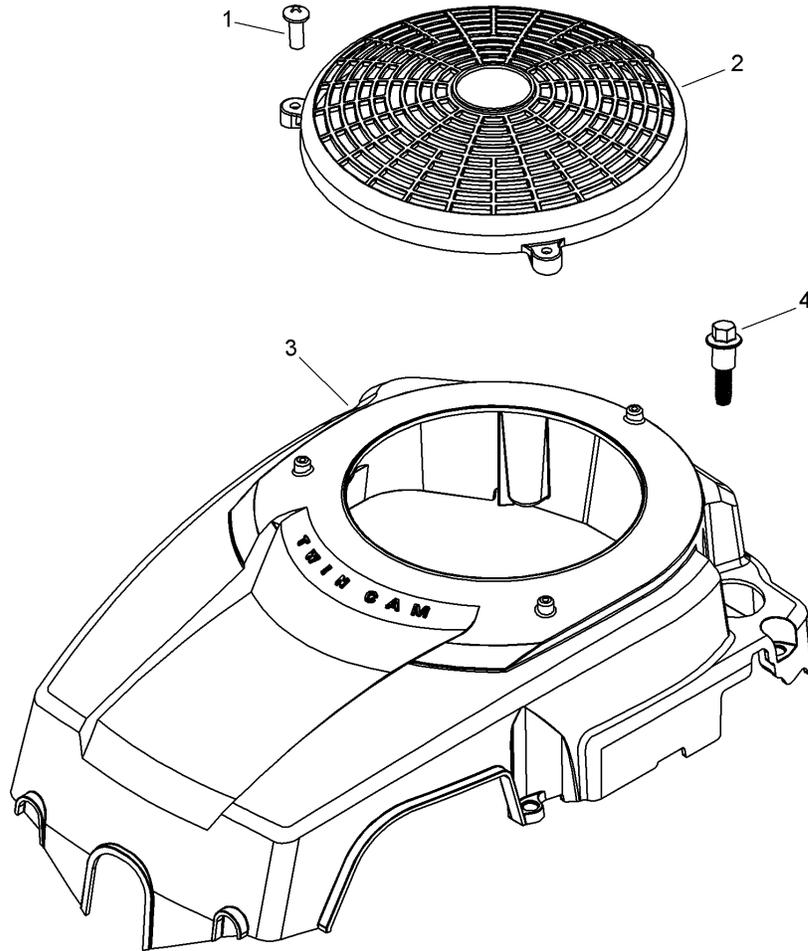

Blower Housing Assembly Kohler SV590-0019


Ref	Part No.	Qty.	Description				
①	24 086 41-S	3	Screw-Phi HD (11-16X1/2)				
②	20 314 06-S	1	Guard-Fixed				
③	20 755 11-S	1	Blower Housing And Guard Kit (Includes 2, 3)				
④	20 086 06-S	4	Bolt-Shoulder (M5X0.8X36)				
①③	20 113 29-S	1	Label-Round, Kohler				

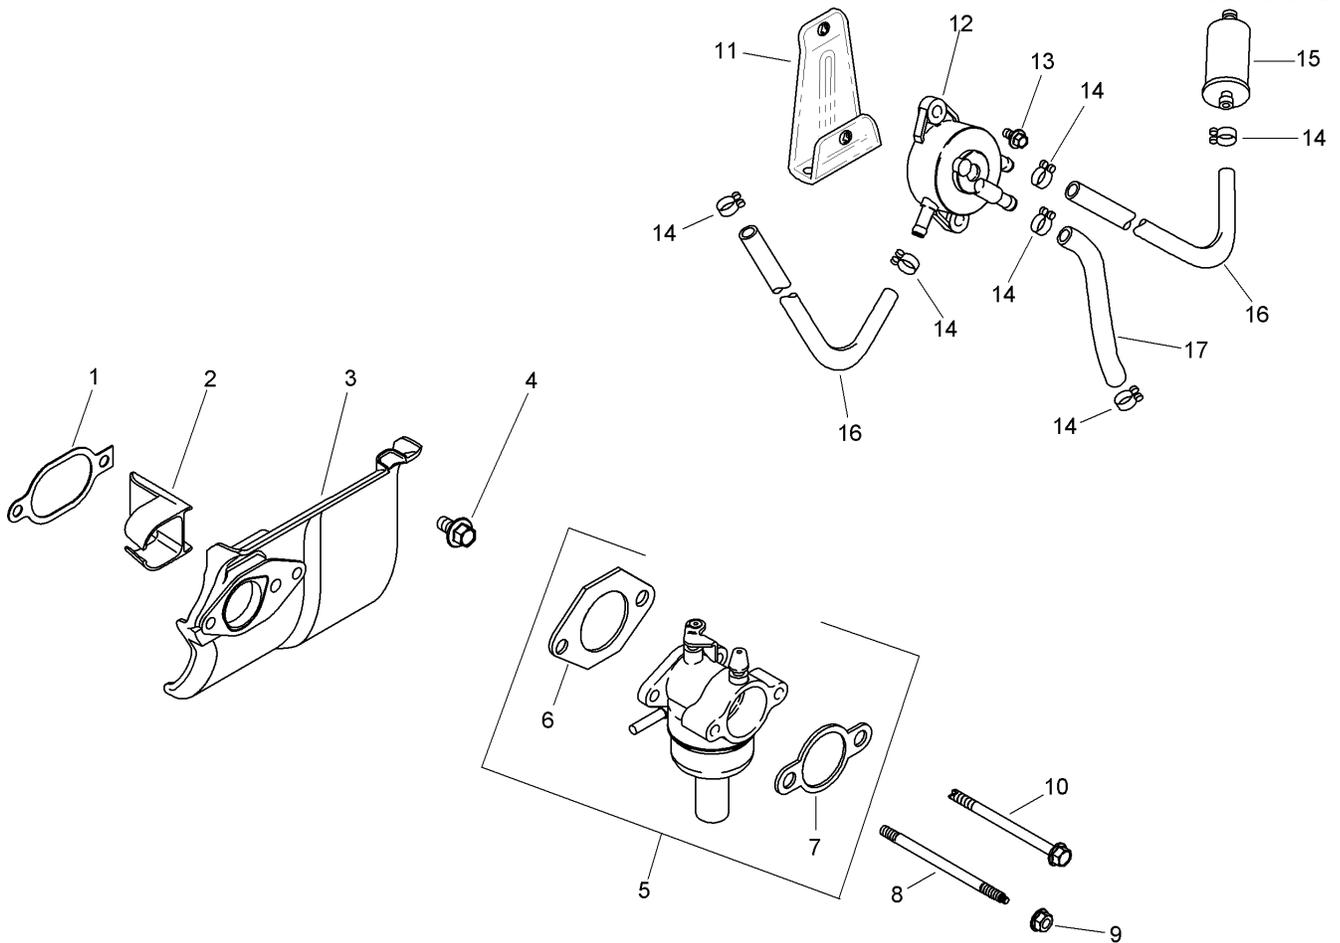

Fuel System Assembly Kohler SV590-0019


Ref	Part No.	Qty.	Description
❶	20 041 07-S	1	Gasket-Deflector, Heat
❷	20 332 01-S	1	Insert-Port, Intake
❸	20 265 03-S	1	Deflector-Heat
❹	M-651020-S	1	Screw-Flange, Hex (M6X1.0X20)
❺	20 853 14-S	1	Carburetor ASM W/Gaskets (Includes 6, 7)
❻	12 041 01-S	1	Gasket-Carburetor
❼	12 041 02-S	1	Gasket-Base, Air Cleaner
❽	20 072 05-S	2	Stud-Mounting, Carburetor (M6X1.0X100)
❾	M-641060-S	2	Nut-Hex, Flange (M6X1.0)
❿	M-545010-S	2	Screw-HHFTF (M5X0.8X10)
⓫	20 126 02-S	1	Bracket-Mounting, Fuel Pump
⓬	24 393 16-S	1	Pump-Pulse, Fuel
⓭	M-645016-S	2	Screw-HHFTF (M6X1.0X16)
⓮	25 237 14-S	6	Clamp-Hose
⓯	25 050 22-S	1	Filter-Fuel
⓰	25 111 34-S	2	Line-Fuel (24 Inch, Cut to needed Length)
⓱	52 353 20-S	1	Line-Fuel (10 Inch)
⓲	25 454 05-S	1	Tie
⓳	X-22-11-S	1	Washer-Lock, Internal Tooth (1/4)
⓴	25 431 12-S	1	Sleeve, Fuel Line
⓵	12 755 110-S	1	Choke Shaft Kit
⓶	12 757 02-S	1	Float Repair Kit

Ref	Part No.	Qty.	Description
⓷	12 757 03-S	1	Carburetor Repair Kit
⓸	12 757 33-S	1	Solenoid Repair Kit
⓹	12 757 37-S	1	Bowl Replacement Repair Kit
⓺	20 755 06-S	1	High Altitude Kit (5, 000 Ft)
⓻	20 755 07-S	1	High Altitude Kit (10, 000 Ft)

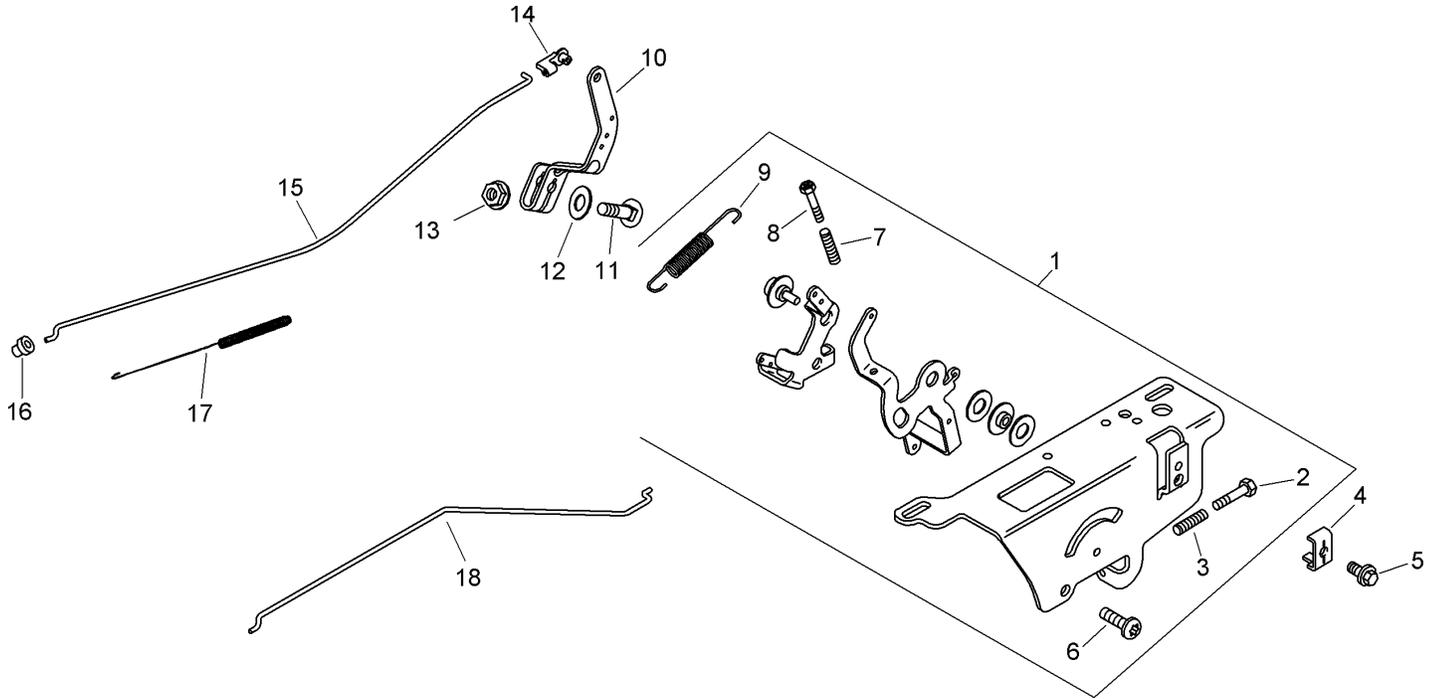

Engine Control Assembly Kohler SV590-0019


Ref	Part No.	Qty.	Description
❶	20 536 05-S	1	Speed Control ASM (Includes 2, 3, 6-9)
❷	20 086 10-S	1	Screw-Thread Forming (M4X0.7X25)
❸	12 089 11-S	1	Spring-Control, Speed (Short)
❹	12 237 01-S	1	Clamp-Cable
❺	M-545016-S	1	Screw-HHFTF (M5X0.8X16)
❻	M-664020-S	2	Screw-Socket, 6 Lobed (Thread Forming, M6X1.0X20)
❼	12 089 11-S	2	Spring-Control, Speed (Short)
❽	20 086 10-S	2	Screw-Thread Forming (M4X0.7X25)
❾	20 089 11-S	1	Spring-Governor
❿	20 090 02-S	1	Lever-Governor
⓫	52 211 04-S	1	Bolt-Square Neck, Round Head (1/4-20X1)
⓬	X-22-11-S	1	Washer-Lock, Internal Tooth (1/4)
⓭	12 100 07-S	1	Nut-Flange, Hex (1/4-20)
⓮	25 158 11-S	1	Bushing-Linkage, Throttle
⓯	20 079 04-S	1	Linkage-Throttle
⓰	25 158 08-S	1	Bushing-Retaining, Linkage
⓱	20 089 10-S	1	Spring-Linkage
⓲	20 079 05-S	1	Linkage-Choke (Single Wire)

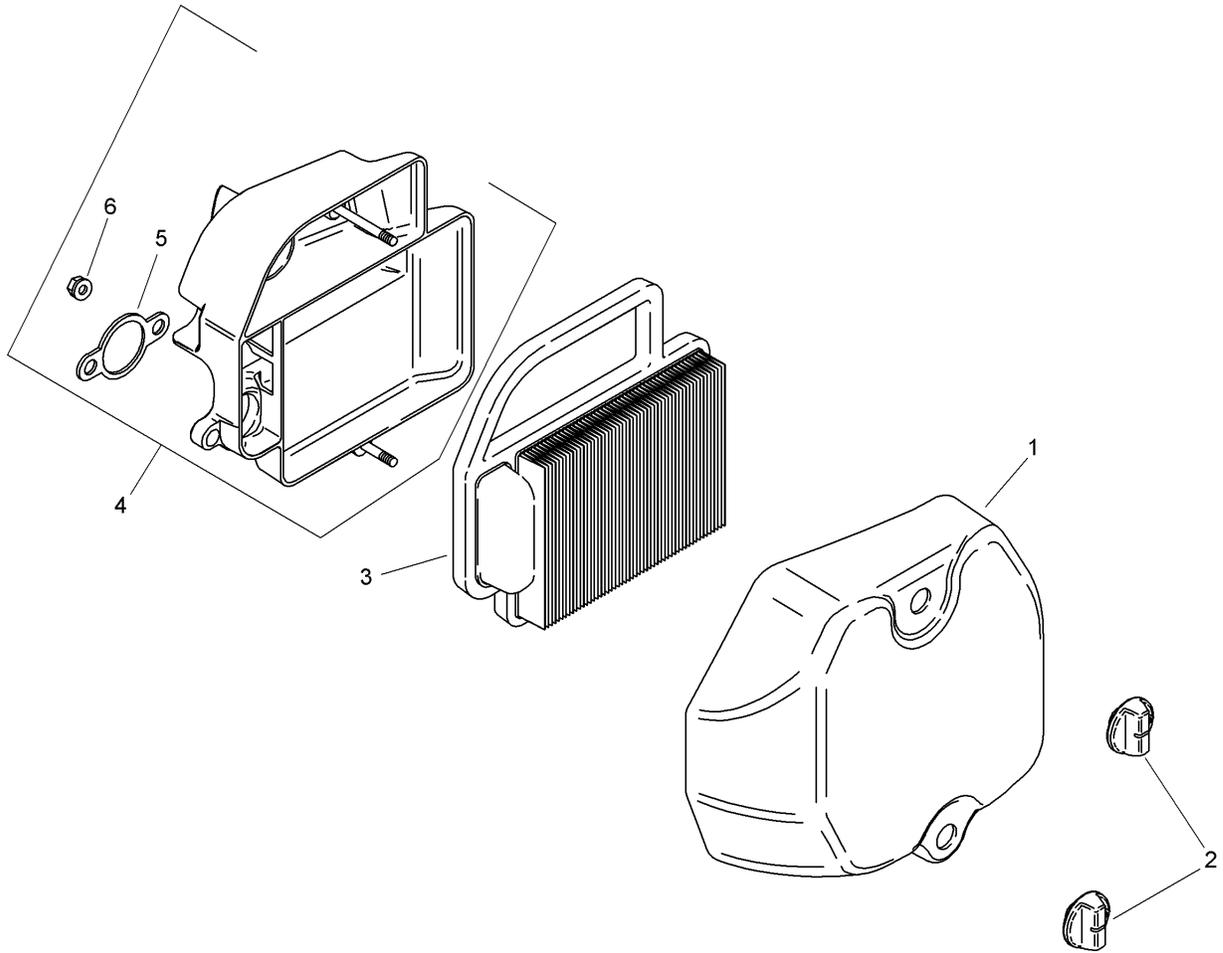

Air Intake and Filtration Assembly Kohler SV590-0019

Ref	Part No.	Qty.	Description
❶	20 096 04-S	1	Cover-Air Cleaner
❷	25 341 04-S	2	Knob-Cover
❸	20 083 02-S	1	Element-Cleaner, Air
❹	20 094 01-S	1	Air Cleaner Base Kit (Includes 5, 6)
❺	12 041 02-S	1	Gasket-Base, Air Cleaner
❻	M-641060-S	1	Nut-Hex, Flange (M6X1.0)

--	--	--	--	--

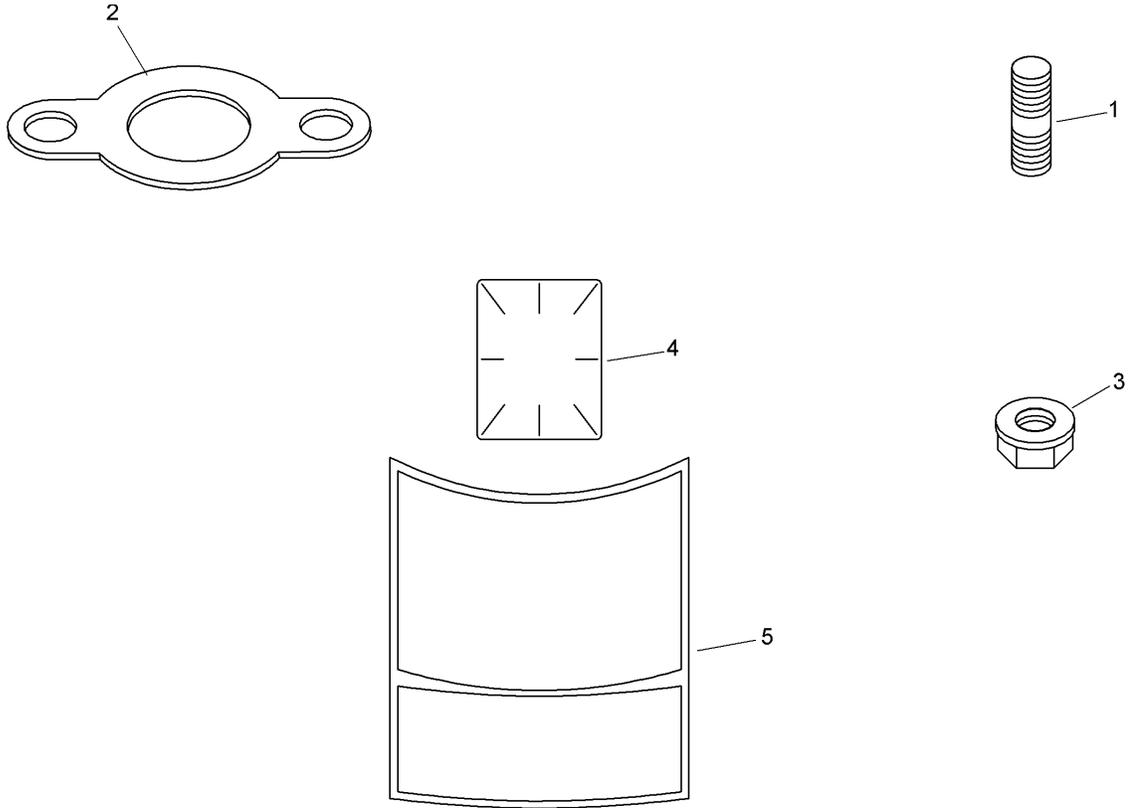

Artwork is representative
Actual labels may differ depending on model and specification number

Exhaust Stud, Gasket and Decal Assembly Kohler SV590-0019

Ref	Part No.	Qty.	Description
❶	25 072 04-S	2	Stud (M8X1.25X33)
❷	20 041 12-S	1	Gasket-Exhaust
❸	M-841080-S	2	Nut-Hex, Flange (M8X1.25)
❹	25 113 39-S	1	Decal-Clear Laminate
❺	20 113 13-S	1	Decal (19 H P)
❶❷	20 522 02	1	Short Block (S V 530/540)
❶❸	20 755 05-S	1	Gasket Set

--	--	--	--

Attachments and Accessories

For 725058046 - G4010 Zero-Turn-Radius Mower

Product Name	Model/Part
Armrest Kit	108-6163
Smooth Tread Front Tire Kit	110-6740
42in Mulching Kit	110-6743
Hour Meter Kit	112-9763
42in Blowout Ring Kit	114-1620
Foot Assist Cutting Unit Lift Kit	79313
Engine Cover Kit	79314
Floor Mat Kit	79315
Rear Engine Guard	79316
42in and 50in Twin Bagger	99324



NEW HOLLAND