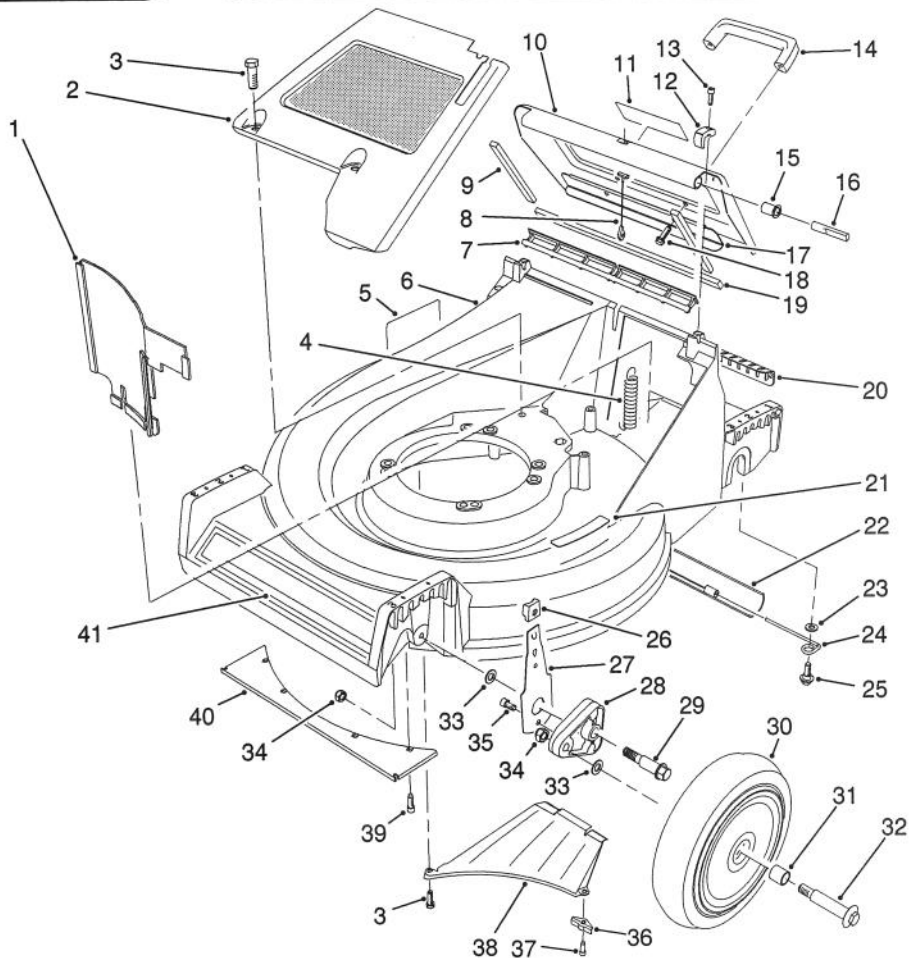


TORO®
MODEL NO. 26625B-1000001 & UP
MODEL NO. 26625BG-1000001 & UP
PARTS
CATALOG
53cm KEY-LECTRIC® REAR BAGGER


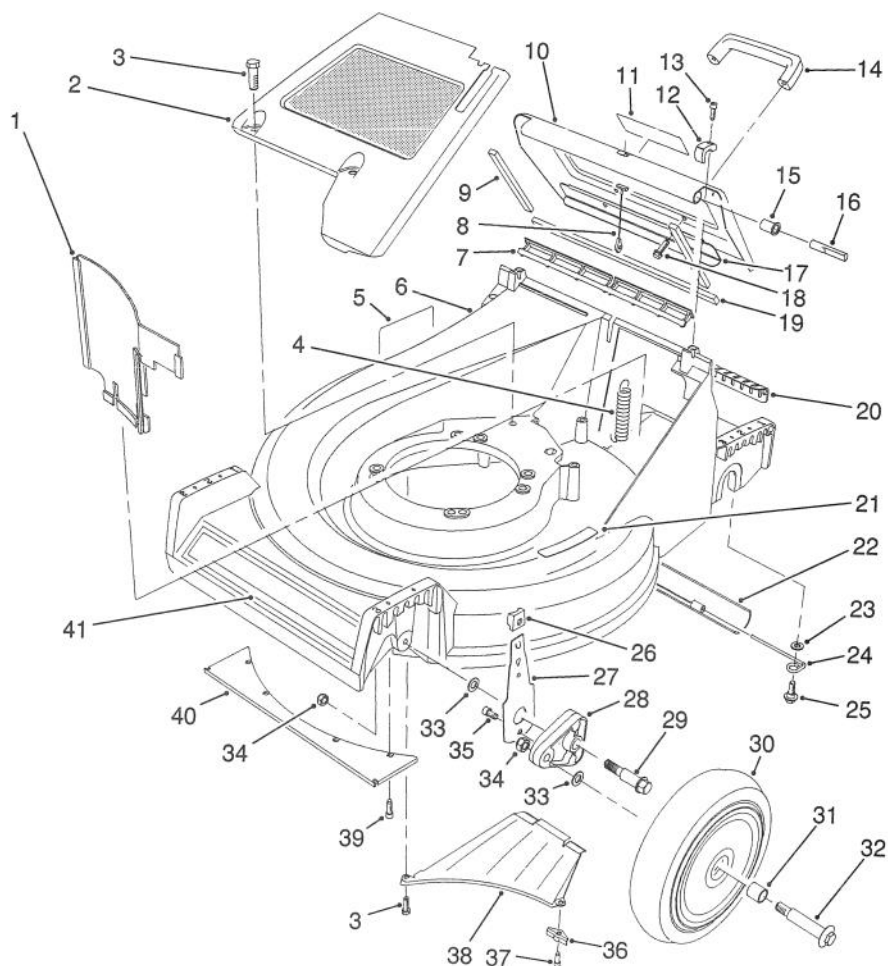
C-0491

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66-0020	Panel - Vertical	1
2	65-5660	Panel - Screen	1
3	32144-70	Screw - Hex. Hd.	3
4	65-5360	Spring - Extension	1
5	62-3860	Decal - Danger	1
6	13-5869	Housing - 53cm (Model 26625B Only)	1
		(Incl. Ref. #5, 21 & 41)	
*	13-5879	Housing - 53cm (Model 26625BG Only)	1
		(Incl. Ref. #5, 21 & 41)	
7	65-5160	Seal - Door	1
8	65-5370	Cable - Door	1
9	65-5480	Seal - Door Side	2
10	13-5889	Door - Discharge (Incl. Ref. #9, 11 & 19)	1
11	71-8370	Decal - Danger	1

Ref. No.	Part No.	Description	No. Used
12	65-5140	Clamp - Hinge	2
13	65-5210	Screw - Hex. Socket Hd.	2
14	65-5100	Handle - Door	1
15	65-5460	Bushing - Door	2
16	65-5290	Pin - Hinge	2
17	66-0610	Brace - Door	1
18	46-8091	Screw - Handle	2
19	65-5490	Seal - Door (End)	1
20	65-5150	Cover - Access	1
21	62-3950	Decal - Step Pad	1
22	65-5350	Shield - Trailing	1
23	3256-23	Washer - Flat	2
24	76-1980	Hanger - Shield	2
25	5-2490	Screw - Shoulder	2
26	25-7740	Knob - Spring Arm	2
27	66-0540	Arm - Front Spring	2
28	66-0580	Arm - Front Pivot	2


*Not Illustrated



C-0491

HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
29	66-0560	Screw - Shoulder	2	37	65-5221	Screw - Bracket	1
30	11-9509	Wheel & Tire Assembly (Incl. Ref. #31)	2	38	65-5010	Ramp - Discharge	1
31	27-6250	Bushing - Wheel	4	39	32144-4	Screw - Self Tapping (Model 26625BG Only)	4
32	27-6231	Bolt - Wheel	2	40	70-7030	Guard - Front (Model 26625BG Only)	1
33	40-1940	Washer - Wheel	4	41	70-7590	Decal - 53cm	1
34	3296-6	Nut - Lock	4	*	66-0680	Decal - French Regulations	1
35	65-5220	Screw - Socket Hd. Cap	2				
36	66-0640	Bracket - Discharge	1				

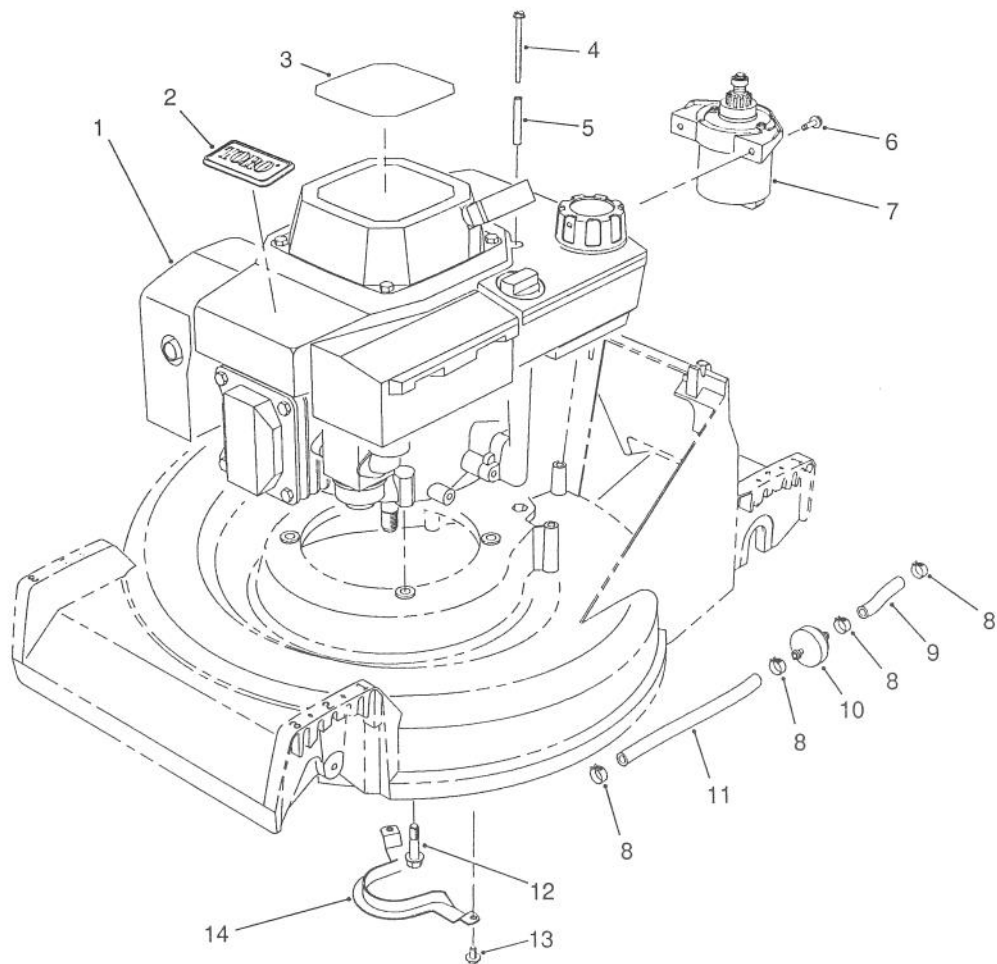


C-0165

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	72-4142	Engine - OHV	1	8	2412-95	Clamp - Fuel Line	4
2	46-8290	Plate - TORO Logo	1	9	51-3211	Line - Fuel	1
3	57-3120	Decal - Recoil (Model 26625B Only)	1	10	56-6360	Filter - Fuel	1
*	55-8070	Decal - Recoil (Model 26625BG Only)	1	11	51-3214	Line - Fuel	1
4	56-6610	Screw - Thread Forming	2	12	11-0590	Screw - Hex. Hd. Cap	3
5	57-3830	Spacer - Tubular	2	13	32144-70	Screw - Hex. Hd. Cap	2
6	56-6380	Screw - Thread Forming	2	14	66-0570	Guide - Belt	1
7	53-4500	Starter Motor Assembly	1	*	75-9850	Tube - Oil Drain	1
				*	66-1970	Wrench - Oil Drain	1
				*	46-9620	Wrench - Spark Plug	1

*Not Illustrated

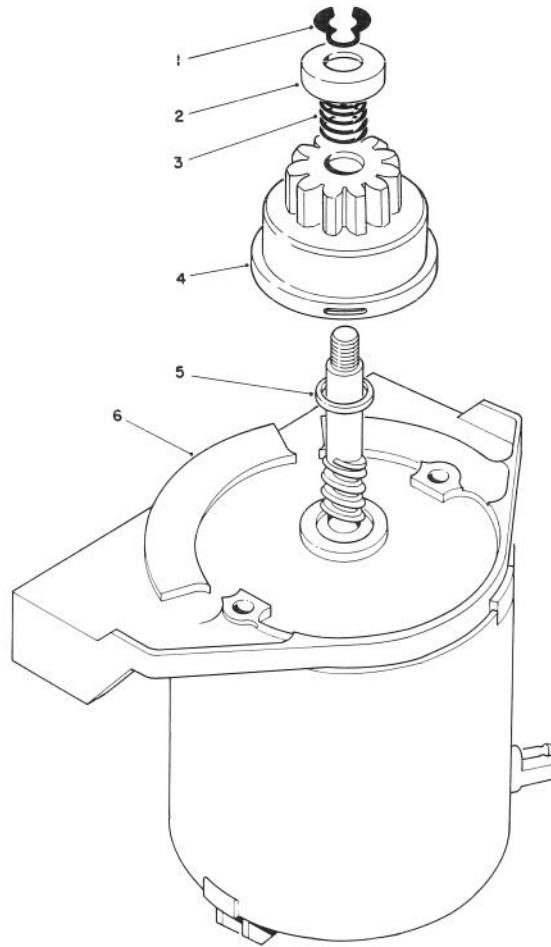


C-0156

STARTER MOTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32151-47	Ring - Retaining	1	5	23-9591	Spacer	1
2	49-2170	Stop - Pinion	1	6	53-4460	Frame - End	1
3	44-0500	Spring - Compression	1	*	53-4500	Starter Motor Assembly (Incl. Ref. #1-6)	1
4	43-4370	Pinion Assembly	1				


*Not Illustrated

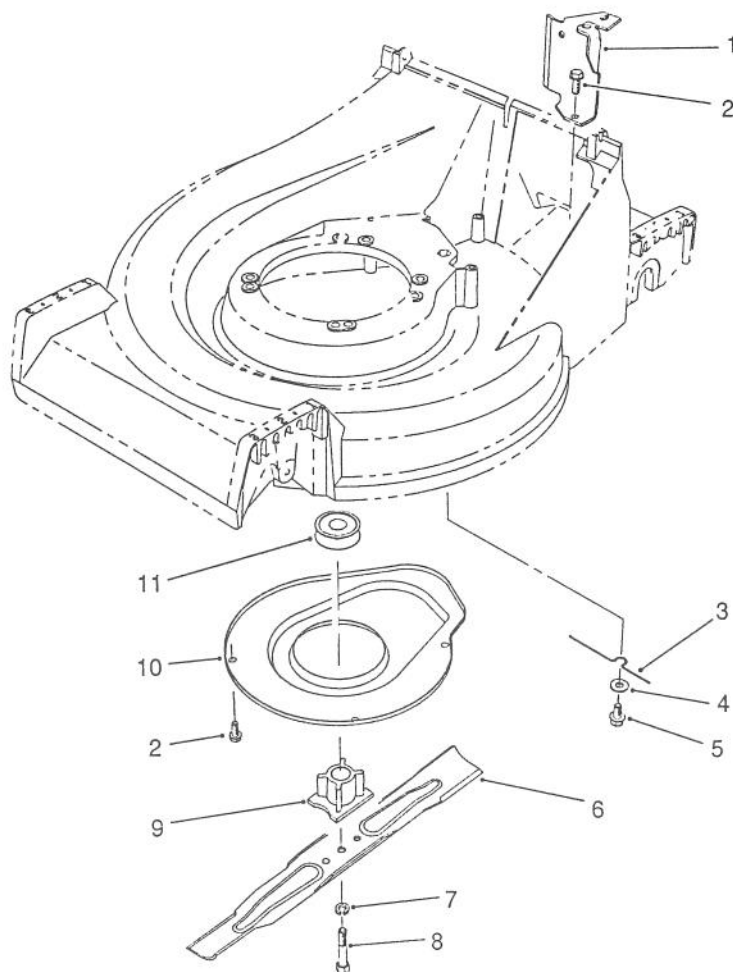

C-0172

BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	66-0030	Bracket - Cable Support	1	7	3253-22	Washer - Blade	1
2	32144-70	Screw - Hex. Hd. Cap	5	8	26-0670	Bolt - Blade	1
3	66-0620	Retainer - Belt	1	9	62-7540	Retainer - Blade	1
4	3256-24	Washer - Flat	1	10	65-5200	Cover	1
5	32144-15	Screw - Hex. Flange Hd.	1	11	62-7550	Pulley - Engine	1
6	62-7700	Blade - 21"	1				

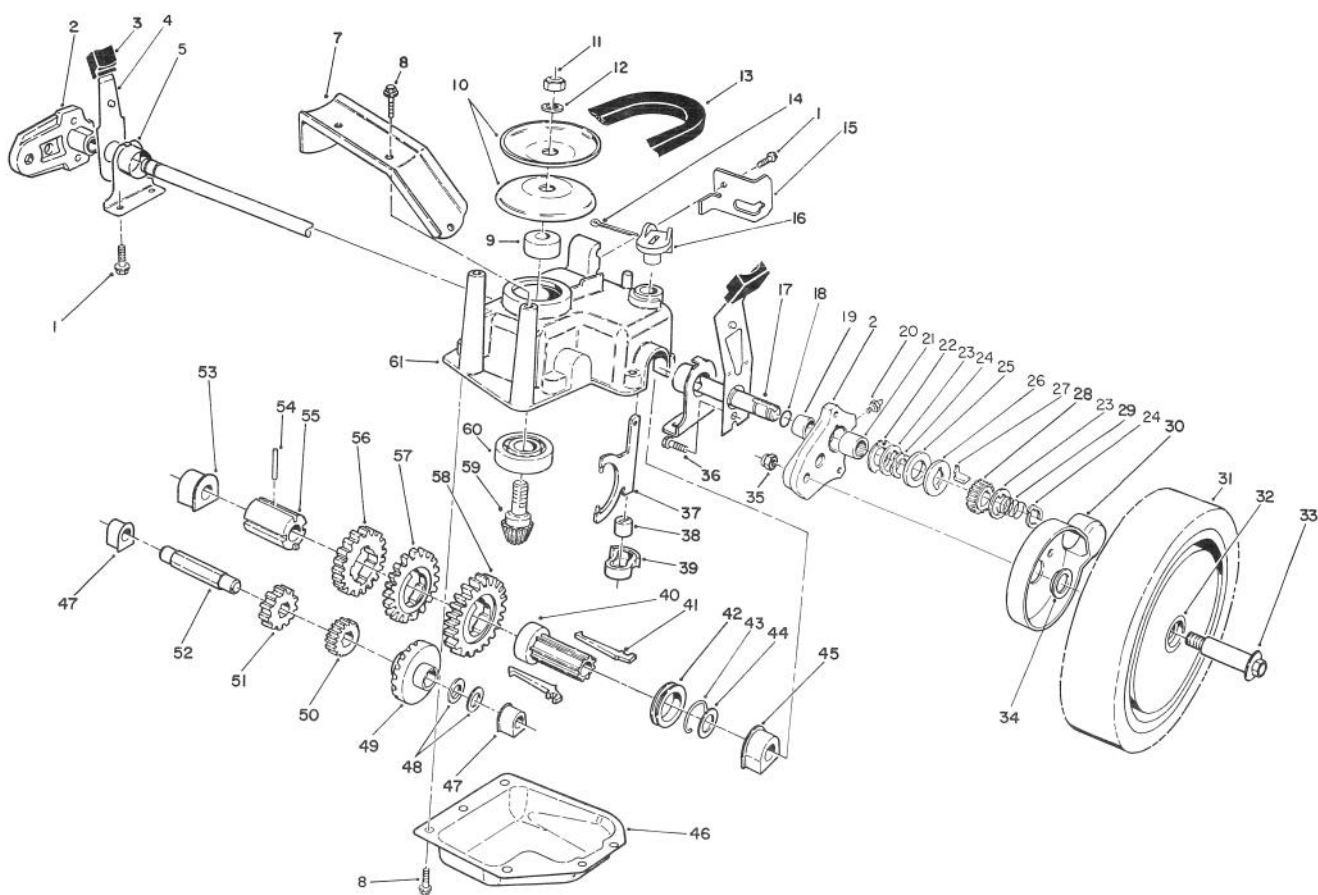


C-0493

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-70	Screw - Hex. Washer Hd.	5
2	65-5042	Pivot Arm Assembly (Incl. Ref. #19-21)	2
3	25-7740	Knob - Arm	2
4	65-5440	Spring Arm Assembly	2
5	66-0360	Cap - End	2
7	65-5190	Bracket - Belt Guide	1
8	49-2040	Screw - Self Tapping	8
9	62-6660	Spacer	1
10	60-8840	Pulley - Half	2
11	3296-5	Nut - Lock	1
12	3256-24	Washer - Flat	1
13	66-0210	V-Belt	1
14	3272-5	Pin - Cotter	1
15	76-2930	Retainer - Cable	1
16	76-0920	Lever - Shift	1
17	65-4770	Shaft - Output	1
18	237-153	Seal - "O" Ring	2
19	47-2900	Bushing - Sleeve	2
20	302-56	Fitting - Grease	2
21	48-2060	Bearing - Needle	2
22	65-4730	Washer - Thrust (Inner)	2
23	65-4740	Washer - Thrust (Keyed)	4

Ref. No.	Part No.	Description	No. Used
24	65-2720	Ring - Retaining	4
25	65-4710	Ring - Friction	2
26	65-4760	Washer - Clutch	2
27	66-6050	Key - Rocking (L.H.)	1
*	66-6040	Key - Rocking (R.H.)	1
28	65-4750	Pinion	2
29	65-4720	Spring - Compression	2
30	74-1660	Cover - Wheel	2
31	11-9519	Wheel Tire & Gear Assy. (Incl. Ref. #32)	2
32	27-6250	Bushing - Wheel	4
33	27-6231	Bolt - Wheel	2
34	74-1670	Spacer - Wheel Cover	2
35	3296-6	Nut - Lock	2
36	65-5220	Screw - Socket Hd. Cap	2
37	60-8870	Yoke - Shift	1
38	29-9570	Bushing - Yoke	1
39	60-8810	Retainer - Shift Fork	1
40	76-0780	Sleeve - Shift Key	1
41	76-0760	Key - Shift	2
42	76-0770	Collar - Shift	1
43	65-5250	Clip - Spring	1
44	36-4780	Washer - Thrust	1

*Not Illustrated

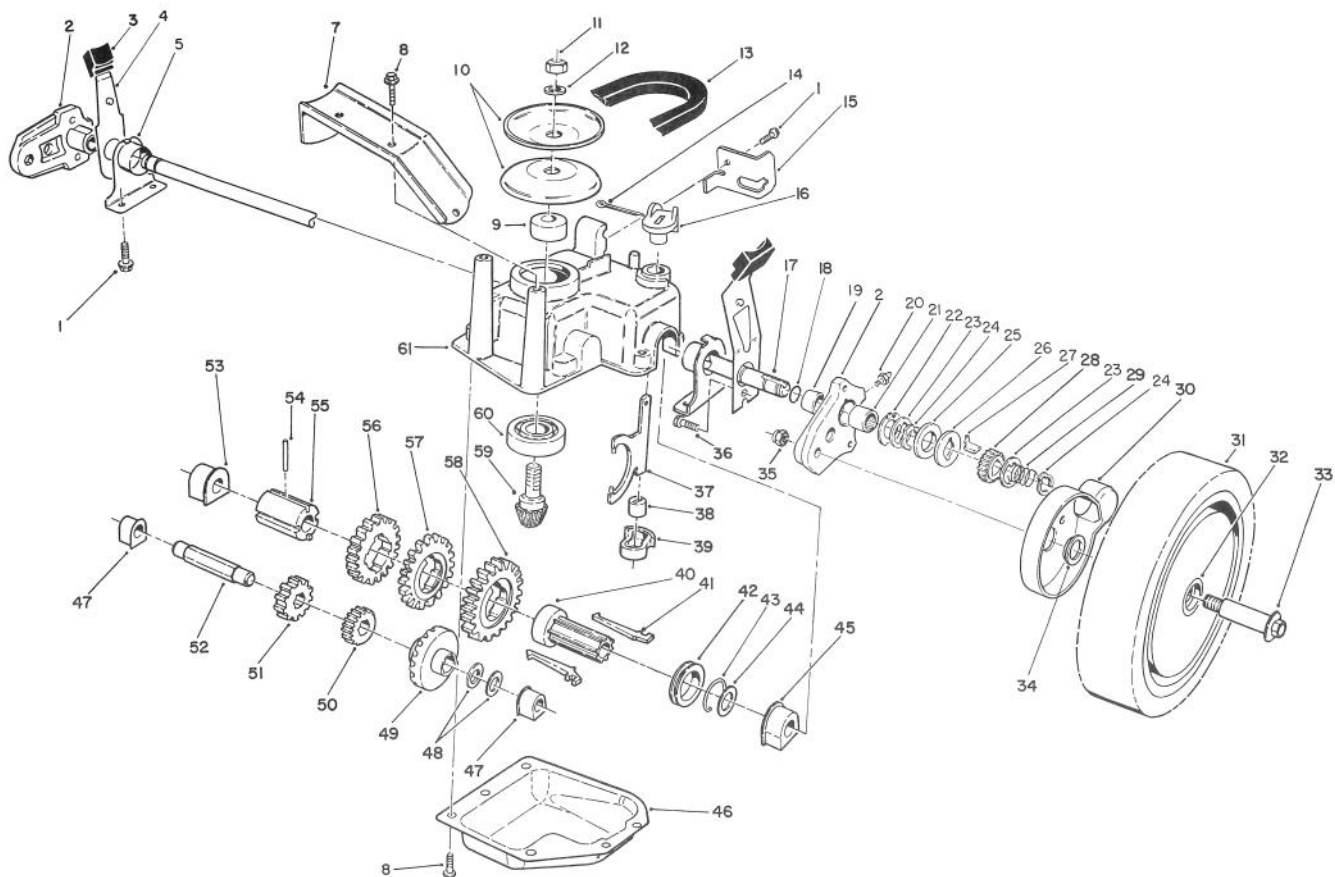


C-0493

GEAR CASE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
45	60-8770	Bushing - Output Shaft	1	54	32121-120	Pin - Coil	1
46	60-8730	Cover - Gear Case	1	55	60-8790	Sleeve - Gear	1
47	60-8750	Bushing - Intrmdt. Shaft	2	56	55-3810	Gear - 39T (3rd Gear)	1
48	36-4791	Washer - Thrust	2	57	55-3790	Gear - 44T (2nd Gear)	1
49	55-3760	Gear - Pinion 15T	1	58	55-3770	Gear - 49T (1st Gear)	1
50	55-3780	Gear - Pinion 20T	1	59	60-8890	Pinion - Bevel	1
51	55-3800	Gear - Pinion 25T	1	60	38-7820	Bearing - Ball	1
52	60-8800	Shaft - Intermediate	1	61	60-8710	Case - Gear (Upper)	1
53	60-8850	Bushing - Output Shaft	1	*	62-6673	Gear Case Assy. Complete	1

*Not Illustrated

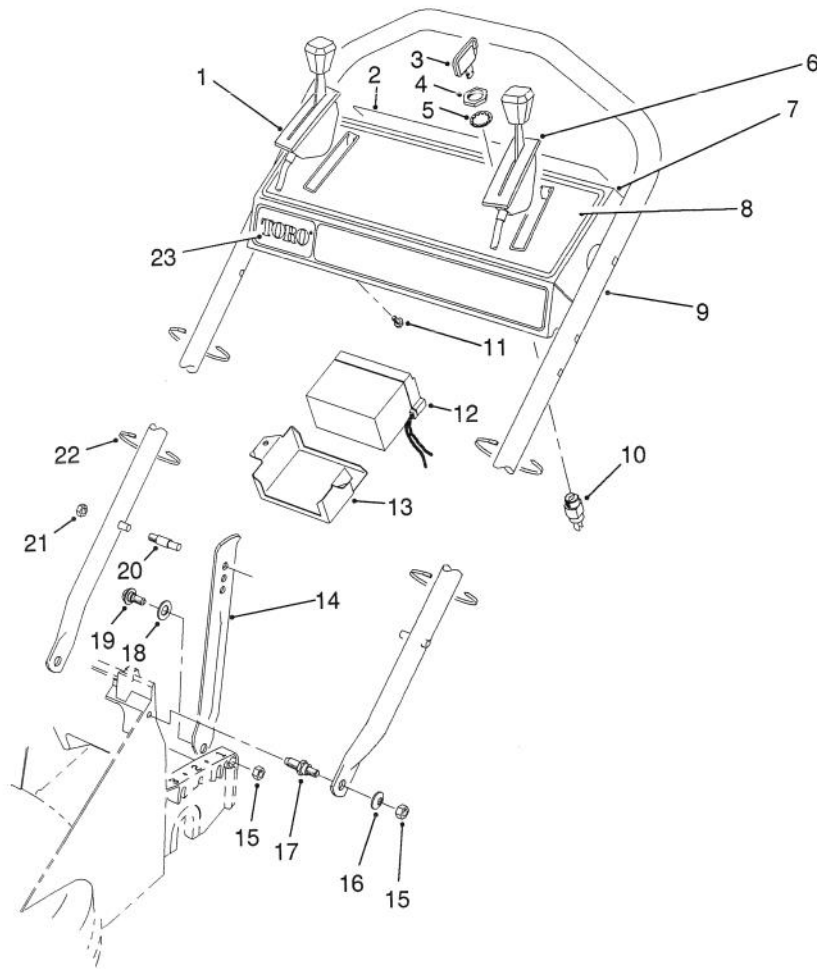

C-0494


HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-2710	Control - Ground Speed Bend Type #6 Sheath Lg. 51" 129.5cm) Wire Lg. 3-1/8" (7.9cm)	1
2	66-1790	Decal - Danger (Model 26625B Only)	1
*	72-8030	Decal - Danger (Model 26625BG Only)	1
3	63-8360	Key - Ignition	1
4	218-461	Nut - Lock	1
5	3254-5	Washer - Lock	1
6	66-0230	Control - Throttle Bend Type #2 Sheath Lg. 44-3/4" (113.7cm) Wire Lg. 2-1/2" (6.4cm)	1
7	13-5859	Panel - Control (Incl. Ref. #8)	1
8	66-0280	Decal - Instruction	1

Ref. No.	Part No.	Description	No. Used
9	66-0320	Handle	1
10	46-5780	Switch - Starter (Incl. Ref. #4 & 5)	1
11	32104-76	Screw - Self Tapping	5
12	55-7520	Battery	1
13	55-8180	Retainer - Battery	1
14	65-5730	Latch - Handle	2
15	3296-29	Nut - Lock	2
16	3256-23	Washer - Flat	2
17	66-0450	Screw - Shoulder Stud	2
18	256-313	Washer - Nylon	2
19	5-2490	Screw - Shoulder	2
†20	49-2750	Pin - Handle	2
†21	3296-47	Nut - Lock	2
22	3290-378	Tie - Cable	5
23	65-5650	Decal - TORO	1
*	49-8312	Harness - Wire	1
*	22-4710	Charger - Battery (220V)	1

*Not Illustrated

†Service Replacement Parts

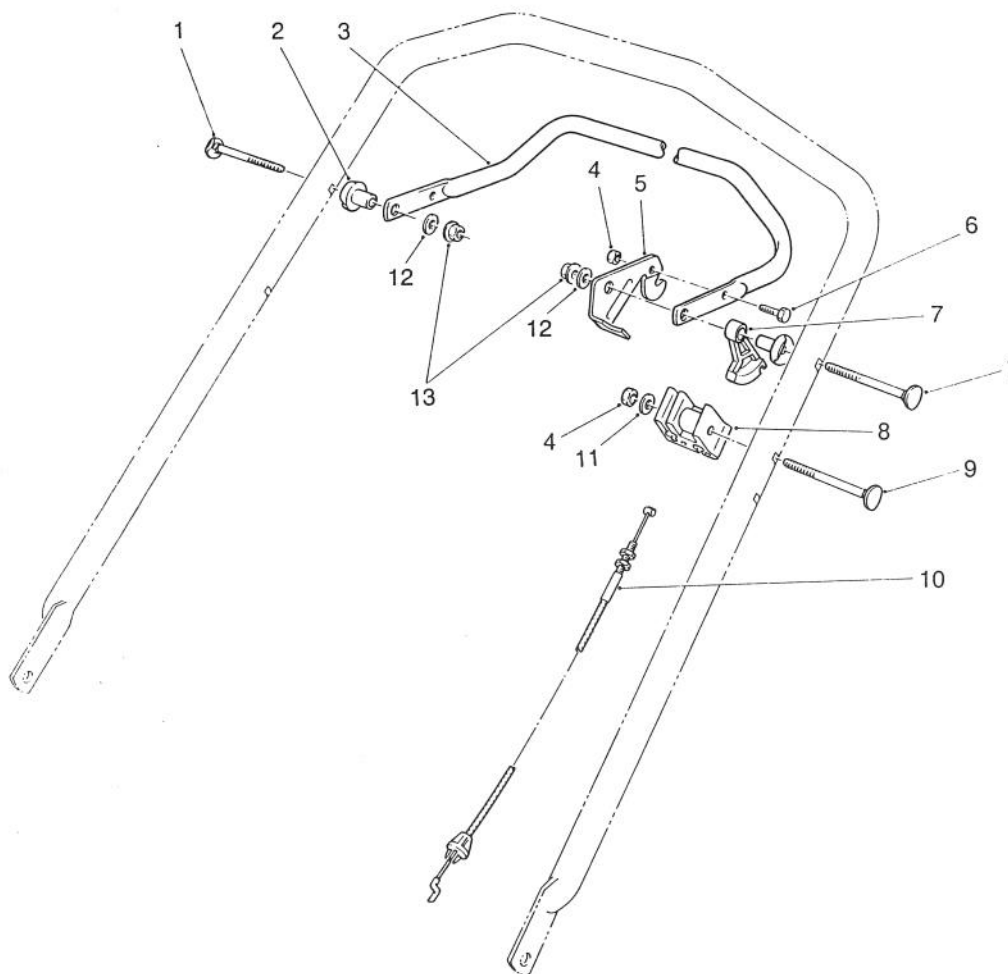


C-0495

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	17-9426	Screw - Handle	2
2	66-0330	Support - Spacer	2
3	52-7430	Control Bar Assembly	1
4	3296-42	Nut - Lock	2
5	46-8800	Lever - Control	1
6	321-3	Screw - Hex. Hd. Cap	1
7	46-5520	Lever - Traction	1

Ref. No.	Part No.	Description	No. Used
8	71-0960	Support - Cable	1
9	46-6432	Screw - Handle	1
10	71-0620	Cable - Traction	1
11	3256-22	Washer - Flat	1
12	3256-23	Washer - Flat	2
13	3296-29	Nut - Lock	2

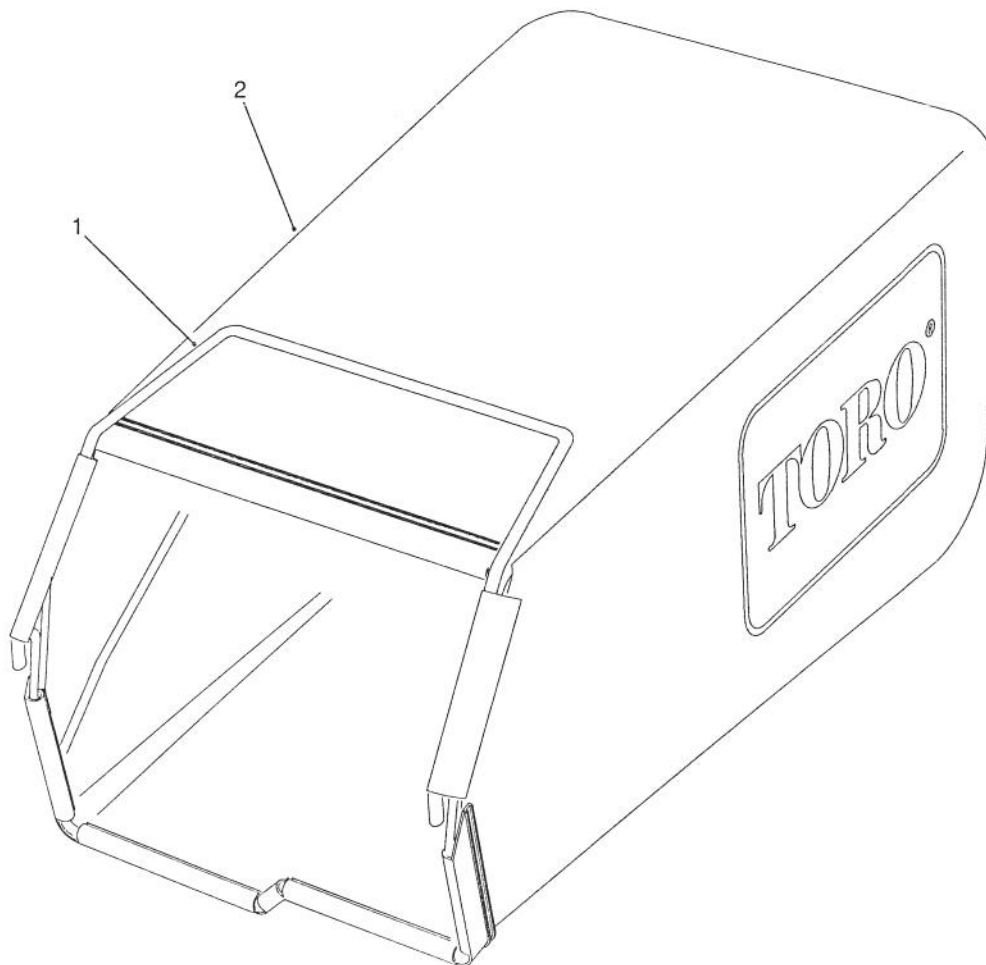


C-0168

**GRASS BAG ASSEMBLY MODEL 26625B Serial
Nos.1000101-1000362 MODEL 26625BG Serial
Nos.1000101-1000300**

Ref. No.	Part No.	Description	No. Used
1	76-1790	Frame - Grass Bag	1

Ref. No.	Part No.	Description	No. Used
2	66-0010	Bag	1

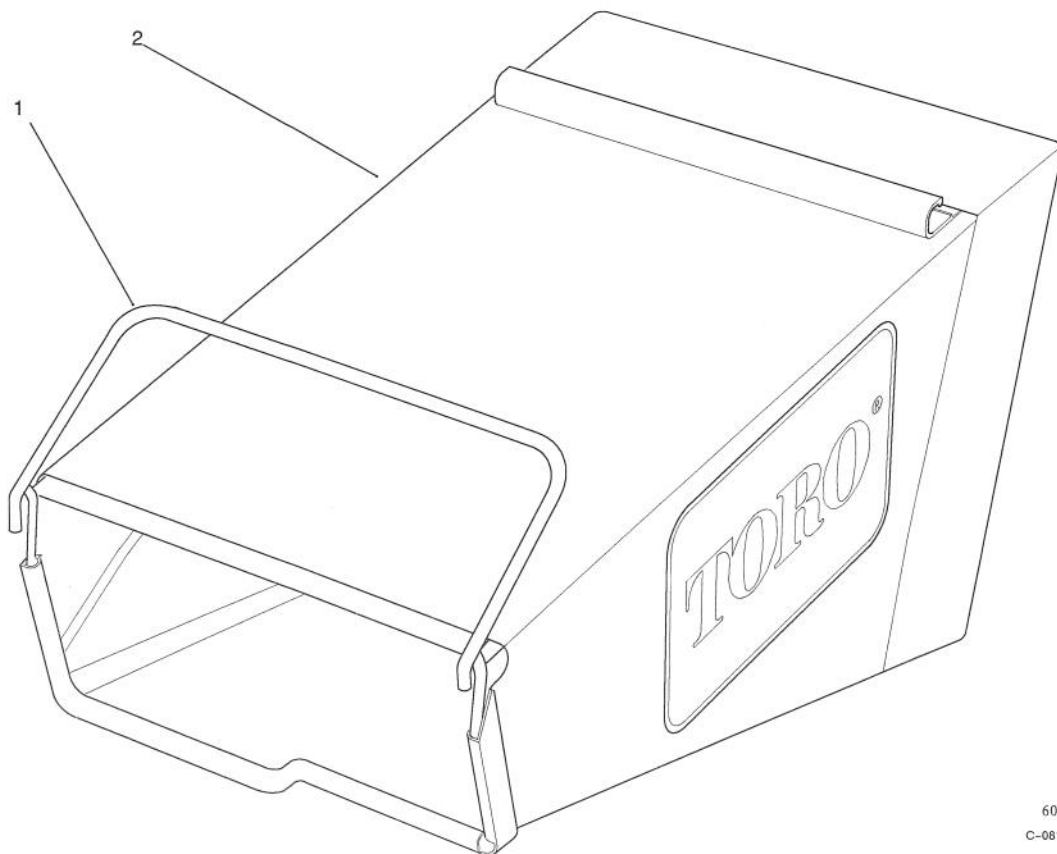


C-0819

GRASS BAG ASSEMBLY MODEL 26625B
Serial Nos. 1000363 & UP
MODEL 26625BG Serial Nos.1000301 & UP

Ref. No.	Part No.	Description	No. Used
1	82-2680	Frame - Grass Bag	1

Ref. No.	Part No.	Description	No. Used
2	83-6490	Bag	1

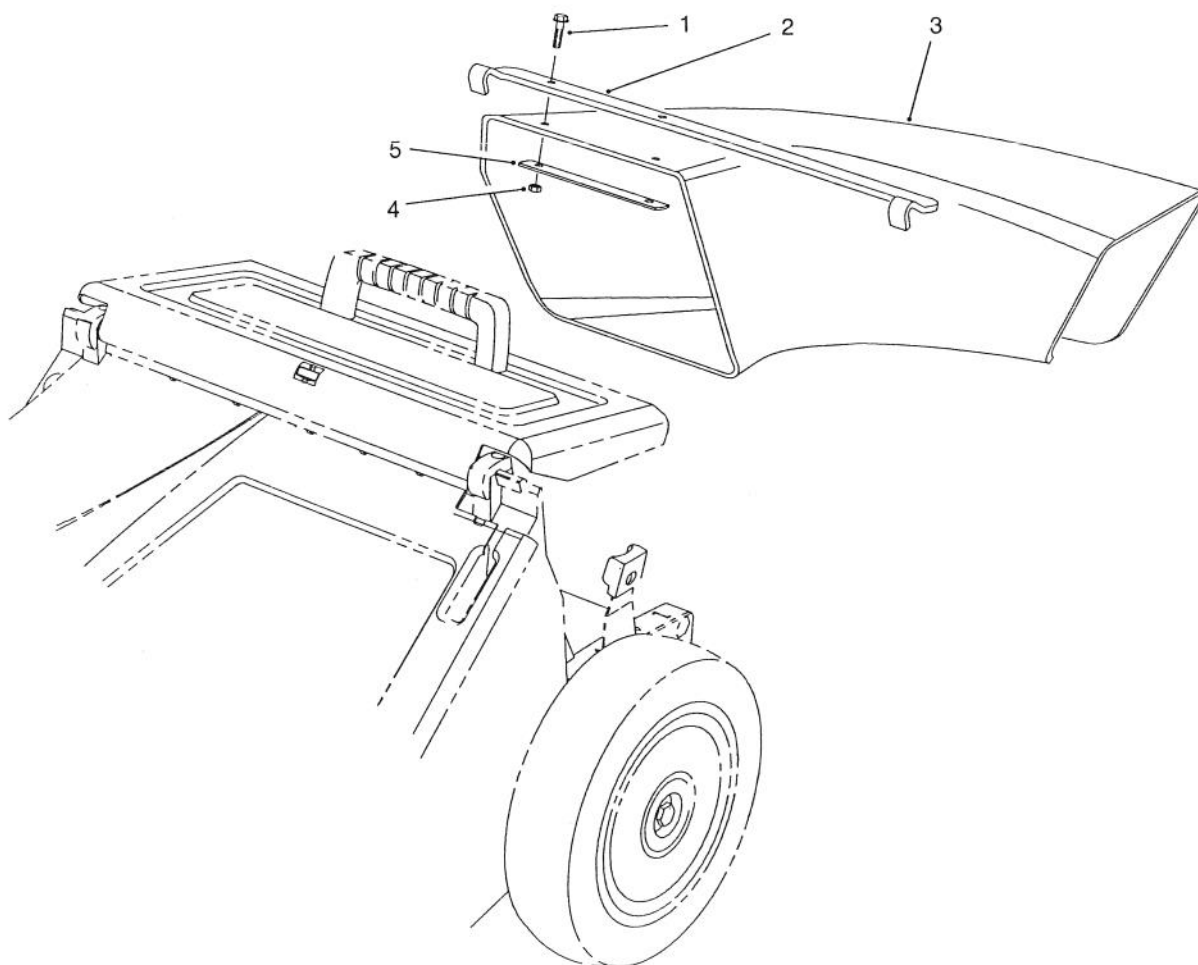


C-0169

SIDE DISCHARGE CHUTE MODEL NO. 59112 (Optional)

Ref. No.	Part No.	Description	No. Used
1	3290-126	Screw - Hex. Washer Hd.	2
2	66-0070	Bracket - Chute Hanger	1
3	65-5240	Chute - Discharge	1

Ref. No.	Part No.	Description	No. Used
4	3296-12	Nut - Lock	2
5	66-0060	Plate - Stress	1

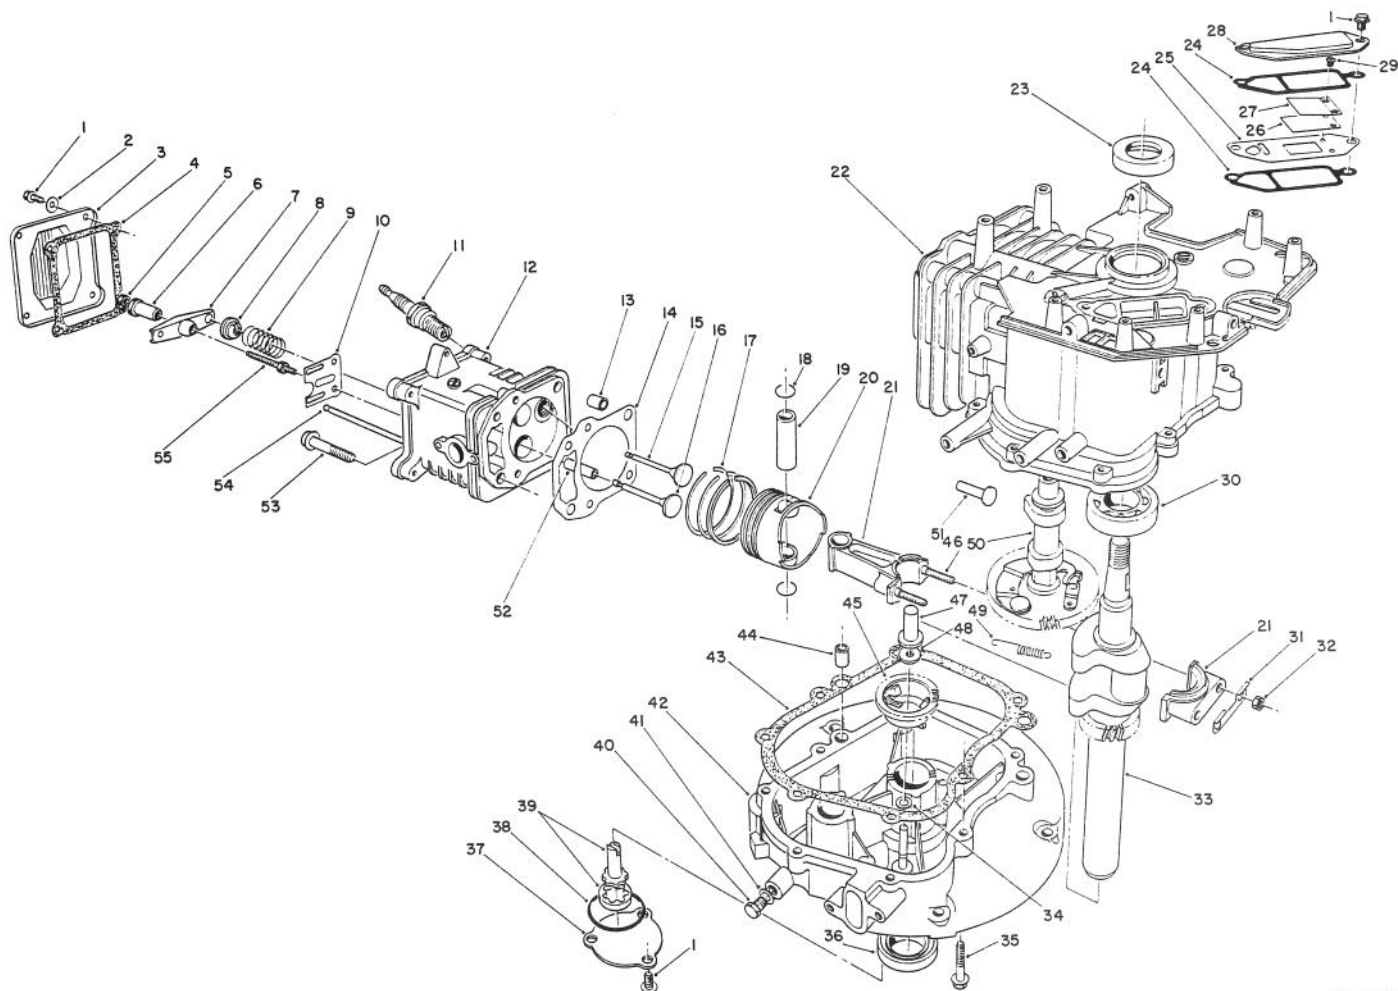


C-0174

CRANKCASE ASSEMBLY (Engine No. VML0-5)

Ref. No.	Part No.	Description	No. Used
1	81-1170	Bolt	9
2	81-3790	Washer	4
3	81-3780	Cover - Rocker Arm	1
4	81-3770	Gasket - Cover	1
5	81-3760	Nut - Jam	2
6	81-3750	Pivot - Rocker Arm	2
7	81-3740	Arm - Rocker	2
8	81-3730	Retainer - Valve Spring	2
9	81-3720	Spring - Valve	2
10	81-3710	Guide - Push Rod	1
11	81-3250	Plug - Spark	1
12	81-5540	Head - Cylinder (Incl. Ref. #52)	1
13	81-3690	Pin - Dowel	2
14	81-4710	Gasket - Cylinder Head	1
*	81-3820	Gasket Set	1
15	81-3660	Valve - Exhaust	1
16	81-3670	Valve - Intake	1
17	81-3650	Ring Set, Piston	1
18	50-0960	Circlip	2
19	81-3630	Pin - Piston	1
20	81-3620	Piston	1

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
21	81-3390	Connecting Rod Assembly (Incl. Ref. #31, 32 & 46)	1
22	81-3280	Block - Engine (Incl. Ref. #23 & 30)	1
23	81-3290	Seal - Upper Crankshaft	1
24	81-3300	Gasket - Breather	2
25		Plate - Breather	1
26		Valve - Reed	1
*	81-3370	Reed Valve Assembly (Incl. Ref. # 25 & 27-29)	1
27		Retainer - Reed Valve	1
28	81-3320	Cover - Breather	1
29		Screw - Reed Valve	2
30	81-3380	Bearing - Ball	1
31	81-3400	Plate - Lock	1
32	50-0510	Nut	2
33	81-3420	Crankshaft	1
34	81-3440	Washer	1
35	81-3450	Bolt	7
36	81-3460	Seal - Lower Crankshaft	1
37	81-3470	Cover - Oil Pump	1

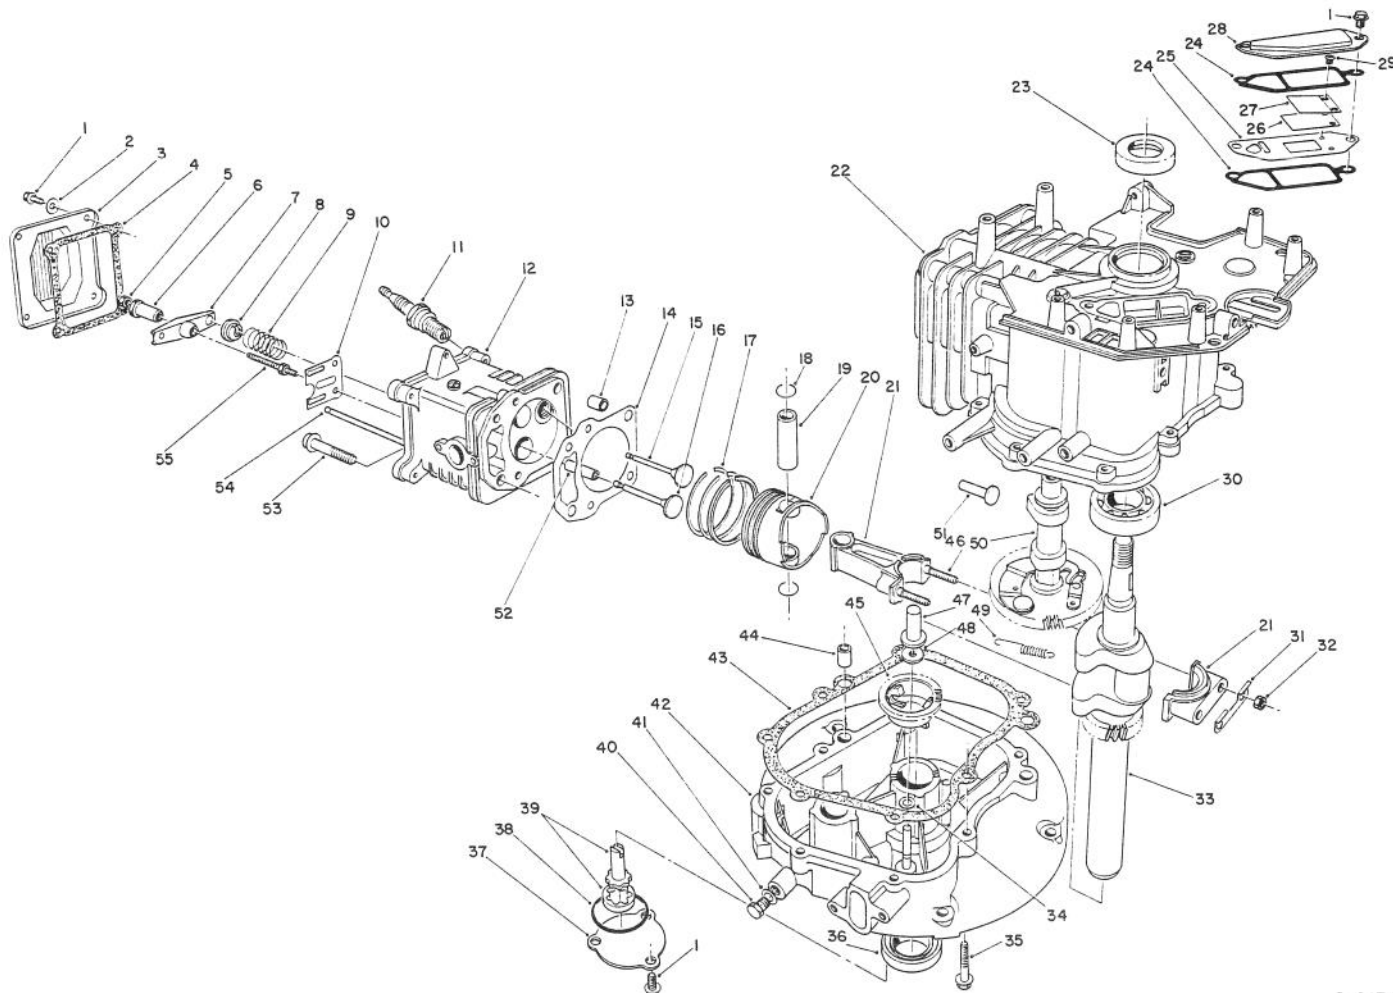


C-0174

CRANKCASE ASSEMBLY (Continued) (Engine No. VML0-5)

Ref. No.	Part No.	Description	No. Used
38	81-3480	Seal - O-Ring	1
39	81-3490	Oil Pump Assembly	1
40	81-4970	Plug - Oil Drain	1
41	81-3510	Gasket - Oil Plug	1
42	81-3520	Crankcase - Lower	1
43	81-3530	Gasket - Crankcase	1
44	50-0450	Pin - Dowel	2
45	81-3550	Governor Flyweight Assy.	1
46	81-3610	Stud - Connecting Rod	2
47	81-3560	Plunger - Governor	1

Ref. No.	Part No.	Description	No. Used
48	81-3570	Washer	1
49	81-3580	Spring - Comp. Release	1
50	81-5550	Camshaft Assembly (Incl. Ref. #49)	1
51	81-3600	Tappet	2
52	81-3830	Guide - Valve	2
53	50-0190	Bolt	4
54	81-3810	Rod - Push	2
55	81-3800	Stud - Rocker Arm	2
*	13-5939	Short Block Assembly	1

*Not Illustrated

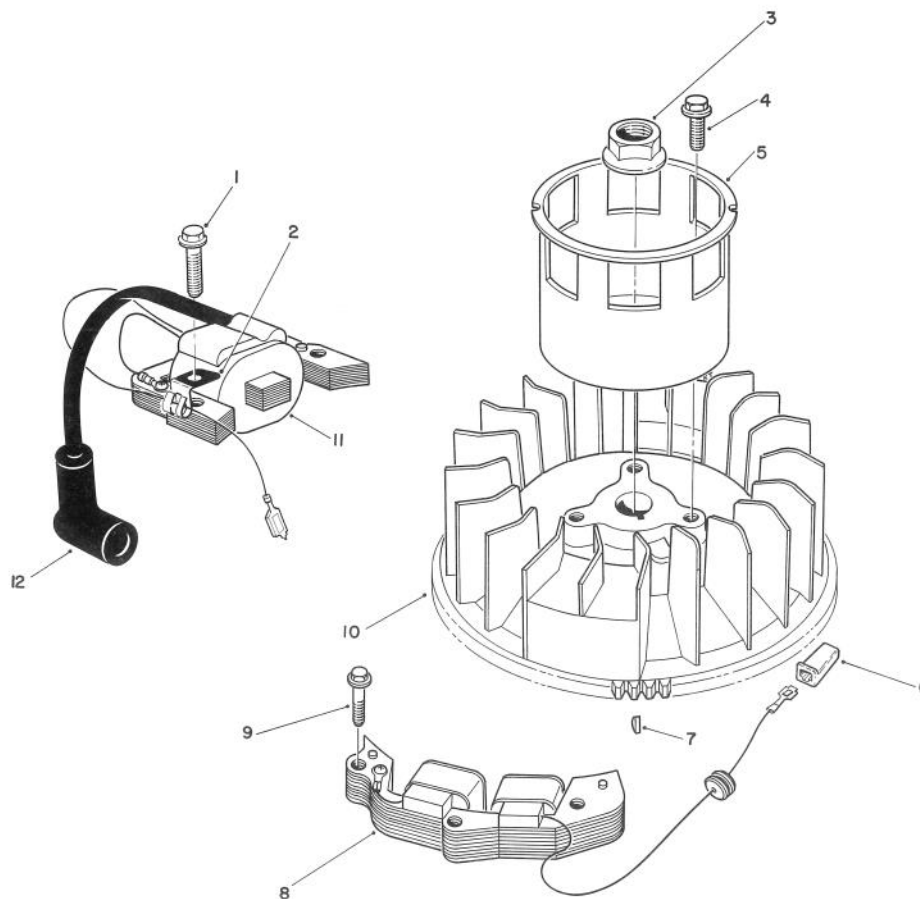


C-0158

MAGNETO & FLYWHEEL ASSEMBLY (Engine No. VML0-5)

Ref. No.	Part No.	Description	No. Used
1	53-0860	Bolt	2
2	81-1480	Clamp	1
3	81-3890	Nut	1
4	81-1300	Bolt	3
5	81-3910	Cup - Starter	1
6	218-550	Connector - Wire	1

Ref. No.	Part No.	Description	No. Used
7	81-3930	Key - Flywheel	1
8	81-3940	Coil - Alternator	1
9	81-3950	Bolt	2
10	81-3920	Flywheel	1
11	81-5580	Magneto Coil Assembly	1
12	81-3860	Cover - Spark Plug	1

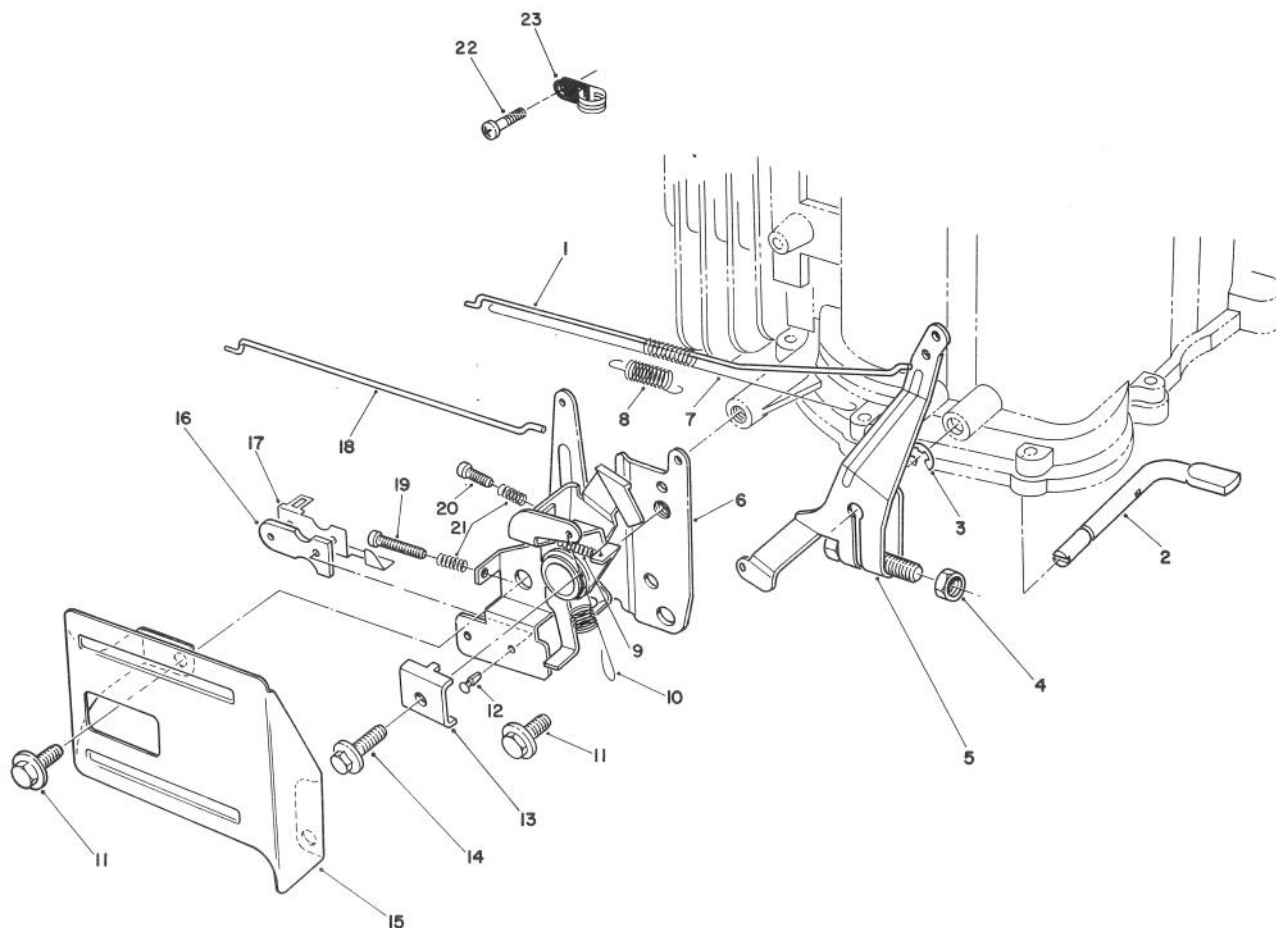


C-0159

GOVERNOR ASSEMBLY (Engine No. VML0-5)

Ref. No.	Part No.	Description	No. Used
1	81-4450	Rod - Carburetor	1
2	81-4480	Shaft - Governor	1
3	81-4540	Ring - Retaining	1
4	81-4490	Nut	1
5	81-4500	Governor Arm Assembly	1
6	81-4510	Throttle & Choke Control	1
7	81-4470	Spring - Carburetor Rod	1
8	81-4460	Spring - Choke Lever	1
9	81-4570	Spring	1
10	81-4520	Spring - Governor	1
11	81-1170	Bolt	2
12	81-4530	Rivet	2

Ref. No.	Part No.	Description	No. Used
13	81-1690	Clamp - Cable	1
14	50-0130	Bolt	1
15	57-5750	Guard - Throttle	1
16	81-1830	Insulator - Kill Switch	1
17	81-1840	Terminal - Switch	1
18	81-4440	Rod - Choke	1
19	81-4560	Screw	1
20	81-4550	Screw	1
21	81-2900	Spring	2
22	81-0380	Screw	1
23	81-4780	Clamp	1

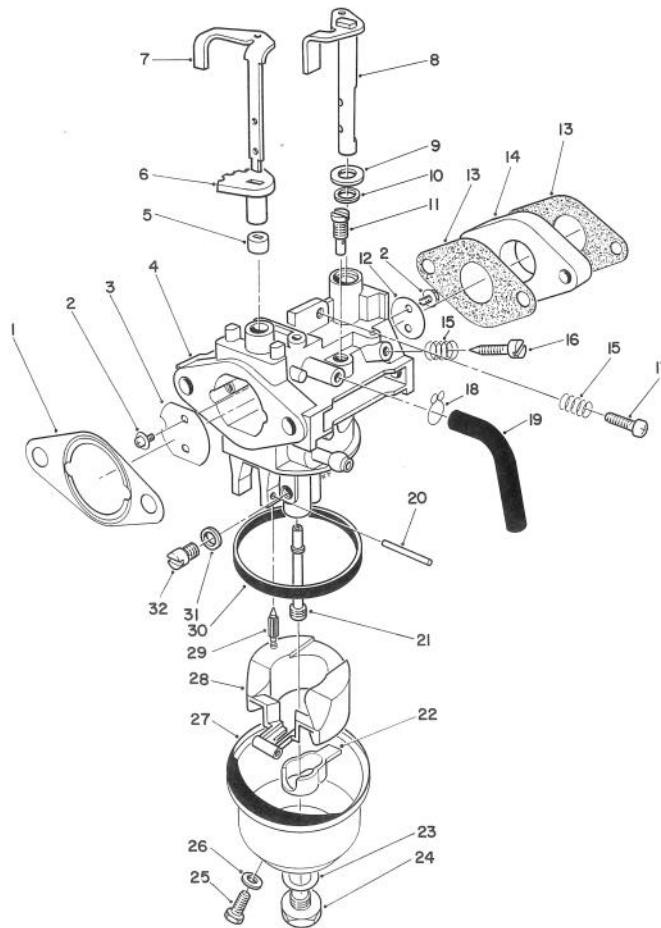


C-0160

CARBURETOR ASSEMBLY (Engine No. VML0-5)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	81-4250	Gasket - Air Cleaner	1	21	81-5630	Nozzle - Main	1
2	81-2710	Screw - Choke Valve	4	22	81-4940	Spacer - Float	1
3	81-2720	Valve - Choke	1	23	81-2650	Gasket - Bowl Screw	1
4		Body - Carburetor	1	24	81-2660	Screw - Bowl	1
5	81-5530	Ring - Choke (Lower)	1	25	81-2670	Screw - Drain	1
6	81-5520	Ring - Choke (Upper)	1	26	81-2680	Gasket - Drain Screw	1
7	81-5510	Shaft - Choke Control	1	27	81-4340	Bowl - Float	1
8	81-2920	Shaft - Throttle Valve	1	28	81-4920	Float	1
9	81-4280	Washer	1	29	81-4700	Needle	1
10	81-4290	Seal - Throttle Shaft	1	30	81-2630	Gasket - Float Bowl	1
11	81-5620	Jet - Pilot (#38.8)	1	31	81-4350	Spacer	1
12	81-2940	Valve - Throttle	1	32	81-5610	Jet - Main (#77.5)	1
13	81-5560	Gasket - Carburetor	2	*	81-5640	Jet - Main (#80 High Alt.)	1
14	81-5570	Block - Insulator	1	*	81-4270	Choke Shaft Assembly (Incl. Ref. #5 & 32-33)	1
15	81-2580	Spring - Pilot Screw	2	*	81-5650	Carburetor Repair Kit (Incl. Ref. #1, 11, 22, 25, 28 & 29)	1
16	50-2360	Screw - Pilot	1	*	81-5590	Carburetor Assembly (Incl. Ref. #2-33)	1
17	50-0250	Screw - Idle Stop	1				
18	81-4300	Clamp	1				
19	81-4310	Tube - Bowl Vent	1				
20	81-5600	Pin - Hinge	1				

*Not Illustrated

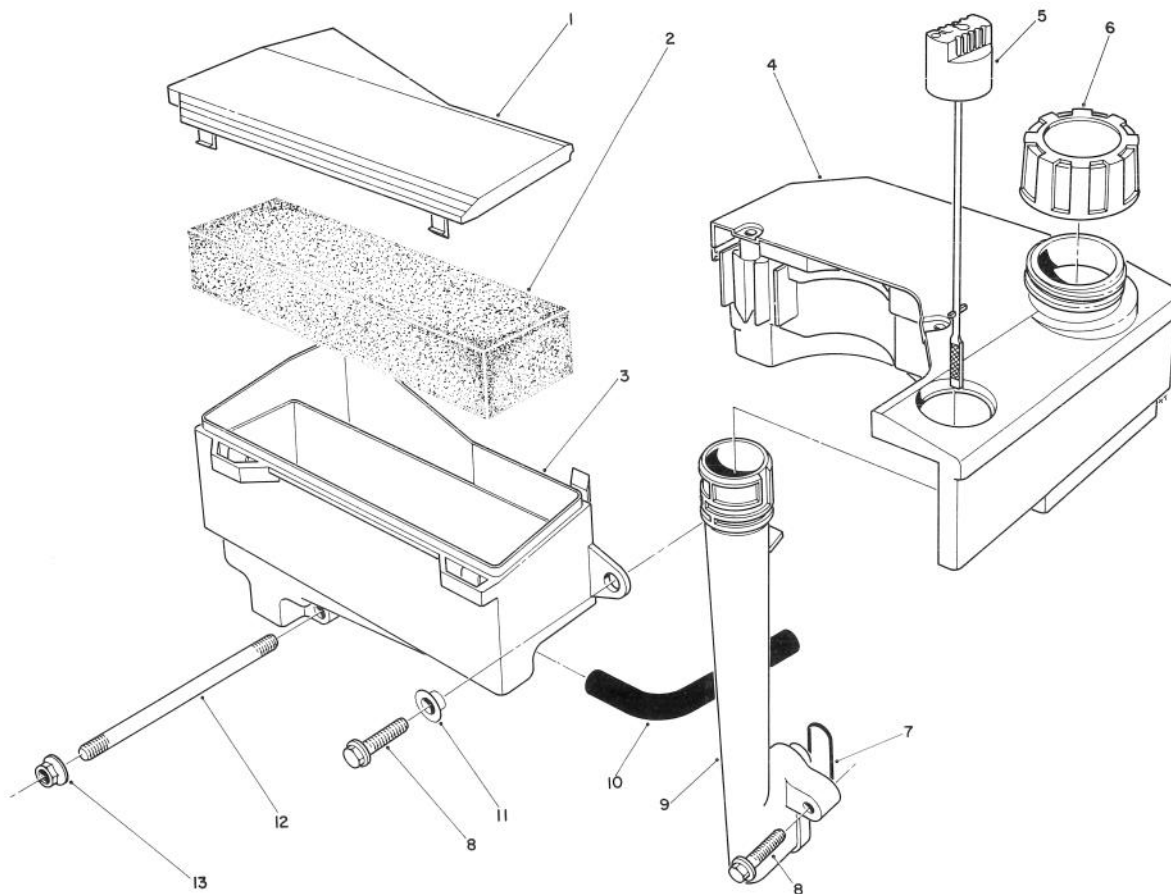


C-0161

AIR CLEANER & FUEL TANK ASSEMBLY (Engine No. VML0-5)

Ref. No.	Part No.	Description	No. Used
1	81-4110	Cover - Air Cleaner	1
2	81-4120	Filter - Foam	1
3		Body - Air Cleaner	1
4	55-3530	Tank - Fuel	1
5	81-4140	Dipstick - Oil	1
6	55-3570	Cap - Gas	1
7	81-4150	Seal - Oil Tube	1
8	81-4160	Bolt	3

Ref. No.	Part No.	Description	No. Used
9	81-4170	Tube - Oil Fill	1
10	81-4180	Hose - Crankcase Breather	1
11	81-4200	Spacer	1
12	81-4220	Stud - Carburetor	2
13	50-7180	Nut	2
*	81-4240	Air Cleaner Assembly (Incl. Ref. #1 & 3)	1

*Not Illustrated

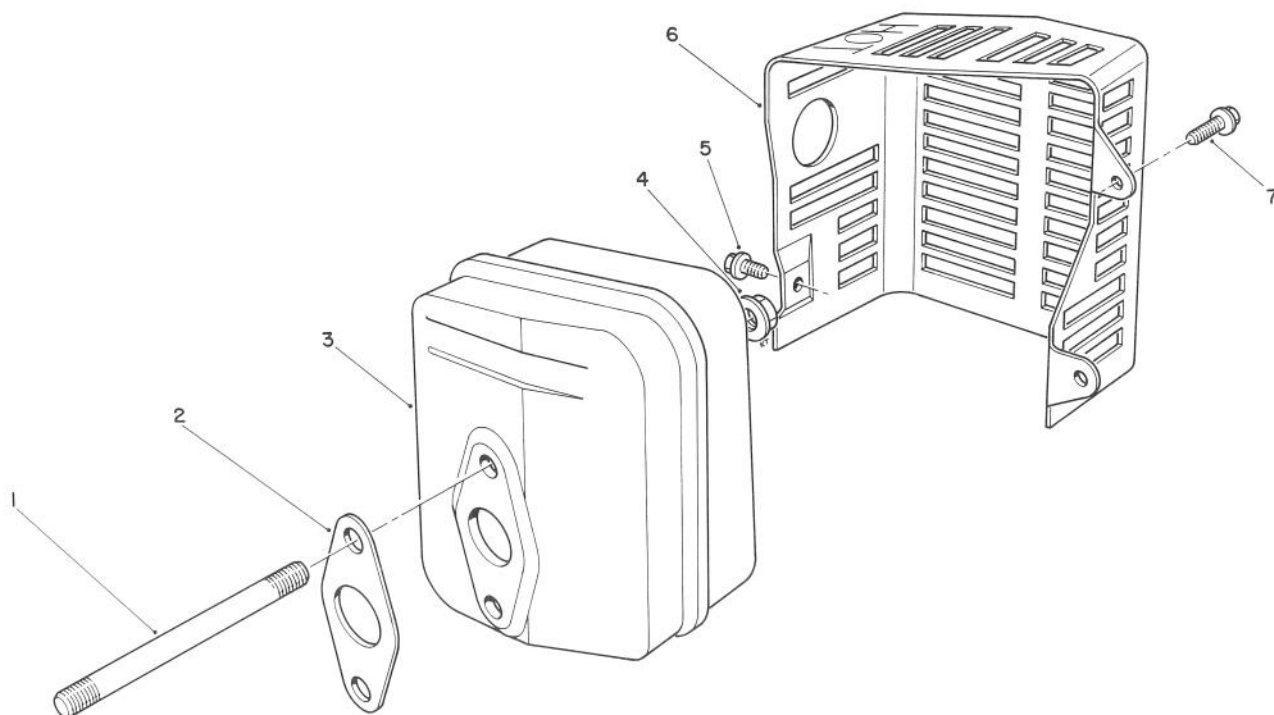

T-0726

MUFFLER ASSEMBLY (Engine No. VML0-5)


Ref. No.	Part No.	Description	No. Used
1	81-4380	Stud - Muffler	2
2	81-4390	Gasket - Muffler	1
3	81-4400	Muffler	1
4	50-0530	Nut	2
5	81-4420	Screw	1

Ref. No.	Part No.	Description	No. Used
6	81-4430	Cover - Muffler	1
7	81-1170	Bolt	2
*	56-6730	Spark Arrester Kit (Incl. Ref. #2) Optional	1

*Not Illustrated

AL-911563

Litho U.S.A.

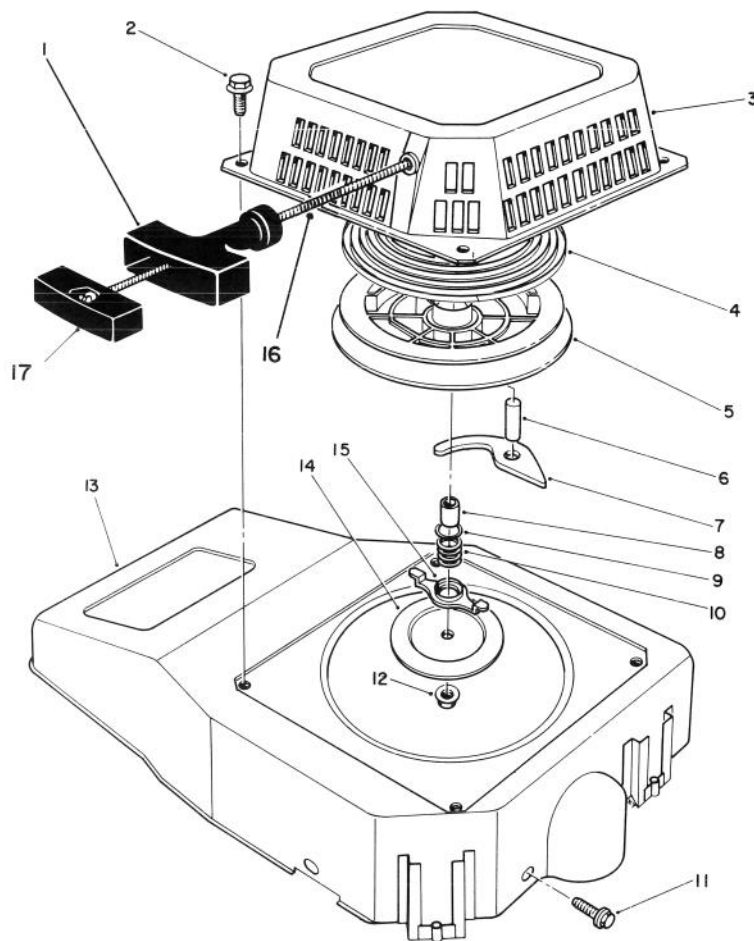

C-0162

RECOIL ASSEMBLY (Engine No. VML0-5)

Ref. No.	Part No.	Description	No. Used
1	81-4000	Handle	1
2	81-1280	Bolt	4
3	81-3970	Case - Recoil	1
4	81-4010	Spring - Recoil	1
5	81-4020	Reel - Rope Pulley	1
6	81-4030	Pin	1
7	81-4040	Pawl	1
8	81-4050	Spacer	1
9	81-4060	Washer	1
10	81-4070	Spring - Friction	1

Ref. No.	Part No.	Description	No. Used
11	81-1170	Bolt	3
12	81-4100	Nut - Lock	1
13	81-3960	Shroud - Blower	1
14	81-4090	Plate - Friction	1
15	81-4080	Guide - Pawl	1
16	81-1270	Rope - Recoil	1
17	81-4960	Retainer - Rope	1
*	81-3270	Recoil Starter Assembly (Incl. Ref. #1, 3-10, 12-15 & 17)	1

*Not Illustrated