


TORO®

PART NO. 82-8470

PARTS CATALOG

REAR AXLE & WHEEL INTERCHANGE KIT (For Parkmaster Tractor)

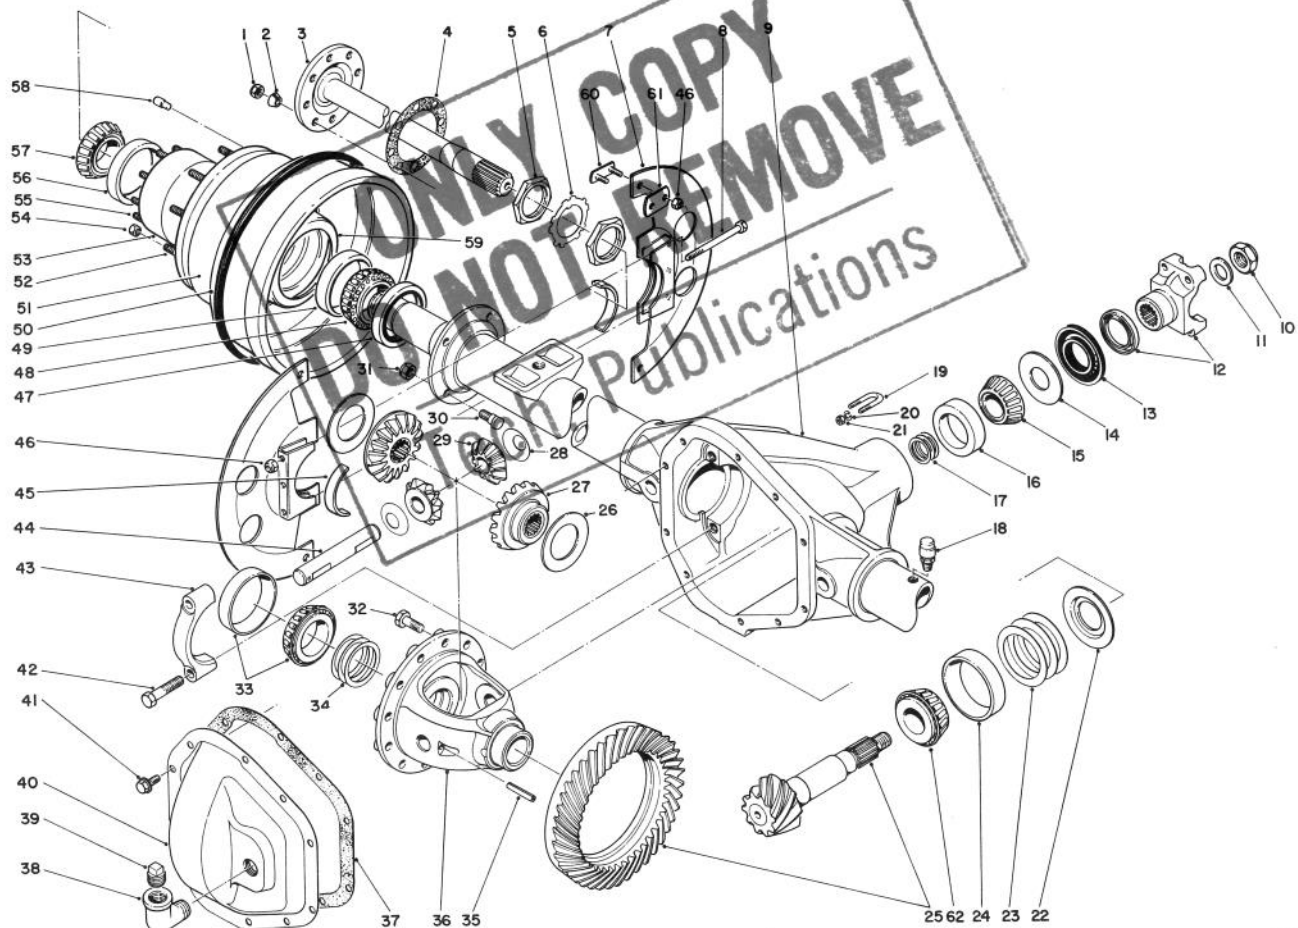


T-1227

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-7	Locknut	16	19	214-229	U-Bolt	2
2	19-6810	Stud - Adapter	16	20	3253-21	Lockwasher	4
3	80-3020	Shaft - Axle	2	21	32152-8	Nut	4
4	24-8660	Gasket - Drive Flange	2	22	19-6690	Baffle - Pinion Bearing	1
5	19-6820	Nut - Spindle	4	23	37-8550	Drive Pinion Adj. Shim Kit	1
6	19-6840	Lock - Spindle Nut	2	24		Cup - Bearing	1
7	80-0390	Shield - Grass	4	25	37-8530	Gear & Pinion Assembly	1
8	321-47	Hex Hd. Capscrew	4	26		Thrust Washer - Gear	2
9	80-2990	Housing - Axle	1	27		Gear - Differential	2
10	18-9360	Nut - Pinion	1	28		Thrust Washer - Pinion	2
11	18-9370	Washer - Pinion Nut	1	29		Gear - Pinion	2
12	19-6700	End Yoke Assembly	1	30	19-6830	Bolt - Brake Flange	8
13	80-3010	Seal - Pinion	1	31	3296-19	Locknut	8
14	80-3000	Slinger - Pinion Bearing	1	32	18-9340	Bolt - Drive Gear	12
15	18-9410	Cone - Bearing	1	33	37-8610	Differential Bearing Kit	1
16	18-9420	Cup - Bearing	1	34	80-3150	Differential Bearing Shim Kit (Incl. Ref. #37)	1
17	37-8560	Pinion Bearing Shim Kit	1	35	19-6630	Lock - Differential	1
18	37-7570	Vent	1				

TPS

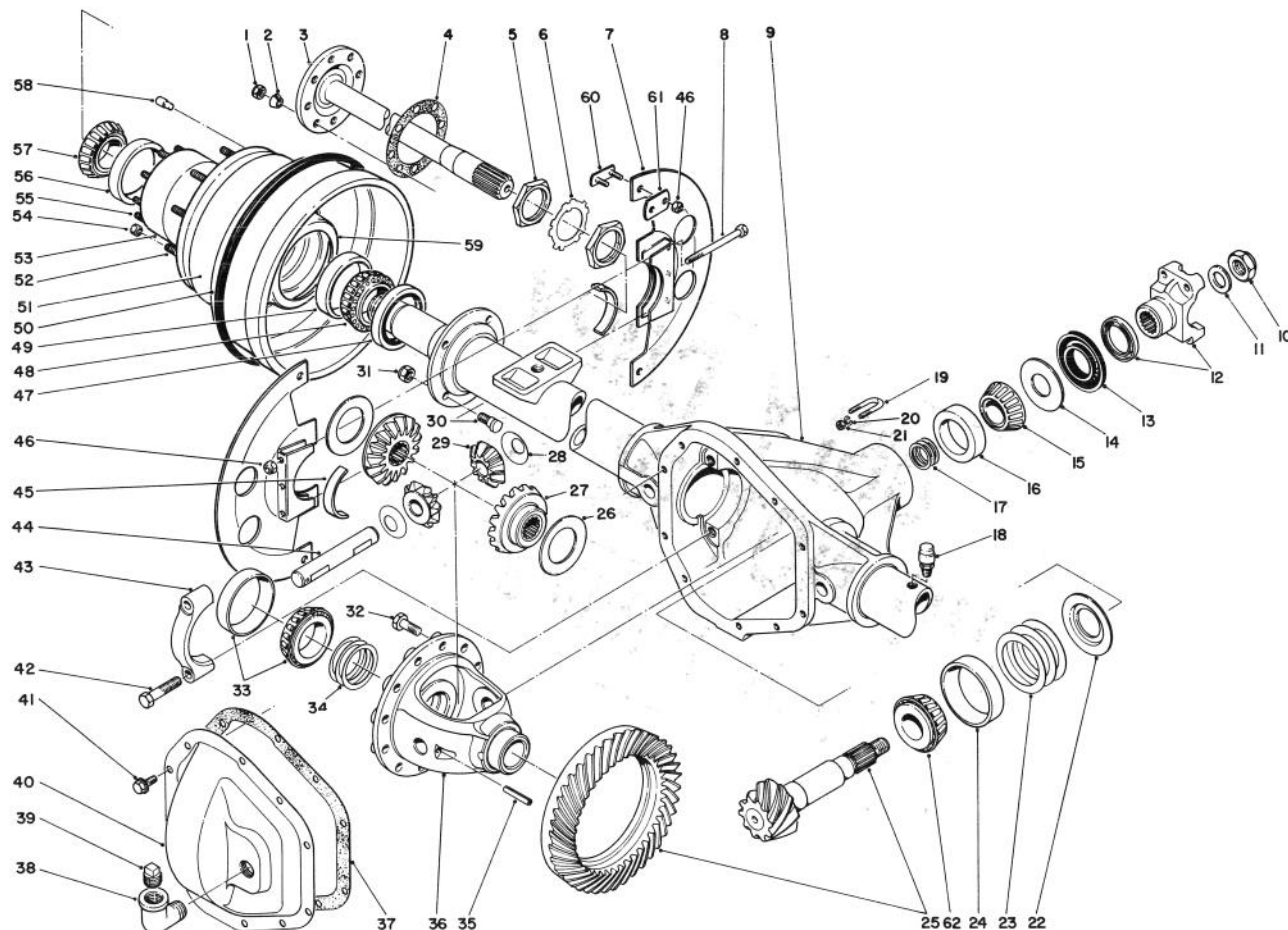


T-1227

REAR AXLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
36		Case - Differential	1
37	18-9190	Gasket Carrier Cover	1
38	2811-9	Elbow - Street	1
39	285-1	Plug - Pipe	1
40	80-3170	Gear Carrier Cover	1
41	18-9200	Bolt Carrier Cover	10
42	325-9	Differential Bearing Cup Bolt	4
43		Cup Differential Bearing	2
44		Shaft - Differential	1
45	80-0370	Shim	4
46	32153-4	Locknut	12
47	253-128	Seal - Oil	2
48	254-98	Cone - Bearing	2
49	254-100	Cup - Bearing	2
50	57-6110	Seal - V-Ring	2
51	37-8490	Wheel Drum Assembly (Incl. Ref. #49, 55, 56 & 58)	2
52	242-67	Bolt - Wheel	16
53	37-8500	Hub - Wheel	2
54	242-69	Nut - Wheel	16
55	242-68	Stud - Flange	16
56	254-99	Cup - Bearing	2
57	254-101	Cone - Bearing	2
58	44-1490	Pin - Locating	2
59	54-7670	Slinger	2
60	57-6100	U-Clamp	4
61	57-6070	Strap - U-Clamp	4

Ref. No.	Part No.	Description	No. Used
62		Cone - Bearing	1
*	37-8570	Bearing Assembly (Incl. Ref. #15 & 16)	1
*	19-7120	Bearing Assembly (Incl. Ref. #24 & 62)	1
*	19-7140	Kit - Gear & Pinion Drive (Incl. Ref. #10-11, 13-17, 22-25, 32, 34, & 37)	1
*	80-3120	Kit - Differential Case Assy. (Incl. Ref. # 10, 11, 32, 34 & 35)	1
*	80-3130	Kit - Differential Parts (Incl. Ref. #10, 11, 26-29, 32, 35, 37, & 44)	1
*	80-3160	Carrier Cover Assembly (Incl. Ref. #39 & 41)	1
*	76-2510	Rear Axle - Complete (Incl. Ref. #3, 9, 10-18, 22-29, & 32-37, 40-44 & 62)	1
*	80-3140	Pinion & Bearing Shim Kit (Incl. Ref. #10, 11, 17, 23, & 37)	1
*	80-3030	Differential Case & Gear Kit (Incl. Ref. #11, 15, 26-29, 323, 34-37, & 44)	1
*	505-92	Glue	1
*	505-91	Undercoat	1


*Not Illustrated

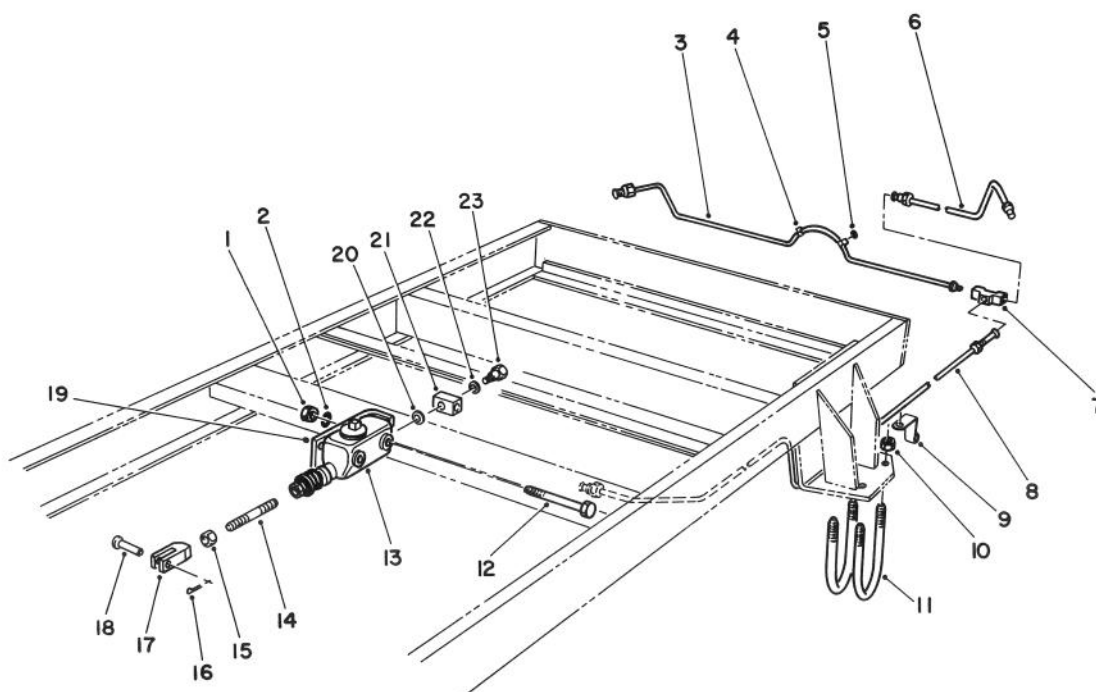

T-1228

MASTER CYLINDER & BRAKE LINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3217-7	Nut - Hex	2	13	37-4180	Cylinder - Master	1
2	3253-21	Washer - Lock	2	14	37-2060	Stub - Brake Cylinder	1
3	37-3330	Tube - Brake	1	15	3220-3	Nut - Jam	1
4	3-3075	Clip	2	16	3272-6	Pin - Cotter	1
5	3254-6	Washer - Internal Tooth	2	17	282-1	Clevis	1
6	37-3340	Tube - Brake	1	18	283-2	Pin - Clevis	1
7	304-2	Fitting - Tee	1	19	42-3690	Shield - Brake Fitting	1
8	42-3700	Tube - Brake	1	20	253-689	Washer - Sealing	1
9	46-6460	Support - Brake Line	2	21	42-3710	Fitting	1
10	3296-51	Locknut	8	22	42-3730	Gasket - Inlet	1
11	80-0430	U Bolt	4	23	42-3720	Bolt - Connection	1
12	323-20	Capscrew - Hex Hd.	2				

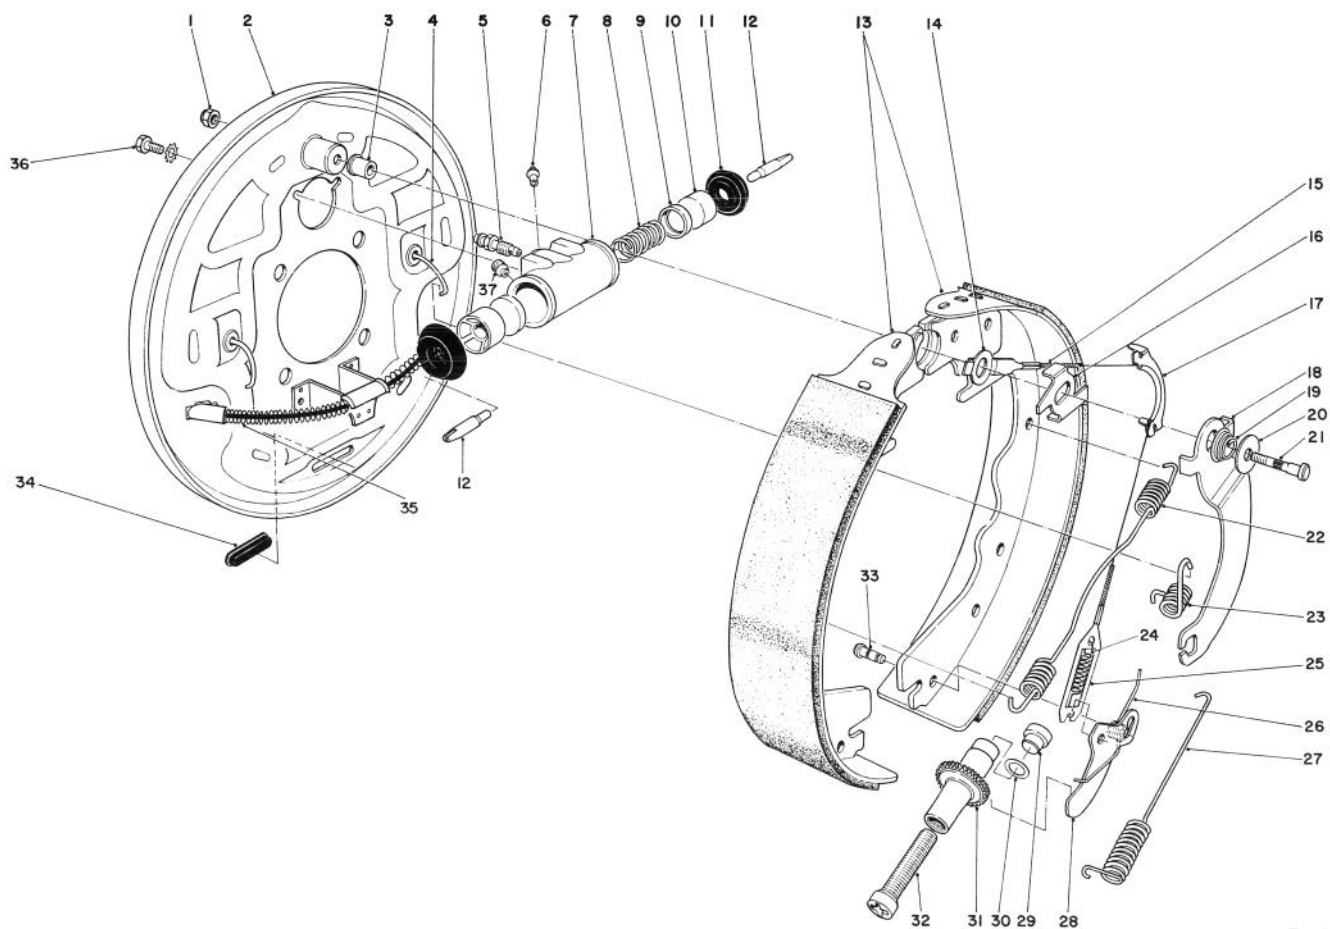


T-1229

REAR BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	37-3770	Locknut	2
2	37-3840	Back Plate & Guide L.H.	1
*	37-3850	Back Plate & Guide R.H.	1
3	37-3710	Post - Bushing Anchor	2
4	37-3970	Spring - Pin Shoe Hold Down	4
5	19-6460	Screw - Bleeder	2
6	19-6450	Tube - Seat Inlet	2
7	37-4040	Wheel Cylinder L.H. (Incl. Ref. #5, 6, 8-11, & 37)	1
*	37-4050	Wheel Cylinder R.H. (Incl. Ref. #5, 6, 8-11, & 37)	1
8		Spring	2
9		Cup	4
10		Piston	4
11		Boot	4
12	37-4010	Connecting Link Wheel Cylinder	4
13	40-9250	Shoe and Lining Set Front & Rear	1
14		Fitting - Anchor End	2
15		Cable	2
16	37-3690	Cam Plate - Lever L.H.	1
*	37-3700	Cam Plate - Lever L.R.	1

Ref. No.	Part No.	Description	No. Used
17	37-3780	Guide - Cable	2
18	37-3630	Lever - Parking Brake L.H.	1
*	37-3640	Lever - Parking Brake R.H.	1
19	37-3620	Spring - Anti Rattle	2
20	37-3600	Washer - Parking Lever	2
21	37-3610	Bolt - Anchor	2
22	37-3990	Spring - Shoe to Shoe	2
23	37-3790	Spring - Shoe L.H.	4
24		Spring Over Travel	2
25		Fitting - Lever End	2
26	37-3800	Spring - Auto Adjusting L.H.	1
*	37-3810	Spring - Auto Adjusting R.H.	1
27	37-4000	Spring - Shoe To Shoe	2
28	37-3830	Lever - Auto Adjuster	2
29	37-3940	Socket Pivot	2
30	37-3950	Washer - Adjusting Nut	2
31	37-3900	Adjusting Nut L.H.	1
*	37-3910	Adjusting Nut R.H.	1
32	37-3920	Pivot Screw L.H.	1
*	37-3930	Pivot Screw R.H.	1
33	37-3820	Pin - Auto Adjuster Lever	2
34	37-3960	Cover - Adjusting Hole	2
35	36-9730	Cable Assy. - Parking	2
36	37-3980	Screw & Lockwasher	4

*Not Illustrated

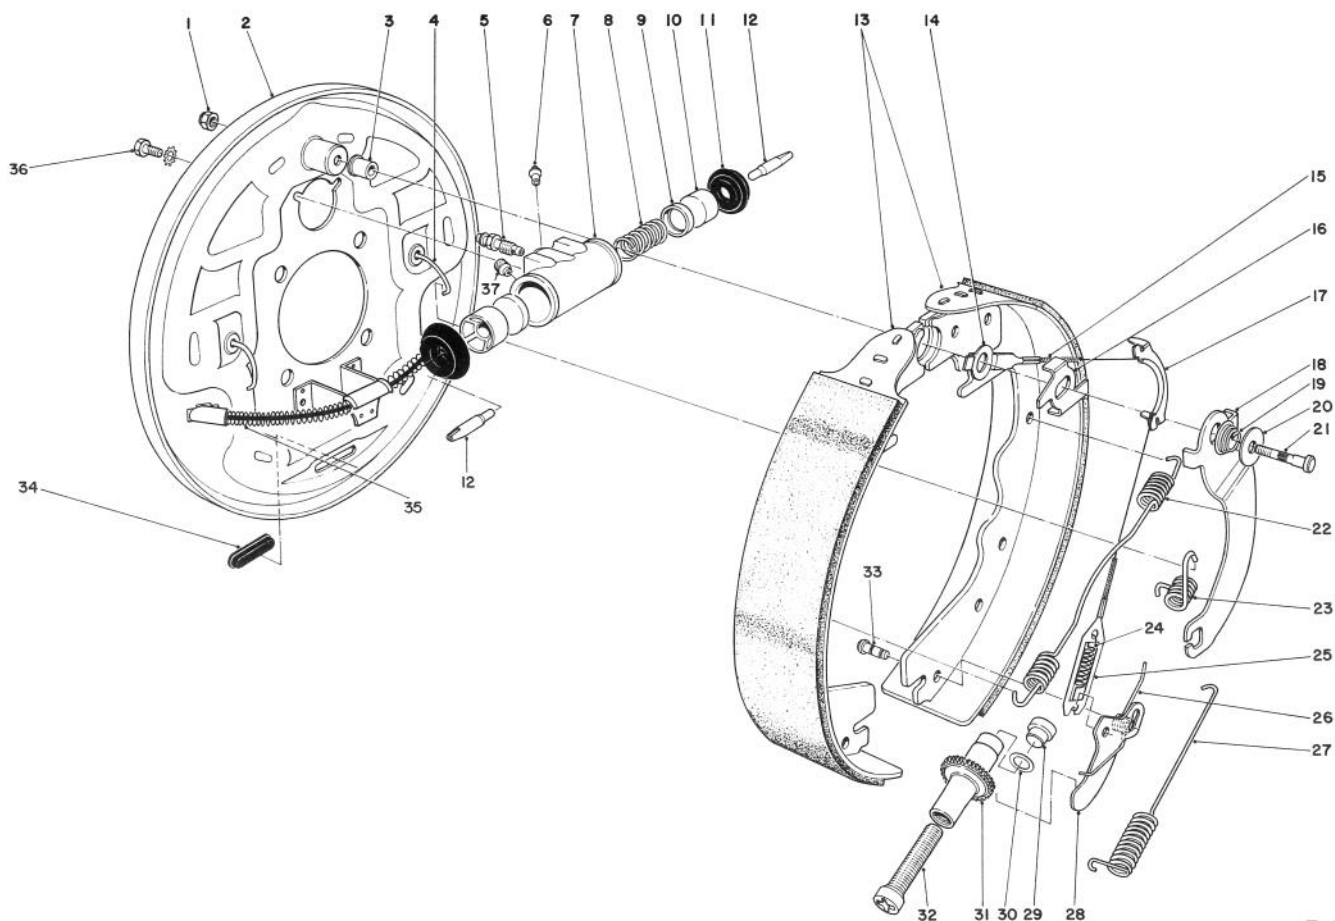


T-1229

REAR BRAKE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
37		Screw - Body	2	*	37-3720	Cable & Fitting Assy. (Incl. Ref. #14-15, & 24-25)	2
*	37-3580	Cam Bolt Assy. - L.H. (Incl. Ref. #3, 14-16, 18-21, & 24-25)	1	*	37-1010	Brake Assembly R.H. (Complete)	1
*	37-3590	Cam Bolt Assy. - R.H. (Incl. Ref. #3, 14-16, 18-21, & 24-25)	1	*	37-1020	Brake Assembly L.H. (Complete)	1

*Not Illustrated

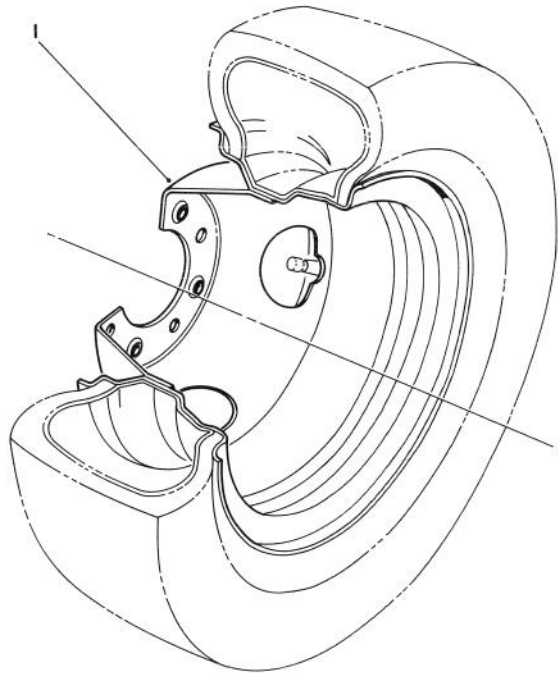

REAR RIM ASSEMBLY

T-1230

Ref. No.	Part No.	Description	No. Used
1	37-4320	Rim - 16" x 6"	4

Ref. No.	Part No.	Description	No. Used

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any

reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]