



Workman[®] 200 Spray System Heavy-Duty Workman[®] Vehicles

Model No. 41235 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Skid and Frame Assembly	 3	Upper Tank Drain Bulkhead Assembly	 16
Fresh Water Tank Assembly	 4	Top Mounted Suction Assembly No. 107-2800	 17
Fresh Water Tank Assembly No. 100-8438	 5	Lower Sprayer Component Assembly	 18
Tank and Cover Assembly	 6	Safety Valve Assembly No. 100-6820	 19
200 Gallon Tank Assembly No. 106-1366	 7	Control Valve Assembly	 20
Lid Seal Assembly	 8	EVC Control Valve Assembly	 21
Lid Assembly	 9	Control Box Assembly	 23
Pump and Drive Assembly	 10	Hose Assembly	 24
Pump Assembly No. 106-5121	 11	Electrical Harness Assembly	 26
Drive Shaft Assembly No. 107-2810	 12	Center Boom Assembly	 27
Upper Sprayer Component Assembly	 13	Left and Right Hand Boom Assembly	 28
Suction and Drain Assembly	 14	Attachments and Accessories List	 29
Tank Drain Assembly	 15		

Part Description Abbreviations

 
Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes

❶ Not illustrated


❷ Not serviced separately

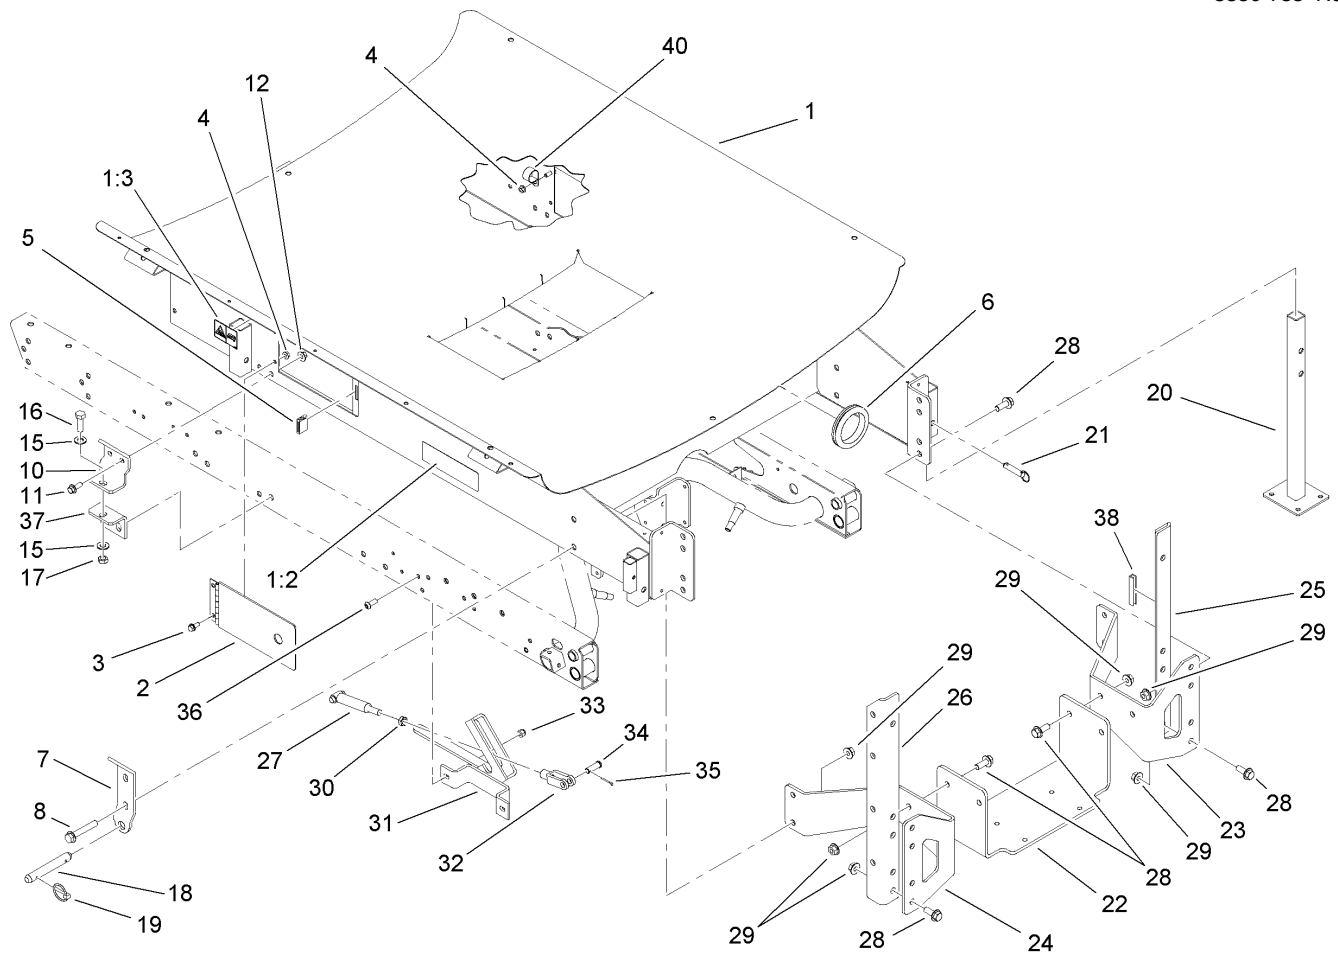

Skid and Frame Assembly


Ref	Part No.	Qty.	Description
1	106-1367	1	Skid ASM
1:2	106-1365	1	Decal-Danger
1:3	106-1434	2	Decal-Caution
2	106-1290-03	2	Door ASM
3	3234-5	4	Screw-HHF
4	32128-20	4	Nut-HF
5	92-3700	2	Magnet-Door
6	237-102	3	Grommet
7	107-2858	2	Pivot-Lug
8	3234-40	4	Screw-HF
10	107-2859	2	Bracket-Mount, Front
11	3234-42	4	Screw-HHF
12	32128-43	4	Nut-Flange
15	3256-26	4	Washer-Flat
16	325-6	2	Screw-HH
17	32153-5	2	Nut-Lock, Side
18	92-1233	2	Pin-Clevis
19	92-1298	4	Pin-Lynch
20	105-9482-03	4	Jack Stand ASM
21	100-4523	4	Pin-Hitch
22	106-1345-03	1	Base-Pump
23	108-3496-03	1	Bracket-Pump, RH
24	108-3497-03	1	Bracket-Pump, LH
25	108-3703-03	1	Angle-Boom Mount, RH

Ref	Part No.	Qty.	Description
26	108-3704-03	1	Angle-Boom Mount, LH
27	106-1413	1	Prop Rod ASM
28	3234-32	10	Screw-HHF
29	32128-49	14	Nut-HHF
30	3220-5	1	Nut-Jam
31	106-2491-03	1	Strut Support Bracket ASM
32	100-7338	1	Clevis
33	3296-39	2	Nut-Lock, NI
34	104-3634	1	Pin-Clevis
35	3272-11	1	Pin-Cotter
36	3274-94	2	Screw-HSBH
37	92-2667-03	2	Bracket-Attachment, Mount
38	70-2041	1	Trim
40	2412-126	1	R-Clamp

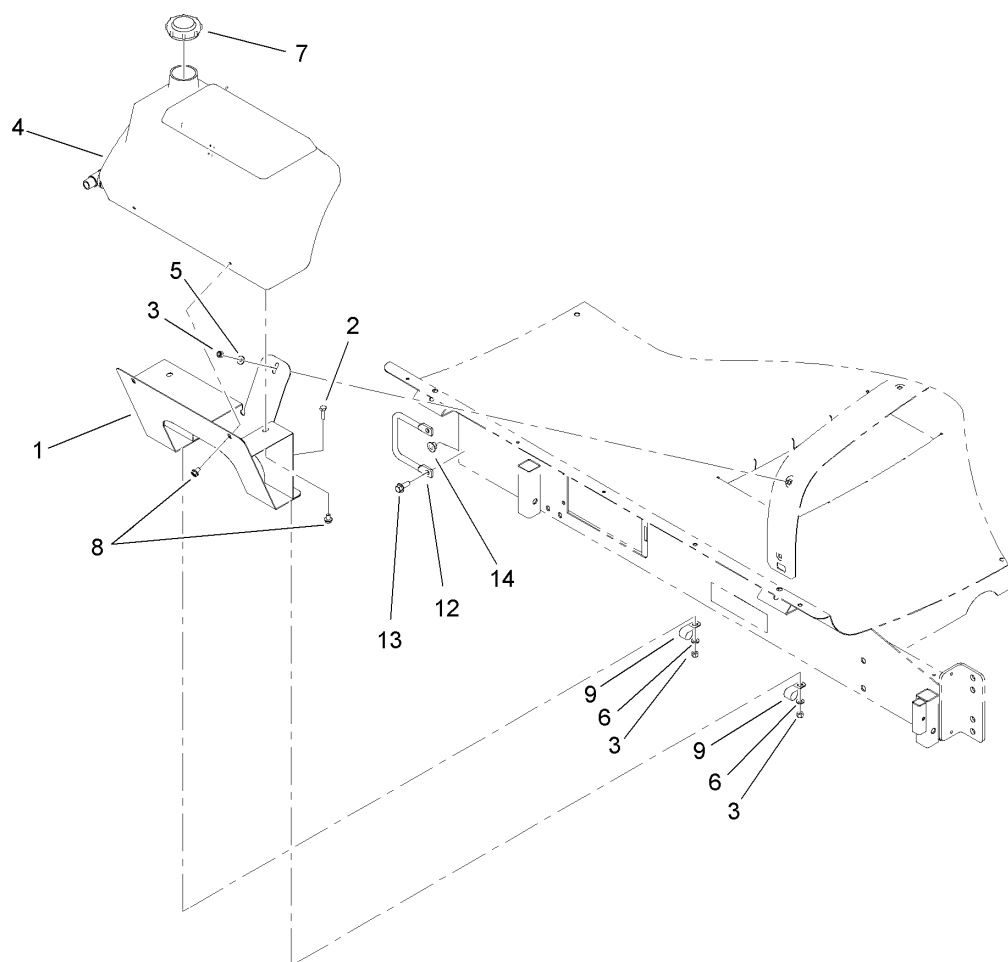 


Fresh Water Tank Assembly

Ref	Part No.	Qty.	Description				
1	107-2819-03	1	Fresh Water Tank Bracket ASM				
2	322-5	2	Screw-HH				
3	3296-29	3	Nut-Lock, NI				
4	100-8438	1	Fresh Water Tank ASM				
5	3256-56	1	Washer-Flat				
6	3256-23	2	Washer-Flat				
7	100-7008	1	Cap-Tank, Fresh Water				
8	3234-28	4	Screw-HHF				
9	2412-4	2	Clamp				
12	106-1357	2	Handle				
13	3234-42	4	Screw-HHF				
14	32128-43	4	Nut-Flange				

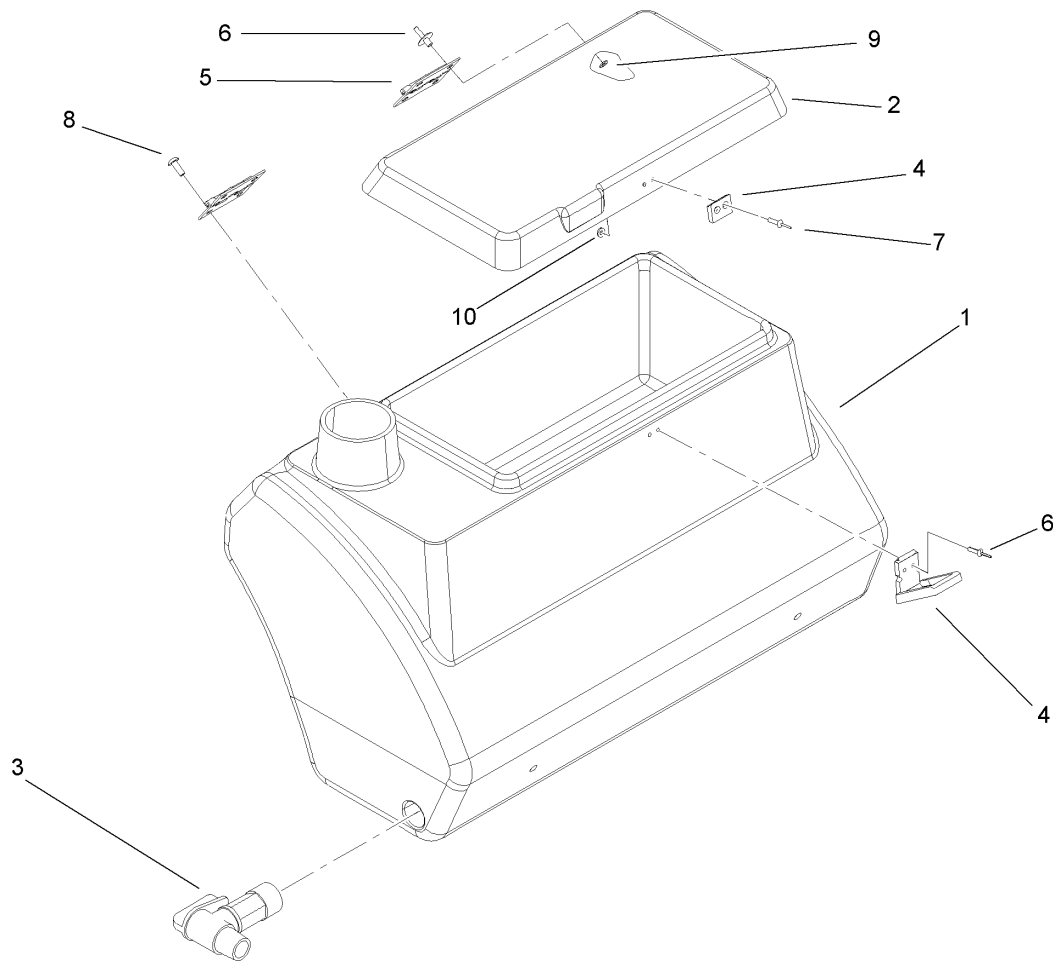 

Fresh Water Tank Assembly No. 100-8438


Ref	Part No.	Qty.	Description				
1		1	Tank-Water, Fresh				
2	100-8397	1	Cover-Tank				
3	100-7011	1	Spigot-90 DEG				
4	100-7009	1	Latch-Draw				
5	100-7010	2	Hinge				
6	100-7062	4	Rivet				
7	100-7063	4	Rivet				
8	100-7064	4	Screw				
9	100-7065	4	Washer				
10	100-7066	2	Washer				

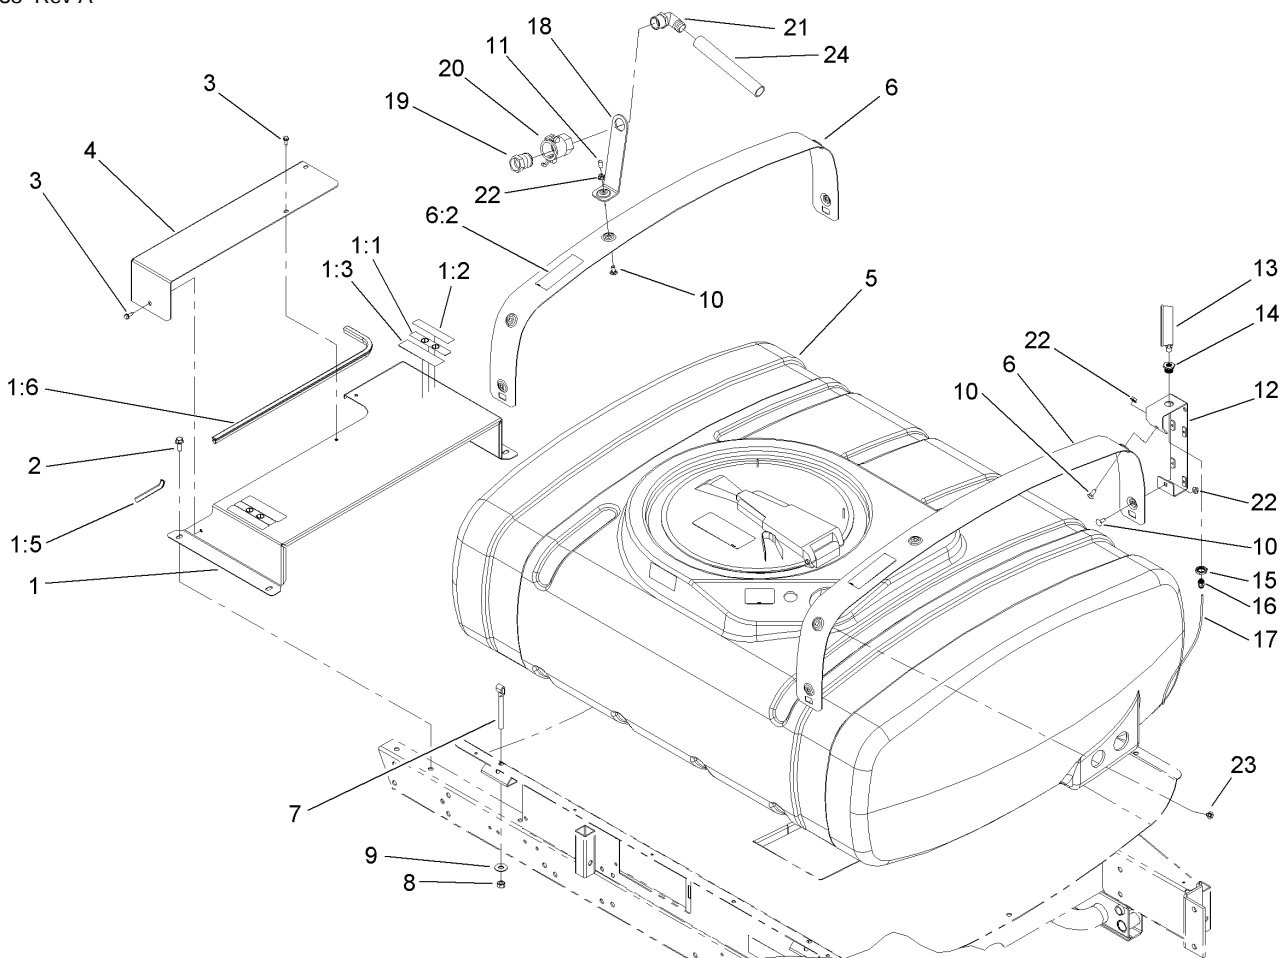 

Tank and Cover Assembly


Ref	Part No.	Qty.	Description
1	106-2275	1	Radiator Cover ASM
1:1	93-6687	2	Decal-No Step
1:2	93-6689	2	Decal-No Riders
1:3	93-7814	2	Decal-Danger
1:5	92-3627	1	Trim
1:6	42657	1	Trim-Panel, Front
2	3234-42	4	Screw-HHF
3	32104-95	3	Screw-HWH
4	93-6427-03	1	Panel-Radiator
5	106-1366	1	200 Gallon Tank ASM
6	106-1368	2	Band-Tank
6:2	106-5016	1	Decal-Caution, Electric Shock
7	92-3668	4	Bolt-J
8	3217-8	4	Nut-Hex
9	3256-5	4	Washer-Flat
10	3230-1	3	Bolt-CARR
11	42452	1	Cap-Protective
12	106-7997-03	1	Tee Mounting Bracket ASM
13	110-5078	1	Gauge-Pressure
14	100-8665	1	Reducer-Gauge, Pressure
15	100-8666	1	Nut-Reducer
16	100-8667	1	Coupler-Reducer
17	107-2834	1	Tubing-Pressure
18	100-6778-03	1	Bracket-Siphon, Anti

Ref	Part No.	Qty.	Description
19	41316	1	Adapter-Quick
20	100-6779	1	Coupling-Female
21	41140	1	Elbow
22	32128-20	3	Nut-HF
23	3230-19	1	Screw-CARR
24	104-9075	1	Hose-Siphon, Anti

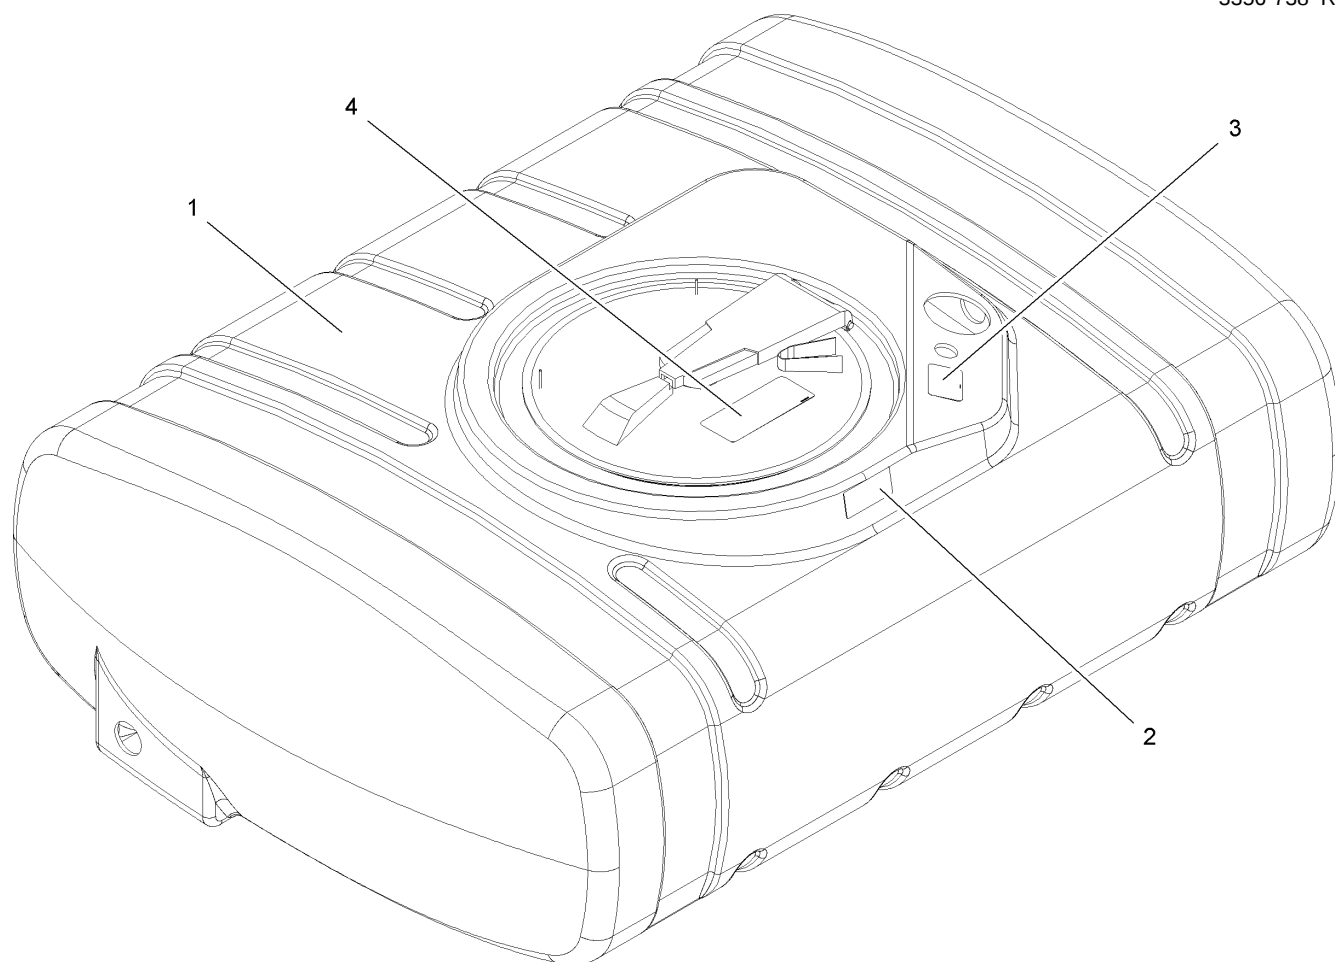 


200 Gallon Tank Assembly No. 106-1366

Ref	Part No.	Qty.	Description
1		1	Spray Tank ASM
2	106-1355	1	Decal-No Tank Entry
3	106-5065	1	Decal-Drain, Tank
4	93-0688	1	Decal-Warning, Chemical

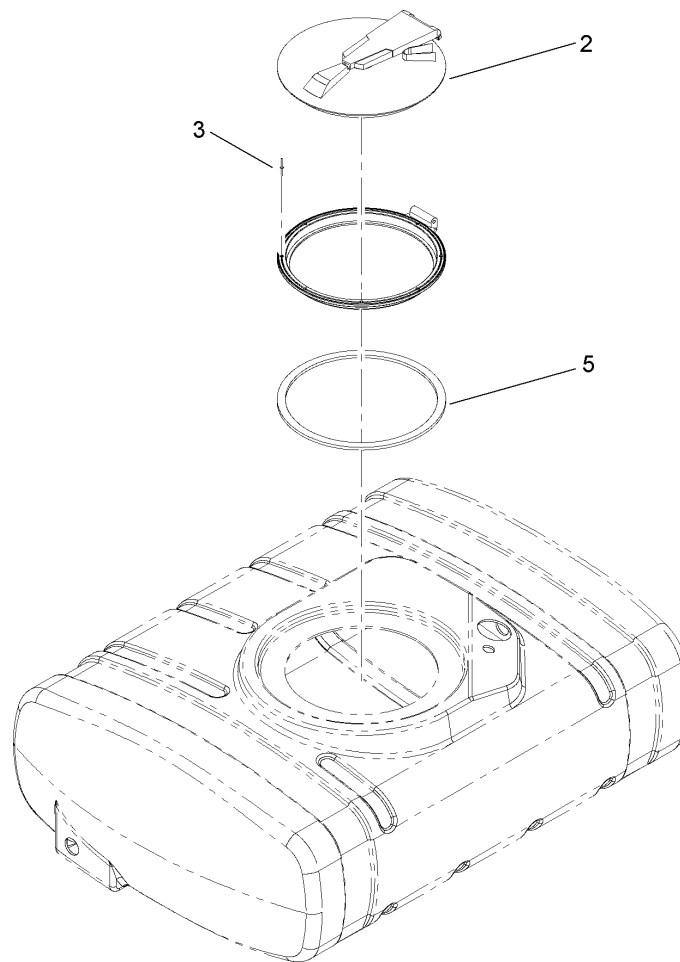


Lid Seal Assembly

Ref	Part No.	Qty.	Description
2		1	Screw Type Tank Lid ASM
3	93-0833	8	Rivet
5	106-4991	1	Seal-Lid

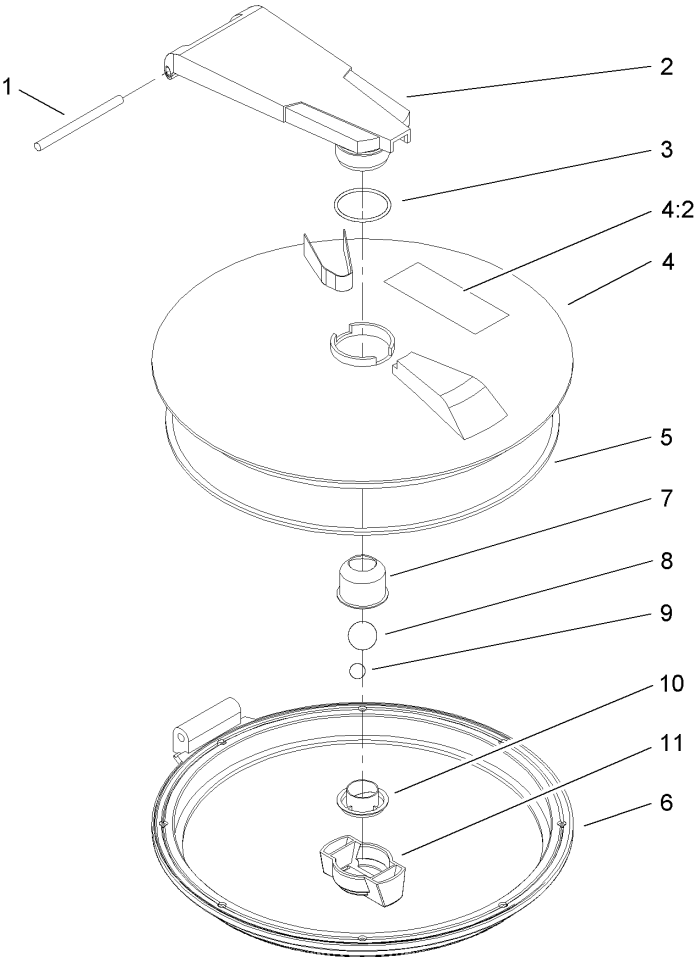 


Lid Assembly

Ref	Part No.	Qty.	Description				
1	106-5000	1	Pin-Pivot				
2	106-5001	1	Arm				
3	106-5002	1	O-Ring				
4	106-1369	1	Lid				
4:2	93-0688	1	Decal-Warning, Chemical				
5	106-5004	1	Seal-Lid				
6	106-5005	1	Ring				
7	106-5006	1	Cup-Vent				
8	106-5007	1	Ball-Floating				
9	106-5008	1	Ball-Weight				
10	106-5009	1	Holder-Ball				
11	106-5010	1	Nut-Wing				

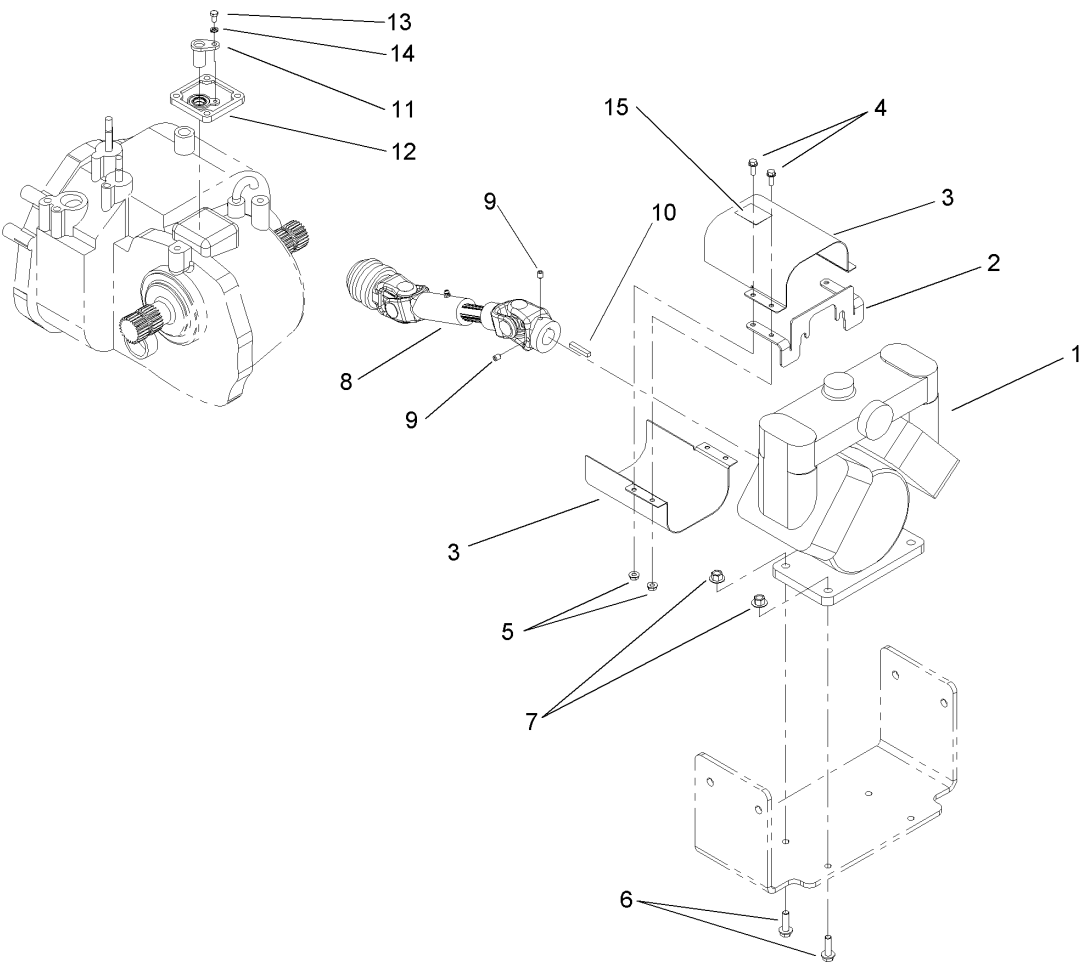

Pump and Drive Assembly


Ref	Part No.	Qty.	Description				
1	106-5121	1	Pump				
2	104-8970-03	1	Bracket-Shroud				
3	104-8971-03	2	Shroud-Drive, Pump				
4	3234-4	4	Screw-HHF				
5	32128-33	4	Nut-HF				
6	3234-24	4	Screw-HHF				
7	32128-43	4	Nut-Flange				
8	107-2810	1	Shaft-Drive, PTO				
9	3246-18	2	Setscrew				
10	67-7490	1	Key-Square				
11	85-4350	1	Sensor-Geartooth				
12	92-3736	1	Cover ASM				
13	33113-012	1	Screw-HH				
14	48-8020	1	Washer-Spring				
15	106-1354	1	Decal				

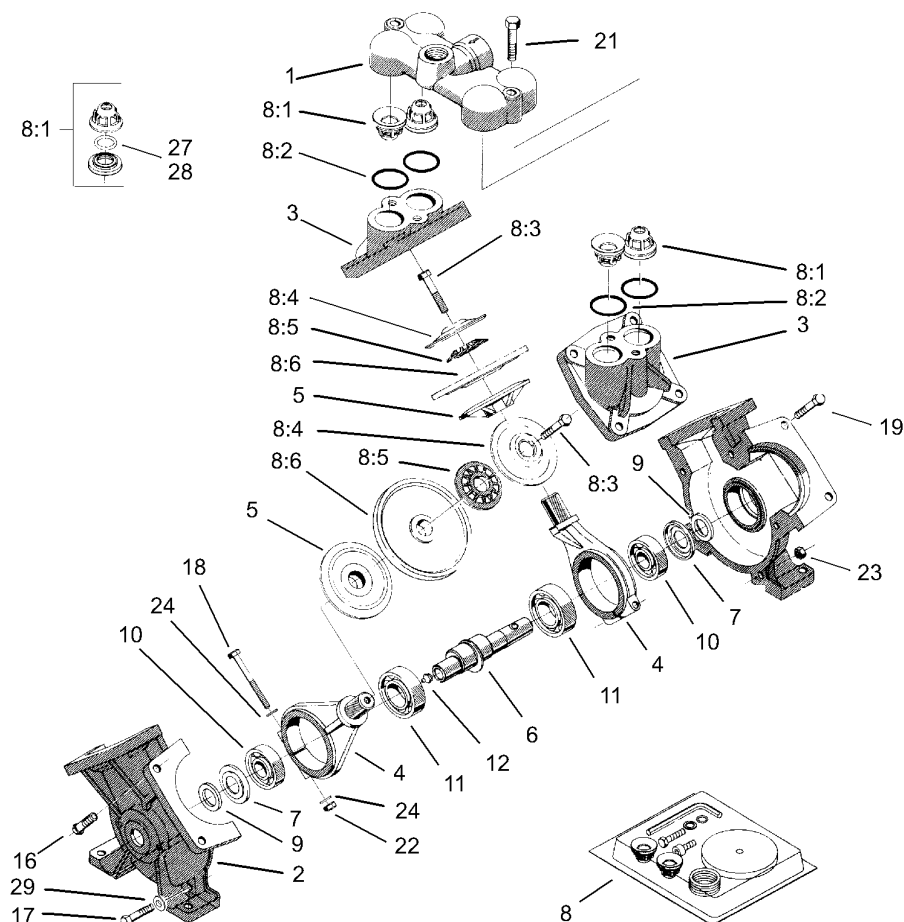 

Pump Assembly No. 106-5121


Ref	Part No.	Qty.	Description
1	106-5139	1	Cover-Valve
2	106-5140	2	Housing-Pump
3	106-5141	2	Cover-Diaphragm
4	106-5142	2	Rod-Connecting
5	100-8314	2	Disc-Back, Diaphragm
6	104-9052	1	Crankshaft-Keyed
7	100-8325	2	Plate-Dust
8	106-5150	1	Repair Kit
8:1	100-8307	4	Valve
8:2	100-6652	4	Gasket
8:3	106-5147	2	Bolt
8:4	100-8311	2	Washer
8:5	100-8312	2	Washer-Nylon
8:6	100-8313	2	Diaphragm
9	99-0868	2	Felt-Seal
10	100-8327	2	Bearing-Ball
11	100-8329	2	Bearing-Ball
12	99-0873	1	Fitting-Grease
16	106-5143	3	Bolt
17	106-5144	2	Bolt
18	106-5145	2	Bolt
19	106-5146	8	Bolt
21	106-5148	2	Bolt
22	100-8326	2	Nut-Hex

Ref	Part No.	Qty.	Description
23	106-5149	5	Nut
24	100-8316	4	Washer-Lock
27	100-8336	4	O-Ring
28	106-5138	4	O-Ring
29	106-5137	2	Washer

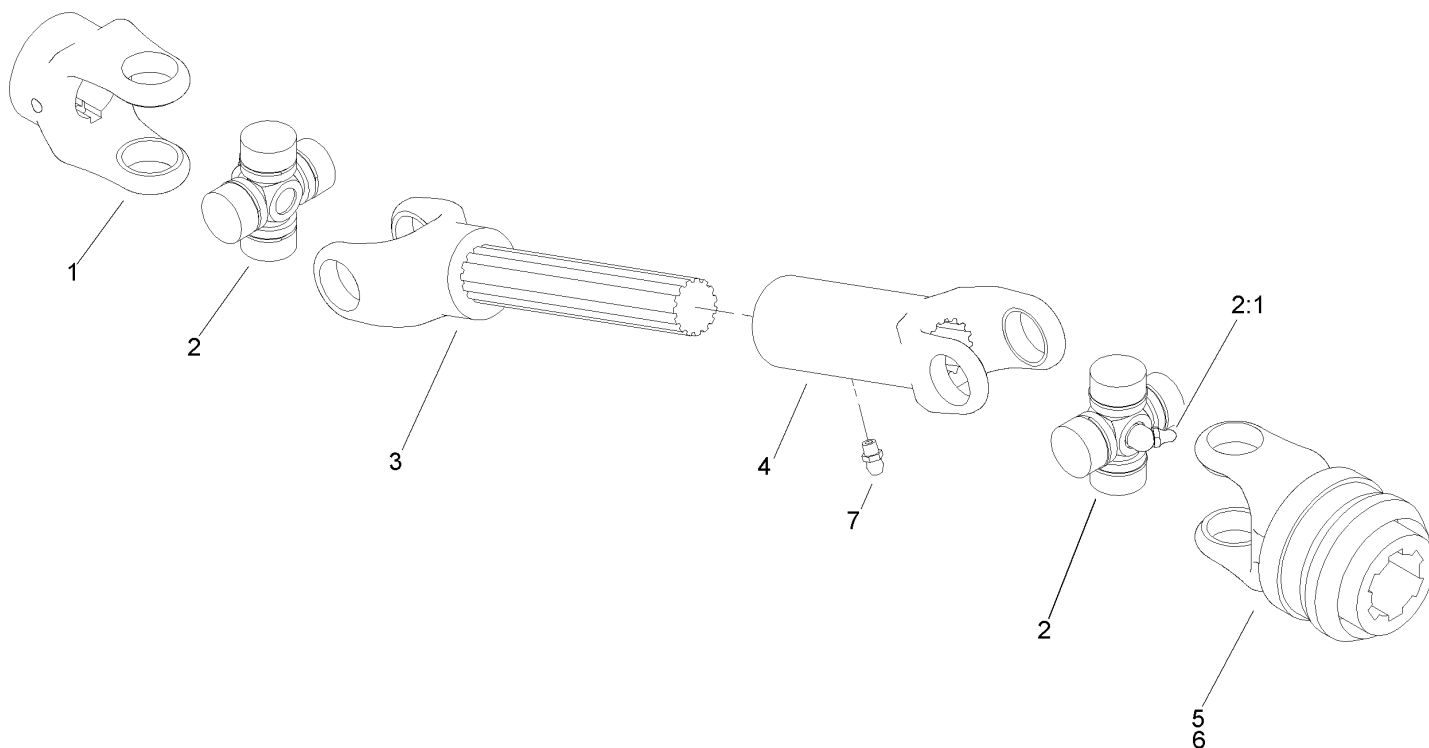 

Drive Shaft Assembly No. 107-2810


Ref	Part No.	Qty.	Description
1	107-2823	1	Yoke-Shaft
2	54-9180	2	U-Joint Kit
2:1	62-3820	1	Fitting-Grease
3	107-2824	1	Shaft-Yoke, Slip
4	94-7379	1	Tube-Yoke, Slip
5	99-4476	1	Spring-Lok Yoke ASM
6	99-4477	1	Yoke Spring Lock Repair Kit ASM
7	302-5	1	Fitting-Grease

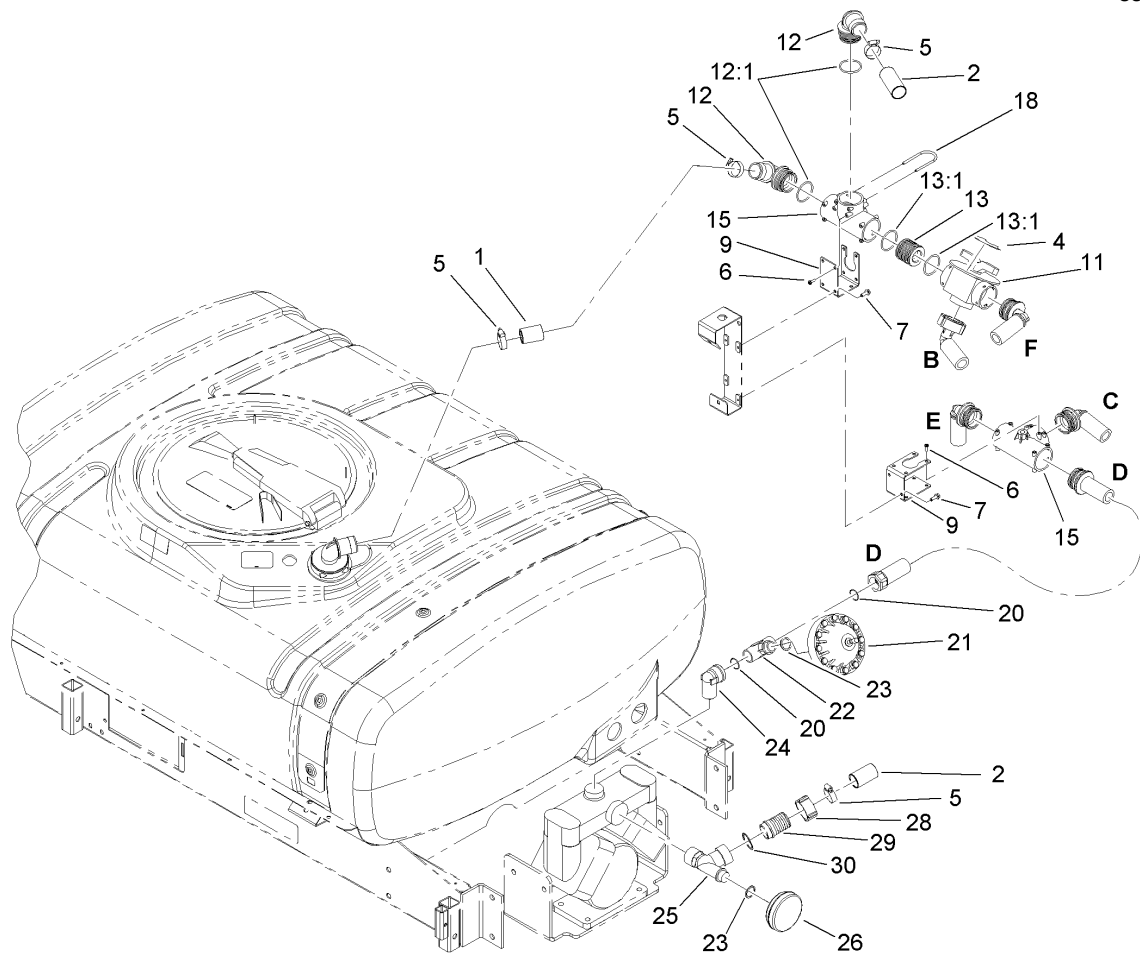 

Upper Sprayer Component Assembly


Ref	Part No.	Qty.	Description
1	107-2804	1	Hose-Suction
2	107-2805	1	Hose-Suction
4	107-8621	1	Decal-Agitation
5	41327	4	Clamp-Hose
6	32144-32	8	Screw
7	3234-4	4	Screw-HHF
9	100-8478	2	Bracket-Tee
11	100-8673	1	Agitation Valve ASM
12	106-4946	2	Hosebarb-90 DEG
12:1	100-8637	1	O-Ring
13	106-4947	1	Connector
13:1	100-8637	2	O-Ring
15	100-6704	2	Tee
18	100-8635	8	Fork
20	100-6655	1	Gasket
21	100-6662	1	Damper-Pressure
22	100-8699	1	Tee
23	100-6656	2	O-Ring
24	100-8698	1	Elbow
25	100-8681	1	Tee
26	100-6660	1	Suction Damper ASM
28	100-8678	1	Nut
29	100-8679	1	Hosebarb
30	100-8680	1	Seal

Ref	Part No.	Qty.	Description
31	3334-945	3	Tie-Cable

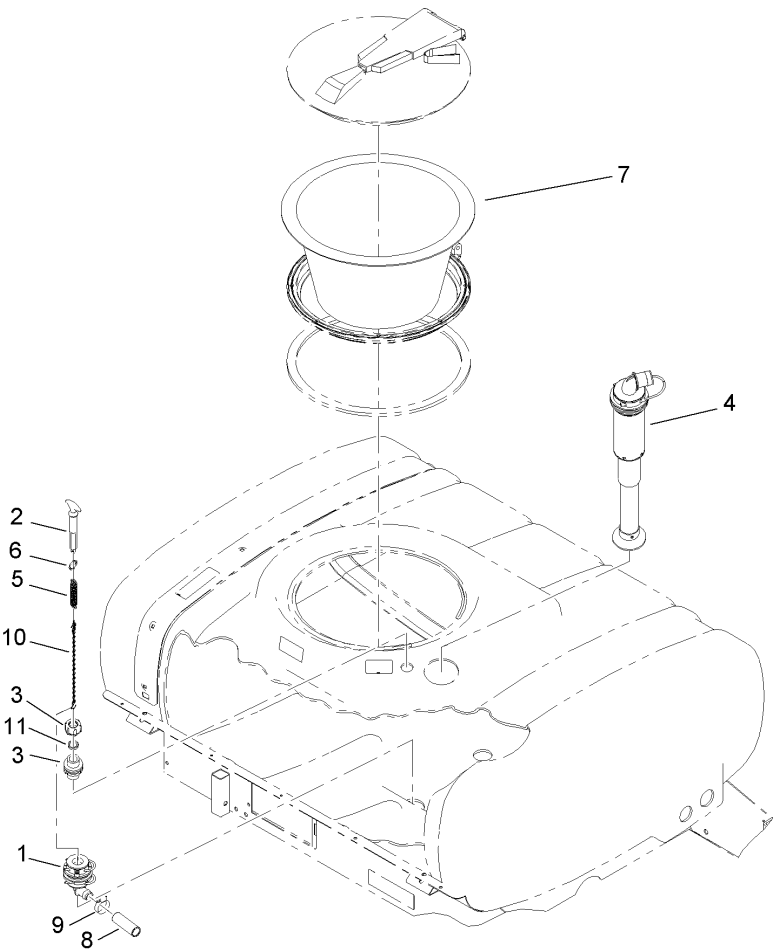 


Suction and Drain Assembly

Ref	Part No.	Qty.	Description				
②1		1	Drain ASM				
2	106-1347	1	Handle-Drain				
②3		1	Upper Tank Drain Bulkhead ASM				
4	107-2800	1	Top Mounted Suction ASM				
5	106-1415	1	Spring-Extension				
6	106-1416	1	Ring-Retaining, Spiral (EXT)				
7	104-9051	1	Basket-Strainer				
8	106-1351	1	Hose-Drain				
9	2412-34	1	Clamp-Hose				
10	106-1356	1	Chain ASM				
11	106-1414	1	Seal				

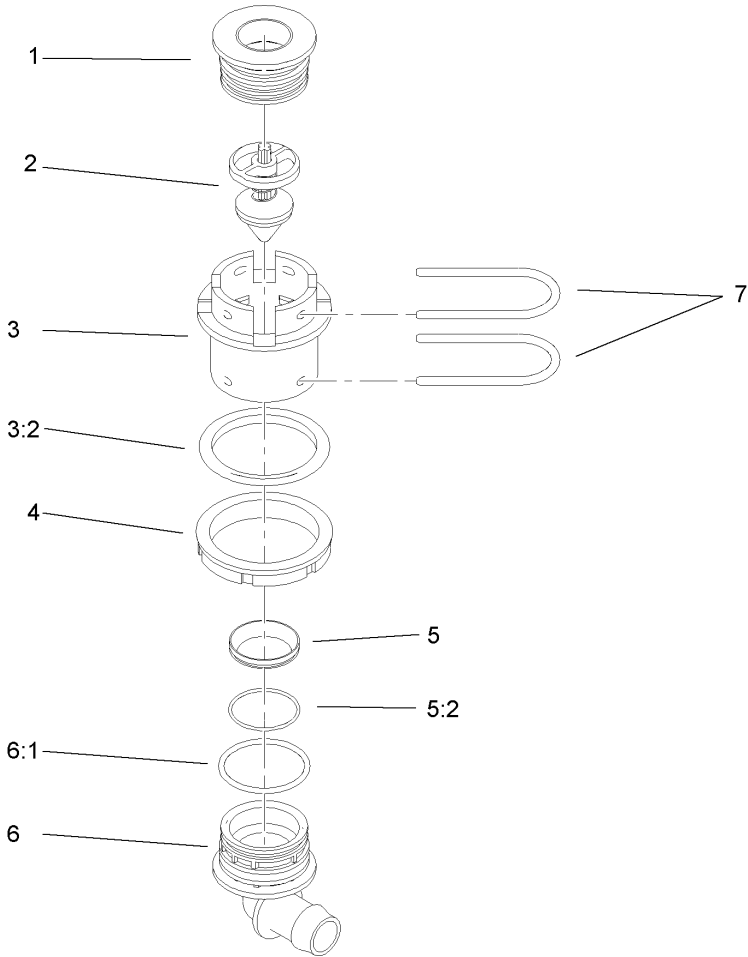 


Tank Drain Assembly

Ref	Part No.	Qty.	Description				
1	107-2868	1	Adapter				
2	108-7016	1	Drain Valve ASM				
3	107-2862	1	Drain Bulkhead ASM				
3:2	107-2864	1	Gasket-Bulkhead				
4	100-7051	1	Nut-Bulkhead				
5	107-2867	1	Seat Drain ASM				
5:2	107-2866	1	O-Ring				
6	106-4933	1	Hosebarb ASM				
6:1	100-8637	1	O-Ring				
7	100-8635	2	Fork				

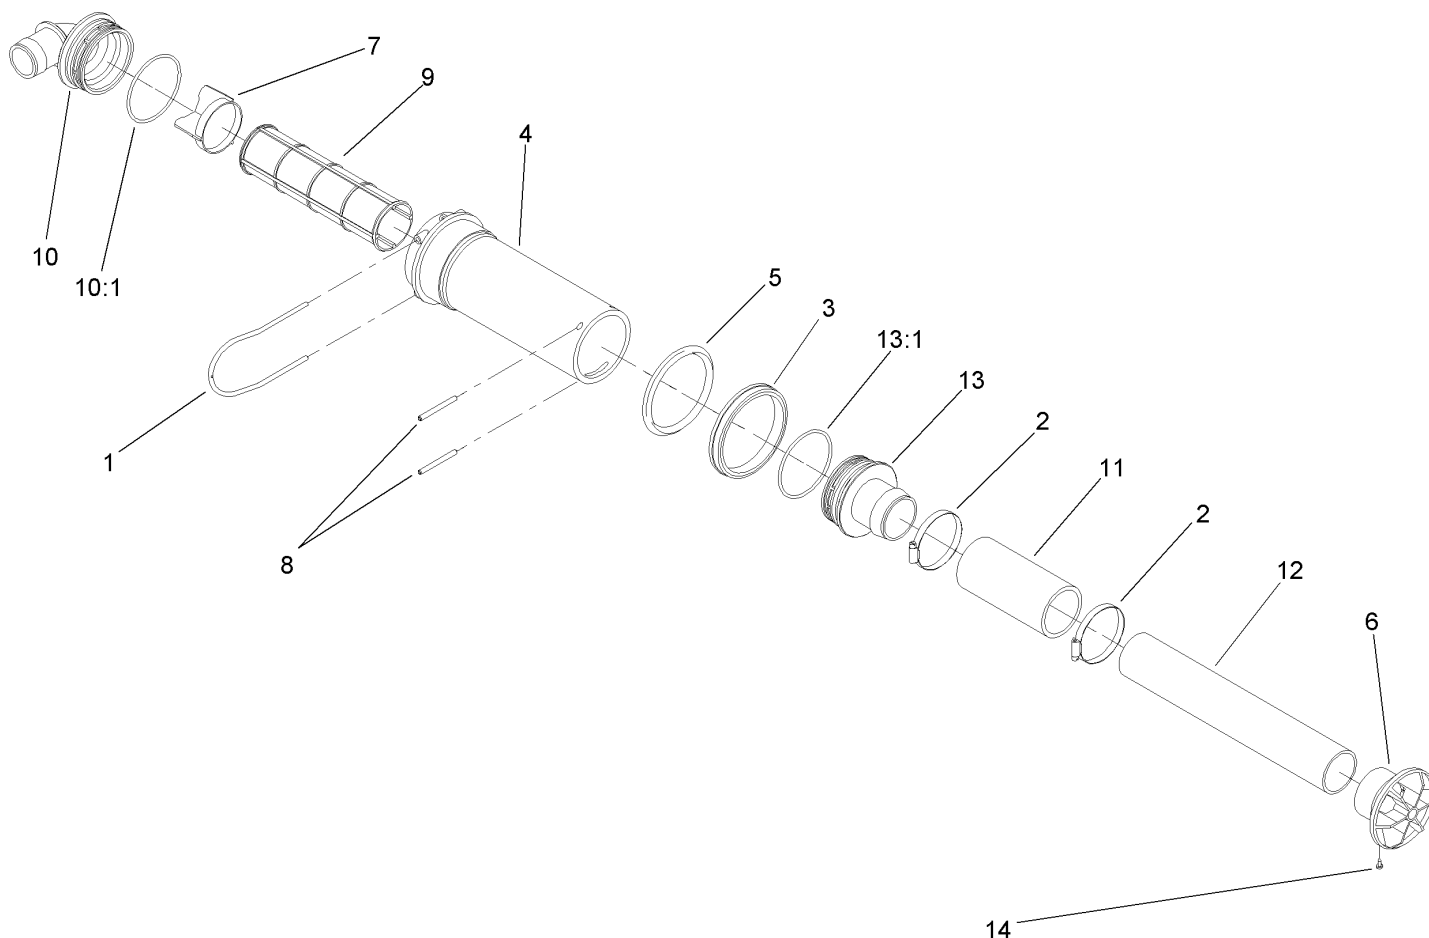 


Top Mounted Suction Assembly No. 107-2800

Ref	Part No.	Qty.	Description				
1	100-8636	1	Fork-Special				
2	26392	2	Clamp-Hose				
3	100-8647	1	Nut-Bulkhead				
4	100-8643	1	Housing-Filter				
5	100-8646	1	Gasket-Bulkhead				
6	100-6714	1	Foot-Tube, Suction				
7	100-8641	1	Vane-Screen				
8	100-8644	2	Pin-Expansion				
9	100-8642	1	Screen-Suction, Mesh 50				
10	106-4952	1	Hosebarb-90 DEG				
10:1	100-6989	1	O-Ring				
11	100-8649	1	Hose-Suction				
12	107-2801	1	Tube-Suction				
13	106-4942	1	Hosebarb-Straight				
13:1	100-8640	1	O-Ring				
14	108-3270	1	Screw-TAP				

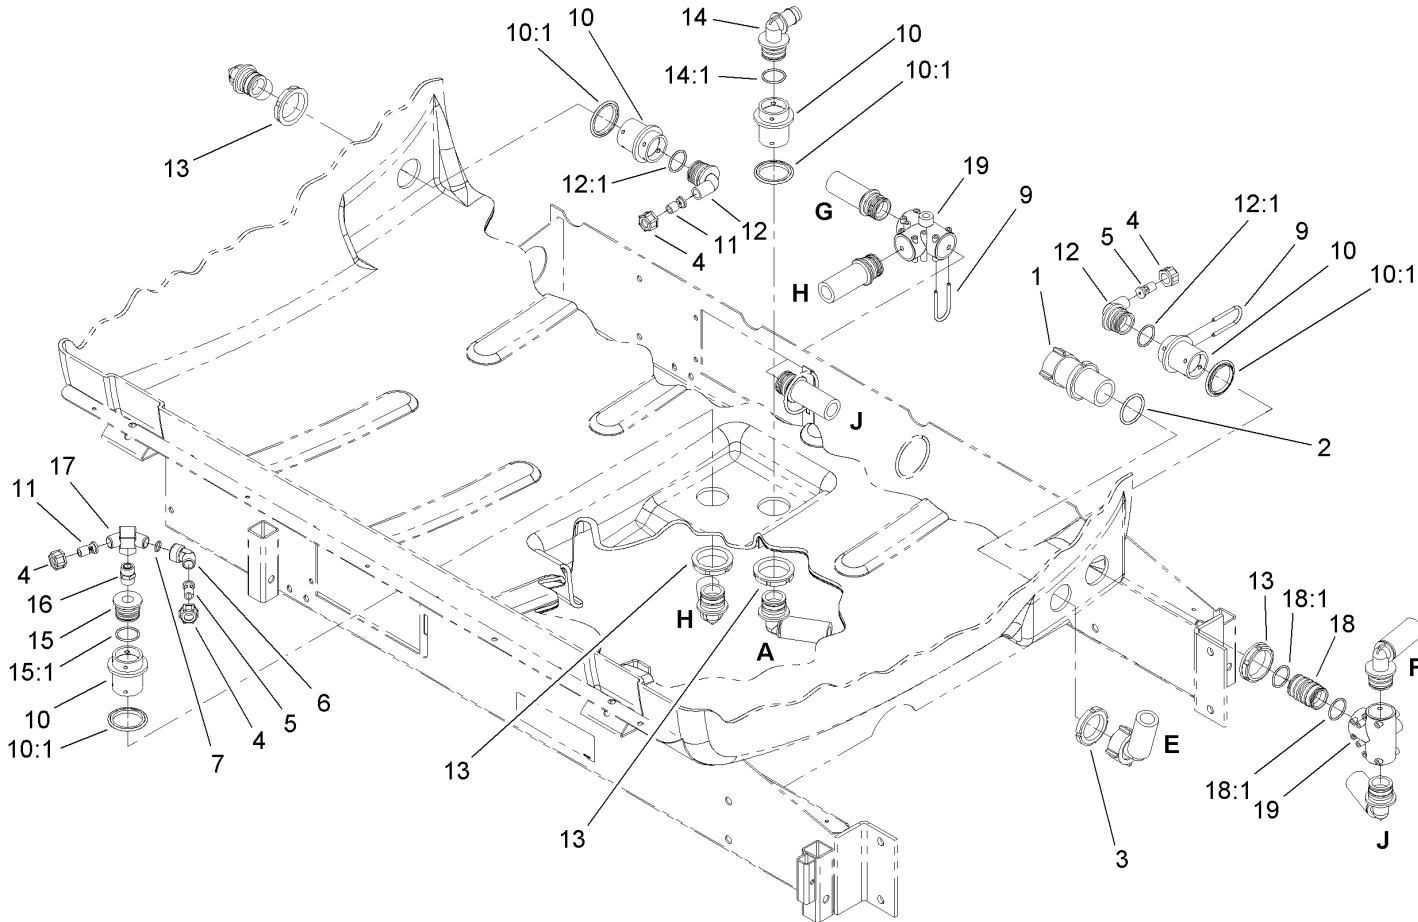 


Lower Sprayer Component Assembly

Ref	Part No.	Qty.	Description				
1	100-6820	1	Valve-Safety, 225 Psi				
2	100-6652	1	Gasket				
3	99-0761	1	Ringnut				
4	99-0766	4	Nut				
5	100-6705	2	Nozzle-Agitation				
6	99-0768	1	Elbow-60 DEG				
7	100-6653	1	O-Ring				
9	100-6708	14	Fork				
10	106-4896	4	Fitting-Bulkhead				
10:1	100-6710	1	Gasket-Bulkhead				
11	100-6706	2	Nozzle-Agitation				
12	106-4944	2	Fitting-90 DEG				
12:1	100-6712	1	O-Ring				
13	100-6713	4	Nut-Bulkhead				
14	106-4945	1	Elbow				
14:1	100-6712	1	O-Ring				
15	106-4943	1	Adapter ASM				
15:1	100-6712	1	O-Ring				
16	100-6722	1	Nipple				
17	100-6723	1	Tee				
18	107-2802	1	Connector				
18:1	100-6712	2	O-Ring				
19	104-9041	2	Tee				

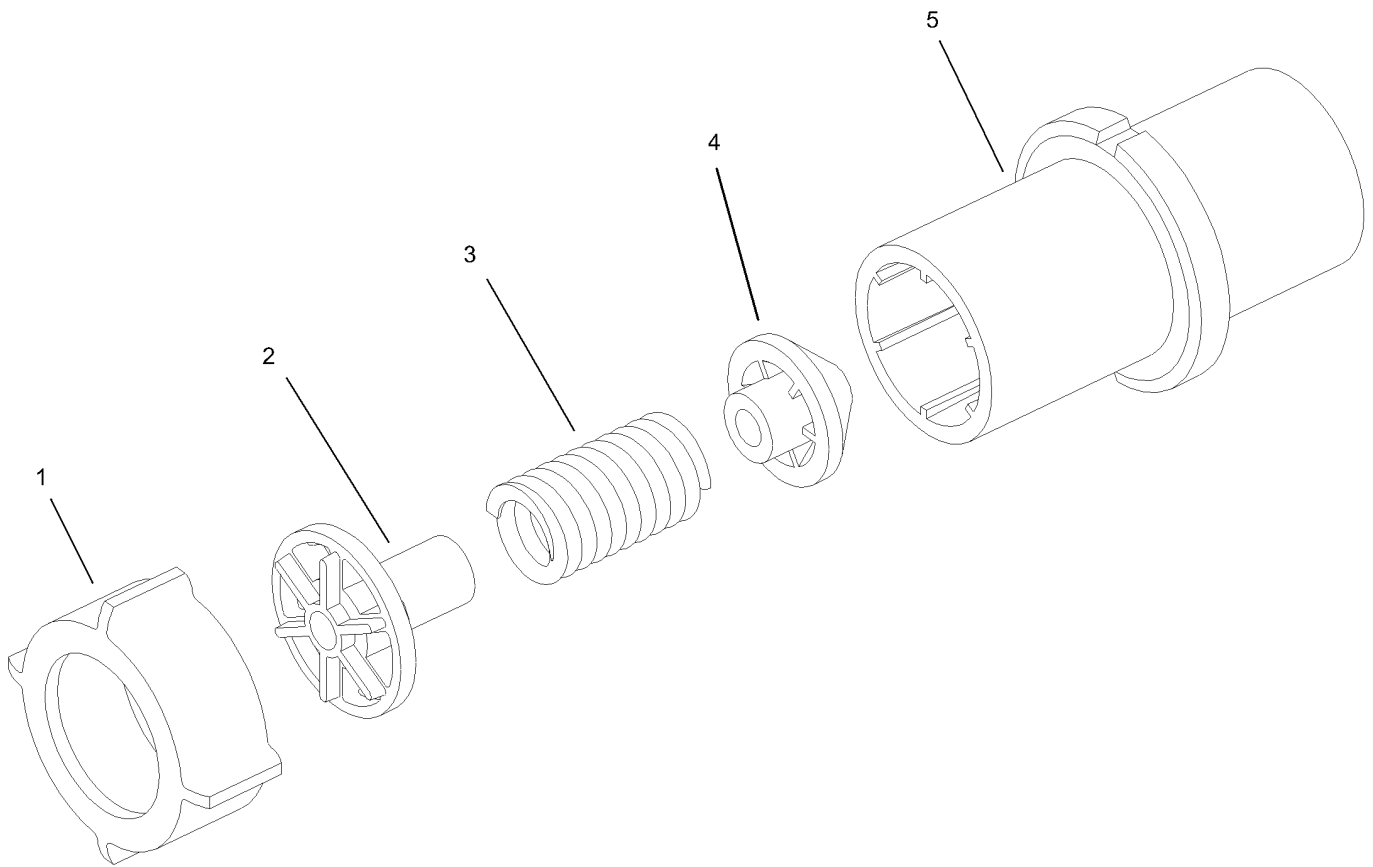 


Safety Valve Assembly No. 100-6820

Ref	Part No.	Qty.	Description				
1	100-8678	1	Nut				
2	100-6724	1	Valve-Relief, Seat				
3	100-6725	1	Spring-Relief, Valve				
4	100-6726	1	Cone-Relief, Valve				
5	100-6727	1	Housing-Relief, Valve				

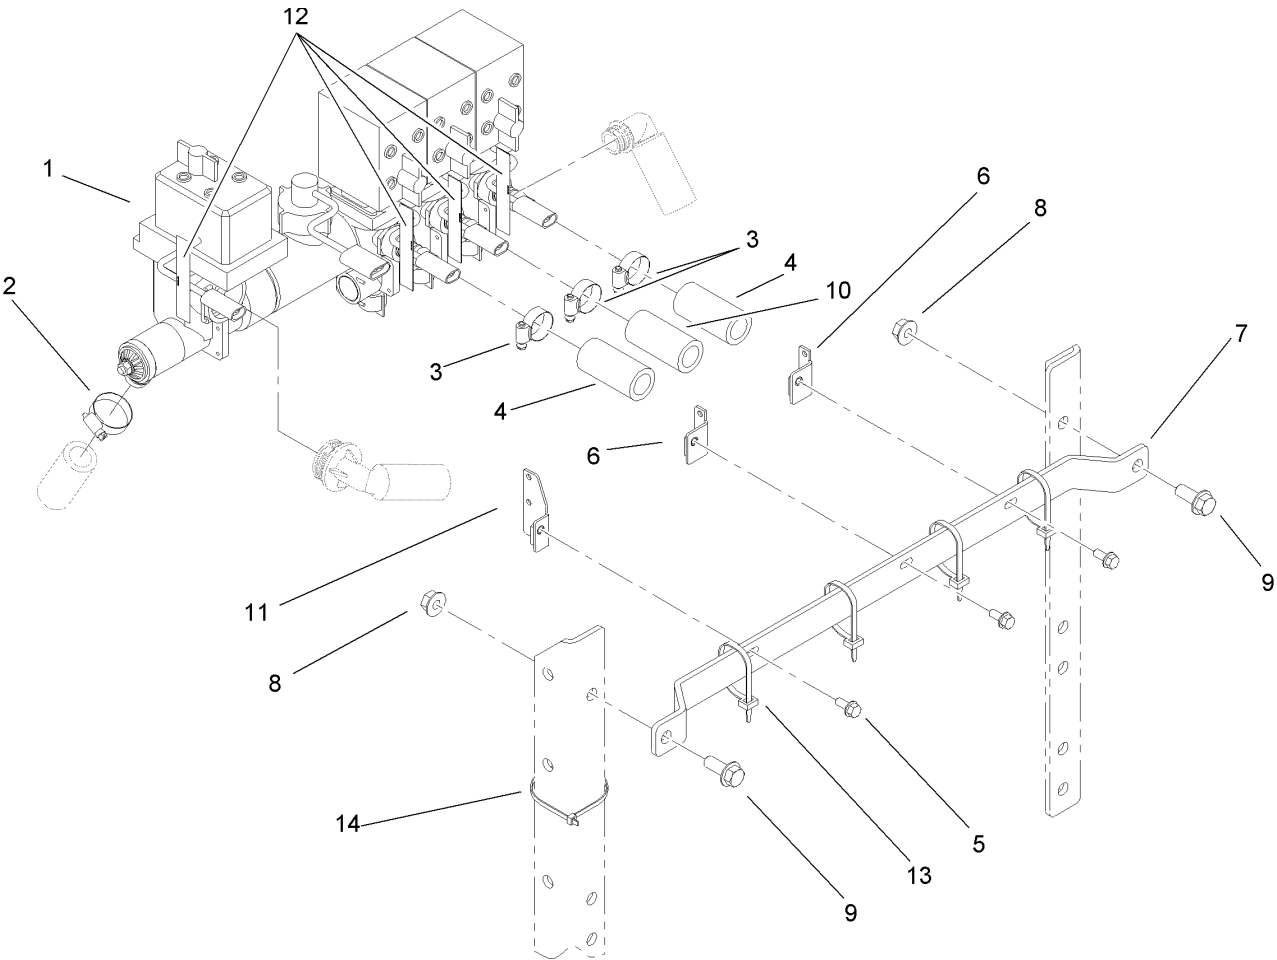 

Control Valve Assembly


Ref	Part No.	Qty.	Description				
1		1	Valve-Control, Evc				
2	2412-3	1	Clamp-Hose				
3	2412-129	3	Clamp-Hose				
4	108-3720	2	Hose-Boom, LH				
5	3234-5	3	Screw-HHF				
6	100-8432-03	2	Bracket				
7	107-2847-03	1	Bracket-Valve				
8	32128-49	2	Nut-HHF				
9	3234-32	2	Screw-HHF				
10	95-2229	1	Hose				
11	100-8433-03	1	Bracket				
12	107-8738	4	Decal-Fuse, 3 Amp				
13	3290-378	4	Tie-Cable				
14	3290-379	1	Tie-Cable				

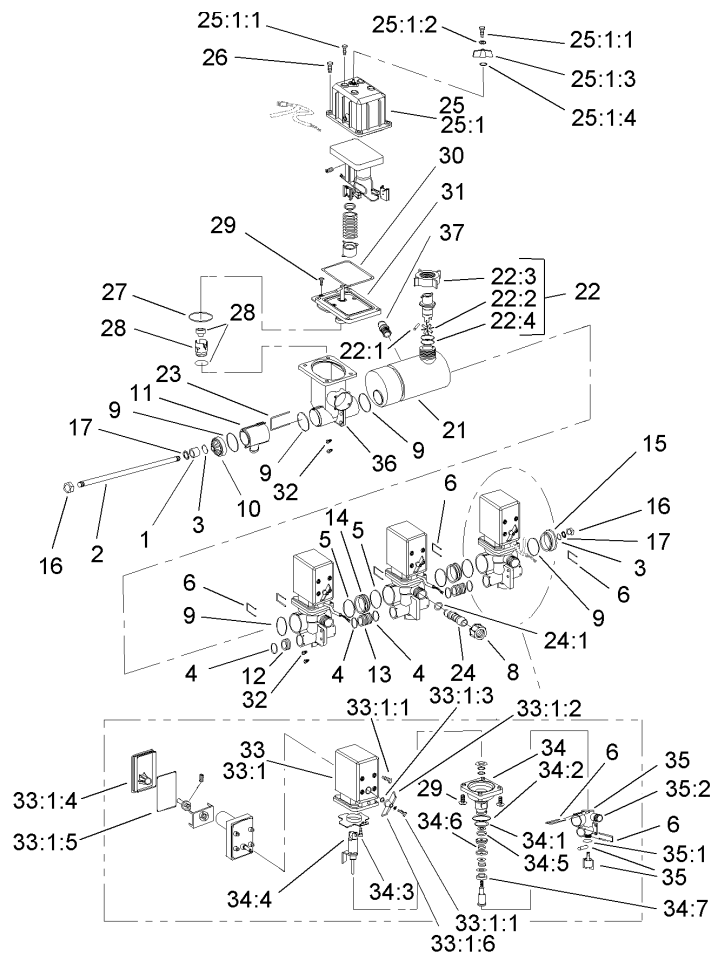 

EVC Control Valve Assembly


Ref	Part No.	Qty.	Description
1	100-6897	1	Bushing
2	100-6909	1	Rod-Threaded
3	100-6887	2	O-Ring
4	100-6882	5	O-Ring
5	100-6646	5	O-Ring
6	100-6885	9	Fork-Valve, Boom
8	99-0850	3	Nut
9	100-6892	4	O-Ring
10	100-6913	1	Cover
11	100-6908	1	T-Piece
12	100-6891	1	Cap-End
13	100-6890	2	Joiner-Bypass, Boom
14	100-6896	2	Joiner-Valve, Boom
15	100-6915	1	Cover-End
16	100-6894	2	Nut
17	100-6634	2	Washer
21	100-6920	1	Housing-Meter, Flow
22	100-6900	1	Flow Sensor ASM
22:1	100-6906	1	Shaft-Rotor
22:2	100-6919	1	Meter-Flow, Rotor
22:3	100-8678	1	Nut
22:4	100-8653	1	O-Ring
23	100-6907	1	Fork
24	106-5112	3	Hosebarb ASM

Ref	Part No.	Qty.	Description
24:1	100-6645	1	O-Ring
25	108-3351	1	Rate Control Motor ASM
25:1	108-3341	1	Motor-Control, Rate
25:1:1	100-6876	1	Screw
25:1:2	100-6877	1	Washer-Lock
25:1:3	100-6903	1	Grip-Hand
25:1:4	100-6880	1	O-Ring
25:2	107-8738	1	Decal-Fuse, 3 Amp
26	100-6918	4	Screw-Plastic
27	100-6904	1	O-Ring
28	110-5140	1	Rate Valve Repair Kit
29	100-6917	16	Screw-Plastic
30	100-6901	1	Gasket-Housing, Valve Motor
31	100-6899	1	Section-Spindle, Valve Rate
32	100-6916	6	Screw-Plastic
33	108-3257	3	Boom Motor Valve ASM
33:1	108-3340	1	Motor-Valve, Boom
33:1:1	100-6876	1	Screw
33:1:2	100-6877	1	Washer-Lock
33:1:3	100-6880	1	O-Ring
33:1:4	100-6874	1	Cover-Valve, Boom
33:1:5	100-6912	1	Cover-Seal
33:1:6	100-6875	1	Handgrip-Valve, Boom
33:2	107-8738	1	Decal-Fuse, 3 Amp

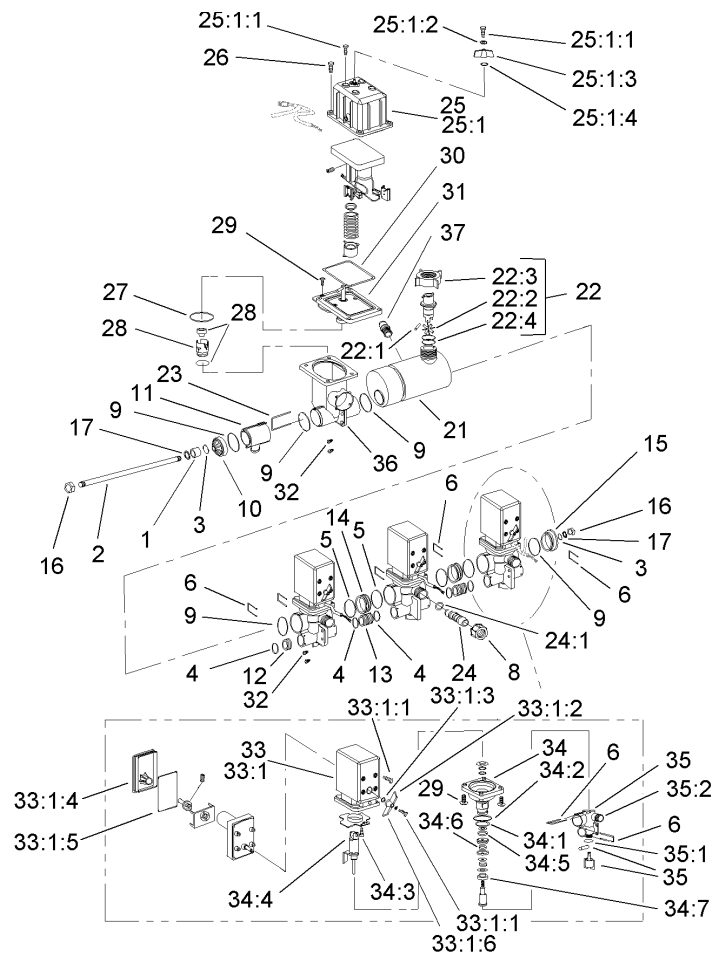 










EVC Control Valve Assembly (continued)

Ref	Part No.	Qty.	Description				
34	100-6889	3	Section-Spindle, Boom Valve				
34:1	100-8653	1	O-Ring				
34:2	100-6882	5	O-Ring				
34:3	100-6911	1	Pin-Roller				
34:4	100-6910	1	Bearing-Roller				
34:5	100-6879	1	O-Ring				
34:6	100-6878	1	O-Ring				
34:7	100-6881	1	Cone-Stem, Boom Valve				
35	100-6888	3	Manifold-Valve, Boom				
35:1	100-6887	1	O-Ring				
35:2	106-5151	1	Manifold-Lower				
36	100-6914	1	Valve-Control, Housing Rate				
37	100-8674	1	Coupler-Tube				

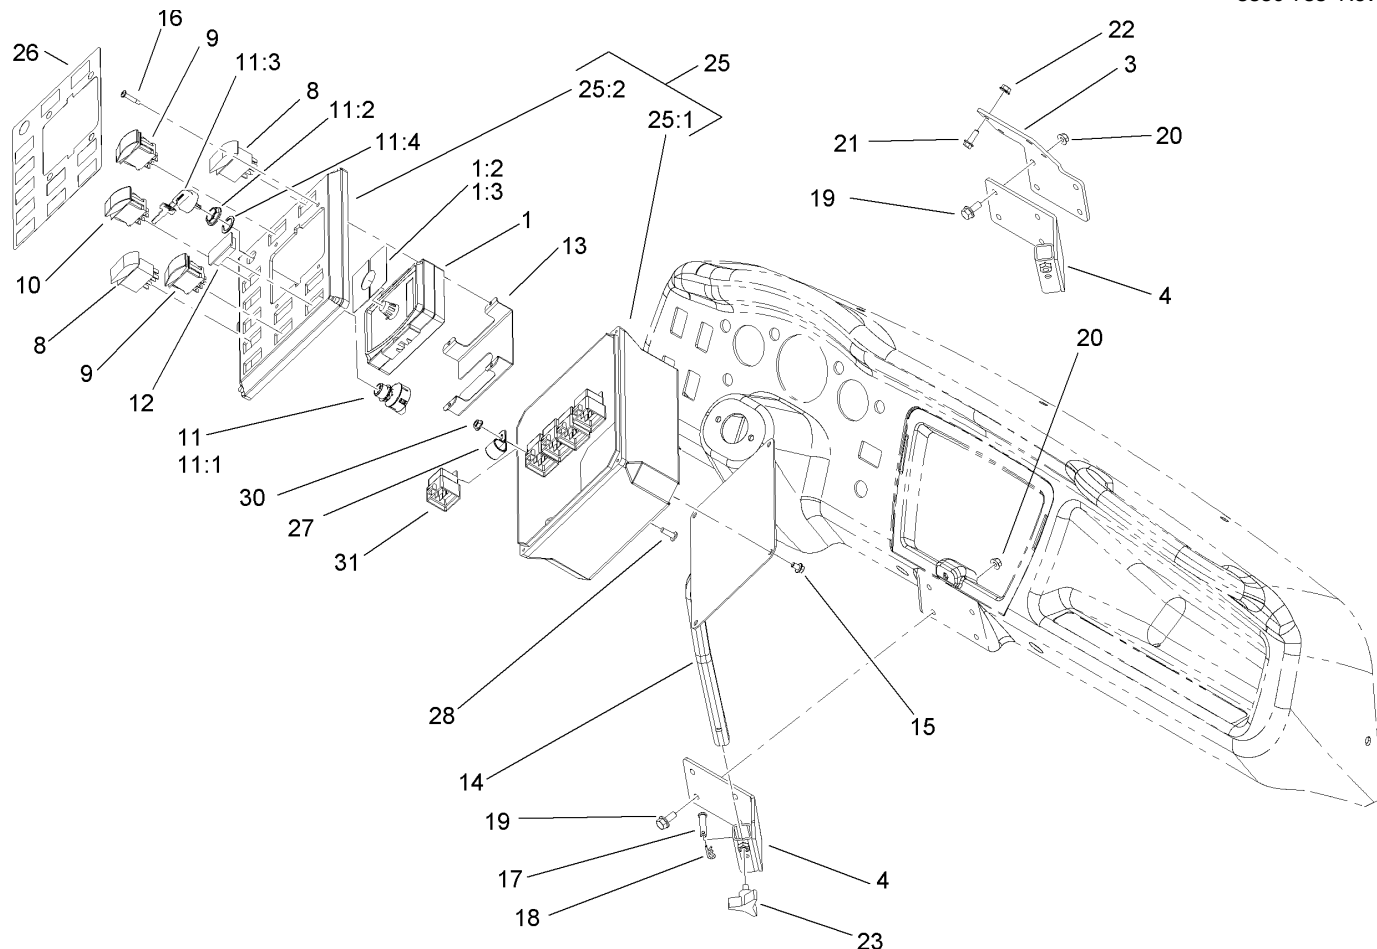 

Control Box Assembly










Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	108-3312	1	Monitor-Spray	23	92-9674	1	Knob
1:2	108-3307	1	Decal-Monitor	25		1	Control Enclosure ASM
1:3	108-3309	1	Decal-Monitor, Ce	25:1	106-1427	1	Base-Enclosure, Control
3	107-2811-03	1	Bracket-Adapter, Control	25:2	110-5223	1	Cover-Enclosure, Control
4	106-7992-03	1	Receiver ASM	26	107-2825	1	Decal-Switchplate
8	100-8490	4	Switch-Dpdt	27	2412-126	1	R-Clamp
9	100-1535	3	Switch	28	321-5	1	Screw-HH
10	100-8589	1	Switch-Rocker	30	32128-33	1	Nut-HF
11	110-2580	1	Switch-Key, Supervisor	31	99-7430	5	Relay
11:1		1	Switch-Key				
11:2	108-8660	1	Nut-Mounting				
11:3	110-5221	1	Set-Key, Supervisor				
11:4	108-8659	1	Washer-Backup				
12	99-7420	3	Plug-Hole				
13	107-2831	1	Bracket-Monitor				
14	106-7995-03	1	Control Box Mount ASM				
15	3234-26	4	Screw				
16	104-1451	4	Screw-TAP, PPH				
17	283-6	1	Pin-Clevis				
18	3290-307	1	Pin-Hair				
19	3234-17	4	Screw-HHF				
20	104-8300	4	Nut-Flange, NI				
21	3234-4	4	Screw-HHF				
22	32128-33	4	Nut-HF				

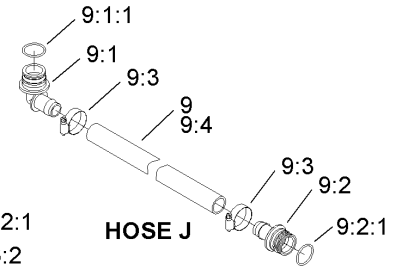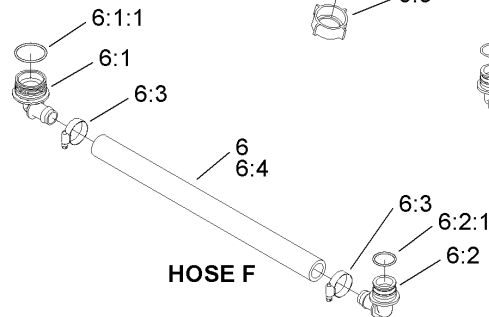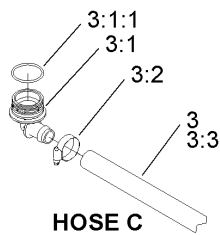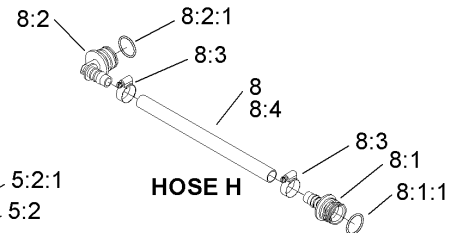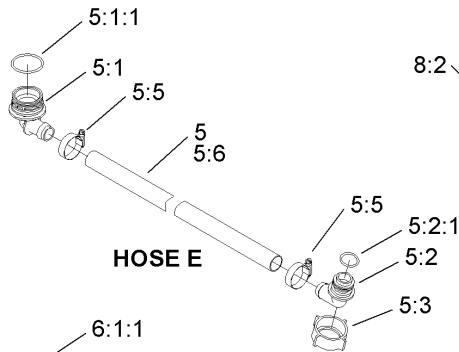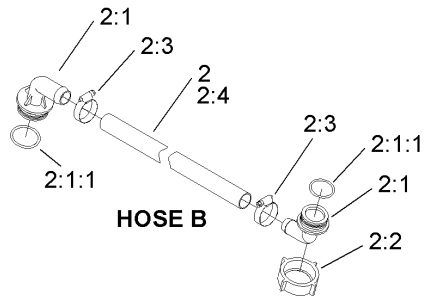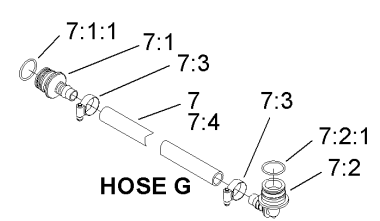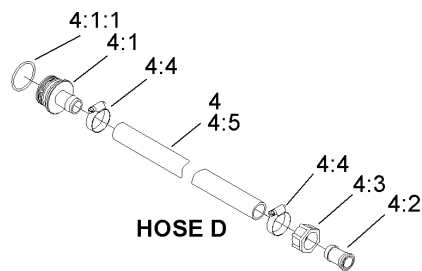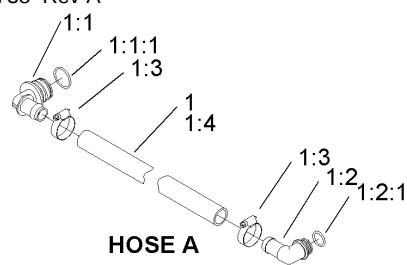         

Hose Assembly


Ref	Part No.	Qty.	Description
②1		1	Boom Bypass Hose ASM
1:1	106-4945	1	Elbow
1:1:1	100-6712	1	O-Ring
1:2	106-4948	1	Hose Barb ASM
1:2:1	100-6882	1	O-Ring
1:3	2412-3	2	Clamp-Hose
1:4	104-9037	1	Hose-Bypass, Boom
②2		1	Agitation Supply Hose ASM
2:1	106-4950	2	Hose Barb ASM
2:1:1	100-8671	1	O-Ring
2:2	100-8669	1	Nut
2:3	2412-3	2	Clamp-Hose
2:4	104-8710	1	Hose
②3		1	Tee Controls Hose ASM
3:1	106-4933	1	Hosebarb ASM
3:1:1	100-8637	1	O-Ring
3:2	2412-3	1	Clamp-Hose
3:3	107-2832	1	Hose
②4		1	Manifold Tee Hose ASM
4:1	106-4932	1	Hosebarb-Straight
4:1:1	100-8637	1	O-Ring
4:2	99-0781	1	Hosebarb
4:3	99-0769	1	Nut
4:4	2412-3	2	Clamp-Hose

Ref	Part No.	Qty.	Description
4:5	107-2807	1	Hose
②5		1	Relief Valve Hose ASM
5:1	106-4933	1	Hosebarb ASM
5:1:1	100-8637	1	O-Ring
5:2	106-4949	1	Hosebarb
5:2:1	100-6646	1	O-Ring
5:3	100-8678	1	Nut
5:5	2412-3	2	Clamp-Hose
5:6	104-8710	1	Hose
②6		1	Agitation Valve Hose ASM
6:1	106-4933	1	Hosebarb ASM
6:1:1	100-8637	1	O-Ring
6:2	106-4945	1	Elbow
6:2:1	100-6712	1	O-Ring
6:3	2412-3	2	Clamp-Hose
6:4	106-4975	1	Hose
②7		1	Front Agitation Hose ASM
7:1	106-4939	1	Hosebarb-Straight
7:1:1	100-6712	1	O-Ring
7:2	106-4940	1	Hosebarb-90 DEG
7:2:1	100-6712	1	O-Ring
7:3	2412-129	2	Clamp-Hose
7:4	107-2813	1	Hose
②8		1	Middle Agitation Hose ASM

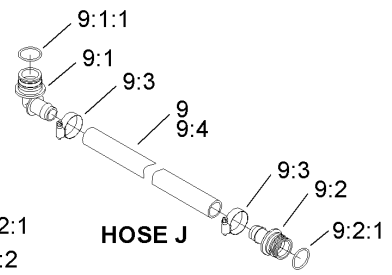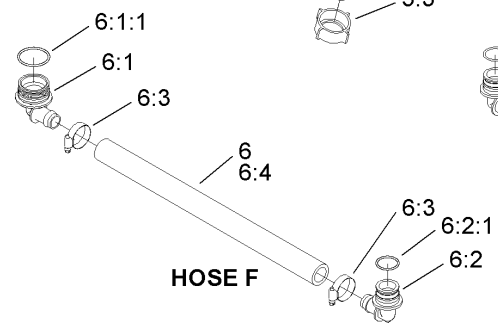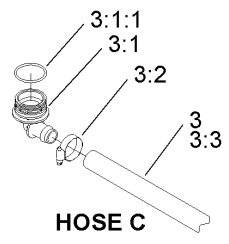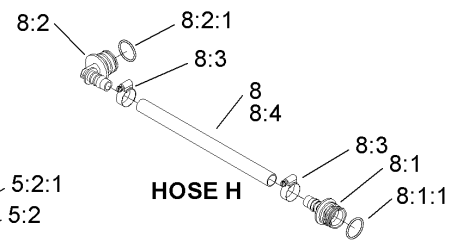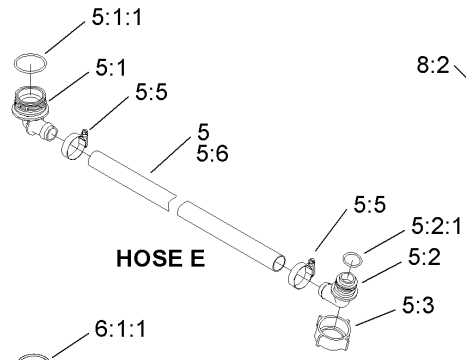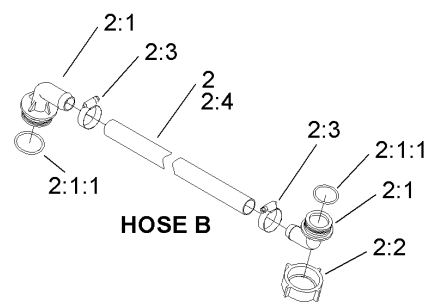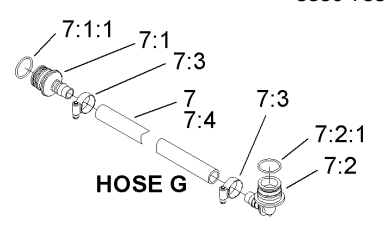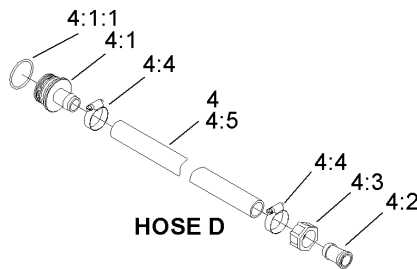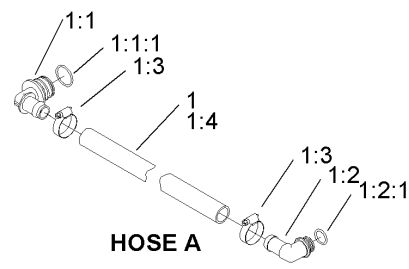         


Hose Assembly (continued)

Ref	Part No.	Qty.	Description				
8:1	106-4939	1	Hosebarb-Straight				
8:1:1	100-6712	1	O-Ring				
8:2	106-4940	1	Hosebarb-90 DEG				
8:2:1	100-6712	1	O-Ring				
8:3	2412-129	2	Clamp-Hose				
8:4	106-1360	1	Hose				
29		1	Agitation Tee Hose ASM				
9:1	106-4945	1	Elbow				
9:1:1	100-6712	1	O-Ring				
9:2	106-4935	1	Hosebarb ASM				
9:2:1	100-6712	1	O-Ring				
9:3	2412-3	2	Clamp-Hose				
9:4	107-2812	1	Hose				

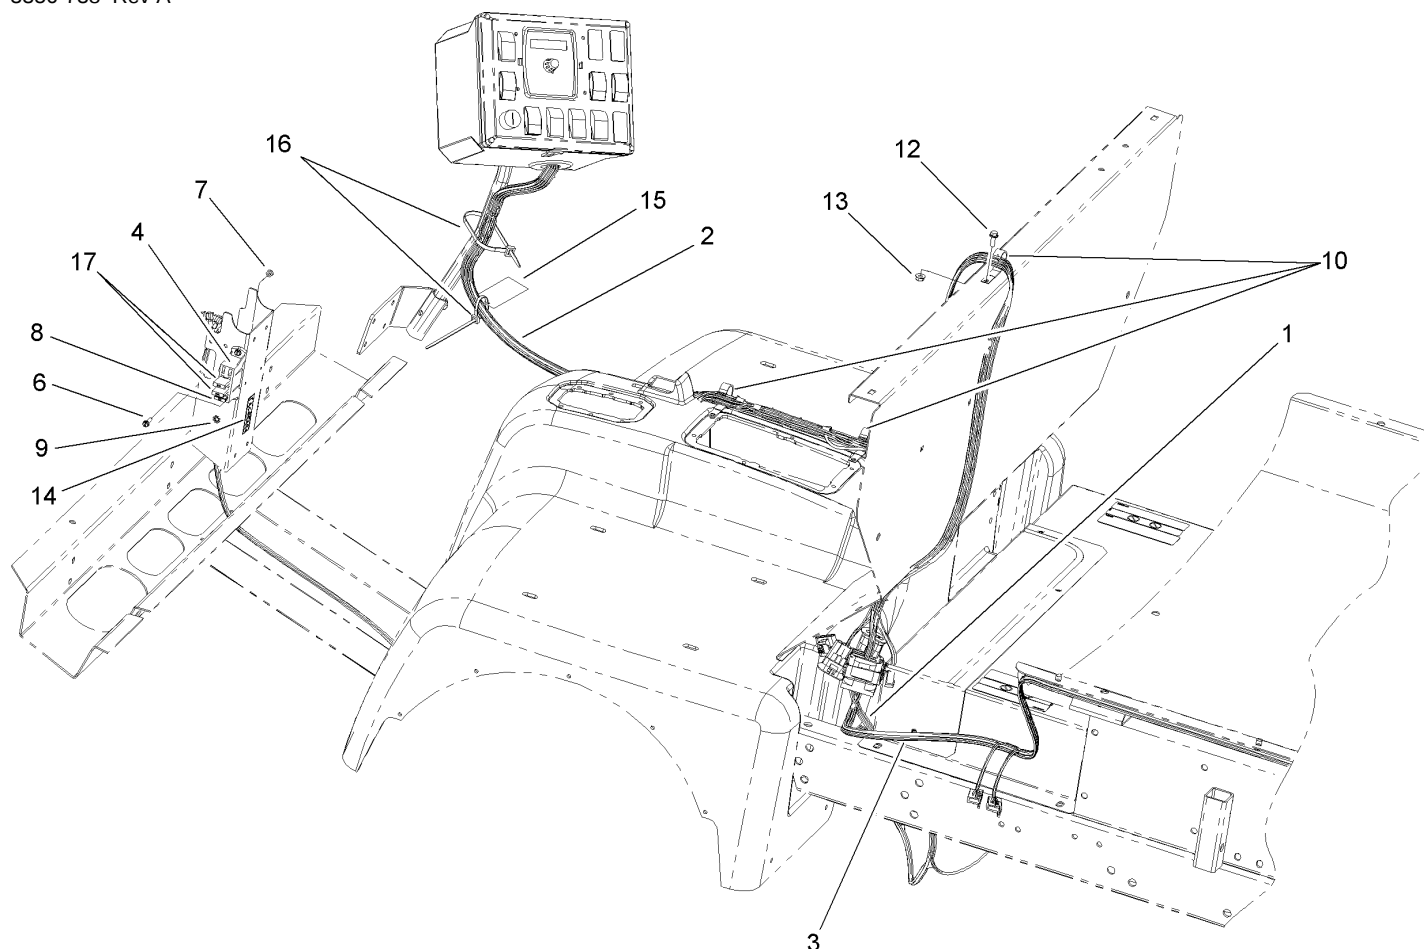 


Electrical Harness Assembly

Ref	Part No.	Qty.	Description				
1	106-1417	1	Harness-Wire, Sprayer Power				
2	112-3533	1	Harness-Wire, Spray Controller				
3	106-1419	1	Harness-Wire, Sprayer Main				
①3:1	108-9493	2	Diode-Tvs				
①3:2	107-8745	4	Fuse-Blade, 3 Amp				
4	92-2641	1	Block-Fuse				
6	32105-13	2	Screw-SHH				
7	3296-2	2	Nut-Lock				
8	218-578	1	Fuse-10 Amp				
9	3255-7	1	Washer-Lock / EXT				
10	106-1429	3	Clamp-J				
12	3234-4	1	Screw-HHF				
13	32128-33	1	Nut-HF				
14	106-1425	1	Decal-Fuse Block				
15	104-8900	1	Tag-Monitor				
16	3290-378	2	Tie-Cable				
17	108-3736	2	Breaker-Circuit, 30A				

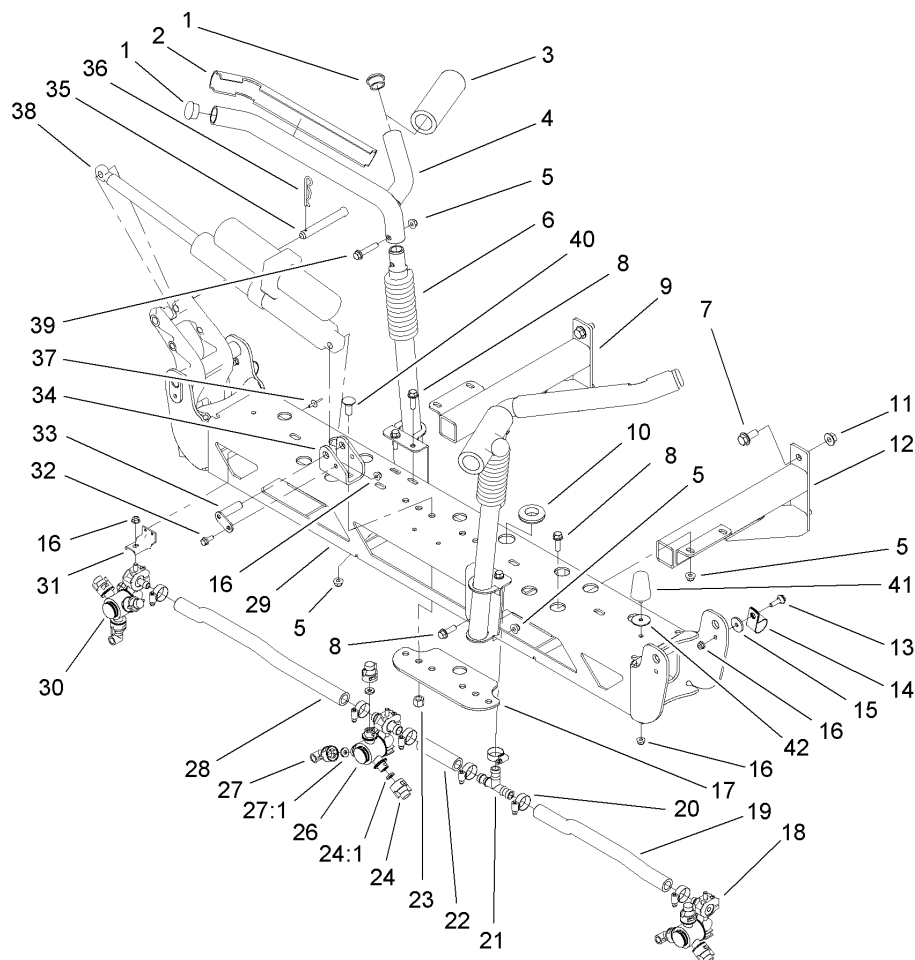 

Center Boom Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	108-3489	4	Cap-Tube	24:1	40998	1	Seat-Gasket
2	108-3495	2	Cover-Slide	26	108-3727	1	Body-Turret, Double
3	108-3457	2	Spacer	27	95-9186	3	Cap
4	108-3476-03	2	Upper Cradle ASM	27:1	40998	1	Seat-Gasket
5	104-8301	12	Nut-Flange, NI	28	108-3735	1	Hose-Boom, Center (LH)
6	108-3472-03	2	Lower Cradle ASM	29	108-3410-03	1	Frame ASM
7	110-5057	4	Capscrew-HHF	30	108-3725	1	Body-Turret, Single (LH)
8	110-5050	10	Screw-HHF	31	107-8775	3	Bracket-Mount, Nozzle
9	108-3408-03	1	Frame-Mount, Boom (LH)	32	110-5053	2	Screw-Flange
10	108-3723	1	Grommet	33	108-3420	2	Pivot Pin ASM
11	108-3745	4	Nut-HF, Whiz	34	108-3401-03	2	Strap-Clevis
12	108-3409-03	1	Frame-Mount, Boom (RH)	35	108-3436	2	Pin-Clevis
13	108-3744	2	Screw-Shoulder	36	3290-468	2	Pin-Cotter
14	2412-82	2	Clamp	37	3269-18	6	Rivet-Pop
15	108-3743	2	Washer	38	108-3438	2	Actuator
16	104-8300	9	Nut-Flange, NI	39	108-3742	2	Screw-HHF
17	108-3469-03	1	Plate-Washer	40	110-5067	4	Screw-CARR
18	108-3726	1	Body-Turret, Single (RH)	41	110-5070	2	Bumper-Neoprene
19	108-3718	1	Hose-Boom, Center (RH)	42	3256-68	2	Washer-Flat
20	2412-129	7	Clamp-Hose				
21	108-3439	1	Tee				
22	108-3717	1	Hose-Boom				
23	3296-23	4	Nut-Lock, NI				
24	95-9187	6	Cap-Blank				

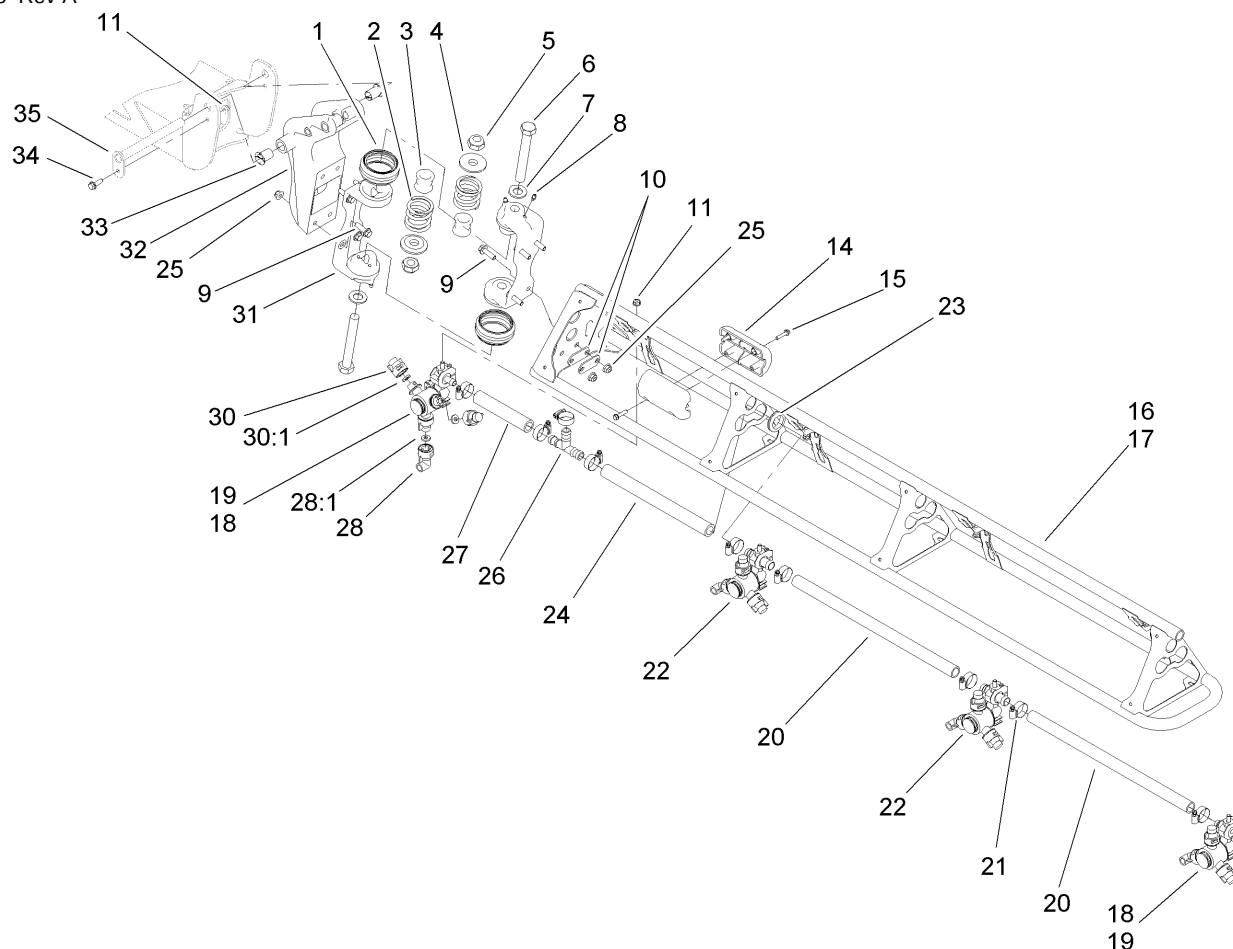 

Left and Right Hand Boom Assembly

Ref	Part No.	Qty.	Description
1	108-3459	4	Boot-Hinge
2	108-3440	4	Spring-Breakaway, Boom
3	108-3730	4	Tube-Hinge
4	108-3444	4	Retainer-Spring
5	3296-15	4	Nut-Lock, NI
6	108-3738	4	Screw-HH
7	110-5054	4	Washer-Flat
8	302-5	8	Fitting-Grease
9	110-5050	16	Screw-HHF
10	108-3605	8	Plate-Backing
11	104-8300	10	Nut-Flange, NI
14	108-3429	4	Block-Slide
15	108-3746	8	Screw-Plastite
16	108-3524-03	1	RH Boom ASM
17	108-3525-03	1	LH Boom ASM
18	108-3726	2	Body-Turret, Single (RH)
19	108-3725	2	Body-Turret, Single (LH)
20	40506	4	Hose-Jumper
21	2412-129	18	Clamp-Hose
22	108-3727	4	Body-Turret, Double
23	240-3	4	Grommet-Rubber
24	108-3721	2	Hose-Boom
25	104-8301	16	Nut-Flange, NI
26	108-3439	2	Tee

Ref	Part No.	Qty.	Description
27	108-3728	2	Hose-Boom
28	95-9186	8	Cap
28:1	40998	1	Seat-Gasket
30	95-9187	16	Cap-Blank
30:1	40998	1	Seat-Gasket
31	108-3471-03	4	Hinge
32	108-3600-03	2	Bracket-Pivot
33	100-8541	4	Bushing-A Arm
34	108-3748	2	Screw-HHF
35	108-3419	2	Pivot Pin ASM

Attachments and Accessories

For 41235 - Workman 200 Spray System, Heavy-Duty Workman Vehicles

Product Name	Model/Part
Single Nozzle Kit	41024
Sonic Boom	41089
Hose Reel Kit	41097
Spray Gun Kit	41133
Pro Foam Concentrate (4 X 1 Gallon)	41157
Foam Marker Kit	41228
Enclosed Boom	41355
Enclosed Boom Mount	41363
Pro-Foam	41607

NOTES

NOTES

