



Super Recycler[®] Lawn Mower

Model No. 20053 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	 3	Air Cleaner Assembly Briggs and Stratton	
Housing Assembly No. 112-8862	 4	126T02-0206-E1	 12
Height-of-Cut Assembly	 5	Governor Assembly Briggs and Stratton	
Engine Assembly	 6	126T02-0206-E1	 13
Handle Assembly	 7	Muffler and Fuel Tank Assembly Briggs and Stratton	
Cylinder Assembly Briggs and Stratton		126T02-0206-E1	 14
126T02-0206-E1	 8	Blower Housing Assembly Briggs and Stratton	
Crankshaft Assembly Briggs and Stratton		126T02-0206-E1	 15
126T02-0206-E1	 9	Starter Assembly Briggs and Stratton 126T02-0206-E1	 16
Crankcase Assembly Briggs and Stratton		Gasket Kit Briggs and Stratton 126T02-0206-E1	 17
126T02-0206-E1	 10	Carburetor Overhaul Kit Briggs and Stratton	
Carburetor Assembly Briggs and Stratton		126T02-0206-E1	 18
126T02-0206-E1	 11		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|--|---|
| ❶ Not serviced separately | ❷ Obtain from your local Briggs & Stratton dealer |
| ❸ Included in Carburetor Overhaul Kit (Ref. No. 121) | ❹ Included in Engine Gasket Set (Ref. No. 358) |
| ❺ Included in Carburetor Gasket Set (Ref. No. 977) | |

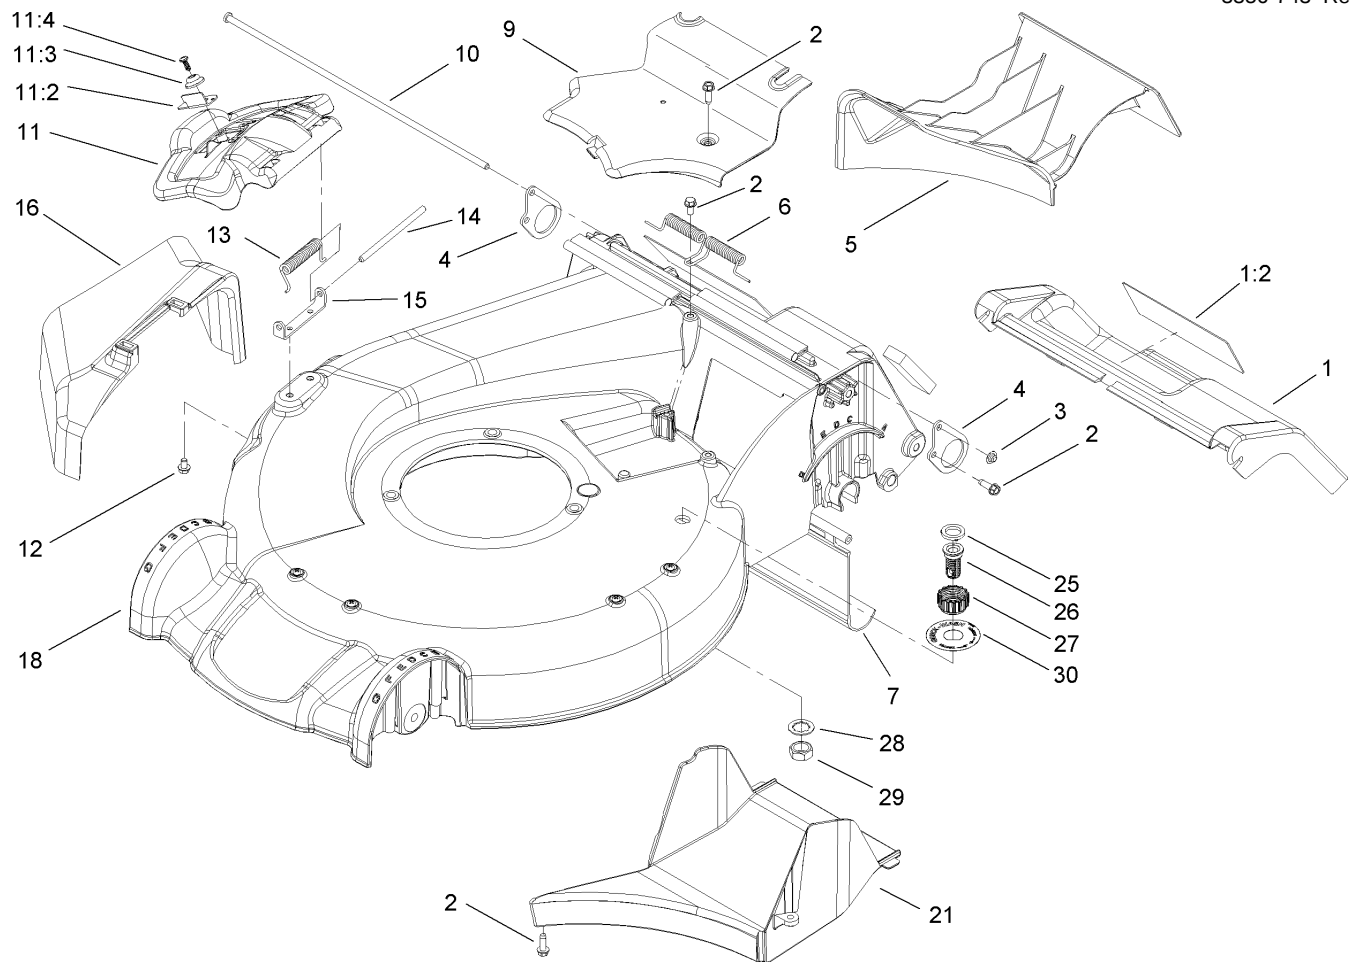

Housing Assembly

Ref	Part No.	Qty.	Description
1	105-1323	1	Rear Door ASM
1:2	105-1295	1	Decal-Warning
2	49-2040	6	Screw-HWHTF
3	3290-337	1	Nut-Speed
4	107-7493	2	Plate-Support, Door
5	107-7490	1	Plug-Mulch
6	105-3032	1	Spring-Door, Rear
7	114-1586	1	Shield-Trailing
9	107-7494	1	Cover-Belt
10	107-7499	1	Rod-Support, Door
11	107-3717	1	Discharge Door ASM
11:2	107-0795	1	Latch-Door
11:3	107-7456	1	Cap-Door
11:4	107-7461	1	Screw-Plastite
12	99-8445	2	Screw-HWH
13	99-5293	1	Spring-Torsion
14	99-5291	1	Rod-Cover
15	112-6416	1	Bracket-Cover
16	108-3753	1	Chute-Discharge, Side
18	112-8862	1	Housing ASM
21	107-7495	1	Tunnel-Discharge
25	112-6438	1	Washer-Seal, Washout Port
26	112-6400	1	Port-Washout
27	112-6401	1	Coupling-Hose, Washout Port


Ref	Part No.	Qty.	Description
28	3254-5	1	Washer-Tooth
29	3218-6	1	Nut-Jam
30	112-8868	1	Decal-Washout Port

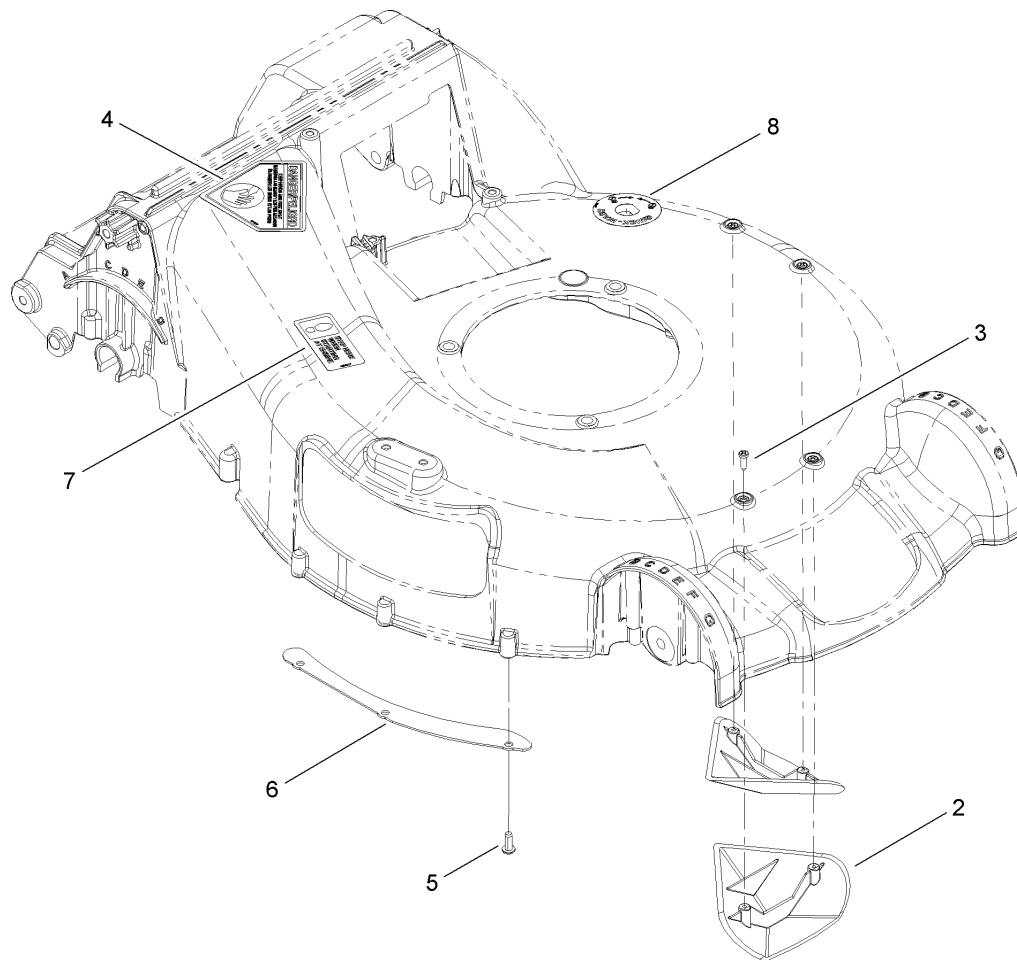 **Housing Assembly No. 112-8862**

Ref	Part No.	Qty.	Description				
2	108-3798	2	Kicker-Housing				
3	32144-111	4	Screw-PPH				
4	94-8072	1	Decal-Danger				
5	63-8590	3	Screw				
6	105-1316-03	1	Sheet-Lip				
7	108-8117	1	Decal-Placement, Foot				
8	112-8867	1	Decal-Washout Port, Trilingual				




Ref	Part No.	Qty.	Description				
1	92-1057	4	Bolt-Shoulder				
2	107-3708	4	Wheel ASM				
2:1	27-6250	2	Bushing				
3	107-7498	4	Screw-Shoulder, HOC				
4	107-7492	4	Arm-Pivot				
5	107-7491	4	Arm-Spring				
6	105-3042	4	Knob-Lever, HOC				
7	603773	8	Nut				
8	49-2040	12	Screw-HWHTF				
9	108-9758	2	Spacer-Hp				
10	107-7478	4	Plate-HOC				
11	40-1940	4	Washer				
12	2844	2	Washer				
13	52-2480	2	Spacer-Wheel				
15	3256-24	2	Washer-Flat				
17	108-8168	1	Decal				

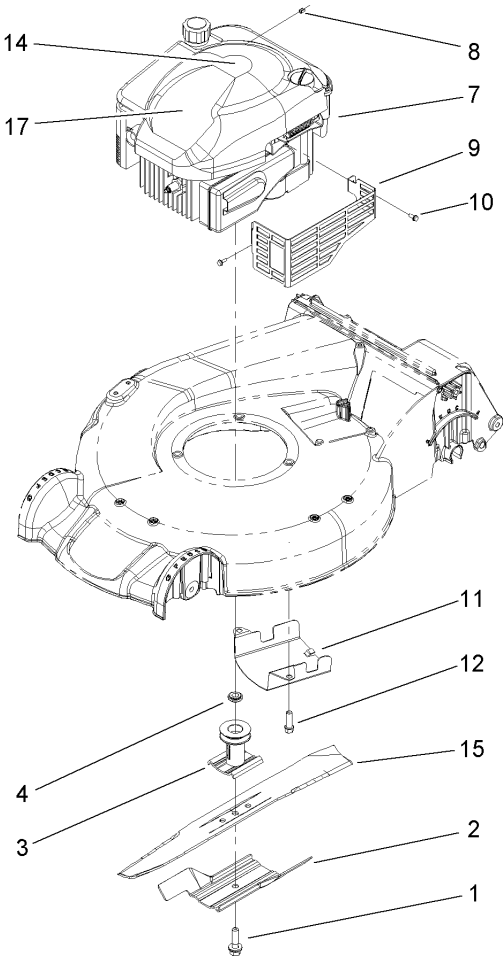 


Engine Assembly

Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
2	105-6848-03	1	Accelerator-Blade				
3	106-3987	1	Blade Driver ASM				
4	106-3999	1	Spacer-Driver				
7		1	Engine-Briggs & Stratton, 126T02-0206-B1				
8	2210-316	1	Stop-Rope				
9	104-7577-03	1	Shield-Muffler				
10	32144-1	3	Screw-Taptite				
11	107-7489-03	1	Shield-Grass				
12	95-1727	3	Screw-Taptite				
14	108-8130	1	Decal-Recoil				
15	108-3762-03	1	Blade-Recycling				
17	114-0339	1	Decal-Engine				

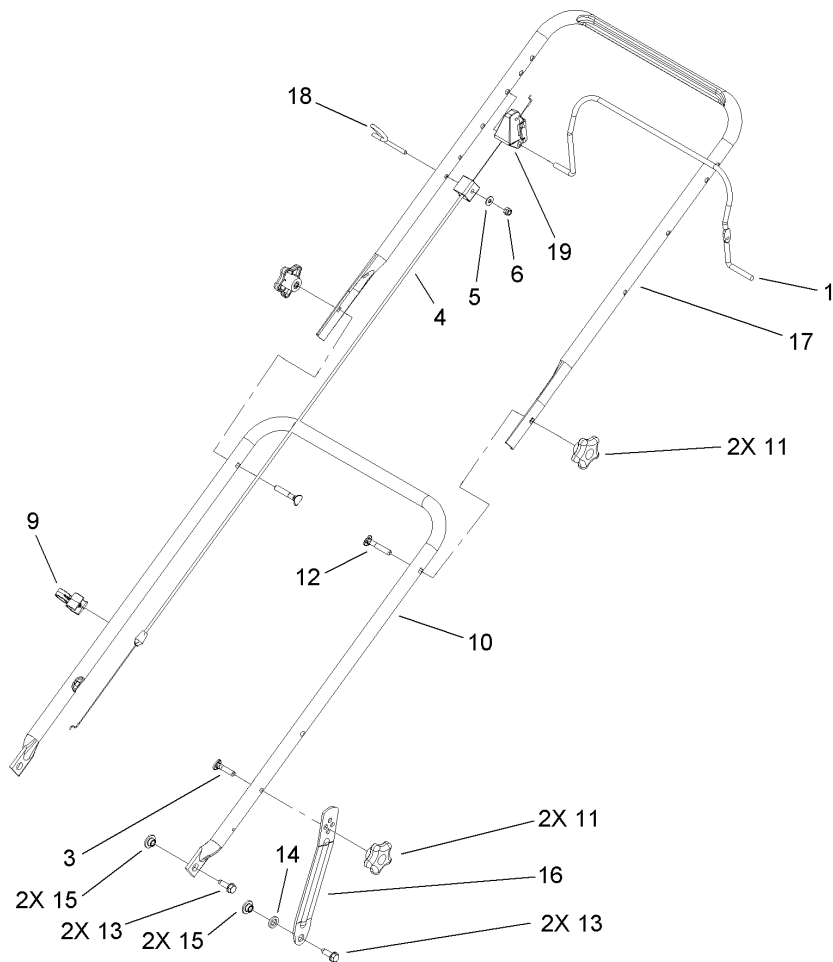 

Handle Assembly

Ref	Part No.	Qty.	Description				
1	105-6800-03	1	Bail-Brake				
3	92-2260	2	Screw-Handle				
4	108-8156	1	Cable-Brake				
5	3256-1	1	Washer-Flat				
6	3296-73	1	Nut-Lock, NI				
9	106-6805	1	Guide-Cable				
10	107-7476-05	1	Handle-Lower				
11	108-8162	4	Knob-Locking				
12	92-2260	2	Screw-Handle				
13	701243	4	Screw-HWHTF				
14	55-9670	2	Washer				
15	27-6600	4	Spacer-Coupling				
16	108-8145-03	2	Support-Handle				
17	107-3783-05	1	Handle-Upper				
18	106-8330	1	Guide-Rope				
19	107-0757	1	Stop-Pivot				

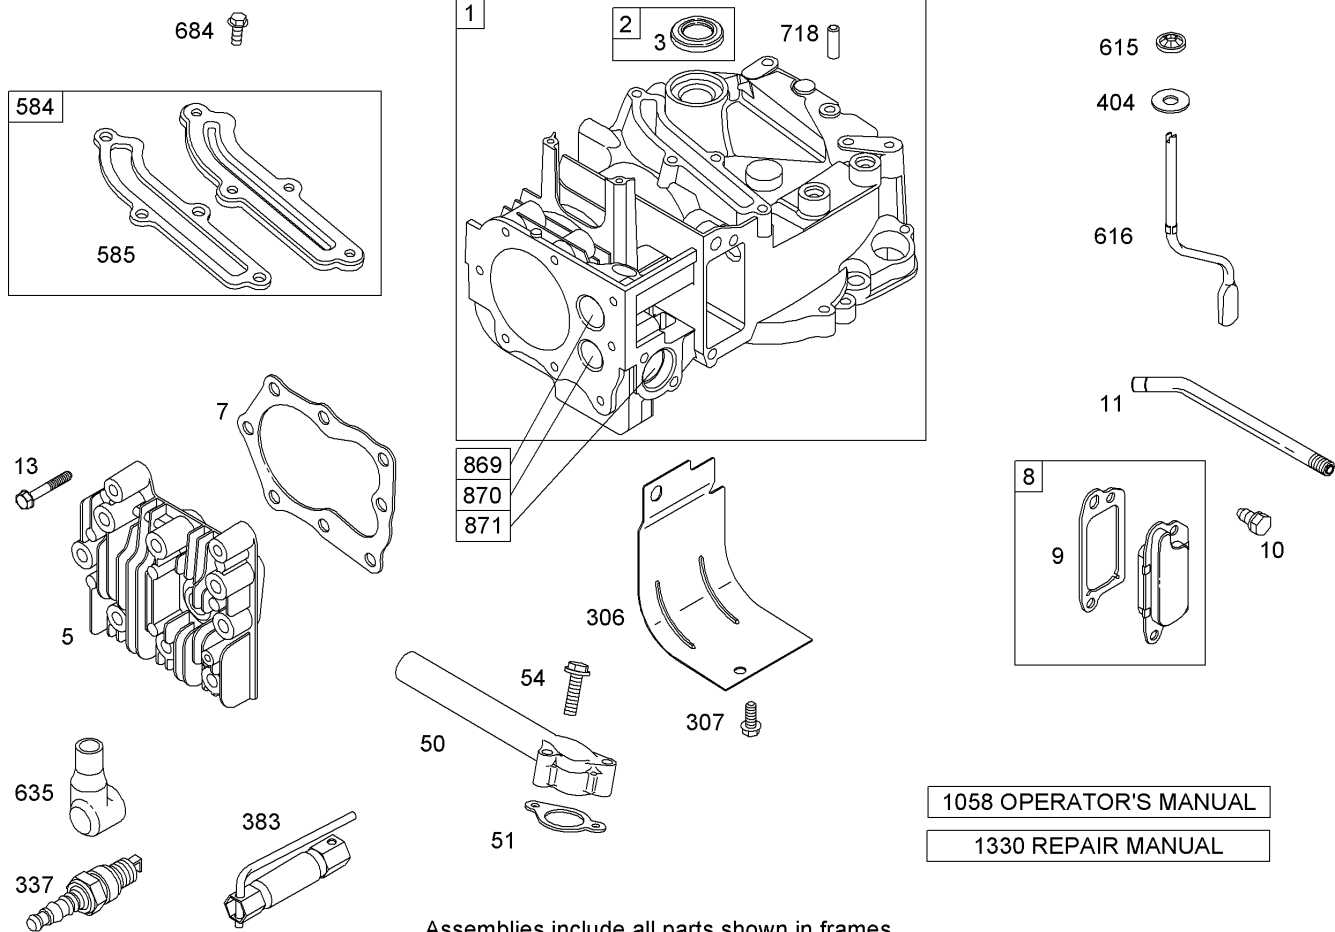 


Assemblies include all parts shown in frames

Cylinder Assembly

Briggs and Stratton 126T02-0206-E1

Ref	Part No.	Qty.	Description
1	697322	1	Cylinder ASM
2	399269	1	Bushing Seal Kit
3	299819s	1	Seal-Oil (Magneto Side)
4	691160	1	Head-Cylinder
5	692249	1	Gasket-Head, Cylinder
6	695250	1	Breather ASM
7	699472	1	Gasket-Breather
8	691125	1	Screw (Breather ASM)
9	691781	1	Tube-Breather
10	690912	1	Screw (Cylinder Head)
11	497465	1	Manifold-Intake
12	272199s	1	Gasket-Intake
13	691650	1	Screw (Intake Manifold)
14	690450	1	Cylinder Shield
15	690345	1	Screw (Cylinder Shield)
16	802592s	1	Plug-Spark
17	89838s	1	Wrench-Spark Plug
18	690272	1	Washer (Governor Crank)
19	697734	1	Cover-Passage, Breather
20	691879	1	Gasket-Passage, Breather
21	690340	1	Retainer-Shaft, Governor
22	698801	1	Crank-Governor
23	66538s	1	Boot-Spark Plug
24	690345	1	Screw (Breather Passage Cover)

Ref	Part No.	Qty.	Description
718	690959	1	Pin-Locating
869	691155	1	Seat-Valve (Intake)
870	690380	1	Seat-Valve (Exhaust)
871	262001	1	Bushing-Guide (Exhaust)
871	63709	1	Bushing-Guide (Intake)
1058	MS3260	1	Operator's Manual
1330	270962	1	Repair Manual

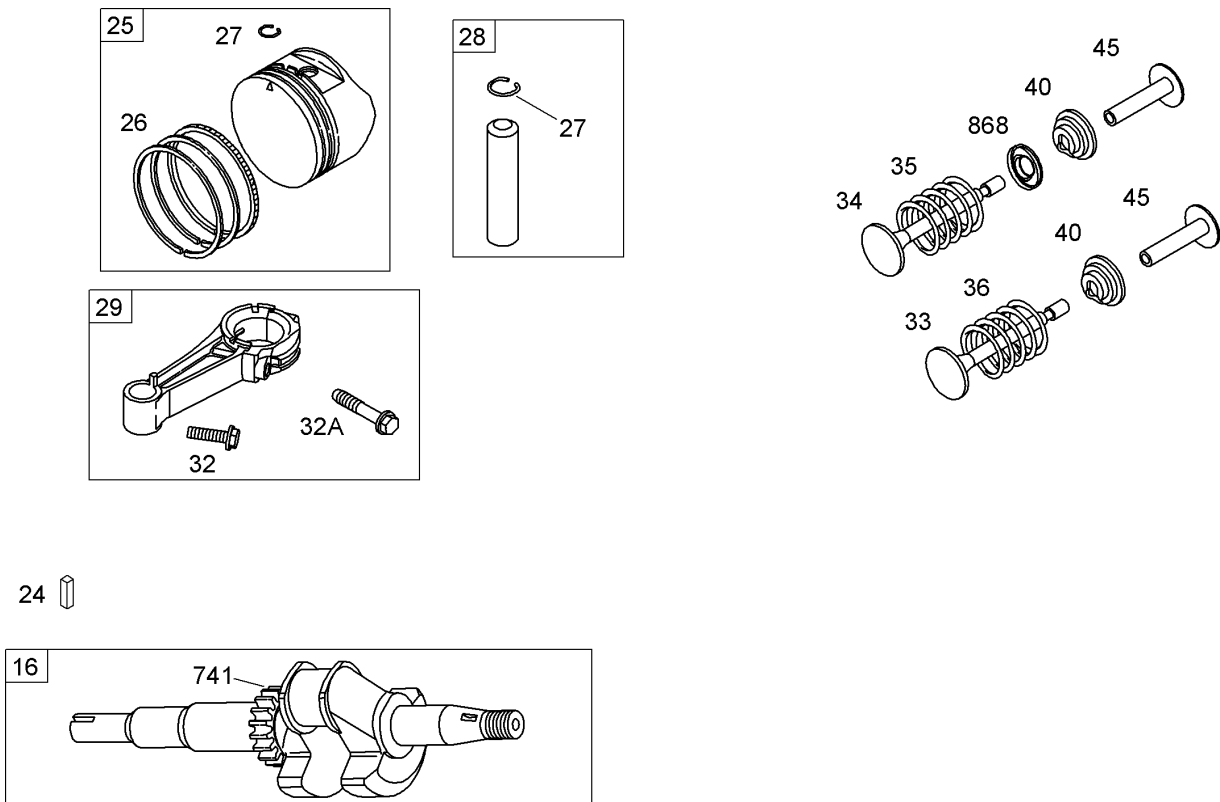 


Assemblies include all parts shown in frames

Crankshaft Assembly

Briggs and Stratton 126T02-0206-E1


Ref	Part No.	Qty.	Description				
216	696009	1	Crankshaft				
224	222698s	1	Key-Flywheel				
225	790359	1	Piston ASM (STD)				
225	791326	1	Piston ASM (.020 O S)				
226	790360	1	Ring Set (STD)				
226	791324	1	Ring Set (.020 O S)				
227	691866	1	Lock-Pin, Piston				
228	499423	1	Pin-Piston (STD)				
229	499424	1	Rod-Connecting (STD)				
232	691664	1	Screw (Connecting Rod)				
232A	695759	1	Screw (Connecting Rod)				
233	262651s	1	Valve-Exhaust				
234	262652s	1	Valve-Intake				
235	691270	1	Spring-Valve (Intake)				
236	691270	1	Spring-Valve (Exhaust)				
240	692194	1	Retainer-Valve				
245	690548	1	Tappet-Valve				
2741	790345	1	Gear-Timing				
2868	697338	1	Seal-Valve				

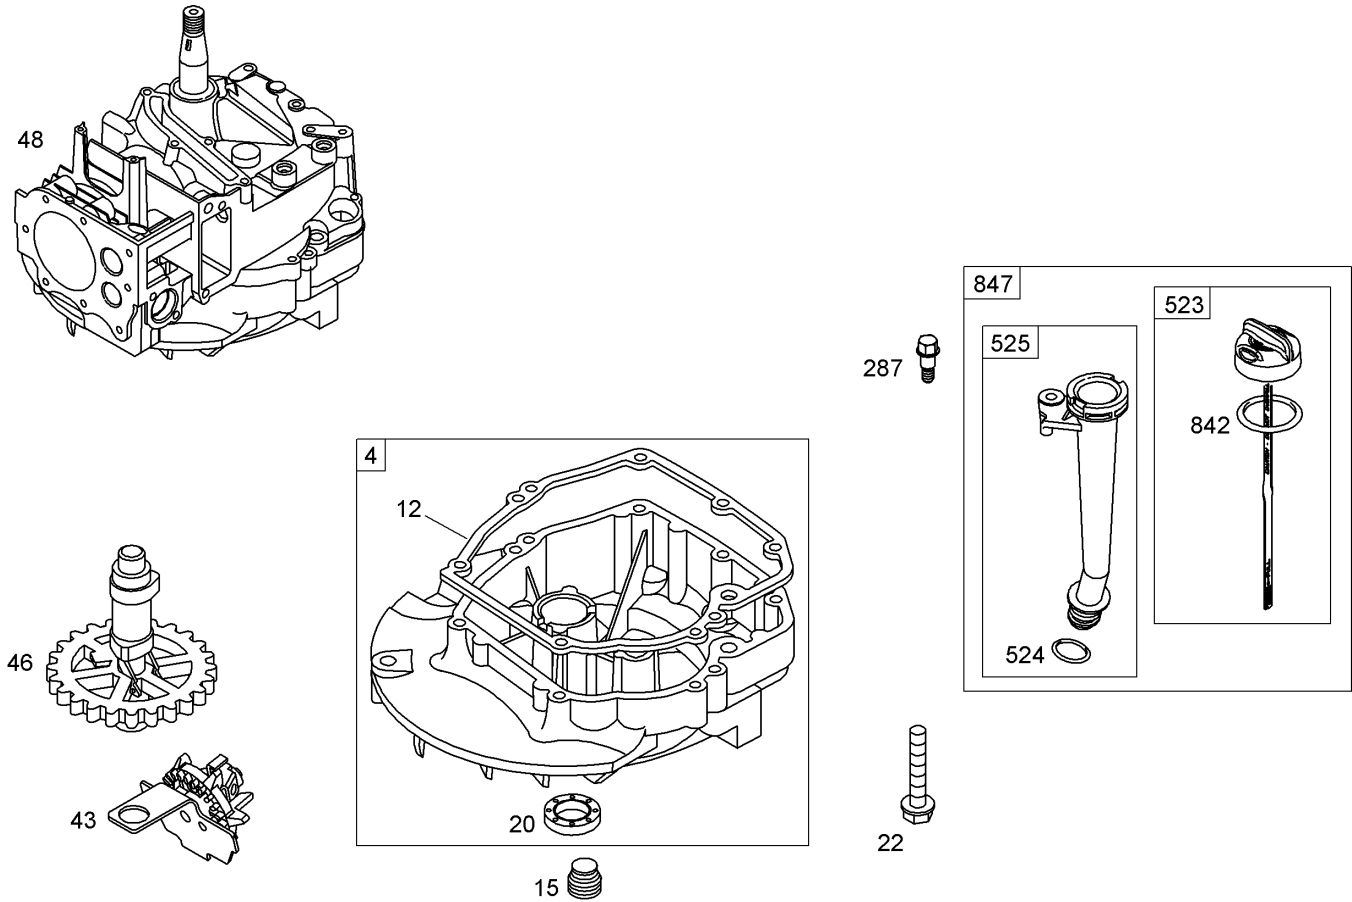 

Assemblies include all parts shown in frames

Crankcase Assembly
Briggs and Stratton 126T02-0206-E1

Ref	Part No.	Qty.	Description				
24	493279	1	Sump-Engine				
2412	692232	1	Gasket-Crankcase (.015 STD)				
215	691680	1	Plug-Drain, Oil				
2420	399781s	1	Seal-Oil				
222	691092	1	Screw (Engine Sump)				
243	691997	1	Slinger-Governor, Oil				
246	691449	1	Camshaft				
248	792742	1	Sump-Engine				
2287	690940	1	Screw (Dipstick Tube)				
2523	499621	1	Dipstick				
24524	692296	1	Seal, O-Ring (Dipstick Tube)				
2525	495265	1	Tube-Dipstick				
24842	691031	1	Seal, O-Ring (Dipstick Tube)				
2847	692047	1	Dipstick Tube ASM				


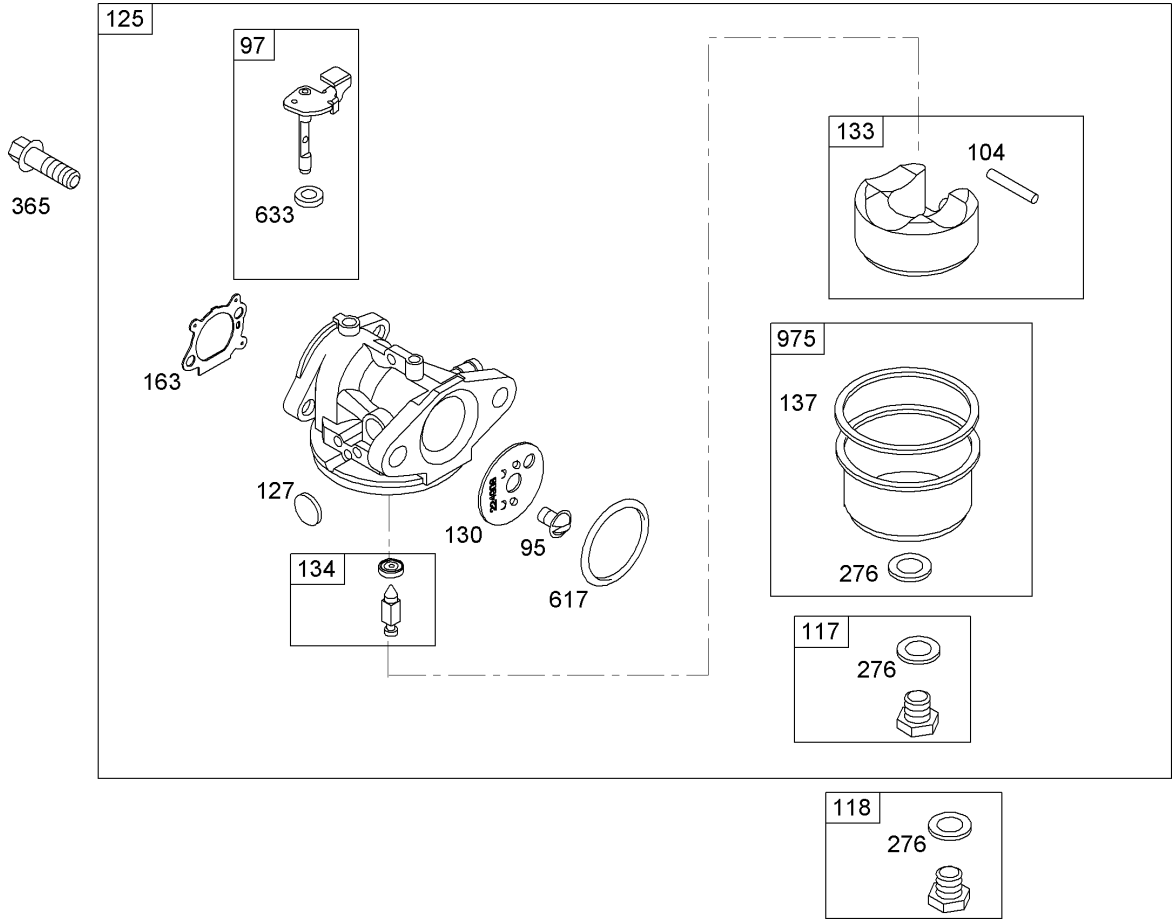 


Assemblies include all parts shown in frames

Carburetor Assembly

Briggs and Stratton 126T02-0206-E1

Ref	Part No.	Qty.	Description				
295	691636	1	Screw (Throttle Valve)				
297	696565	1	Shaft-Throttle				
23104	691242	1	Pin-Hinge, Float				
2117	498978	1	Jet-Main (STD)				
2118	497466	1	Jet-Main (High Altitude)				
2125	498170	1	Carburetor				
23127	694468	1	Plug-Welch				
2130	696564	1	Valve-Throttle				
2133	398187	1	Float-Carburetor				
23134	398188	1	Needle Seat Kit				
23137	693981	1	Gasket-Bowl, Float				
5							
23163	272653s	1	Gasket-Cleaner, Air				
45							
23276	271716	1	Washer-Sealing				
5							
2365	692524	1	Screw (Carburetor)				
23617	270344s	1	Seal, O-Ring (Intake Manifold)				
5							
23633	691321	1	Seal-Shaft, Choke Throttle				
5							
2975	493640	1	Bowl-Float				




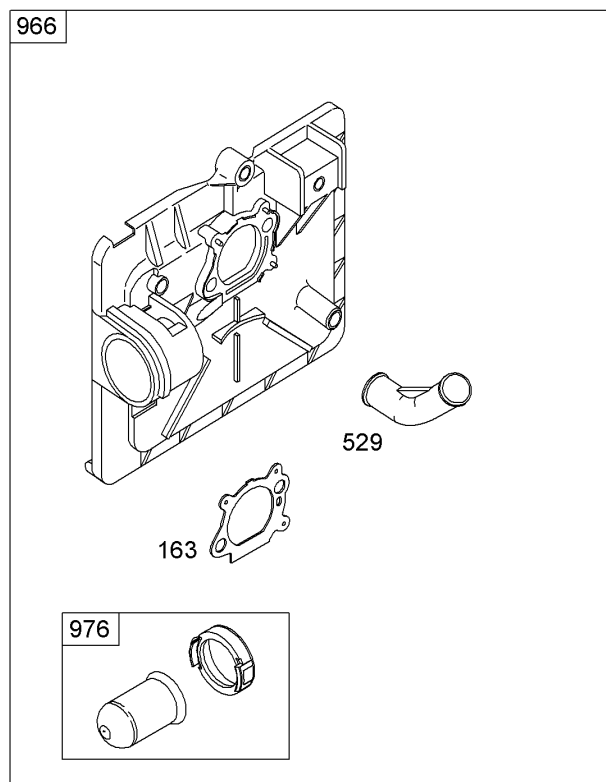 
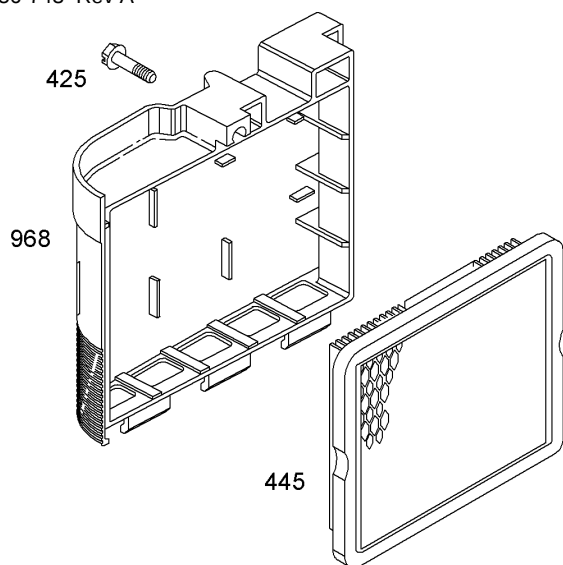 


Assemblies include all parts shown in frames

Air Cleaner Assembly

Briggs and Stratton 126T02-0206-E1






Ref	Part No.	Qty.	Description
2 3 163	272653s	1	Gasket-Cleaner, Air
4 5			
2 425	690670	1	Screw (Air Cleaner Cover)
2 443	692523	1	Screw (Air Cleaner Primer Base)
2 445	491588s	1	Filter-Cartridge, Air Cleaner
2 529	691923	1	Grommet
2 966	496116	1	Base-Primer, Air Cleaner
2 968	692298	1	Cover-Cleaner, Air
2 976	694395	1	Primer-Carburetor

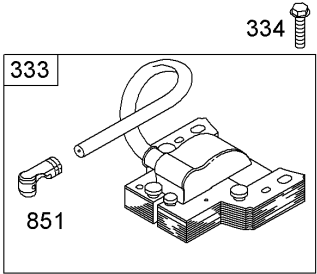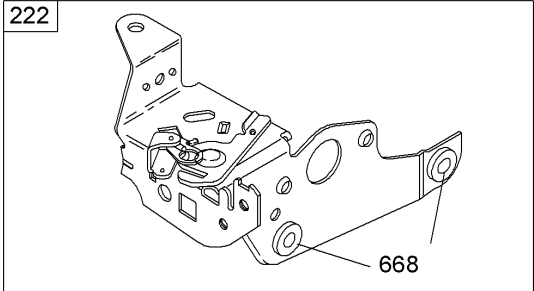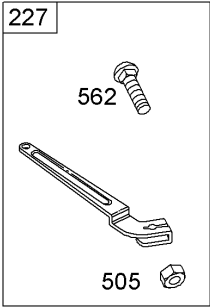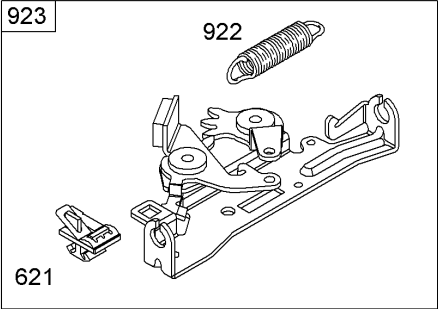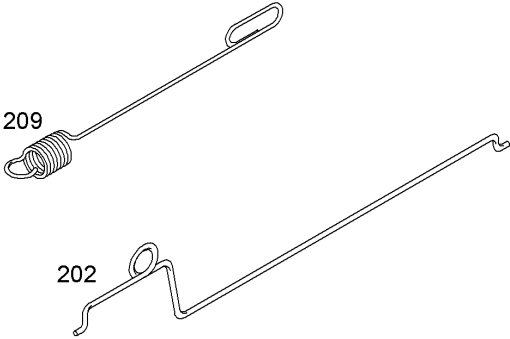     

Assemblies include all parts shown in frames

Governor Assembly
Briggs and Stratton 126T02-0206-E1


Ref	Part No.	Qty.	Description				
2188	693399	1	Screw (Control Bracket)				
2202	691829	1	Link-Governor, Mechanical				
2209	691292	1	Spring-Governor				
2222	791128	1	Bracket-Control				
2227	690783	1	Lever-Control, Governor				
2333	802574	1	Armature-Magneto				
2334	691061	1	Screw (Magneto Armature)				
2356	692390	1	Wire-Stop				
2505	691251	1	Nut (Governor Control Lever)				
2562	691119	1	Bolt (Governor Control Lever)				
2621	692310	1	Switch-Stop				
2668	493823	1	Spacer				
2745	691648	1	Screw (Brake)				
2851	493880s	1	Terminal-Spark Plug				
2922	691831	1	Spring-Brake				
2923	691994	1	Brake ASM				

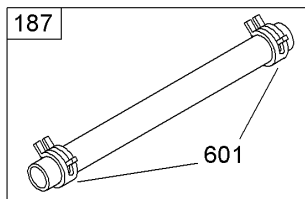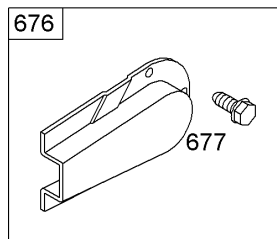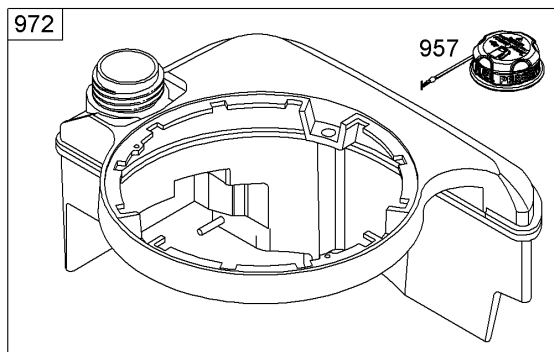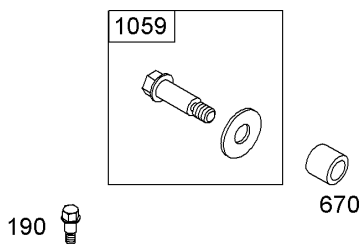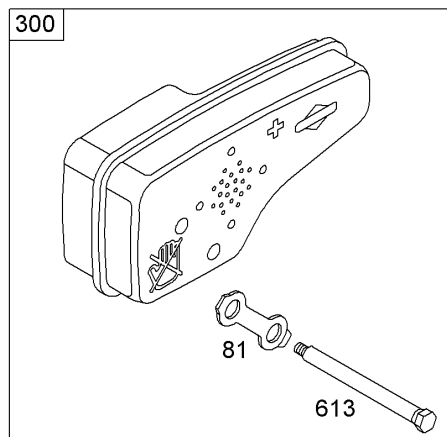     

Assemblies include all parts shown in frames

Muffler and Fuel Tank Assembly Briggs and Stratton 126T02-0206-E1

Ref	Part No.	Qty.	Description
281	691740	1	Lock-Screw, Muffler
2187	791766	1	Line-Fuel (Cut To Required Length)
2190	690940	1	Screw (Fuel Tank)
2300	692038	1	Muffler
2601	791850	1	Clamp-Hose
2613	691340	1	Screw (Muffler)
2670	692294	1	Spacer-Tank, Fuel
2676	493871	1	Deflector-Muffler
2677	690661	1	Screw (Muffler Deflector)
2957	699985	1	Cap-Tank, Fuel
2972	699374	1	Tank-Fuel
21059	692311	1	Screw And Washer Kit

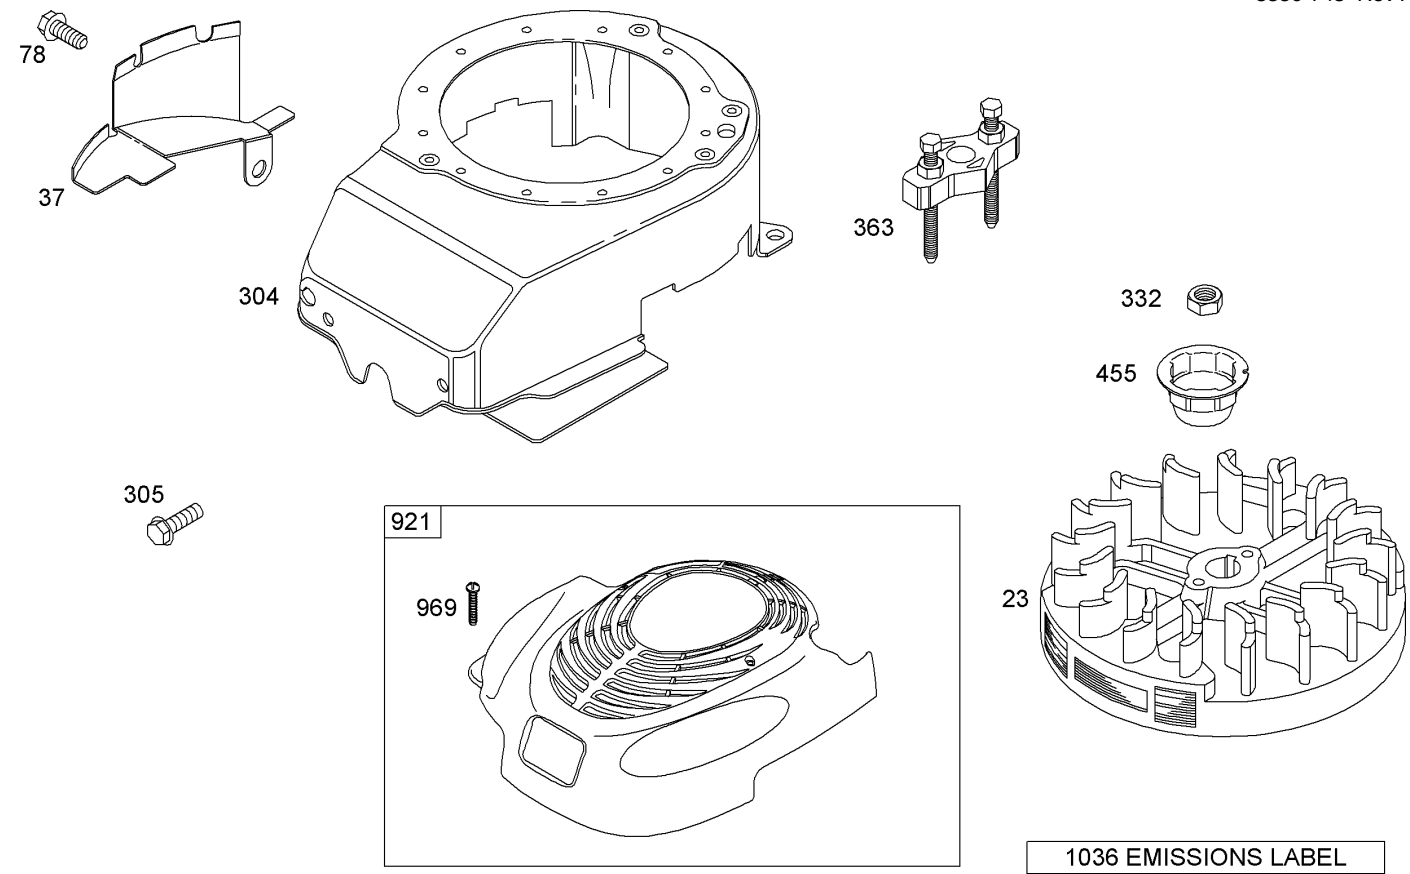 


Assemblies include all parts shown in frames

Blower Housing Assembly

Briggs and Stratton 126T02-0206-E1


Ref	Part No.	Qty.	Description				
23	691987	1	Flywheel				
37	694086	1	Guard-Flywheel				
78	691108	1	Screw (Flywheel Guard)				
304	493293	1	Housing-Blower				
305	691108	1	Screw (Blower Housing)				
332	690662	1	Nut (Flywheel)				
363	19069	1	Puller-Flywheel				
455	791960	1	Cup-Flywheel				
921	790036	1	Cover-Housing, Blower				
969	691138	1	Screw (Blower Housing Cover)				
1036		1	Label-Emissions (Available From An Authorized Briggs And Stratton Service Dealer)				

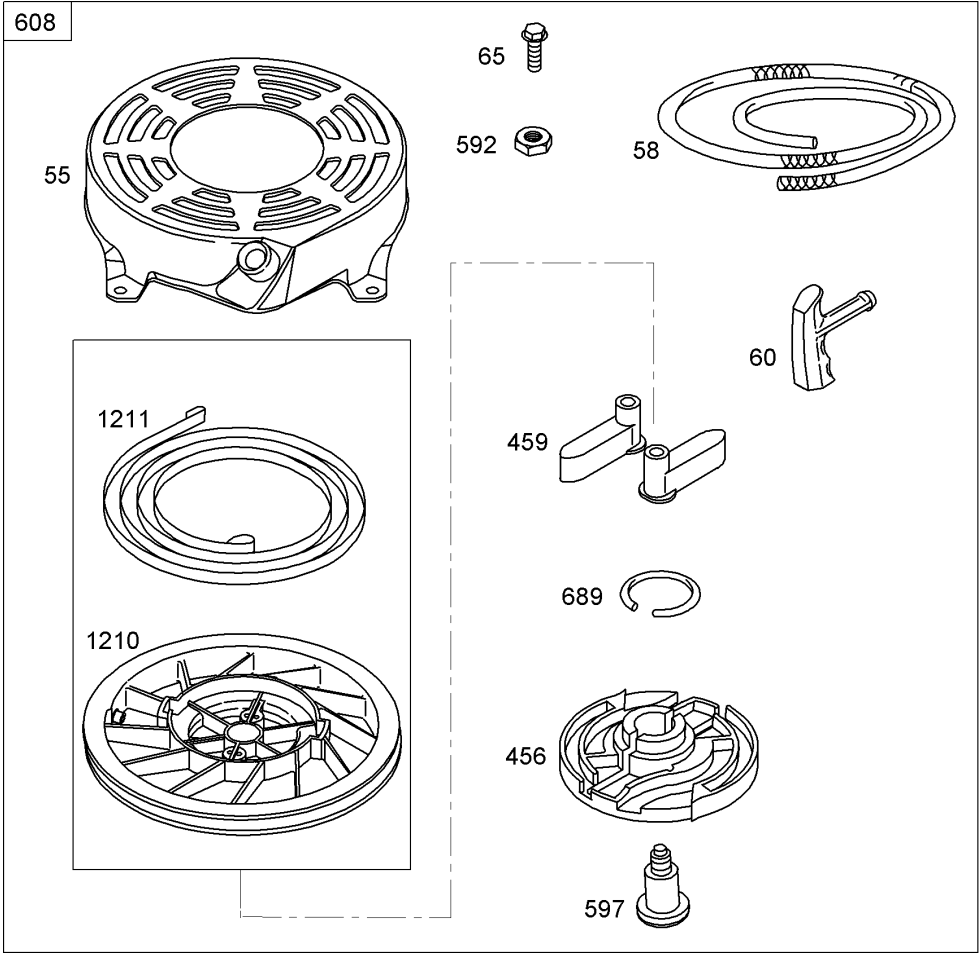 

Starter Assembly
Briggs and Stratton 126T02-0206-E1

Ref	Part No.	Qty.	Description				
●55	691421	1	Housing-Starter, Rewind				
●58	697316	1	Rope-Starter				
●60	281434s	1	Grip-Rope, Starter				
●65	690837	1	Screw (Rewind Starter)				
●456	692299	1	Plate-Friction, Pawl				
●459	281505s	1	Ratchet-Pawl				
●592	690800	1	Nut (Rewind Starter)				
●597	691696	1	Screw (Pawl Friction Plate)				
●608	497680	1	Starter-Rewind				
●689	691855	1	Spring-Friction				
●1210	498144	1	Pulley/Spring ASM (Pulley)				
●1211	498144	1	Pulley/Spring ASM (Spring)				

 358 ENGINE GASKET SET


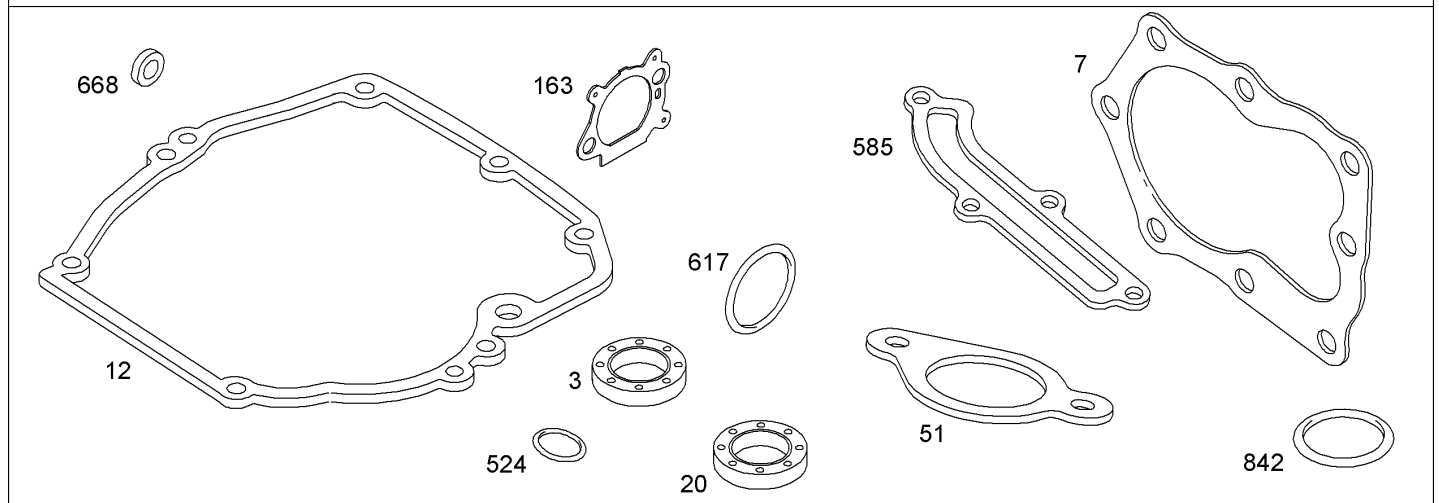


Assemblies include all parts shown in frames

Gasket Kit

Briggs and Stratton 126T02-0206-E1

Ref	Part No.	Qty.	Description				
243	299819s	1	Seal-Oil (Magnet Side)				
247	692249	1	Gasket-Head, Cylinder				
2412	692232	1	Gasket-Crankcase				
2420	399781s	1	Seal-Oil (PTO Side)				
2451	272199s	1	Gasket-Intake				
23163	272653s	1	Gasket-Cleaner, Air				
45							
2358	497316	1	Gasket Set-Engine				
24524	692296	1	Seal, O-Ring (Dipstick Tube)				
24585	691879	1	Gasket-Passage, Breather				
23617	270344s	1	Seal, O-Ring (Intake Manifold)				
45							
24668	493823	1	Spacer				
24842	691031	1	Seal, O-Ring (Dipstick)				

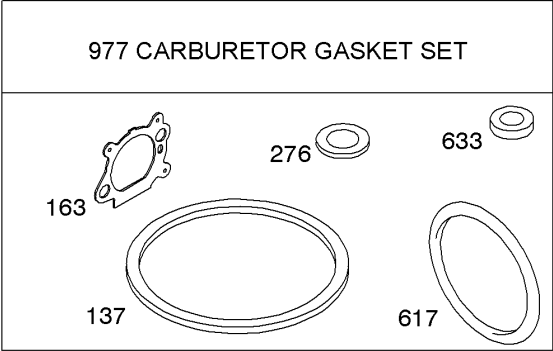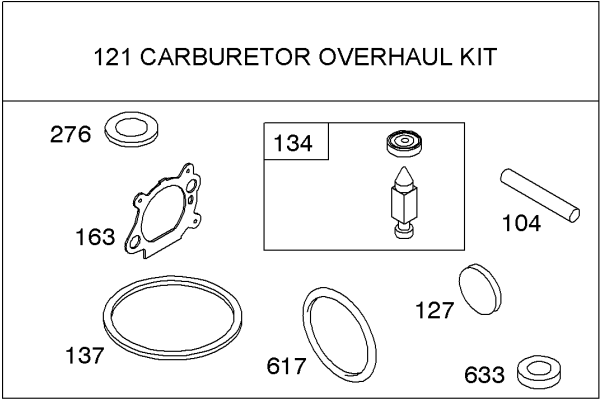  

Assemblies include all parts shown in frames

Carburetor Overhaul Kit
Briggs and Stratton 126T02-0206-E1

Ref	Part No.	Qty.	Description				
2 3 104	691242	1	Pin-Hinge, Float				
2 121	498260	1	Carburetor Overhaul Kit				
2 3 127	694468	1	Plug-Welch				
2 3 134	398188	1	Needle Seat Kit				
2 3 137	693981	1	Gasket-Bowl, Float				
5							
2 3 163	272653s	1	Gasket-Cleaner, Air				
4 5							
2 276	271716	1	Washer-Sealing				
2 3 617	270344s	1	Seal, O-Ring				
4							
2 3 633	691321	1	Seal-Shaft, Choke Throttle				
5							
2 977	498261	1	Carburetor Gasket Set				

NOTES

